


Hall Tree

Assembly Instructions -Please keep for future reference

If you have any questions, please feel free to contact us.
Email: lowesteam@animalife.com

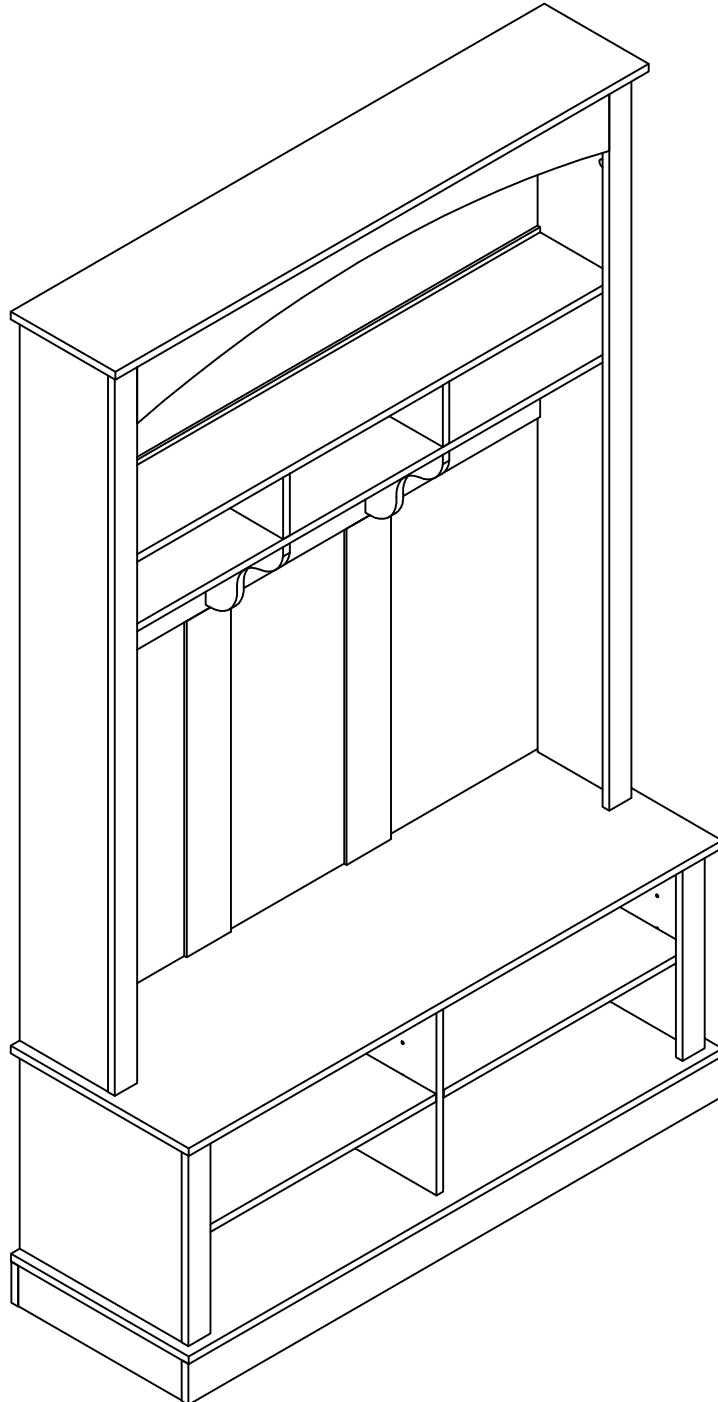

Dimensions

Width-47.24inch

Depth-15.75inch

Height-76inch

Important -Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING
In order to help prevent overturning –
please follow these instructions











To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose



Components -Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

(A)  Cam Bolt x 69	(B)  Cam lock x 69	(C)  Dowel x 42	(D)  3.5*14mm Screw x 6
(E)  7*50mm Screw x 10	(F)  Clothes hook x 3	(G)  Movable partition bracket x 8	(H)  Sticker Cover x 42
(I)  Back plate clamp x 14	(J)  3*12mm Screw x 14		

Tools required




Phillips screwdriver
(medium & large)

Using Camlocks


Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

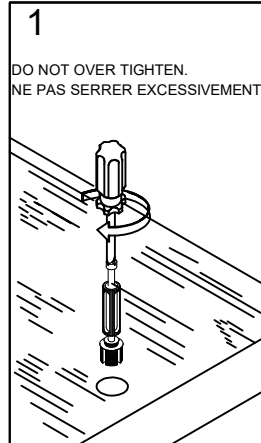

Step 2


Push the male camlock into the entry hole.

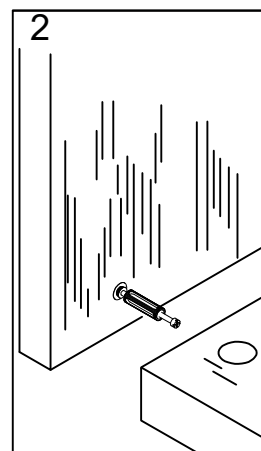

Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

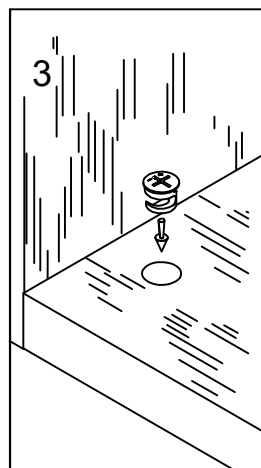


Step 4


Turn the female camlock clockwise with a screwdriver.















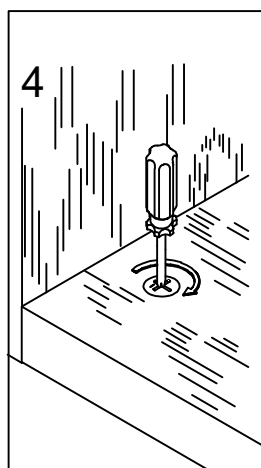


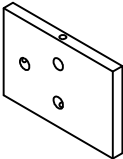

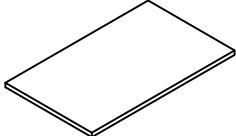
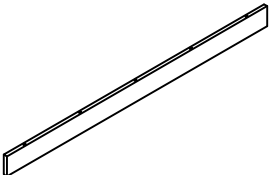
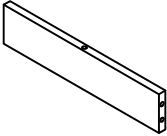
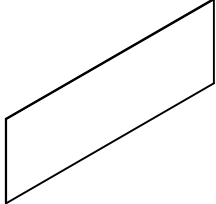

You should feel a click when the camlock is locked in place.


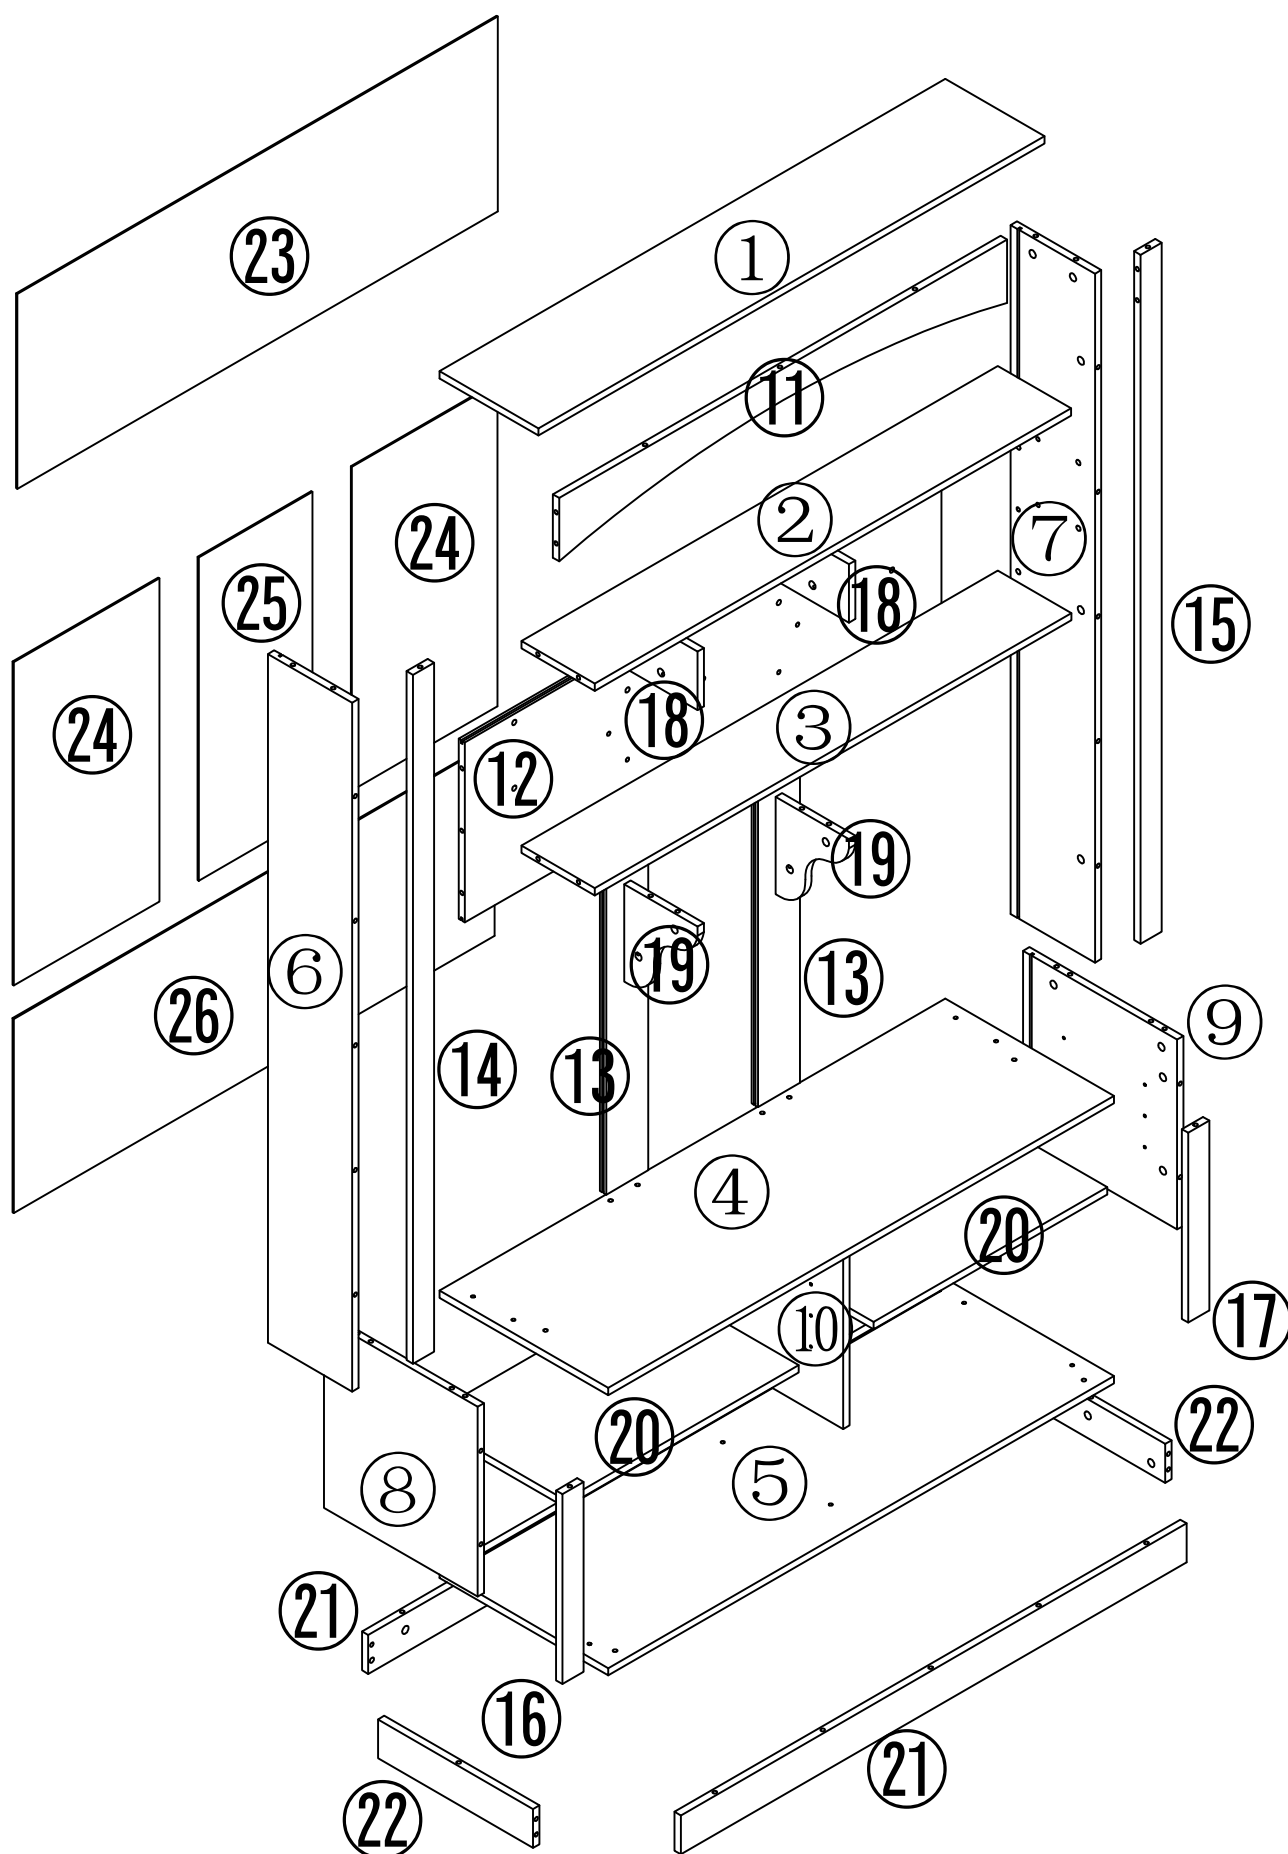
The joint is now secure.

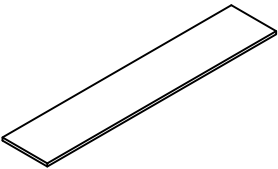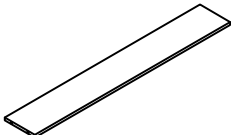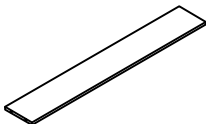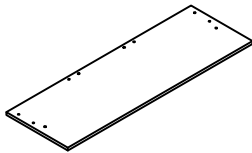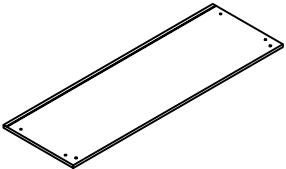

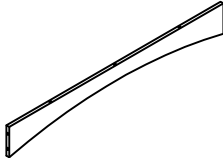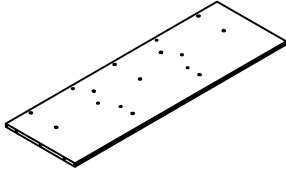Assembly Instructions




<p>①X1</p>  <p>1200*235*15mm</p>	<p>②X1</p>  <p>1130*175*15mm</p>	<p>③X1</p>  <p>1130*175*15mm</p>	<p>④X1</p>  <p>1200*400*15mm</p>
<p>⑤X1</p>  <p>1200*400*15mm</p>	<p>⑥X1</p>  <p>1415*200*15mm</p>	<p>⑦X1</p>  <p>1415*200*15mm</p>	<p>⑧X1</p>  <p>390*365*15mm</p>
<p>⑨X1</p>  <p>390*365*15mm</p>	<p>⑩X1</p>  <p>390*345*15mm</p>	<p>⑪X1</p>  <p>1062*130*15mm</p>	<p>⑫X1</p>  <p>1130*370*15mm</p>
<p>⑬X2</p>  <p>755*100*15mm</p>	<p>⑭X1</p>  <p>1415*50*15mm</p>	<p>⑮X1</p>  <p>1415*50*15mm</p>	<p>⑯X1</p>  <p>390*50*15mm</p>
<p>⑰X1</p>  <p>390*50*15</p>	<p>⑱X2</p>  <p>174*120*15</p>	<p>⑲X2</p>  <p>174*200*15mm</p>	<p>⑳X2</p>  <p>544*335*15mm</p>
<p>㉑X2</p>  <p>1200*80*15mm</p>	<p>㉒X2</p>  <p>368*80*15mm</p>	<p>㉓X1</p>  <p>1140*300*3mm</p>	<p>㉔X2</p>  <p>764*345*3mm</p>

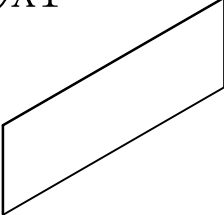
<p>②⑤X1</p>  <p>764*270*3mm</p>	<p>②⑥X1</p>  <p>1140*399*3mm</p>		
------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------	--	--

Assembly Instructions

Step 1

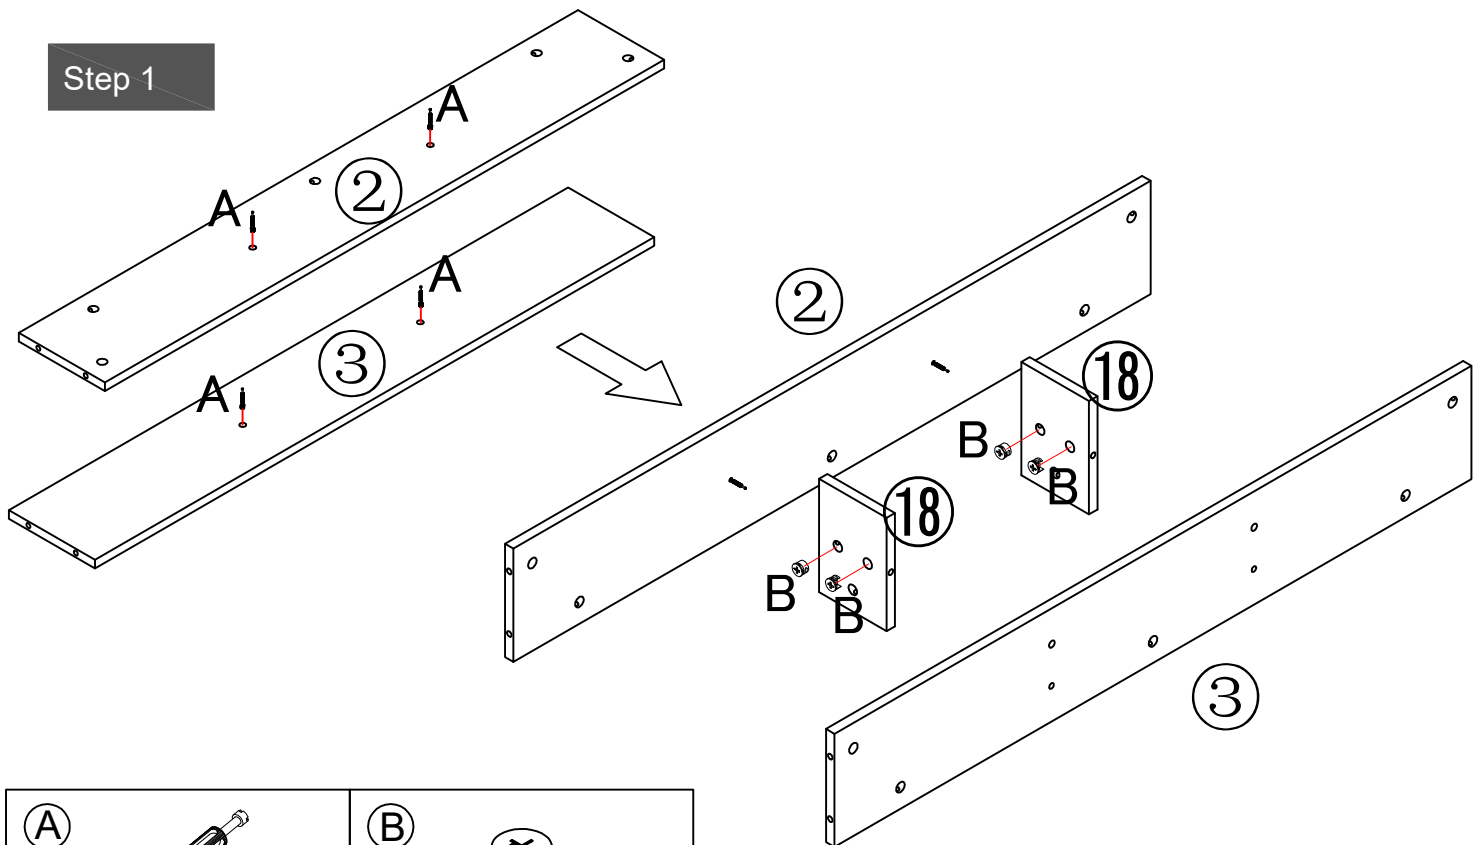

(A)




Cam Bolt x 4

(B)



Cam lock x 4

Step 2

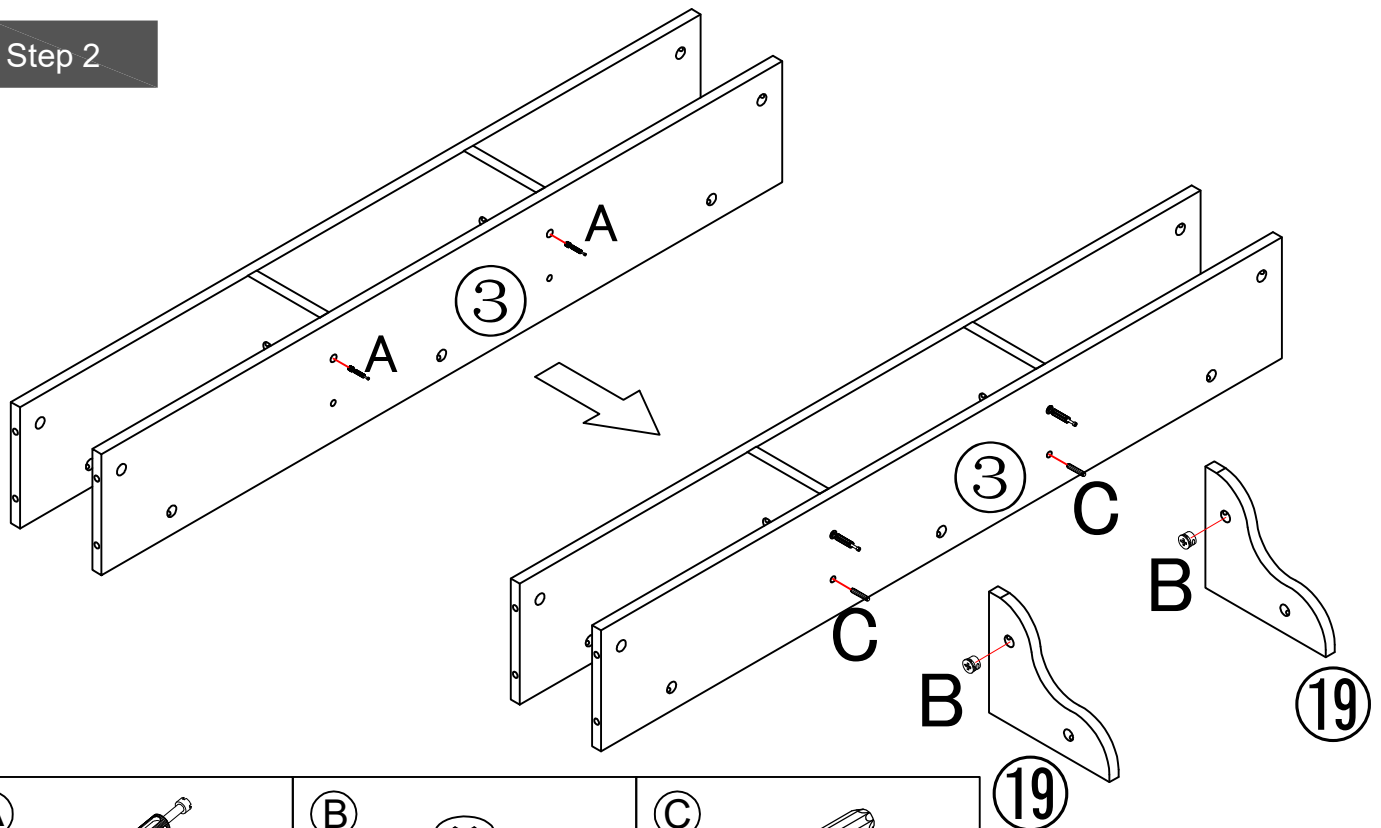

(A)




Cam Bolt x 2

(B)



Cam lock x 2


(C)




Dowel x 2

Assembly Instructions

Step 3

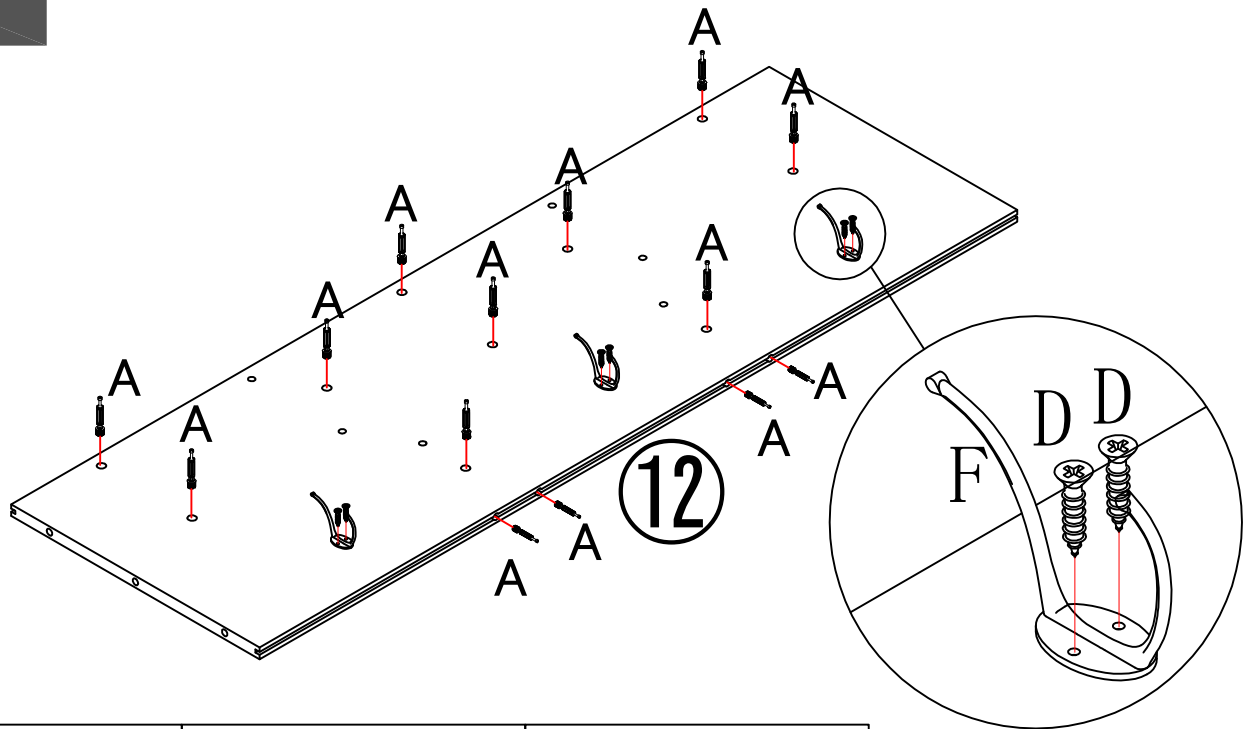

(A)



Cam Bolt x 14

(D)




3.5*14mm Screw x 6

(F)



Clothes hook x 3

Step 4

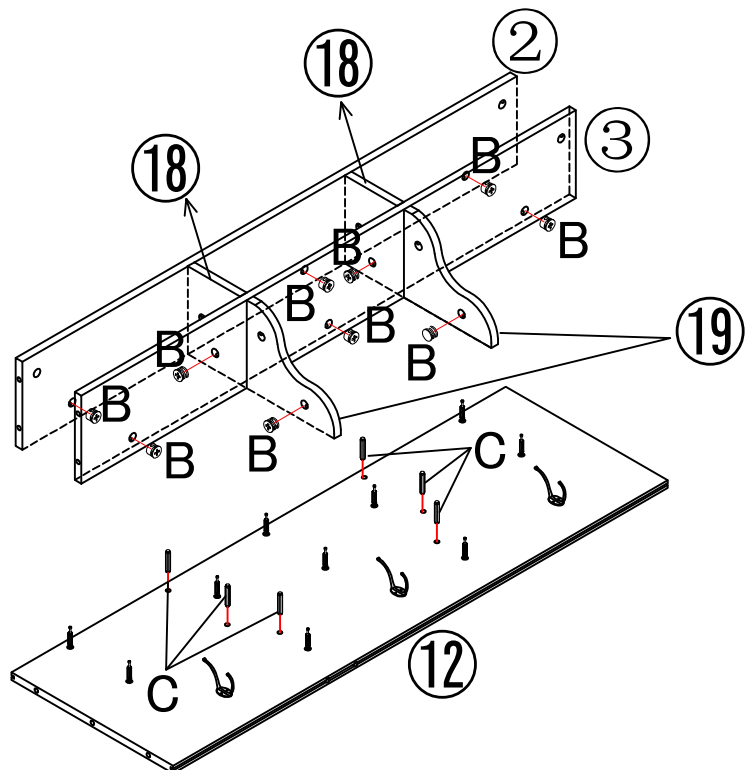


(B)



Cam lock x 10


(C)




Dowel x 6

Assembly Instructions

Step 5

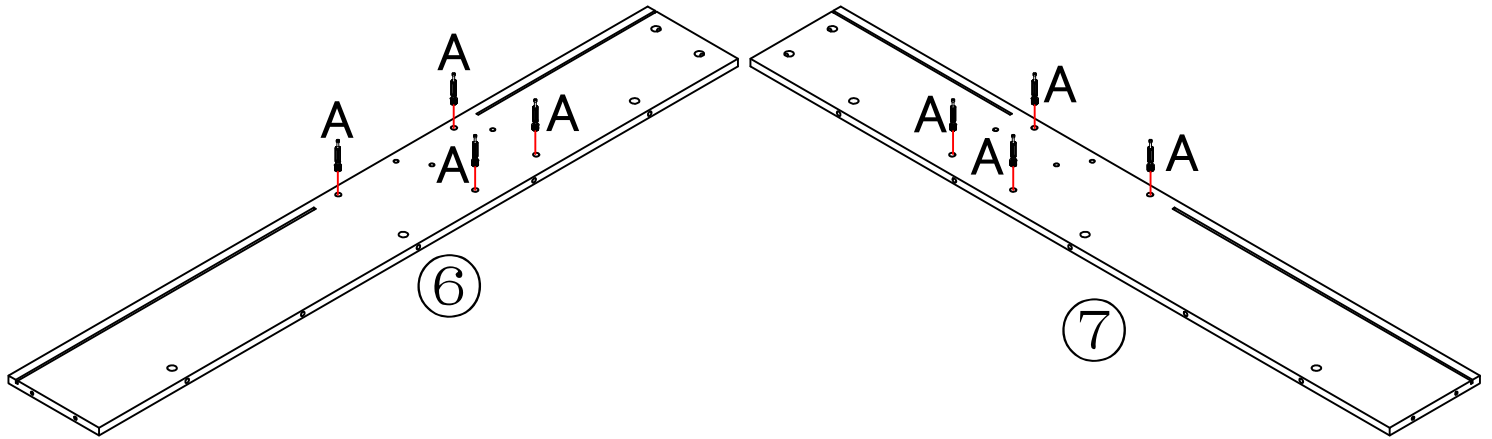


A



Cam Bolt x 8

Step 6

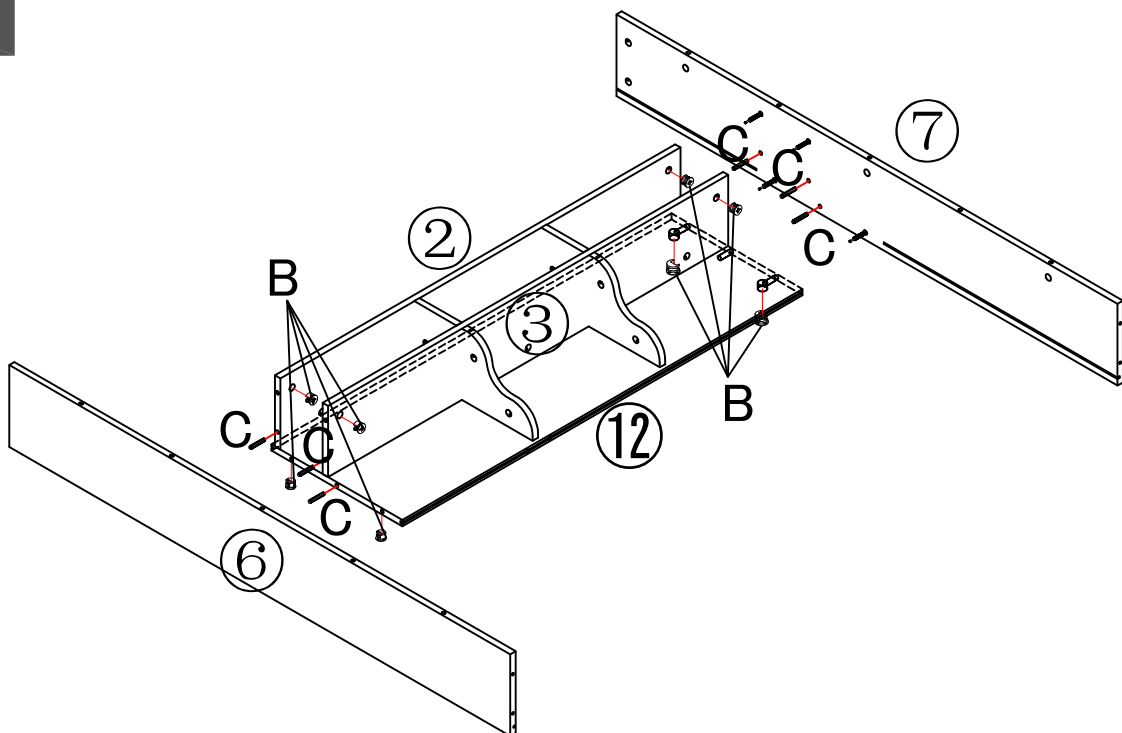


B



Cam lock x 8


C




Dowel x 6

Assembly Instructions

Step 7

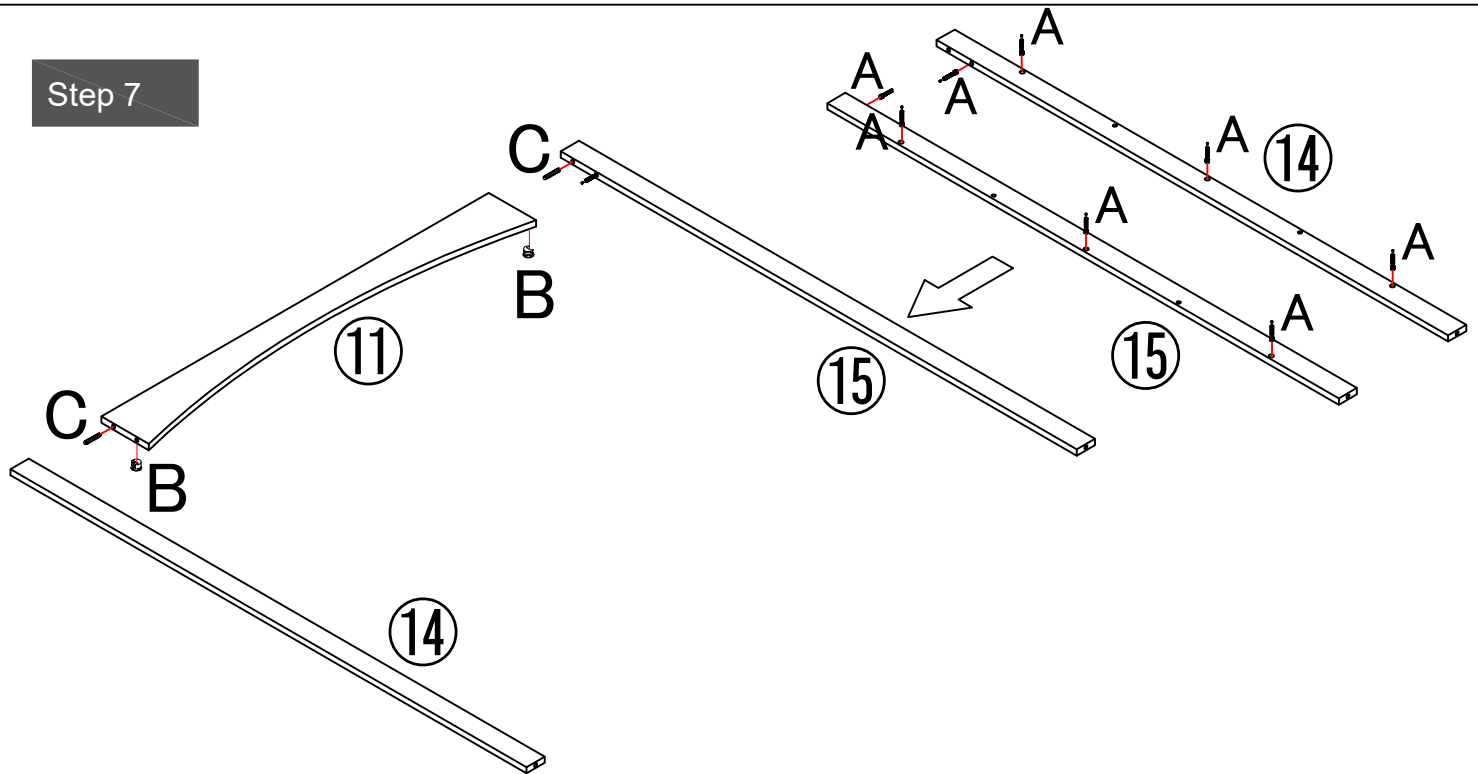

(A)




Cam Bolt x 8

(B)




Cam lock x 2

(C)



Dowel x 2

Step 8

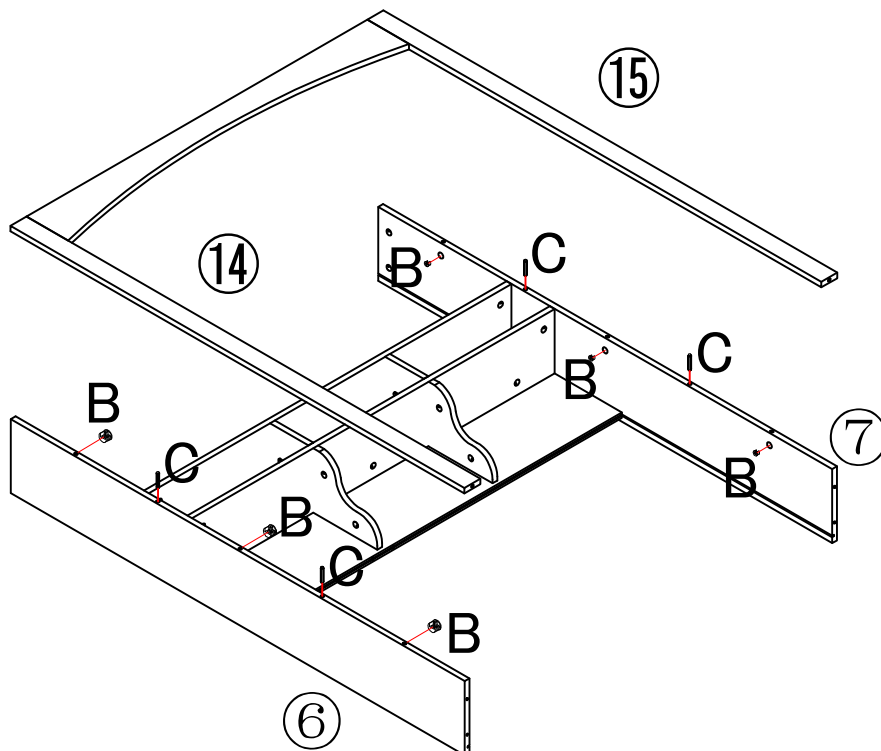


(B)



Cam lock x 6


(C)



Dowel x 4

Assembly Instructions

Step 9

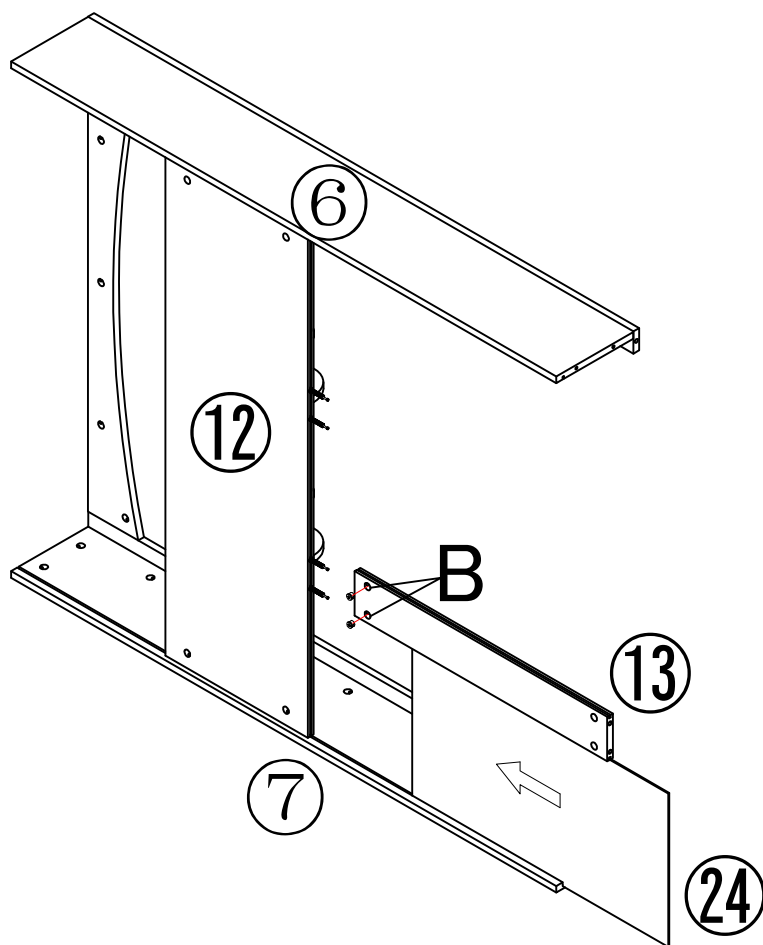


B



Cam lock x 2

Step 10

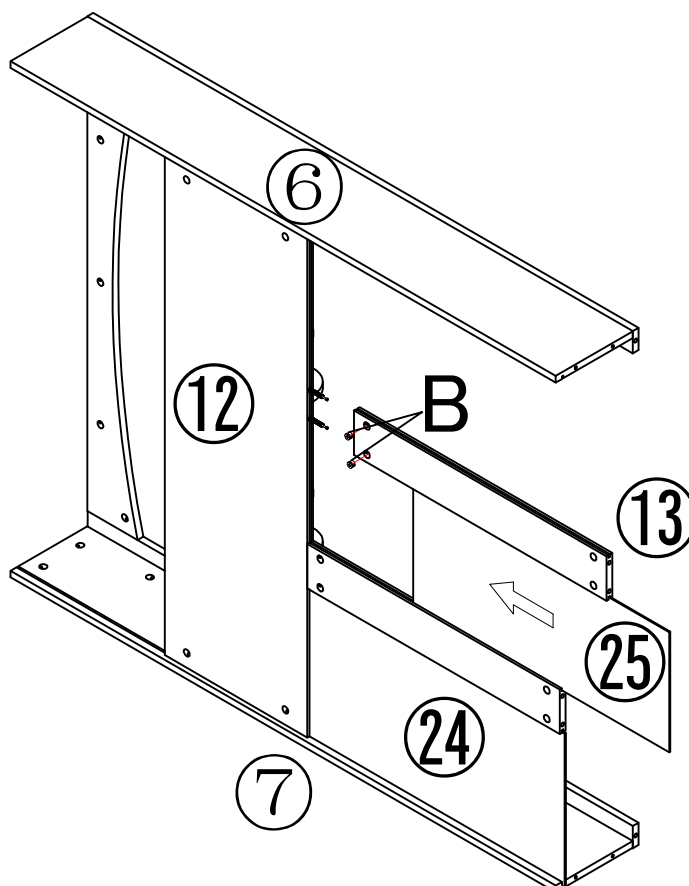


B





Cam lock x 2

Assembly Instructions

Step 11

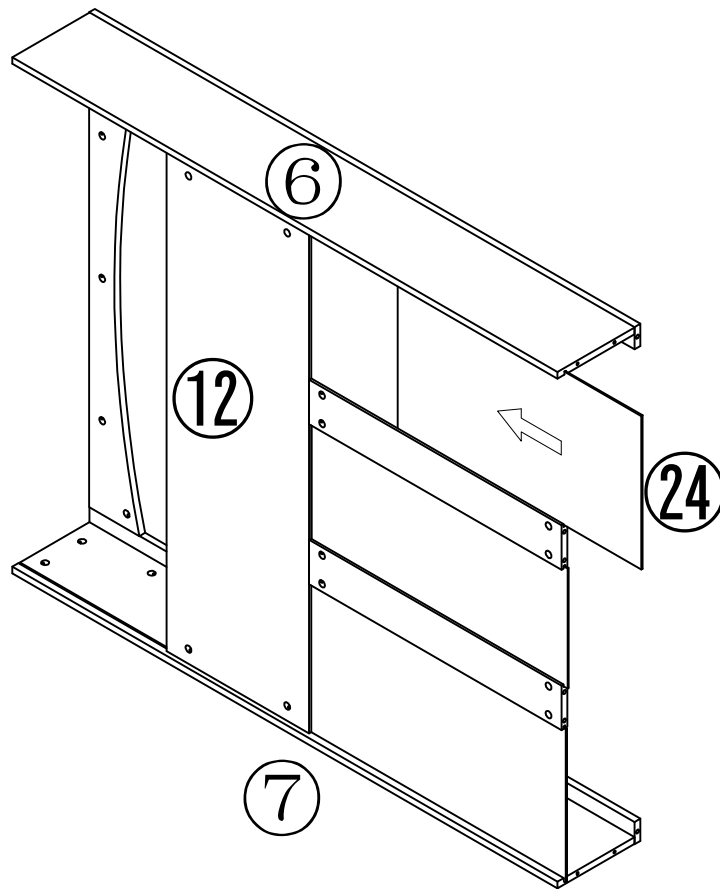

Step 12

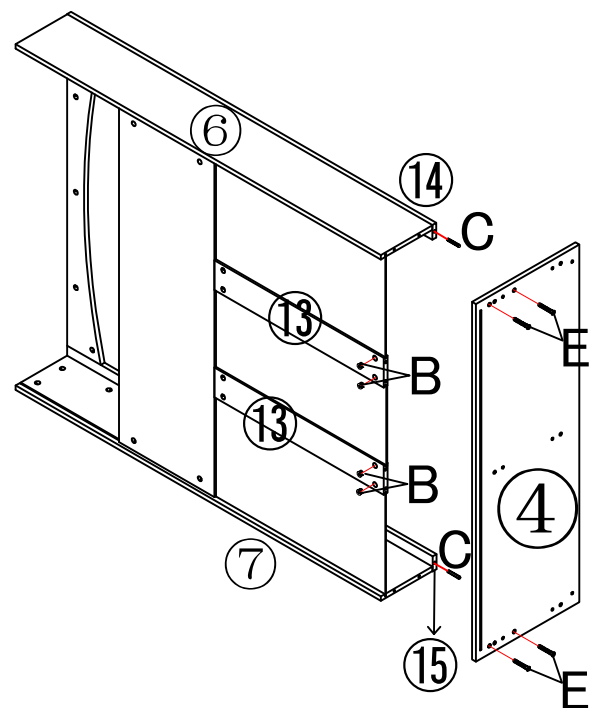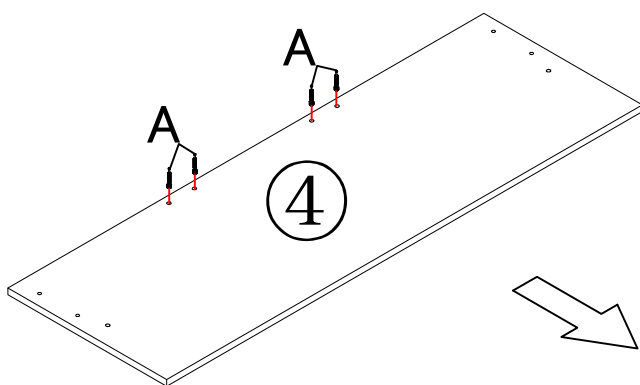

(A)




Cam Bolt x 4

(B)



Cam lock x 4

(C)



Dowel x 2


(E)




7*50mm Screw x 4

Assembly Instructions

Step 13

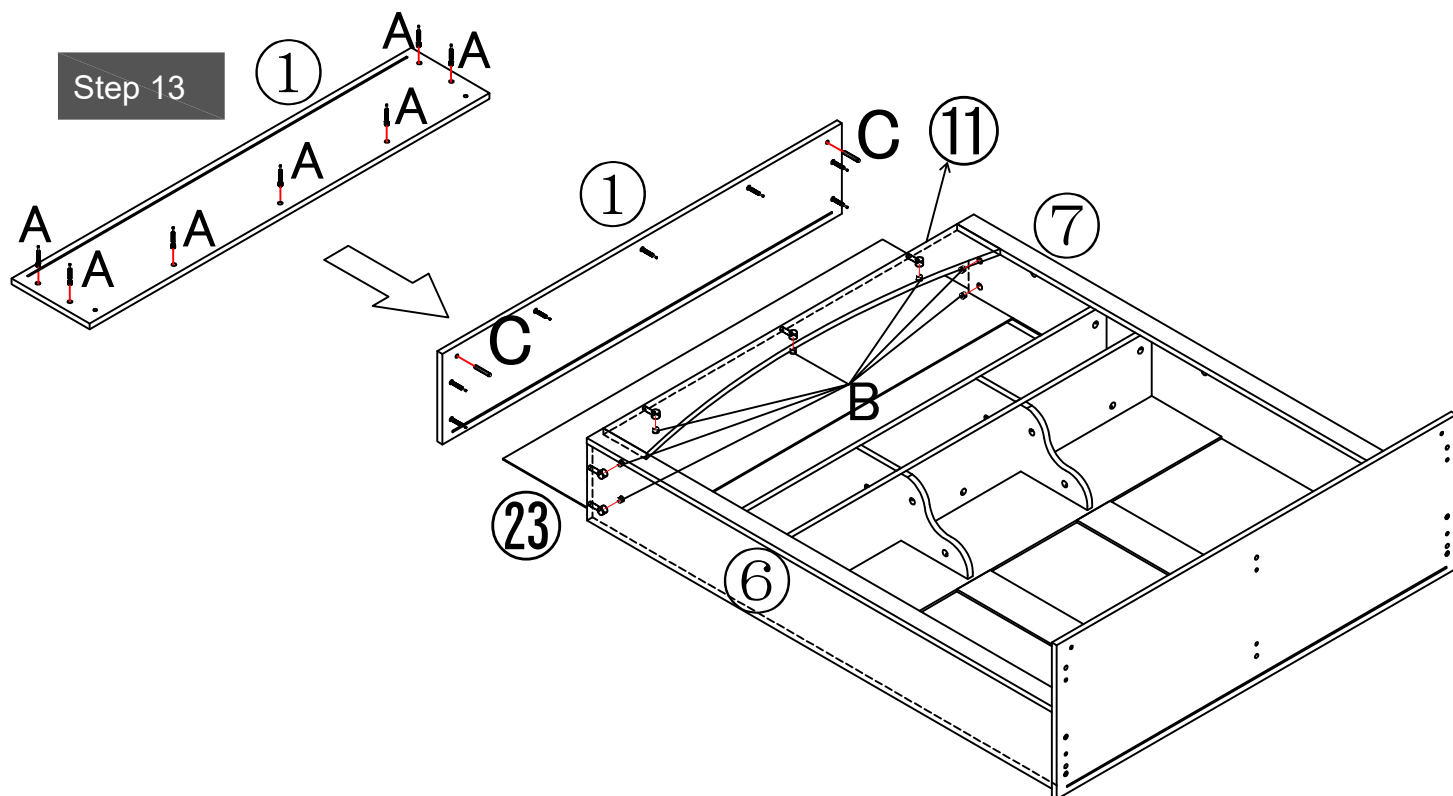

(A)




Cam Bolt x 7

(B)




Cam lock x 7

(C)




Dowel x 2

Step 14

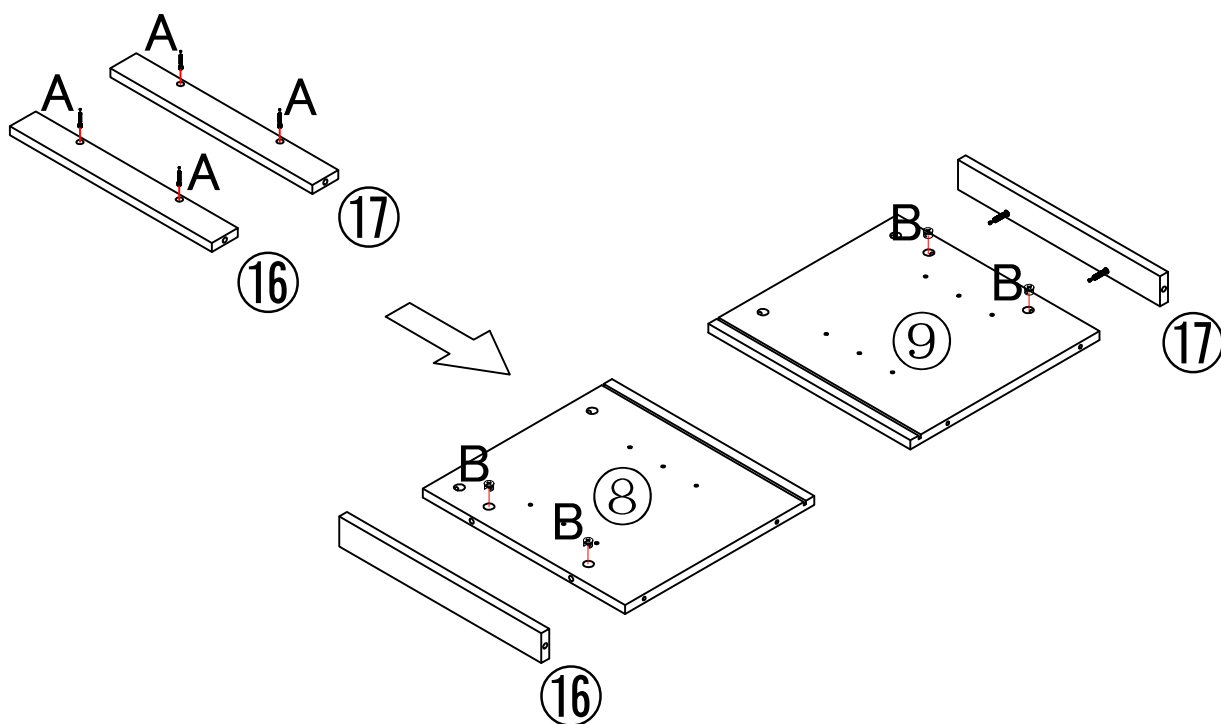

(A)



Cam Bolt x 4


(B)




Cam lock x 4

Assembly Instructions

Step 15

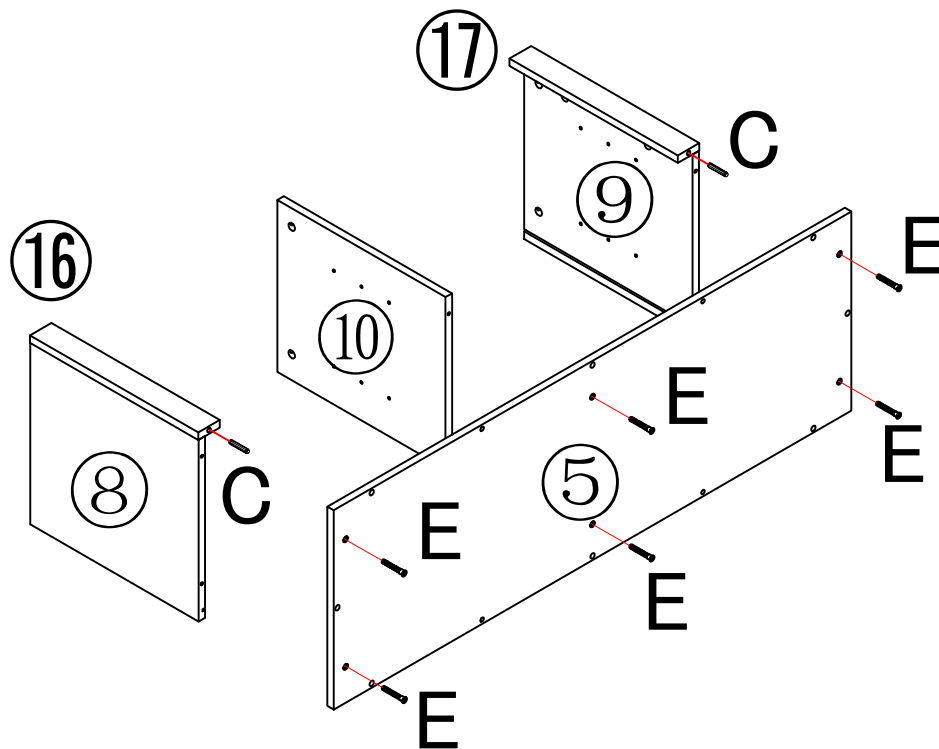

(C)




Dowel x 2

(E)




7*50mm Screw x 6

Step 16

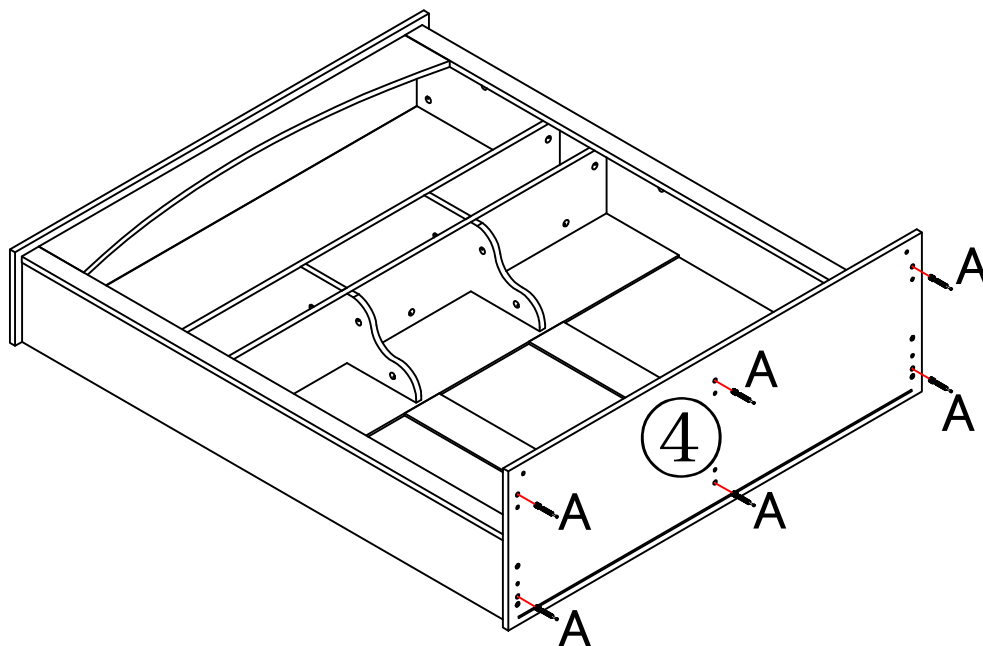


(A)



Cam Bolt x 6

Assembly Instructions

Step 17

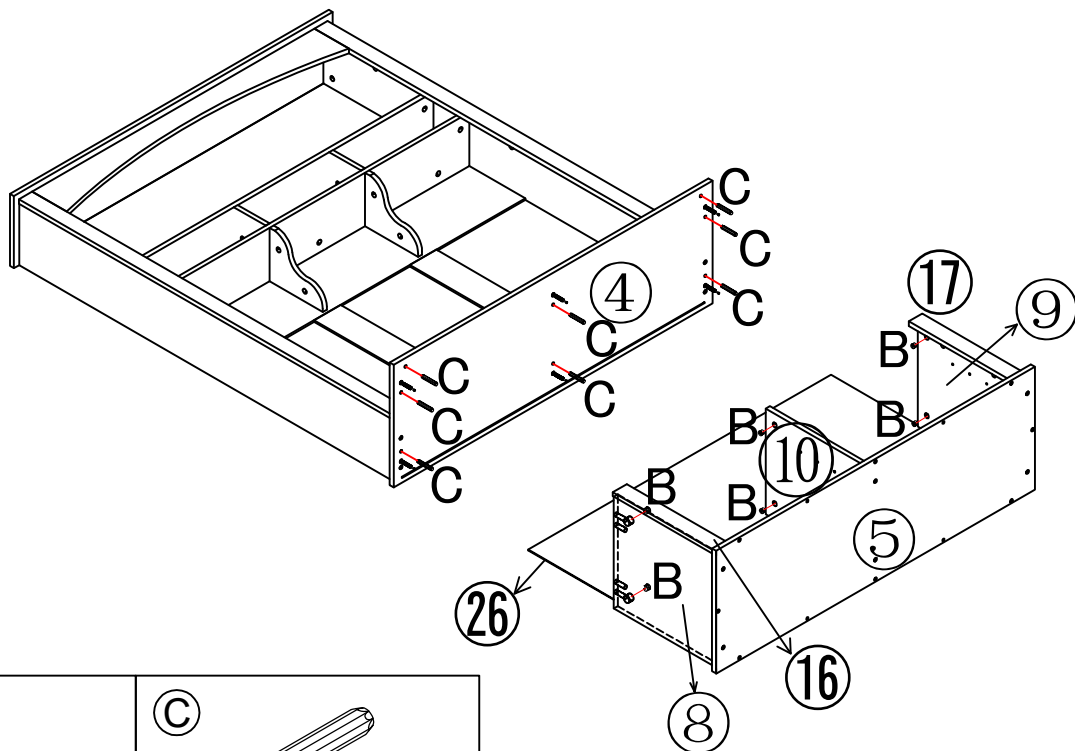


(B)




Cam lock x 6

(C)




Dowel x 8

Step 18

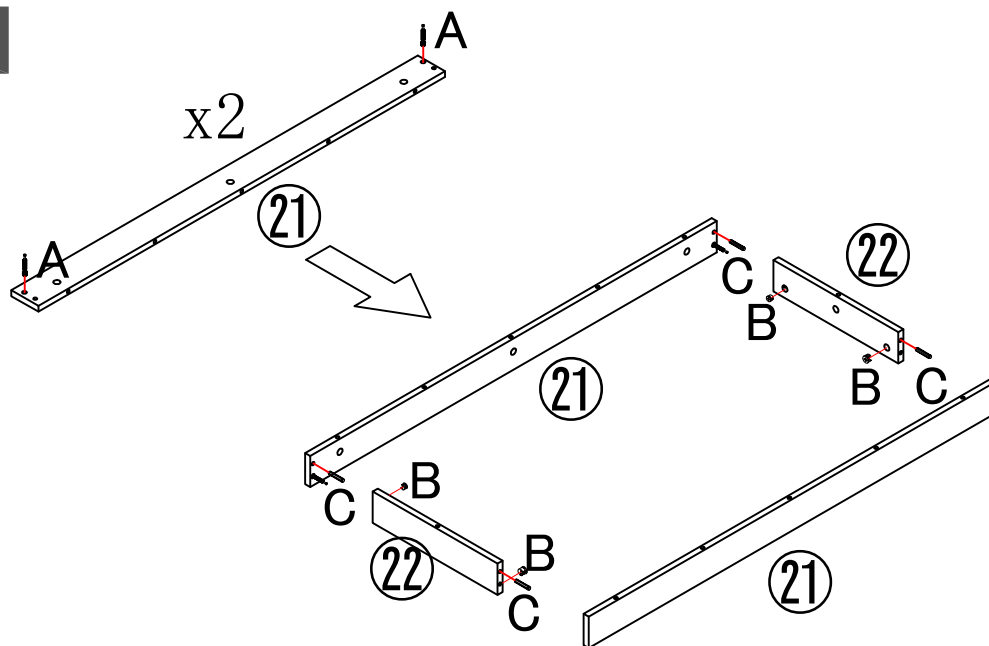

(A)




Cam Bolt x 4

(B)



Cam lock x 4


(C)



Dowel x 4

Assembly Instructions

Step 19

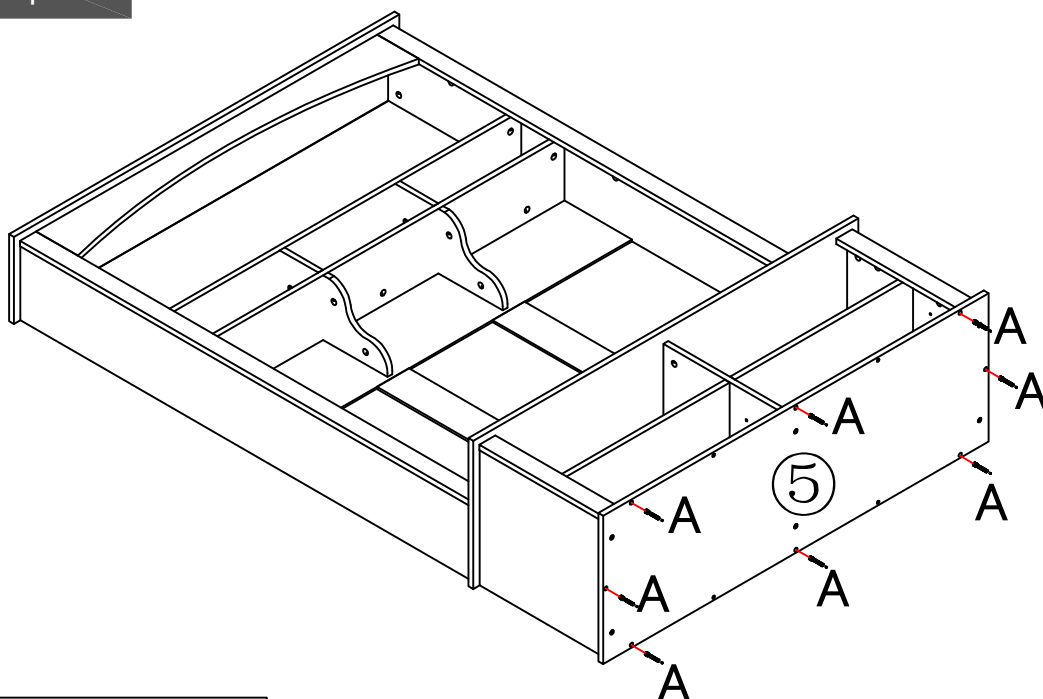


A



Cam Bolt x 8

Step 20

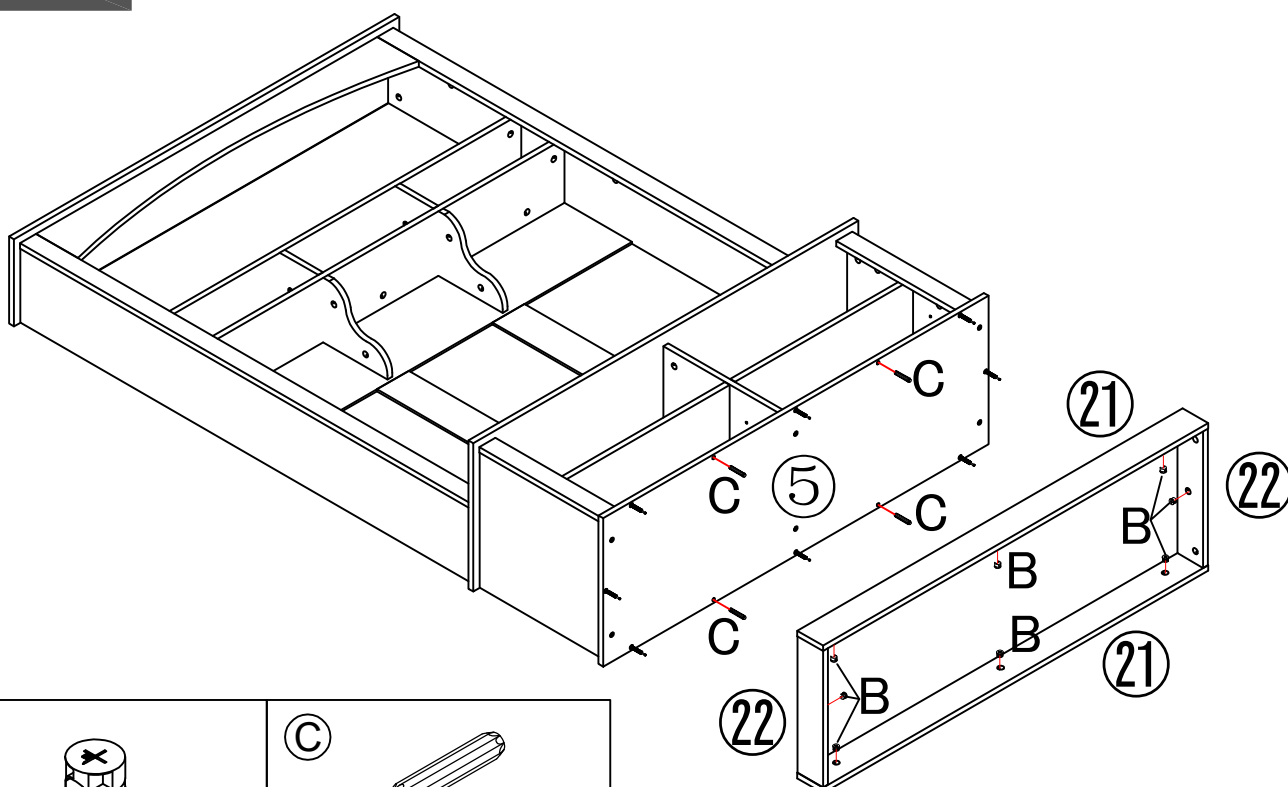


B



Cam lock x 8


C



Dowel x 4

Assembly Instructions

Step 21

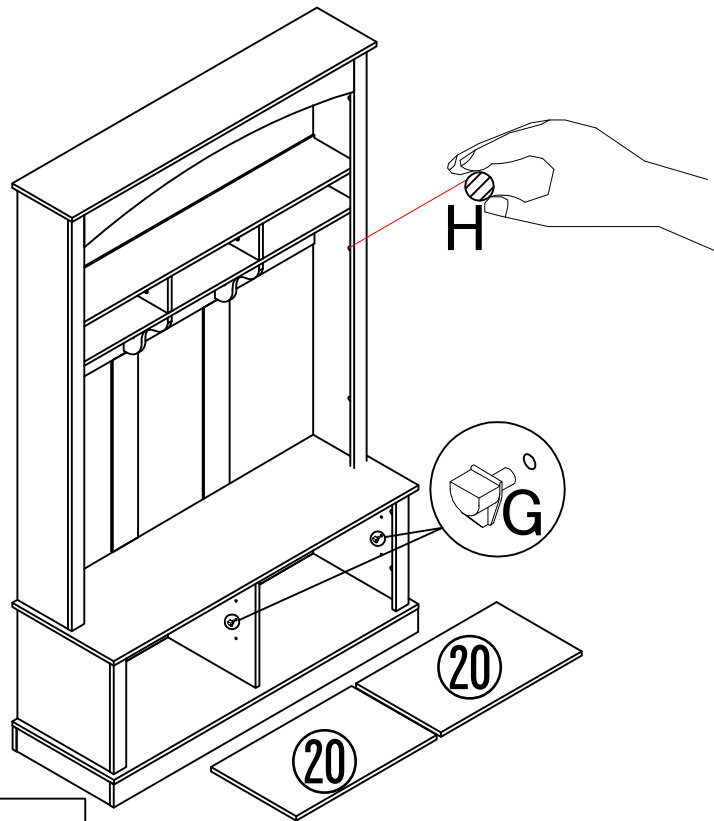

(G)




Movable partition bracket x 8

(H)



Sticker Cover x 42

Step 22

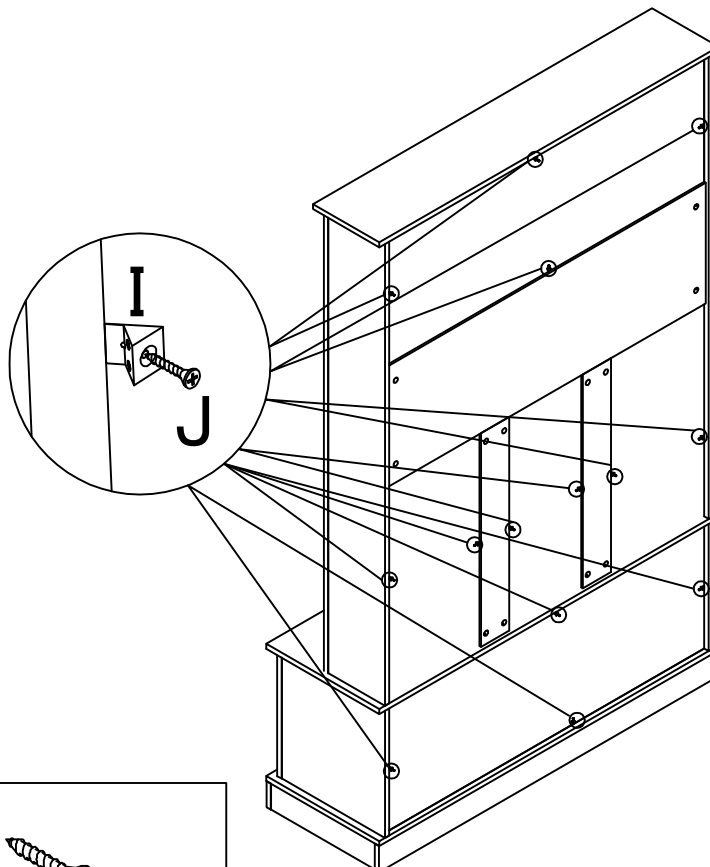

(I)



Back plate clamp x 14

(J)



3*12mm Screw x 14

Assembly Instructions

