

Tools Needed:

Implementos
necesarios:




For warranty info visit
mdbuildingproducts.com

Para obtener información sobre la
garantía, visite mdbuildingproducts.com

FLUSH RECTANGLE PULL

1. Using flush pull as a template, mark area on door 40" from floor.
2. Drill or chisel out area for flush pull 3/8" deep.
3. Attach flush pull to door with supplied fasteners.

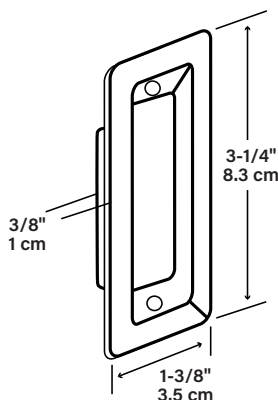

TIRADOR RECTANGULAR A RAS

1. Utilizando el tirador de enrasar como plantilla, marque el área en la puerta a 40" del piso.
2. Taladre o cincele el área para el tirador a ras de 3/8" de profundidad.
3. Fije el tirador de enrasar a la puerta con los fijadores suministrados.

Made in China. Hecho en China.

M-D Building Products, Inc.

Oklahoma City, OK 73118

Rev 07/24 mdteam.com

⚠ **WARNING:** Cancer and Reproductive Harm
- www.P65Warnings.ca.gov.

ADVERTENCIA: Cáncer y Daño Reproductivo
- www.P65Warnings.ca.gov.



QUESTIONS? | PREGUNTAS?

800.654.8454

MDBUILDINGPRODUCTS.COM

