



Bathroom Sink Popup Drain

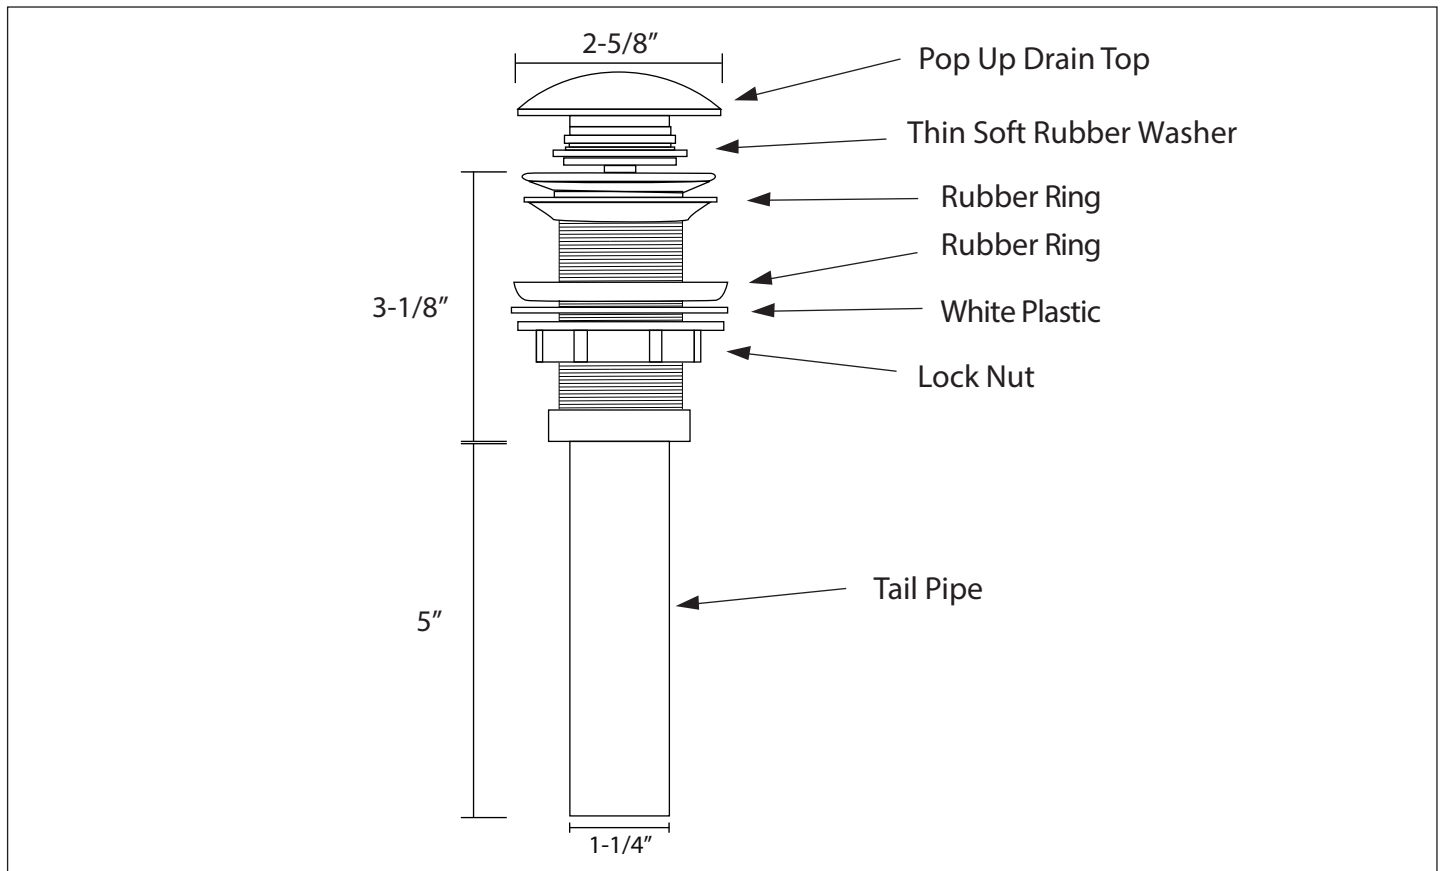

INSTALLATION GUIDE

Note: These instructions are for installing the drain with a vessel sink with no overflow:

1. Determine the position of the sink on your countertop and make a 1-3/4" hole in your countertop aligned with the sink hole.
2. Apply silicone adhesive around the bottom of the sink and place the sink on the countertop and align it with the countertop hole.
3. Insert the **Drain Body** and **Rubber Ring** through the top of the sink's drain opening.
4. From under the countertop, place the **Rubber Ring** on the base of the drain. Then push it all the way up until it is flush with the counter.
5. Place the **White Plastic** on the base of the **Drain Body** and push it up until it is flush with the **Rubber Ring**.
6. Now, screw the **Lock Nut** all the way up until it meets the **White Plastic**.
7. Finally, screw the **Tail Pipe** to the end of the **Drain Body** until tight, but don't overtighten.

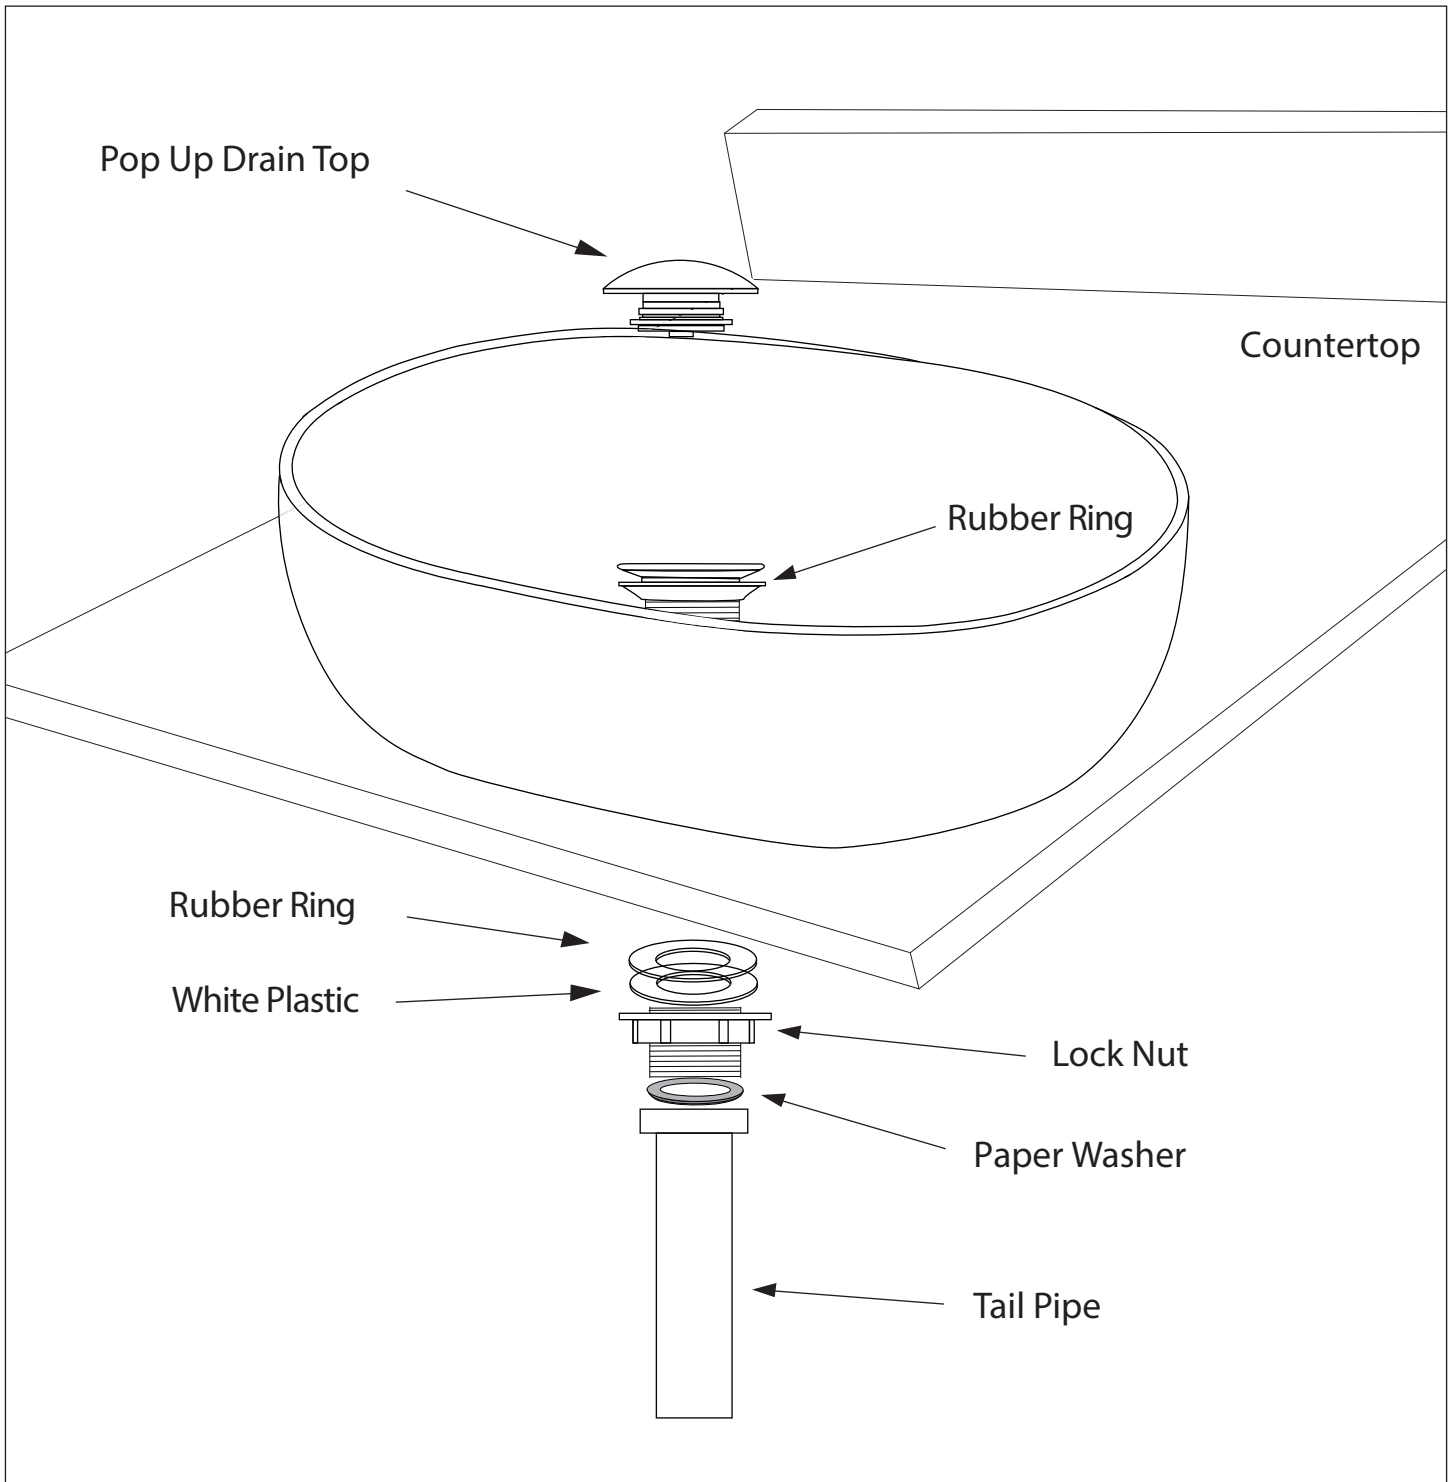

cUPC certified by IAPMO to meet US and Canada plumbing standards.
Codes compliance: ASME A112.19.3/CSA B45.4

RU VATI®

Address: 2705 Meister Pl, Round Rock, TX 78664

USA Phone: 1.855.478.8284

Email: support@ruvati.com