


If you have any questions, please feel free to contact us.
Email: lowesteam@aminalife.com

HELPFUL TOOLS:



Electric Drill



Hammer



Allen key



Philips
Screwdriver



Pencil





Tapeline

INSTALLATION STEPS:




Step 1: Mark Position

- A. Measure and mark base position and centerline for mounting bracket installation. (For towel bar)
- B. Mark base position for mounting bracket installation. (For other 3-piece accessory)

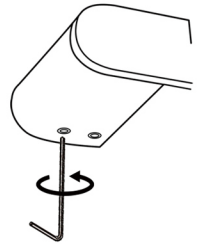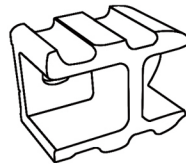

Step 2: Remove mounting bracket


Remove mounting bracket with Allen key from accessory.

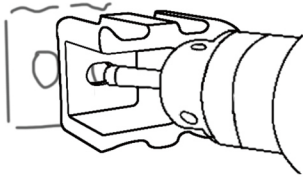

Electric Drill


Step 3: Drill Holes

Place mounting bracket into center of the marking base position. Using brackets as a guide, carefully drill 5/16" holes into wall. Remove bracket and install anchors with hammer.

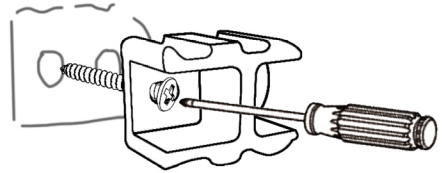


Step 4: Screw Brackets

With mounting brackets in position, secure to wall using screws.

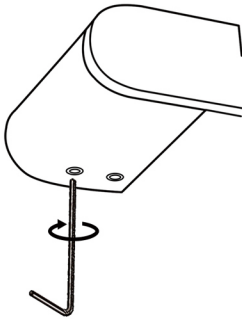

Step 5: Hang and Secure

Hang top of accessory on mounting bracket and secure with set screws.

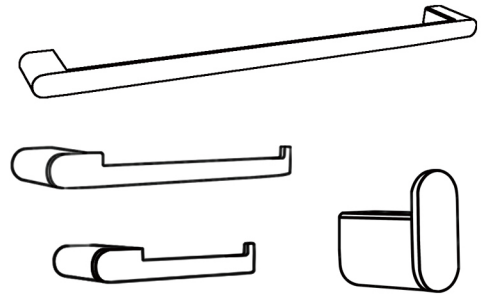

Step 6: Finished
