



## **TRANSITIONINSTALLATION**

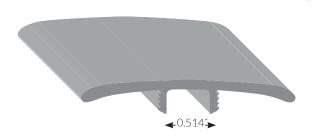

**Dimension:** 1.77"w x 0.28"h




Install the flooring leaving a 1-1/8" gap between the two floors for the t-molding installation.


## V-T-14

## WATERPROOF **T-MOLDING**

Used to fill the gap between two floors of equal height.


Used with floors ranging from 2-6mm in height.

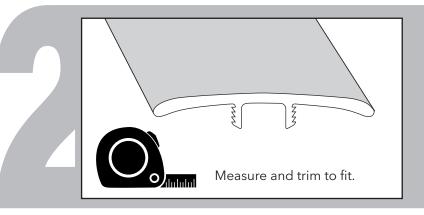



Center the track between the flooring leaving a 1/4" spacing between the track and floor planks. Screw track to subfloor using included screws (or glue down to subfloor with construction adhesive).

Surface: Wear resistant Core Material: Rigid PVC



Starting at one end, press the molding into the track inching along the length of the molding. It will NOT snap in all at once. You may also use a rubber mallet.