


ASSEMBLY INSTRUCTIONS

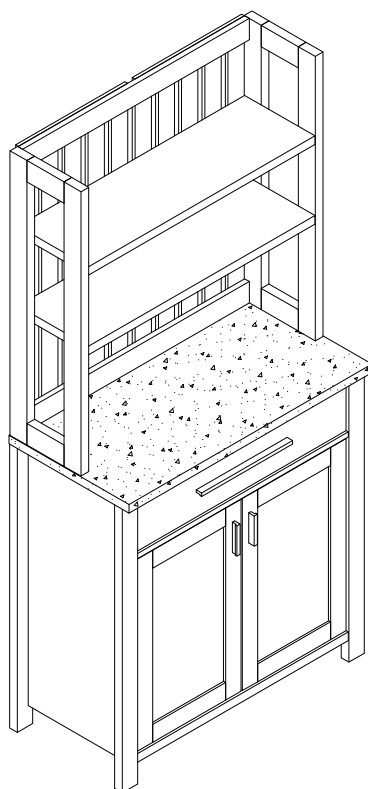

ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For most products, two persons are recommended.


EASY



DIFFICULT


Tools Required for Assembly:

Phillips Screwdriver



(Not Included)

Hammer

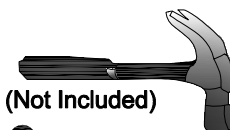

(Not Included)




2 PERSONS RECOMMENDED


ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.

BASIC ASSEMBLY TECHNIQUES

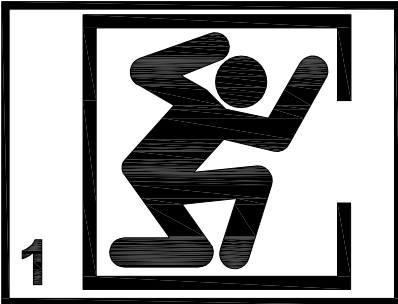


It is highly recommended that the assembly should be done near the area of its intended location. Make sure you have enough space to move around during the assembly.

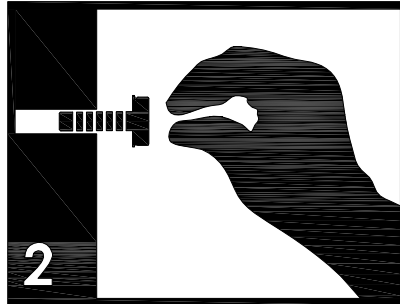


Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.




Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

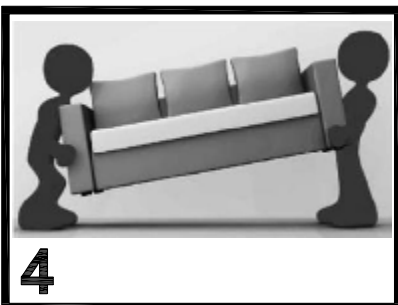

ALWAYS have at least two people to help with transporting and assembling the product to avoid any potential injury and/or damage.

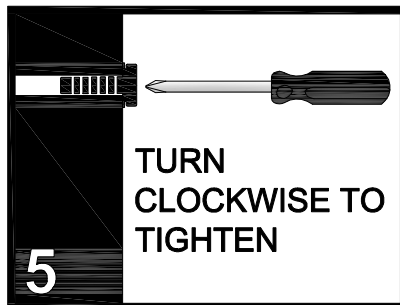

Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

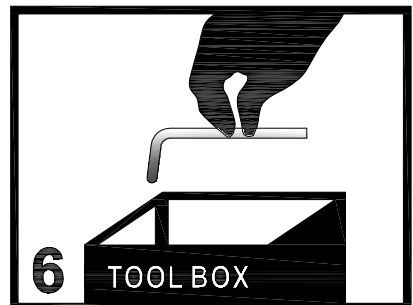

Save the instructions and store any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



PRE-ASSEMBLY INTRODUCTION

Unless you are particularly adept at assembling flat-pack/knock-down furniture, we understand building ready-to-assemble furniture can be a frustrating experience for some. To help avoid confusion and to make the assembly process quicker and smoother, we have provided some helpful tips. Before you begin the assembly, please read the following :

1. Due to the size and/or weight on most of the ready-to-assemble furniture, it is highly recommended that the assembly should be done near the area of its intended location. Make sure you have enough space to move around during the assembly. ALWAYS have at least two people to help with transporting and assembling of the product to avoid any potential injury and/or damage.
2. To protect from damage, assemble the item on a clean, protective surface, such as on a carpet or cardboard.
3. Make sure you have taken all the parts and hardware out of their packaging. Do not throw away packaging material until assembly is completed.
4. Make sure all parts and hardware are accounted for by comparing the actual parts and hardware to the list provided in the assembly instructions. Also check for any irregularity such as crack, flaw or improperly drilled hole. If there is any problem or missing piece, please contact the manufacturer or the supplier. Please have the model number, part number and a brief description of the problem ready will help expedite the replacement process.
5. Read the entire instruction manual and view the diagrams first before assembling. Arrange your parts in order of use and group the identical hardware together to make it easier to grab each piece as you begin to assemble.
6. During the assembly process, make sure parts are properly aligned before tightening with the tool provided or required for the assembly. Do not use power tools and do not over tighten.
7. When applying glue to the wood dowels to bond the parts together, please be ABSOLUTELY certain that the parts are correct and lined up with each other (refer to diagrams and take notice of the various pre-drilled hole locations). When in doubt, assemble the parts together first and if the parts fit right, then apply glue to the wood dowels.




CAMLOCK FASTENER ASSEMBLY INSTRUCTIONS

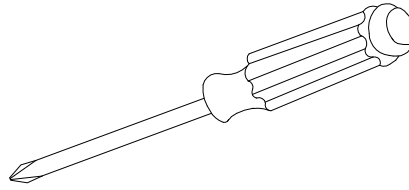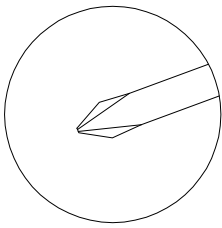


Note: Every cam lock bolt must have a cam lock connector in order to fasten the parts together.

- (1)** Secure the threaded end of the cam bolt by using a screwdriver.

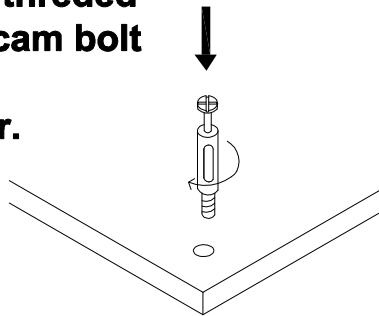


Turn right (clockwise) to tighten.


Align the cam connector with its side opening (or arrow) pointing to the small drilled hole.

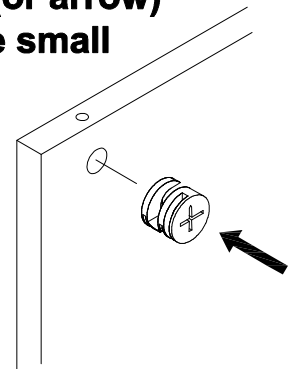


- (2)** Insert the cam lock bolt into the pre-drilled hole above the cam connector.

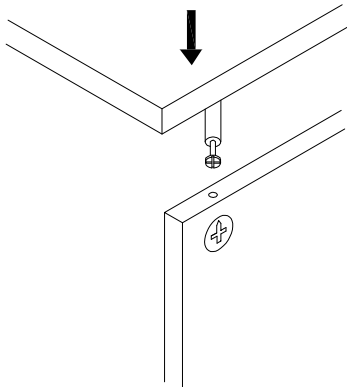

- (3)** Two parts should fit snugly against each other.

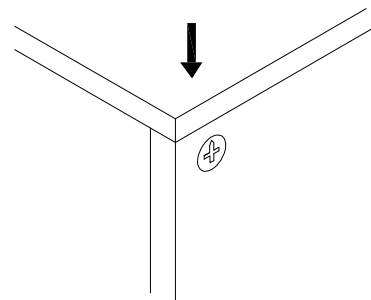


- (4)** Turn right (clockwise) to tighten.

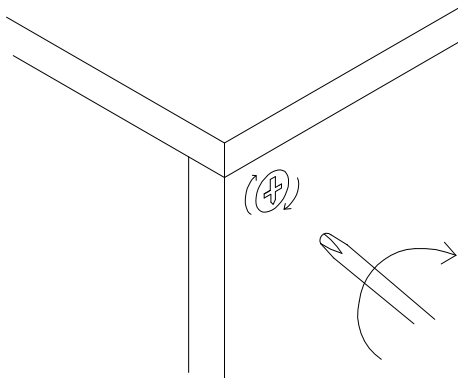

Turn the cam connector with a screwdriver until it will not turn any more with light to moderate force.



PARTS LIST

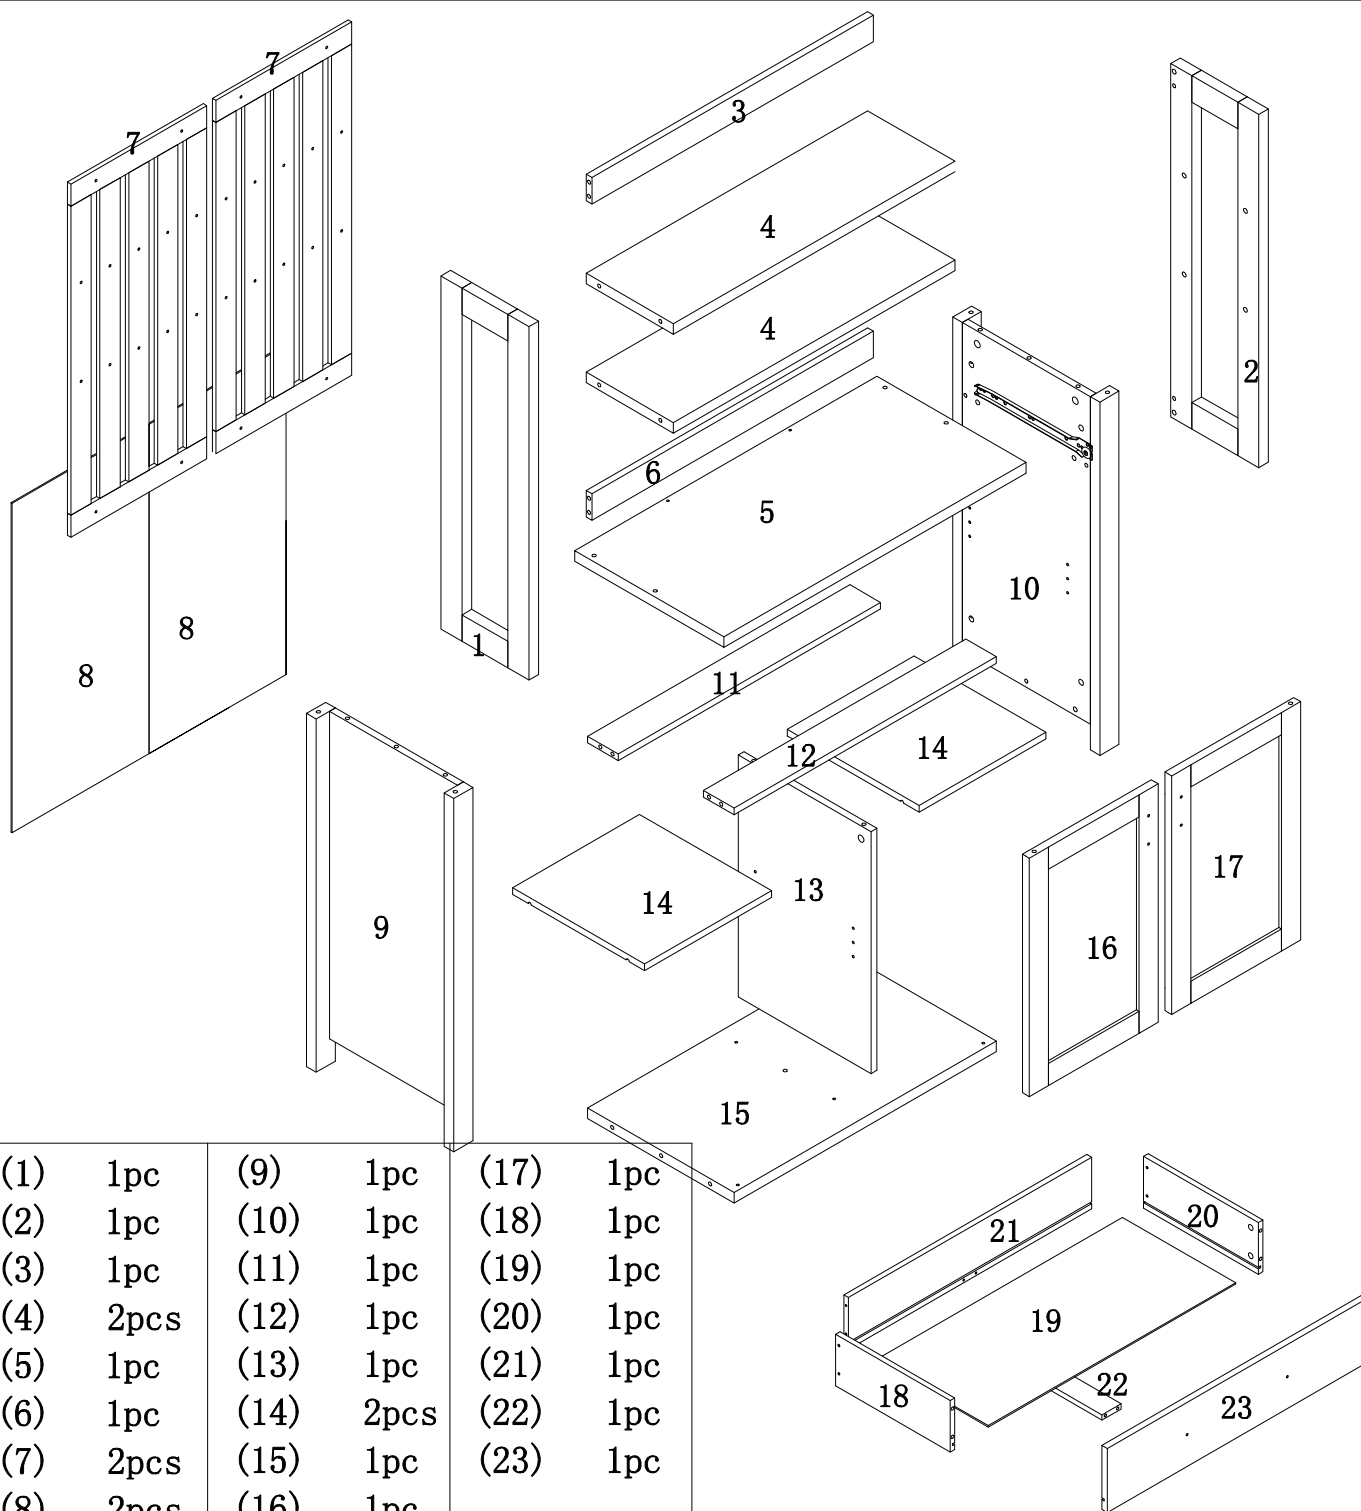

(1)	1pc	(9)	1pc	(17)	1pc
(2)	1pc	(10)	1pc	(18)	1pc
(3)	1pc	(11)	1pc	(19)	1pc
(4)	2pcs	(12)	1pc	(20)	1pc
(5)	1pc	(13)	1pc	(21)	1pc
(6)	1pc	(14)	2pcs	(22)	1pc
(7)	2pcs	(15)	1pc	(23)	1pc
(8)	2pcs	(16)	1pc		



Before you begin, please read "Assembly and Care Advice", "Pre-Assembly Introduction" and "Cam Lock Fastener Assembly Instructions".


HARDWARE LIST

A		L29	30pcs
B		Ø15	30pcs
C		L20	4pcs
D		Ø12	4pcs
E		Ø8x25	13pcs
F		Ø6x30	2pcs
G		Ø7x48	4pcs
H		Ø8xØ16x2	4pcs
I		Ø4x16	2pcs
J		Ø4x20	28pcs
K		Ø4x30	6pcs
L		Ø4x40	4pcs
M			2pcs
N		Ø3x14	4pcs
O		Ø3x16	4pcs
P		Ø5	8pcs
Q			2pcs
R		C64	2pcs
S		C256	1pc
T		M4x22	2pcs
U		M4x25	4pcs
V			26pcs
W		Ø16	4pcs
X		Ø20	18pcs



Due to the size and/or weight of this product, it is highly recommended that the assembly should be done near the area of its intended location. Make sure you have enough space to move around during the assembly. ALWAYS have at least two people to help with transporting and assembling the product to avoid any potential injury and/or damage.



HARDWARE LIST

Y		80x25x60H	1pc
Z		197×5×1	1pc
A1		12×12×1	2pcs
A2		∅4×25	1pc
A3		∅5×40	1pc
A4		∅8×40	1pc
A5		Glue: For securing please apply to wood dowel first before inserting into panel	1pc





Due to the size and/or weight of this product, it is highly recommended that the assembly should be done near the area of its intended location. Make sure you have enough space to move around during the assembly. ALWAYS have at least two people to help with transporting and assembling the product to avoid any potential injury and/or damage



ASSEMBLY INSTRUCTIONS

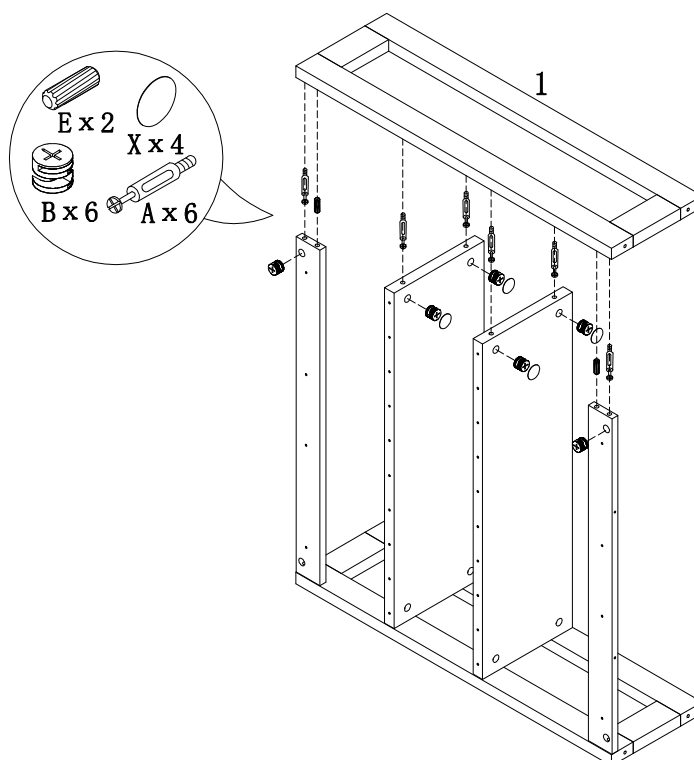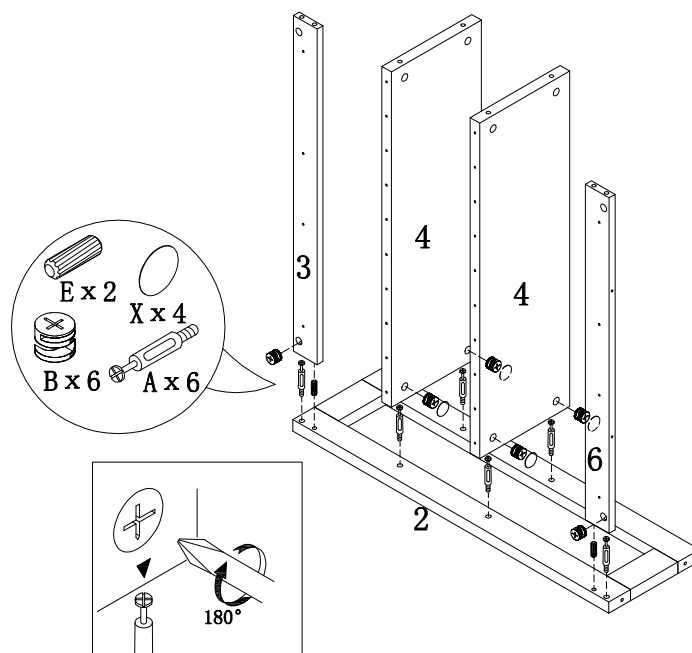



ASSEMBLY INSTRUCTIONS

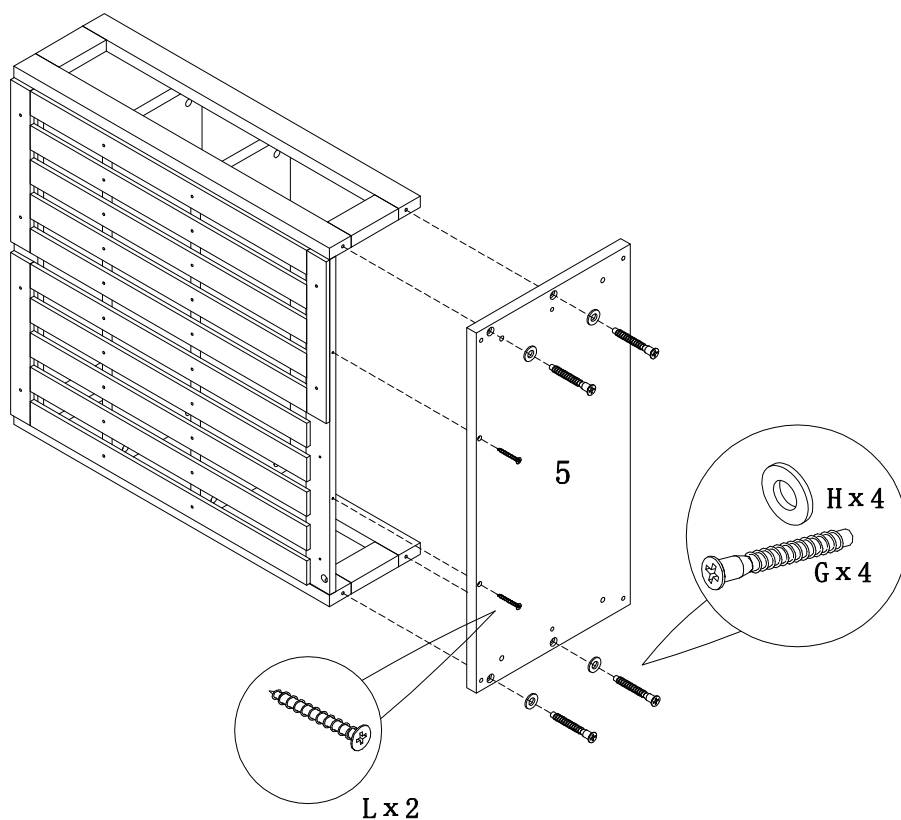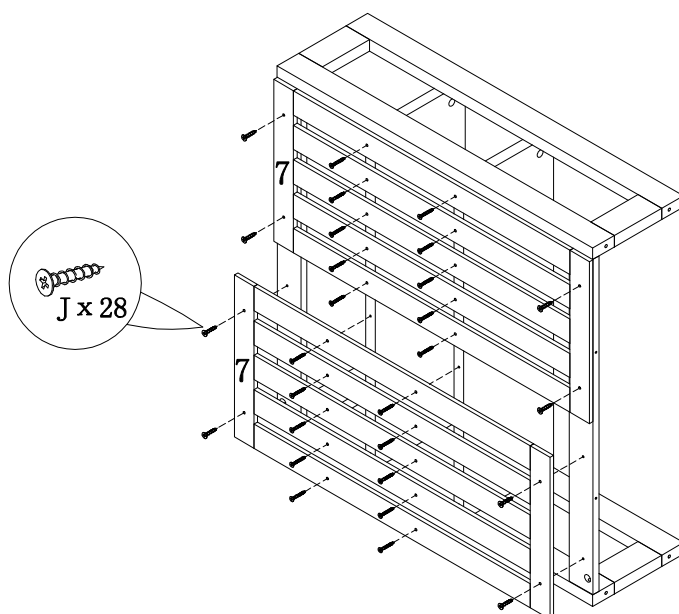



ASSEMBLY INSTRUCTIONS

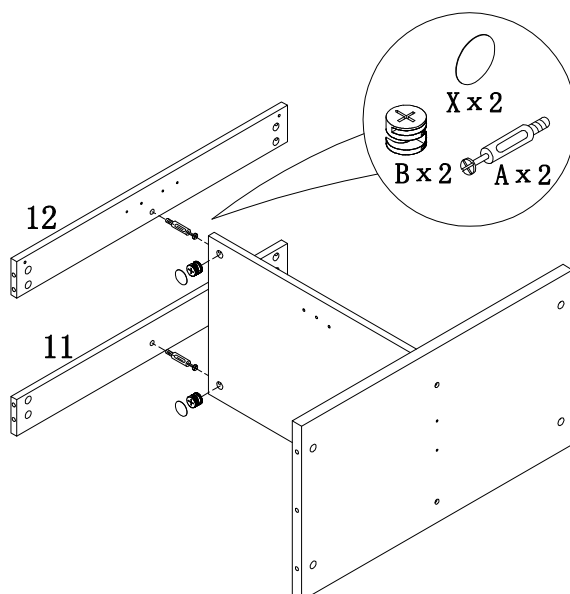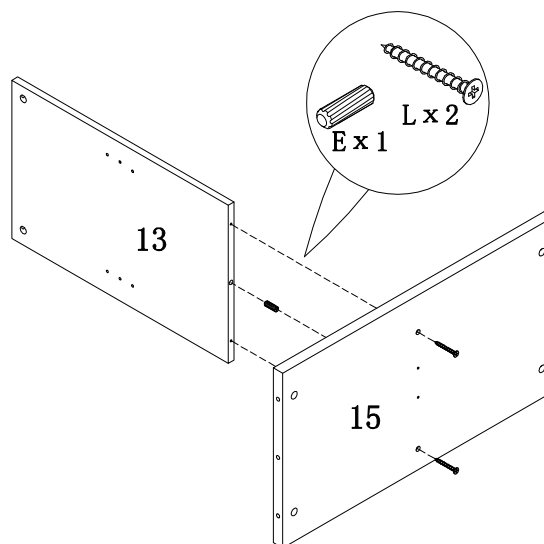



ASSEMBLY INSTRUCTIONS

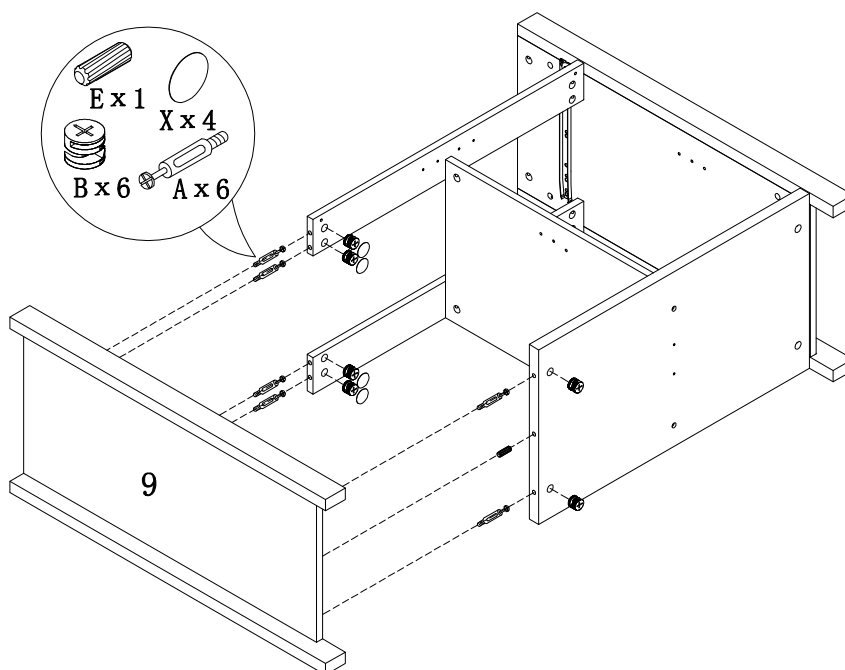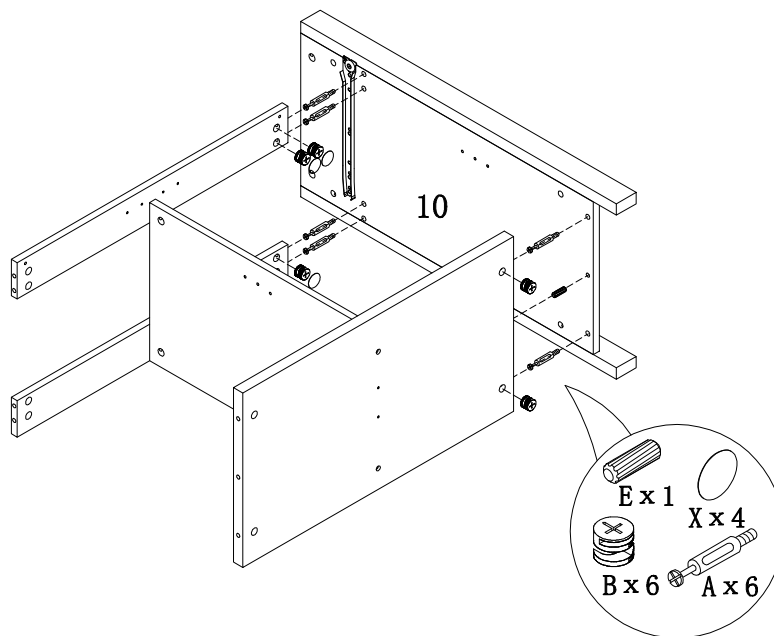




ASSEMBLY INSTRUCTIONS

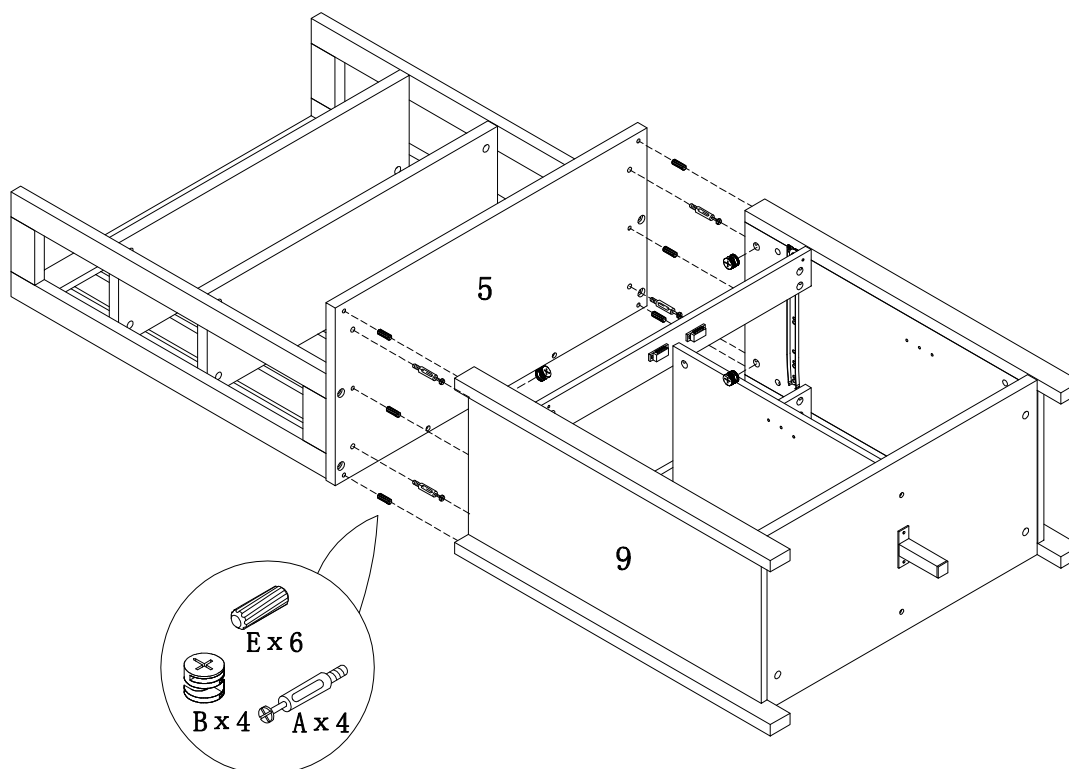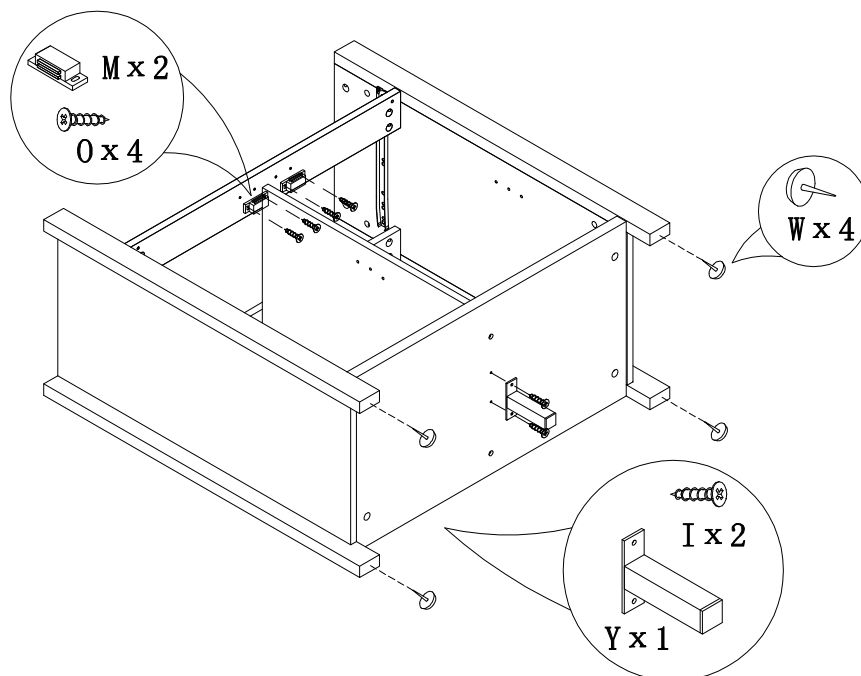



ASSEMBLY INSTRUCTIONS

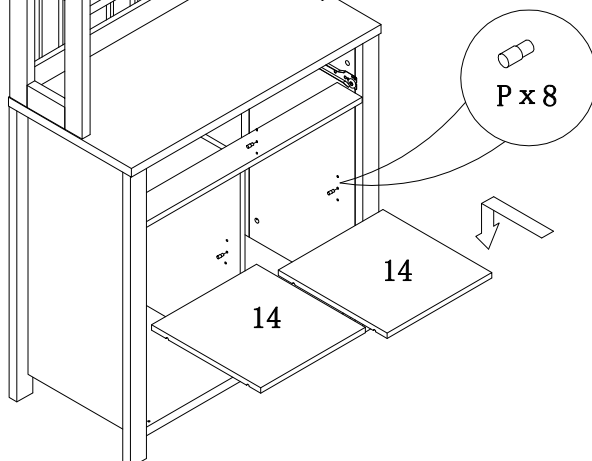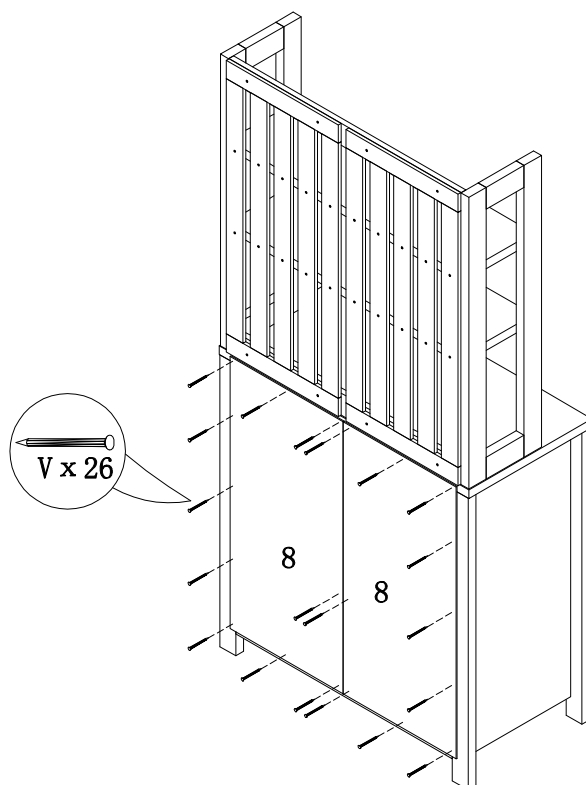


ASSEMBLY INSTRUCTIONS

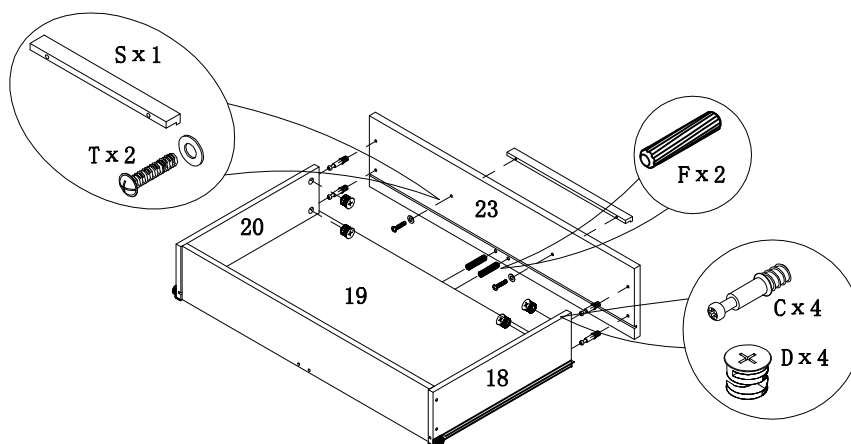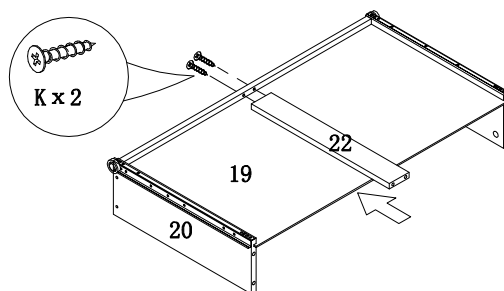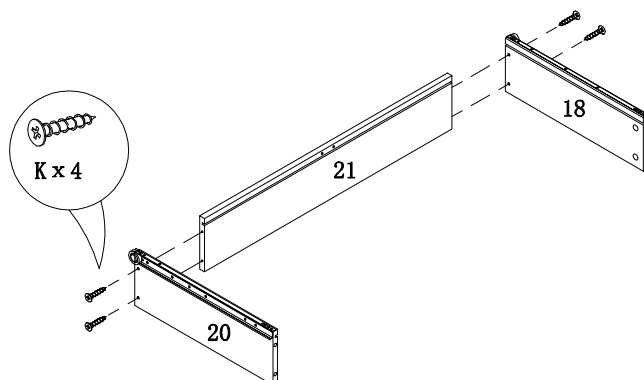

ASSEMBLY INSTRUCTIONS

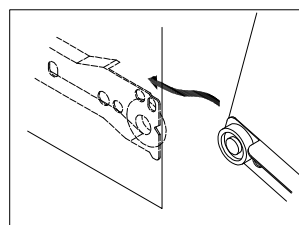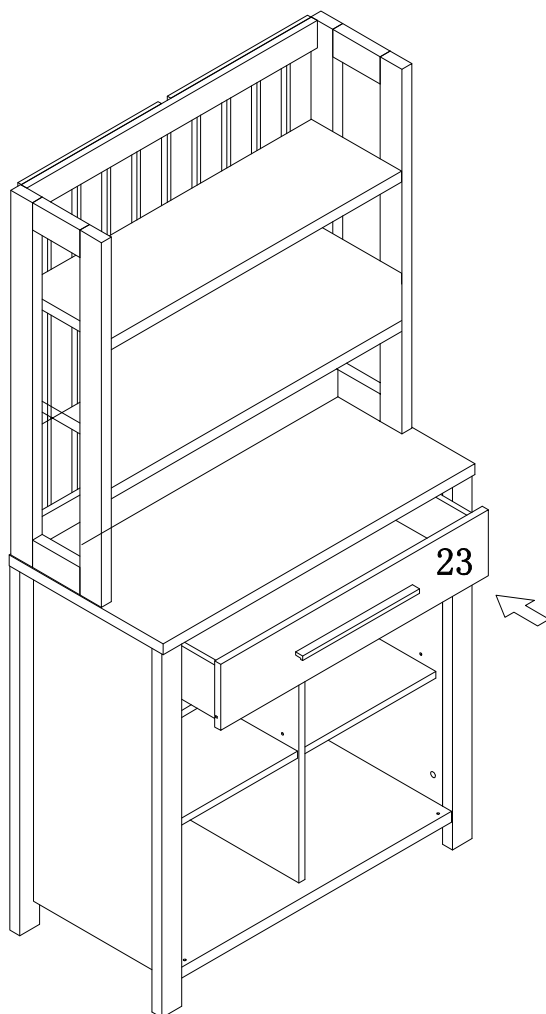


ASSEMBLY INSTRUCTIONS

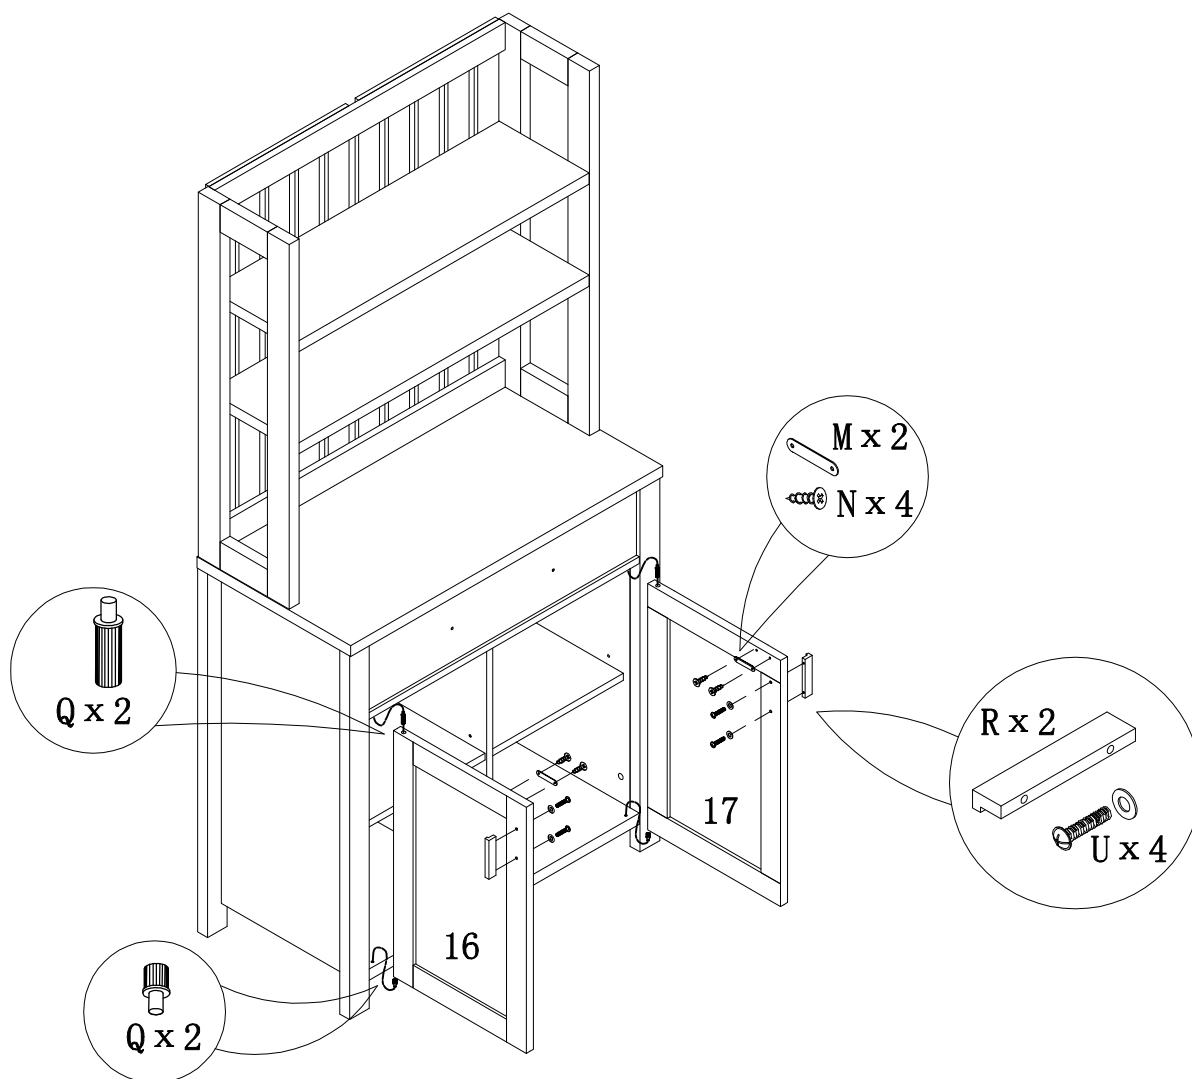


Anti-Tipping strap Instruction


Hardware List (Included):



Drywall Anchor 1PC



Metal Brackets 2PC



Drywall screw 1PC




Strap 1PC



Flathead Screw 1PC

Tools(Not Included):

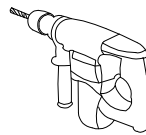


Drill & Drill Bit



Light Hammer


Note: Hardware included only compatible with standard drywalls.

STEP 1

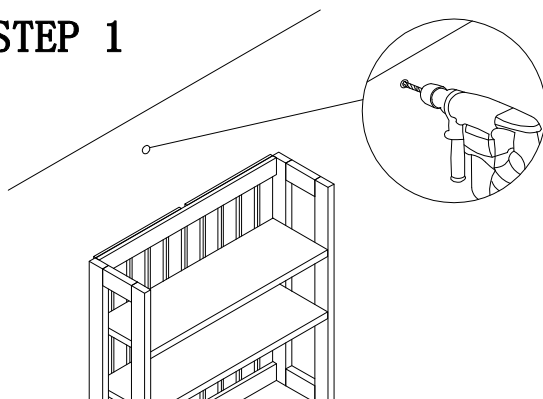


- 1.Find spot on wall 1" below top of item.
- 2.Using a drill bit slightly thinner than anchor ,drill hole into drywall.

STEP 2

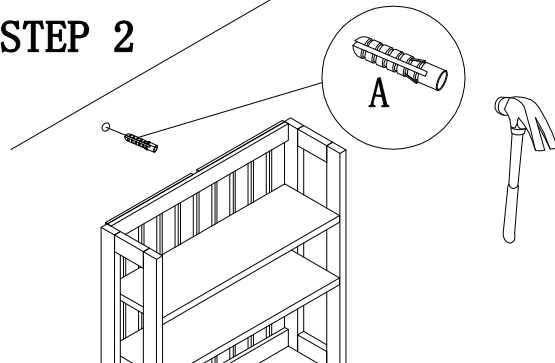


- 1.Use a light hammer to tap anchor into hole.
- 2.Anchor should fit snugly.If hole is too small, drill again to increase hole size .Do not force anchor into wall.

STEP 3

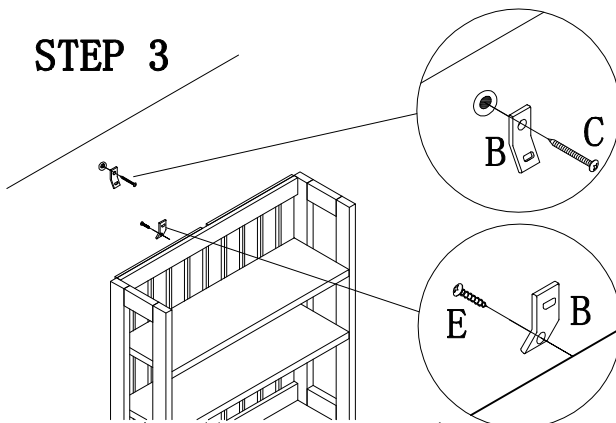

- 1.Insert drywall screw into metal bracket and into drywall anchor.
- 2.Insert flathead screw into second metal bracket and into back of item.along top edge.

STEP 4

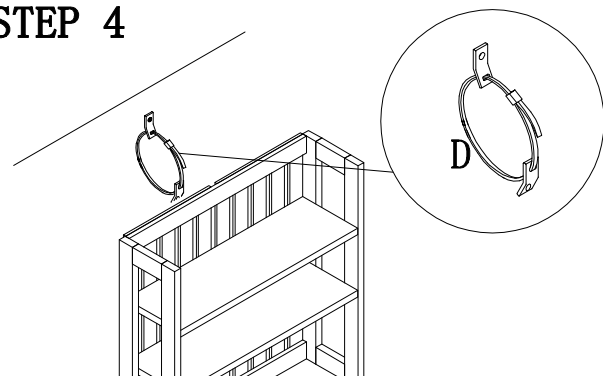

- 1.Insert strap thru bracket attached to wall. then thru bracket on item , and into head of strap.
 - 2.pull lightly til strap stops.
- Assembly is complete.**