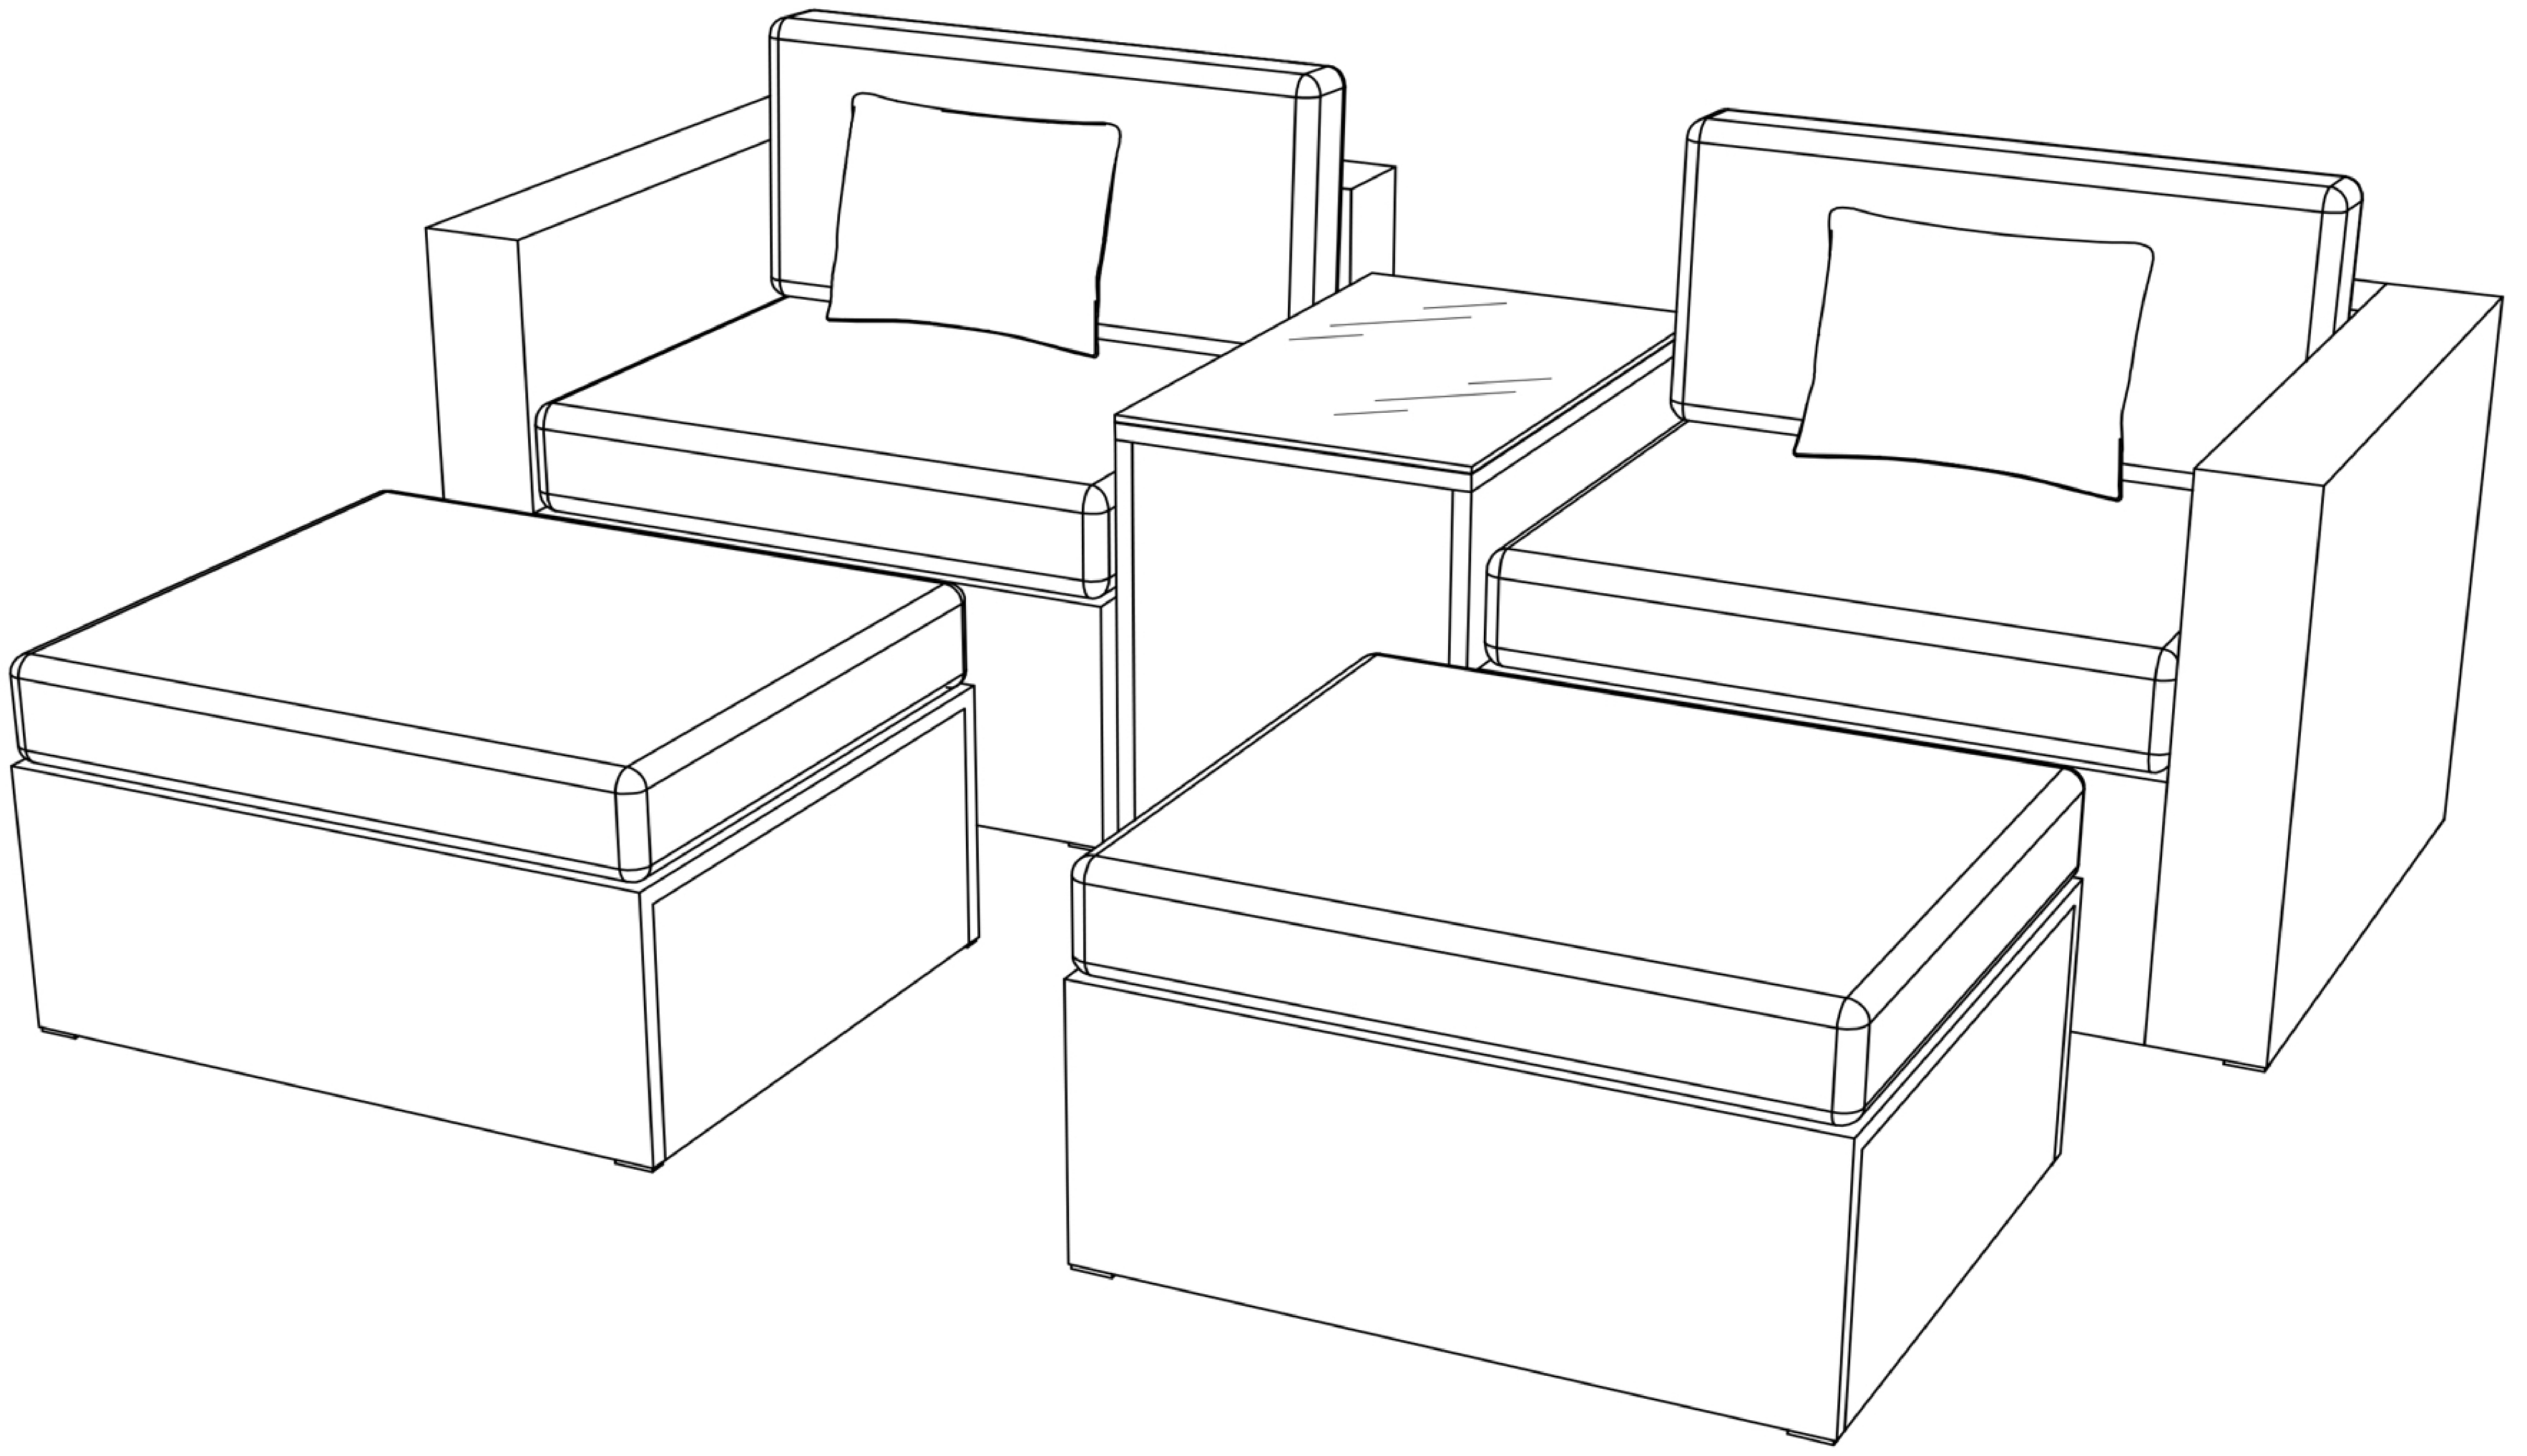


# ASSEMBLE INSTRUCTION

If you have any questions, please feel free to contact us.  
Email: [lowesteam@aminalife.com](mailto:lowesteam@aminalife.com)










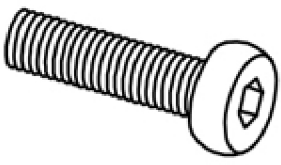
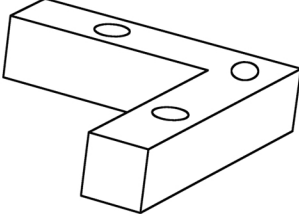

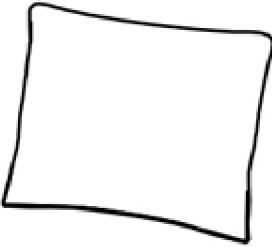


## READ & SAVE THIS INSTRUCTIONS BEFORE ASSEMBLY

1. Please separate and identify all the parts, making sure you have all of the parts listed.
2. To avoid any scratch during assembly, please assemble on a soft mat or similar.
3. Please assemble step by step and follow the instruction.
4. Washers must be used.
5. Do not completely fasten each screw and nut until all the screws are properly fixed.
6. If you have an electric screw driver, you can use the electric screw driver instead of the allen key we provided, the electric screw driver helps you to shorten the assembly time.
7. The back cushions' and pillows' covers are packed separately, please put the covers on before use.

# ASSEMBLE INSTRUCTION

## (Corner Sofa-L)

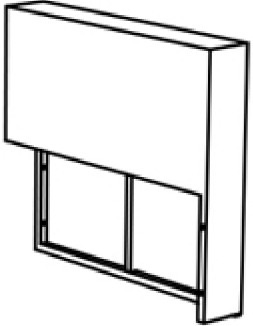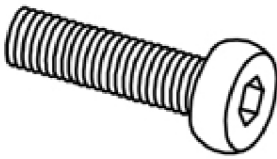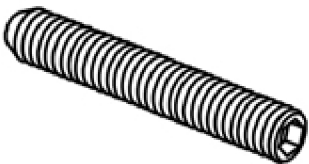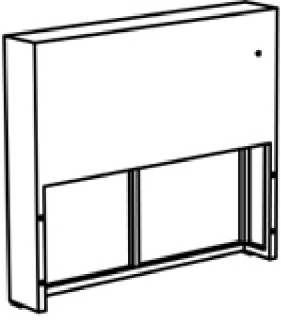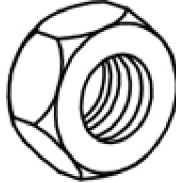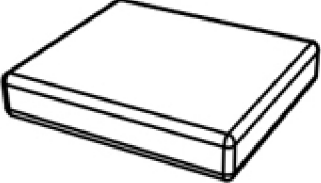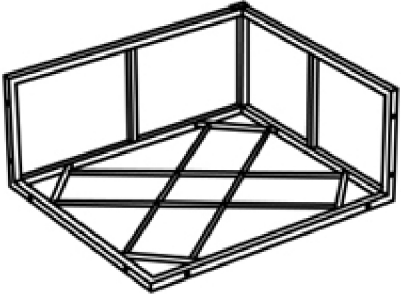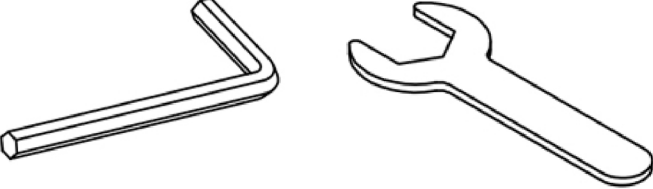A1		1pc	G	M6X40mm 	8pcs	M		1pc
B1		1pc	H		18pcs	N		1pc
C1		1pc	I		1pc	O		1pc
F	M6X50mm 	10pcs	K	 	4pcs	P		1pc

Step 1

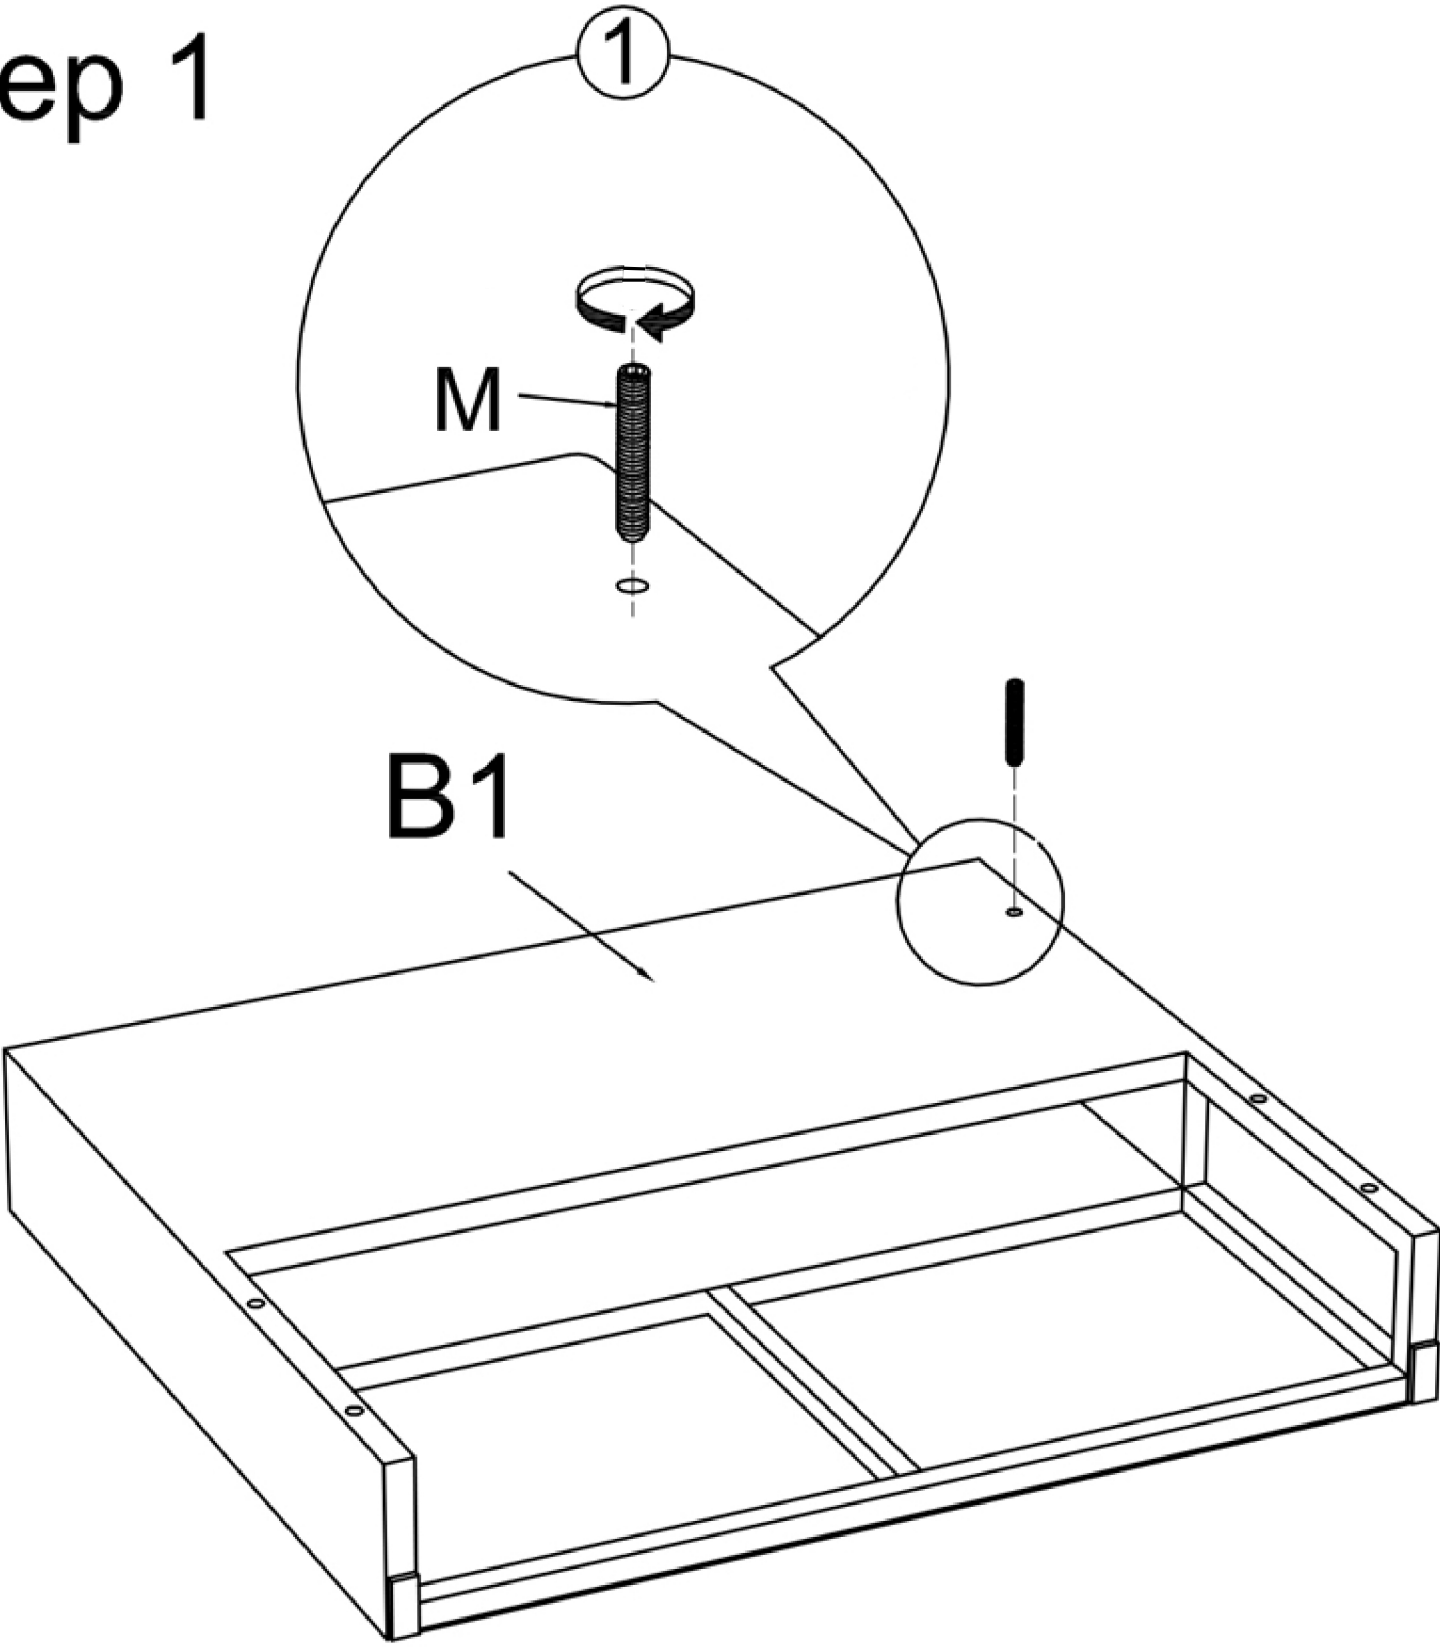


Diagram illustrating Step 1: Attaching panel B1 to the base frame C1. A circular inset shows a close-up of the assembly process, where a screw (M) is inserted through a bracket (I) into the base frame (C1) to secure panel B1.

Step 2

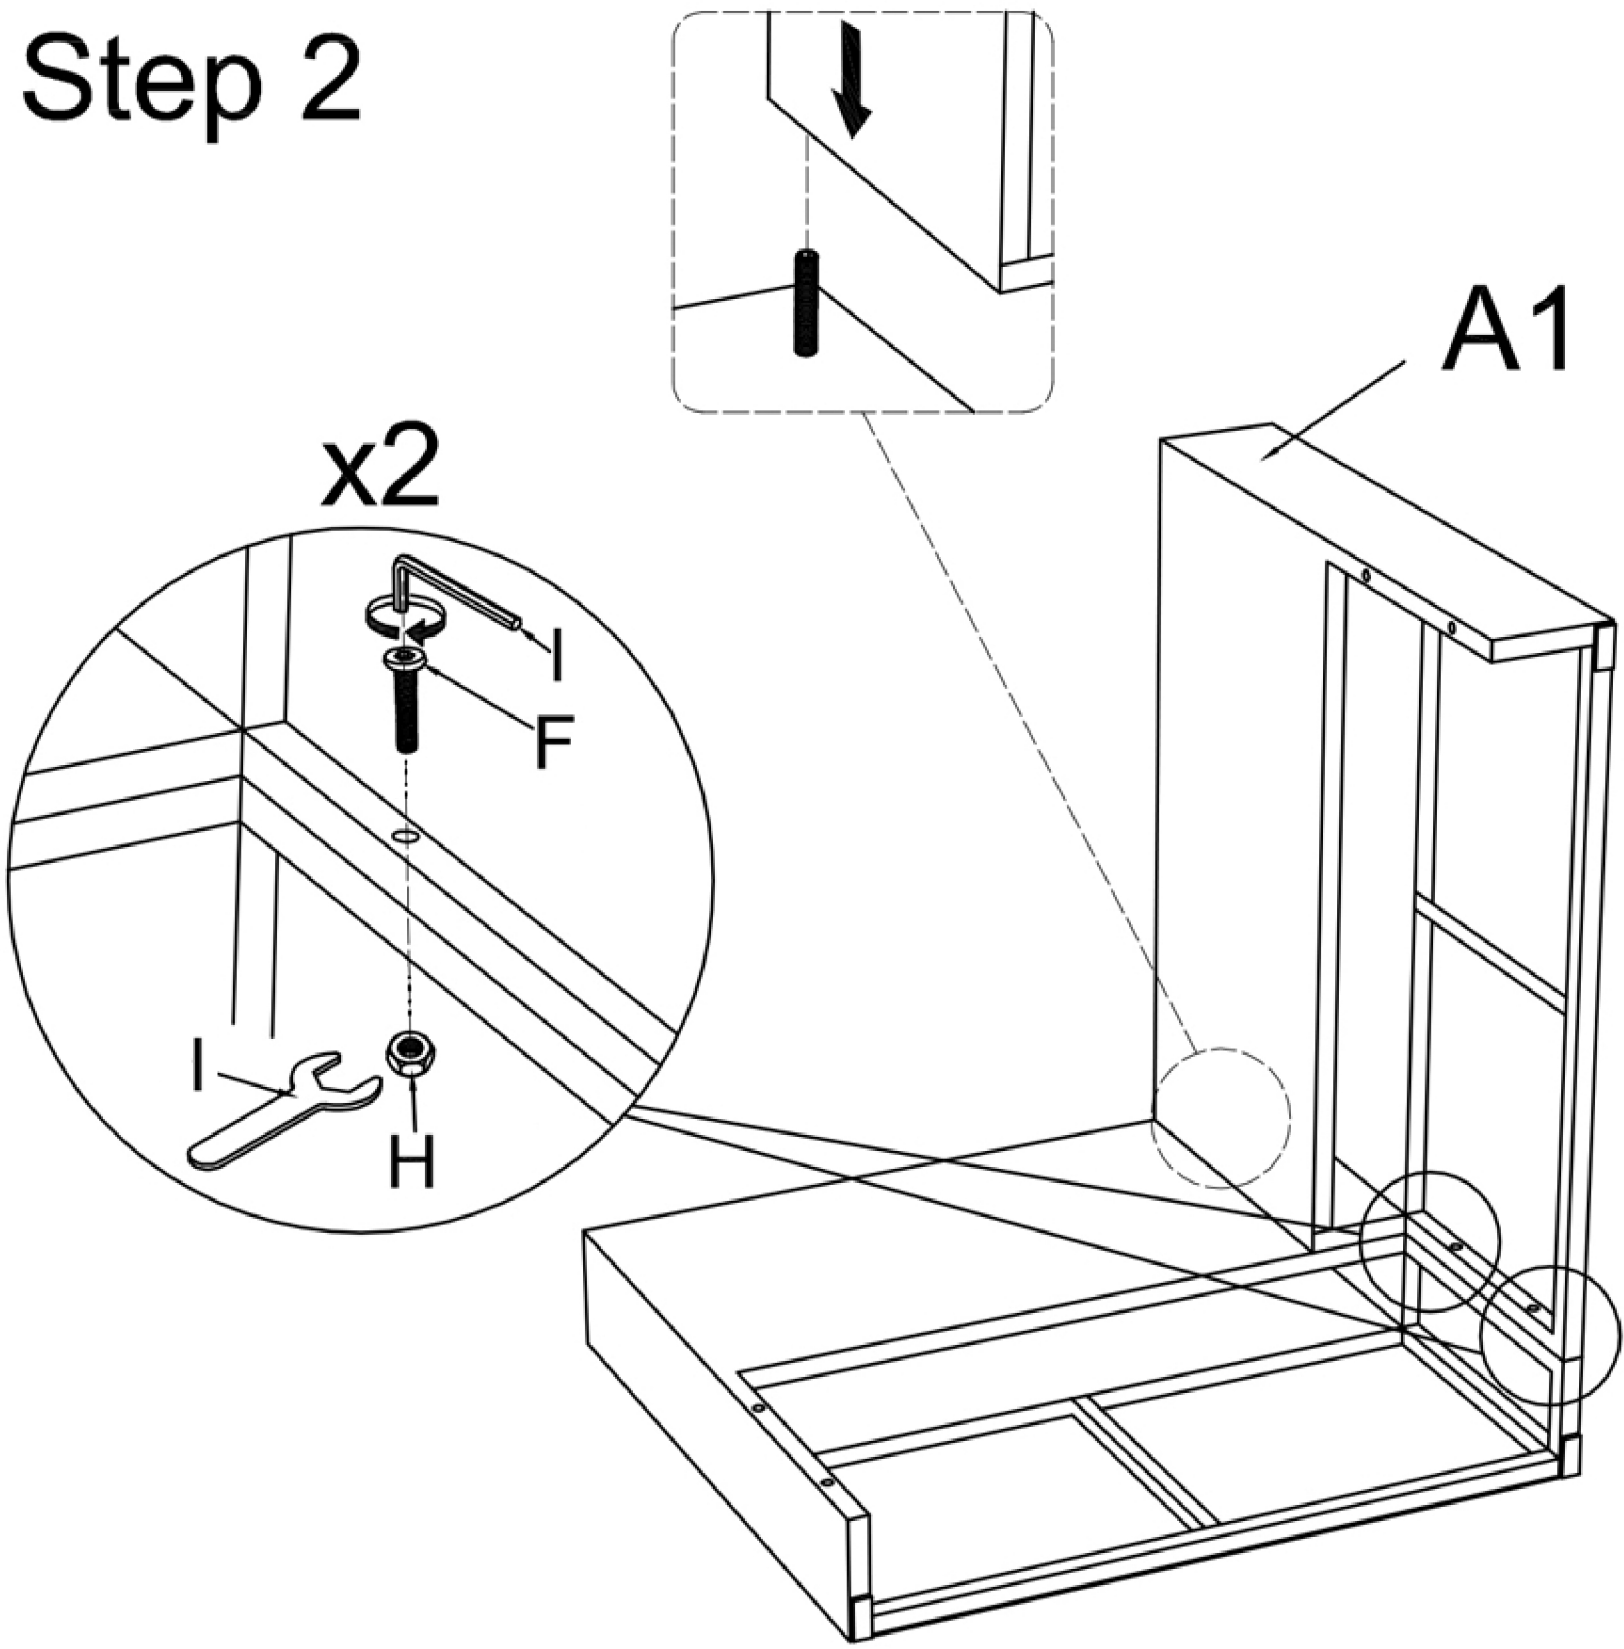


Diagram illustrating Step 2: Attaching panel A1 to the side panel B1. A circular inset shows a close-up of the assembly process, where a screw (F) is inserted through a bracket (I) into the side panel (B1) to secure panel A1. The inset is labeled 'x2', indicating two locations.

Step 3

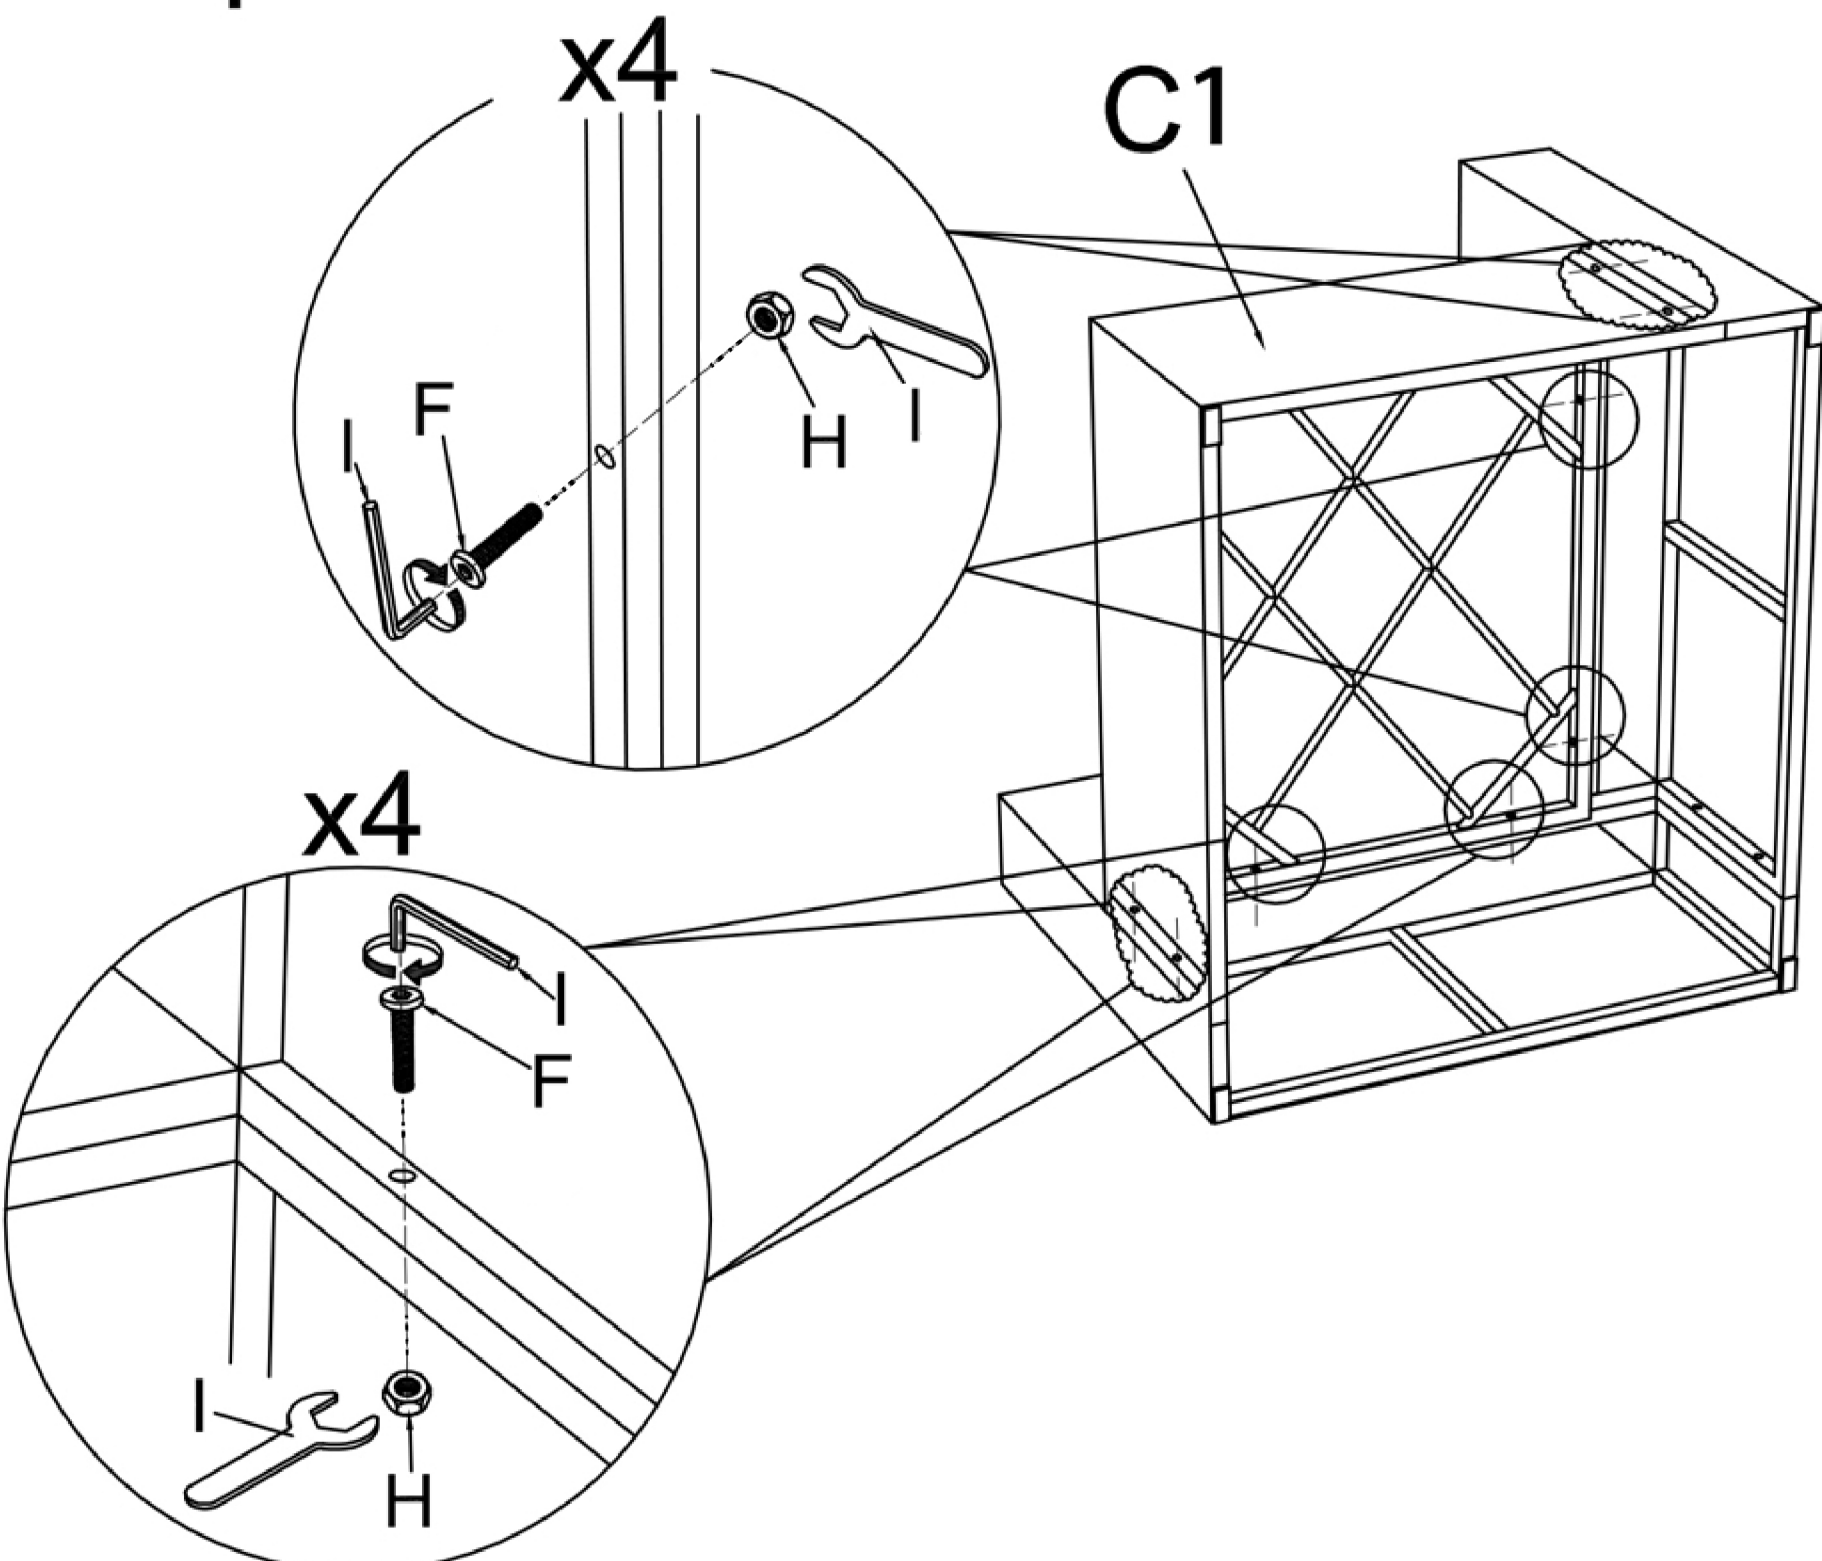


Diagram illustrating Step 3: Attaching the backrest panel C1 to the side panel B1. Two circular insets show close-up views of the assembly process. The top inset shows a screw (H) being inserted through a bracket (I) into the backrest panel (C1). The bottom inset shows a screw (F) being inserted through a bracket (I) into the side panel (B1). Both insets are labeled 'x4', indicating four locations.

Step 4

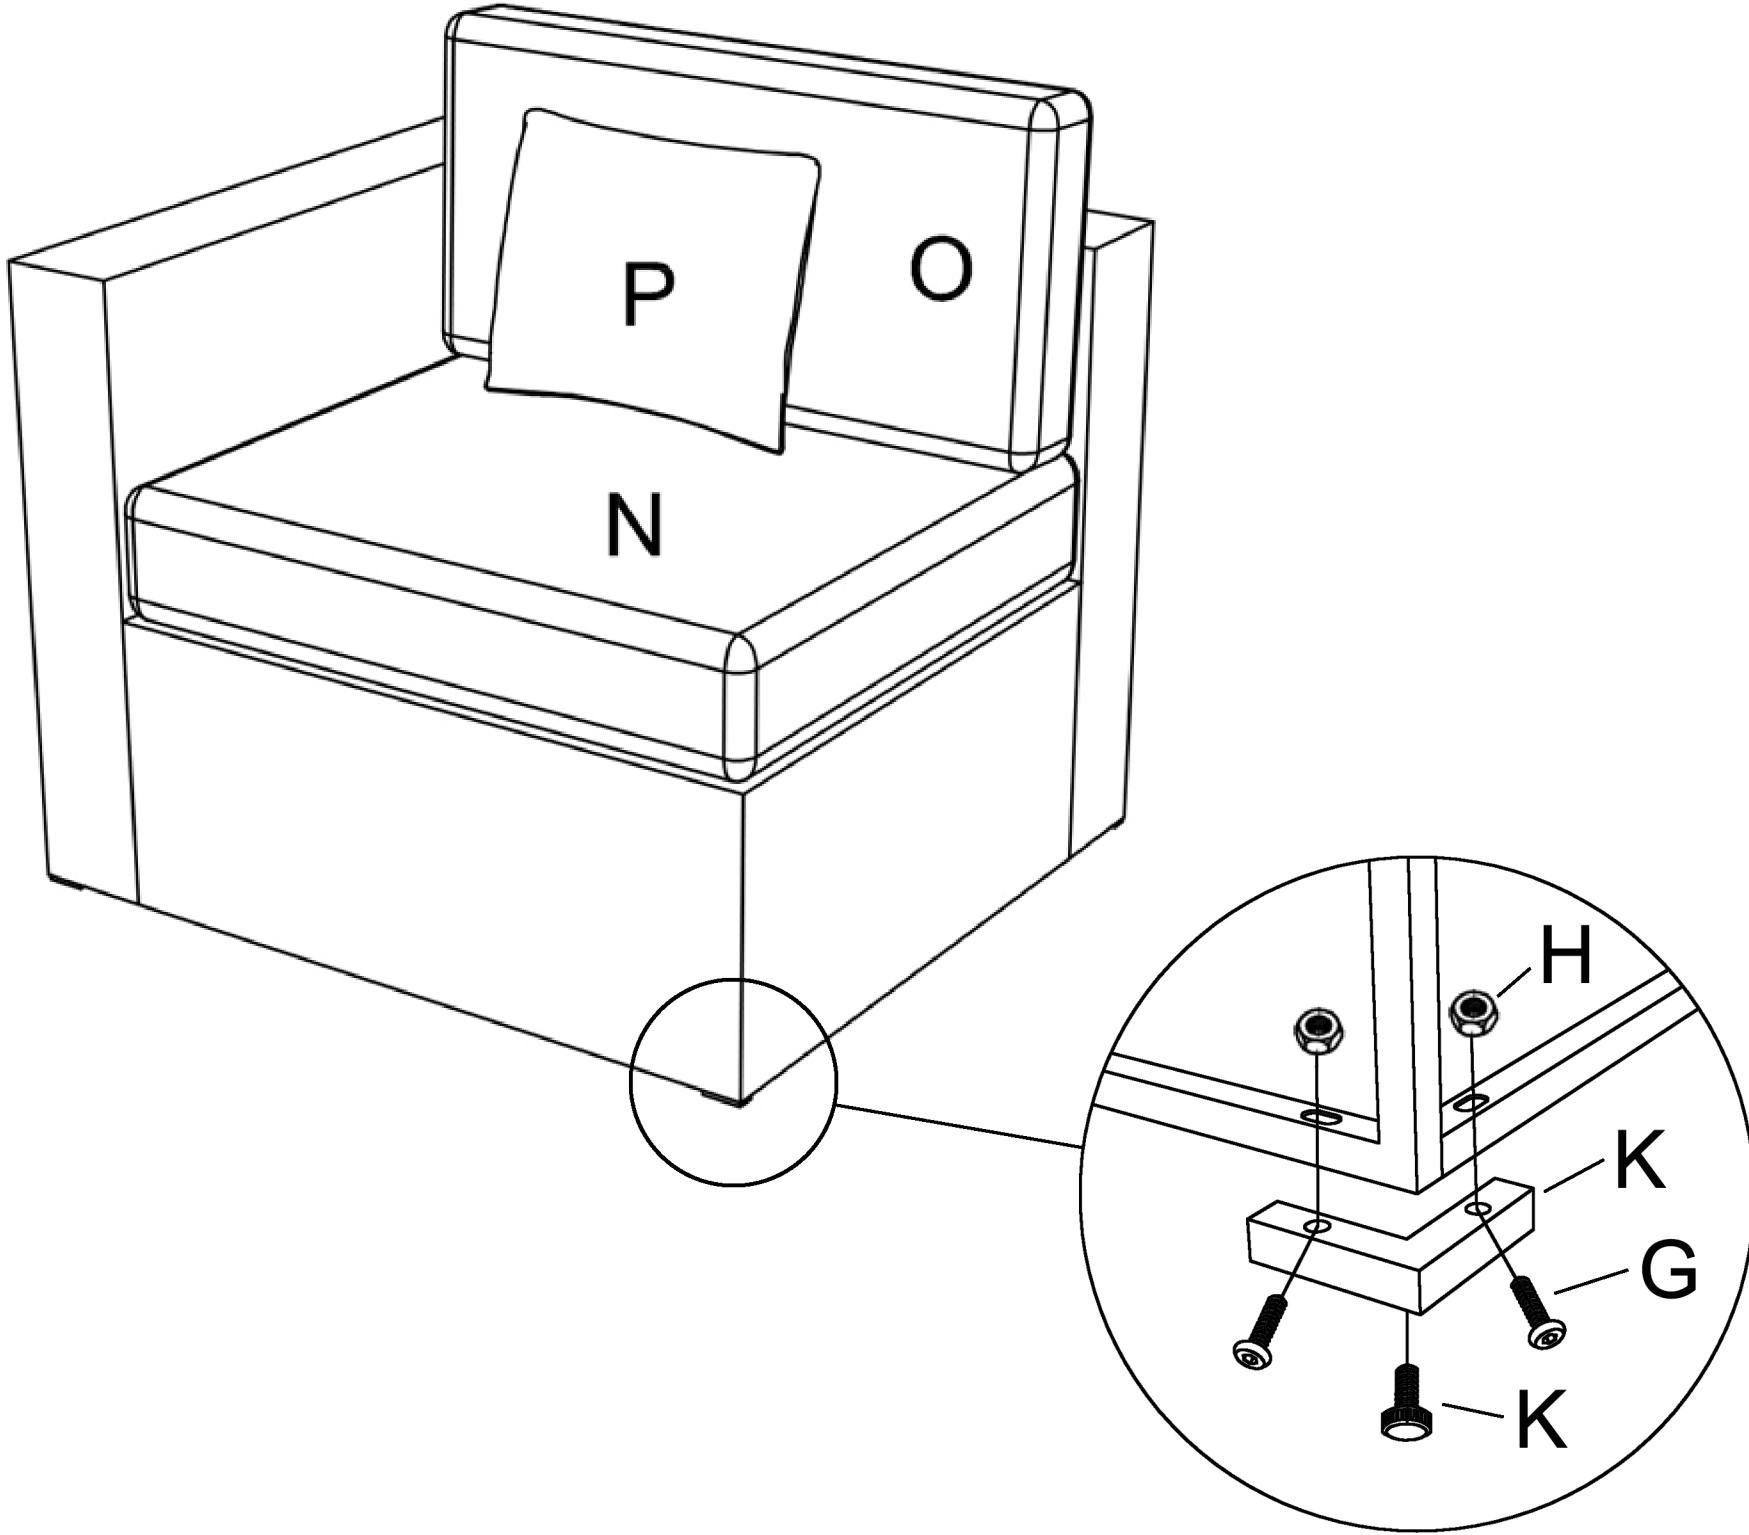
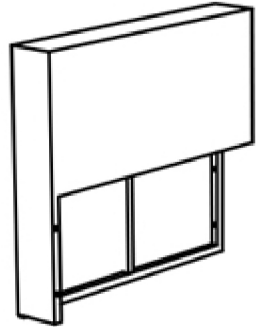
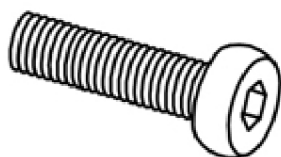
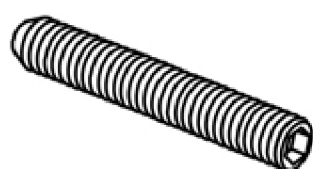
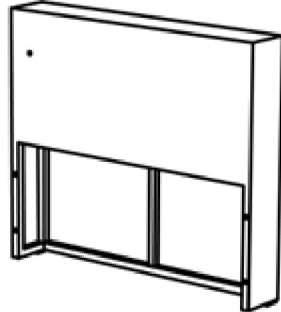
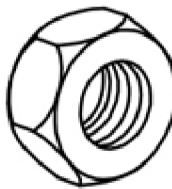
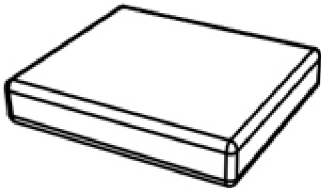
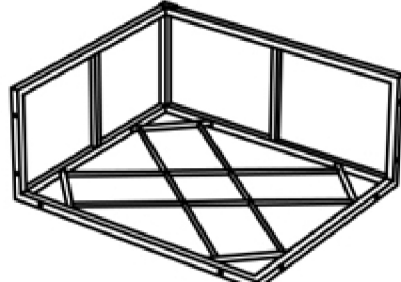
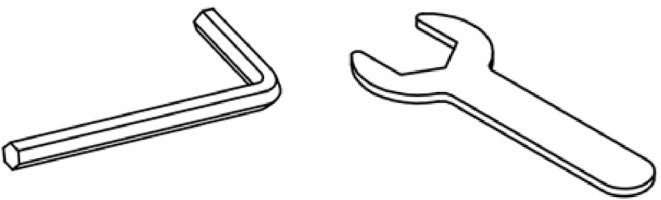

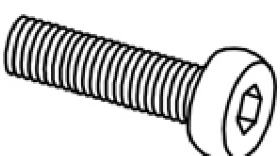
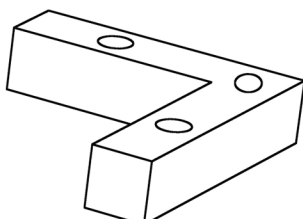

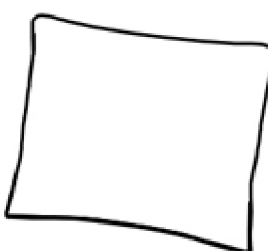


Diagram illustrating Step 4: Final assembly of the corner sofa. The completed structure is shown with the backrest panel (C1) attached to the side panel (B1). The seat cushion (N) and backrest cushion (O) are placed on the sofa. A circular inset shows a close-up of the bottom corner, where the L-bracket (K) and screw (G) are used to secure the base frame (C1) to the side panel (B1).

# ASSEMBLE INSTRUCTION

## (Corner Sofa-R)

A2		1pc	G	M6X40mm 	8pcs	M		1pc
B2		1pc	H		18pcs	N		1pc
C2		1pc	I		1pc	O		1pc
F	M6X50mm 	10pcs	K	 	4pcs	P		1pc

Step 1

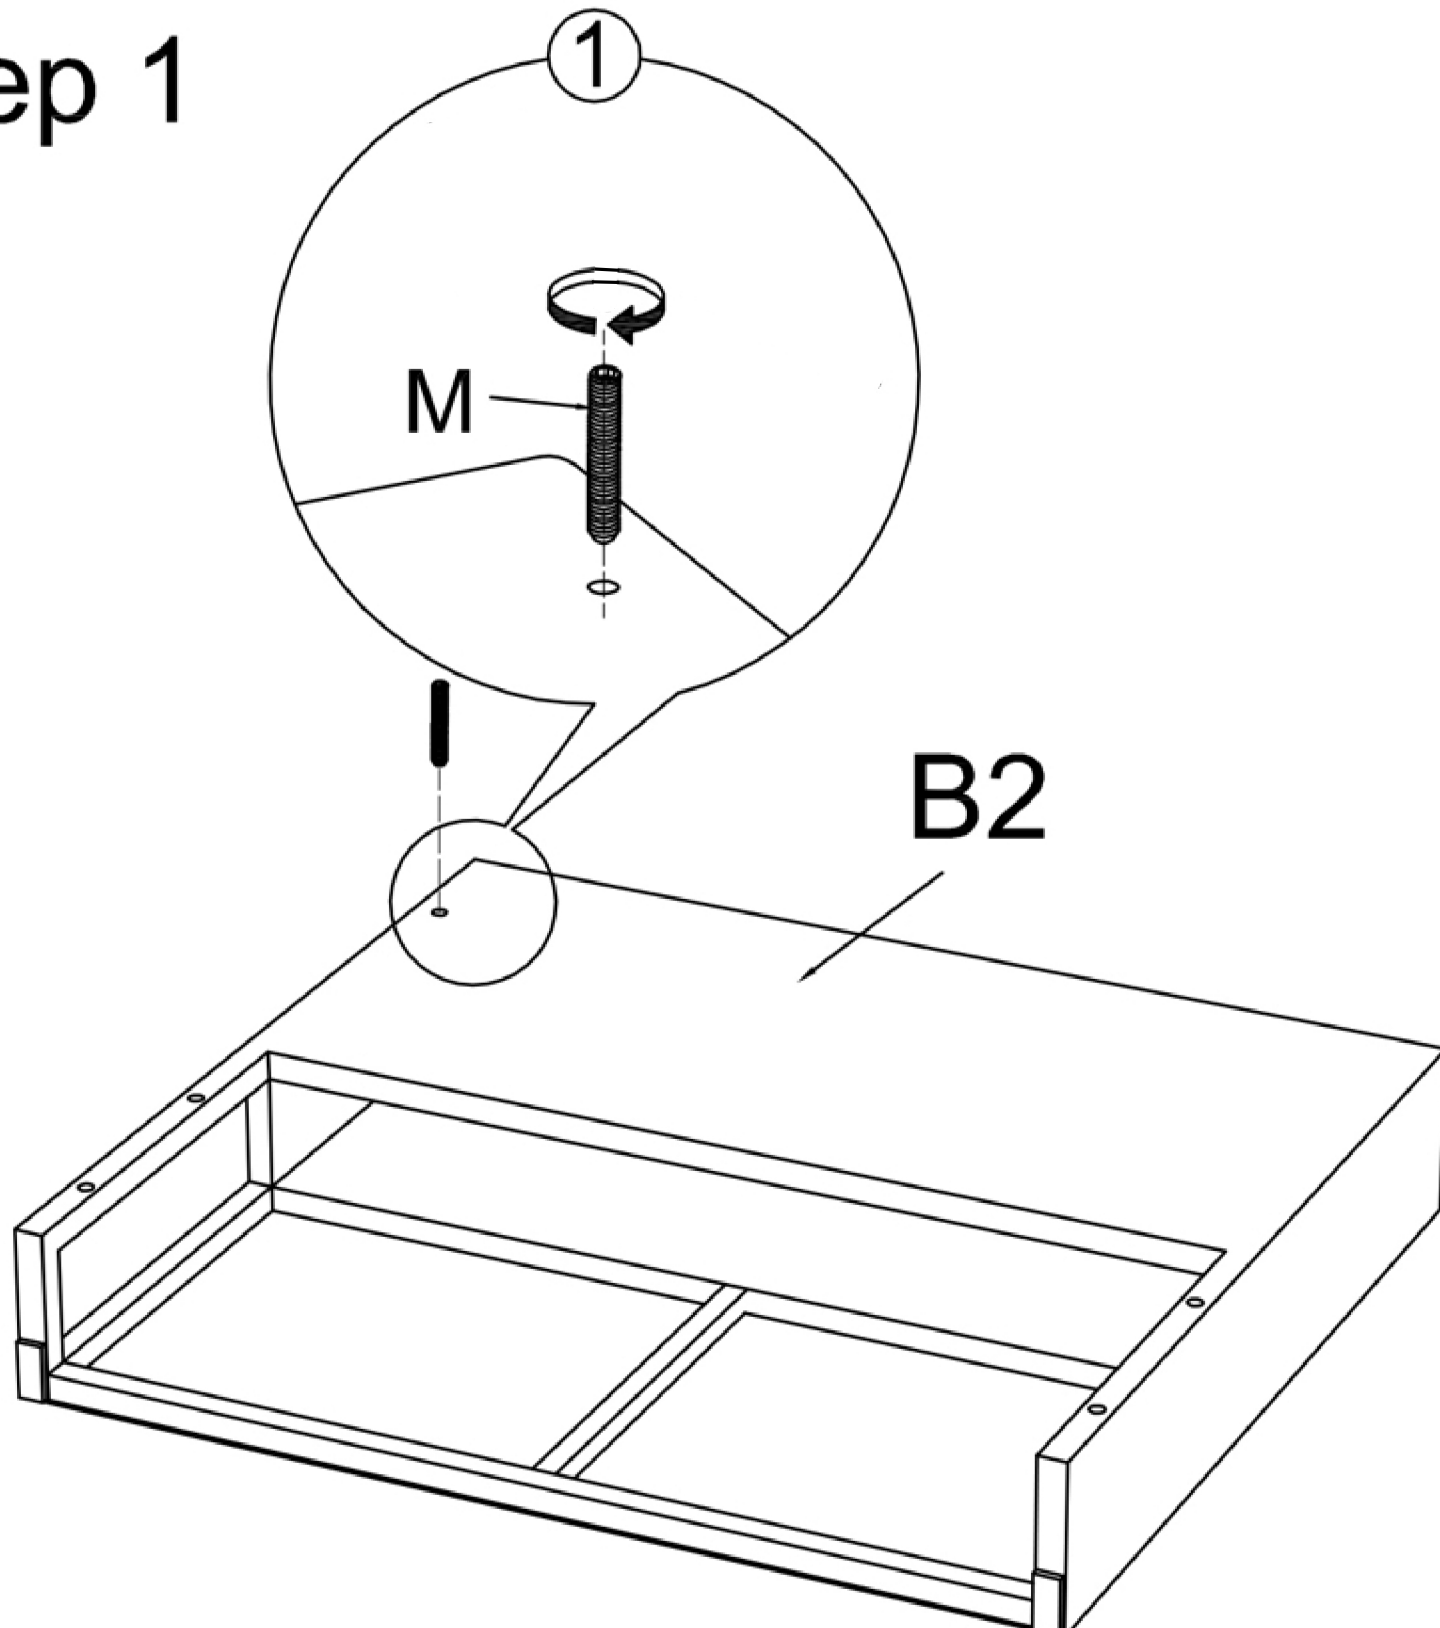


Diagram showing the assembly of the backrest panel B2 to the base frame C2. A circular inset shows a close-up of the connection point where a screw M is used to secure the panel to the frame via bracket I.

Step 2

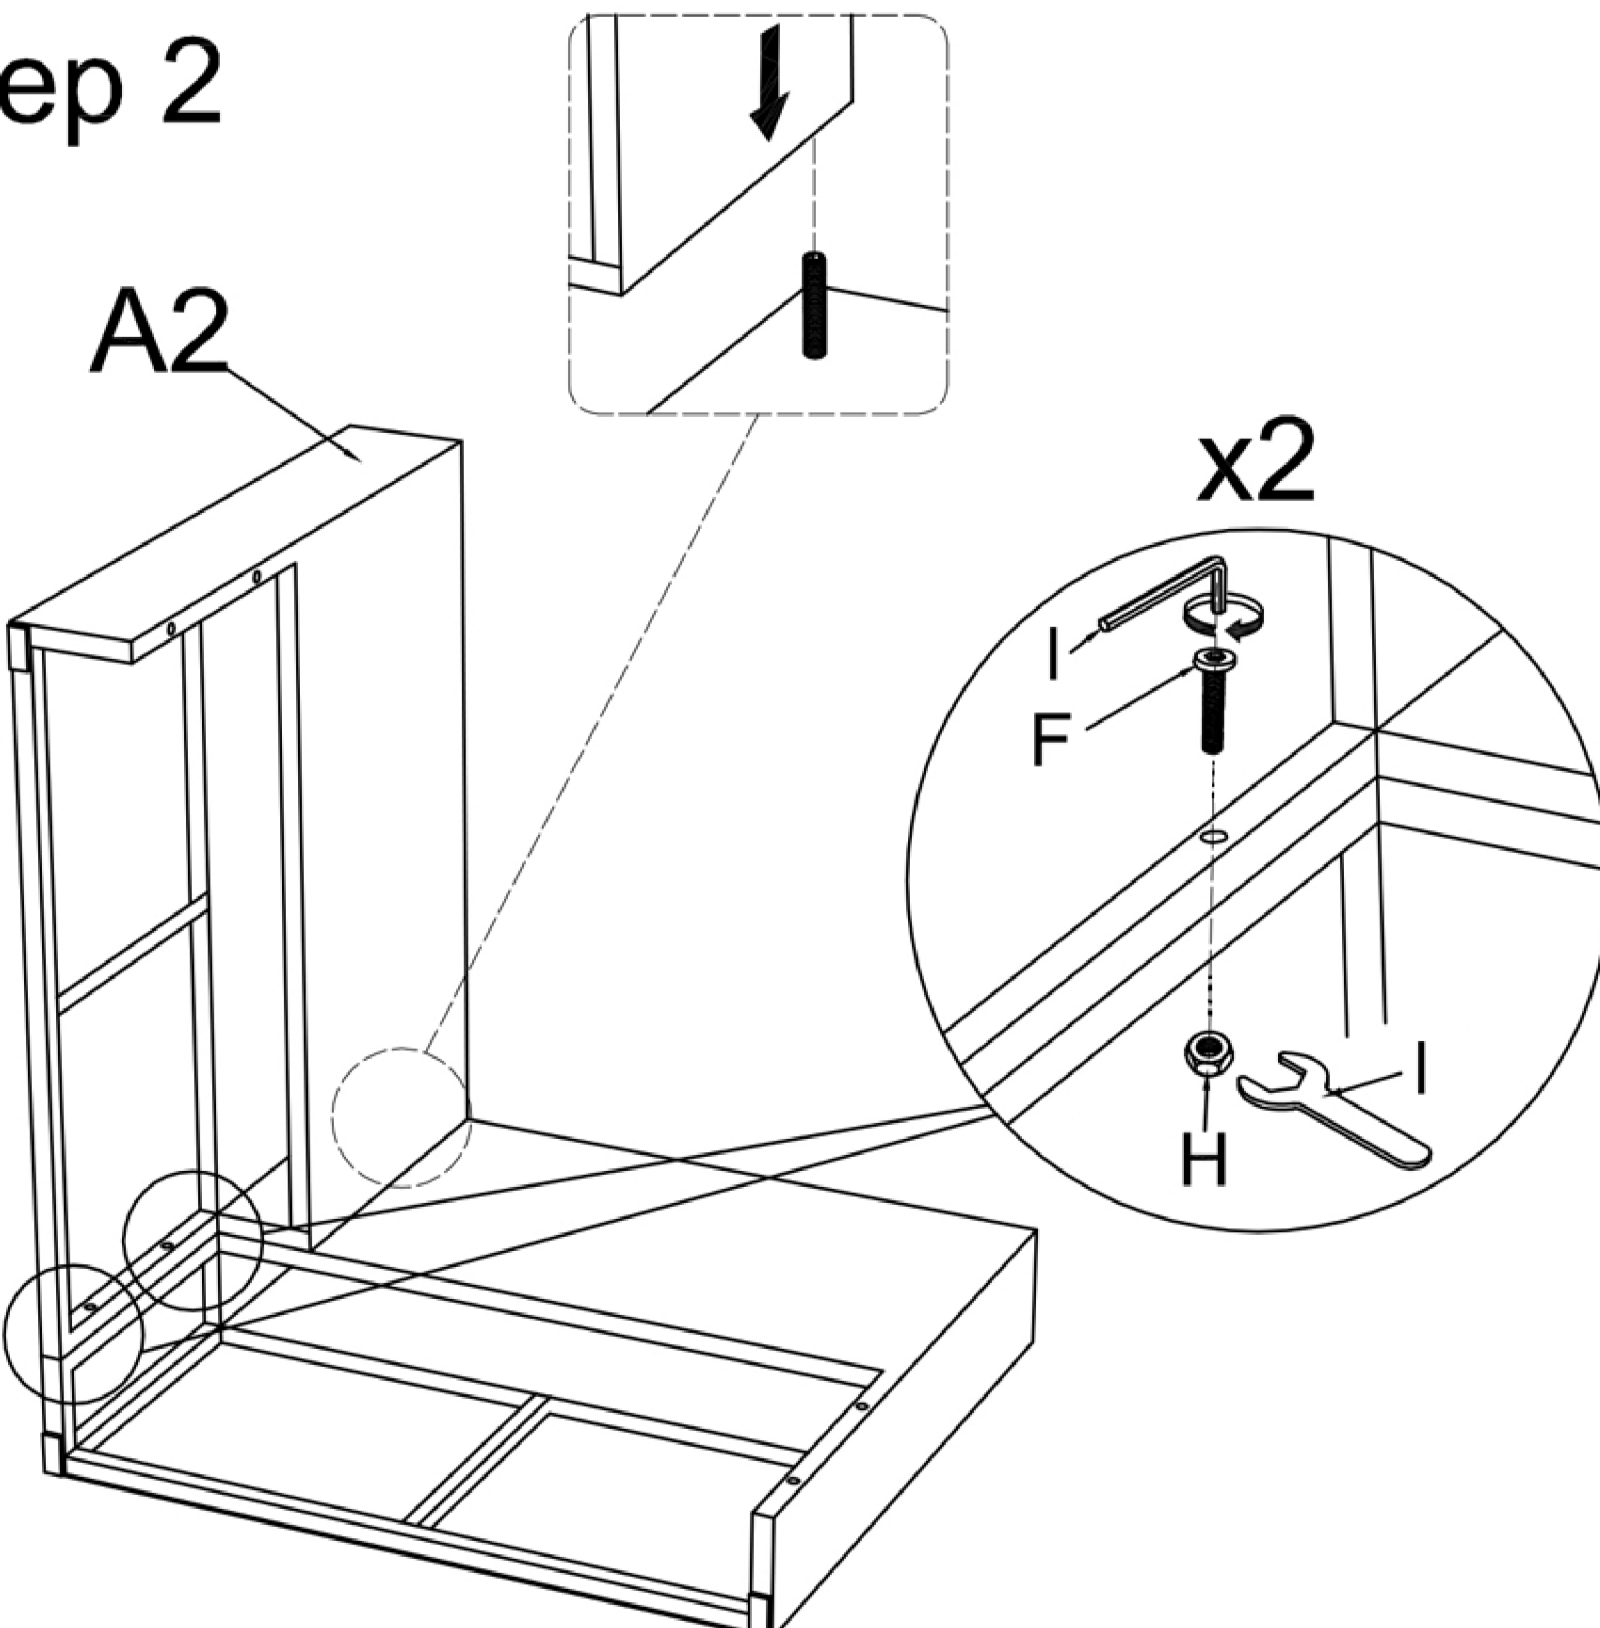


Diagram showing the assembly of the backrest panel A2 to the backrest panel B2. A circular inset shows a close-up of the connection point where a screw F is used to secure the panel to the frame via bracket I. The inset is labeled 'x2'.

Step 3

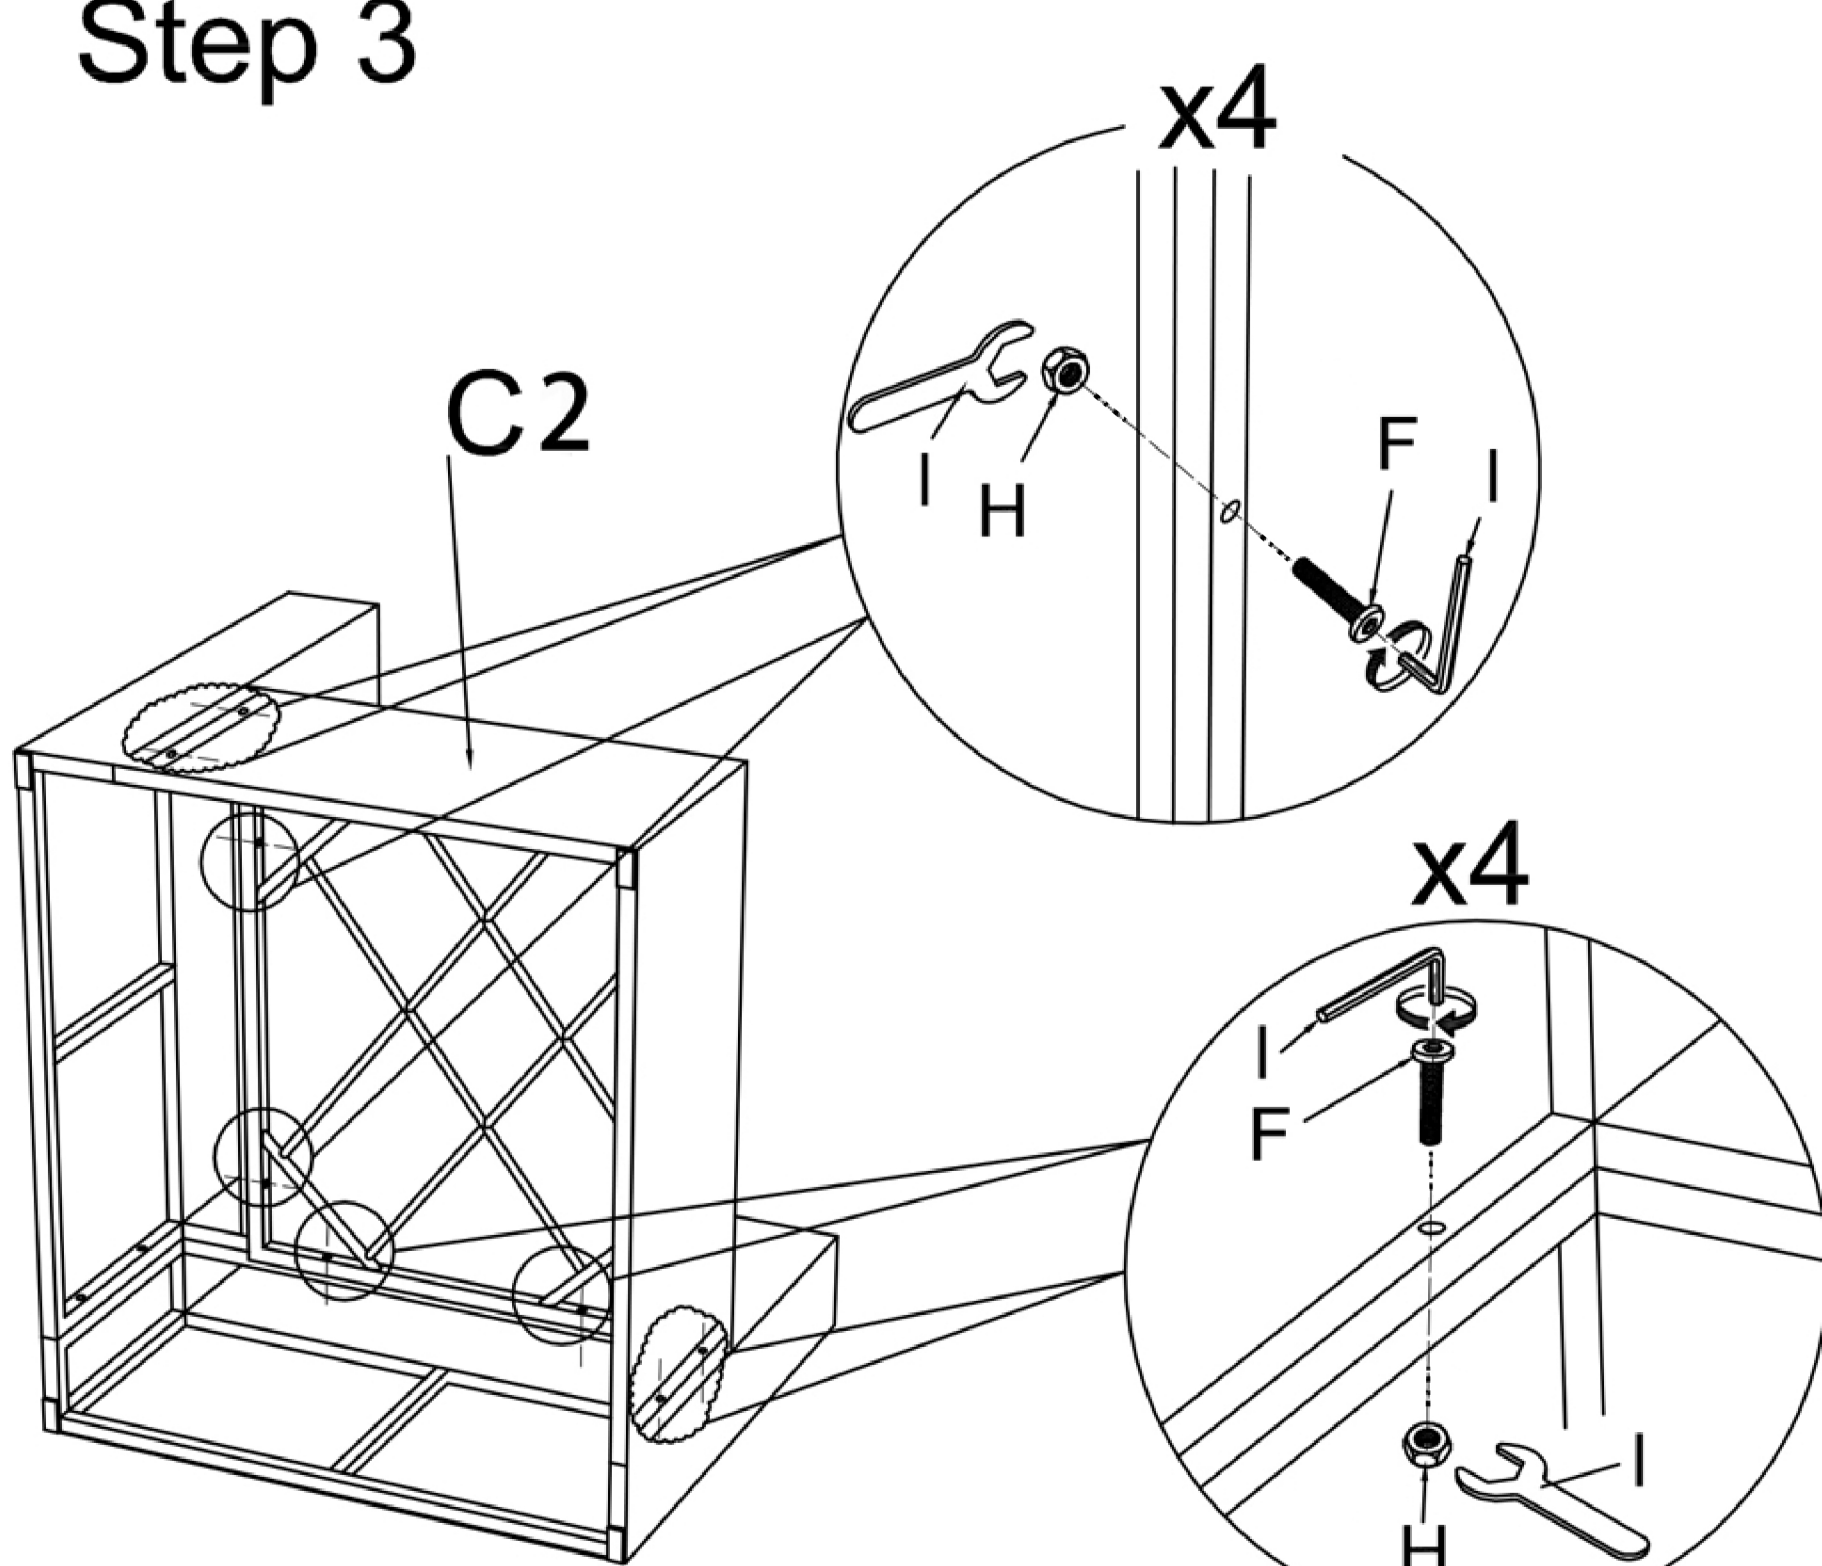


Diagram showing the assembly of the base frame C2 to the base frame C2. A circular inset shows a close-up of the connection point where a screw F is used to secure the frame to the frame via bracket I. The inset is labeled 'x4'.

Step 4

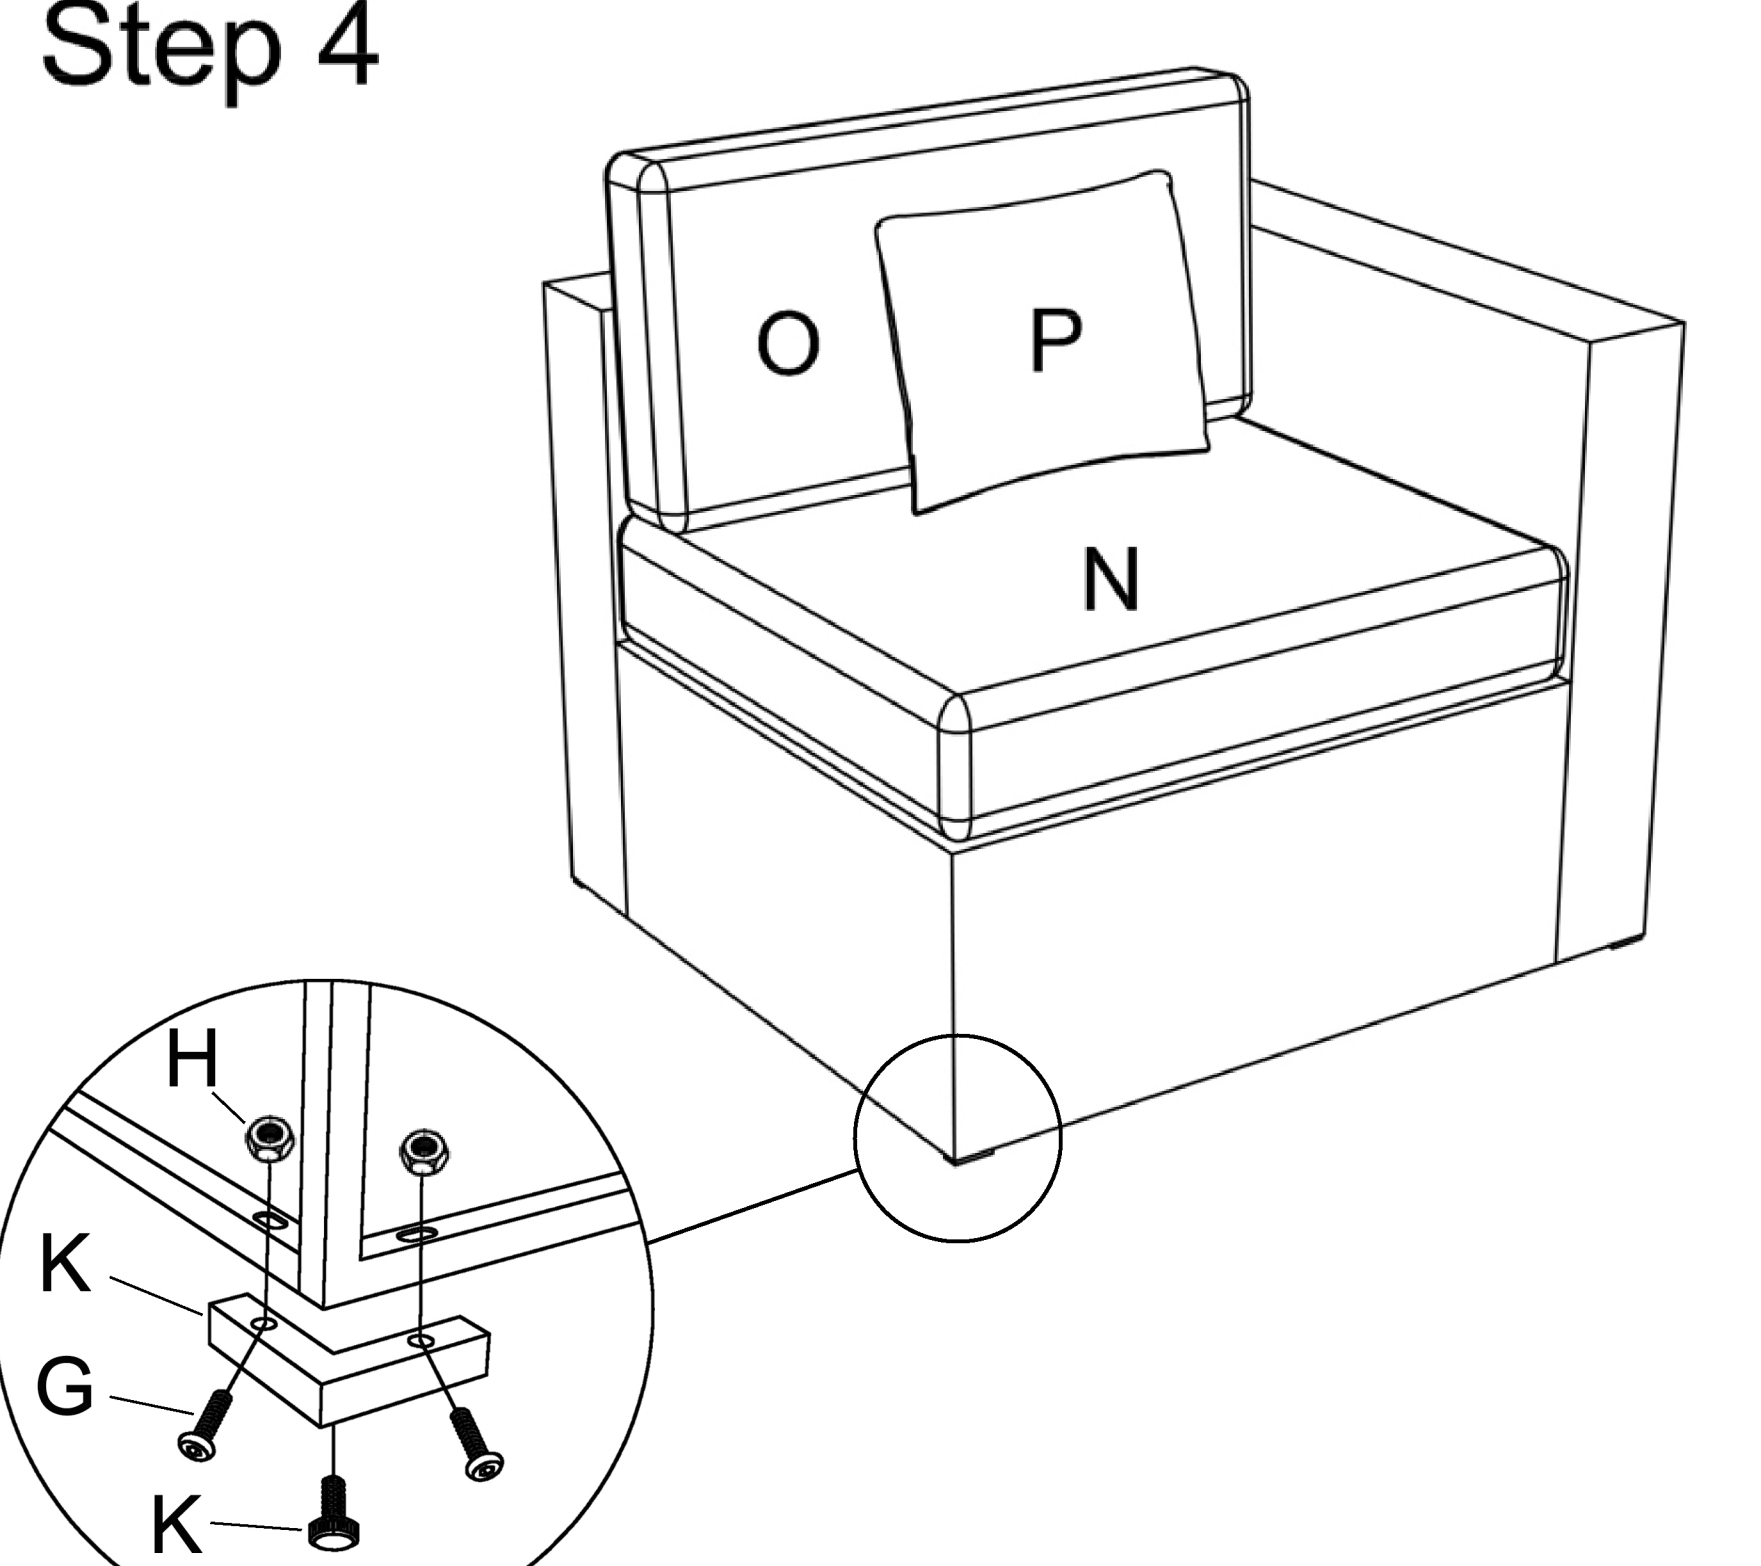
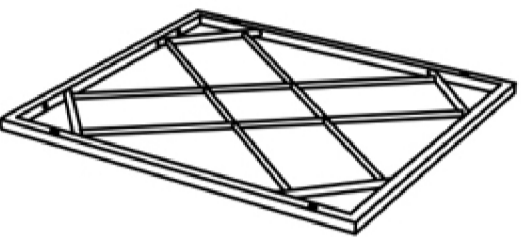
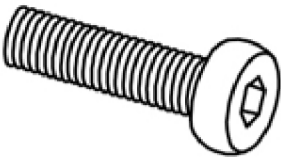
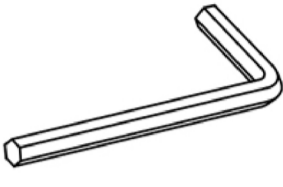
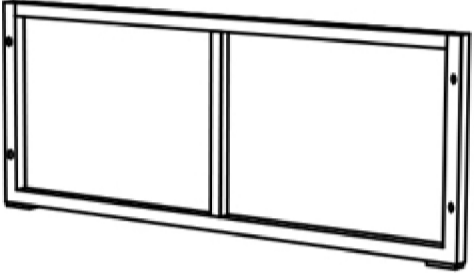
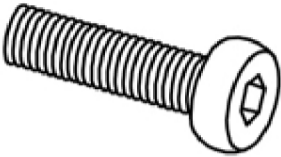
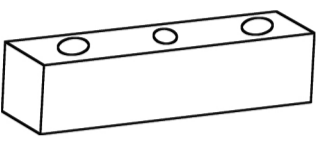
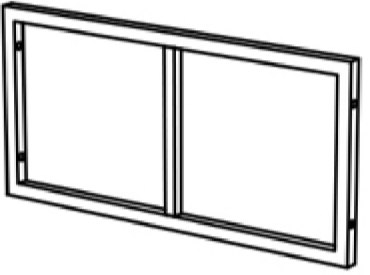
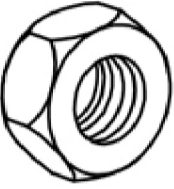
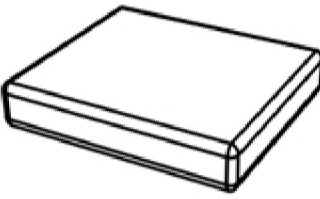



Diagram showing the assembly of the base frame C2 to the base frame C2. A circular inset shows a close-up of the connection point where a screw F is used to secure the frame to the frame via bracket I. The inset is labeled 'x4'.

# ASSEMBLE INSTRUCTION


## (Ottoman)

A3		1pc	E	M6X30mm 	12pcs	I		1pc
B3		2pcs	G	M6X40mm 	8pcs	K		4pcs
C3		2pcs	H		8pcs	N		1pc


Step 1

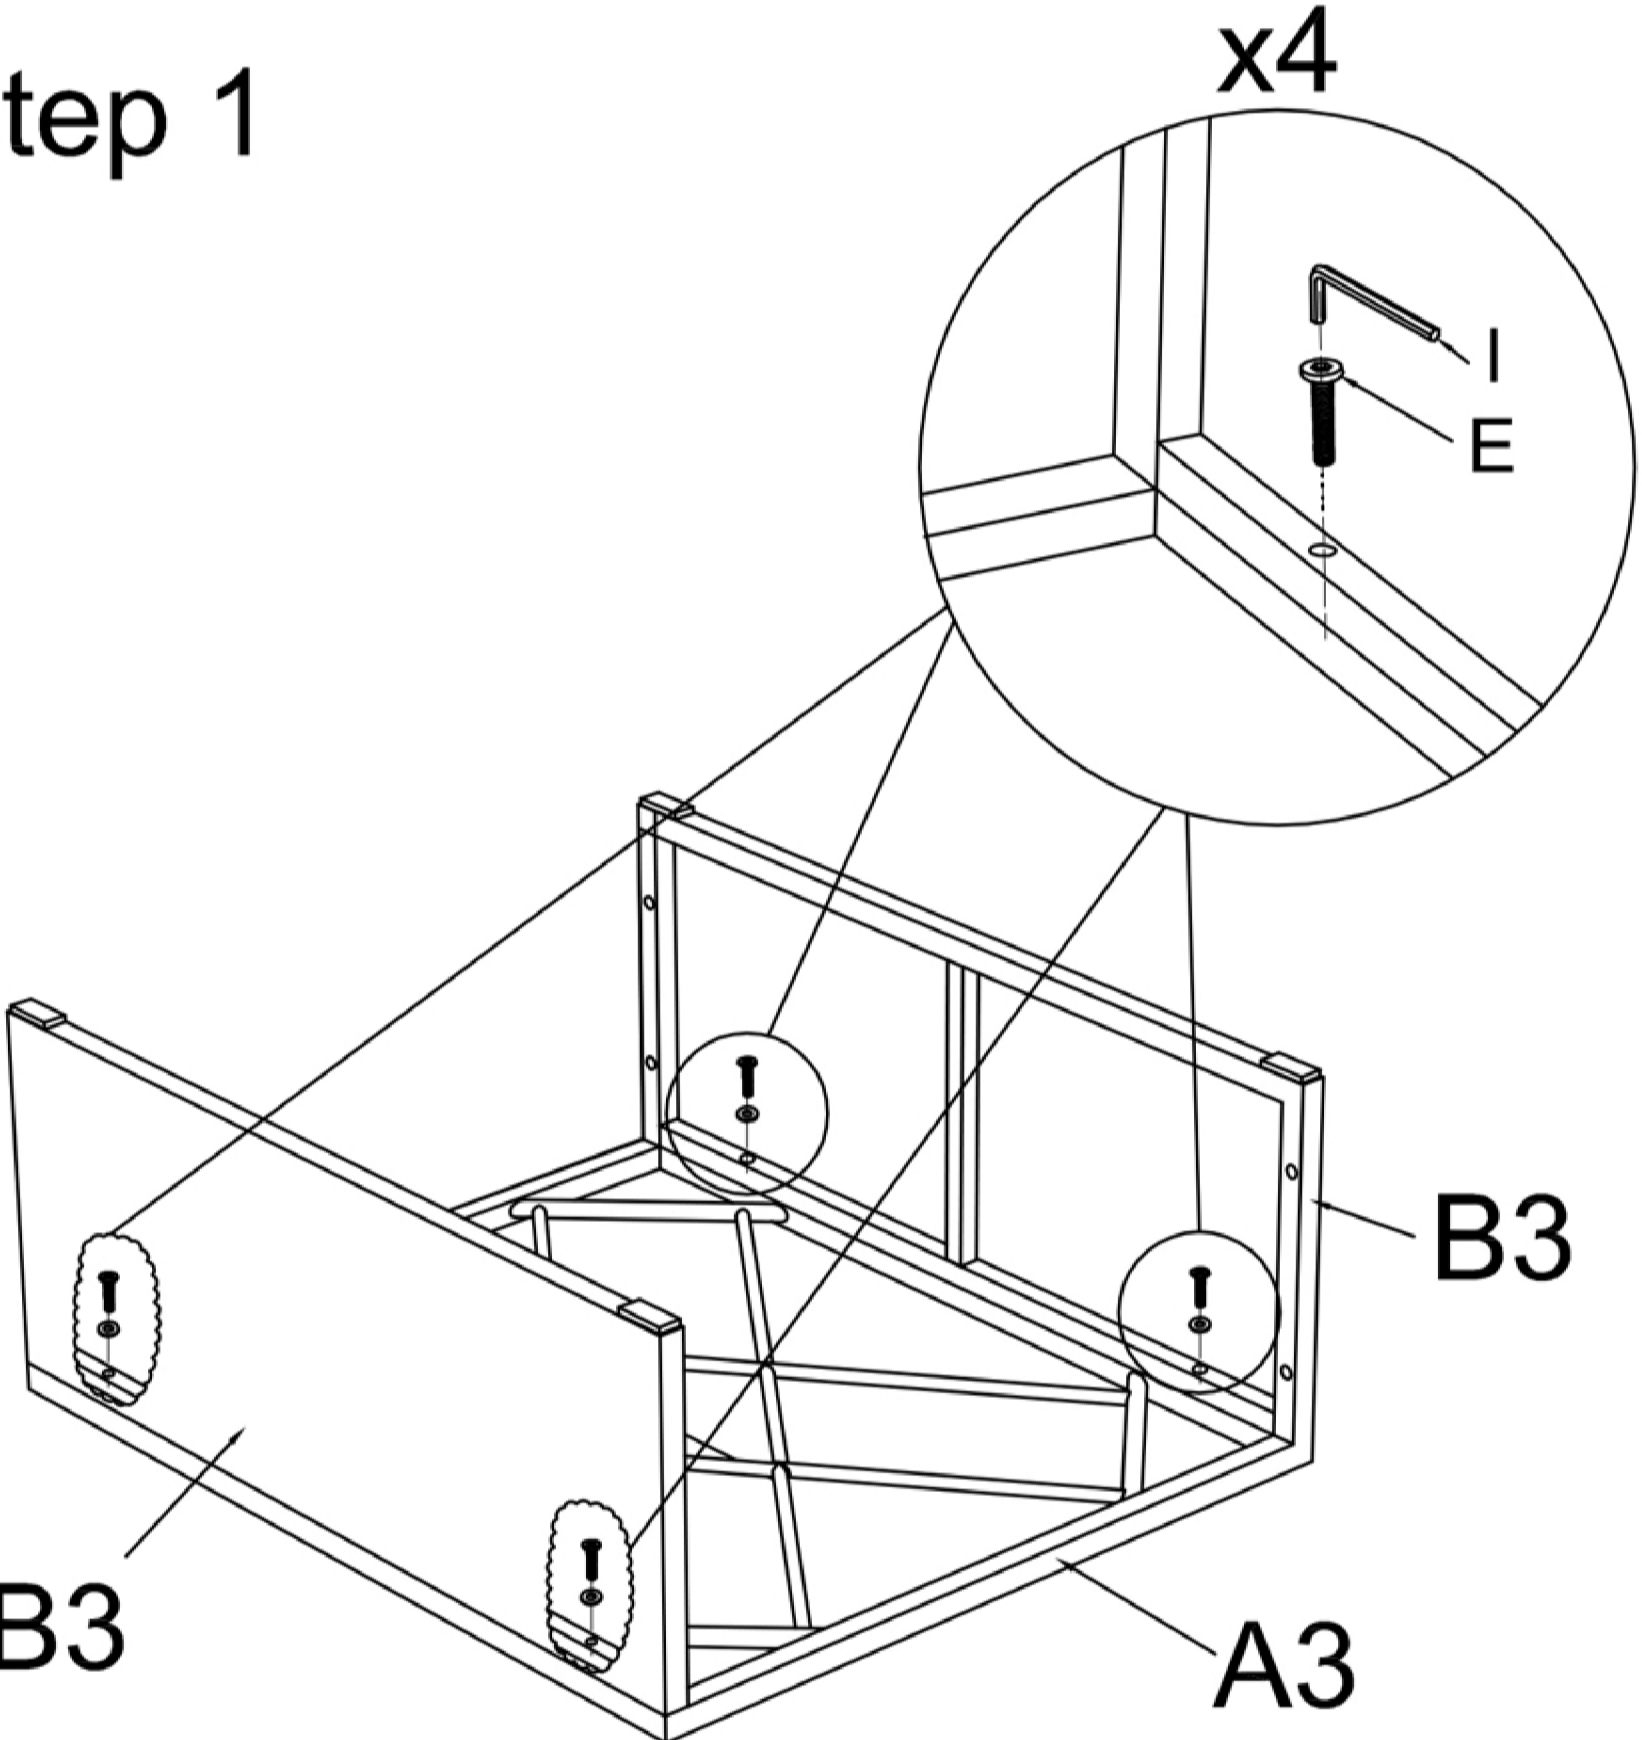


Step 2

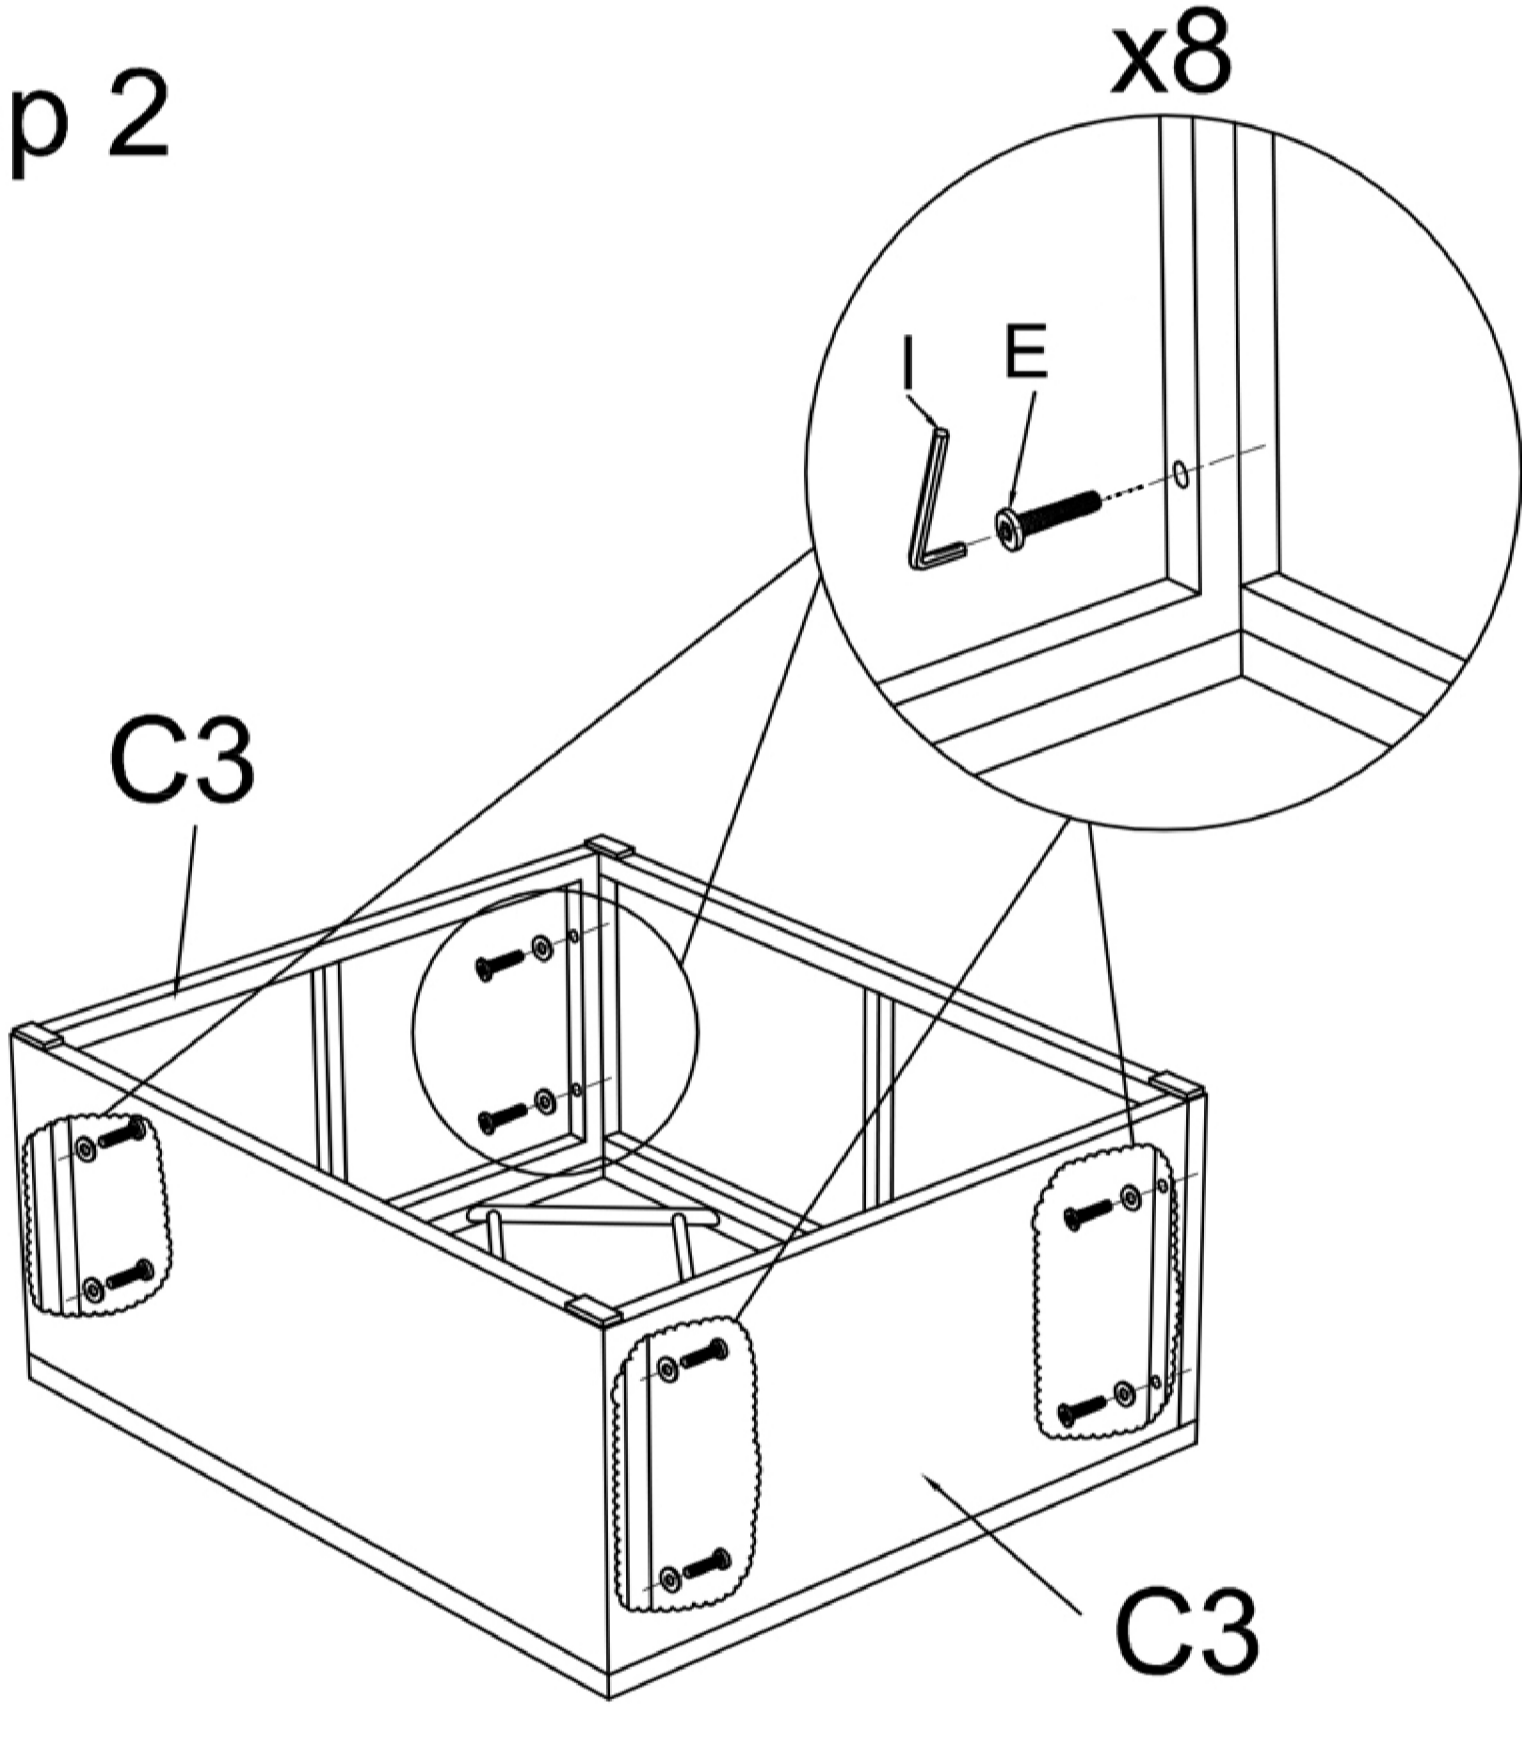

Step 3



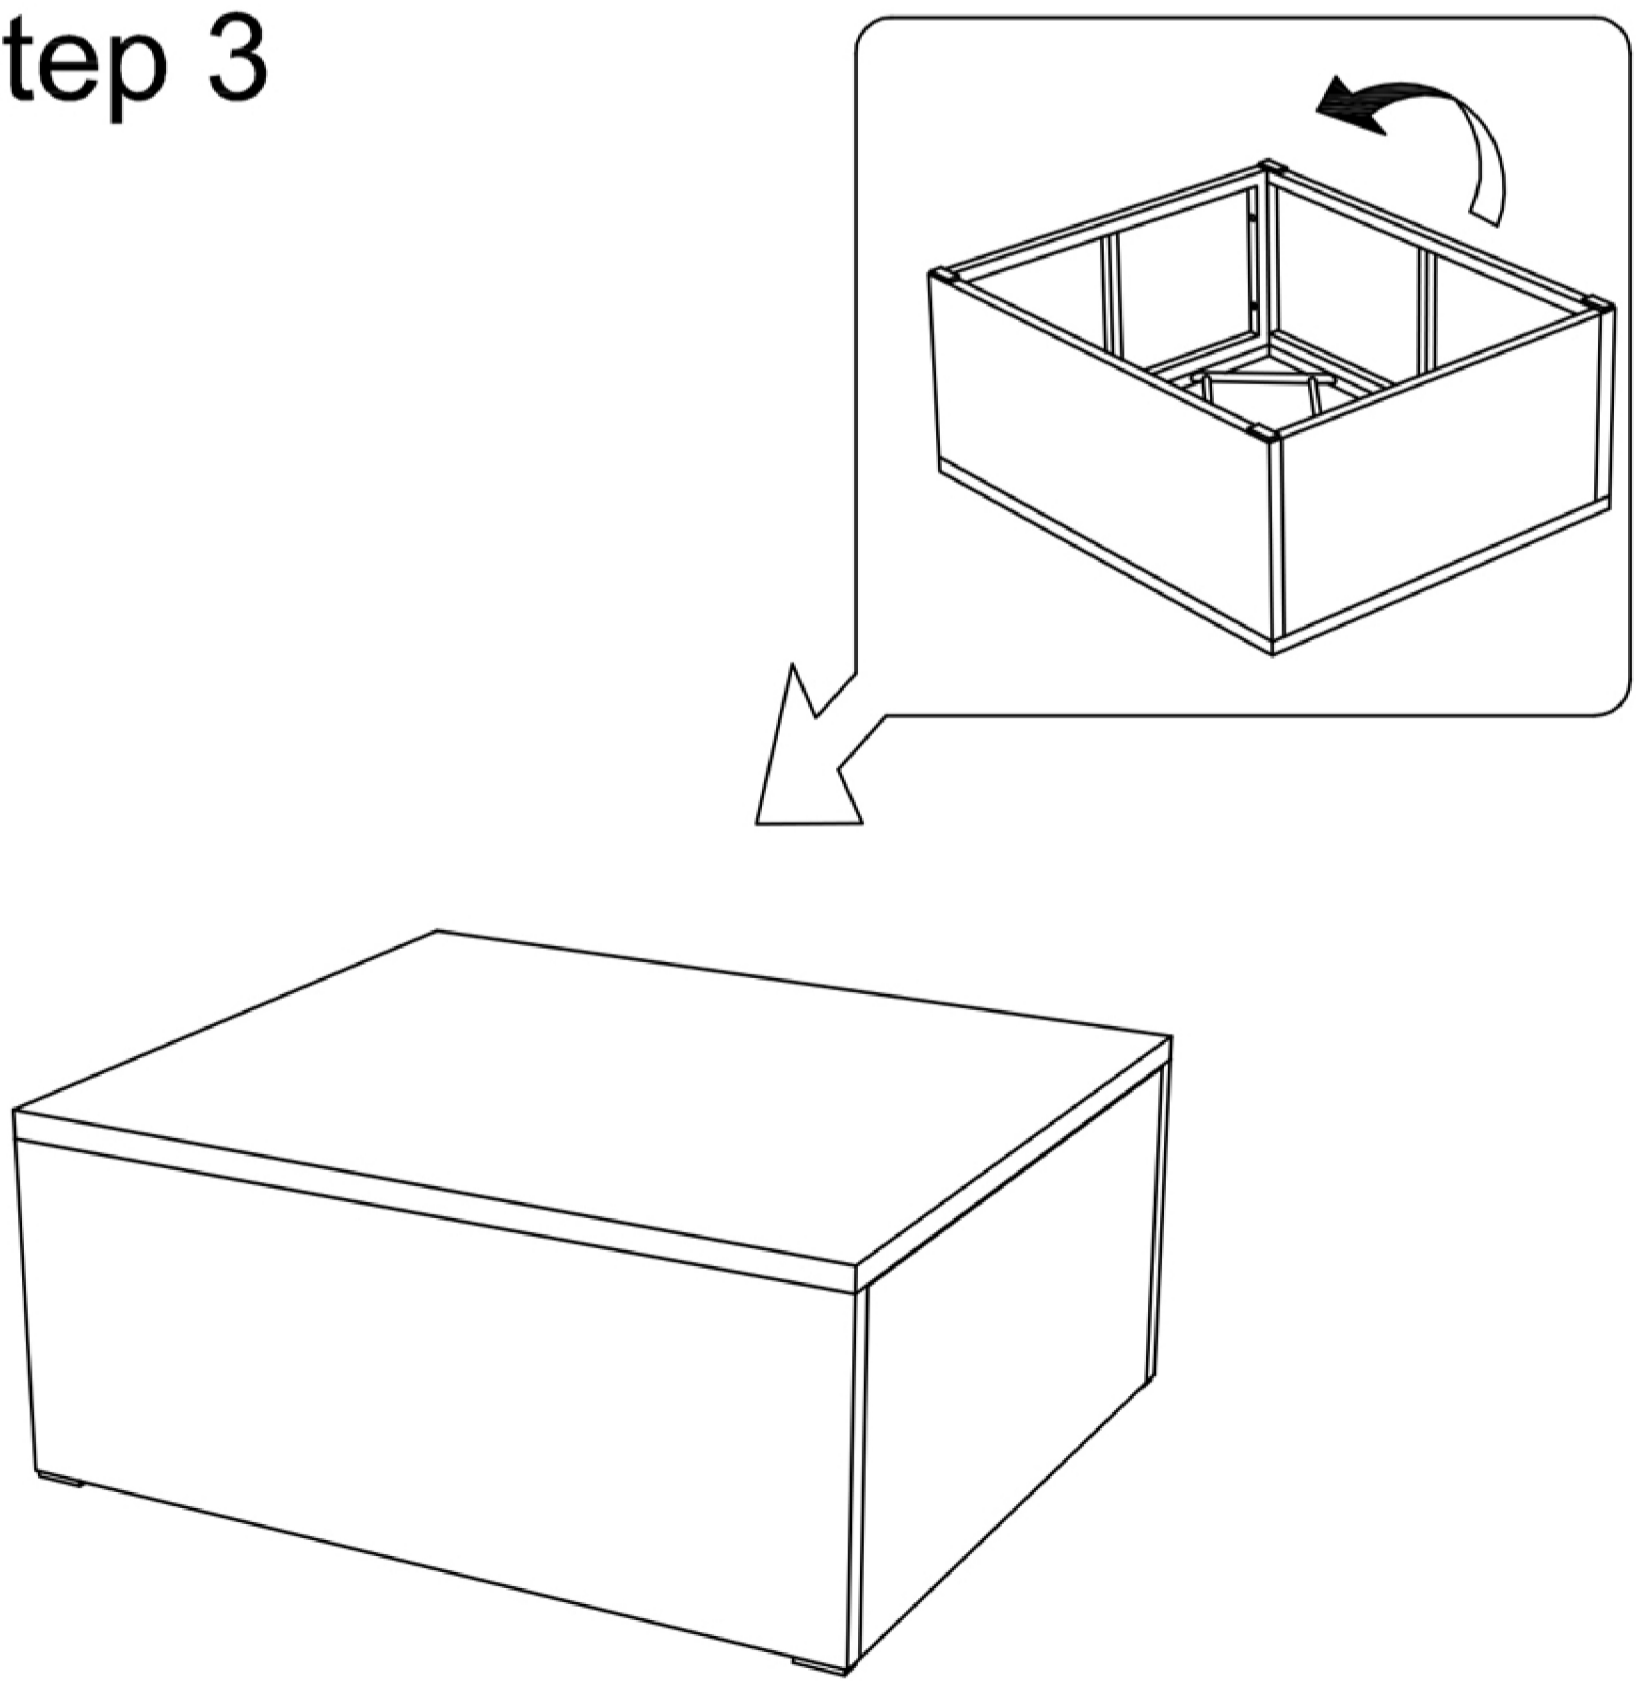

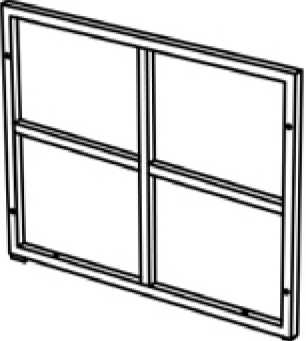
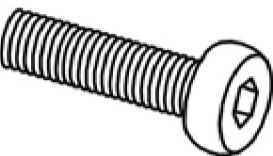


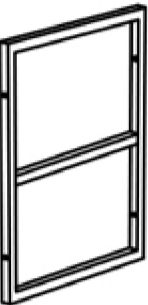
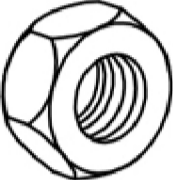
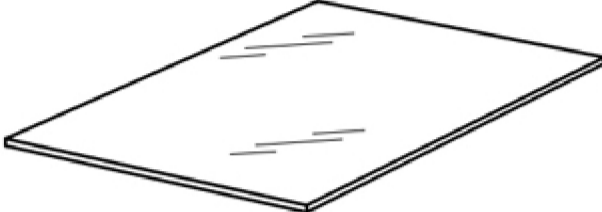


Step 4

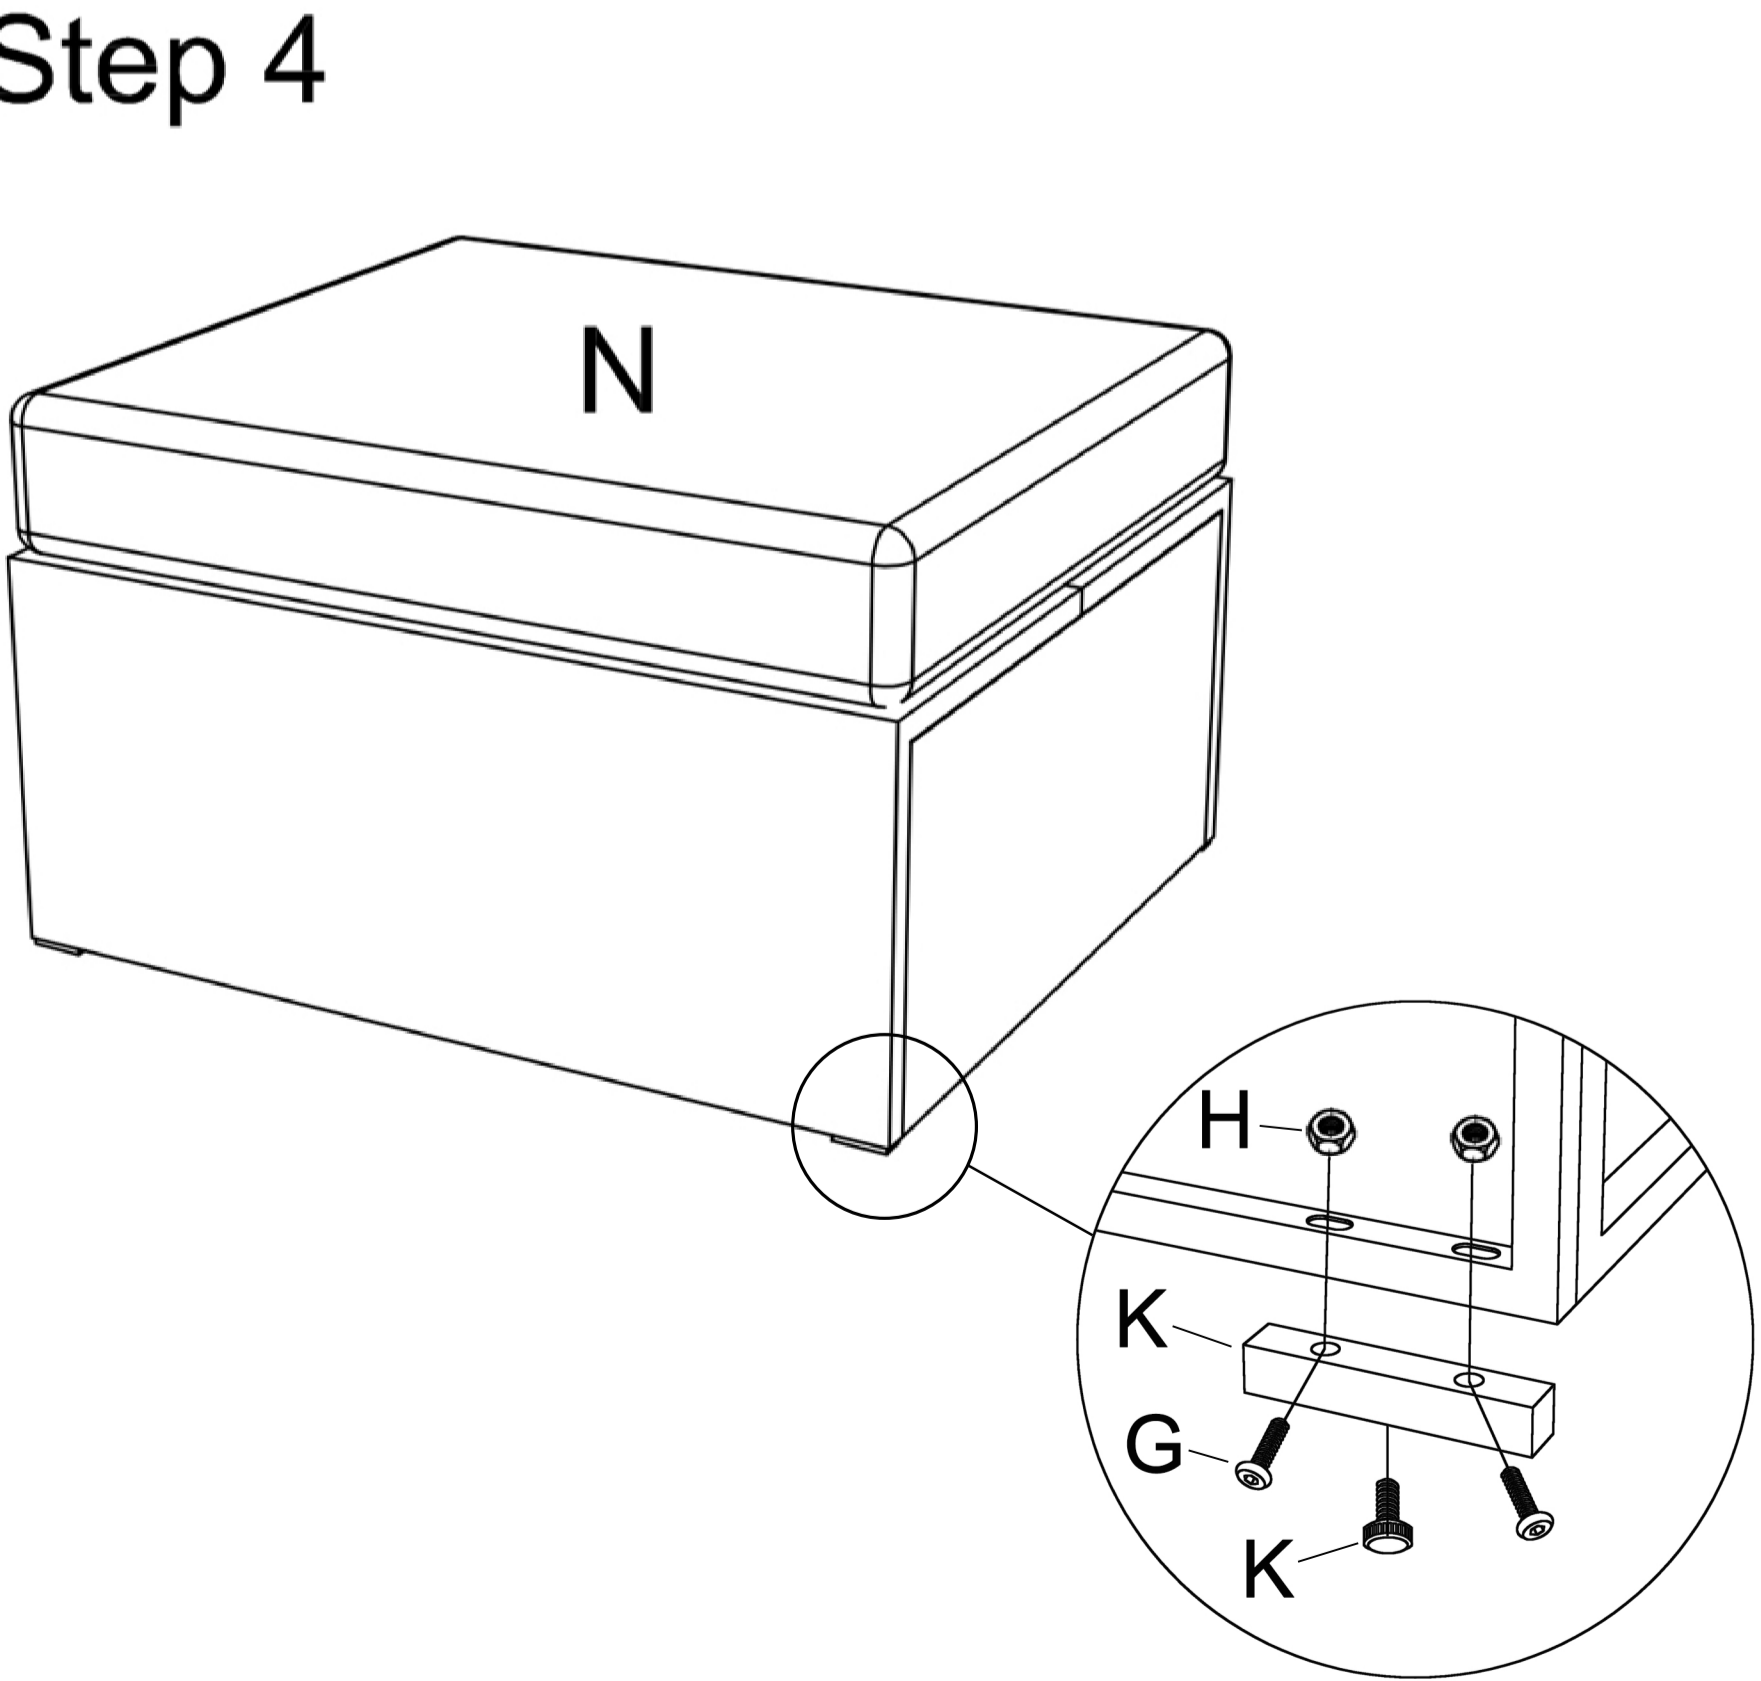


# ASSEMBLE INSTRUCTION

(Table)

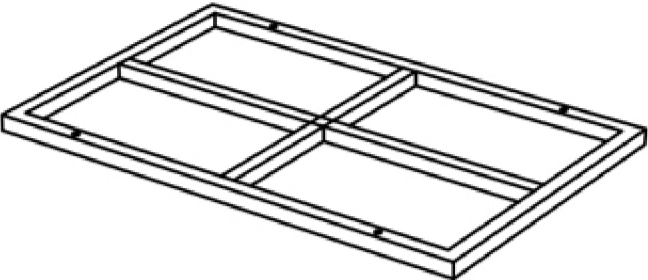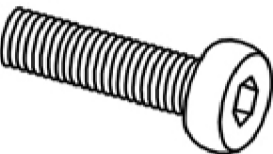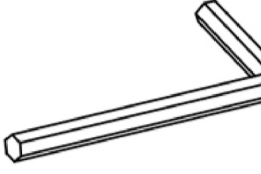A4		1pc	E	M6X30mm 	12pcs	I	 	1pc
B4		2pcs	G	M6X40mm 	8pcs	K	 	4pcs
C4		2pcs	H		8pcs	J		1pc

Step 1

x4

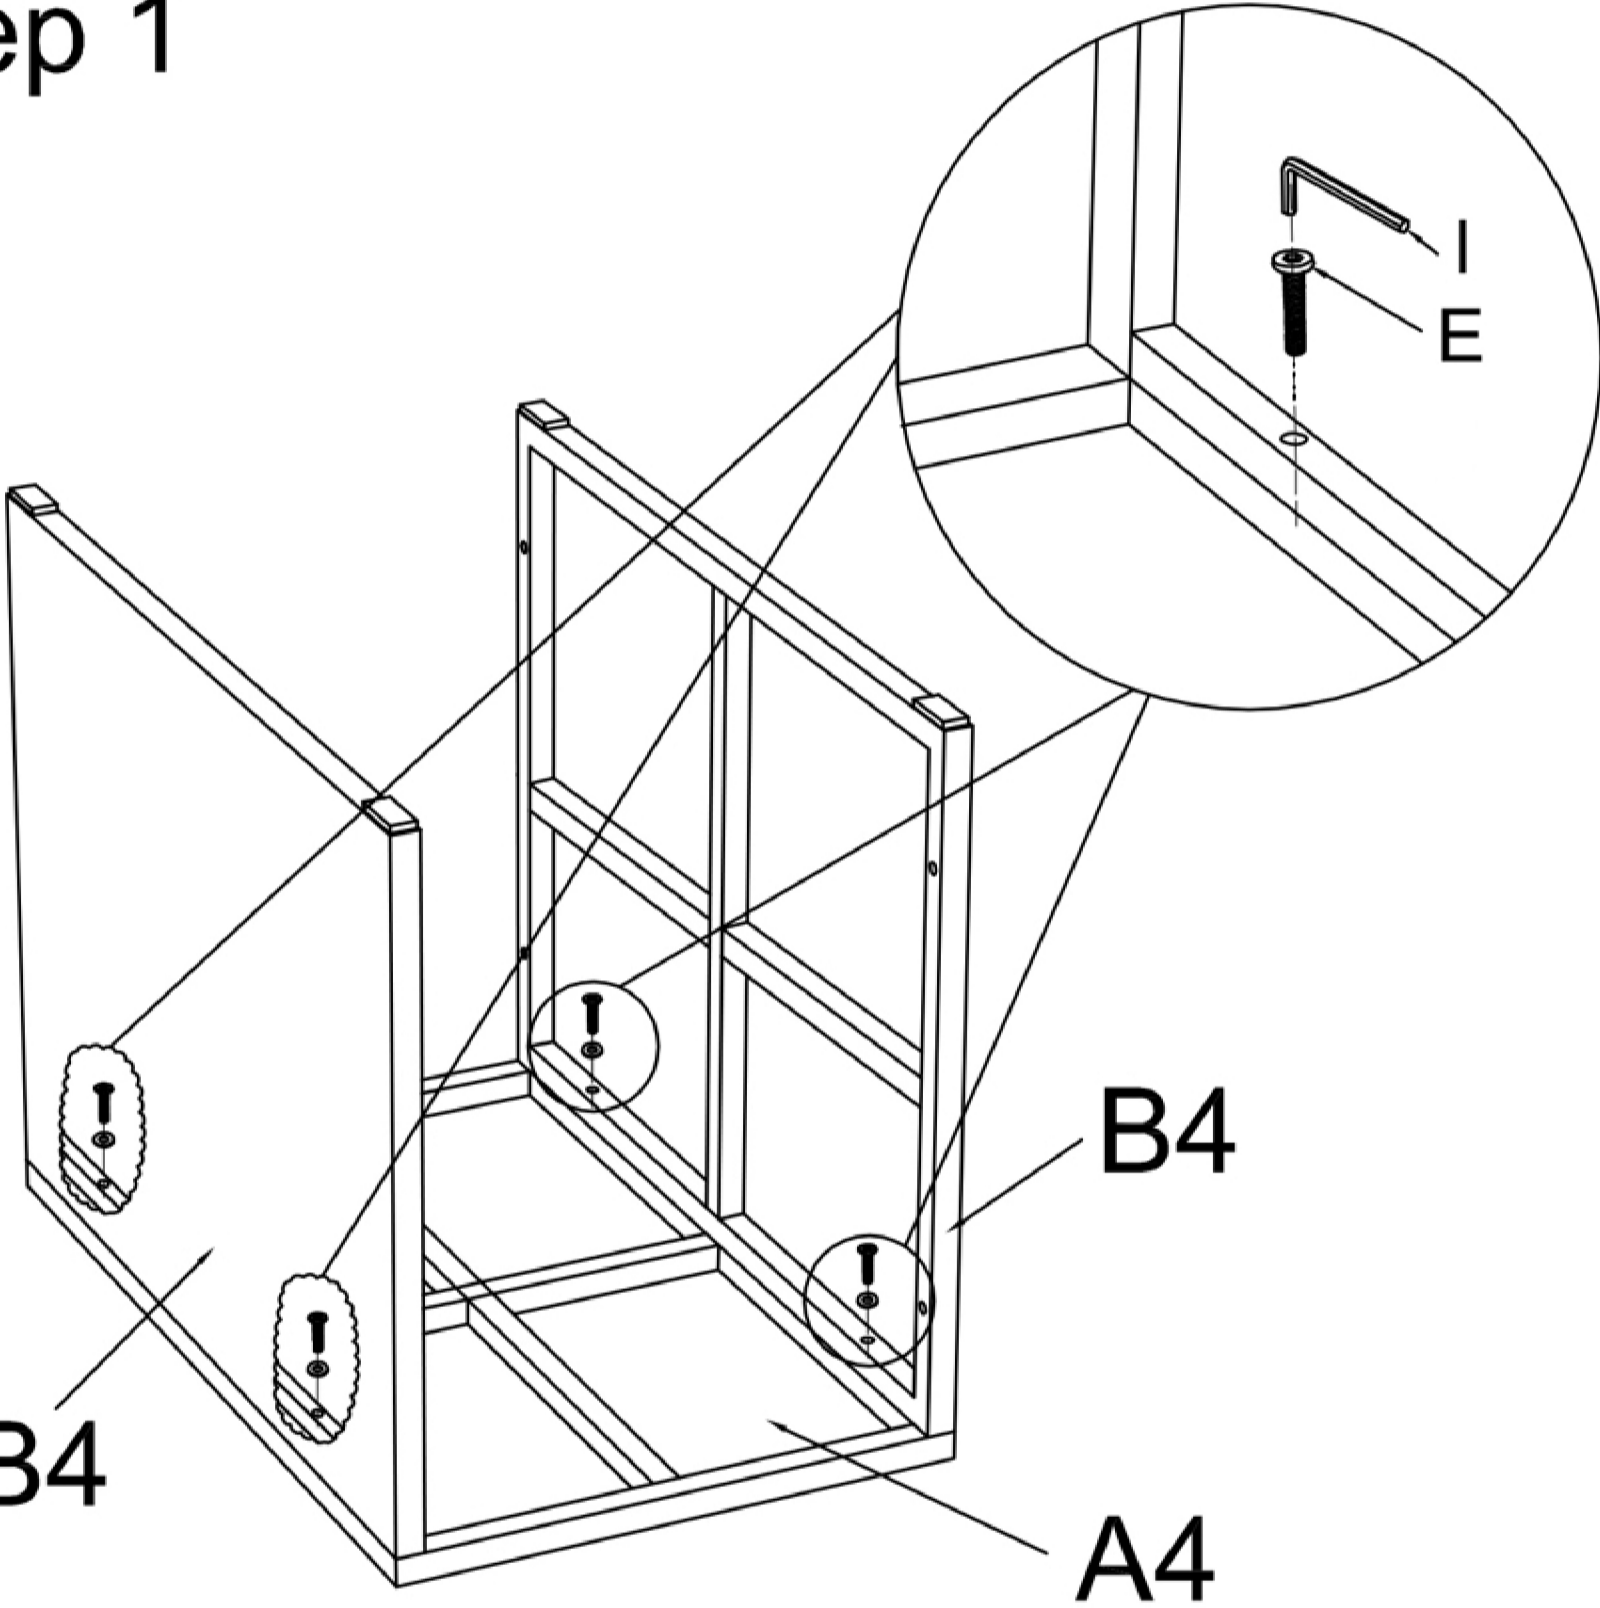

B4


B4

A4

B4

Step 2


x8

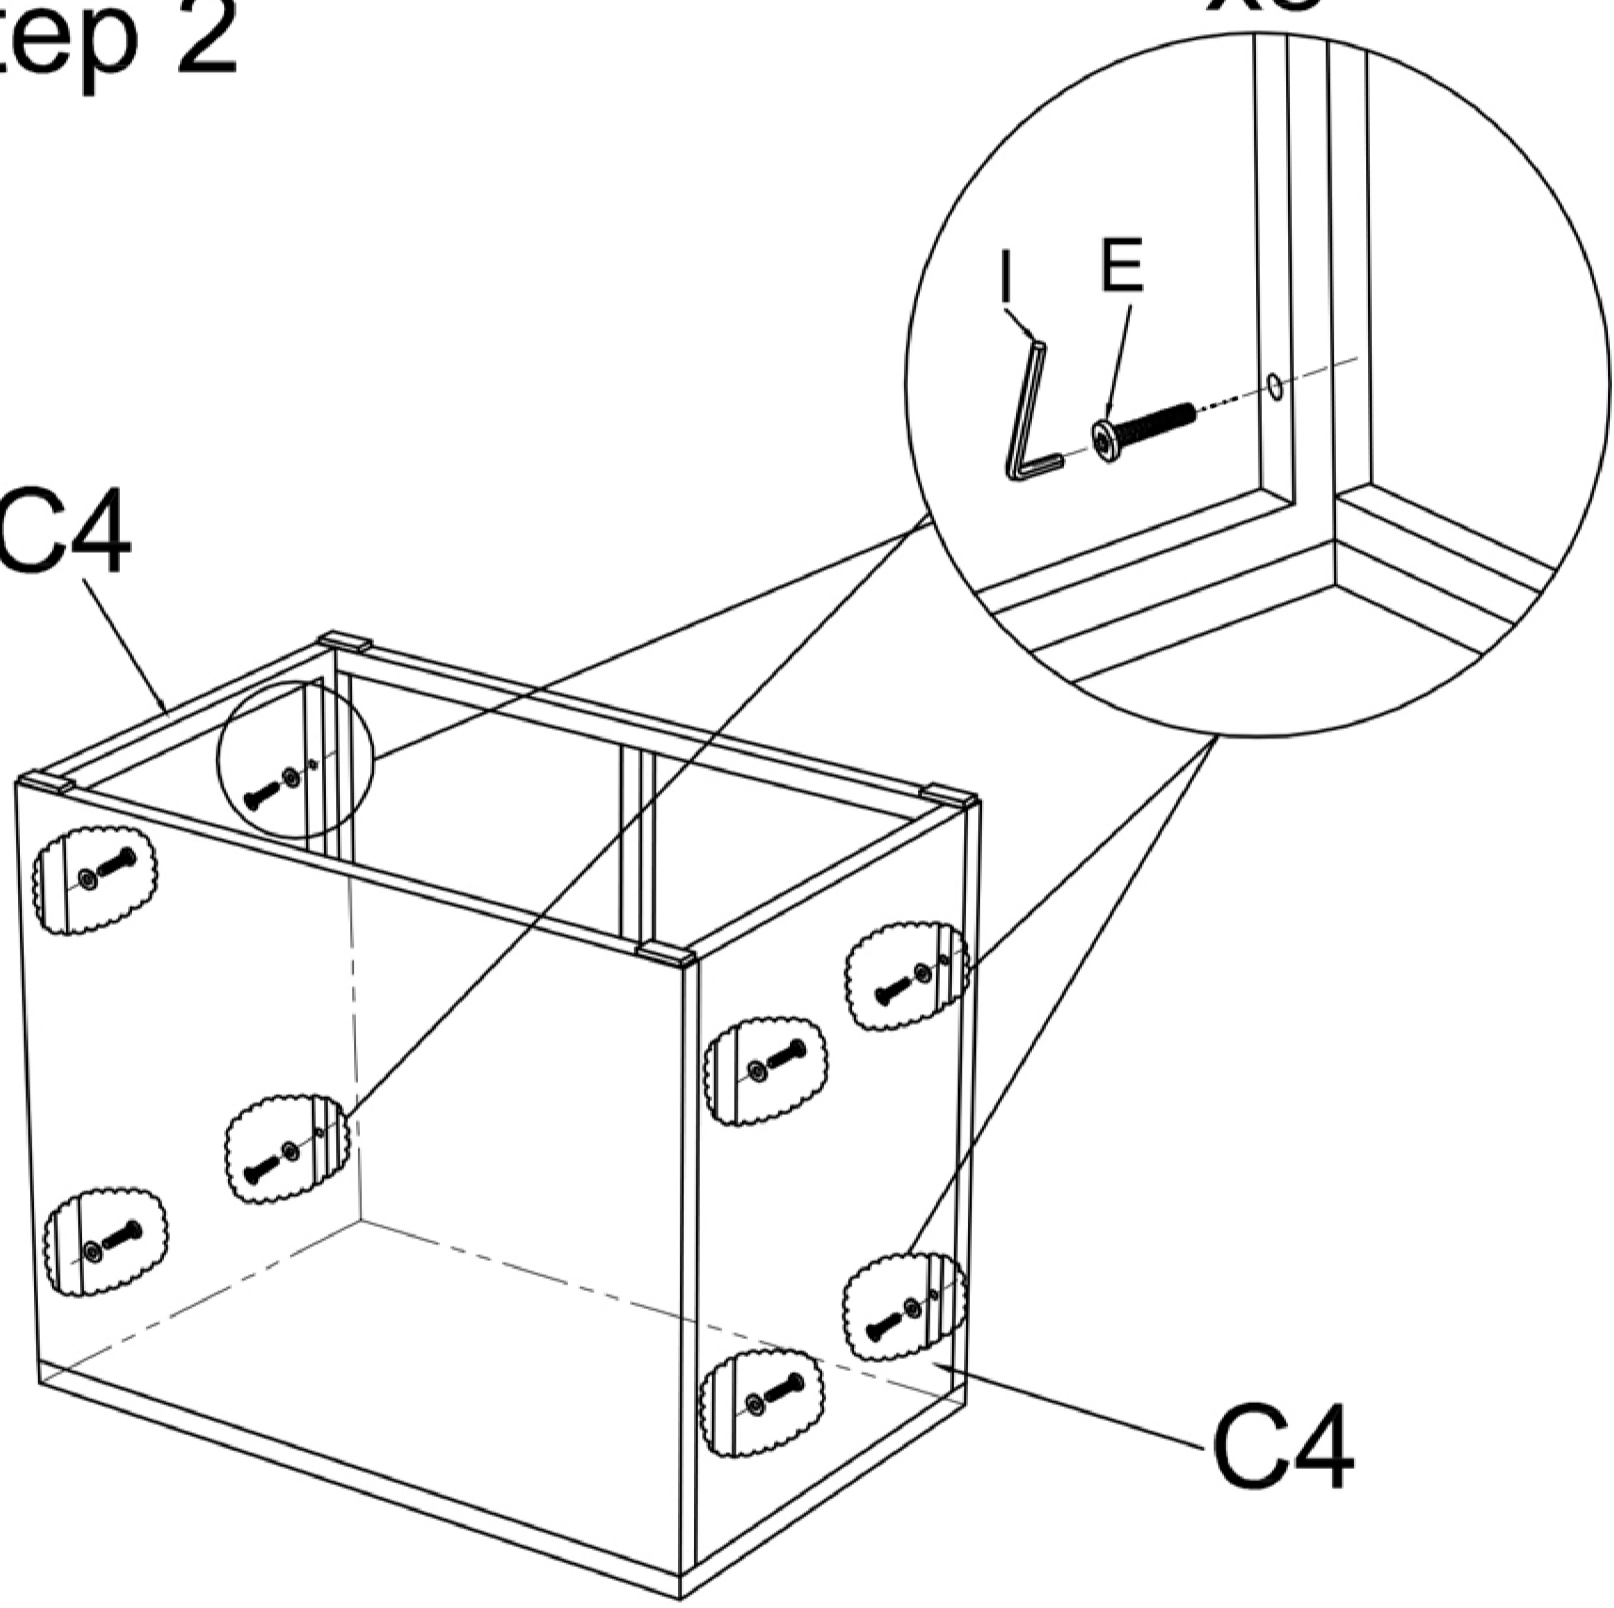

C4


C4

Step 3

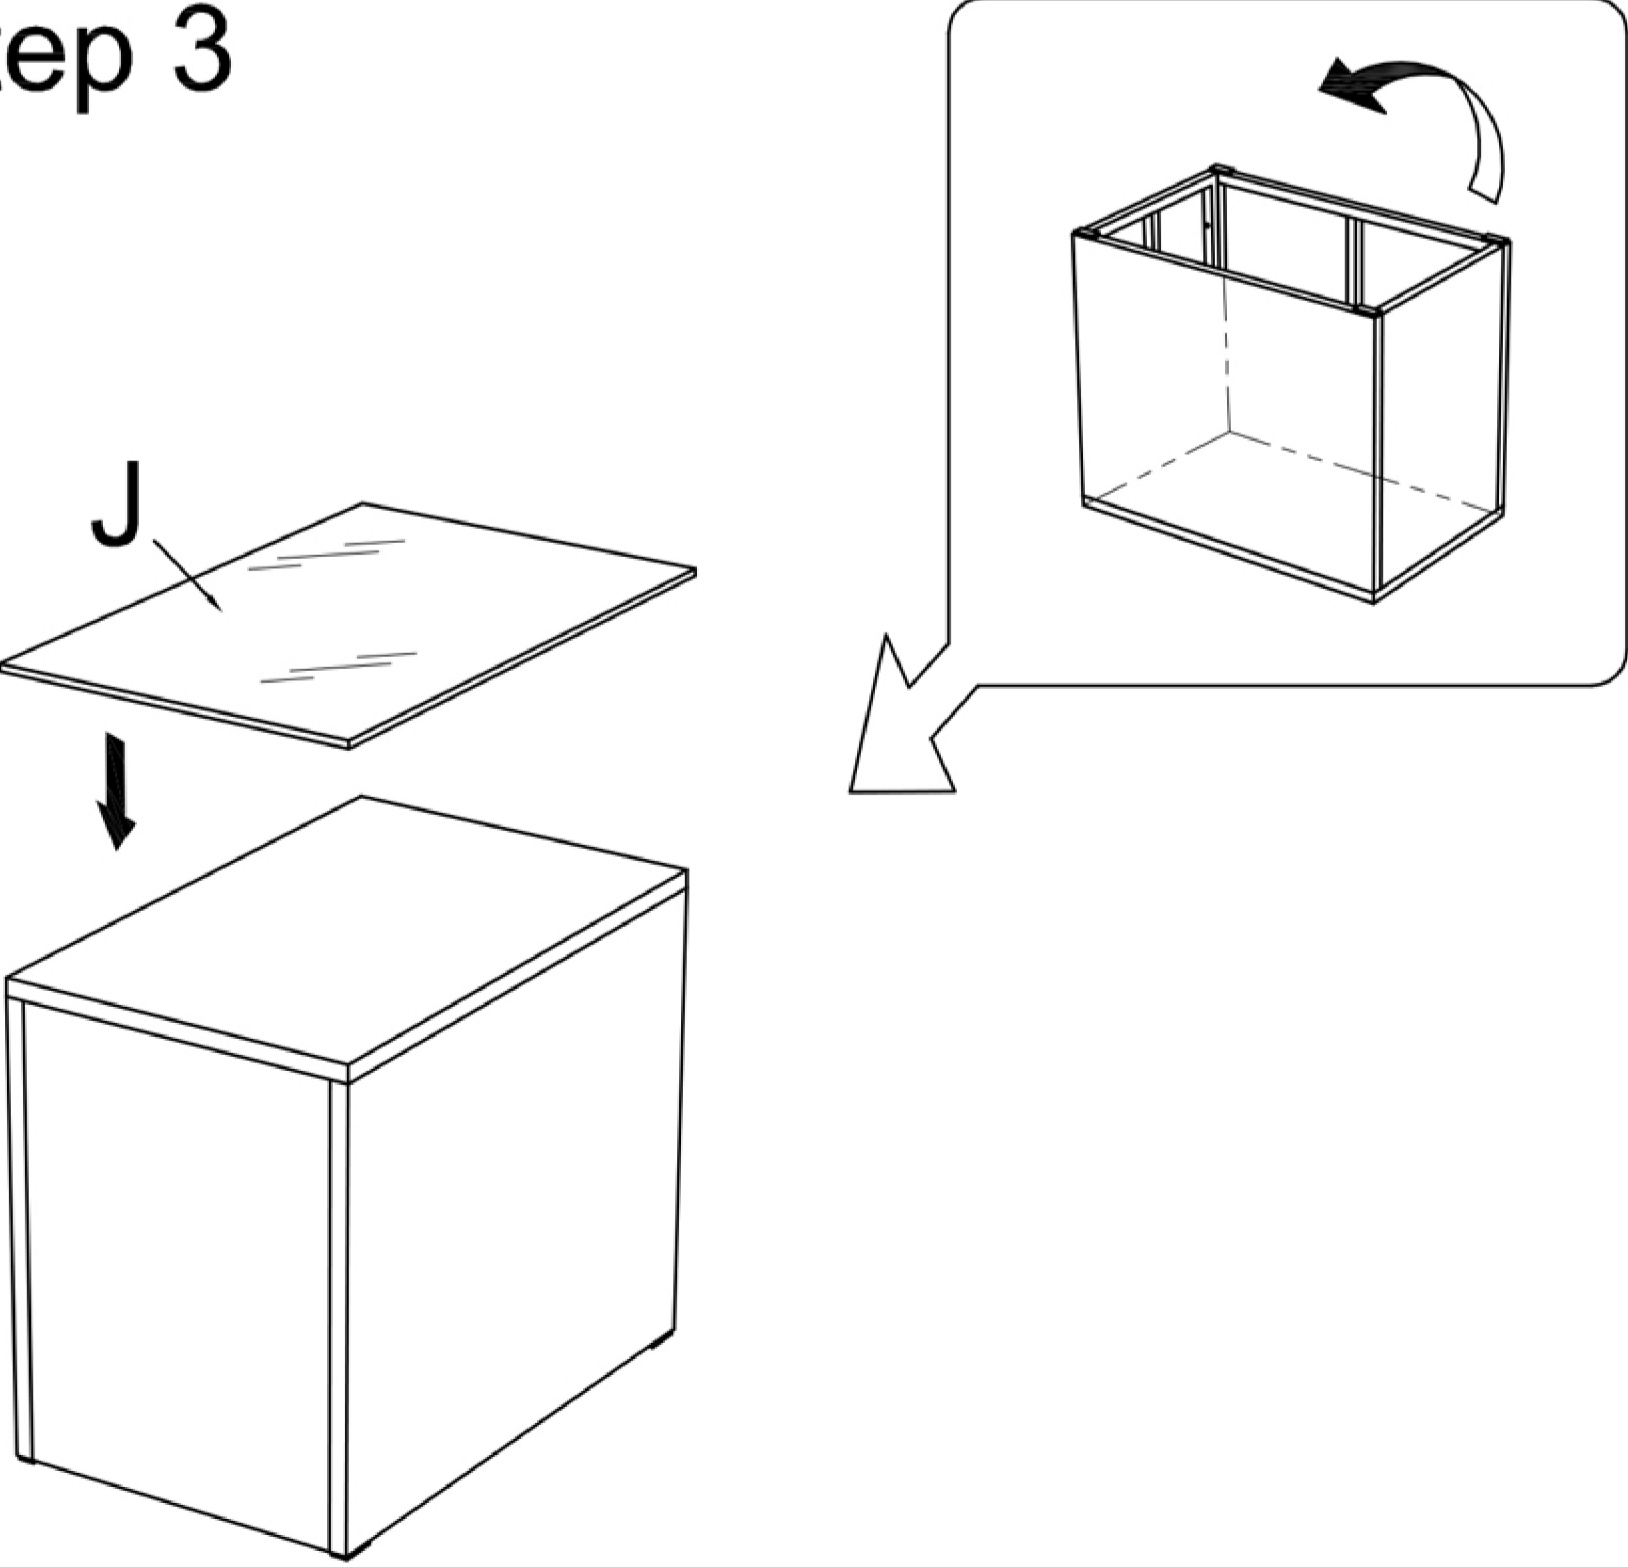

J

Step 4

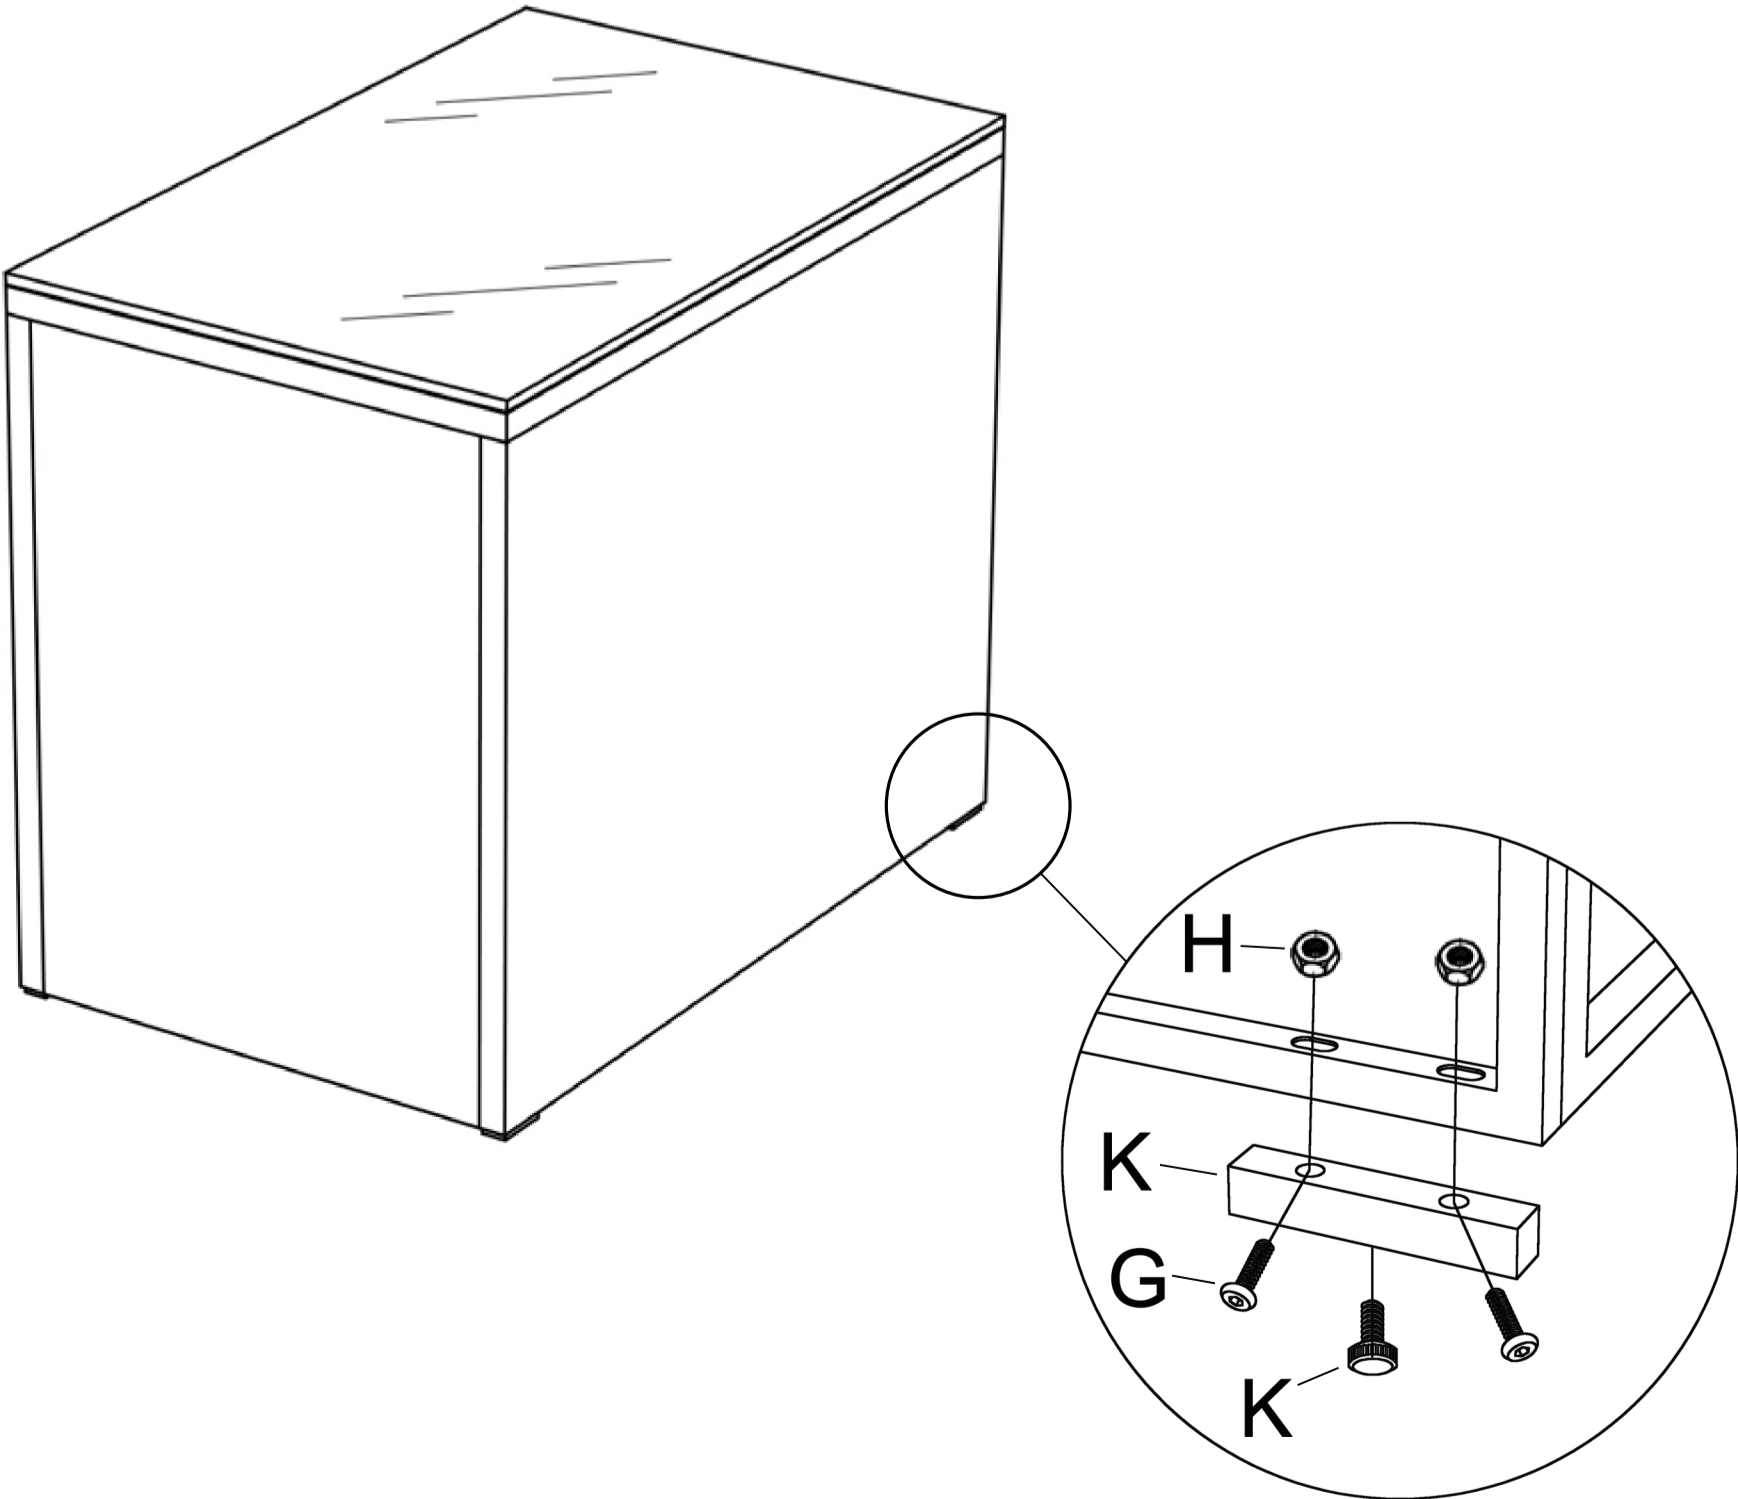

H

K

G

K