


7. Parts Breakdown

FIGURE 7

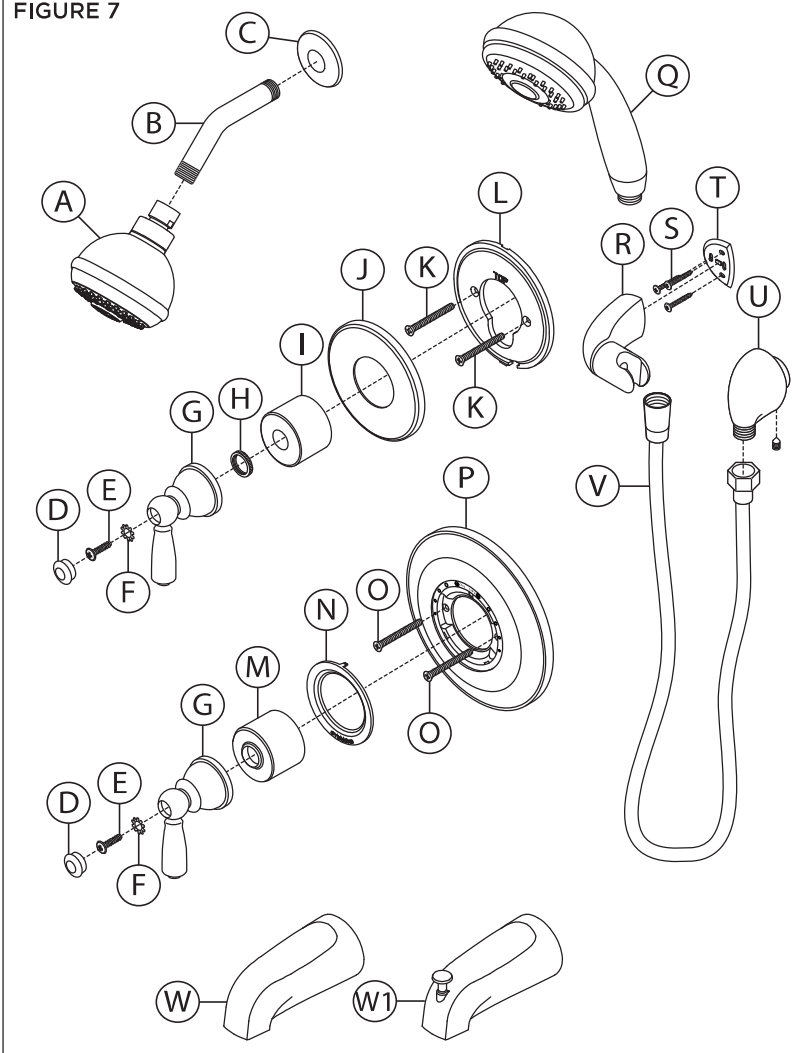

*Order in-line vacuum breaker (EF-109) for hand shower systems without dual checks.

Replacement Parts		
Item	Description	Part Number
A	Showerhead	4-143
B	Shower Arm	300S
C	Flange	
D	Plug Button	
E	Screw	
F	Star Washer	RTS-026
G	Handle	
H	Lock Nut	
I	Dome Cover	T-19/20
J	Diverter Escutcheon	T-416A
K	Screws	
L	Mounting Plate	
M	Dome Cover	T-19
N	Dial	T-133C
O	Screws	
P	Mounting Plate	
Q	Hand Shower	EF-101
R	Wall Cradle	EF-106
S	Screws	
T	Mounting Plate	
U	Wall Elbow	EF-105
V	60" Hose	RTS-045
W	Tub Spout	060
W1	Diverter Tub Spout	054

Notes:

- 1) Append appropriate suffix for premium finish.
- 2) Append appropriate flow rate to showerhead or hand shower for low flow.
- 3) Apply a bead of silicone around the perimeter of all shower trim installed flush to the finished wall. Leave opening on bottom of escutcheons for weep hole.
- 4) Apply plumber tape to all threaded connections.