




HIDE IT WITH STYLE

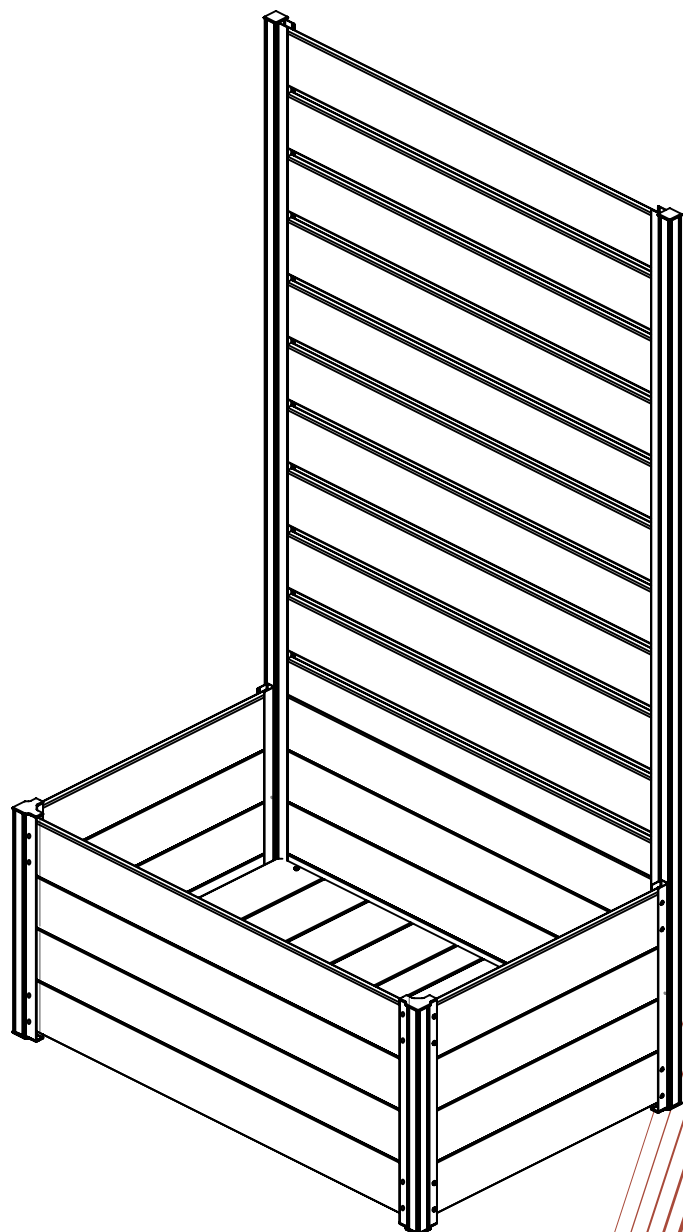

## Concord

Wooden Planter Screen

41" W x 73" H

**1 hr**  
Approximate assembly



**Scan the QR code**  
for an assembly video



**ASSEMBLY**  
**INSTRUCTIONS**

EC18037

[www.encloscreens.com](http://www.encloscreens.com)

VER. 032124

## GENERAL INFORMATION

### MISSING OR DAMAGED PARTS?



➤ **Visit Our Website**  
so we can help you right away!  
**parts.nychbrands.com**

\* You can also reach us via phone or email.

Hours of Operation - **Weekdays 9am-5pm EST**

To better help you, **please have the following**

- Your product number (**EC18037**)
- Your affected part letters (**pages 4-6**)
- Your original product box

### NEED ASSEMBLY HELP?


If you are having problems with assembly or installation of this product,  
**please contact at:**

📞 **704-892-5222 / 877-234-6196**    ✉ **support@encloscreens.com**

### NEED TO RETURN?

If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, **you will need to initiate the return from the company you originally purchased from.**

## DETAILED **PRODUCT DIMENSIONS** & SPECIFICATIONS

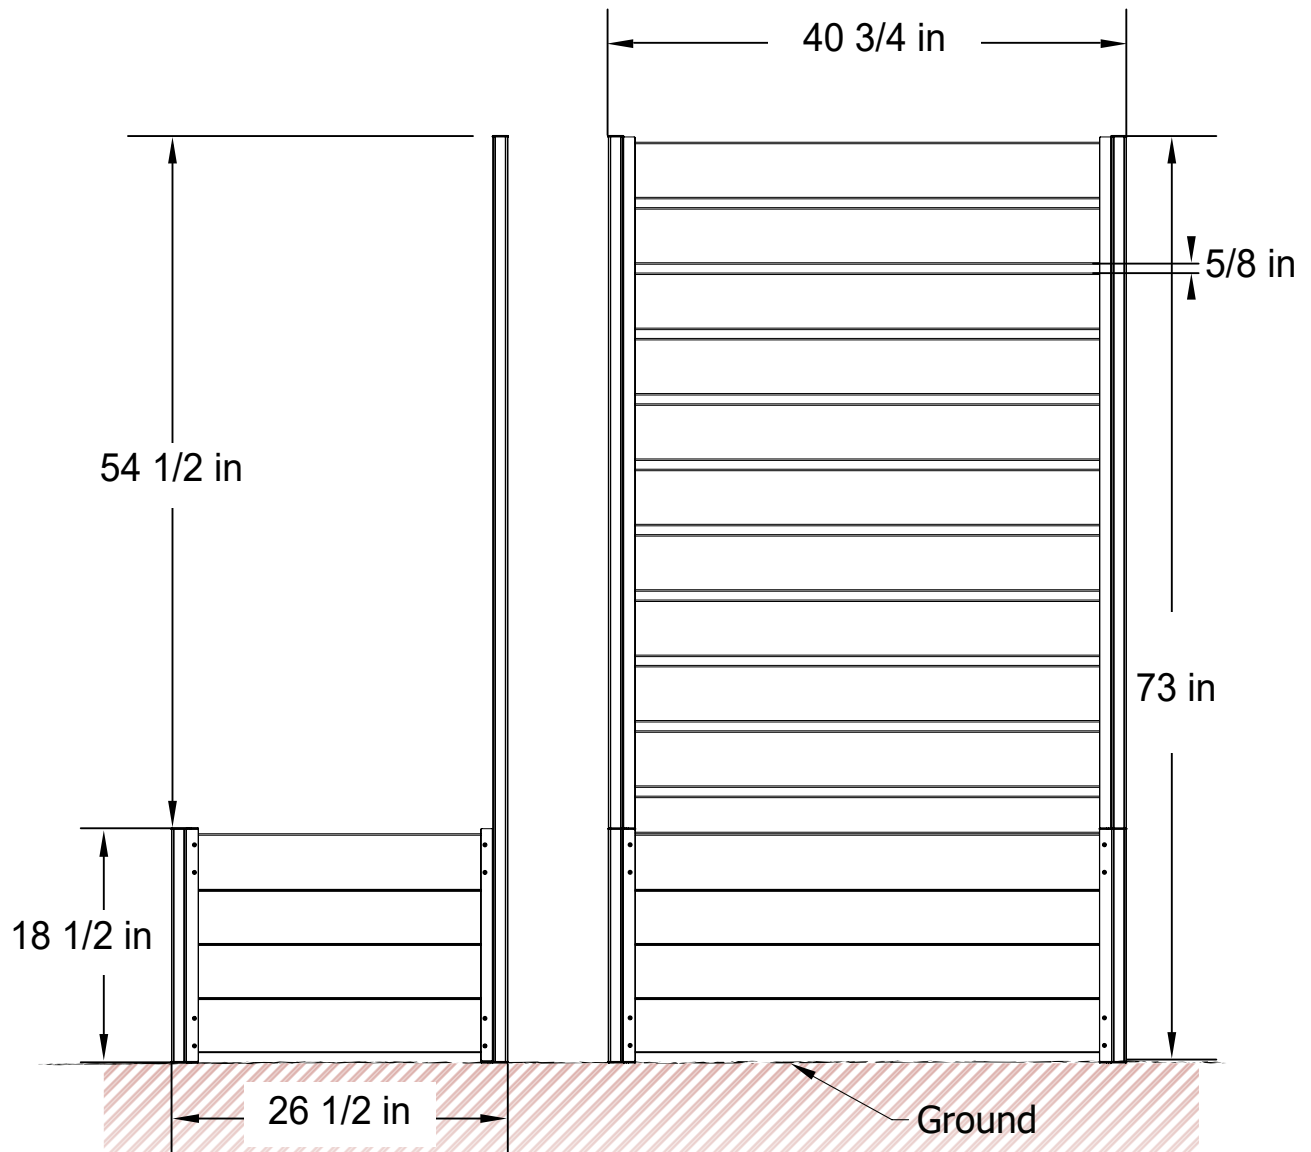


**Note:**


Planter Depth: 13 1/2"  
Planter Volume: 7.4 cubic ft

# LAY OUT MATERIALS

► Tools required for a smoother installation experience.

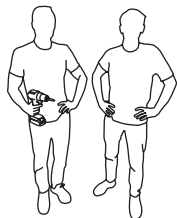


We recommend  
2 people for  
a smoother  
assembly.

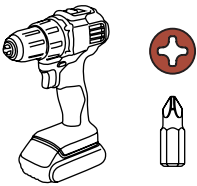

► **Power Drill with Phillips Bit**


## PLANTER SCREEN

**A**

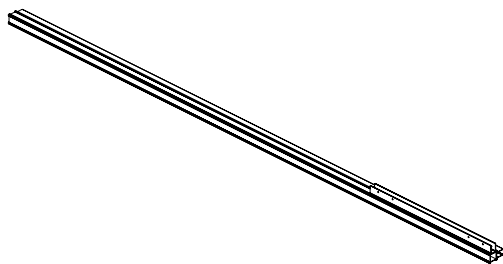


**Left Post (1)**  
2 1/8" x 2 1/8" x 72 5/8"

**B**

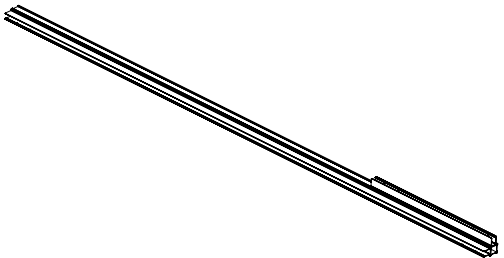


**Right Post (1)**  
2 1/8" x 2 1/8" x 72 5/8"

**C**

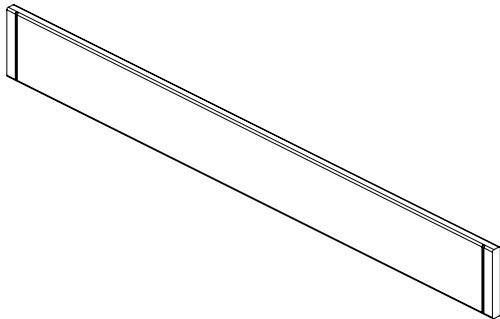






**Board (10)**  
5/8" x 4 1/2" x 38 1/4"

**D**



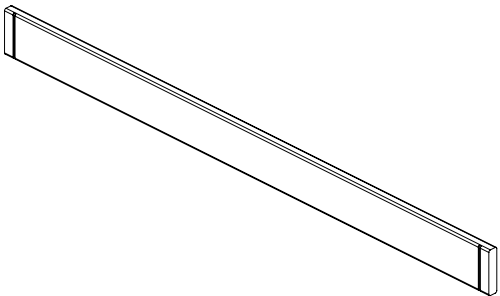

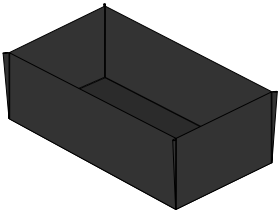
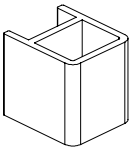




**Bottom Board (1)**  
5/8" x 3" x 38 1/4"

# LAY OUT MATERIALS

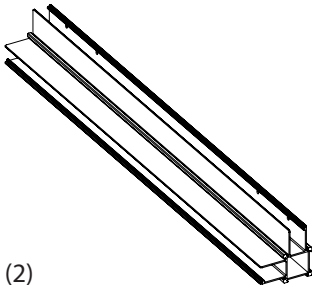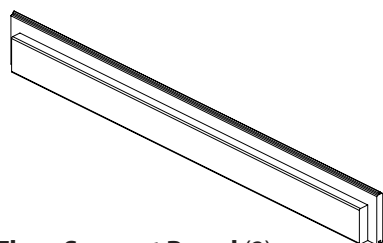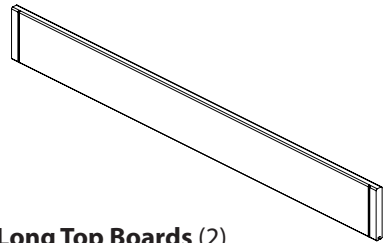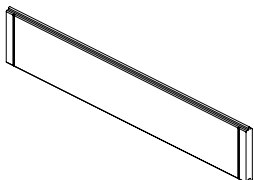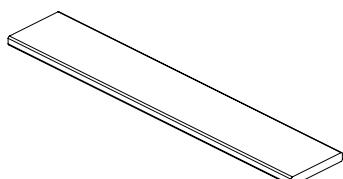
PLANTER BOX		
<div>E</div>  <p><b>Corner Post (2)</b> 2 1/8" x 2 1/8" x 18 1/4"</p>	<div>F</div>  <p><b>Planter Floor Support Board (2)</b> 1 3/4" x 4 1/2" x 38 1/4"</p>	
<div>G</div>  <p><b>Planter Long Boards (4)</b> 5/8" x 4 1/2" x 38 1/4"</p>	<div>H</div>  <p><b>Planter Long Top Boards (2)</b> 5/8" x 4 1/2" x 38 1/4"</p>	
<div>I</div>  <p><b>Planter Short Boards (6)</b> 5/8" x 4 1/2" x 24"</p>	<div>J</div>  <p><b>Planter Short Top Boards (2)</b> 5/8" x 4 1/2" x 24"</p>	
<div>K</div>  <p><b>Floor Boards (6)</b> 5/8" x 4 1/2" x 24 1/2"</p>	<div>L</div>  <p><b>Middle Floor Board (1)</b> 5/8" x 2 3/4" x 24 1/2"</p>	<div>M</div>  <p><b>End Floor Boards (2)</b> 5/8" x 4 1/2" x 24 5/8"</p>

# LAY OUT MATERIALS

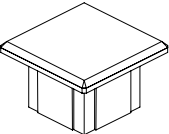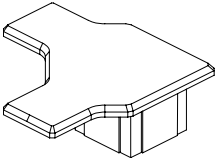
HARDWARE & ACCESSORIES	
<div>N</div> <div></div> <div><b>Screen Post Cap (2)</b> 1 1/4" x 1 1/4" x 3/4"</div>	<div>O</div> <div></div> <div><b>Planter Post Cap (6)</b> 2 1/4" x 2 1/4" x 3/4"</div>
<div>P</div> <div></div> <div><b>5/8 Self Drilling Screw (32)</b></div>	<div>Q</div> <div></div> <div><b>1 1/2 Wood Screw (4)</b></div>
<div>R</div> <div></div> <div><b>Planter Liner (1)</b></div>	<div>S</div> <div></div> <div><b>Spacers (20)</b></div>

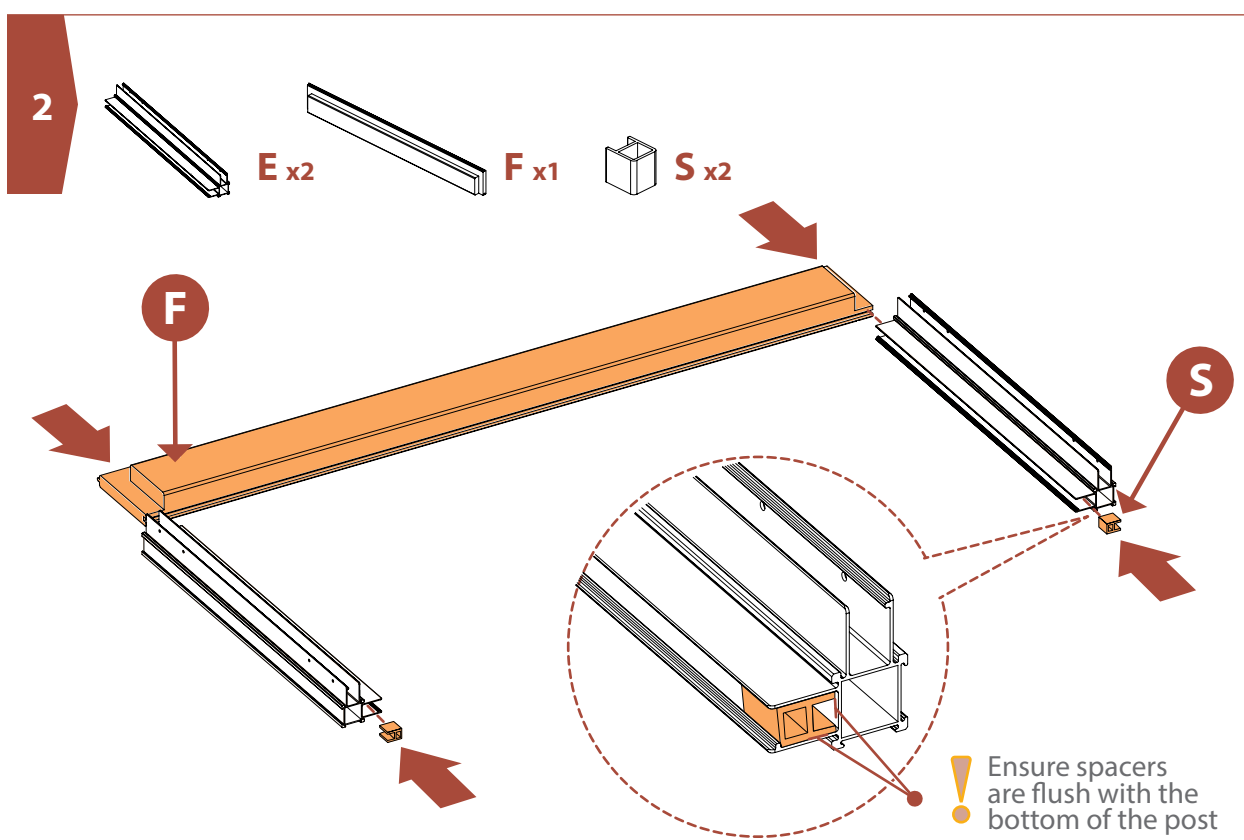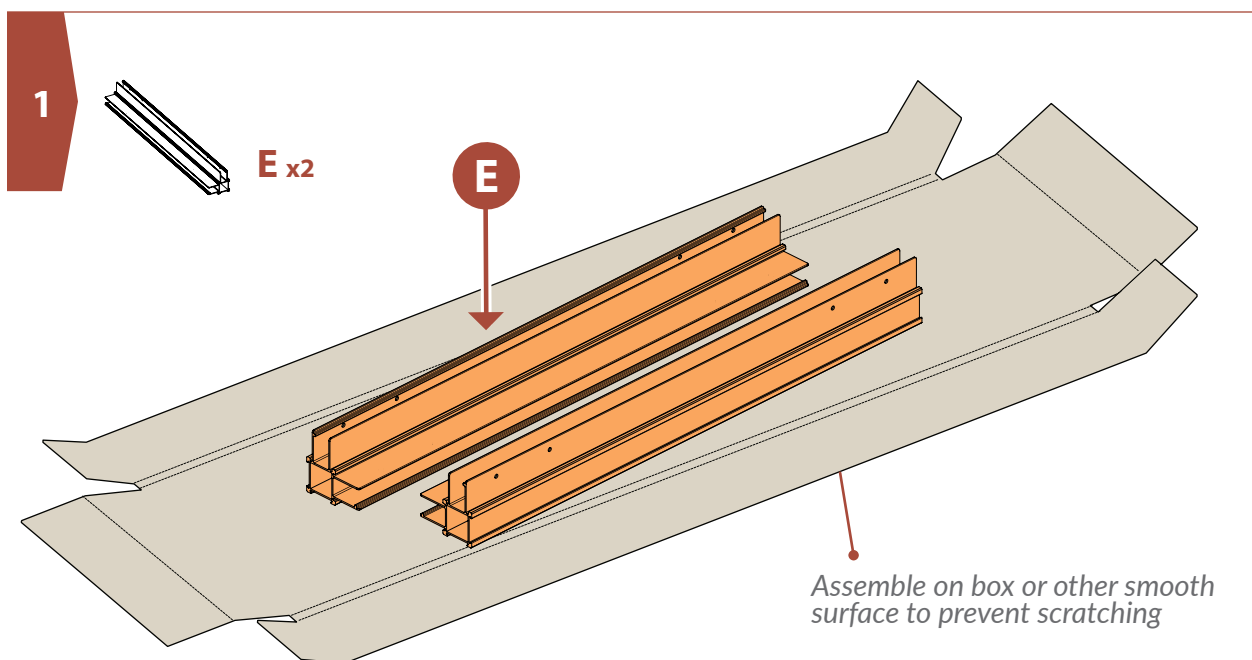

3






**G x2**






**H x1**

Flip Panel

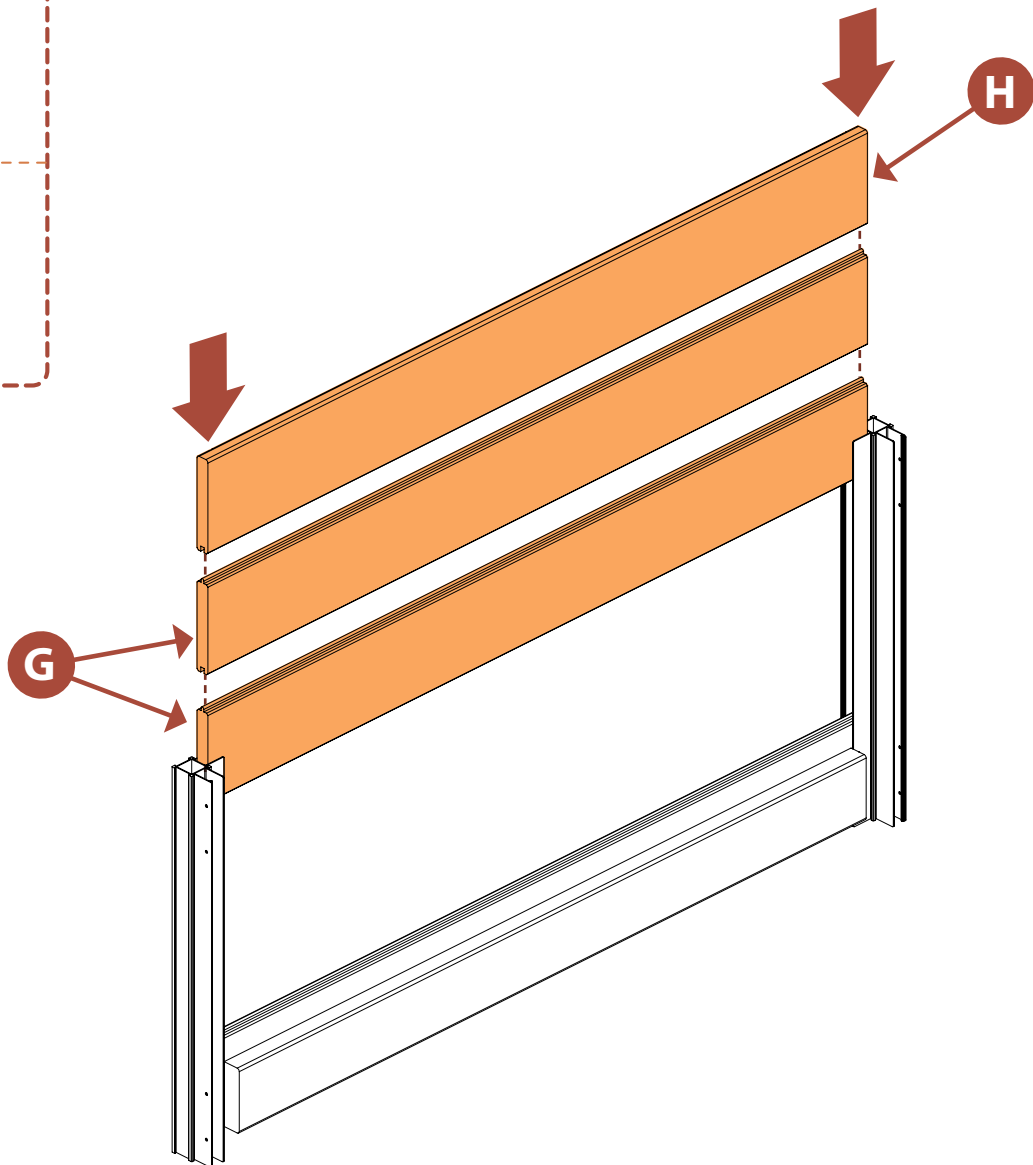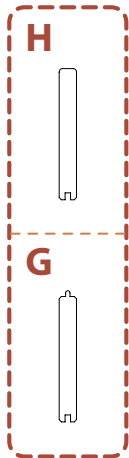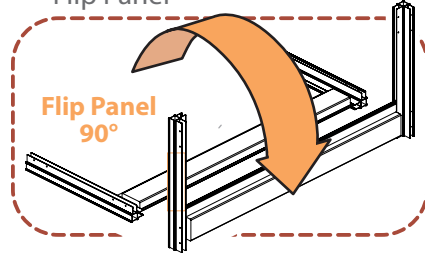



4

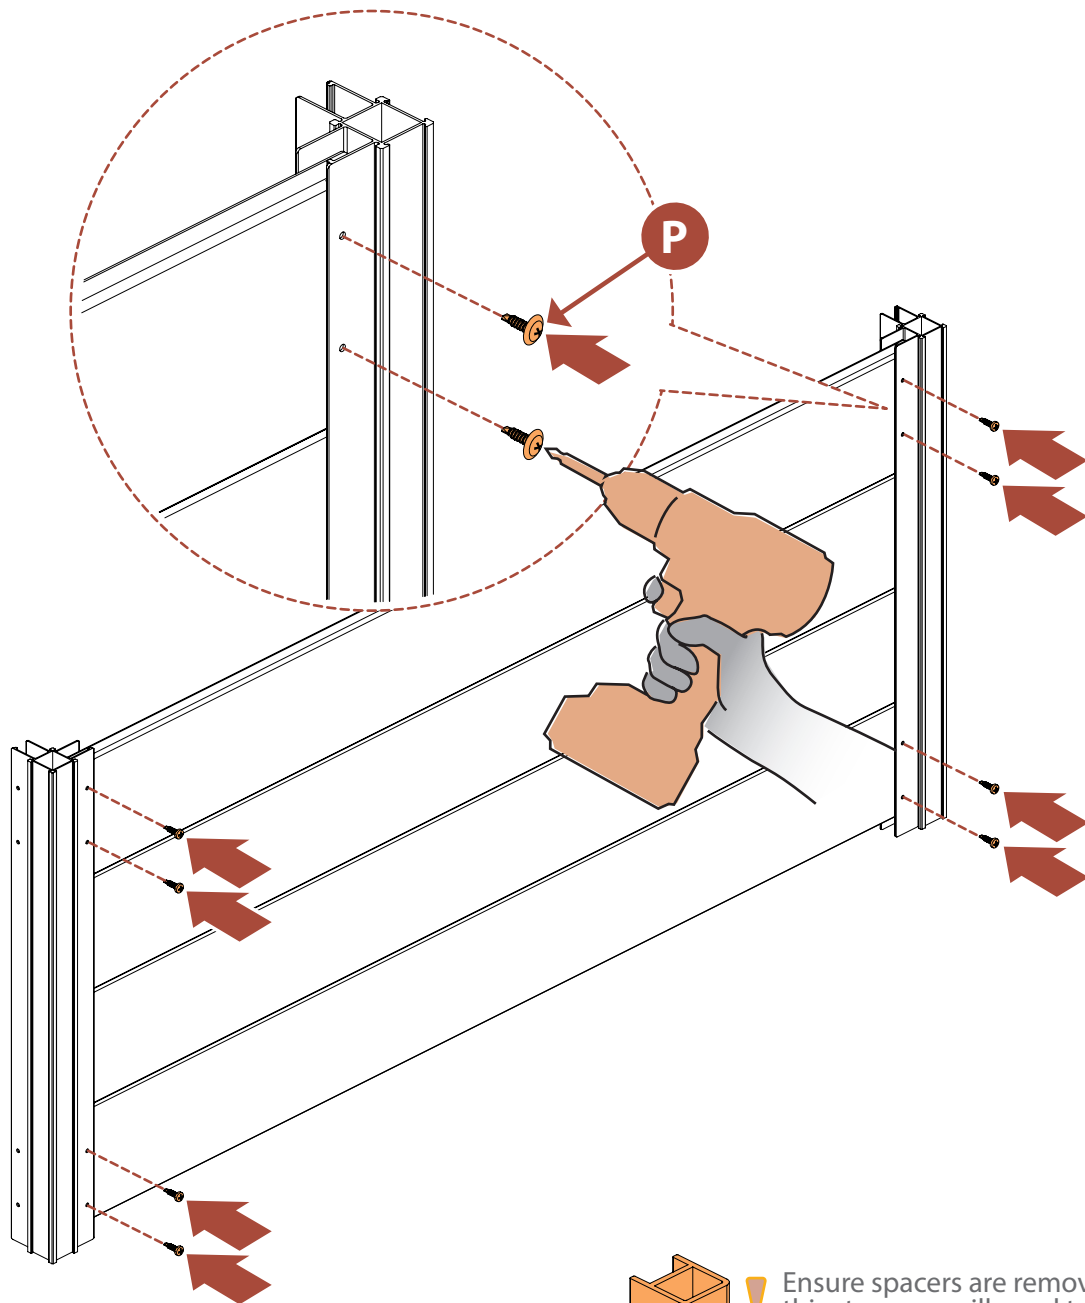
**P x8**

! Ensure spacers are removed after this step, you will need to reuse them.

5



S x2



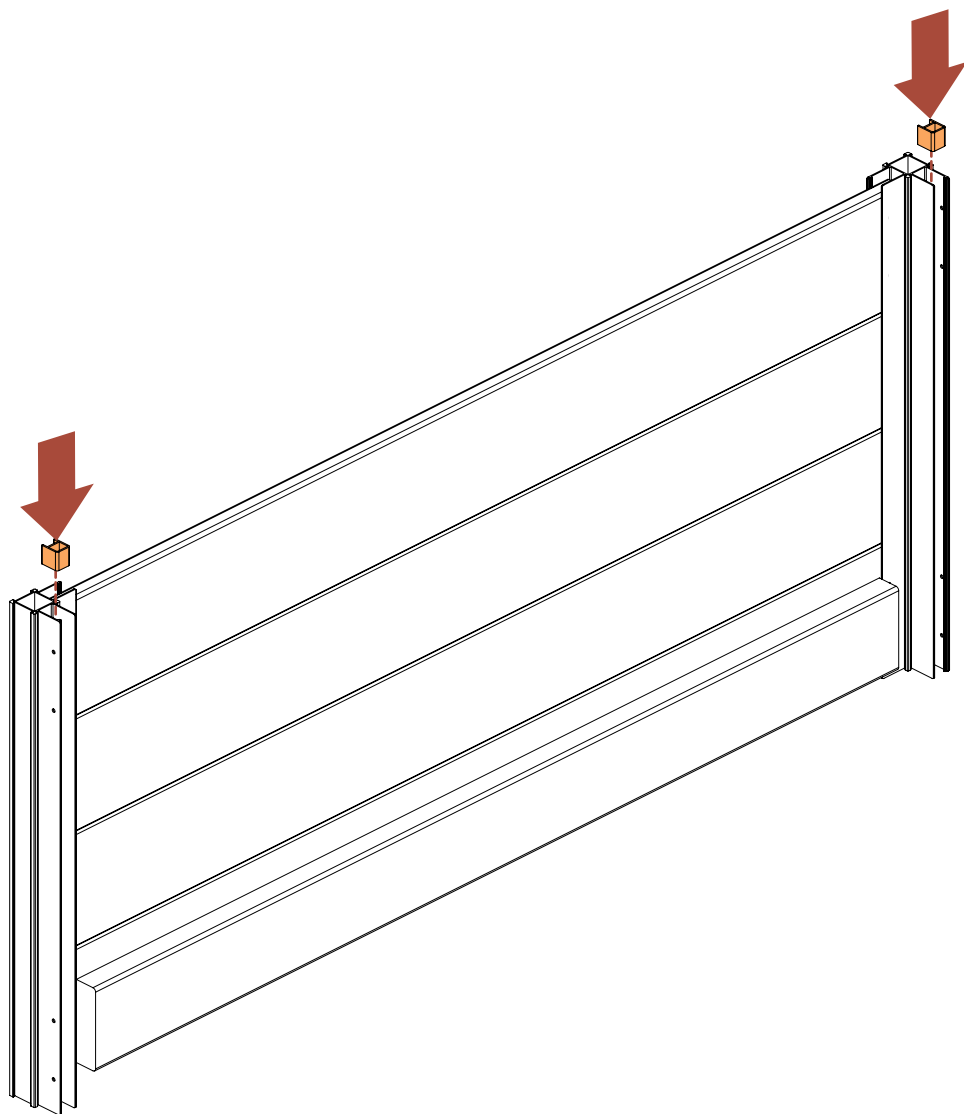


6


**I** x6

**J** x2


**S** x2

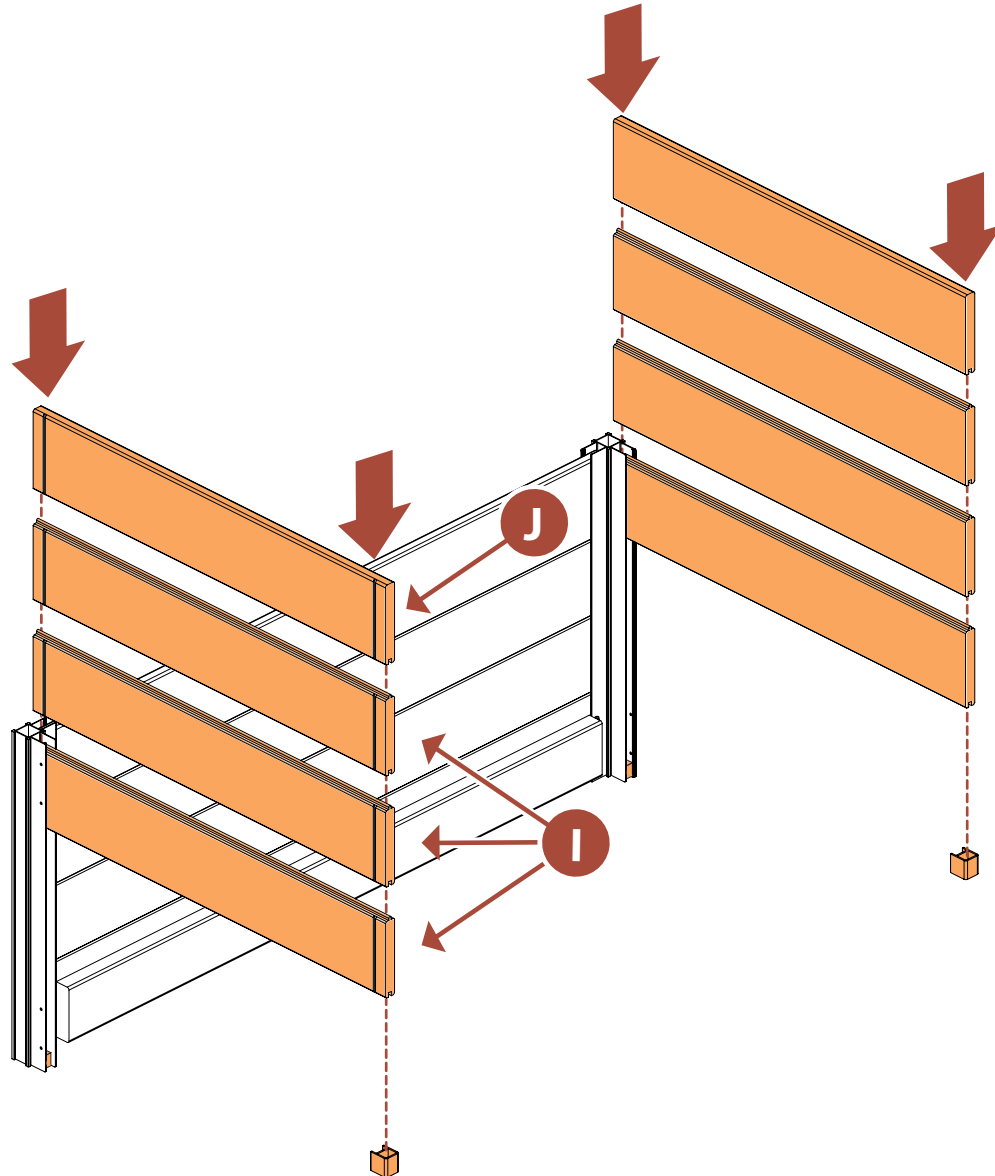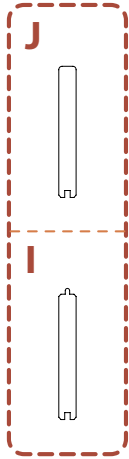

Ensure spacers are placed under each end of your short boards.

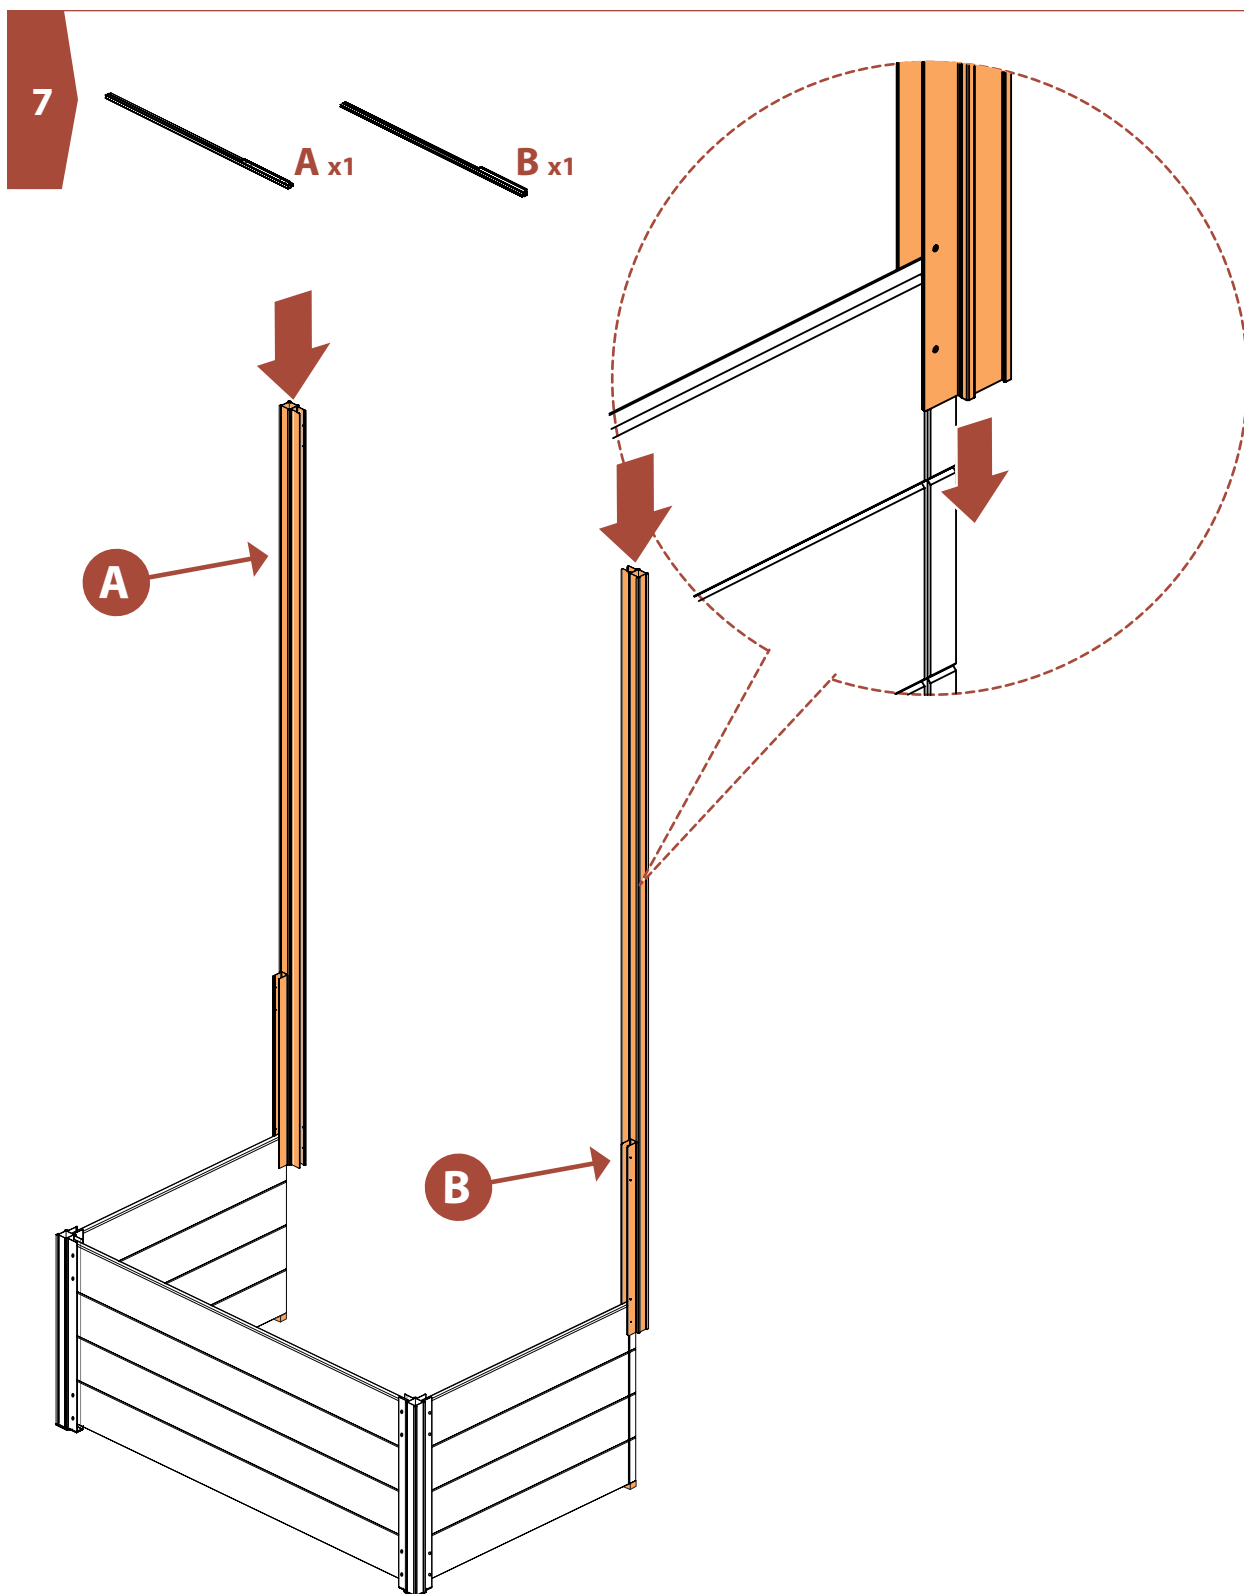

8

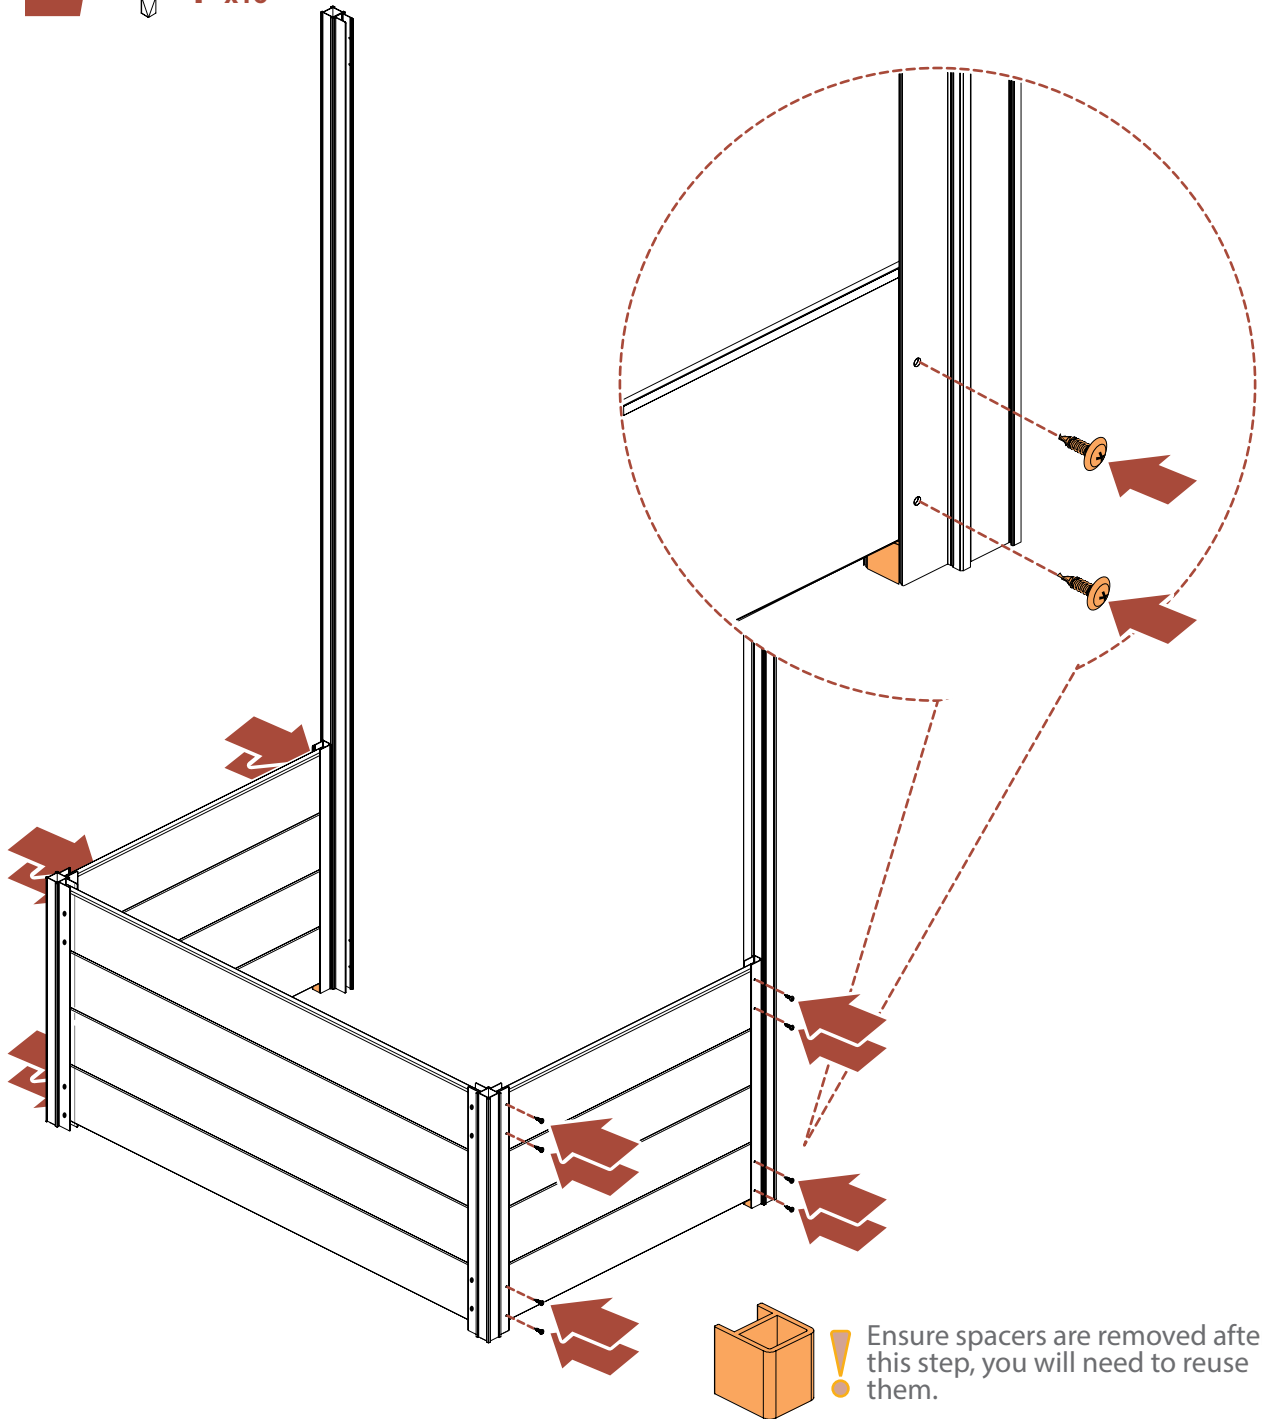**P<sub>x16</sub>**


9




$F_{x1}$




$S_{x2}$

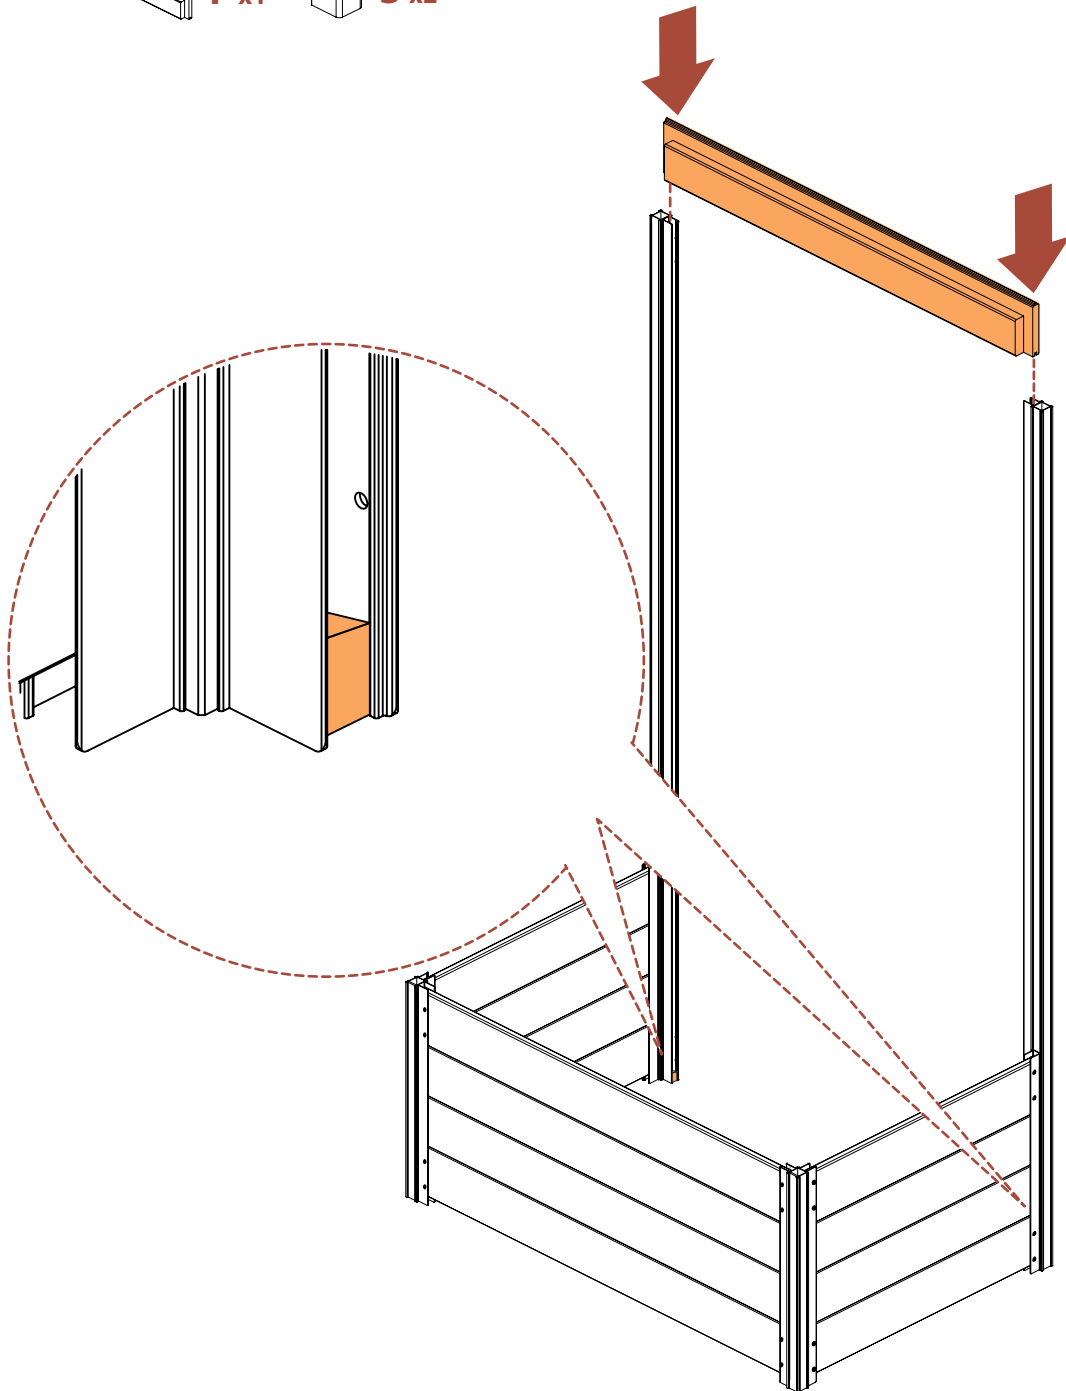


10





P x4

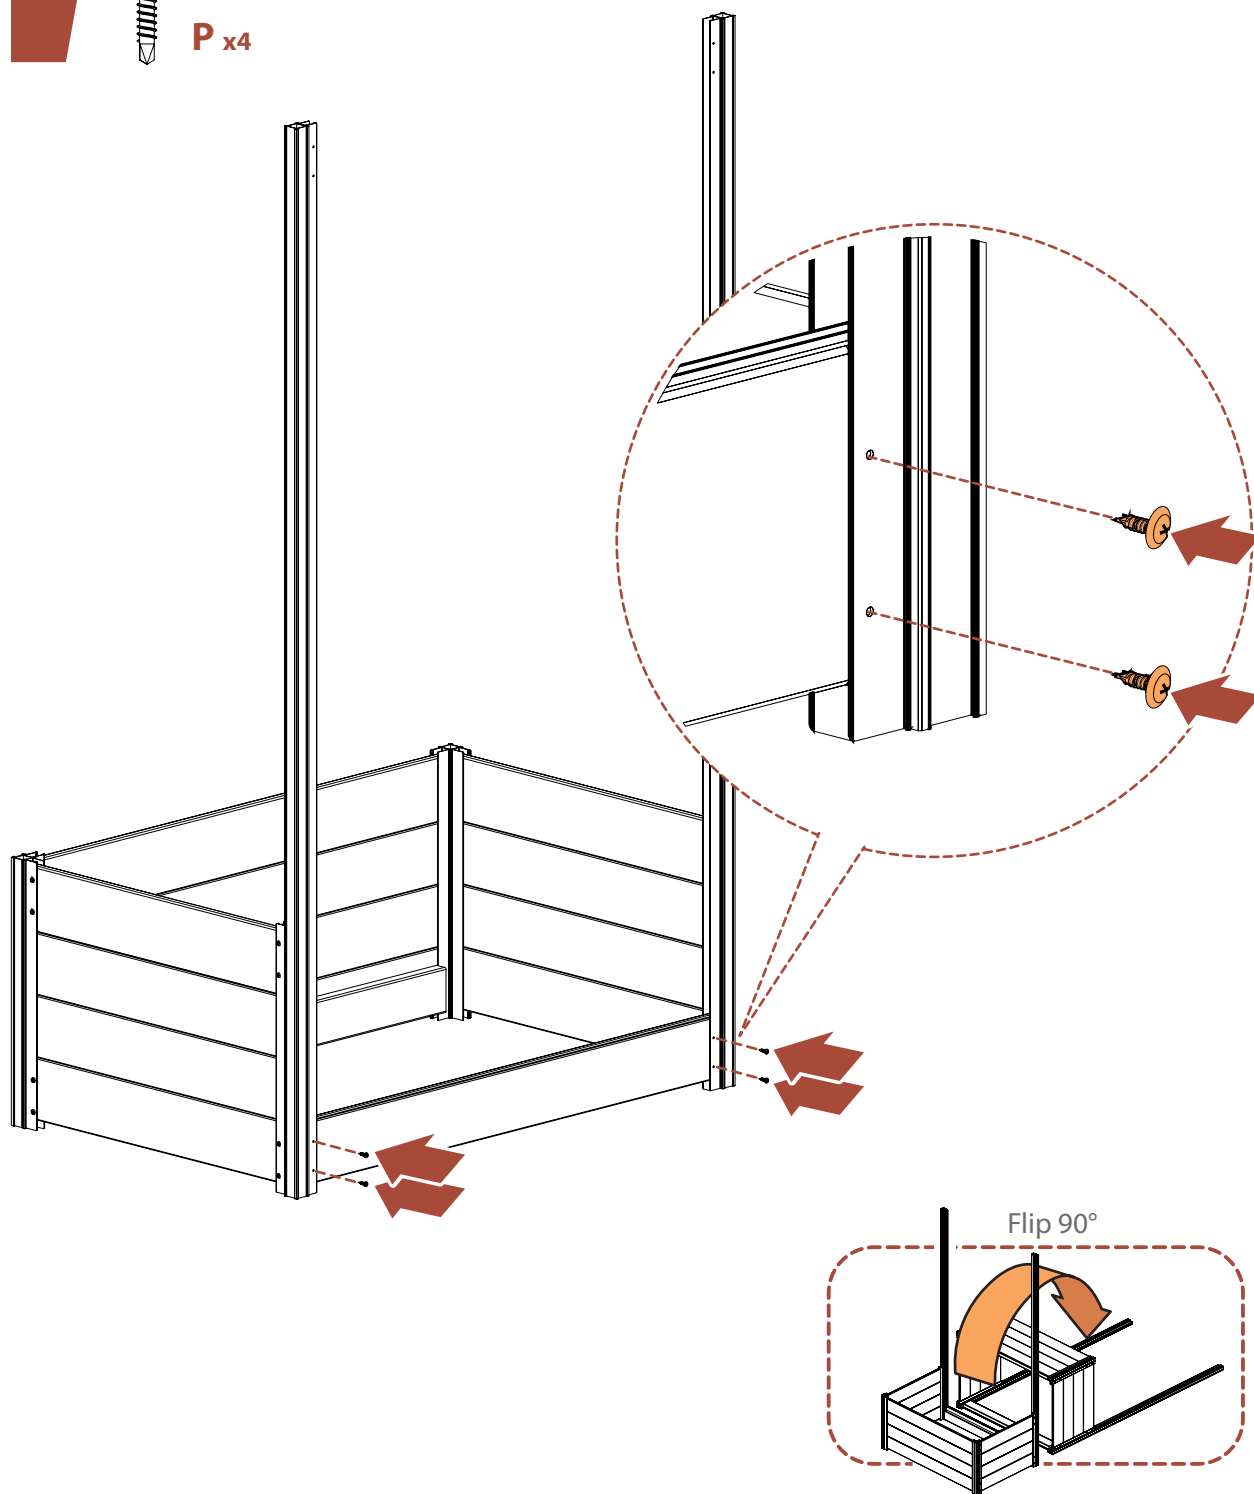

11

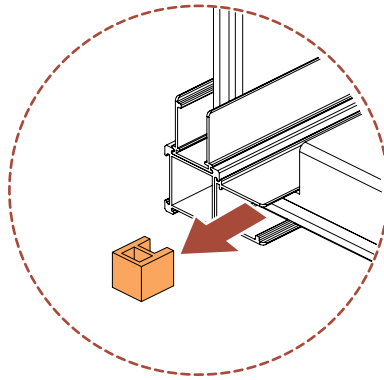


! First remove any remaining spacers from your posts.

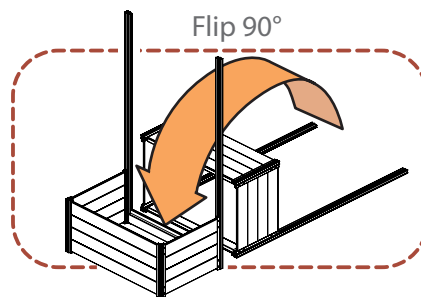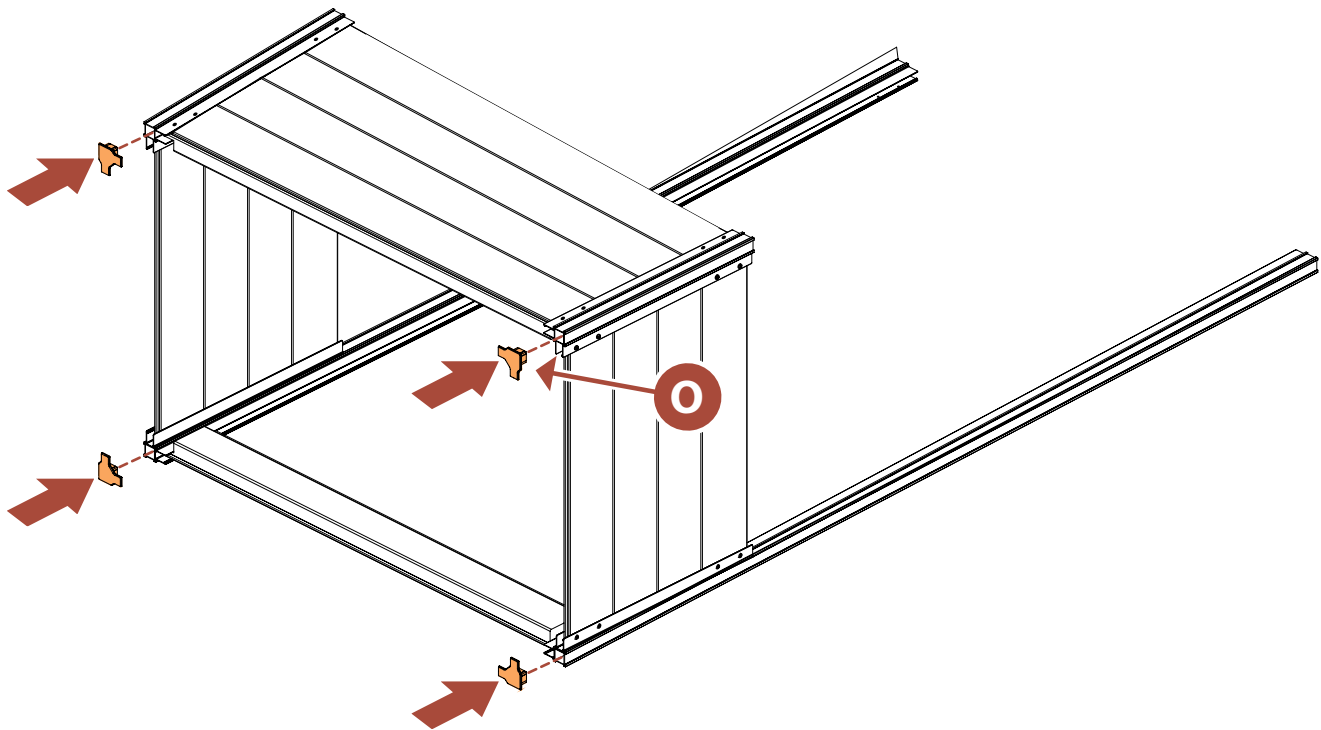






12




**G** x2



**H** x1

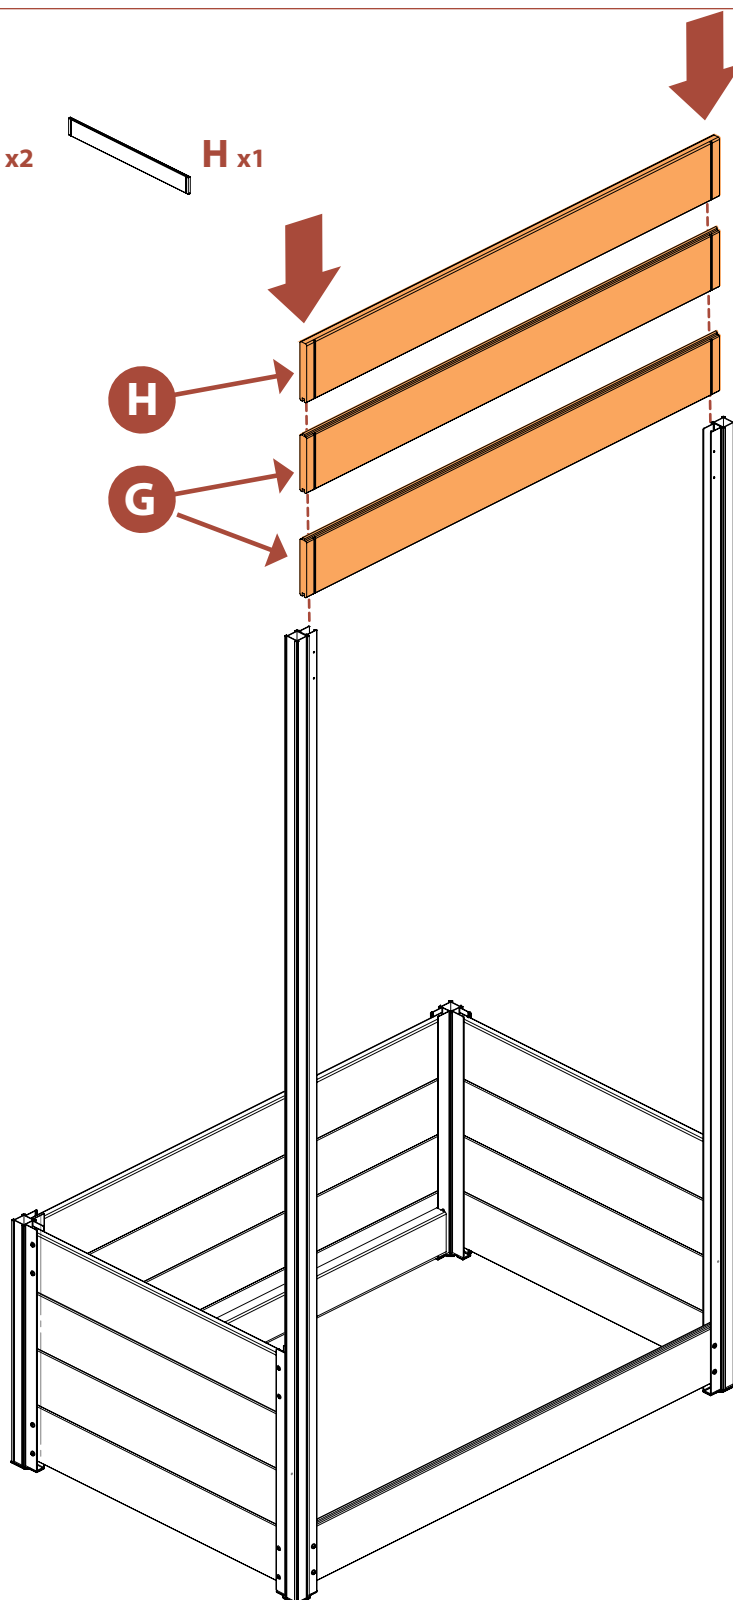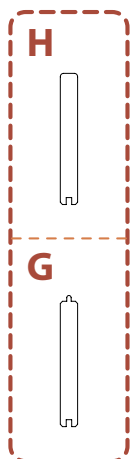



13




D x1



S x2

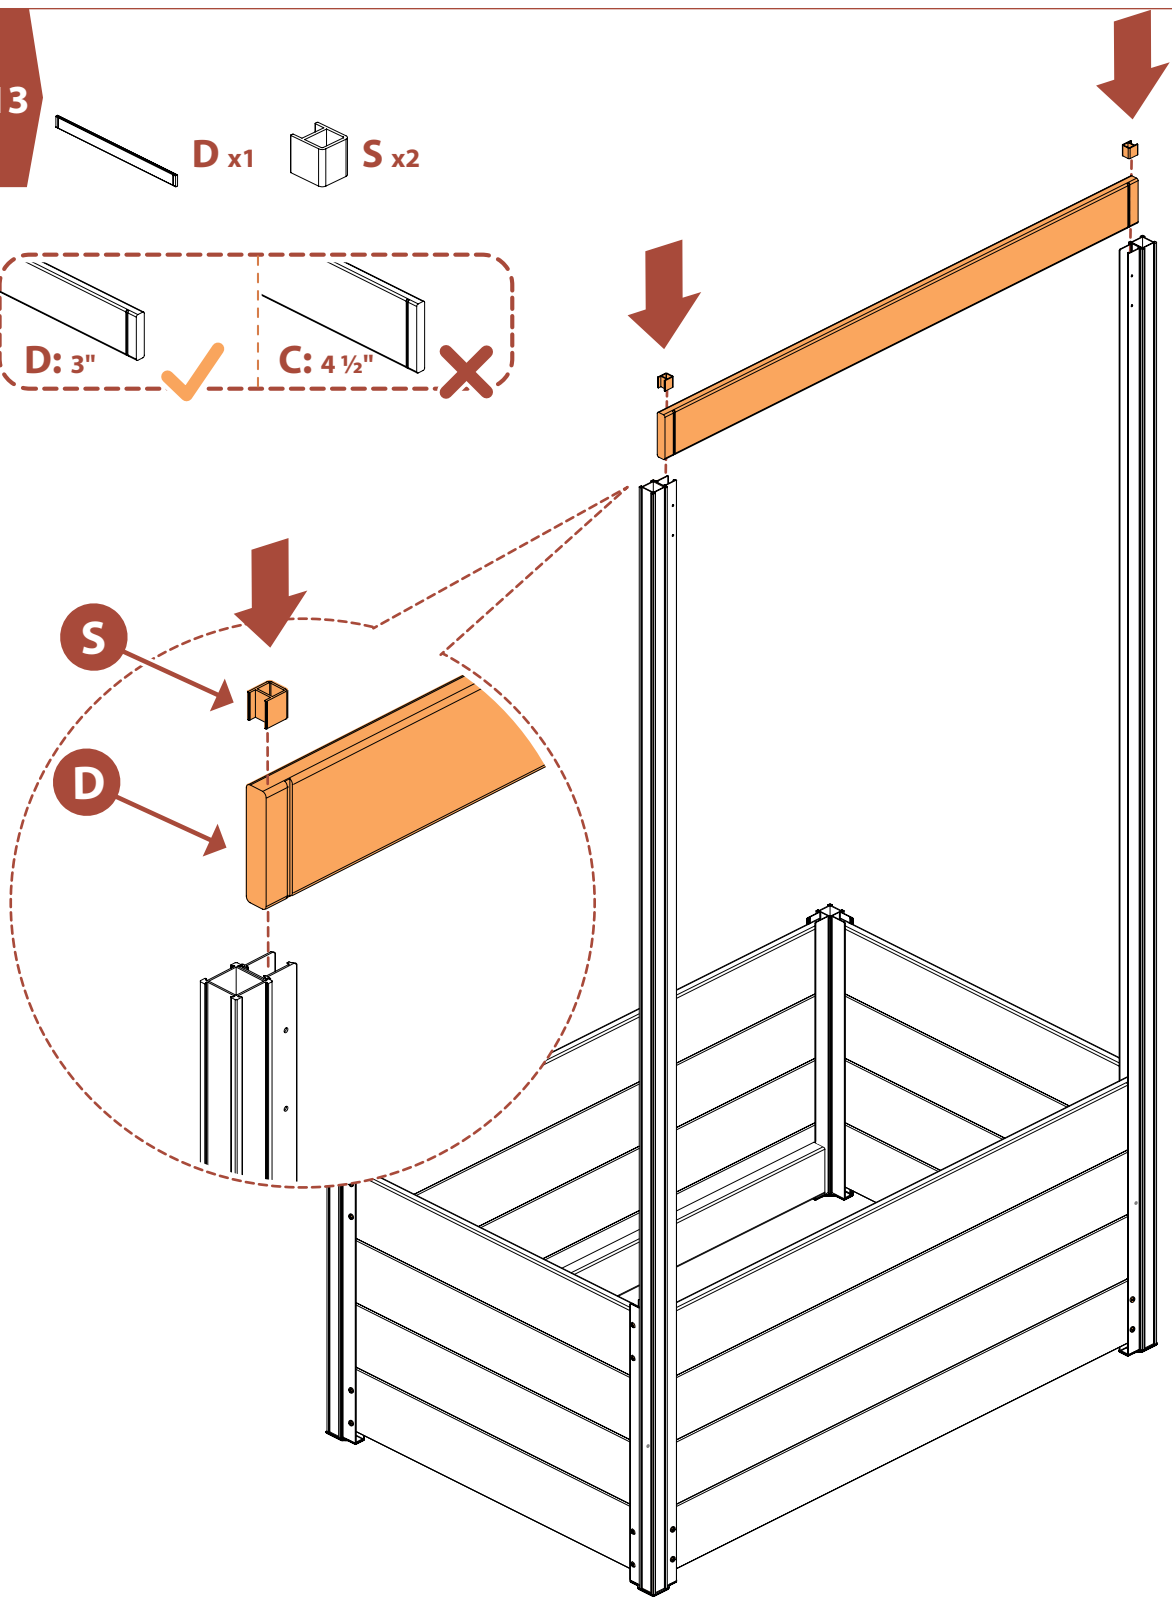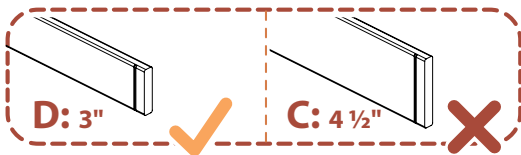


14



C x10




S x18

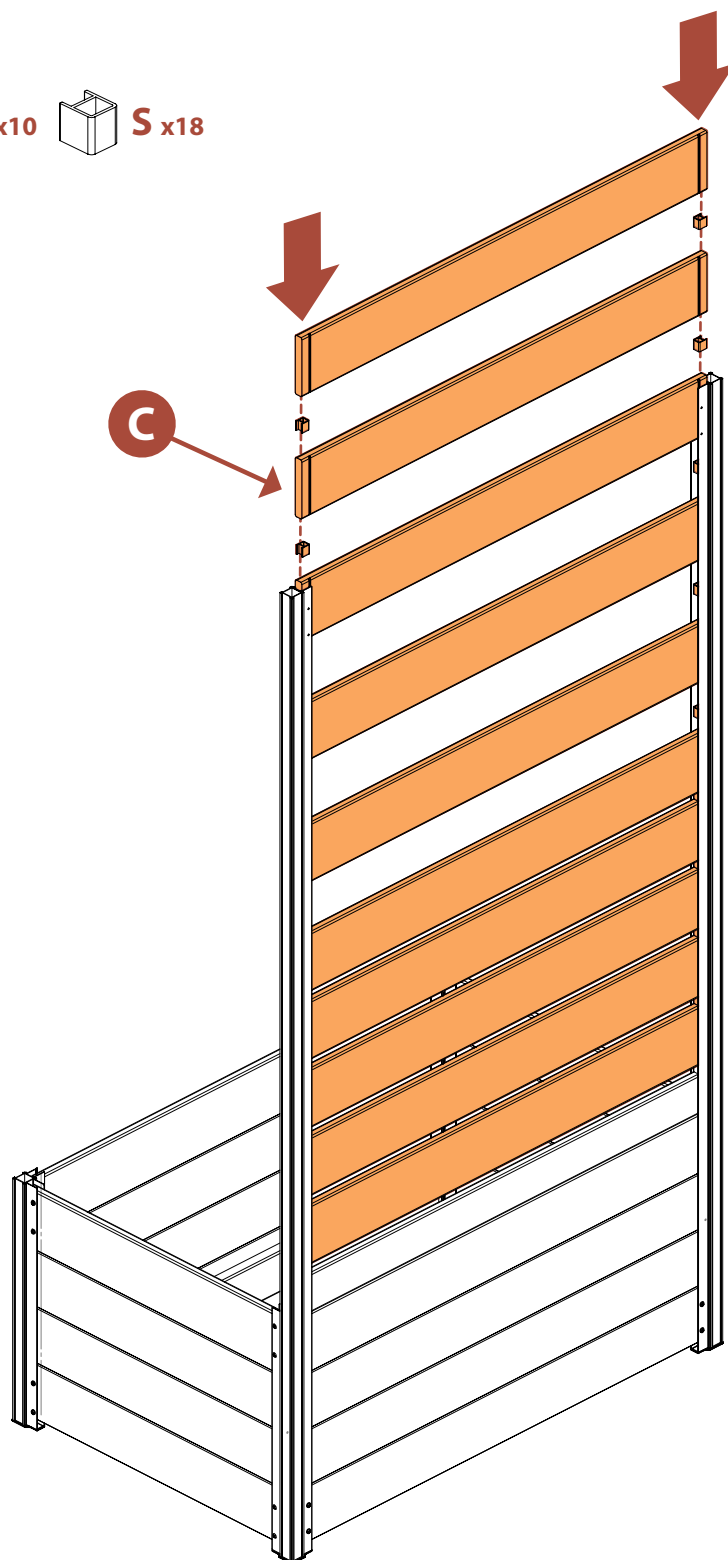



15



P x4

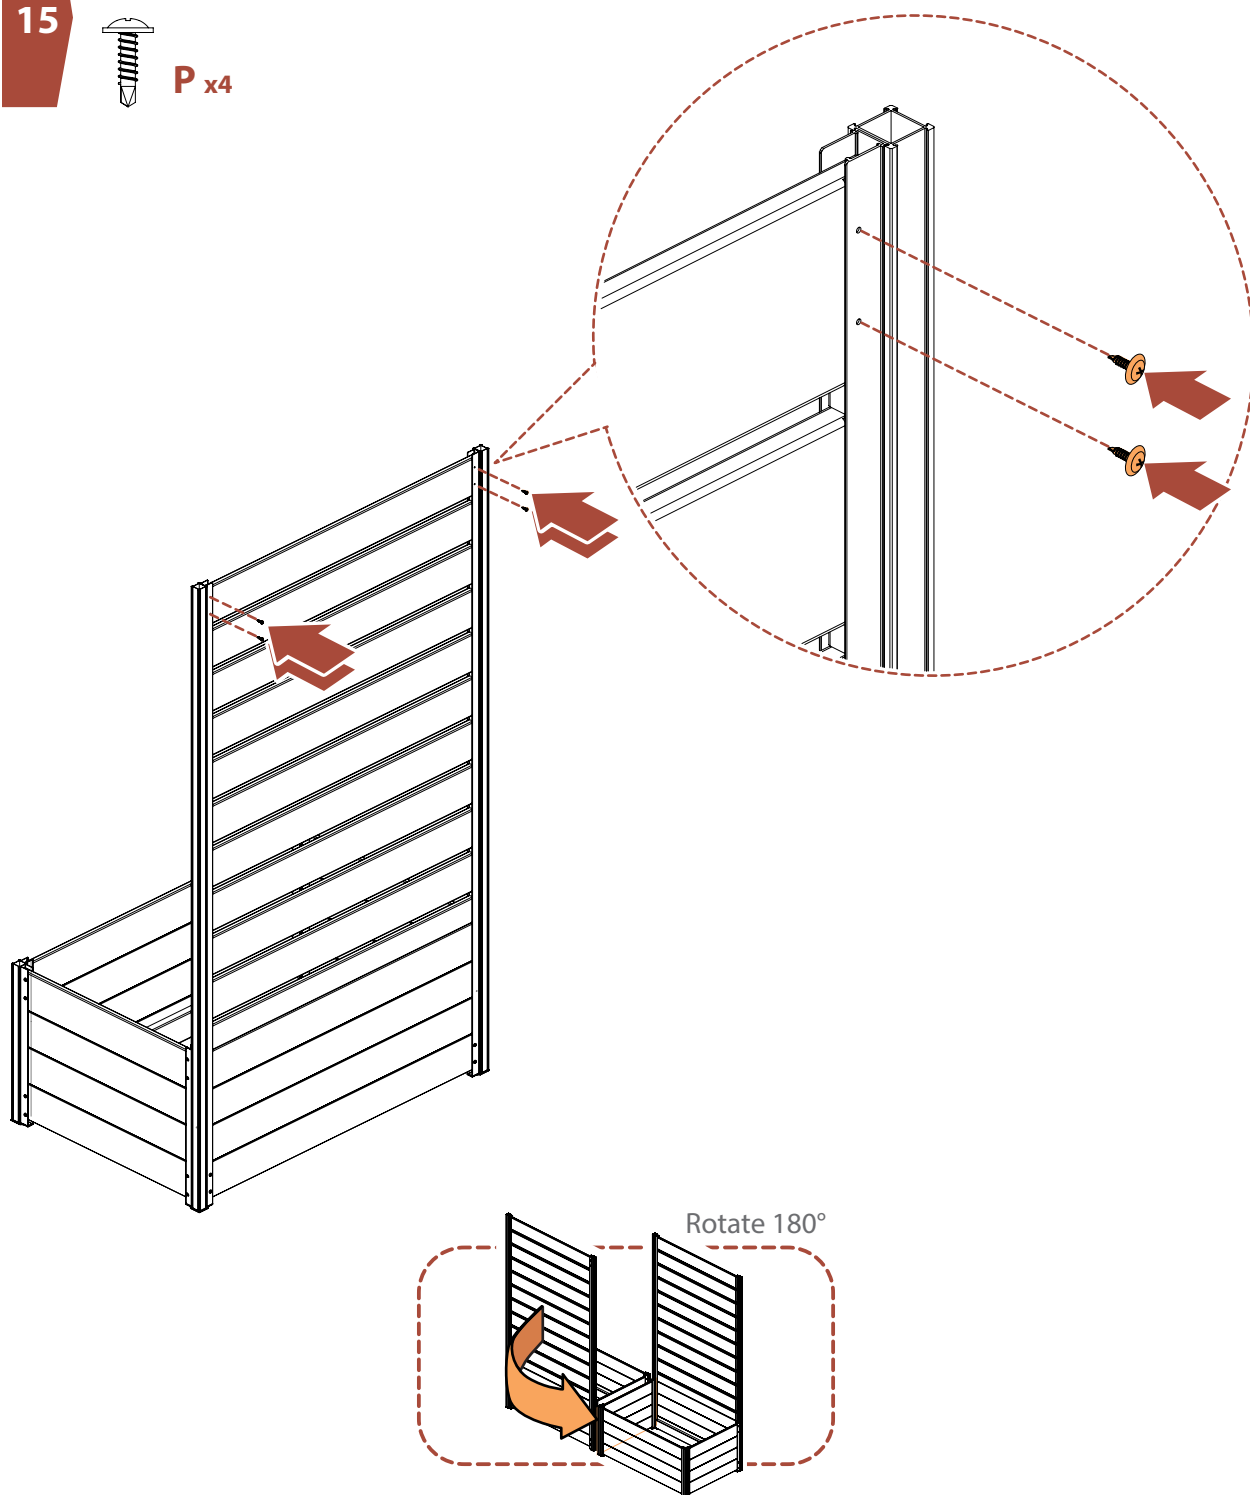


16

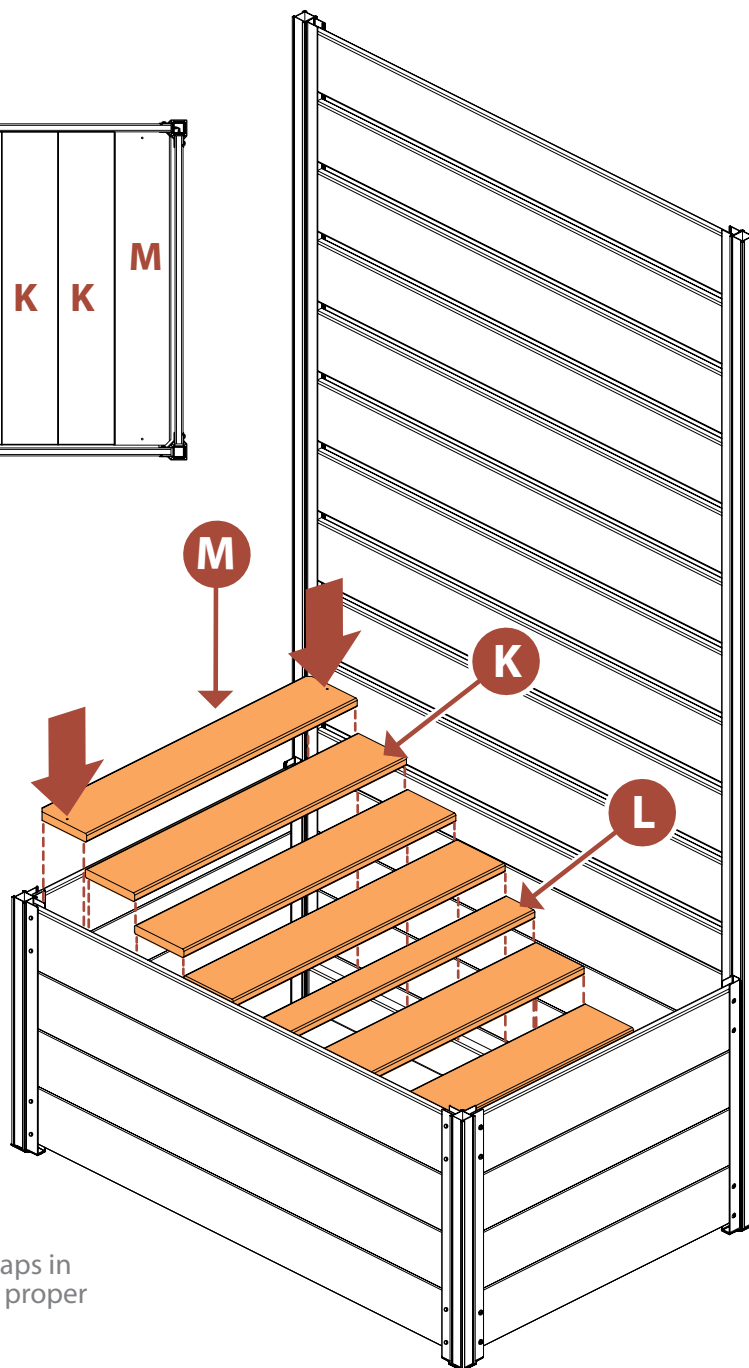
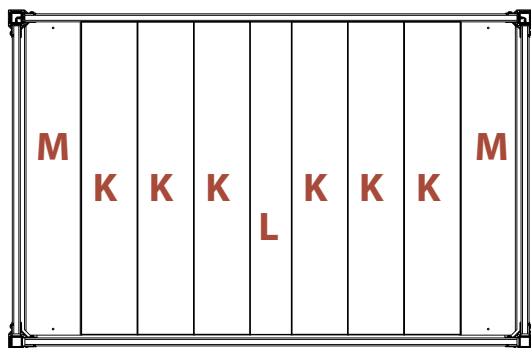


**Note:** There will be small gaps in the floor boards to allow for proper drainage.


17



Q x4

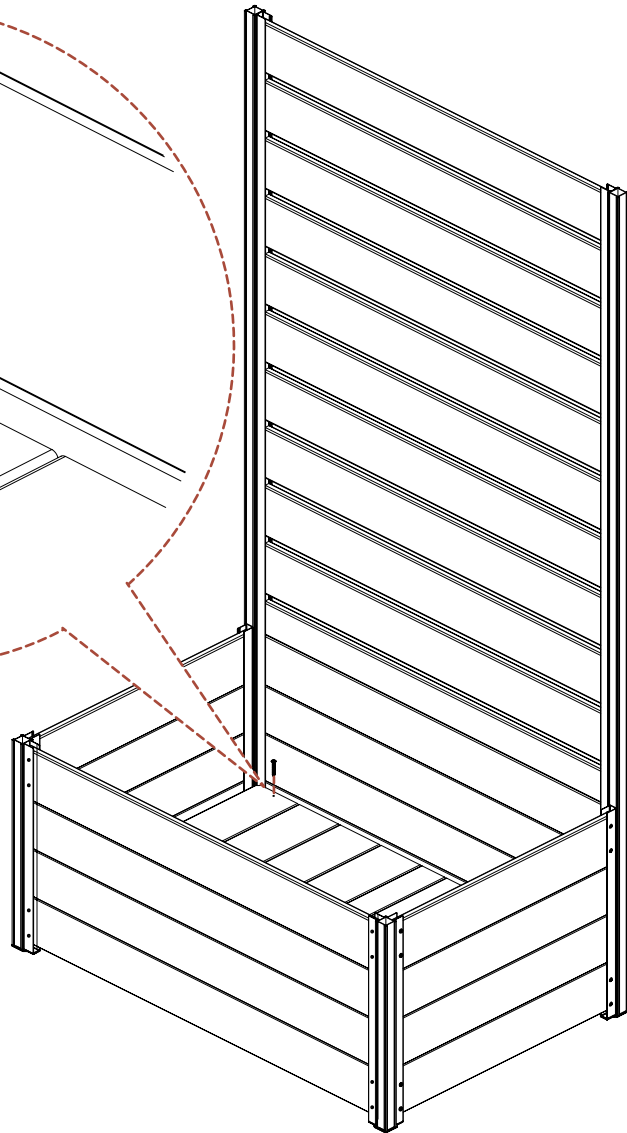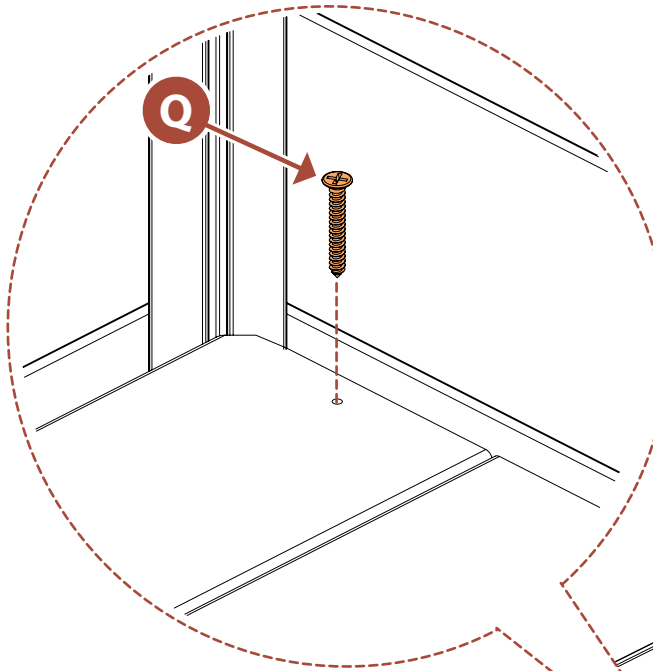

Top View

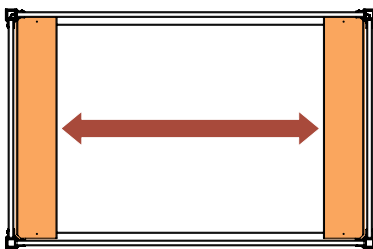

Ensure the end floorboards (**M**) are flush to the sides of the planter box before securing with screws.

**Note:** Drive a screw into each of corner of the planter box.


18




**N** x2




**O** x2

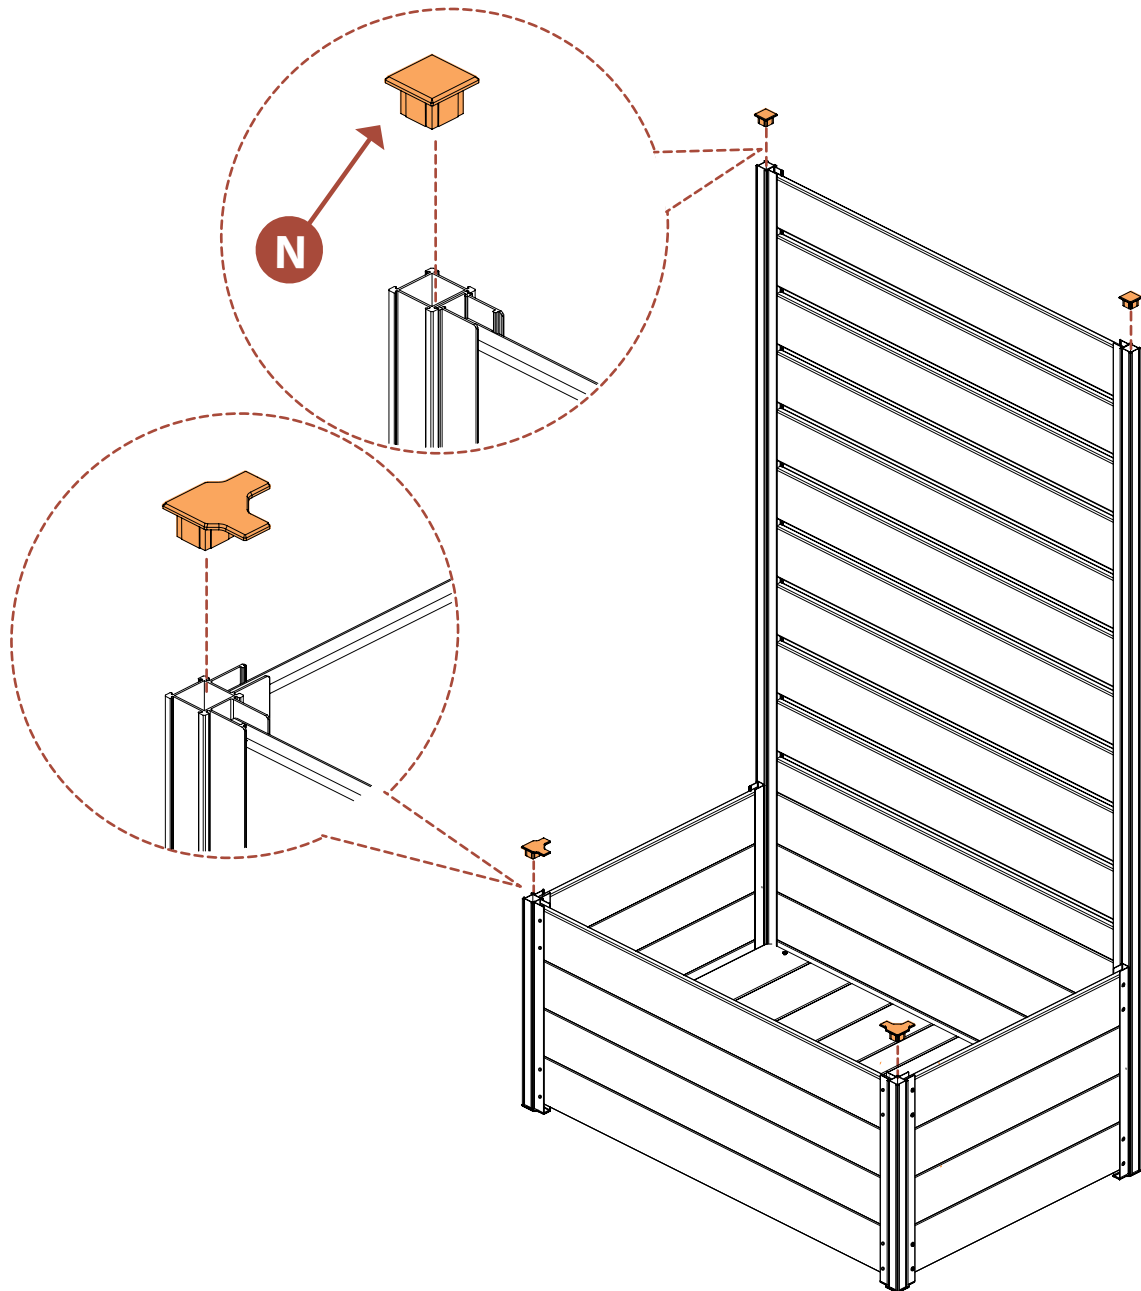

19

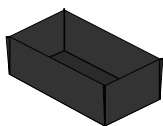

**R** x1

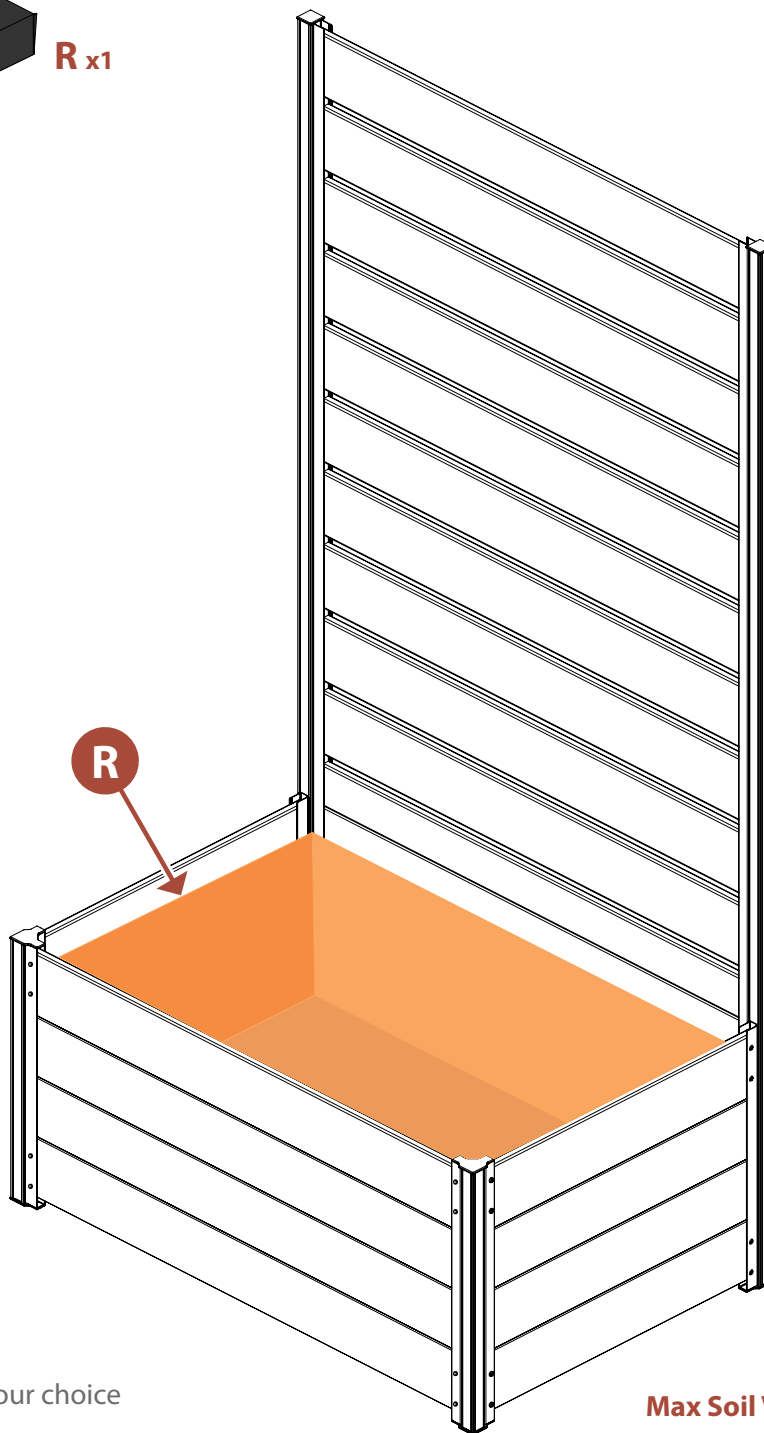

Fill with your choice  
of soil.

**Max Soil Volume:** 190 qt.  
7.4 cu. ft.



# ENCLO

## HIDE IT WITH STYLE

[www.encloscreens.com](http://www.encloscreens.com)

[support@encloscreens.com](mailto:support@encloscreens.com)



**704-892-5222**  
**877-234-6196**



*6935 Reames Rd. Ste. K.*  
*Charlotte, NC 28216*

