

WARNING!

Children have died from furniture tipover. Fixed wall device have been included with this product;you must install the fixed wall device according to these instructions in order to minimize the risk of furniture.If you have any questions about this product or the Fixed wall device , please contact us immediately.


Never allow children to climb or hang on furniture,including drawers or cabiner doors.


In addition to installing the restrains,to help prevent tip-over.







1. Never put a TV or other heavy objects on top of this product.
2. Do not stand on the product.

















	! WARNING Children have died from furniture tipover. To reduce the risk of furniture tipover: • ALWAYS install tipover restraint provided. • NEVER put a TV on this product. • NEVER allow children to stand, climb or hang on drawers, doors, or shelves. • NEVER open more than one drawer at a time. • Place heaviest items in the lowest drawers. • Do not defeat or remove the drawer interlock system. <i>This is a permanent label. Do not remove!</i>
--	--

















DRY24005

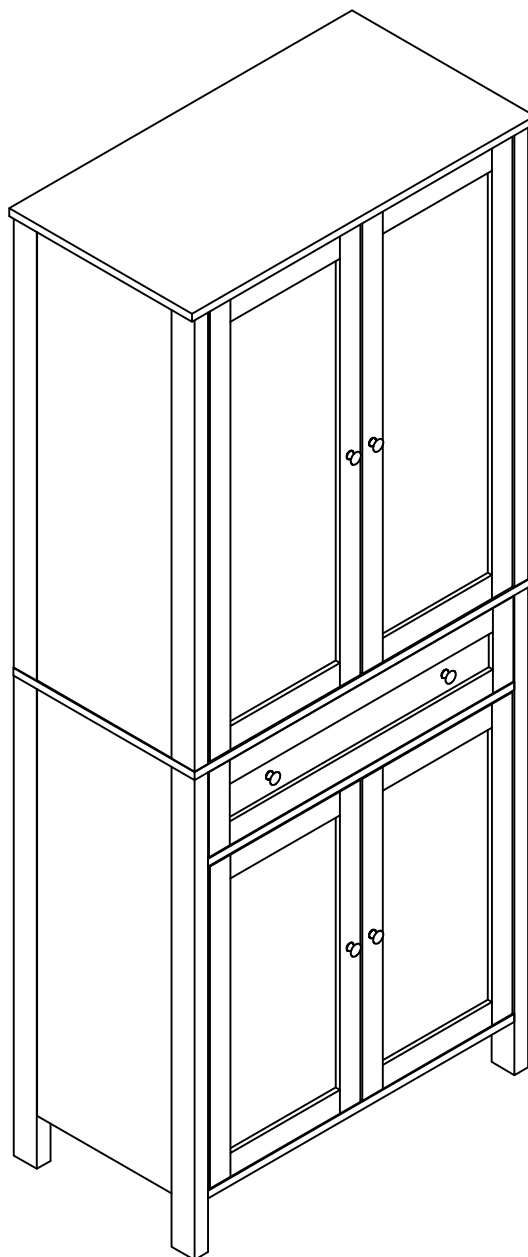

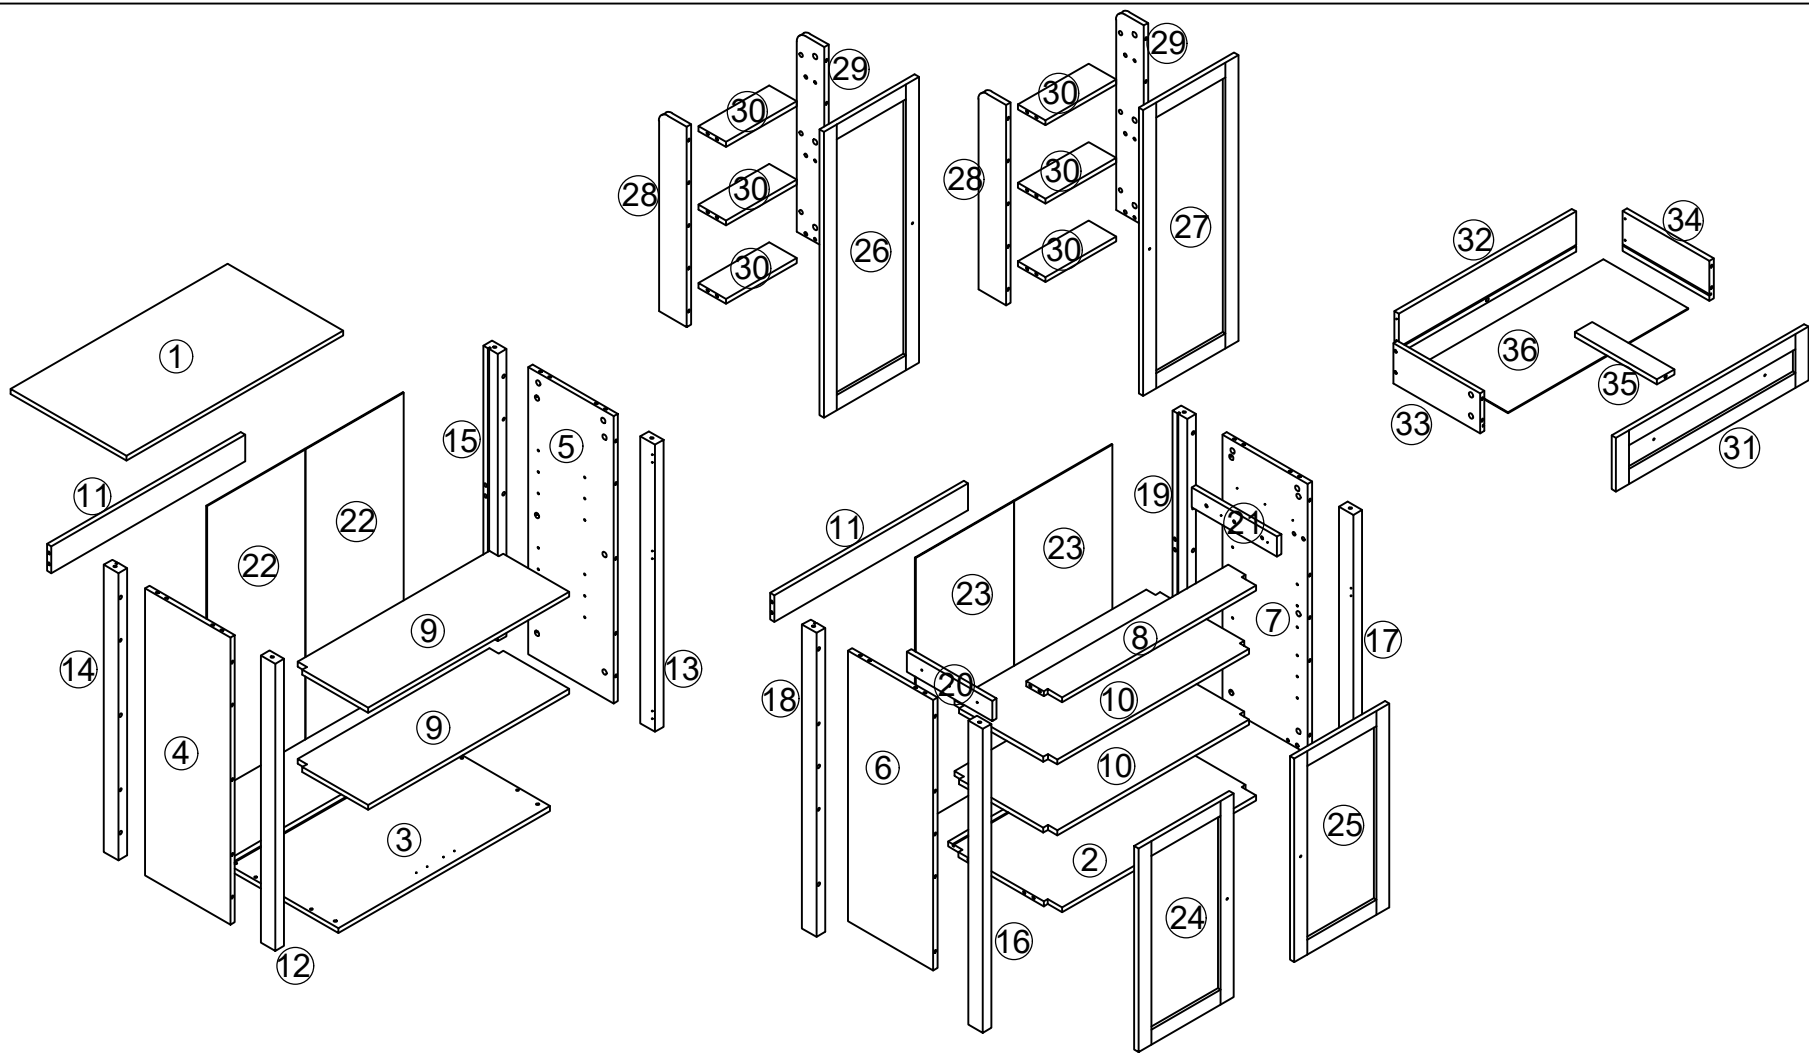


A  72PCS	B  72PCS	C 8*40  52PCS	D 3.5*14  82PCS	E 3.5*35  4PCS	F 8*60  4PCS	G 7*50  4PCS	H  16PCS	I I2 300mm  I1  1PCS	J 3.5*25  6PCS
K K2 K1   6PCS	L  6PCS	M 4*12  2PCS	N 4*20  4PCS	O  10PCS	P 263mm  6PCS	Q  16PCS	R 3*12  16PCS	S  2PCS	

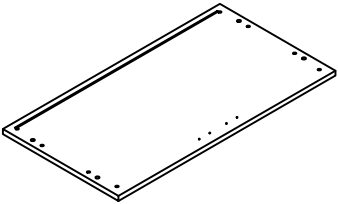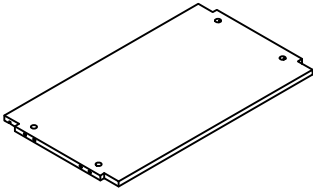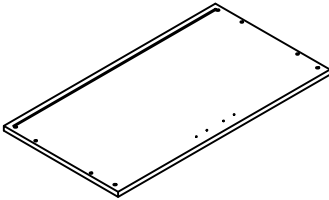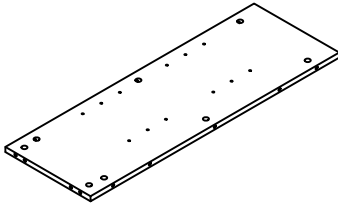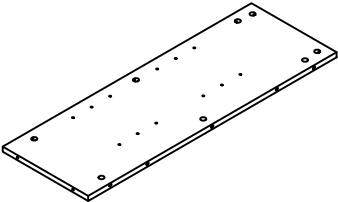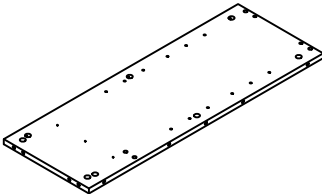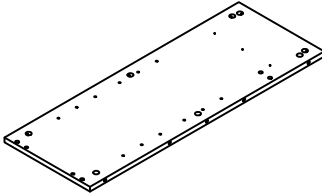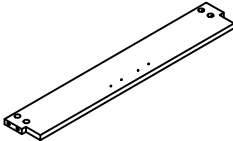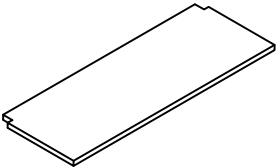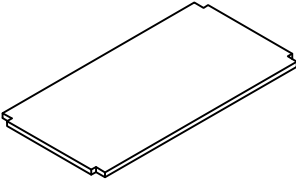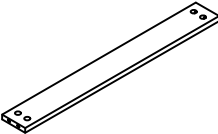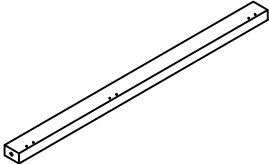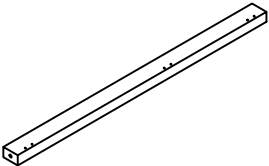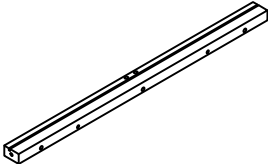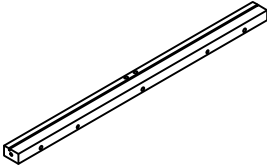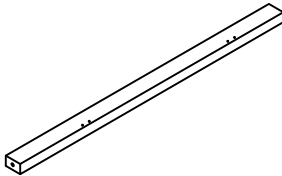1  750*400 1PS	2  698*395 1PS	3  732*396 1PS	4  860*295 1PS
5  860*295 1PS	6  810*295 1PS	7  810*295 1PS	8  698*110 1PS
9  695*260 2PS	10  695*355 2PS	11  670*80 2PS	12  860*50 1PS
13  860*50 1PS	14  860*50 1PS	15  860*50 1PS	16  910*50 1PS

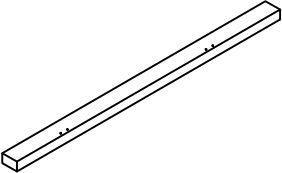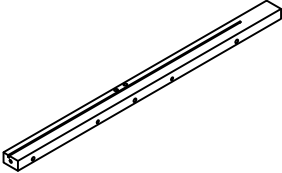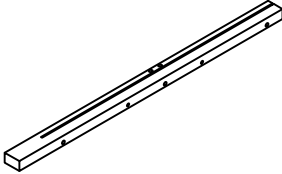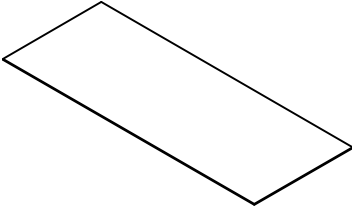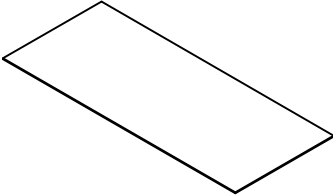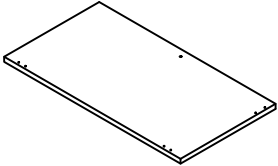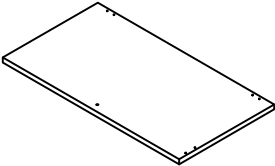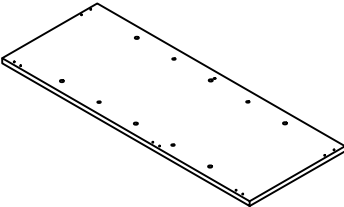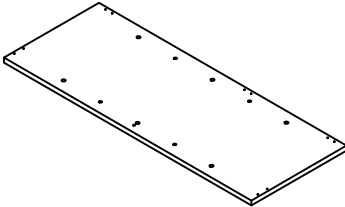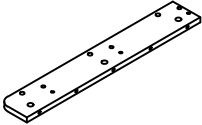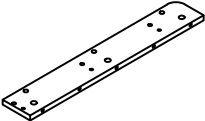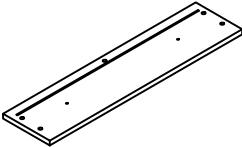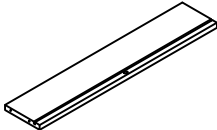
17  910*50 1PS	18  910*50 1PS	19  910*50 1PS	20  295*60 1PS
21  295*60 1PS	22  869*340 2PS	23  803*340 2PS	24  618*337 1PS
25  618*337 1PS	26  864*337 1PS	27  864*337 1PS	28  600*95 2PS
29  600*95 2PS	30  244*95 6PS	31  674*169 1PS	32  613*120 1PS

33




300*120 1PS

34




300*120 1PS

35



284*60 1PS

36

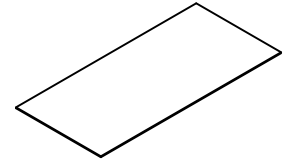


623*293 1PS




Hardware installation demonstration

NOTE: Please make sure "A" hardware tightened and can't be pulled out!


I

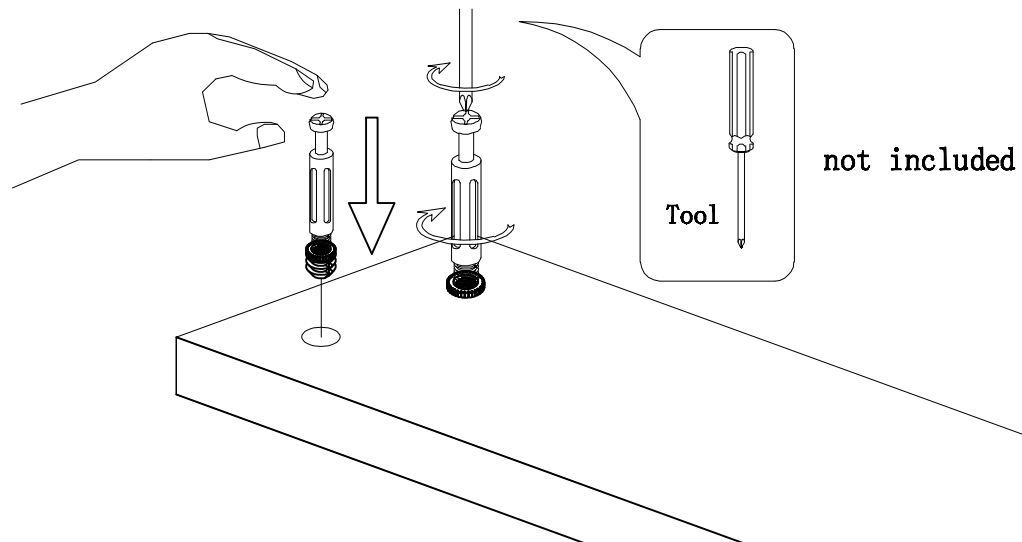

II

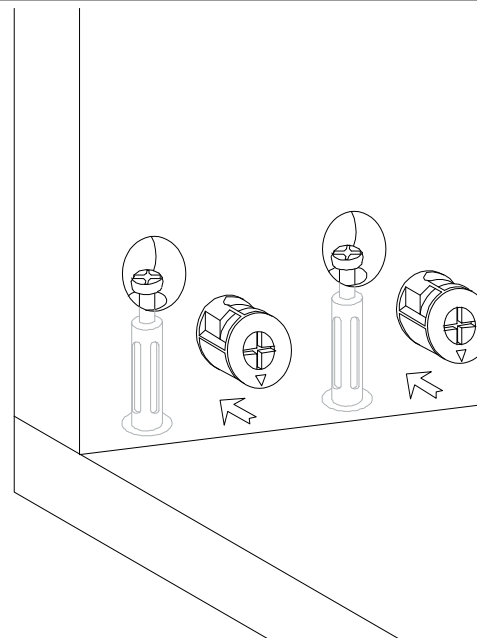

III

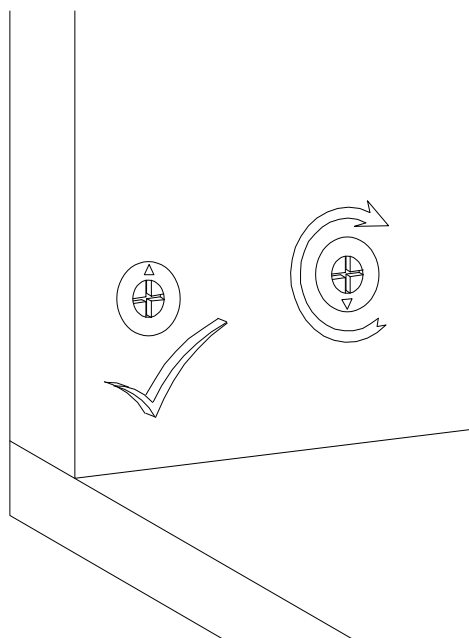


IV



Scan QR code for assembly video

①

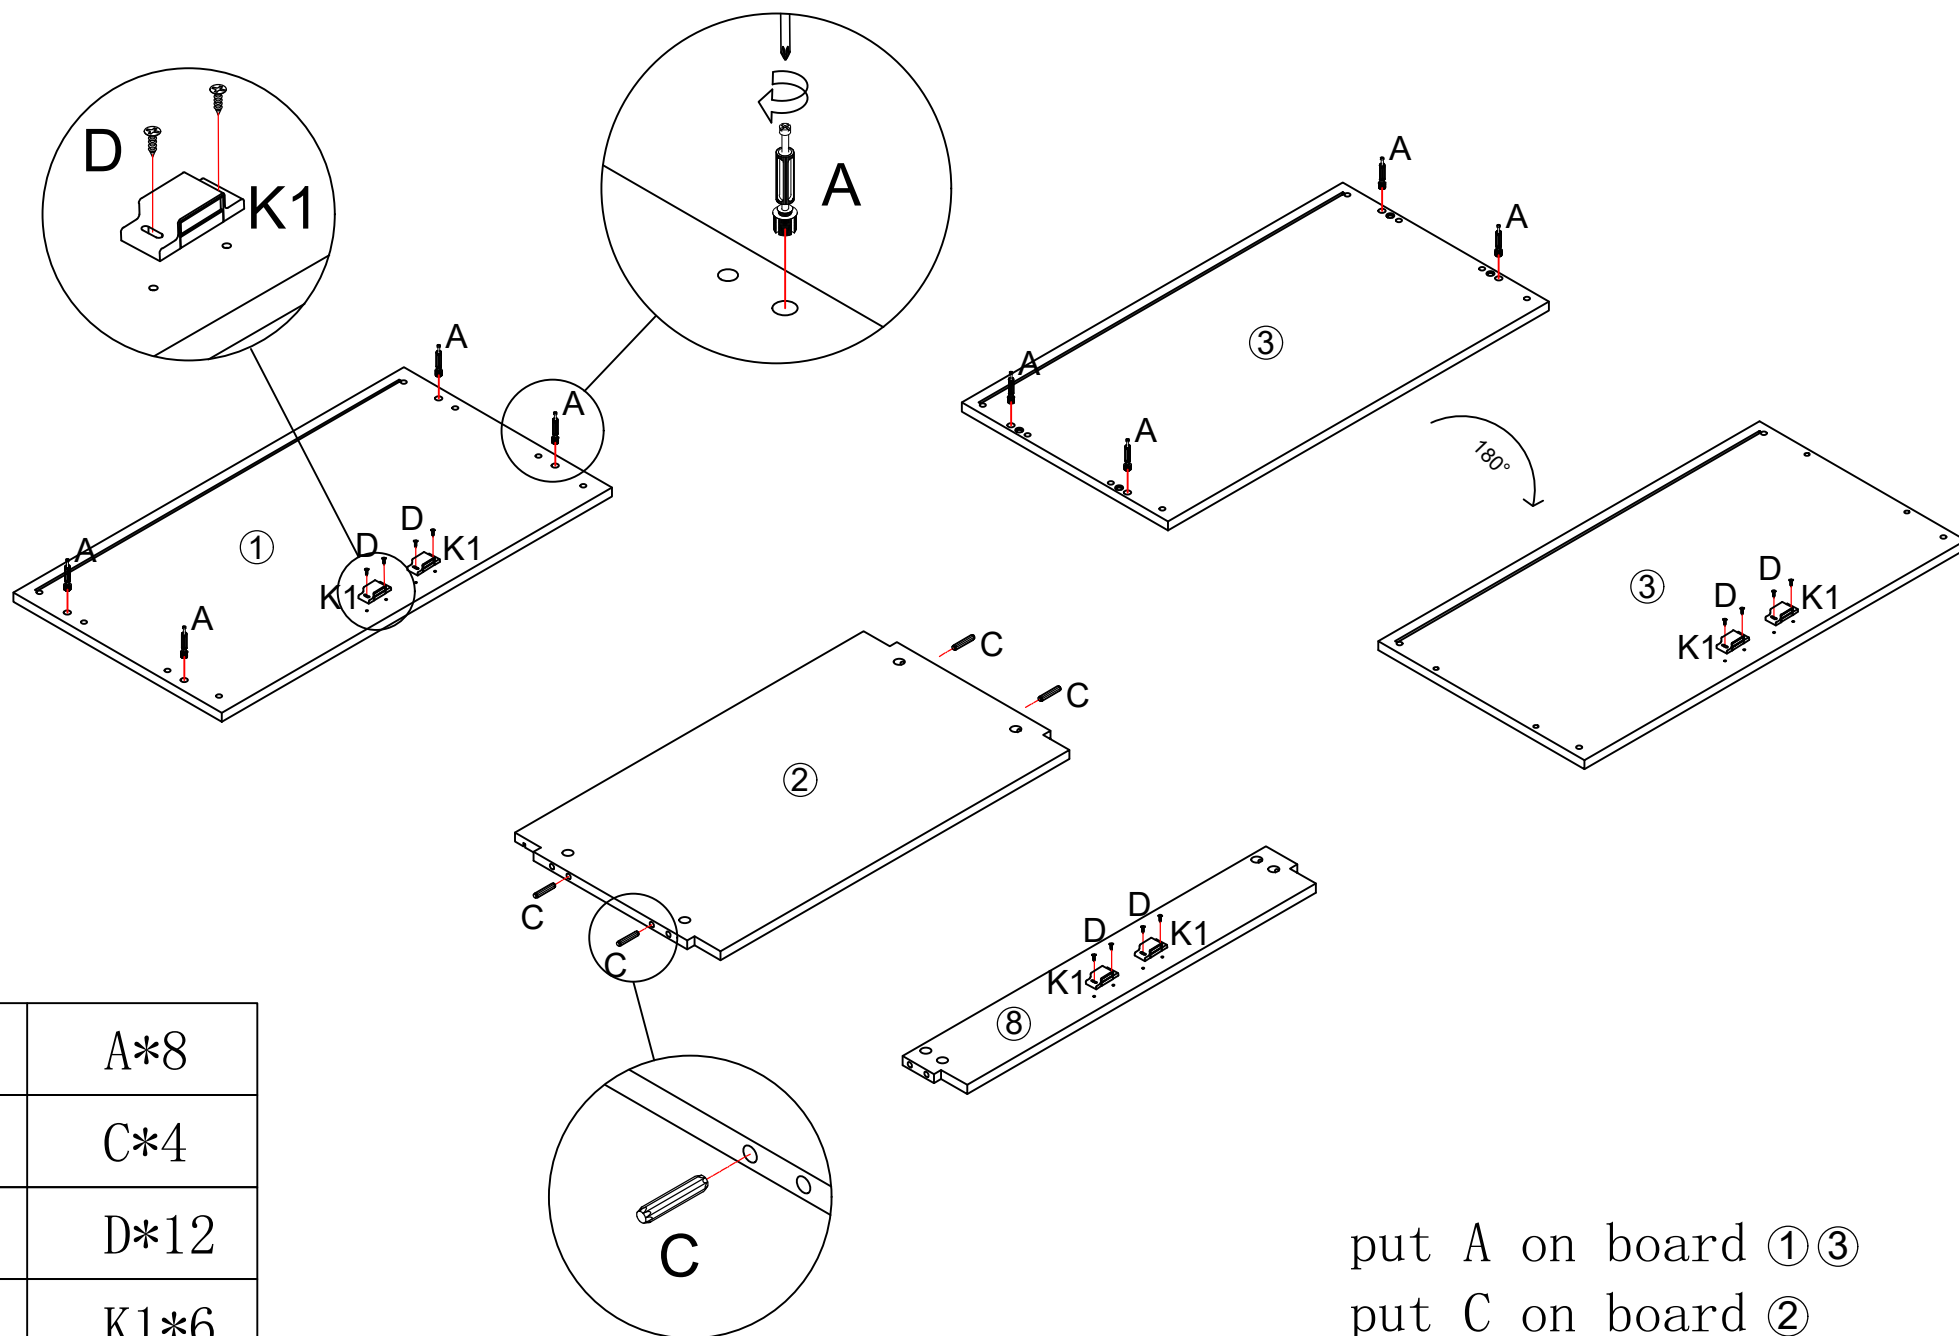

put A on board ①③
put C on board ②



A*8



C*4












D*12



K1*6

2

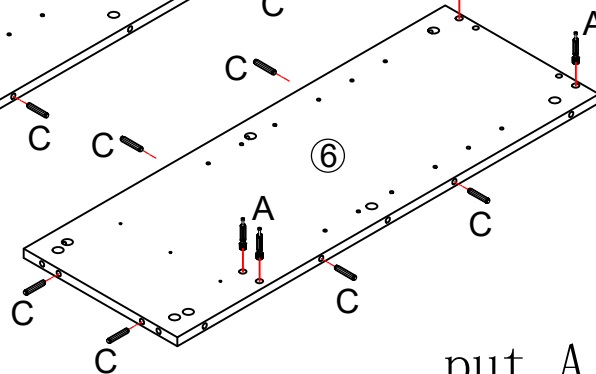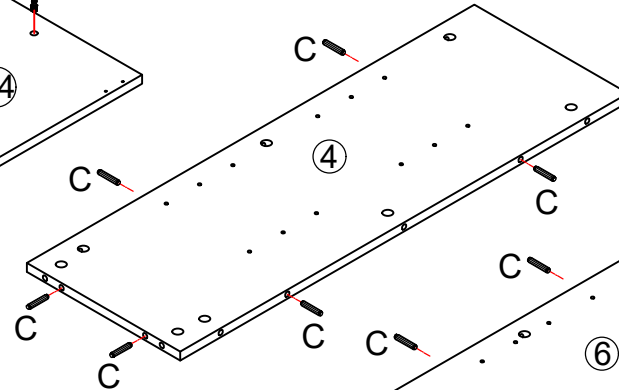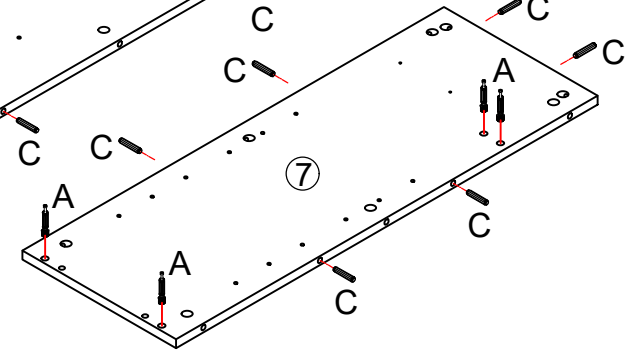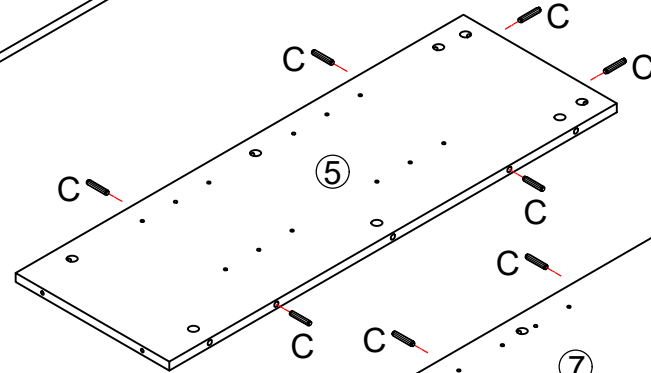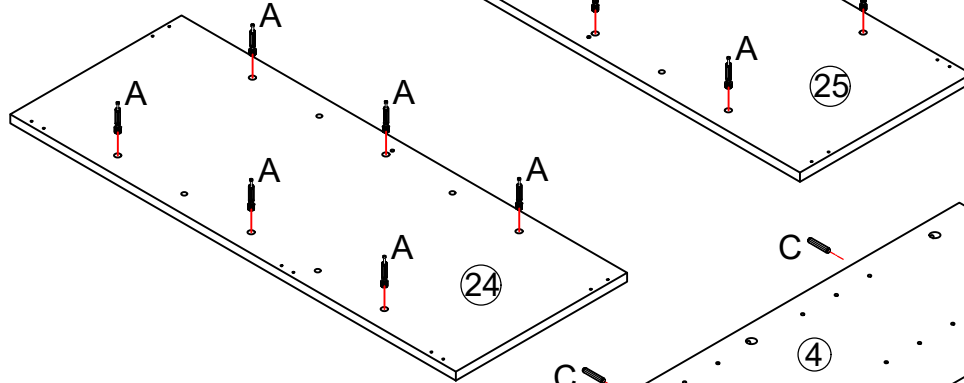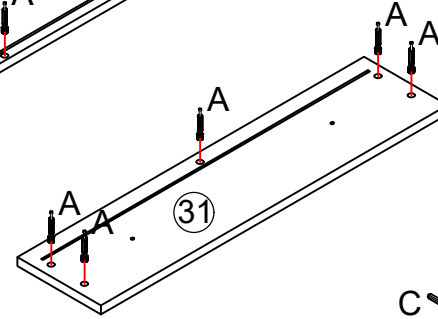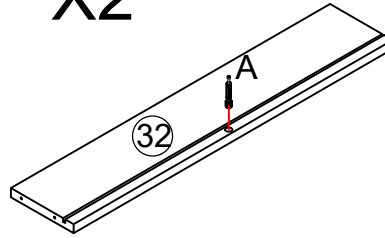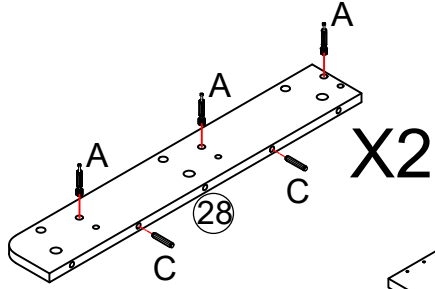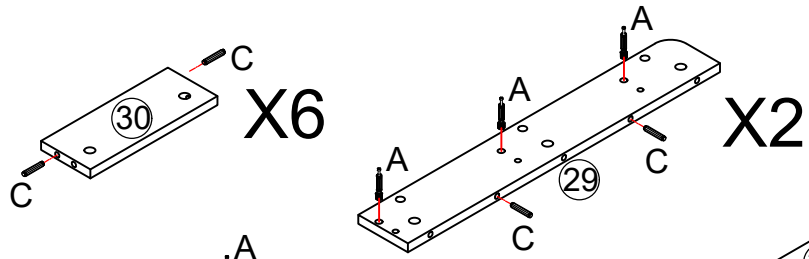

A*38




C*44

put A on board 6 7 24 25 28 29 31 32

put C on board 4 5 6 7 28 29 30

3


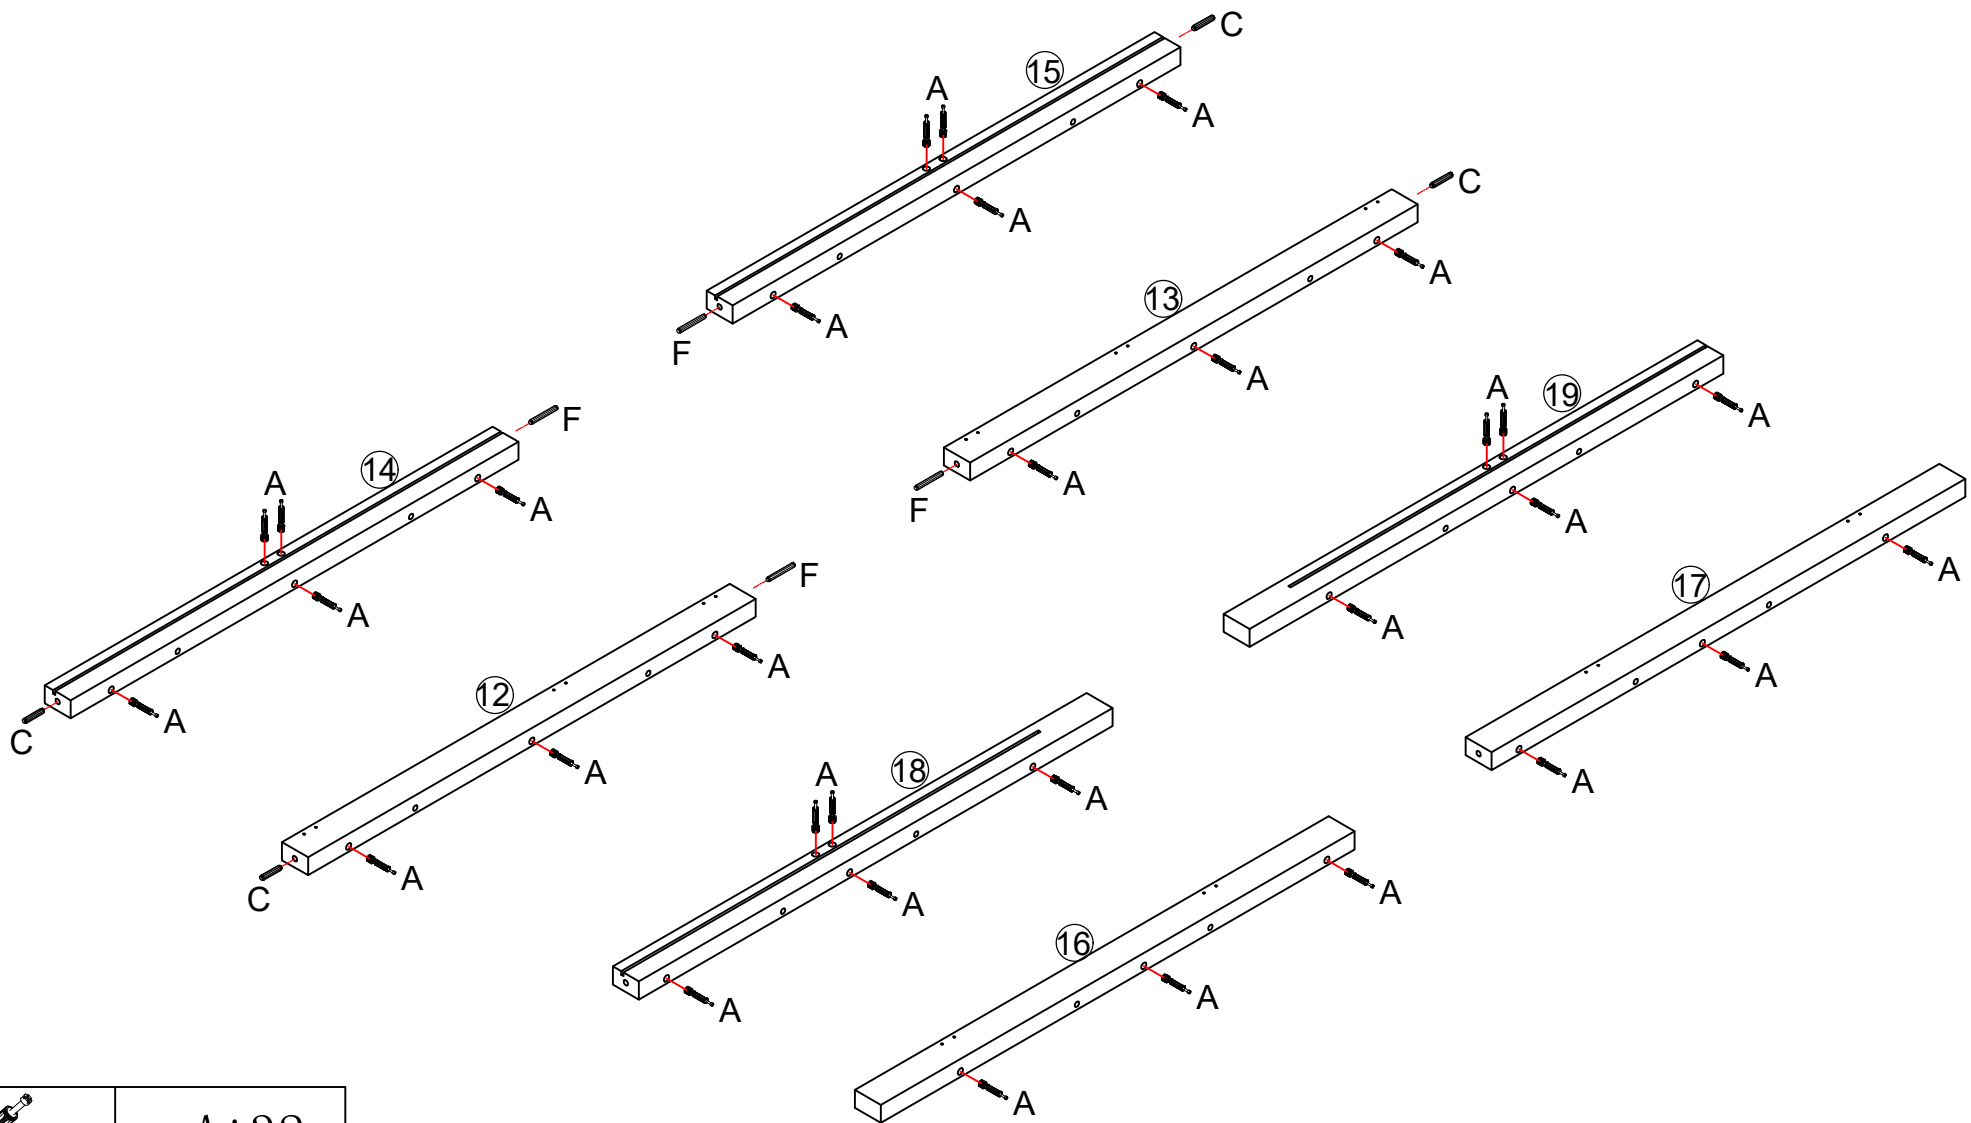


	A*32
	C*4
	F*4

put A on board 12 13 14 15 16 17 18 19
 put C on board 12 13 14 15
 put F on board 12 13 14 15









4

Make sure the arrow on the screw align to the hole on the side.

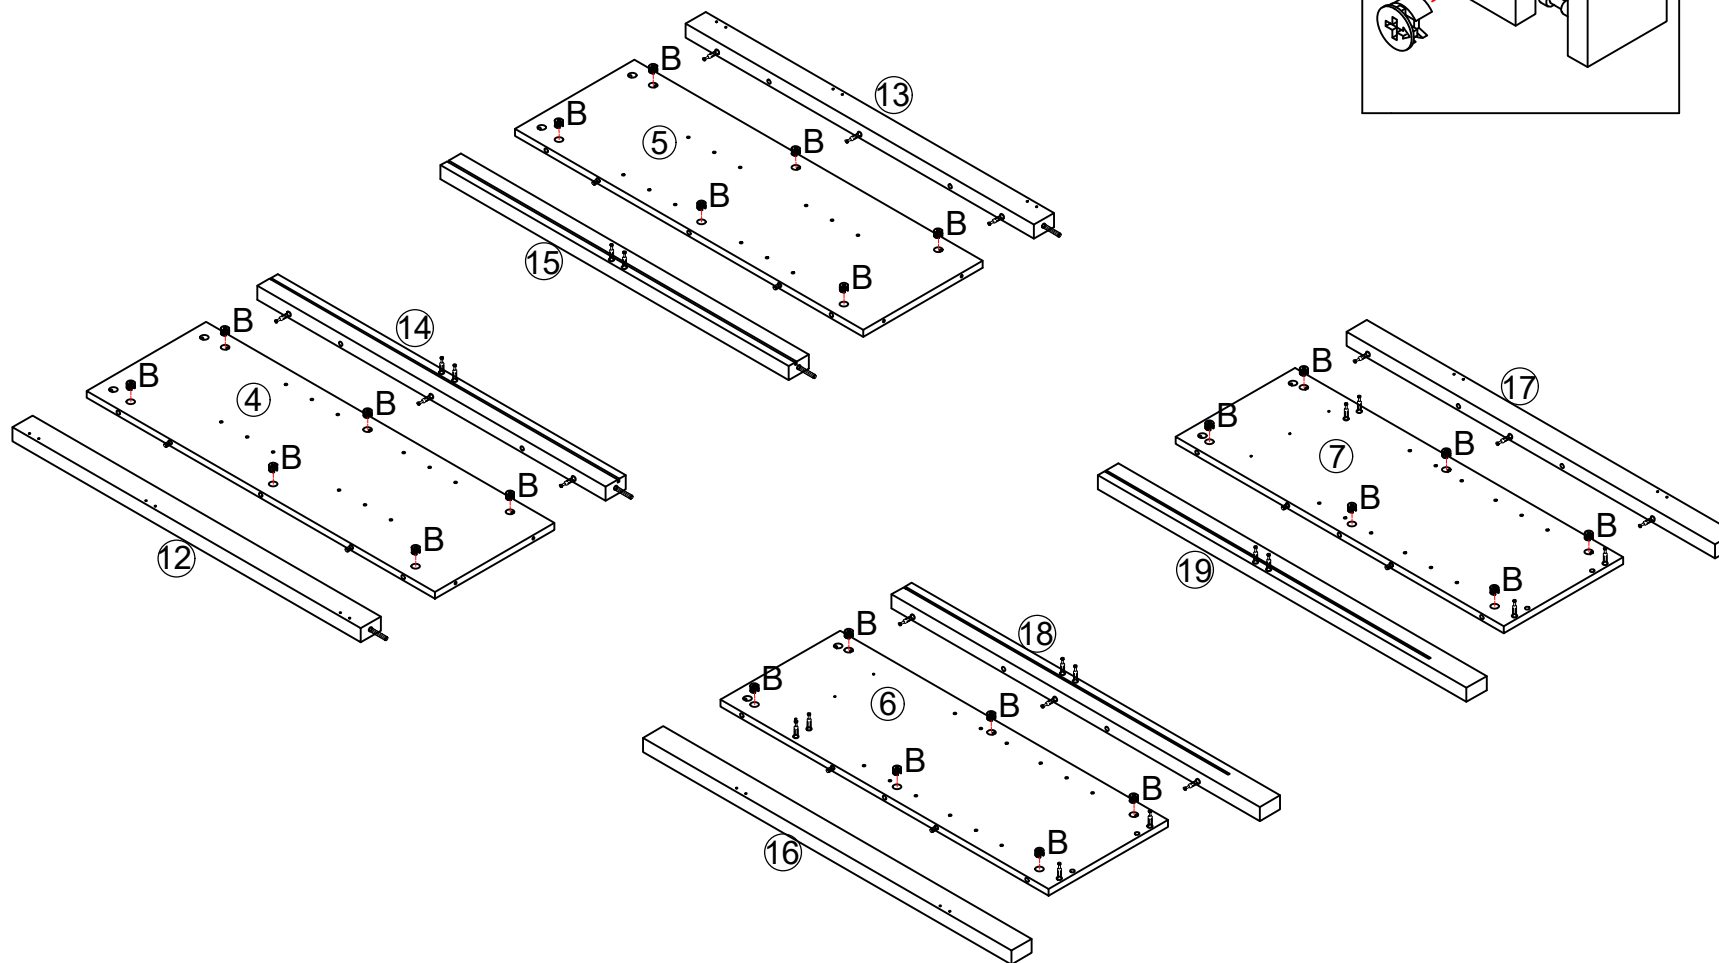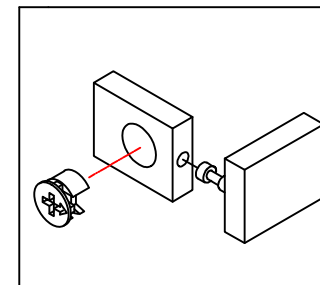


B*24

5

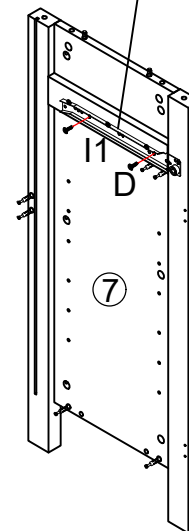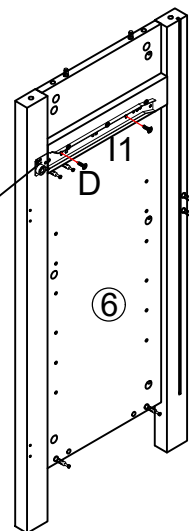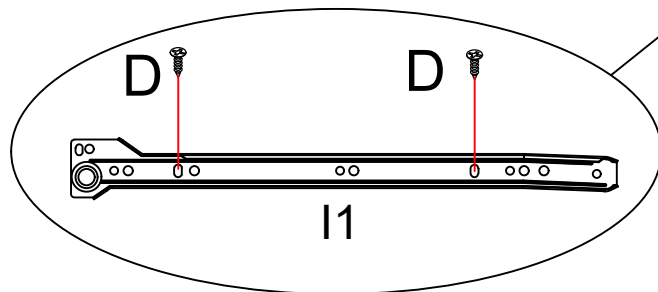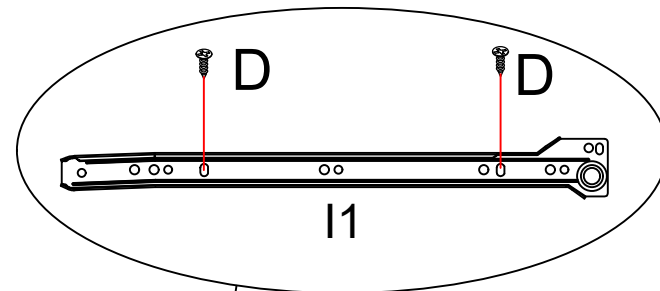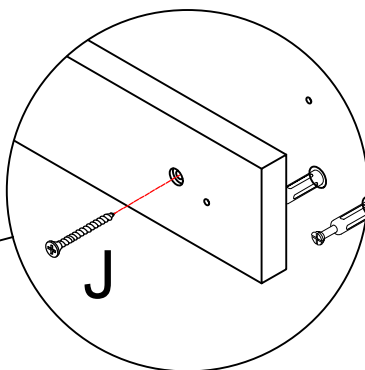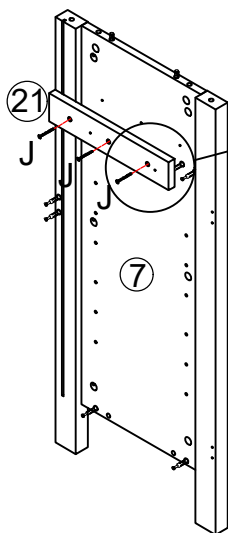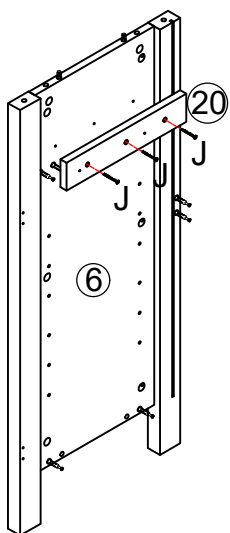

D*4







I1*1






J*6

6

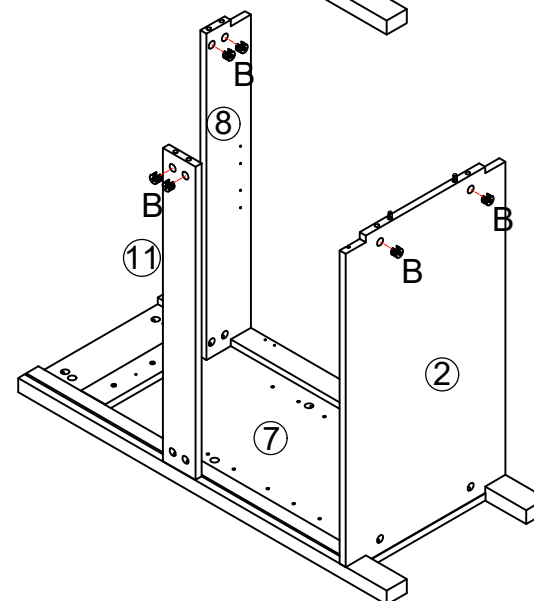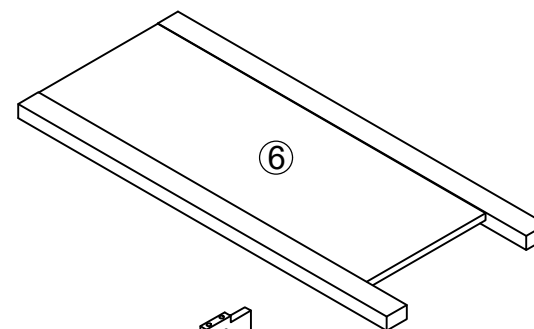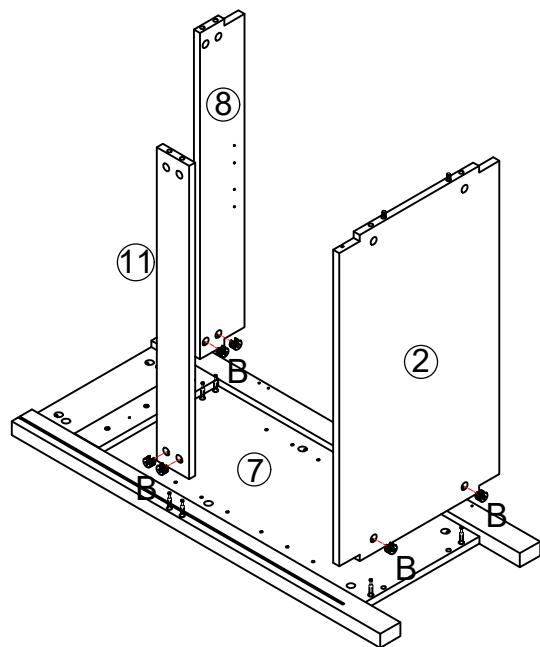




B*12

7

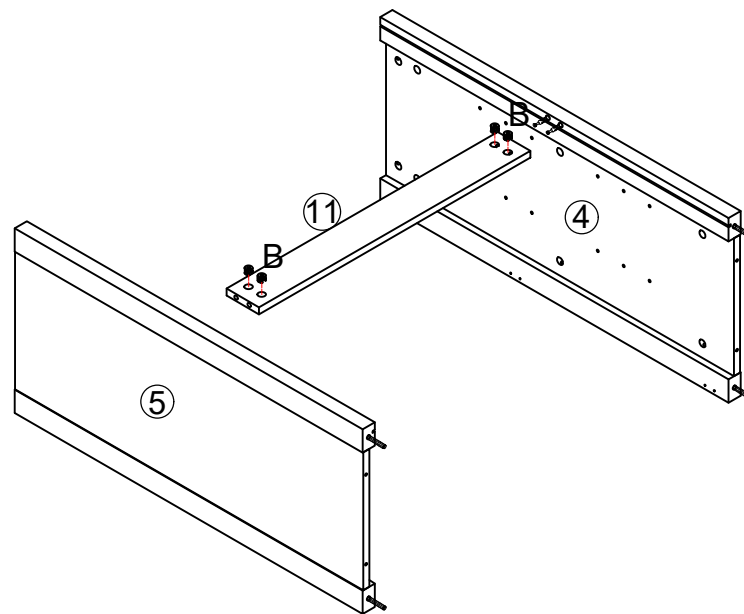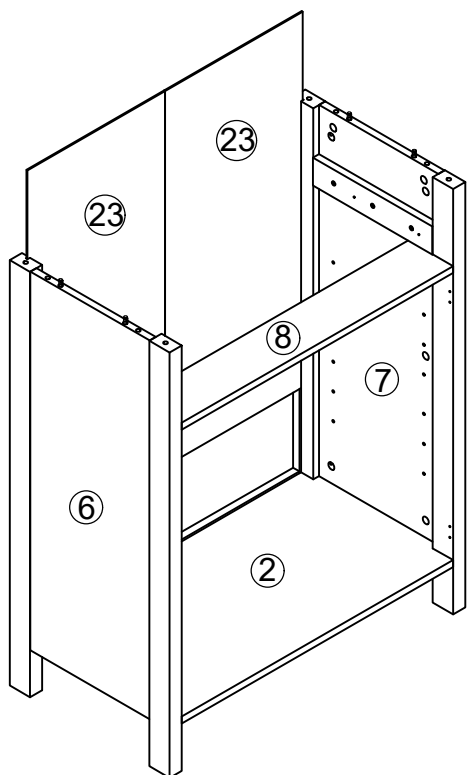


B*4

8

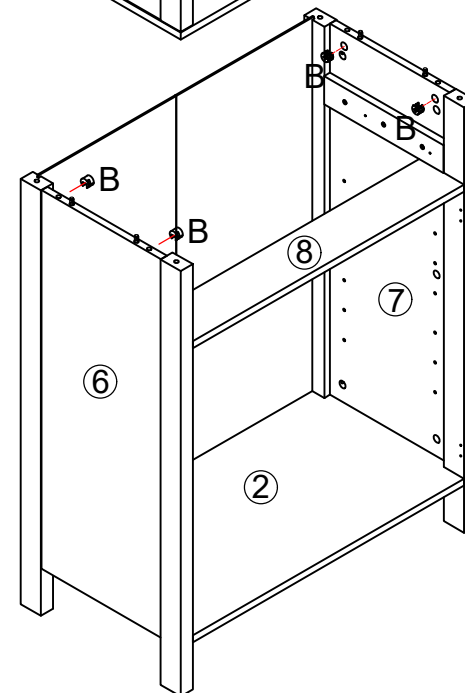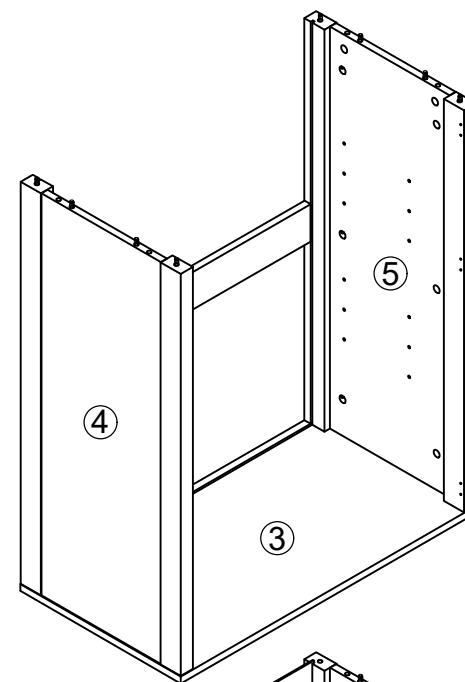
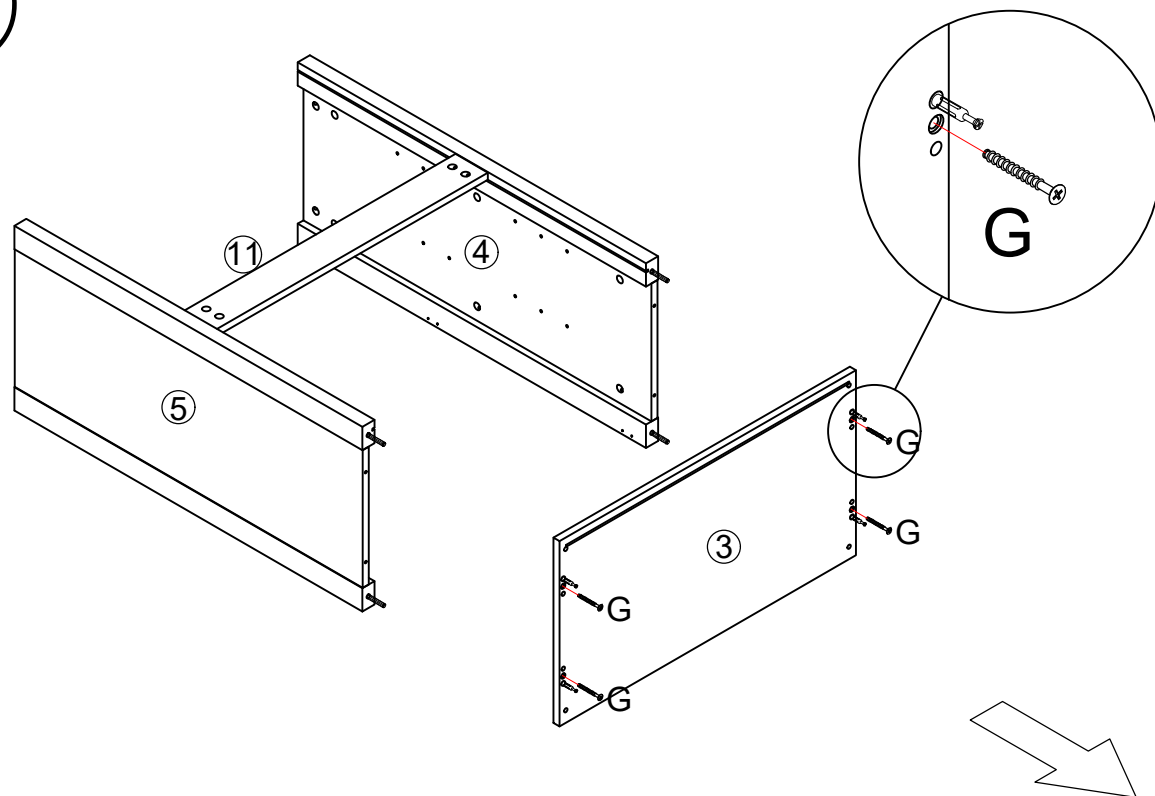


B*4



G*4

9


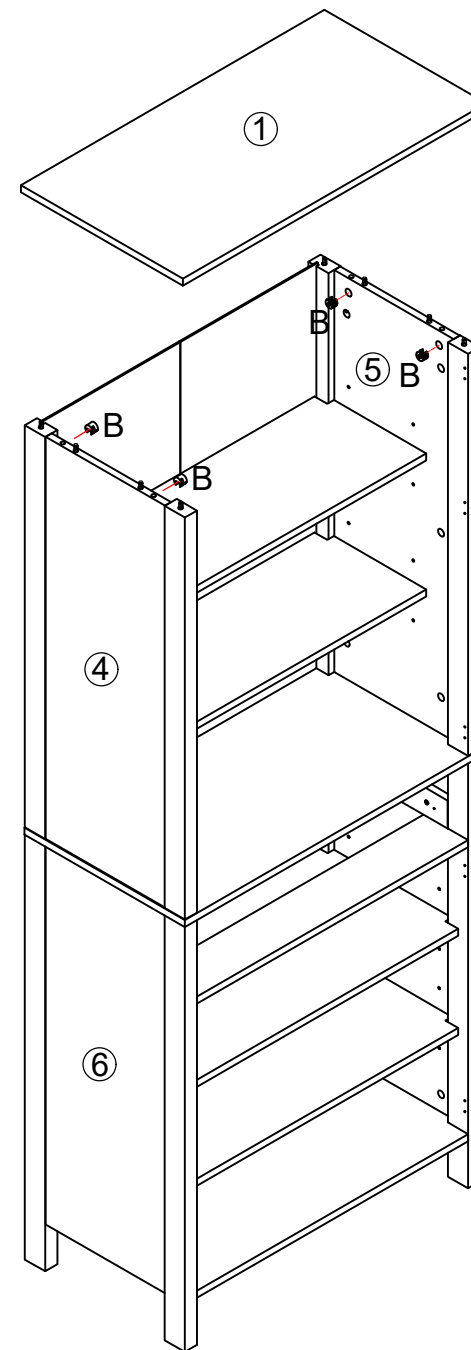
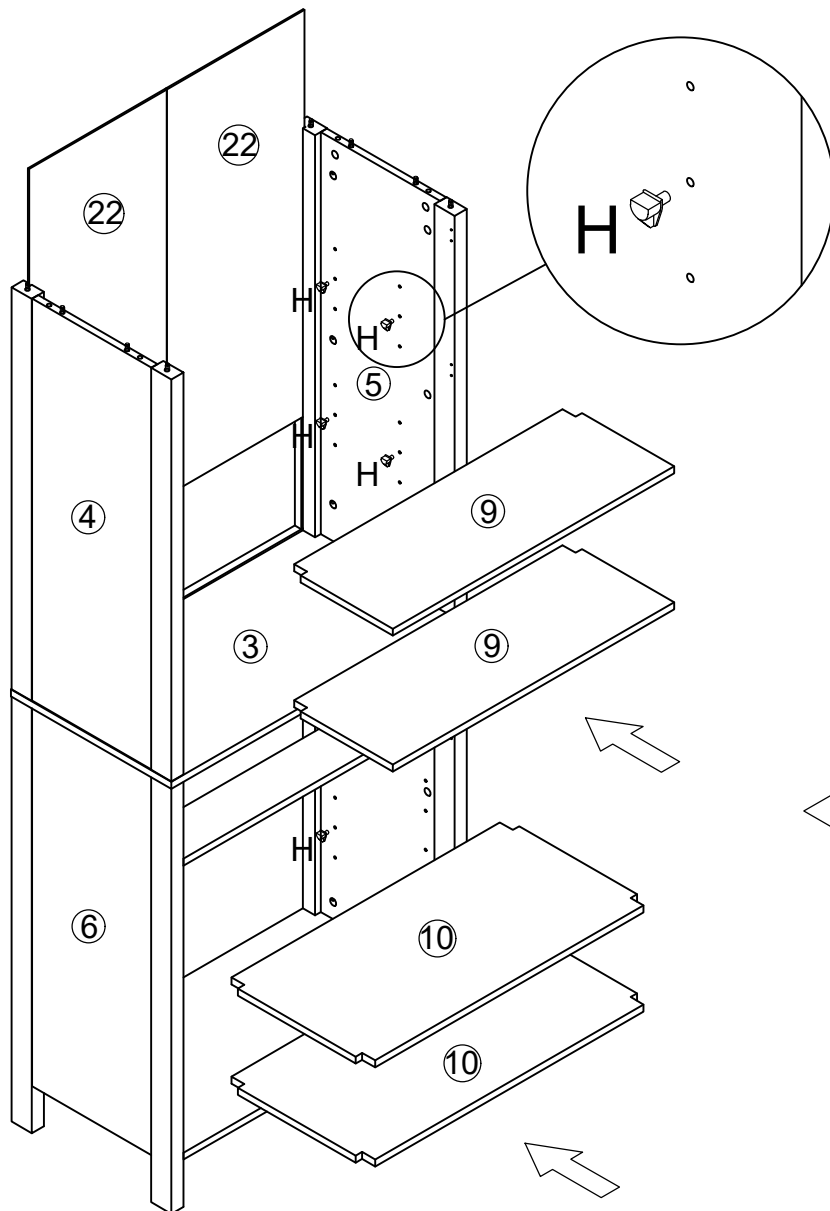


B*4



H*16

10

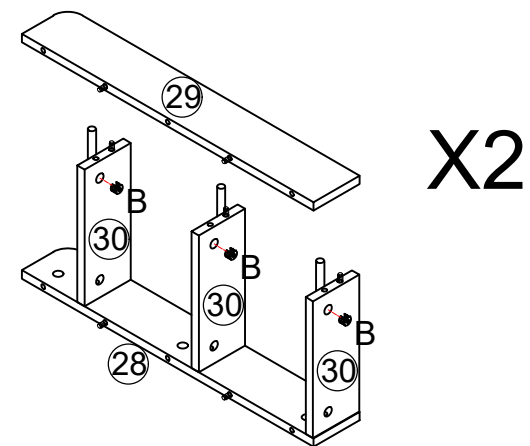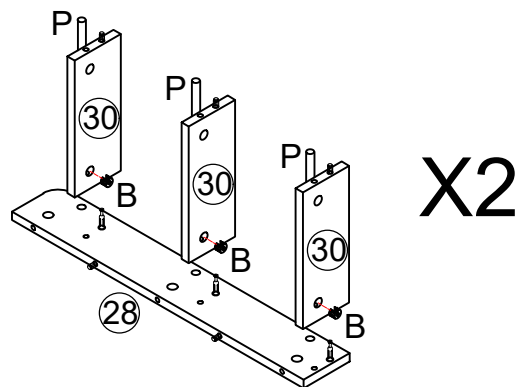


B*12



P*6

11

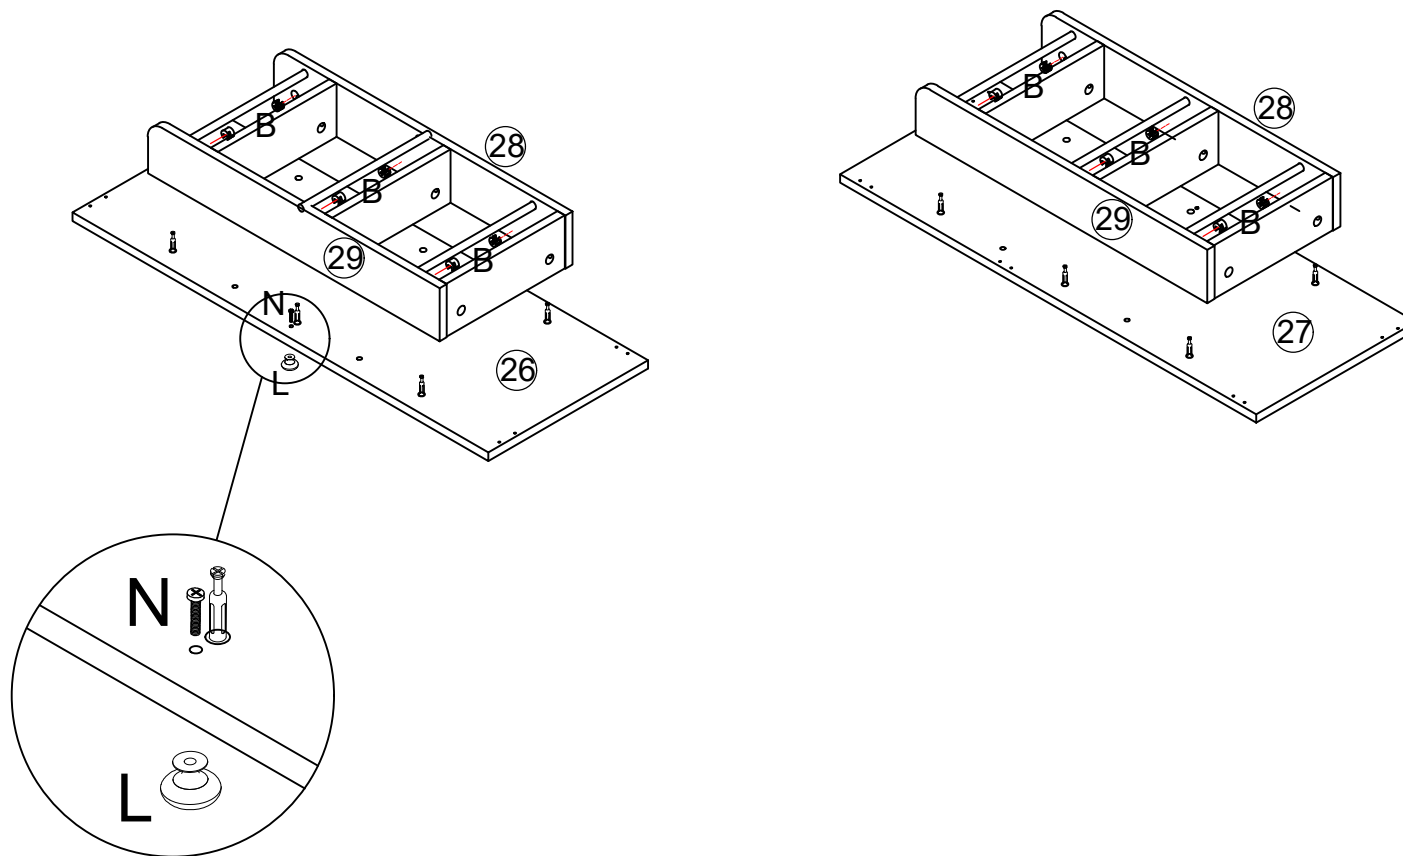

B*12




L*2



N*2

12

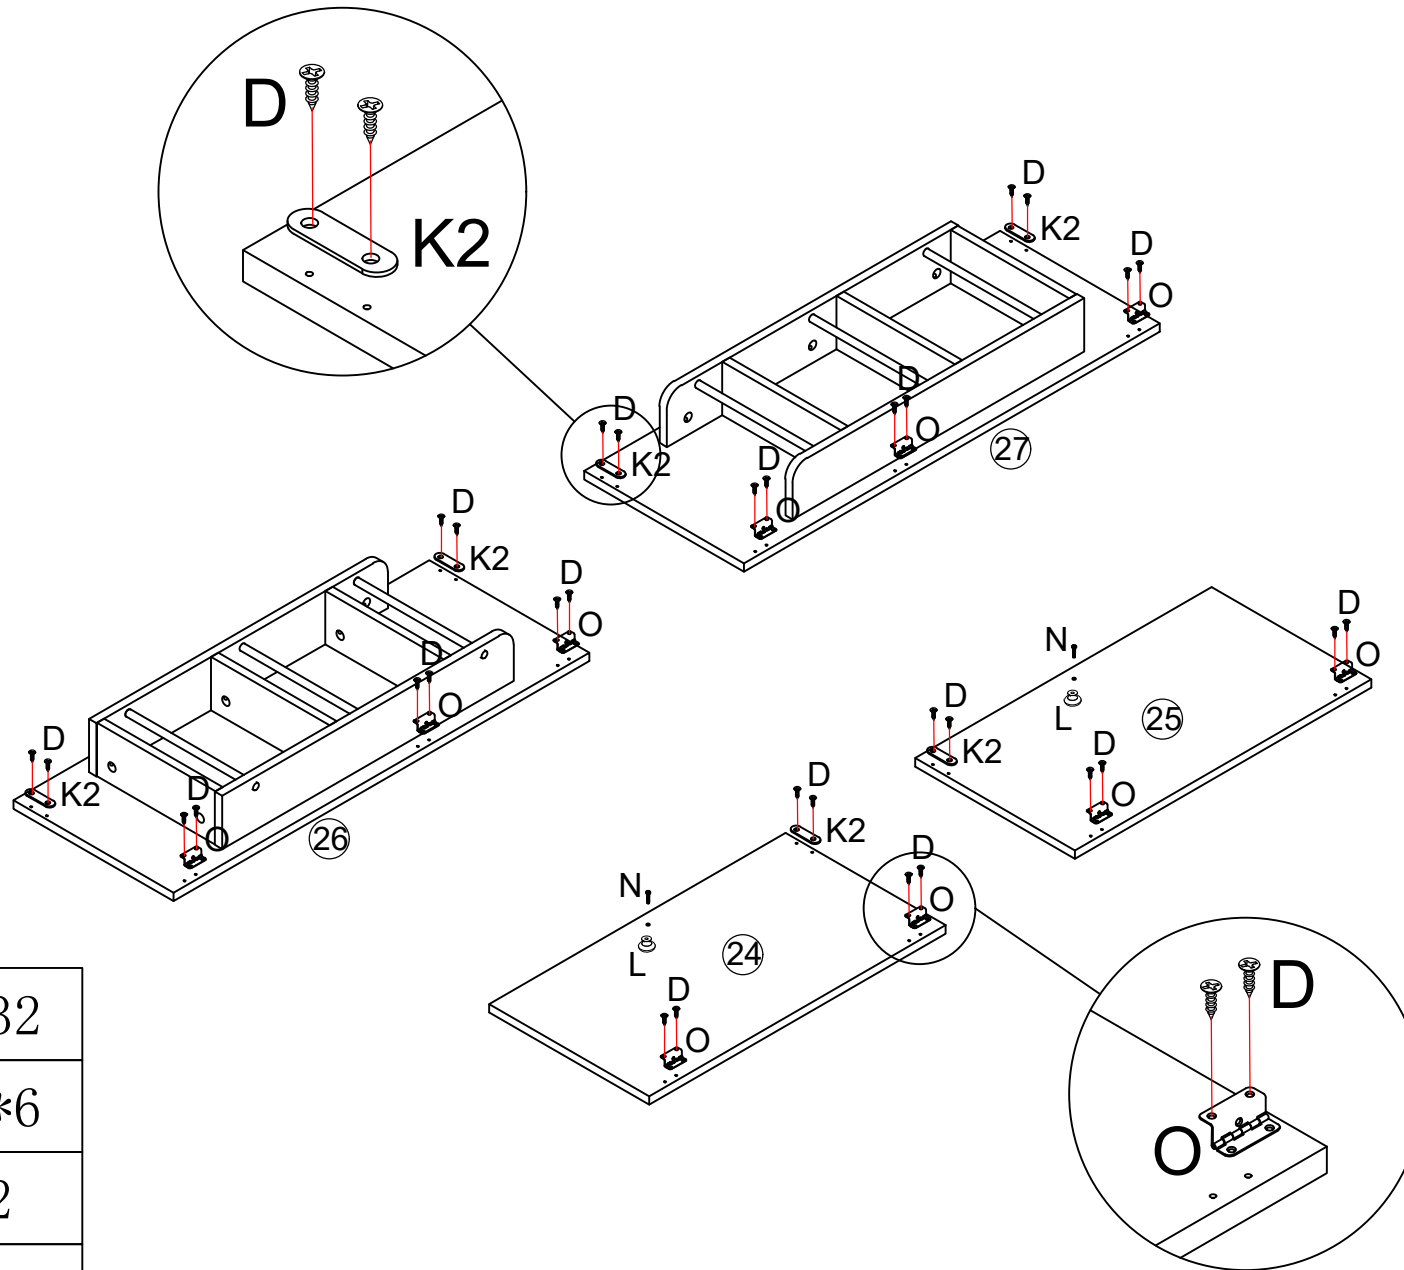

D*32



K2*6



L*2




N*2









O*10

13

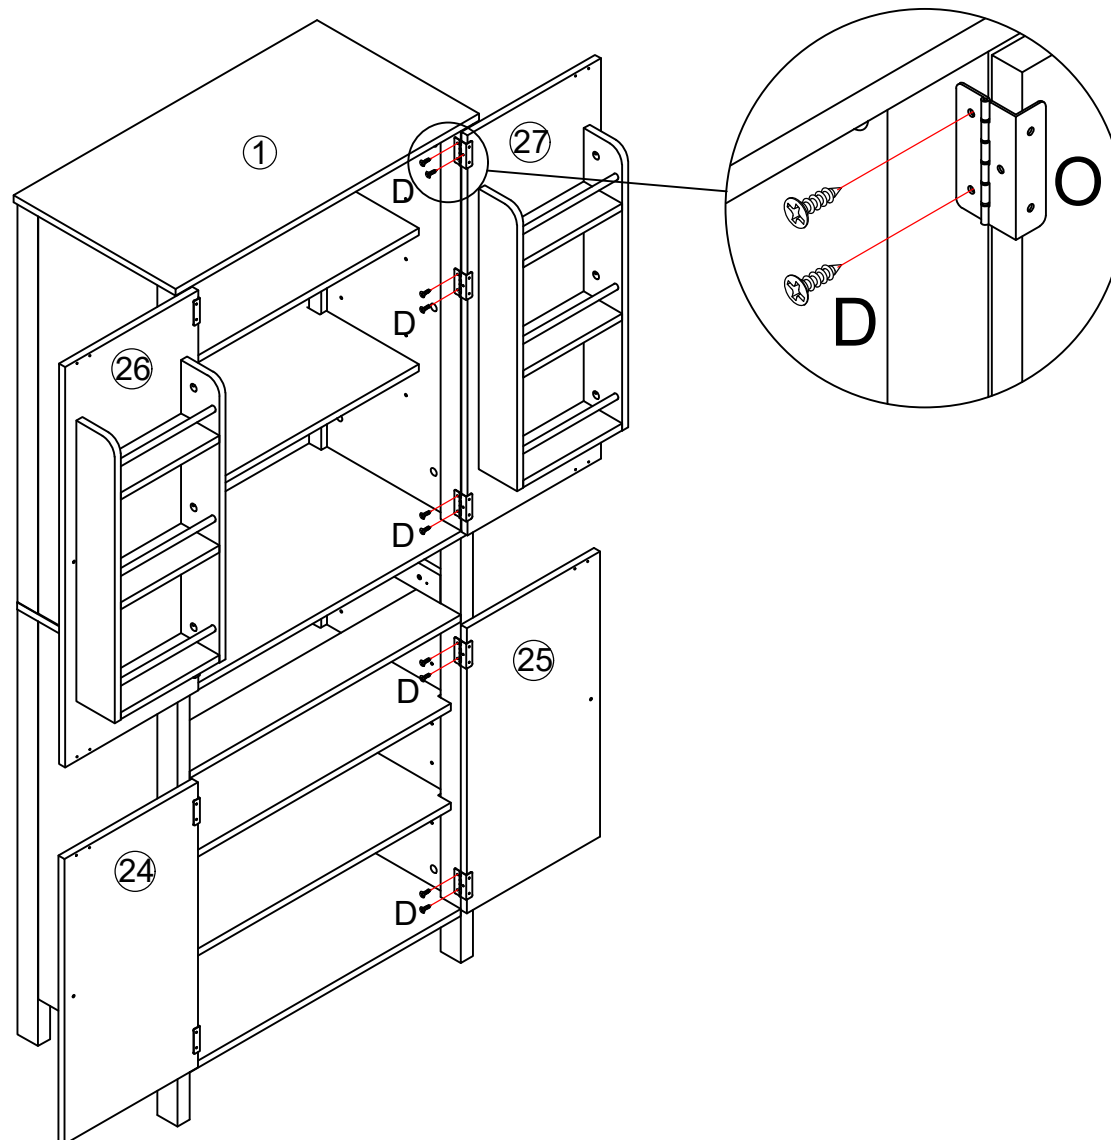

D*30


14

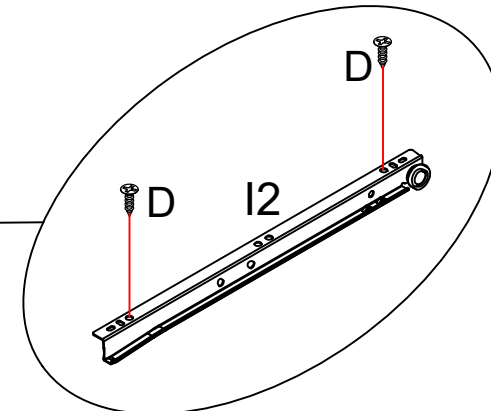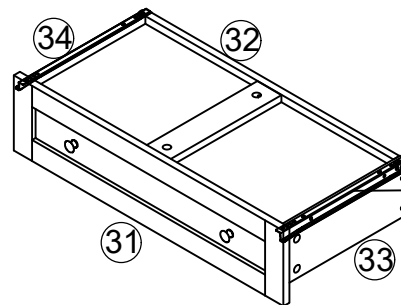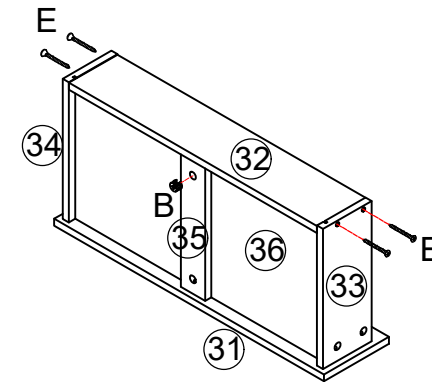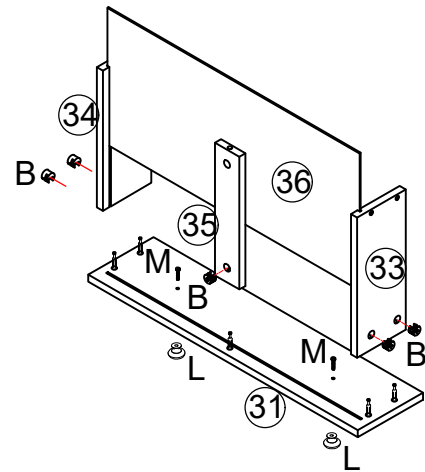


B*6



D*4



E*4



I2*1







L*2



M*2

15



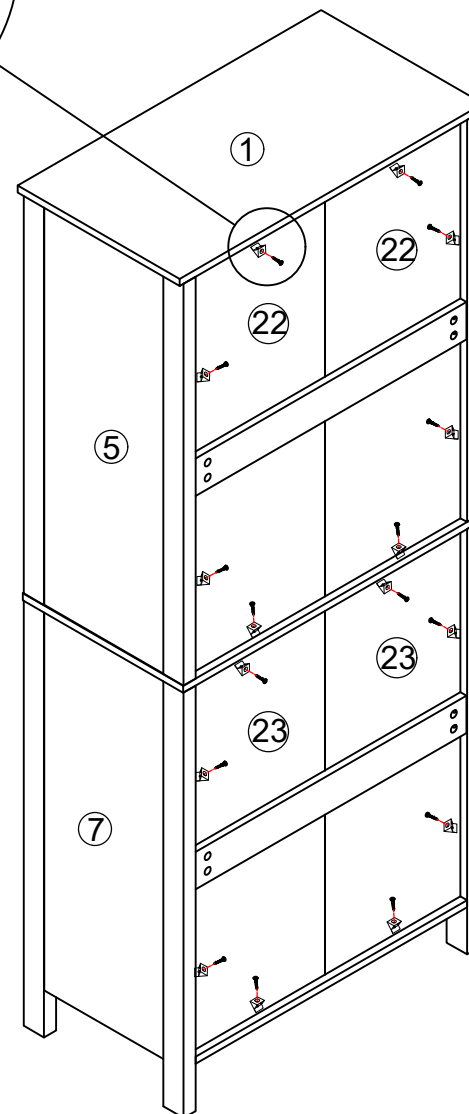

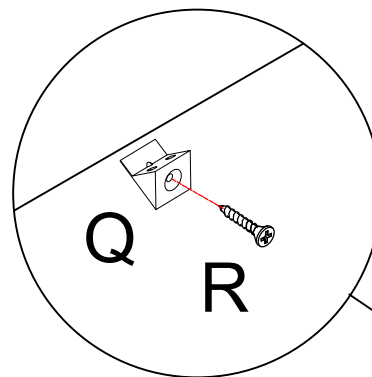
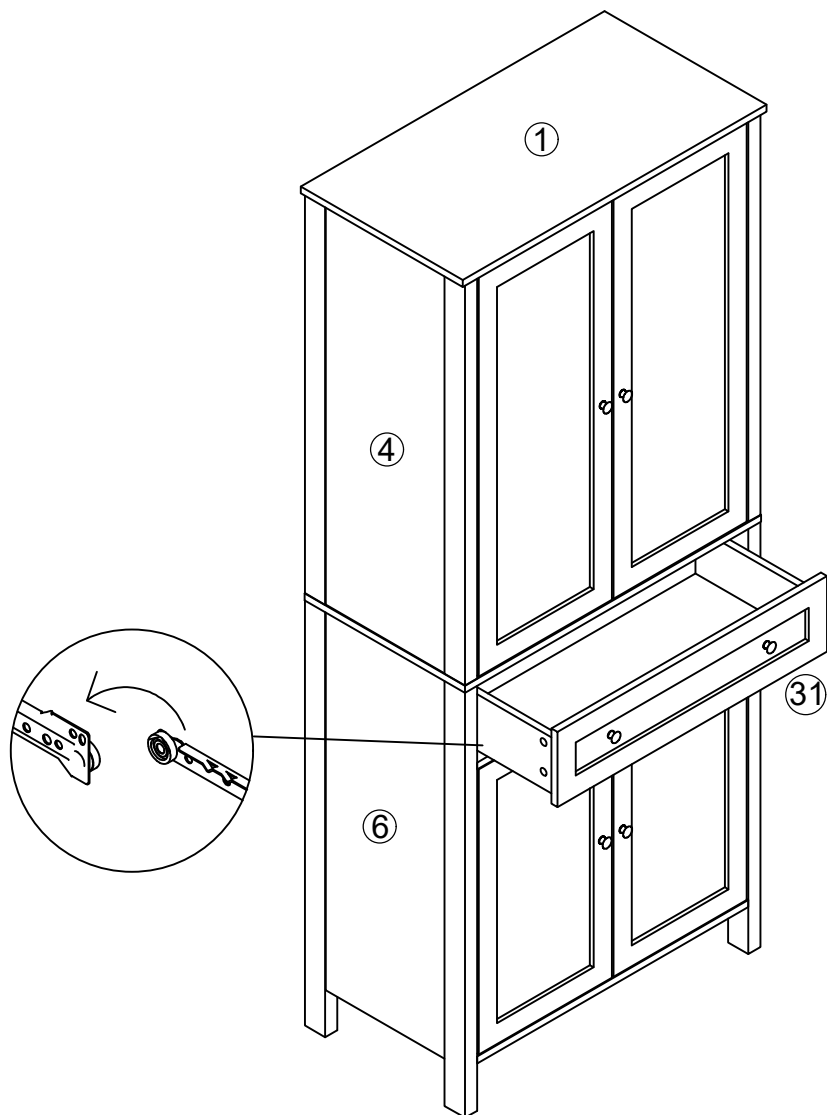


Q*16



R*16

16

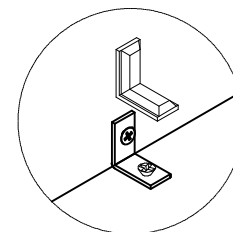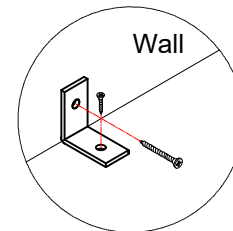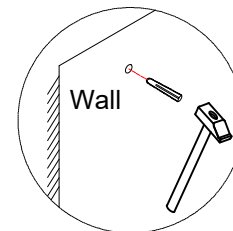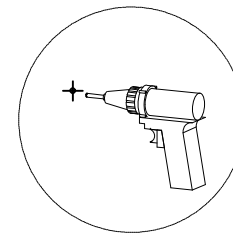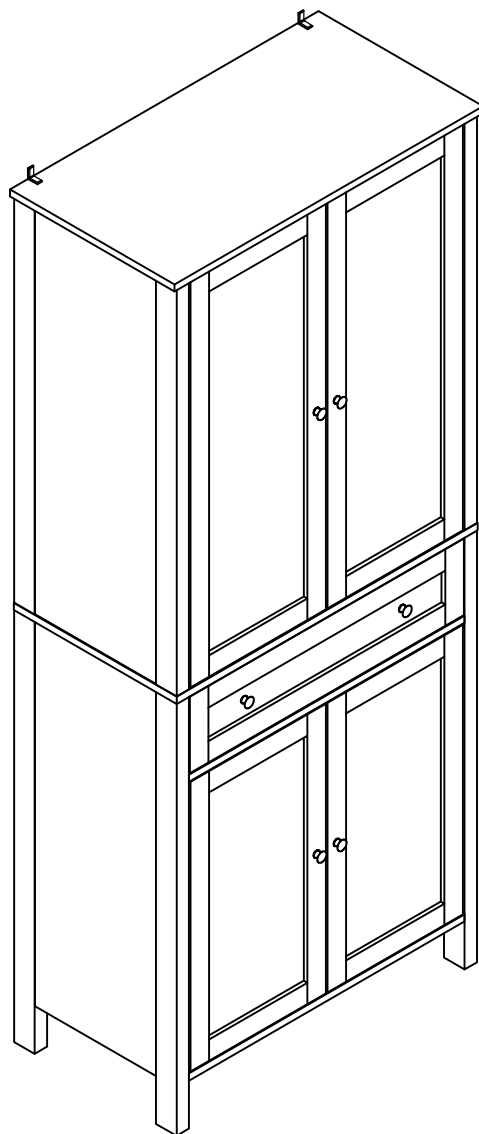

S*2

Please install tip-proof fitting.