

# **INSTALLATION INSTRUCTIONS:** WOOD POCKET DOOR FRAME

## **MATERIALS AND TOOLS:**

#### **Included Parts**

#### **Needed Materials**

#10 x 2" screws

• Finishing supplies

- Face jamb
- Top track
- Pre-assembled pocket frame
- Wheel hanger
- Adjusting bolt
- Lock nut
- Hanger bracket
- (4) 1-1/2" pan head screws
- Nylon guide
- Adjusting wrench

## **Needed Tools**

- Tape measure
- Utility knife
- Level (4' minimum recommended)
- Hammer
- Screw gun
- 3 pound maul

# **INSTRUCTIONS:**

1. Insert two (2) hangers into the track, ensuring the double wheels are alternated (4 wheels in each track leg)

2. Fasten the door hanger plates to the top of a door with the 1-1/4" pan head screws provided. Ensure that the side bolt engagement slots face in the same direction and the door hanger plate is centered within the door thickness.

3. Fasten the bumper to the edge of the door which enters the pocket, approximately midway up.

4. Hang the pocket end of the door first (edge with bumper affixed). Engage the end of the hanger bolt into the side slot of the door hanger plate fastened to the top of the door. Slide the door part way into the pocket, then repeat for the otherend. Close the clasp on each hanger plate and lock the hanger bolt into position. 1x Bumper



2x Hangers




## 2x Hanger Plates







5. Adjust both doors for height above the floor with the wrench provided.

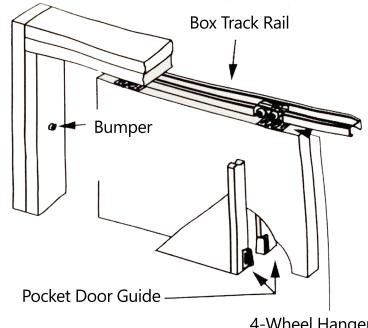

4-Wheel Hanger & Hanger Plate Support