Assembly Instructions

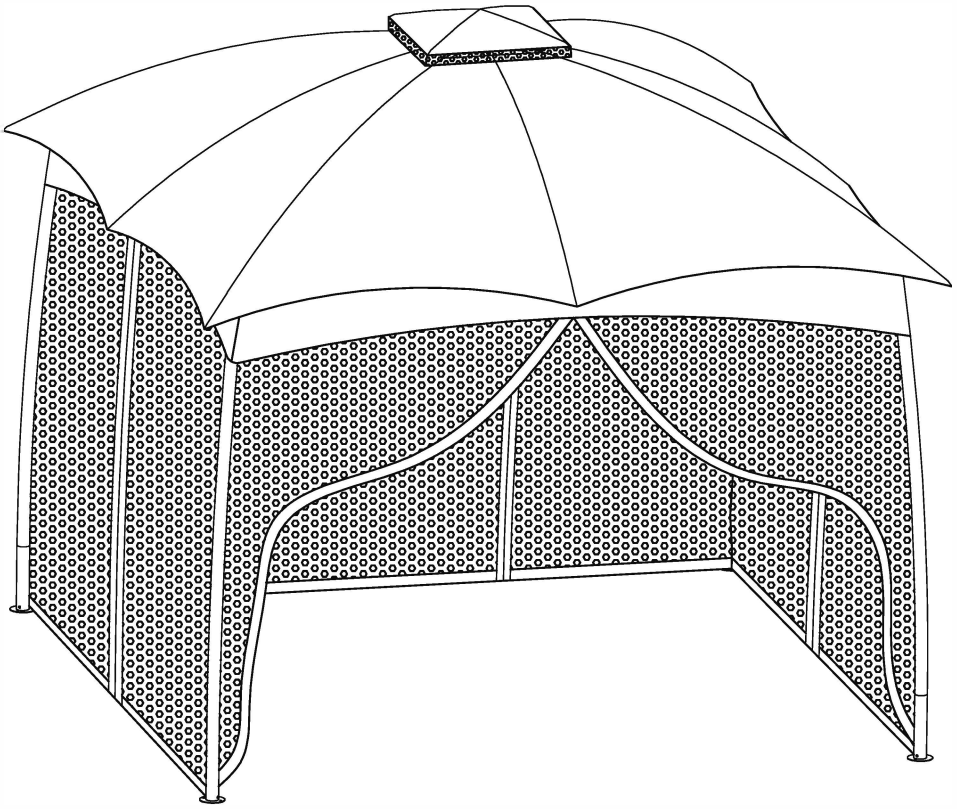

10 x 12 Ft Arc Top and Foot Gazebo with mosquito netting

WE HAVE YOU IN MIND, LET US SERVE YOU!

Safety Information

Two people are required for this assembly.
Some parts may contain sharp edges.
Wear protective gloves.
When assembling and using this product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to equipment.
Please read all instructions before assembly and usage.

CAUTION: Do not climb on top of the gazebo. Falling off the gazebo can result in serious injury.

NOTICE: For outdoor use

DANGER: This unit is heavy! Do not assemble this item alone

WARNING: Do not leave the gazebo where there is a risk of high wind, as possible damage will occur to the structure.

WARNING: Keep all flame and heat sources away from this gazebo fabric. This Gazebo is made with fabric that meets CPAI-84 specifications for flame resistance. It is not fire proof. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the gazebo fabric may render the flame-resistant properties ineffective.

Parts Name	Item No.	Parts Images	Qty.
Upper Post	A1		4
Lower Post	A2		4
Short Beam C1	C1		2
Short Beam C2	C2		2
Long Beam	D1		4
Middle Beam	D3		2
Upper Long Middle Top Bar	H1		2
Lower Long Middle Top Bar	H2		2
Upper Short Middle Top Bar	I1		2
Lower Short Middle Top Bar	I2		2
Upper Top Slant Bar	G1		4
Lower Top Slant Bar	G2		4
Top Connector	J		1

Parts Name	Item No.	Parts Images	Qty.
Side Curtain Bar	E1		4
Middle Curtain Bar	E2		2
Long Extension Tube	K1		4
Short Extension Tube	K2		4
Big Canopy	01		1
Small Canopy	02		1
Mosquito Netting	P1		4
Screws DD	DD		32
Stake	II		8
Wrench	JJ		1
Ring	LL		44
Hook	N		1
Sandbags			4

Hammer not included

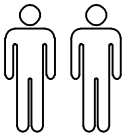

Two person

①

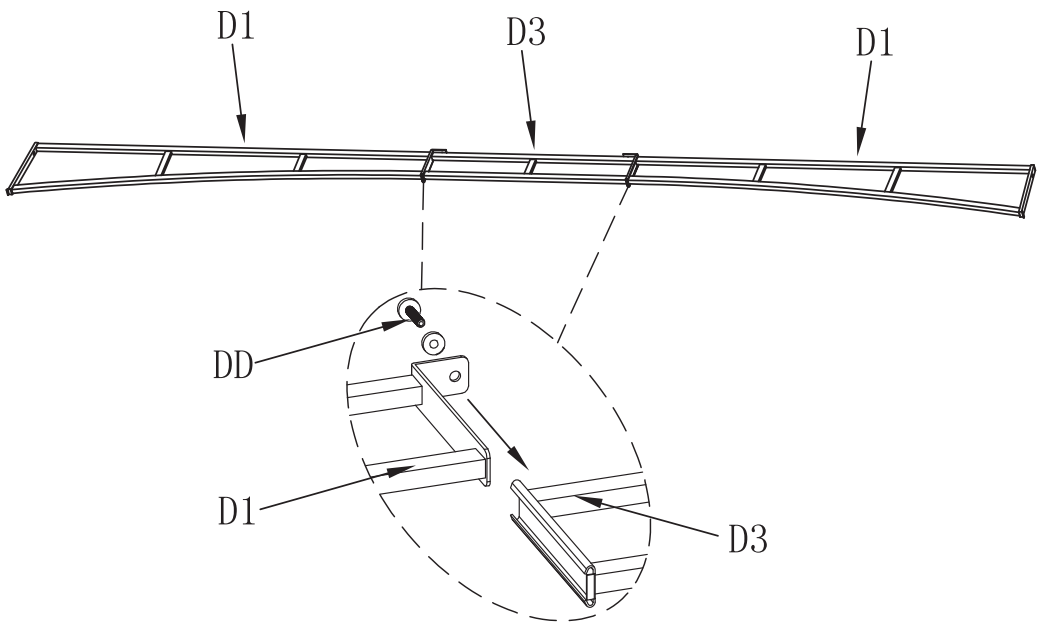

Please find 2 PCS of D1 and assemble them into each end of D3 by using Screws DD.

This will be the Beam. We have to prepare 2 sets of beams first.

②

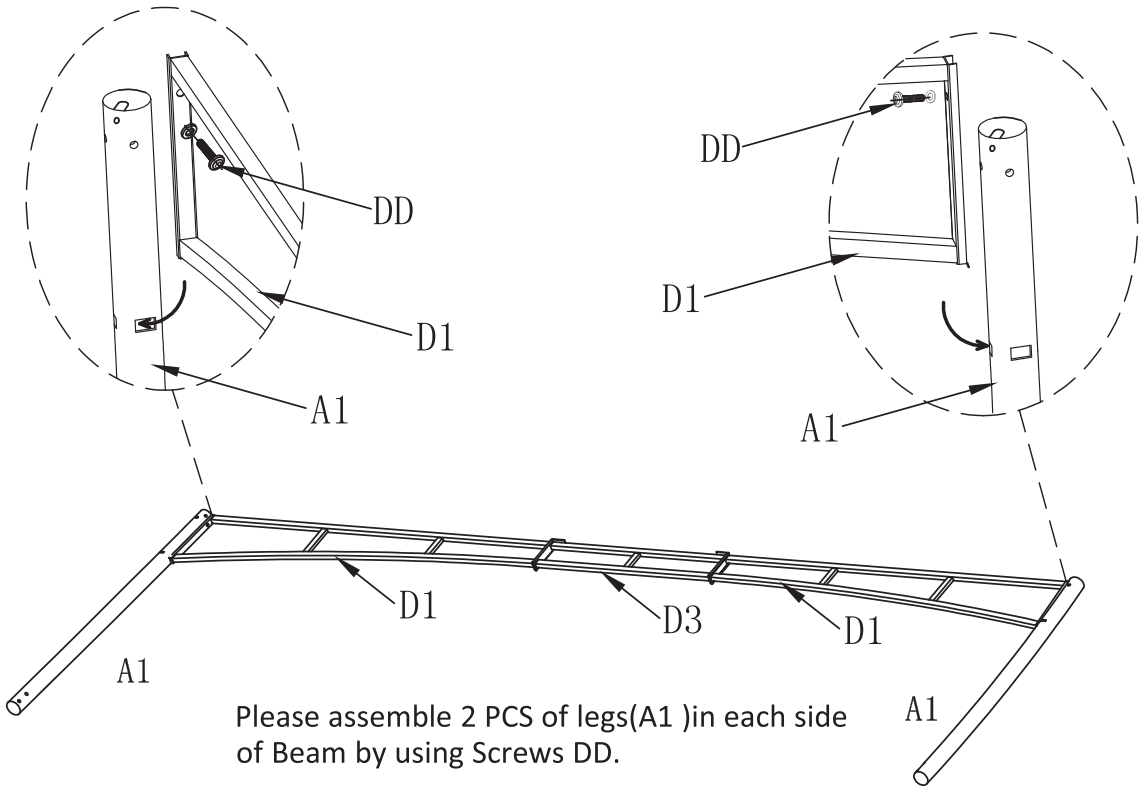

Please assemble 2 PCS of legs(A1)in each side of Beam by using Screws DD.

We need to prepare 2 sets of this part.

③

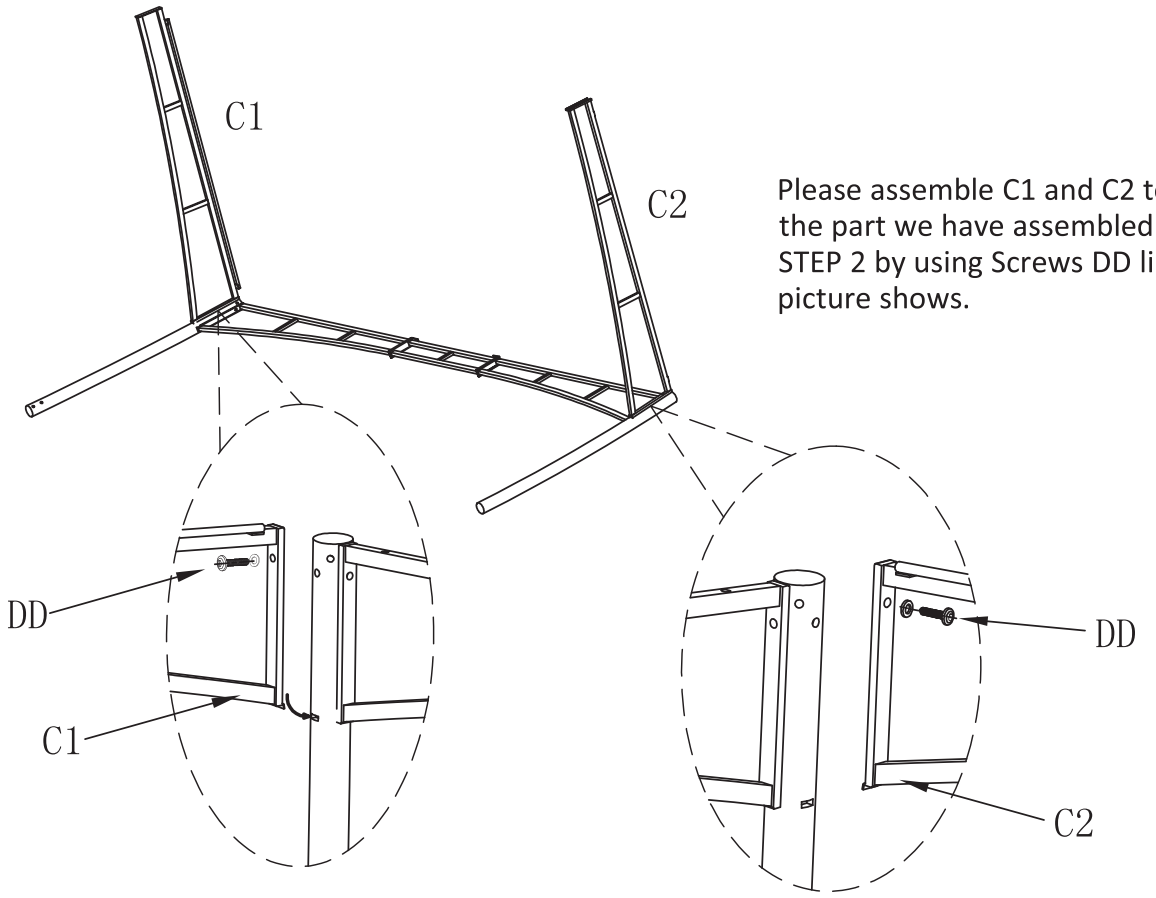

Please assemble C1 and C2 to the part we have assembled in STEP 2 by using Screws DD like picture shows.

④

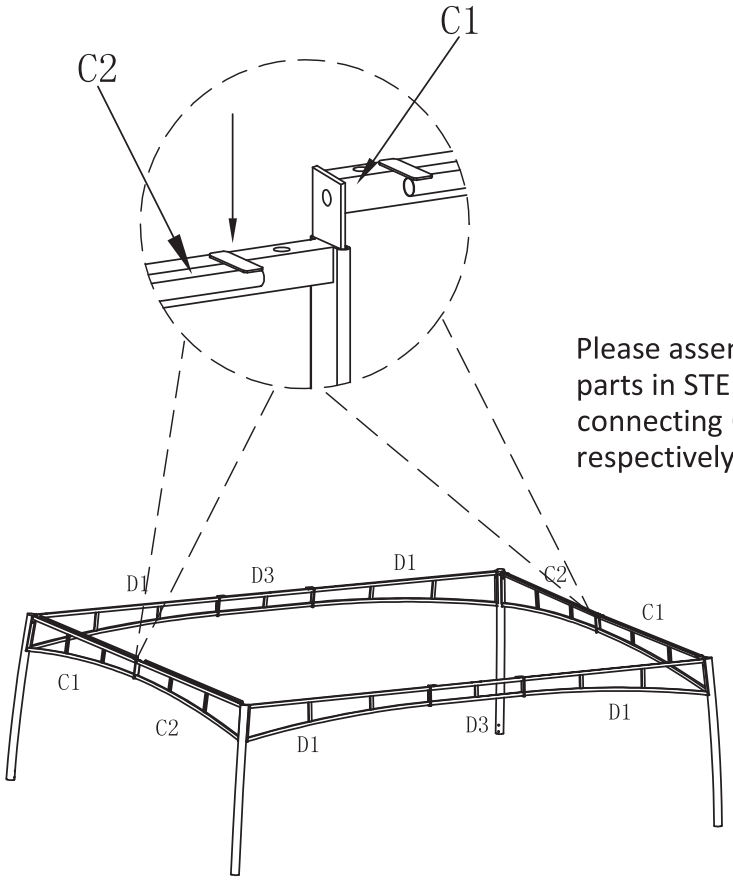

Please assemble those 2 parts in STEP 3 together by connecting C1 and C2 respectively.

5

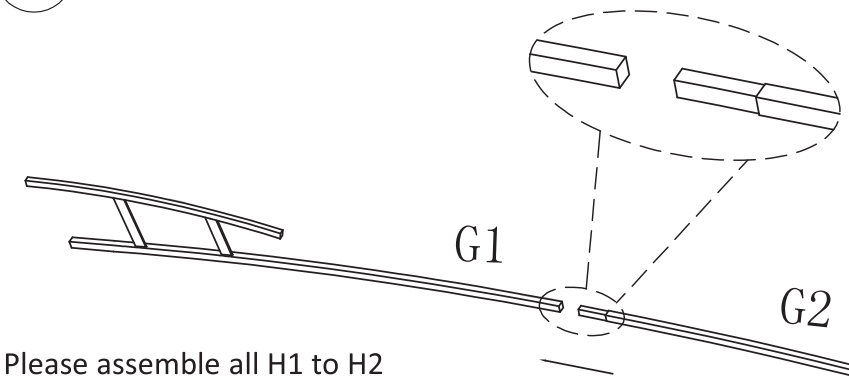

Please assemble all G1 to G2 together.
Make sure the small pole of G1 is upward.

Please assemble all H1 to H2 together.

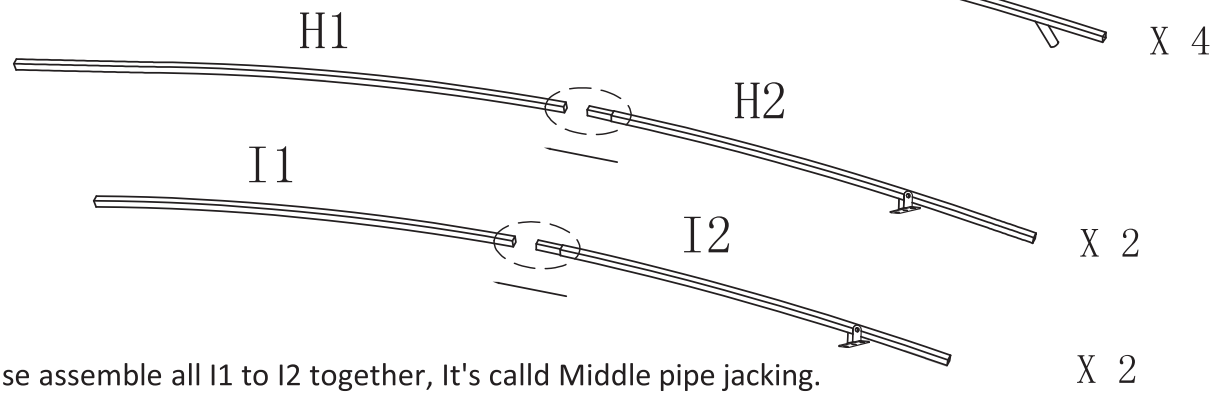

Please assemble all I1 to I2 together, It's calld Middle pipe jacking. X 2

6

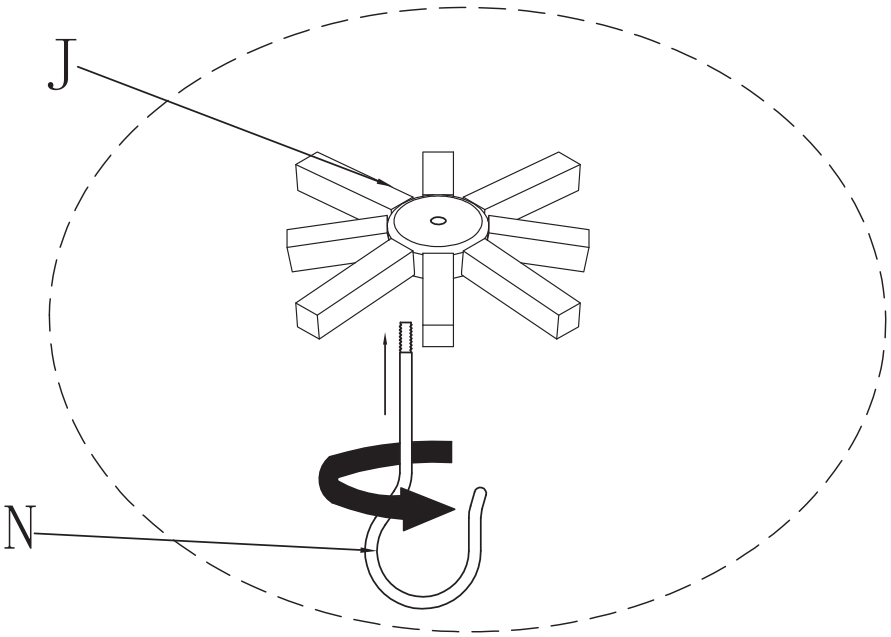

Connecting the Hook(N) to the Top Connector(J).

Attention: the Hook(N)should be under the Top Connector(J).

7

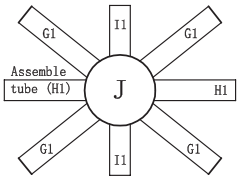

Compare this drawing
to assemble the pipe

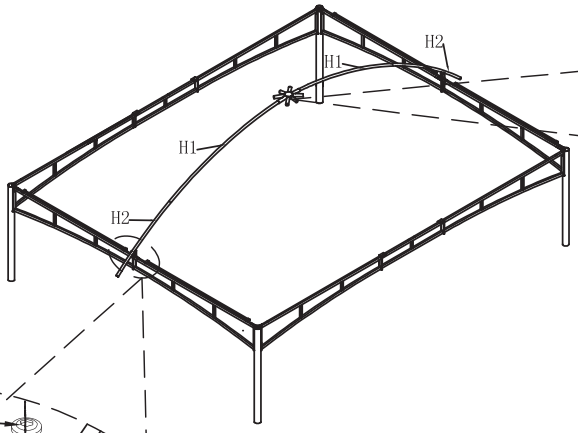

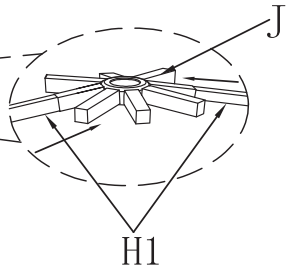

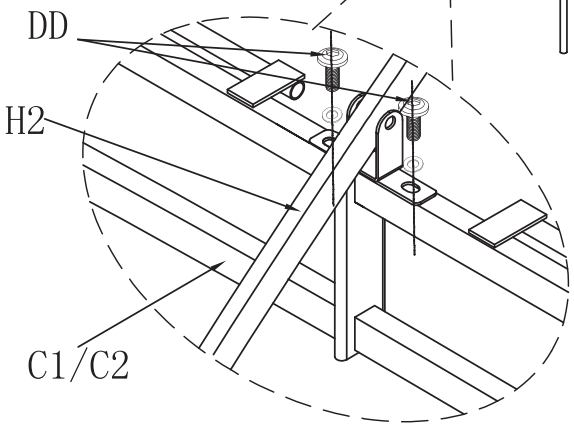

Please find the top tube we assembled in STEP 5(H1/H2).
And assemble this part into the Top Connector(J) with the end of H1.

Assemble this part into the Beam(C1/C2) with the end of H2 by using Screws DD.

8

Now we have to assemble I1/I2 which we have made in STEP 5 into the J with the side of I1.

And assemble it to Beam(D3) with the side of I2 by using Screws DD.

Please note to assemble the part E1/E2/E3 together. This is the Slider for mosquito netting. And assemble it together by using Screws DD.

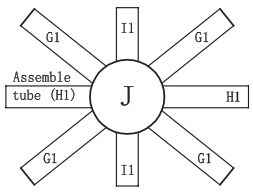

Compare this drawing
to assemble the pipe

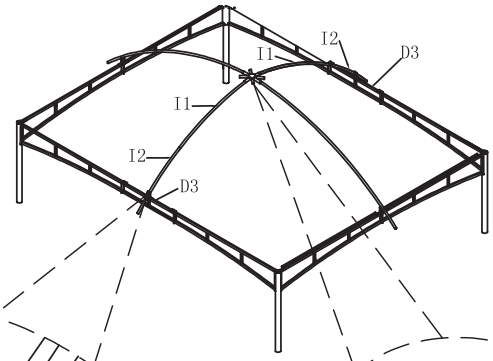

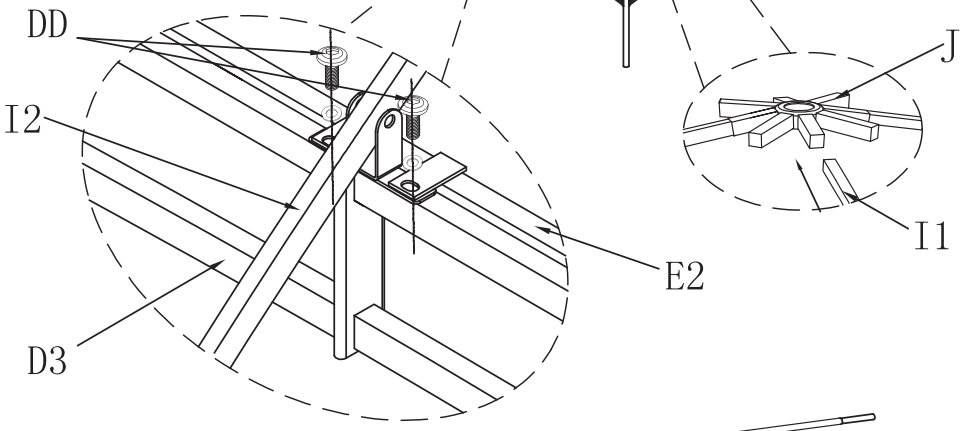

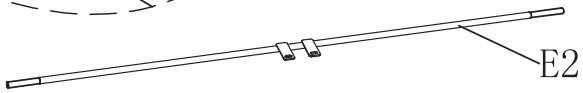

9

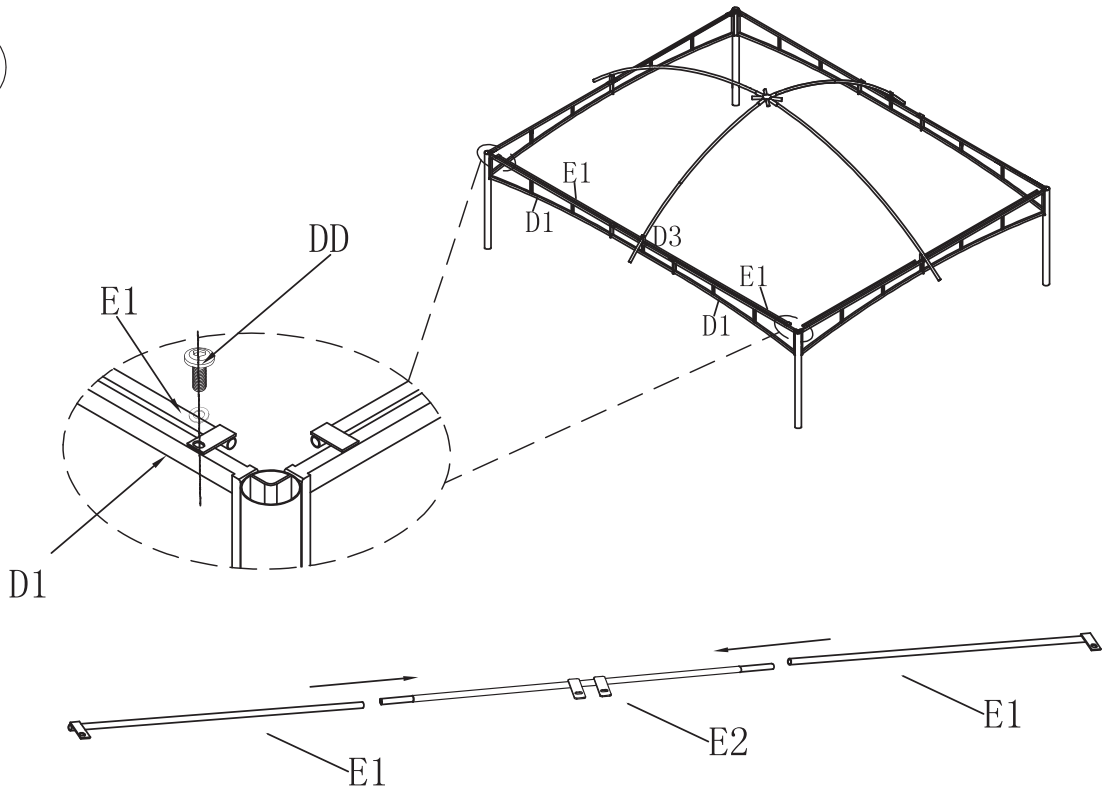

Please also connect each end (E1) of Slider to D1 by using Screws DD.

10

Please assemble G1 to J part, and please also put the small pole on the G2 into leg(A1) part as picture shows.

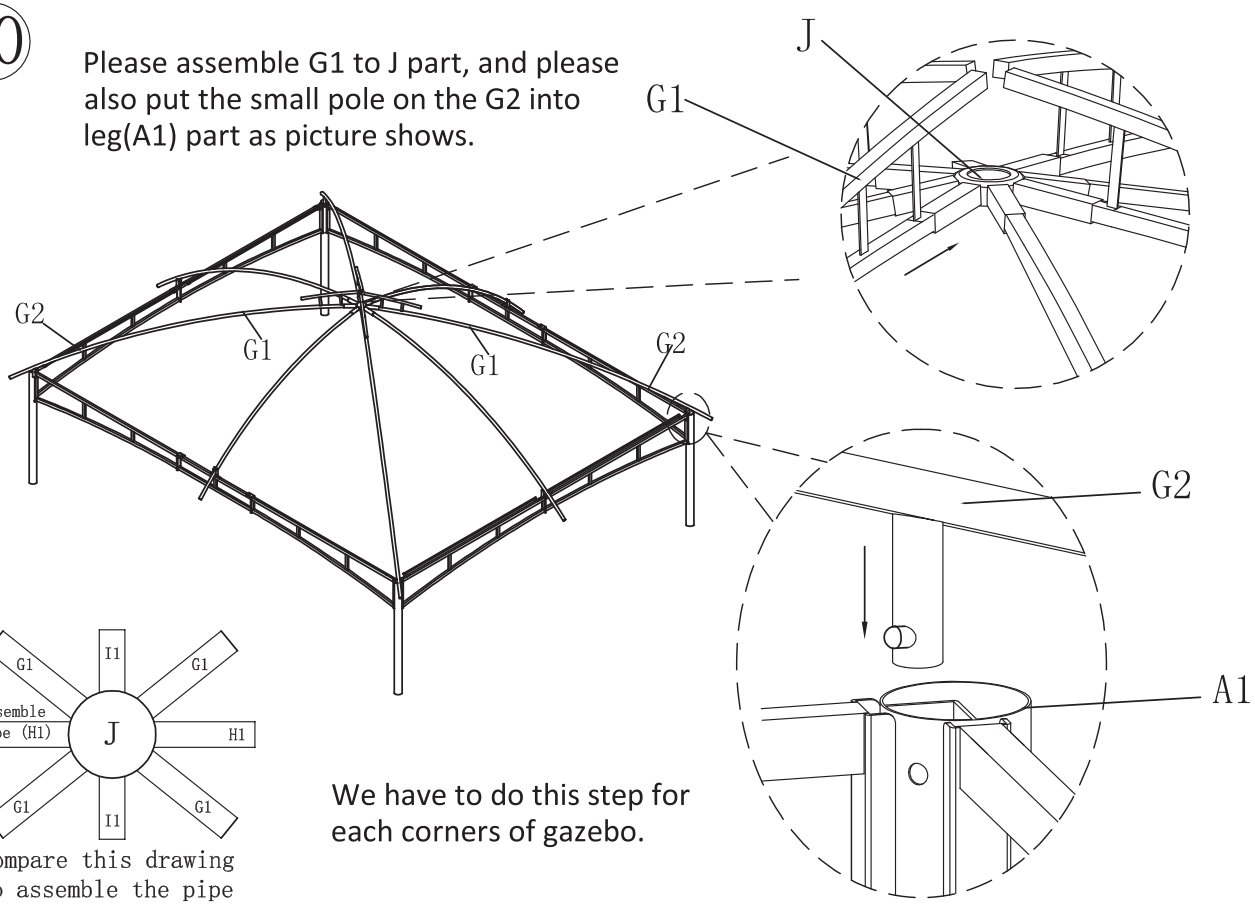

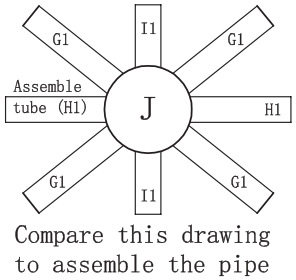

Compare this drawing to assemble the pipe

We have to do this step for each corners of gazebo.

11

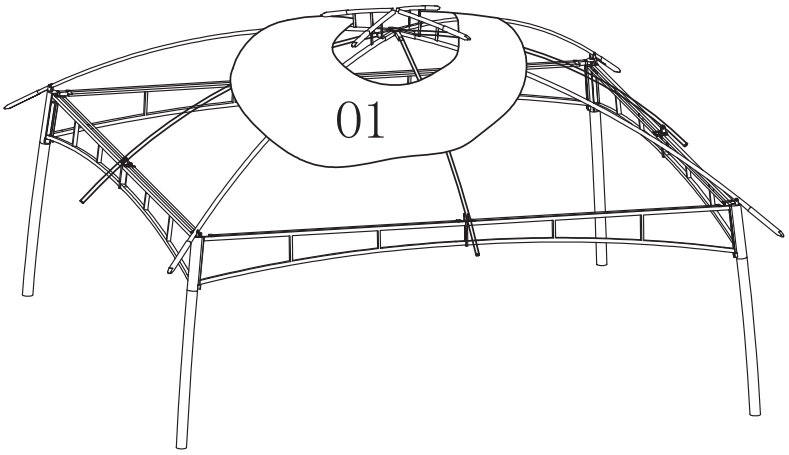

Please place the Big Canopy(O1) on the top frame.

12

Now we have to assemble K2 into the small part of G1. This is a telescopic tube which will be used for easy assemble of Top canopy roof.

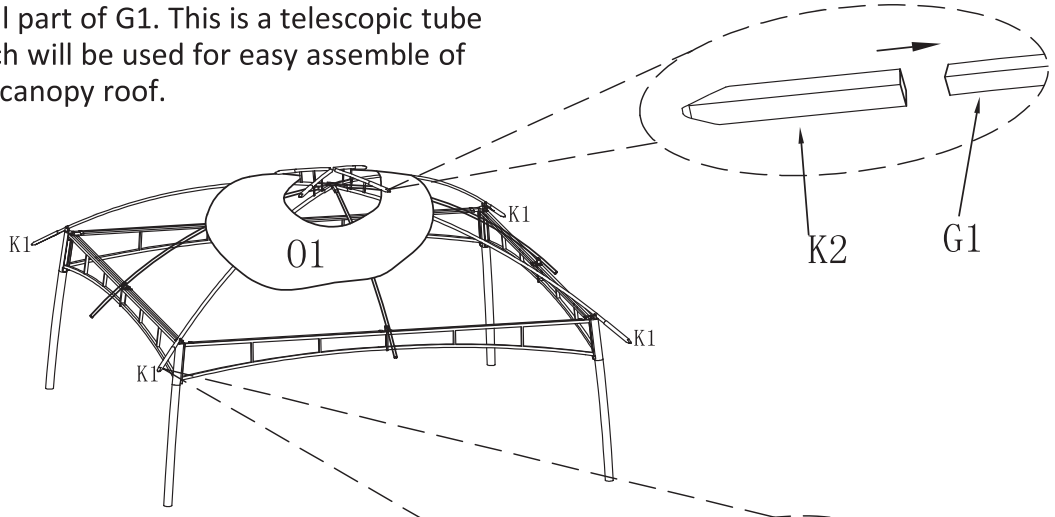

And also please assemble K1 into the end of G2. This is also a telescopic tube.

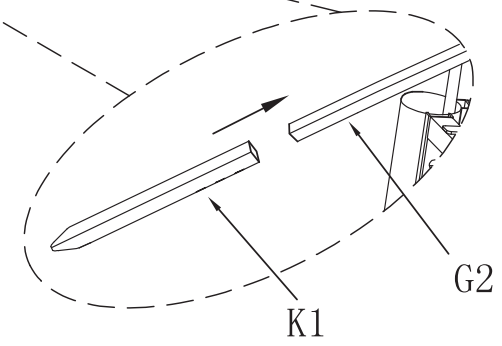

13

Now we have to fix Small canopy(O2)on the Skylight tube, please use the telescopic tube(K2) to expend the canopy(O2)to the maximum.

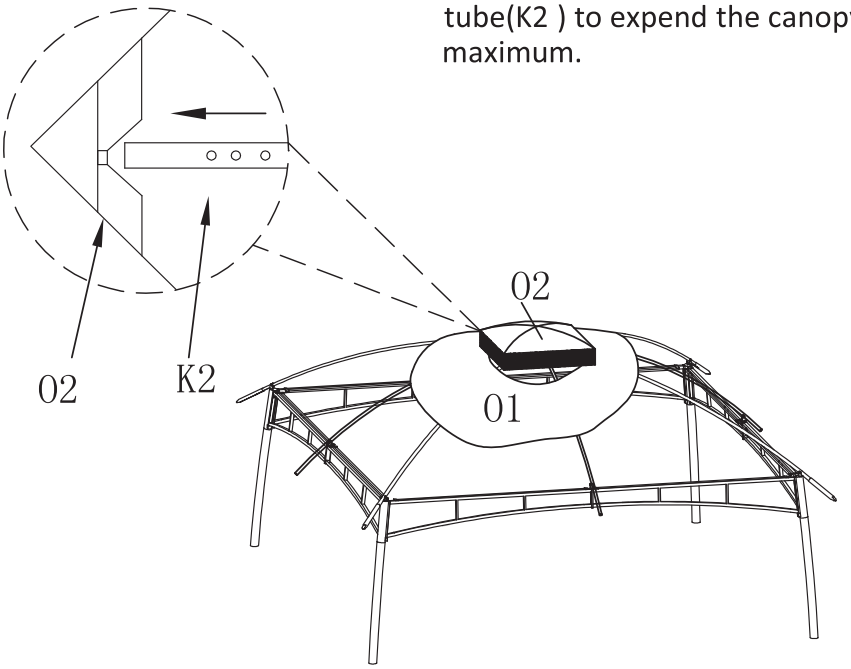

14

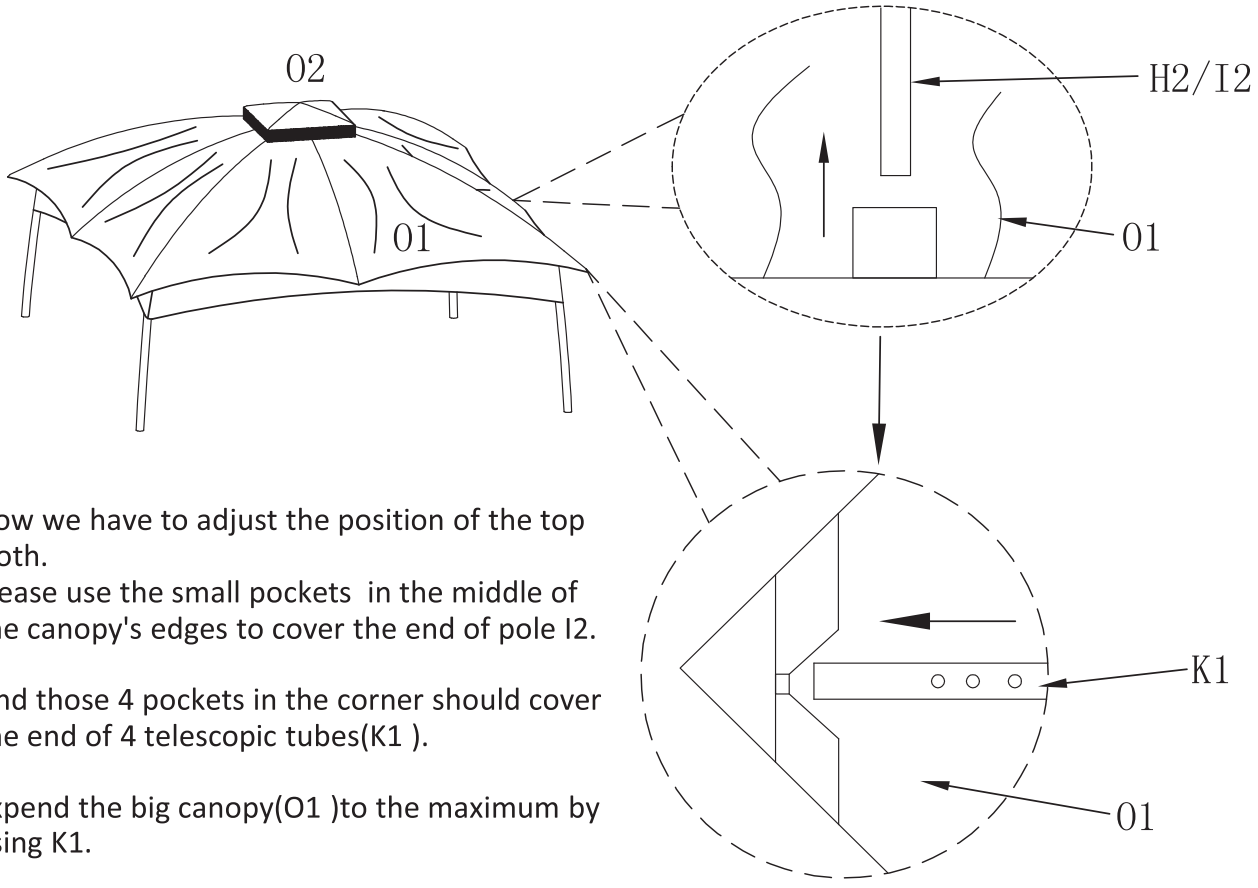

Now we have to adjust the position of the top cloth.
Please use the small pockets in the middle of the canopy's edges to cover the end of pole I2.

And those 4 pockets in the corner should cover the end of 4 telescopic tubes(K1).

Expend the big canopy(O1)to the maximum by using K1.

15

Now we have to assemble the 4 legs of gazebo.

Please assemble A2 to A1 by using Screws DD.

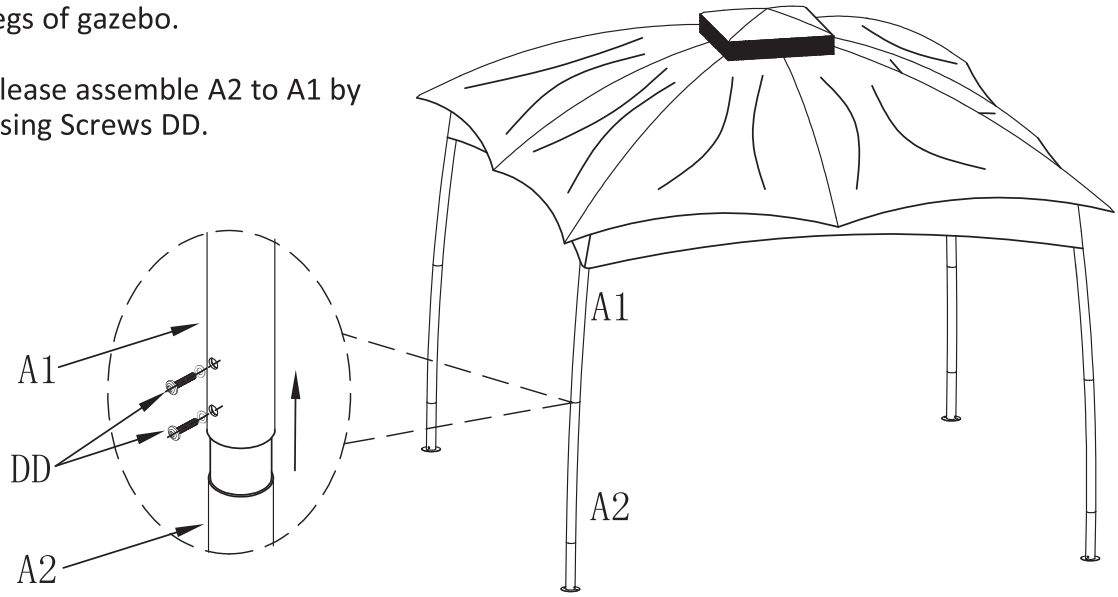

16

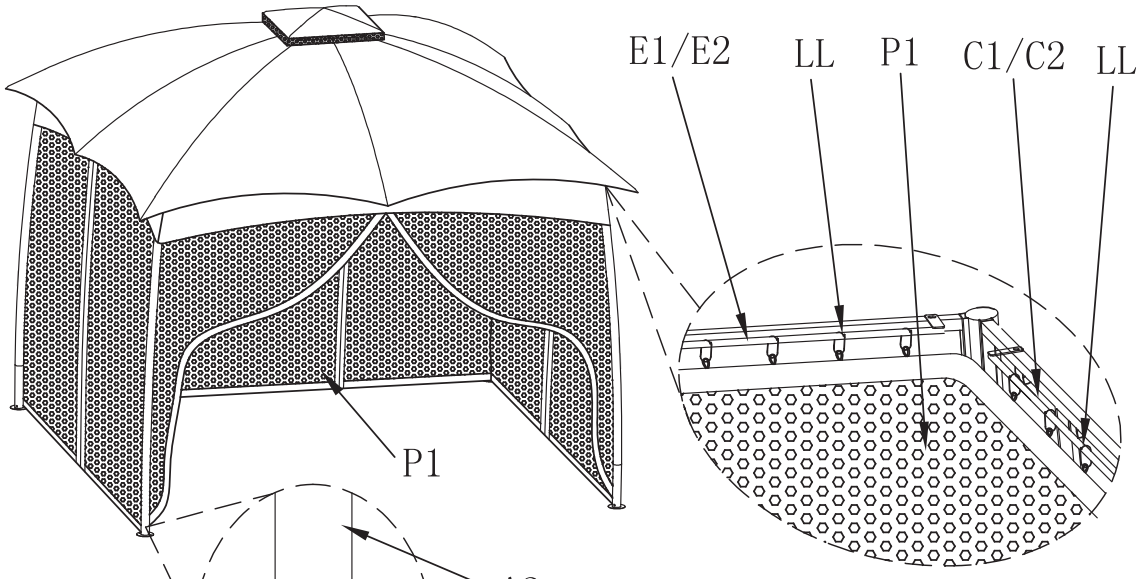

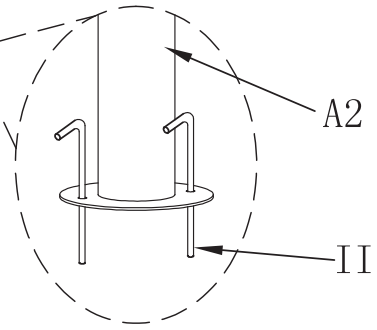

Fix gazebo Lower Leg Post(A2) on the ground by Stakes(II).

Now we put the netting on the gazebo.
Please place O-Rings(LL)on 4 Beams evenly.
And then put on the netting by these O-Rings
Please note the netting should be on the inside of the Beams.

And then congratulations, the assembly has finished.

Sandbag

1

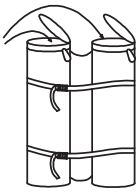

Open the bag and fill it with sand or something else heavy.

2

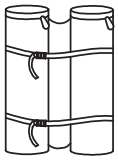

Zip up the sandbag.

3

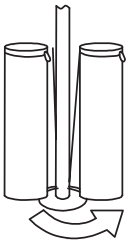

Place the sandbag next to the lower post.

4

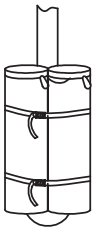
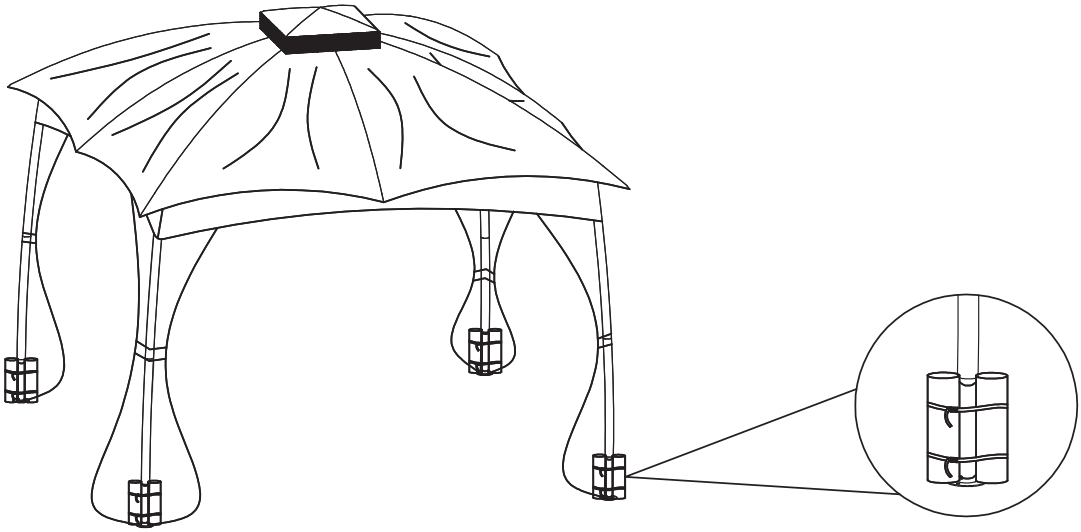
Fix the bag to the leg by velcro.