

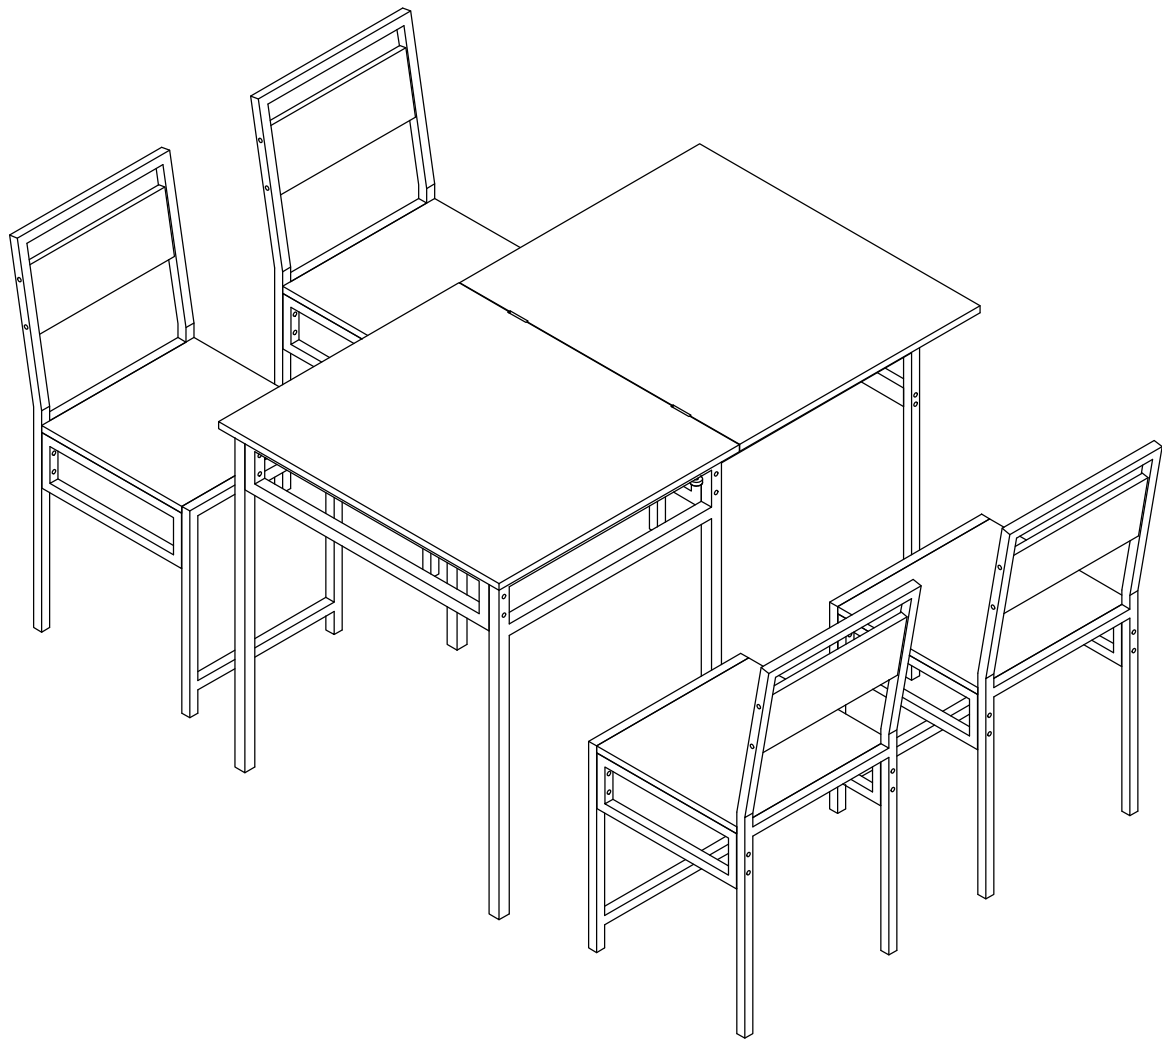



ASSEMBLY INSTRUCTION

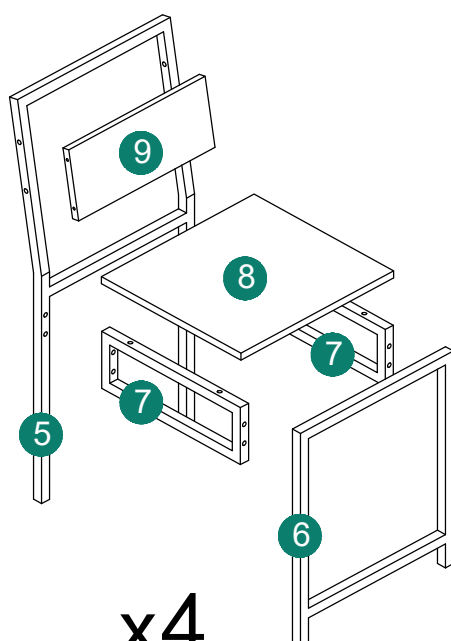

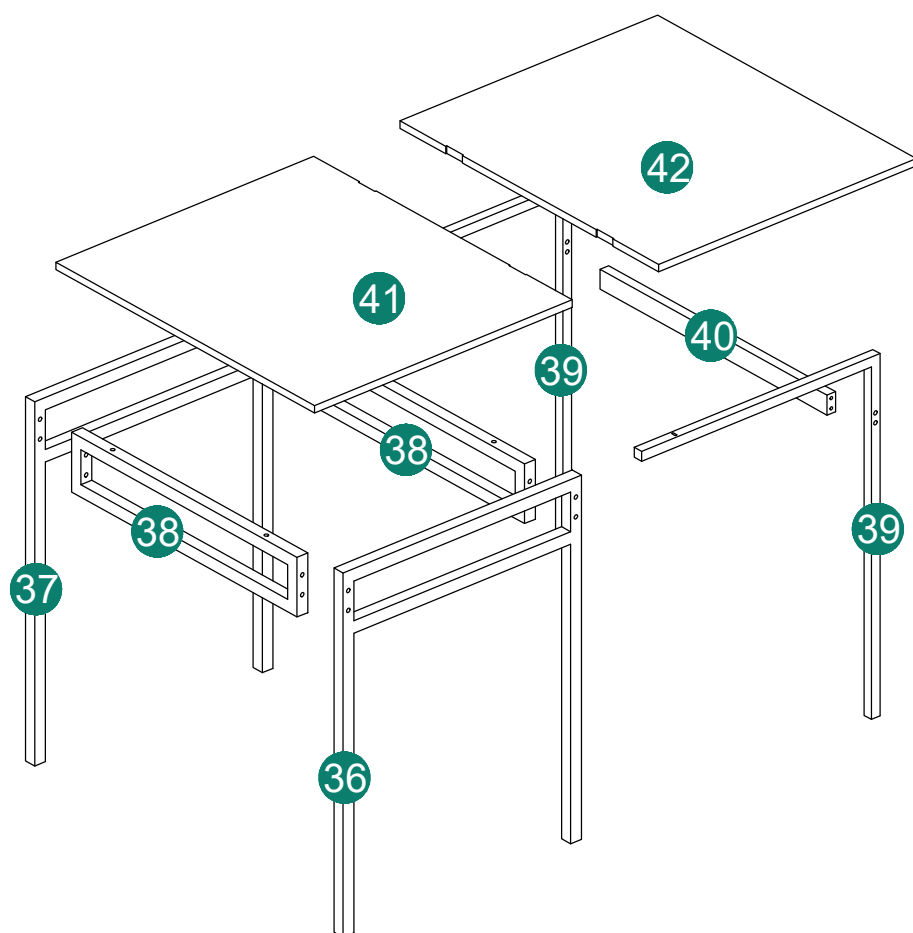


x4

5

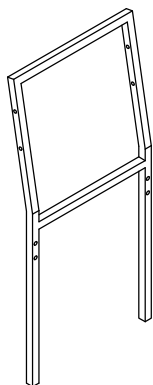


4PCS

6

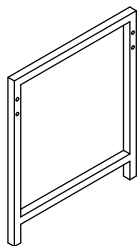


4PCS

7

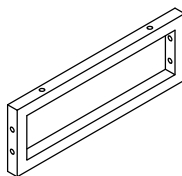


8PCS

8

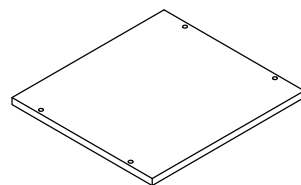


4PCS

9

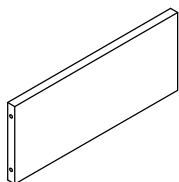


4PCS

36

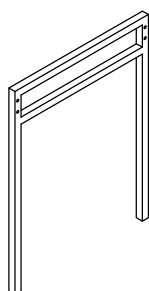


1PCS

37

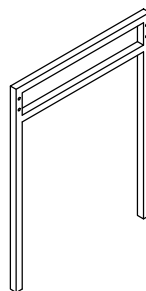


1PCS

38

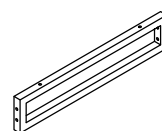


2PCS

39

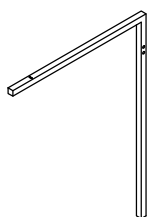


2PCS

40




1PCS

41

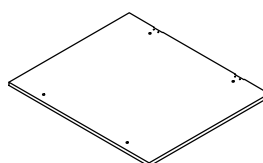


1PCS

42

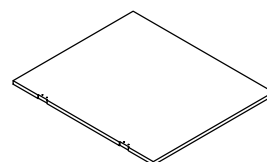

1PCS


A

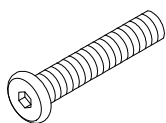

M6*35mm

4+1PCS


B



M6*30mm

48+3PCS

C



M7*48mm

16+1PCS


D



M6

8+1PCS


E

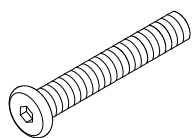

M6*60mm

12+1PCS


F



M3*14mm


8+1PCS

G

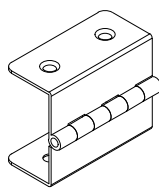

2+1PCS


H

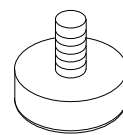

M6

1+1PCS


I




Ø15*3mm

2+1PCS

1



⑤ 4pcs




⑥ 4pcs



⑦ 8pcs



B 32pcs

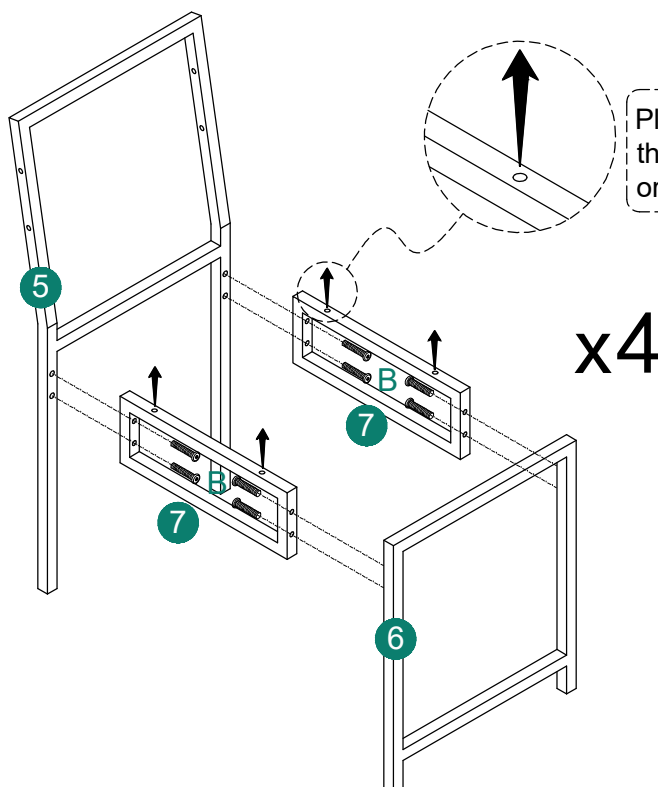

Please note that
these holes are
oriented upwards.


2




⑨ 4pcs



Ⓒ 16pcs

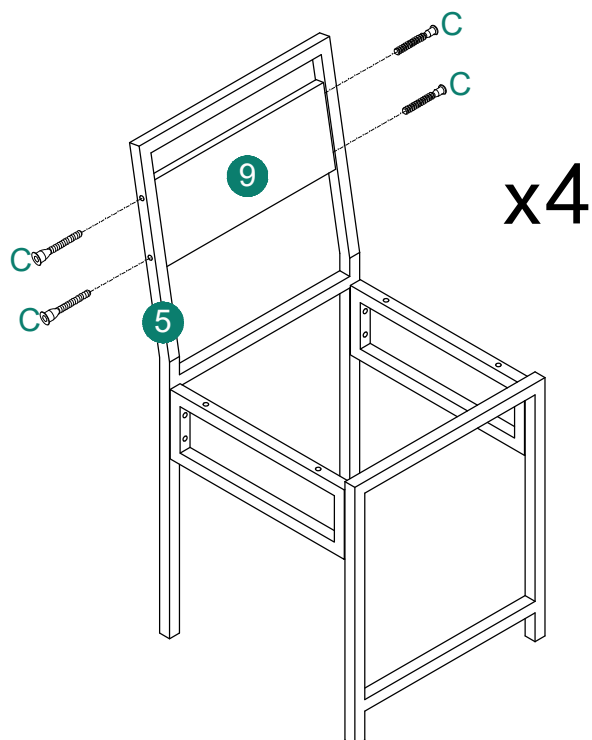


3



⑧ 4pcs




Ⓑ 16pcs

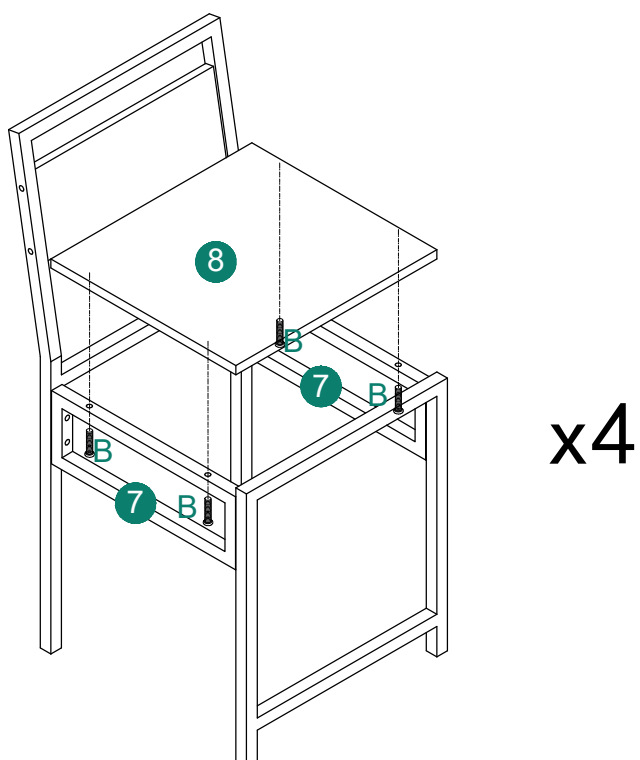


4

- ③⑥ 1pcs
- ③⑦ 1pcs
- ③⑧ 2pcs
- ④ 8pcs
- ⑤ 8pcs

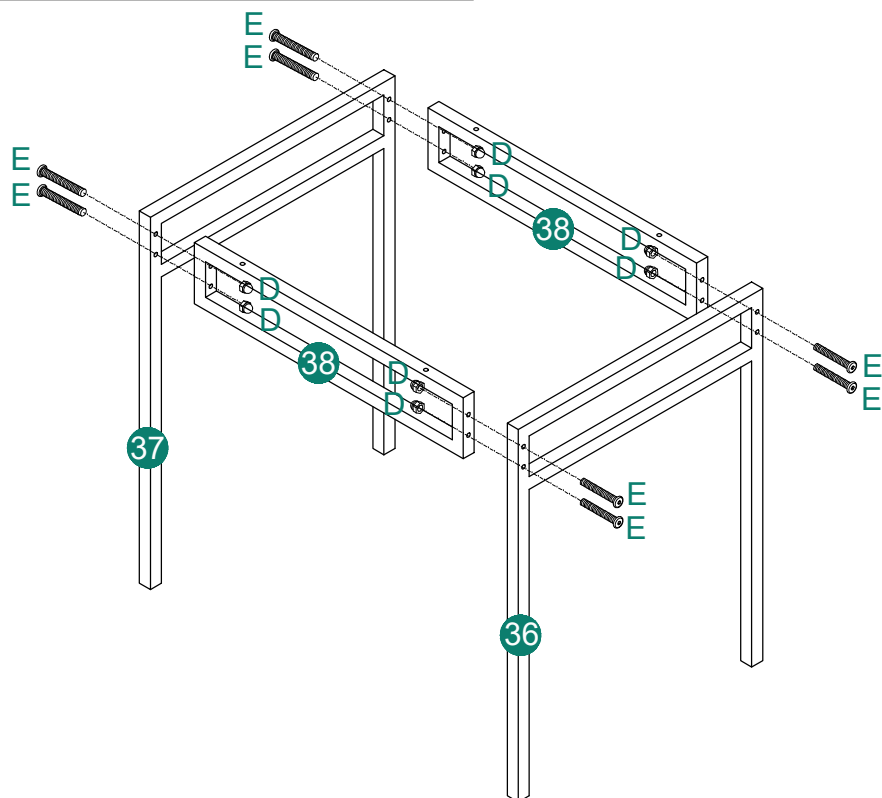

5


- ③⑥ 1pcs
- ④ 4pcs
- ⑤ 2pcs

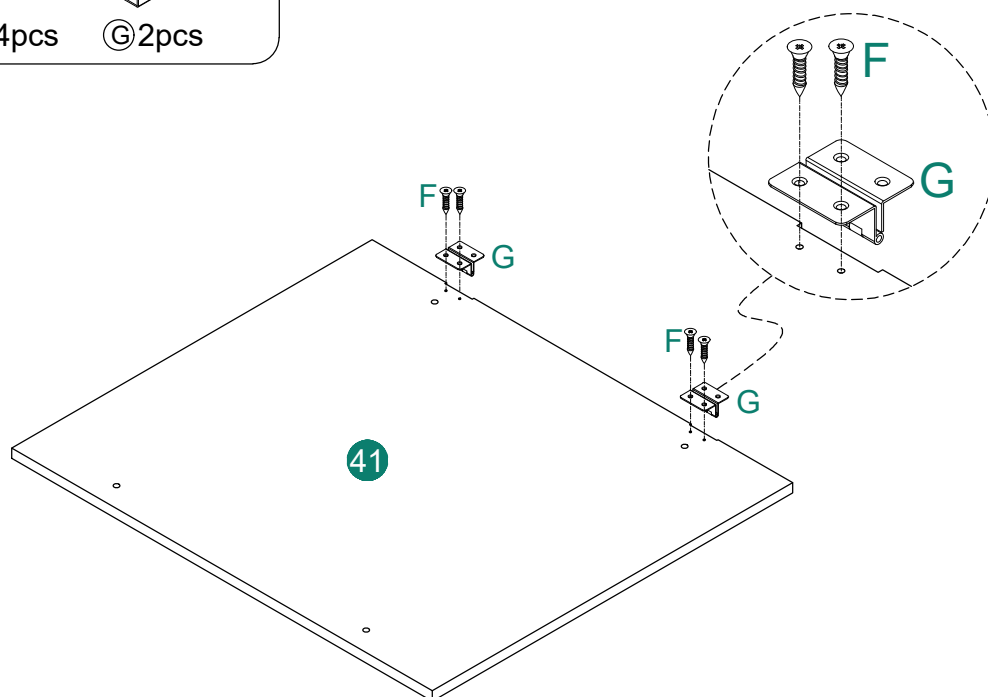

6



Ⓐ 4pcs

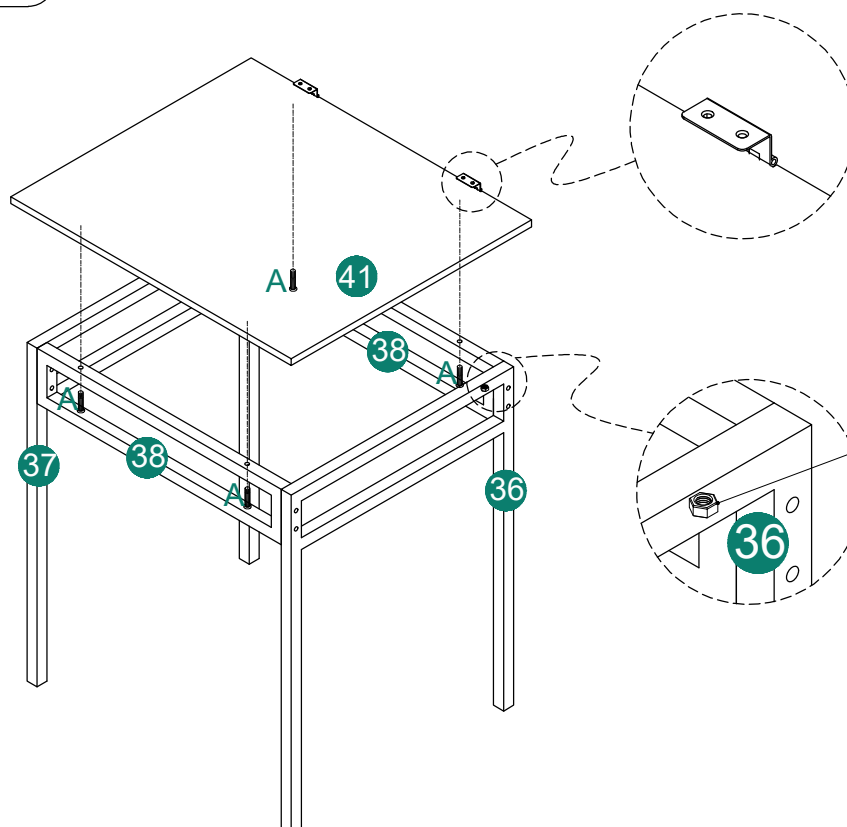


7





Ⓓ 1pcs




Ⓕ 4pcs

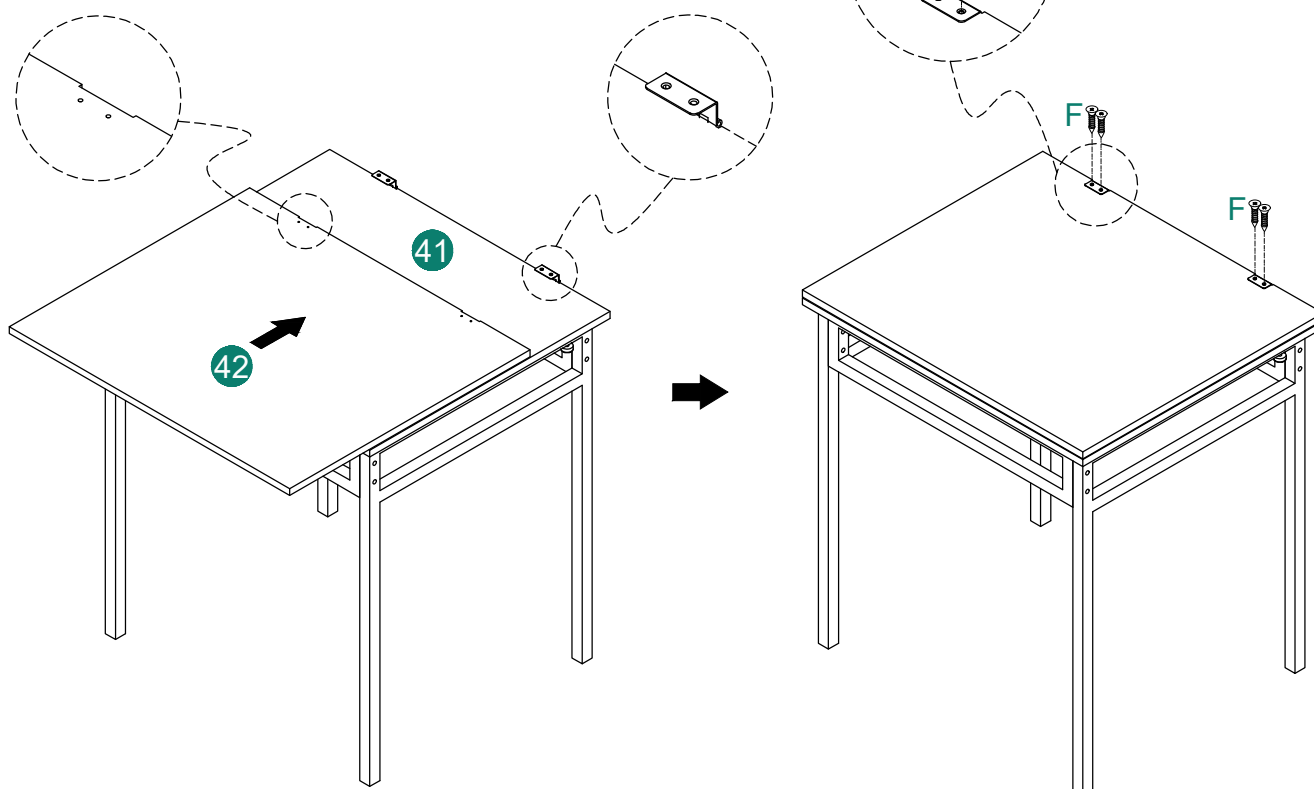


8

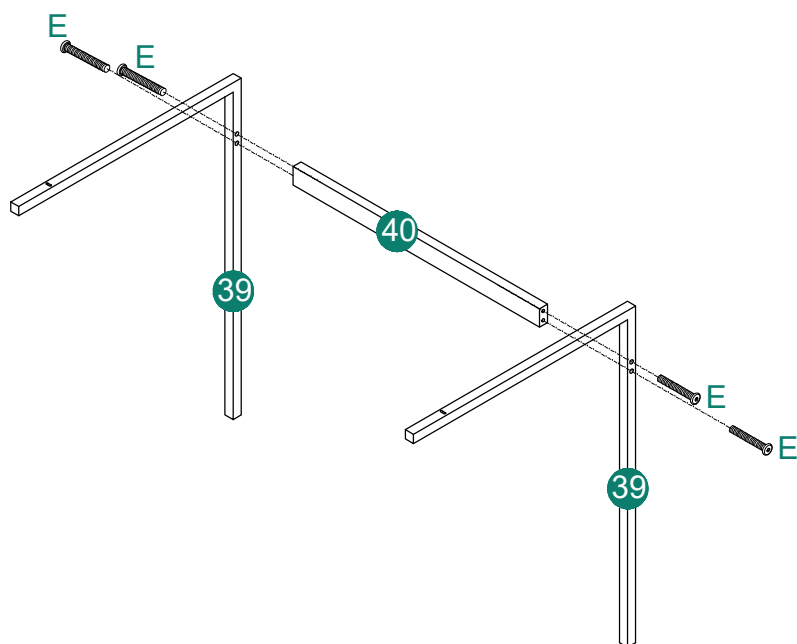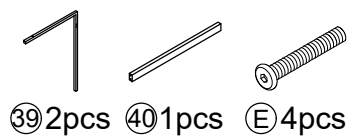

9




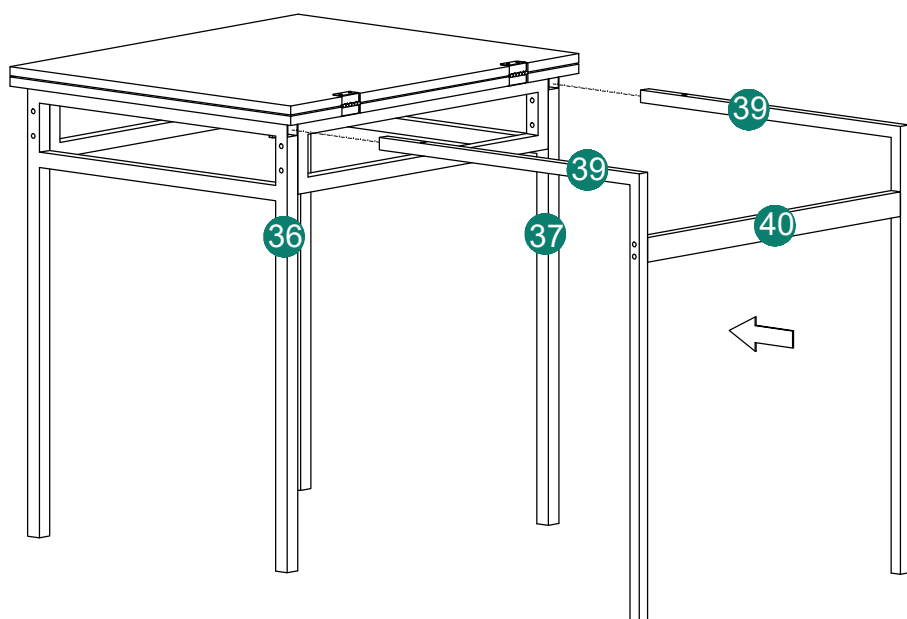


10


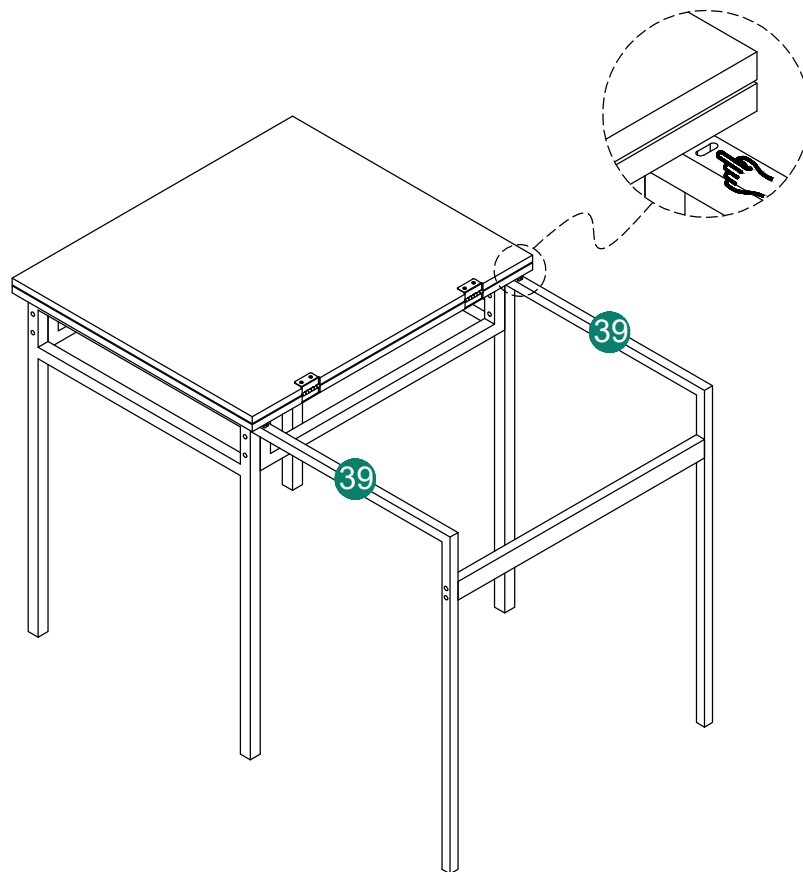


Please pay attention to the location of the hole.

11

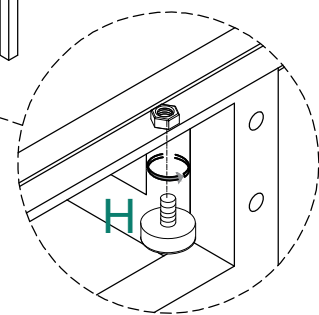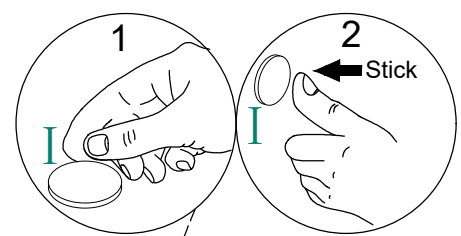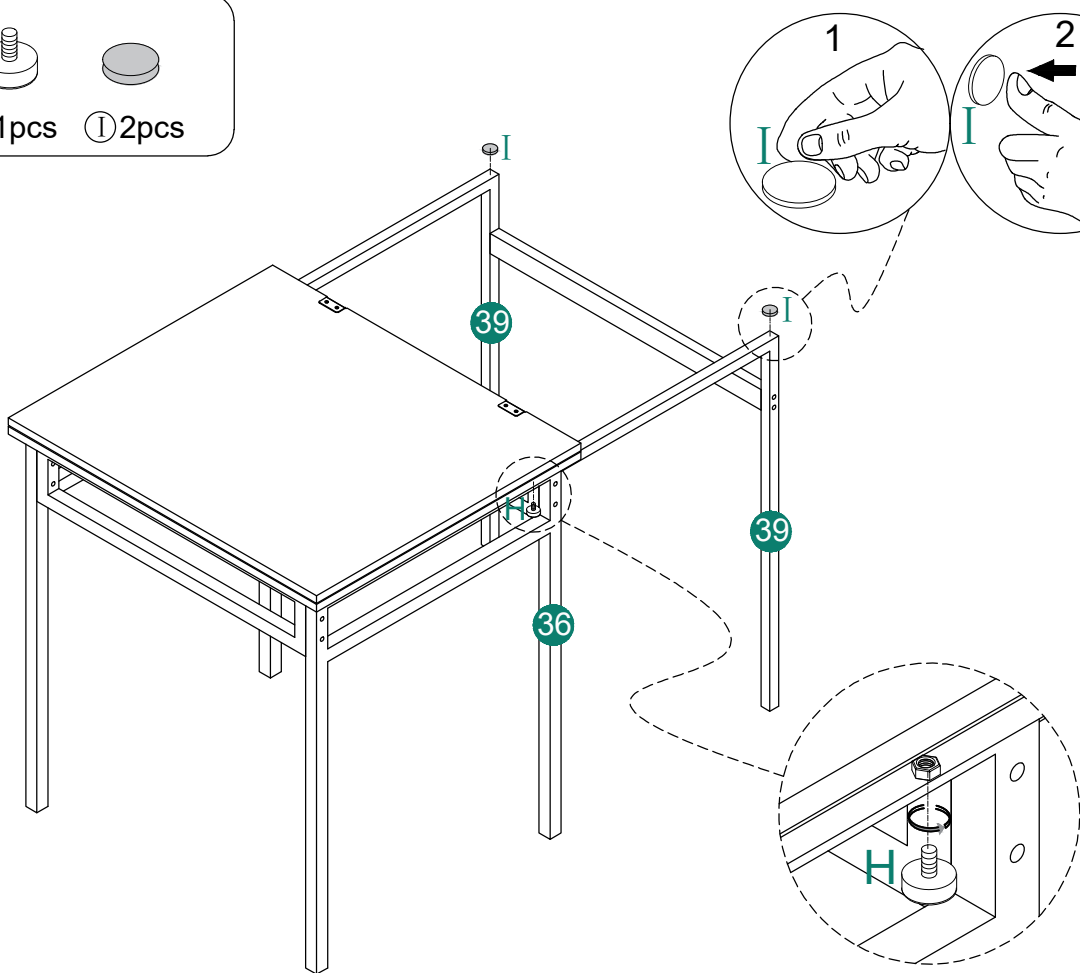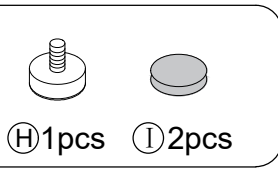

12

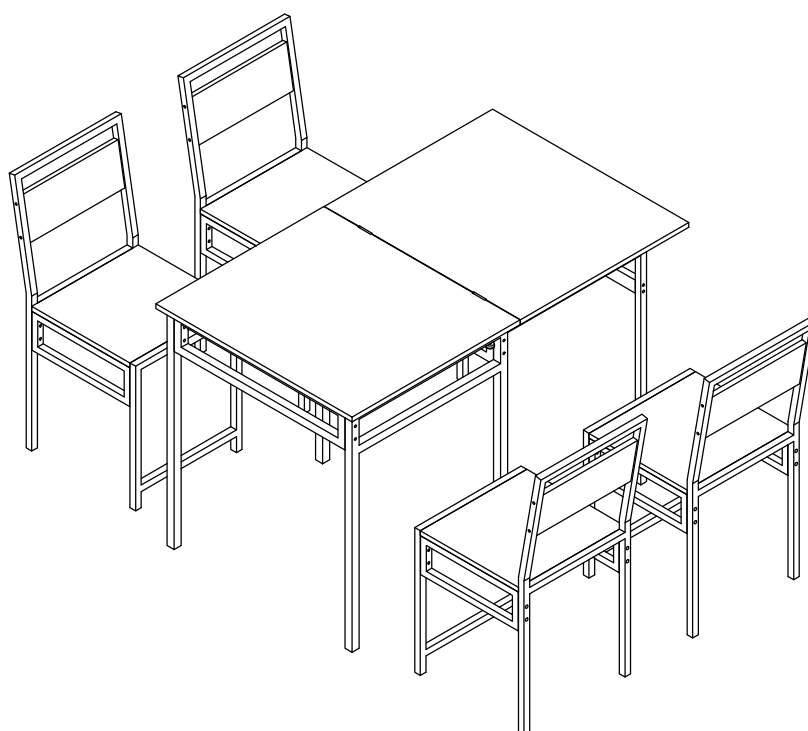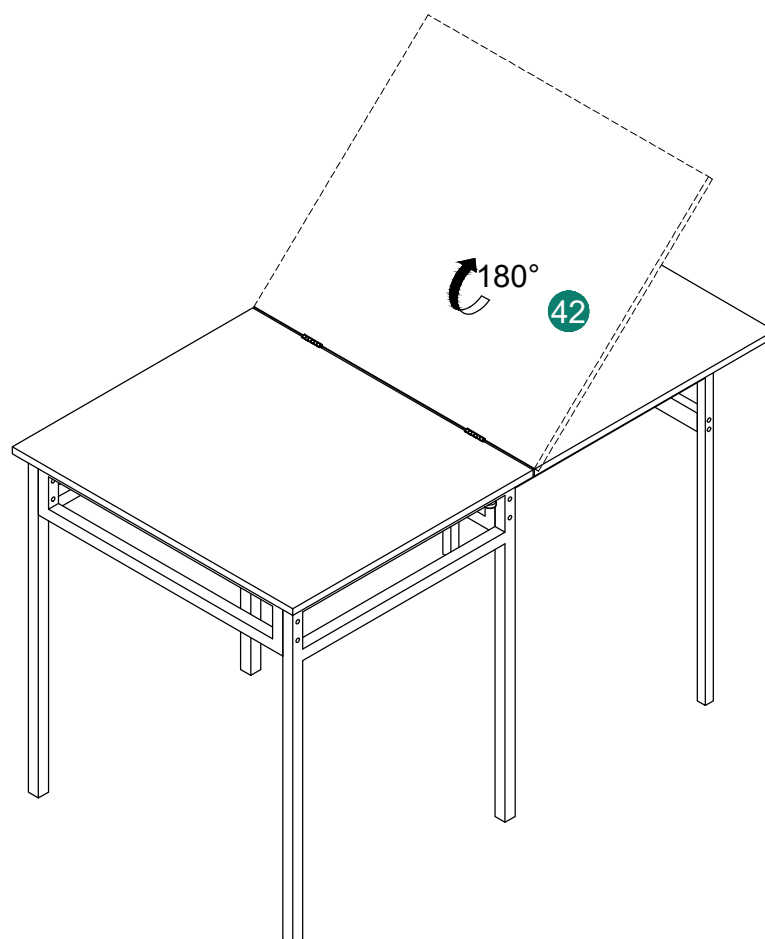

Installation Completed