

## Introduction

Each joint is measured in 15° increments.  
Joints lock in place every 15°.

**To operate a joint**, depress the button and rotate the leg to the desired angle

Once the button is depressed, joints rotate in a complete circle or 360°.

The joint is locked when the button is extended. Only use WorKEZ when all joints are locked.



Depress the button  
adjust the leg.



An extended button  
means the joint  
is locked.



**When adjusting be  
wary of your fingers.**



JOINT A = outside joint, farthest from the panel

JOINT B = middle joint

JOINT C = inside joint, closest to the panel

## Guidelines

Max load is 13 lbs.

Joints must be locked (extended) before use.

Before use, ensure that:

All joints are locked (extended)

The platform is level

Both legs are adjusted identically &  
evenly

WorKEZ is stable

The platform weight is centered over  
the bottom leg

**Tip:** If WorKEZ tends to tip forward or  
backwards, rotate the bottom leg 180°





## 1 Laptop Stand That Works Everywhere



## How To SetUp:

1. Decide where you want to use WorkEZ
2. Follow this quick guide and adjust each joint on the first leg to the specified angle
3. Repeat for leg 2.

## USE


	Joint A	Joint B	Joint C		
Standing Desk	22	20	21	Repeat for leg 2. Adjust further if needed	
Bed	10	4	16	Repeat for leg 2. Adjust further if needed	
Couch	12	22	21	Repeat for leg 2. Adjust further if needed	
Floor	18	12	16	Repeat for leg 2. Adjust further if needed	

## Customizing WorkEZ:

Simultaneously pressing the same joint on each leg lets you quickly and evenly adjust the platform angle or height

## To Fold WorkEZ:

1. Fold Joint C to 0°
2. Fold Joint B to 0°
3. Fold Joint A to 0°
4. Repeat for leg 2

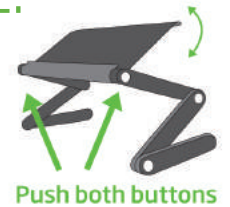

## Mouse Pad: Setup Instructions:

### 3 Components:



Check [www.UncagedErgonomics.com](http://www.UncagedErgonomics.com) for a "How-To" video!

1. Hold the Female Clamp against the inside of WorkEZ's leg.
2. Hold the Male Clamp against the outside of WorkEZ's leg.
3. Align the grooves that latch the Male Clamp and Female Clamp together.
4. Squeeze the Male Clamp and Female Clamp together with 1 hand while
5. Insert the screw from the inside and screw it into the panel
6. Tighten the screw and ensure the panel is stable.