## **ASSEMBLY INSTRUCTIONS**

## LOFT BED WITH DESK AND SHELF



If you have any questions, please feel free to contact us.

Email: service@qualfurn.net

WF292000 / WF292001



# **SAFETY WARNING**




1. This bed is designed for use only mattress (es) meeting the following specifications on the loft bed:

Up bed (Loft bed and tribed included)

Bed typeLengthWithThicknessFull Standard74"-75"53 1/2"6" max


- 2. Replacement parts, including additional guardrails, maybe obtained from any of our (GIGACLOUD TECHNOLOGY (USA) INC . 18961 ARENTH AVENUE, CITY OF INDUSTRY, CA, 91748.) dealers
- 3. Follow the information on the warnings appearing on the loft bed. end structure and on the carton. Do not remove warning label from bed.
- 4. Always use the recommended size mattresses or mattress supports, or both, to help prevent the likelihood of entrapment or falls.
- 5. Surface of mattress must be at least 5" (127mm) below the upper edge of guardrails.
- 6. Do not allow children under 6 years of age to use the loft bed.
- 7. Periodically check and ensure that the guardrail, ladder, and other components are in their proper position, free from damage, and that all connectors are tight.
- 8. Do not allow horseplay on or under the bed and prohibit jumping on the bed.
- 9. Always use the ladder for entering and leaving the loft bed.
- 10. Do not use substitute part. Contact the manufacture or dealer for replacement part.
- 11. Use of a night light may provide added safety precaution for a child using the loft bed.
- 12. Always use guardrails on both long sides of the loft bed. If the loft bed will be placed next to the wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and wall.
- 13. The use of water or sleep flotation mattresses is prohibited.
- 14. STRANGULATION HAZARD Never attach or hang items to any part of the loft bed that are not designed for use with the bed; for example, but not limited to, hook, belts and jump ropes.
- 15. Keep these instruction for future reference.
- 16. Prohibit more than one person on upper bunk
- 17. We recommend assembling your bunk bed on the shipping carton to protect your floor or carpet.
- 18. Be certain all staples are out of the box before beginning assembly on the shipping carton.

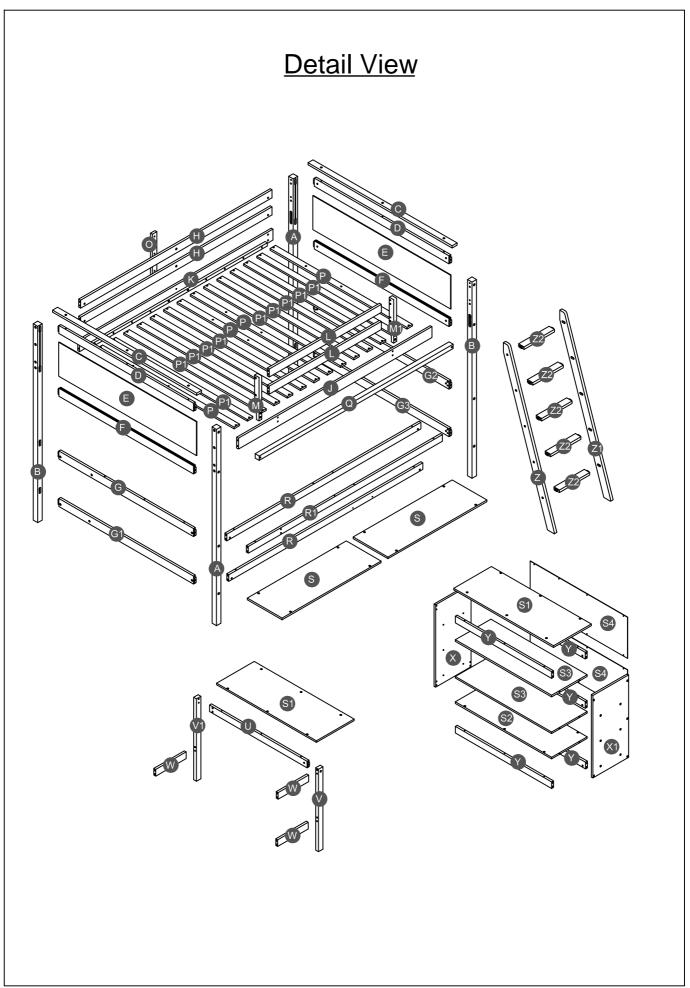

#### Part List Hardware List WF292000 Α В C Leg (Left Front / Right back ) - 2pcs | Leg (Left back / Right Front ) - 2pcs Cap for upper HB-FB - 2pcs E Н Side panel - 2pcs Side rail (front) -1pc Long guard rail - 2pcs انجبب Side rail (back) -1pc Slat - 4pcs Slat - 10pcs R R1 Q Lower support slat - 1pc Horizontal bar - 2pcs Horizontal bar - 1pc М1 0 М *•••* **~\_\_\_** Support guard rail(Left) - 1pc Support guard rail(Right) -1pc Vertical guard rail - 1pc **Z**1 **Z2** Ζ Long ladder (left) - 1pc Long ladder (right) - 1pc Step ladder - 5pcs U V **V**1 Leg - front - 1pc Leg - back - 1pc Horizontal bar - 1pc W Horizontal bar - 3pcs

## Part List


#### WF292001

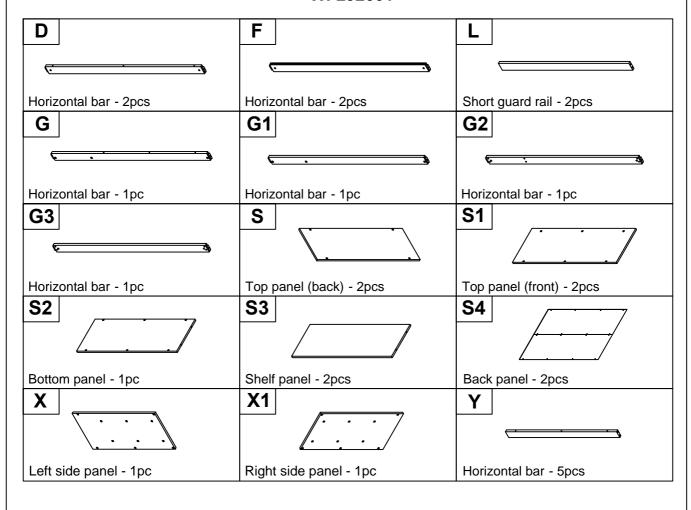

#### Hardware List WF292000


	T T	T 1
<u>  1                                   </u>		
Ø8*30mm		
	(Ø15)1/4"*100mm	(Ø15)1/4"*80mm
Wood dowel (22pcs)	Hex-Head bolts (12pcs)	Hex-Head bolts (25pcs)
<b>4</b>		<b>6 0 0 0 0 0 0 0 0 0 0</b>
(Ø12)1/4"*60mm	(Ø12)1/4"*35mm	(Ø12)1/4"*30mm
Hex-Head bolts (42pcs)	Hex-Head bolts (4pcs)	Hex-Head bolts (3pcs)
7	8	9
1/4"*15 (9.5mm)	(Ø12)1/4"*40mm	(1/4")4.5*58mm
Horizontal-Hole bolts (79pcs)	Hex-Head bolts (32pcs)	Allen key (2pcs)
10	11 S	<b>12</b>
116*40*27mm	Ø3.5*15mm	Ø4*30mm
Metal bracket (2pcs)	Wood screws (24pcs)	Wood screws (32pcs)
13	14	15 (†):::::::::>
81*26*21*(2.5mm)	(Ø12)1/4"*40mm	Ø4*19mm
Hooks (2pcs)	Hex-Head bolts (2pcs)	Wood screws (6pcs)
16	17	
(Ø13)1/4"*14mm	Ø10*40mm	
Connect bolt (2pcs)	Wood dowel (8pcs)	


#### ASSEMBLY TOOLS REQUIRED ( NOT INCLUDED )








PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS!

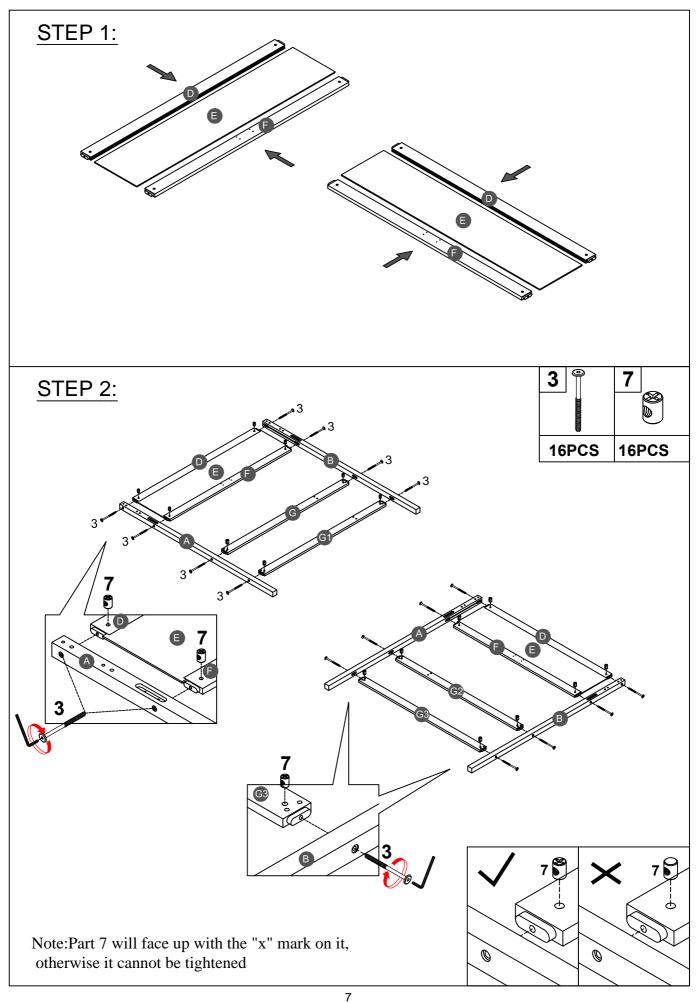


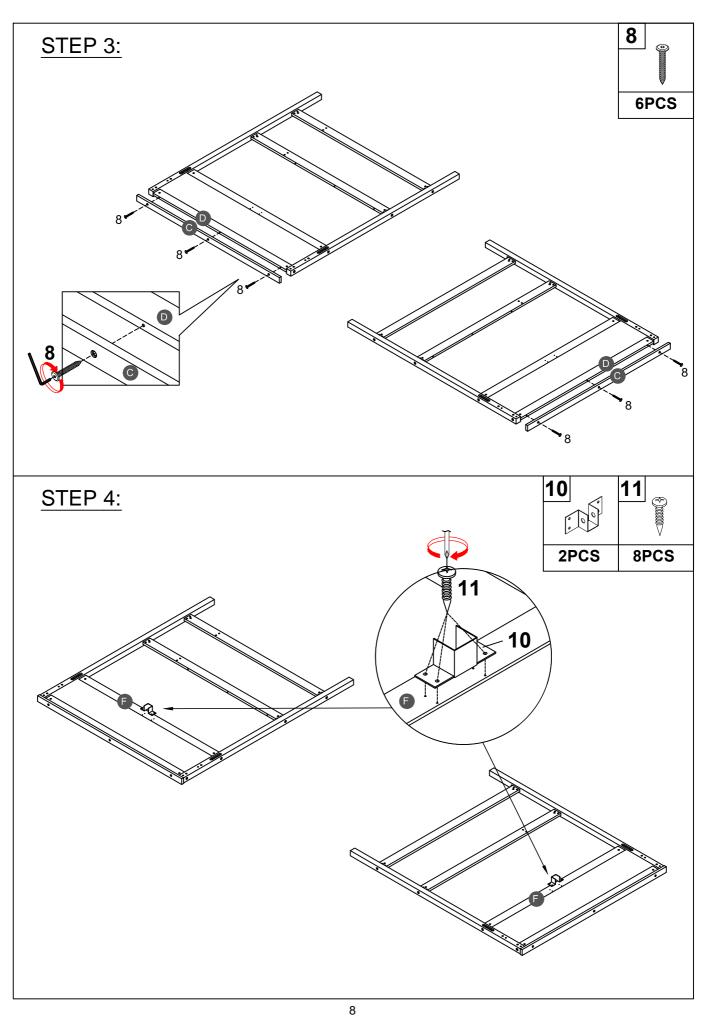


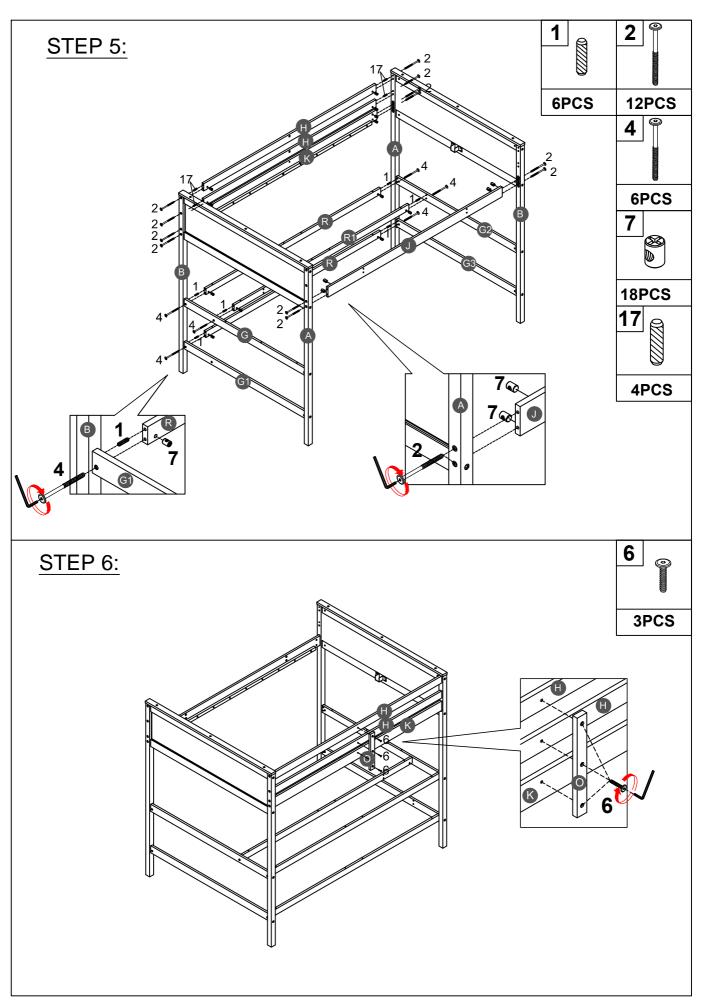


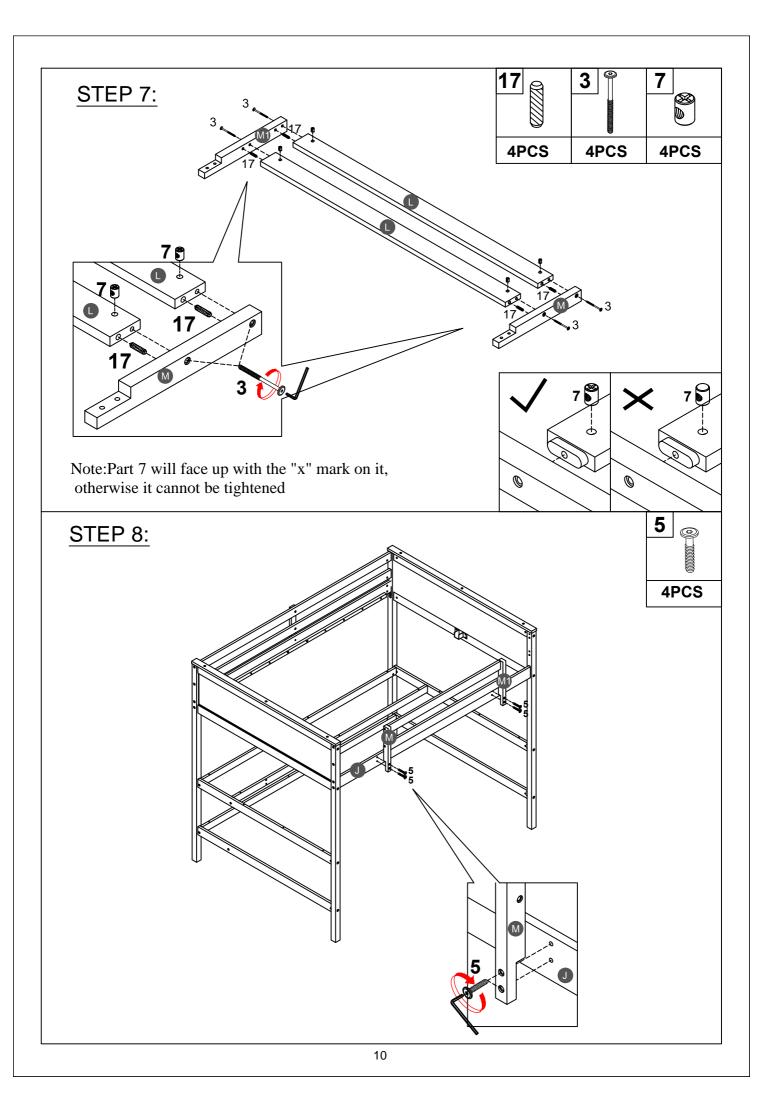


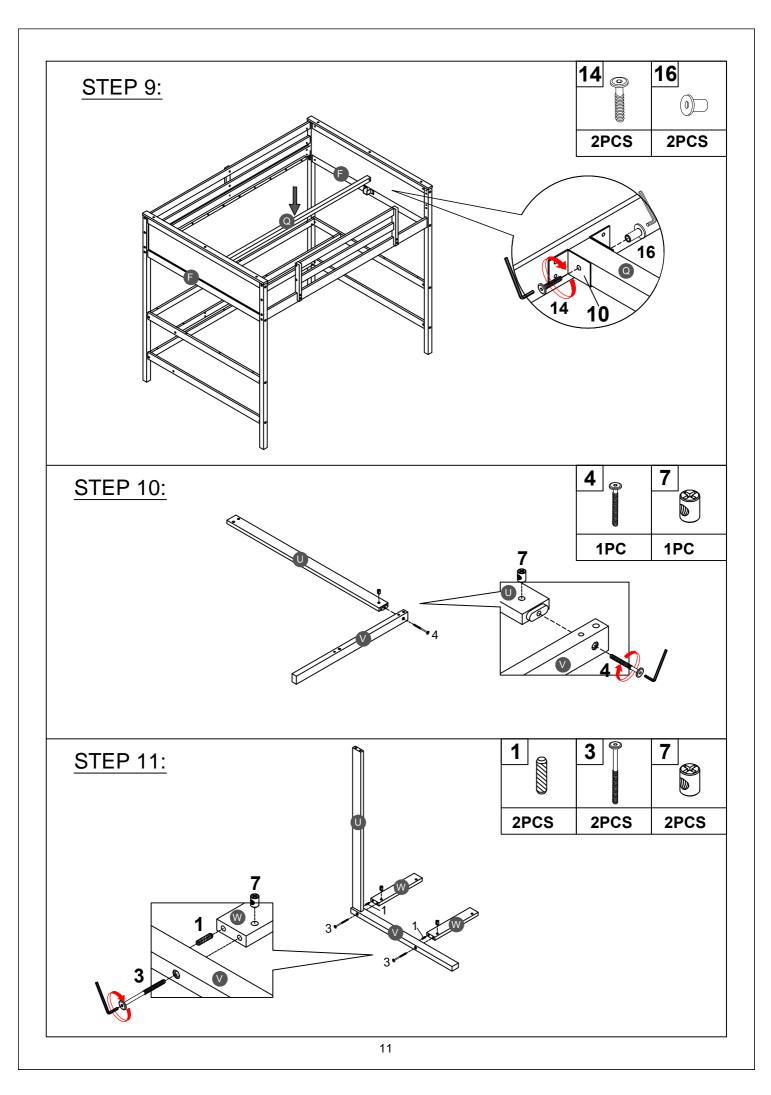


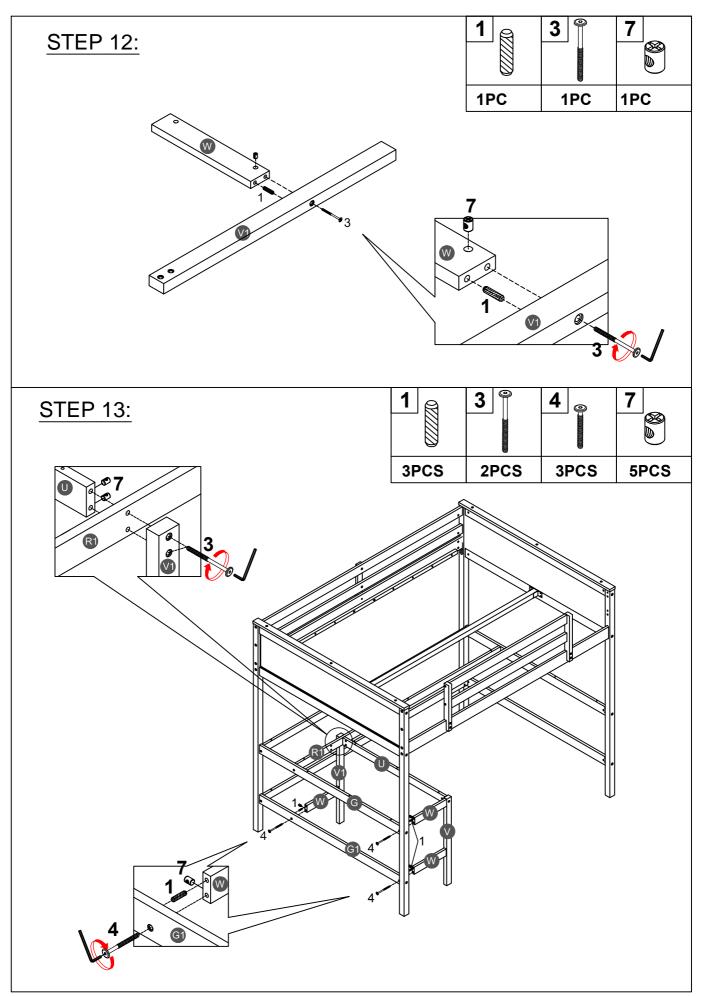


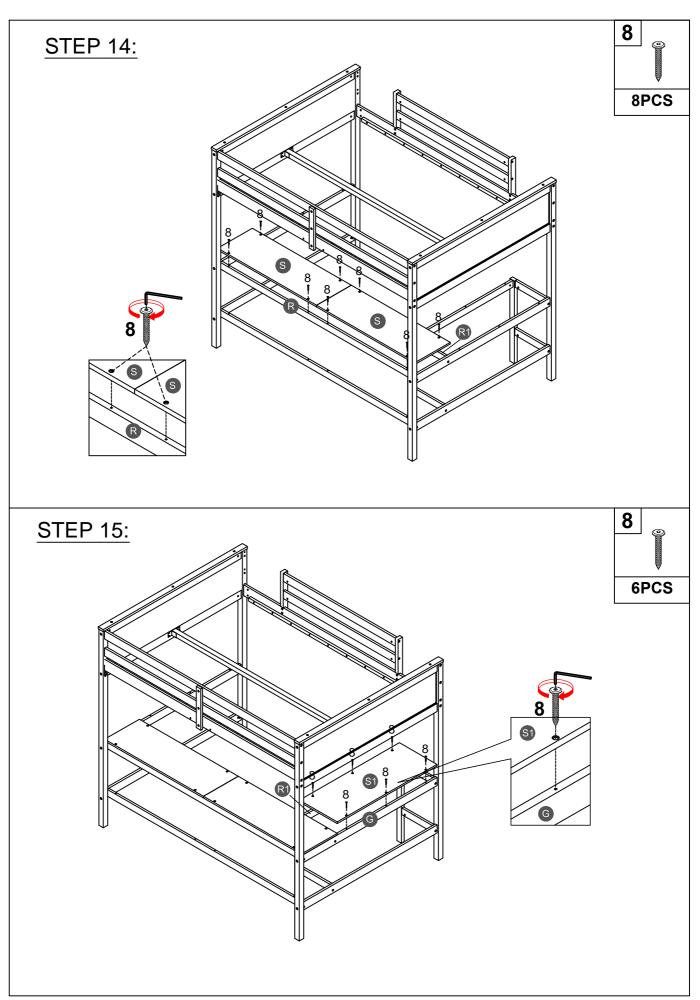


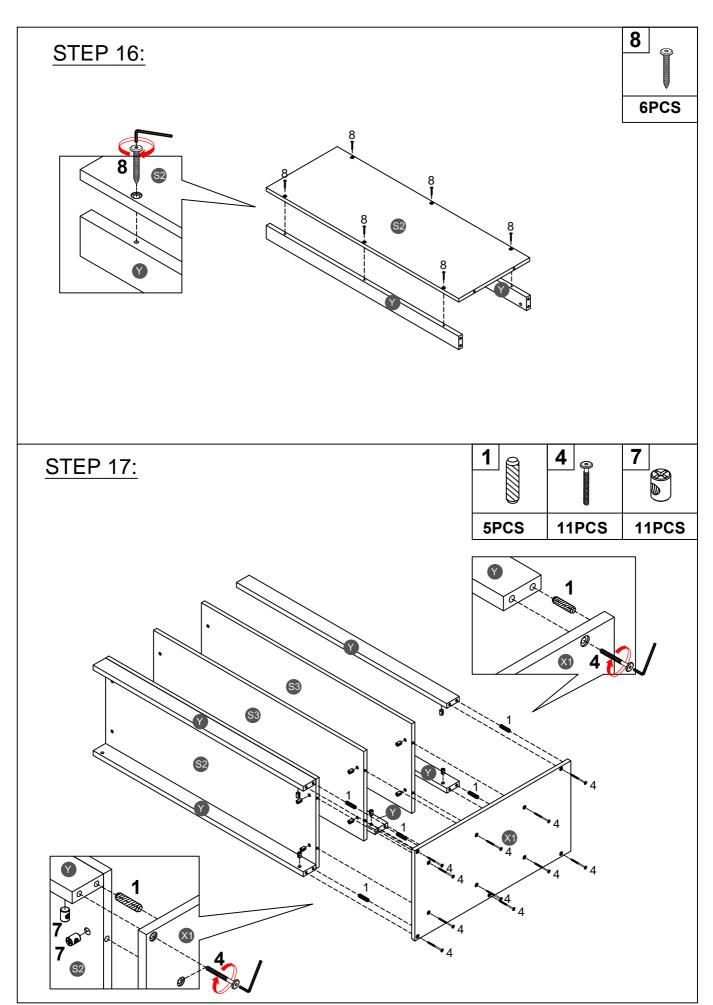

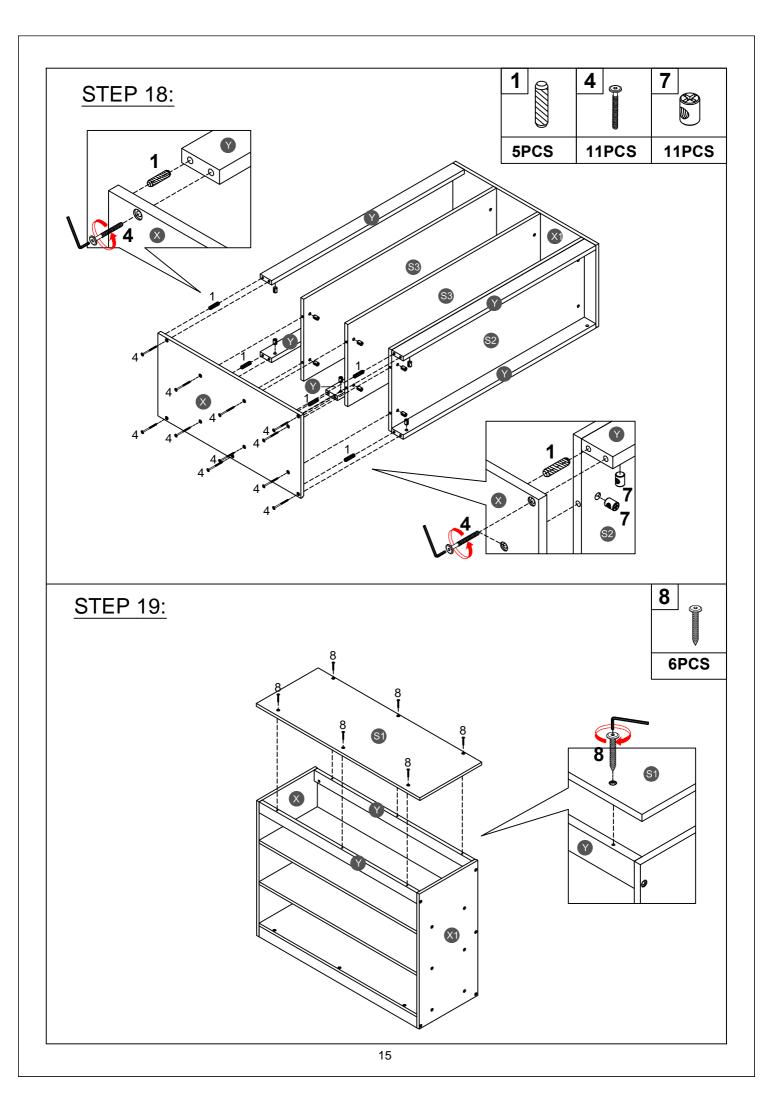

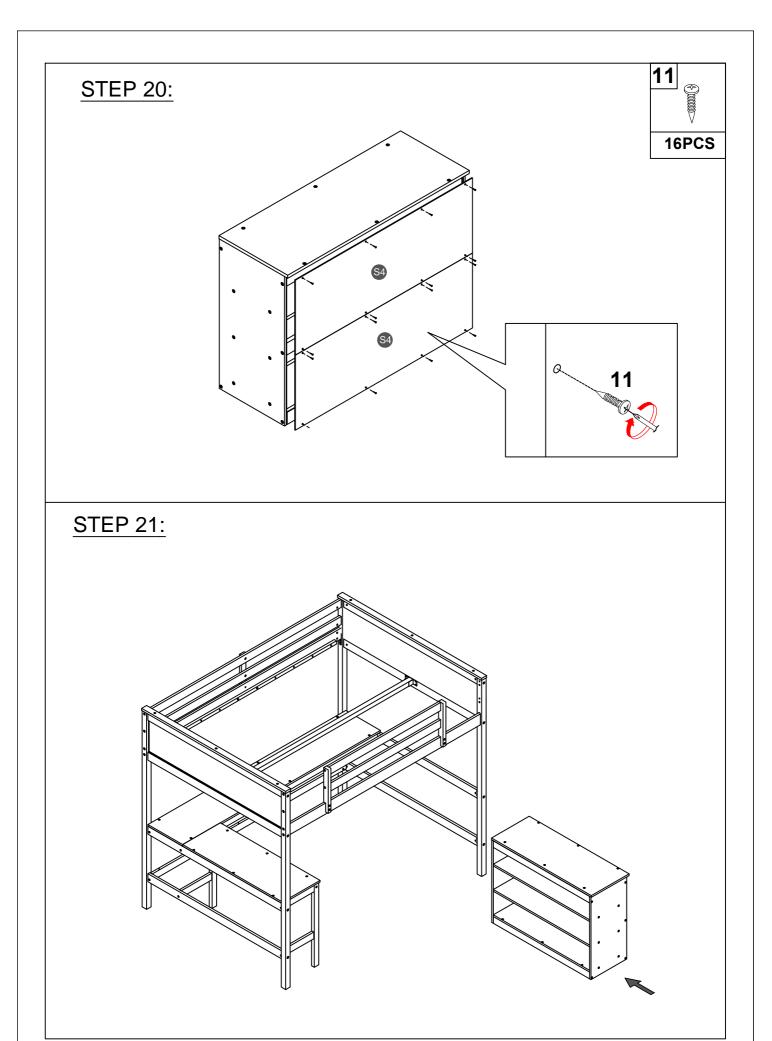

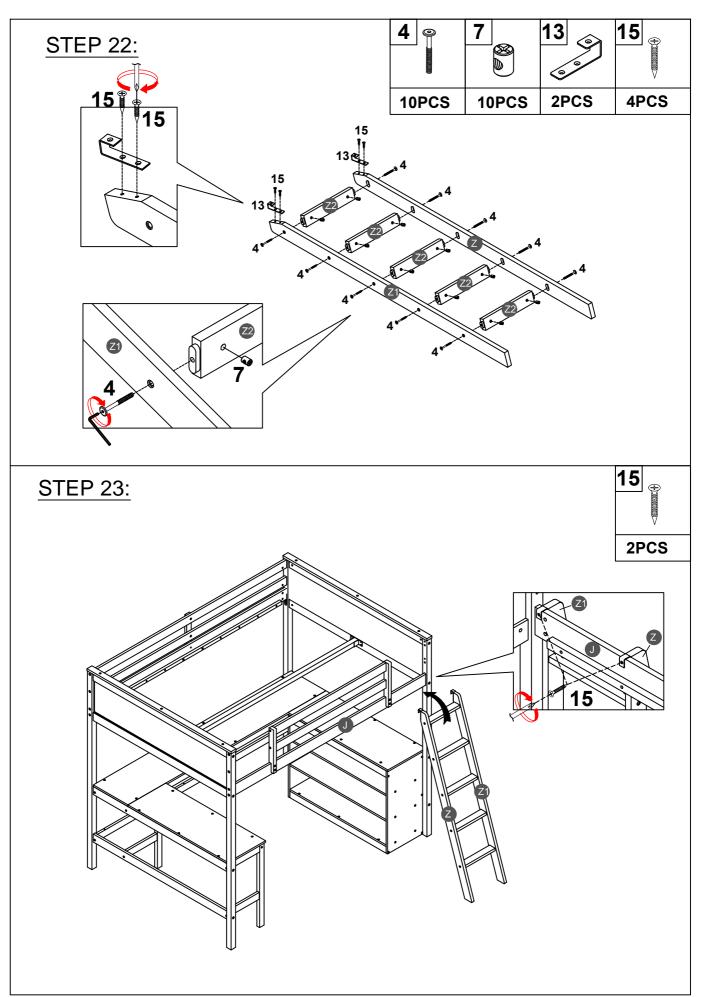

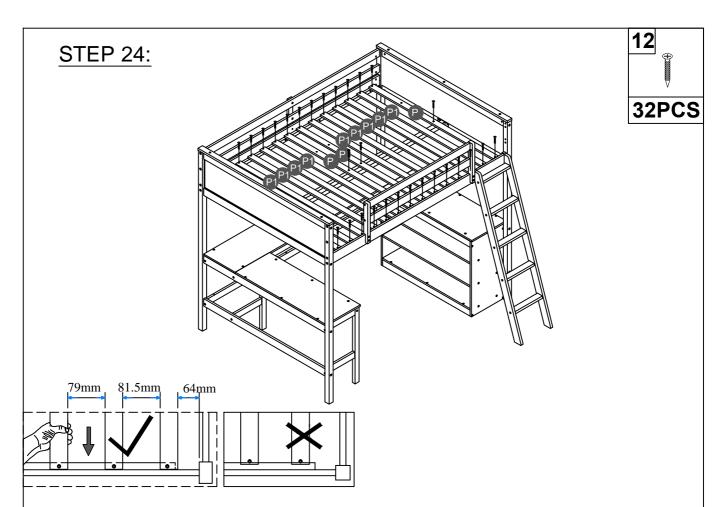

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

