

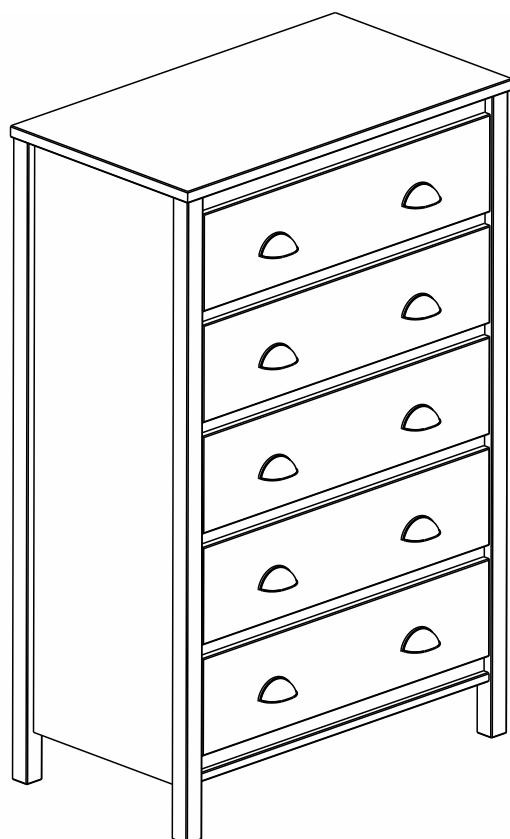
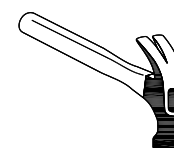


ASSEMBLY INSTRUCTIONS


BAJA - FIVE DRAWER CHEST

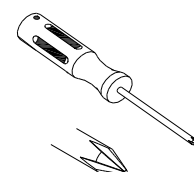

02:00 Hs

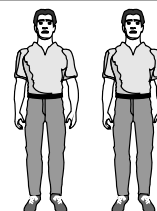


HARDWARE INCLUDED



A - 8,0x30 Wood Dowel
Qty. 66
SPARE +2



B - 4,0x30 Screw
Qty. 78
SPARE +2




C - M4x22 Screw
Qty. 20
SPARE +1




D - 4,0x14 Screw
Qty. 20
SPARE +2




E - 3,5x16 Screw
Qty. 20
SPARE +2

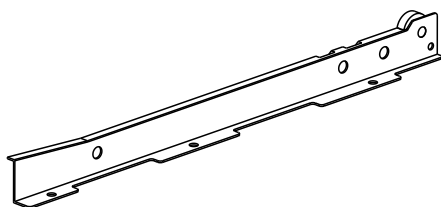


F - Slide Left 330mm
Qty. 05

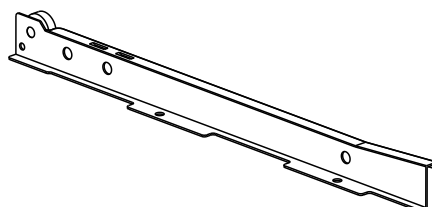

G - Slide Right 330mm
Qty. 05



H - Drawer Knob
Qty. 10



I - 25x25 Sticker Ribbon
Qty. 04


Anti-Tip Kit




4,0x30 Screw
Qty. 02



3,5x14 Screw
Qty. 02



Plastic wall bracket
Qty. 02




Nylon strap 300x4,8mm
Qty. 01





Plastic screw anchor 6mm
Qty. 02



PARTS INCLUDED

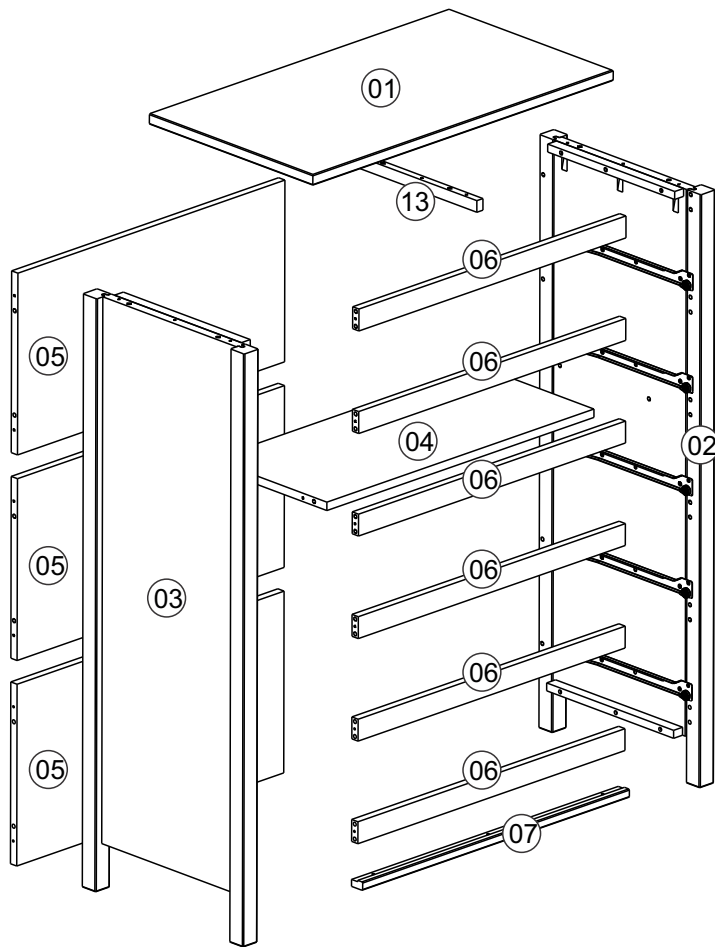

The side drawer with WARNING LABEL, should be mounted to the top drawer.

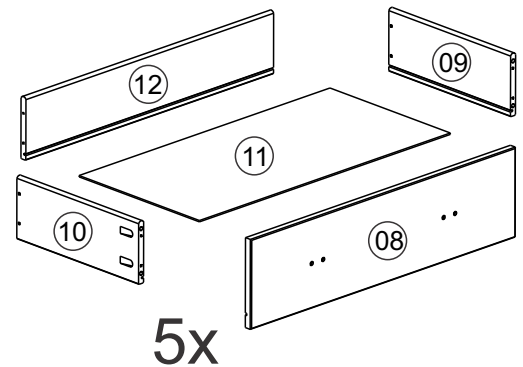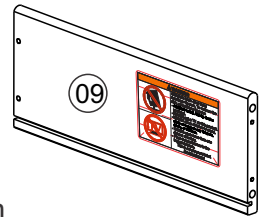


STEP 1

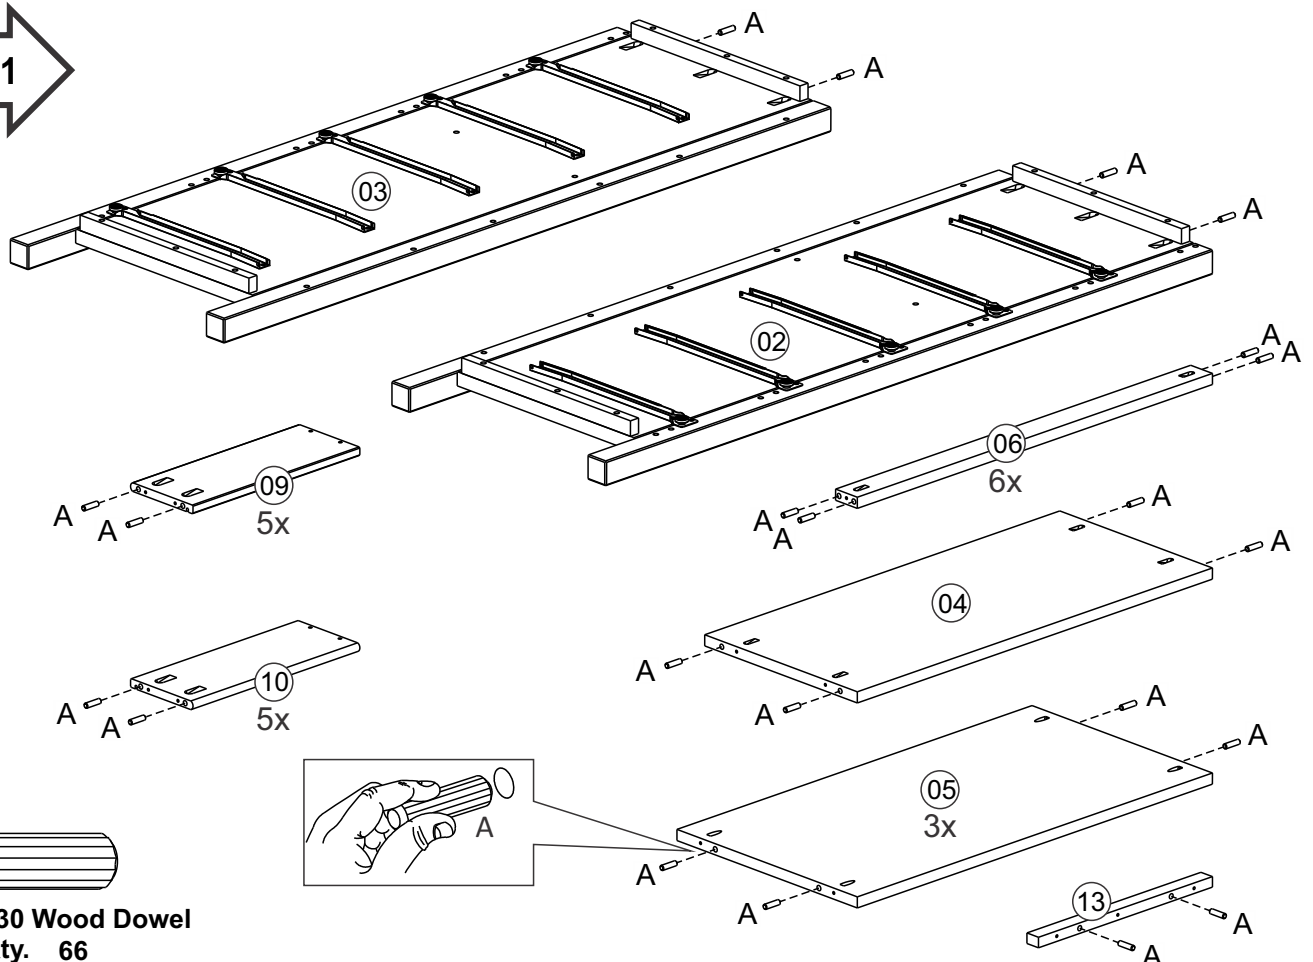


A - 8,0x30 Wood Dowel
Qty. 66

STEP 2

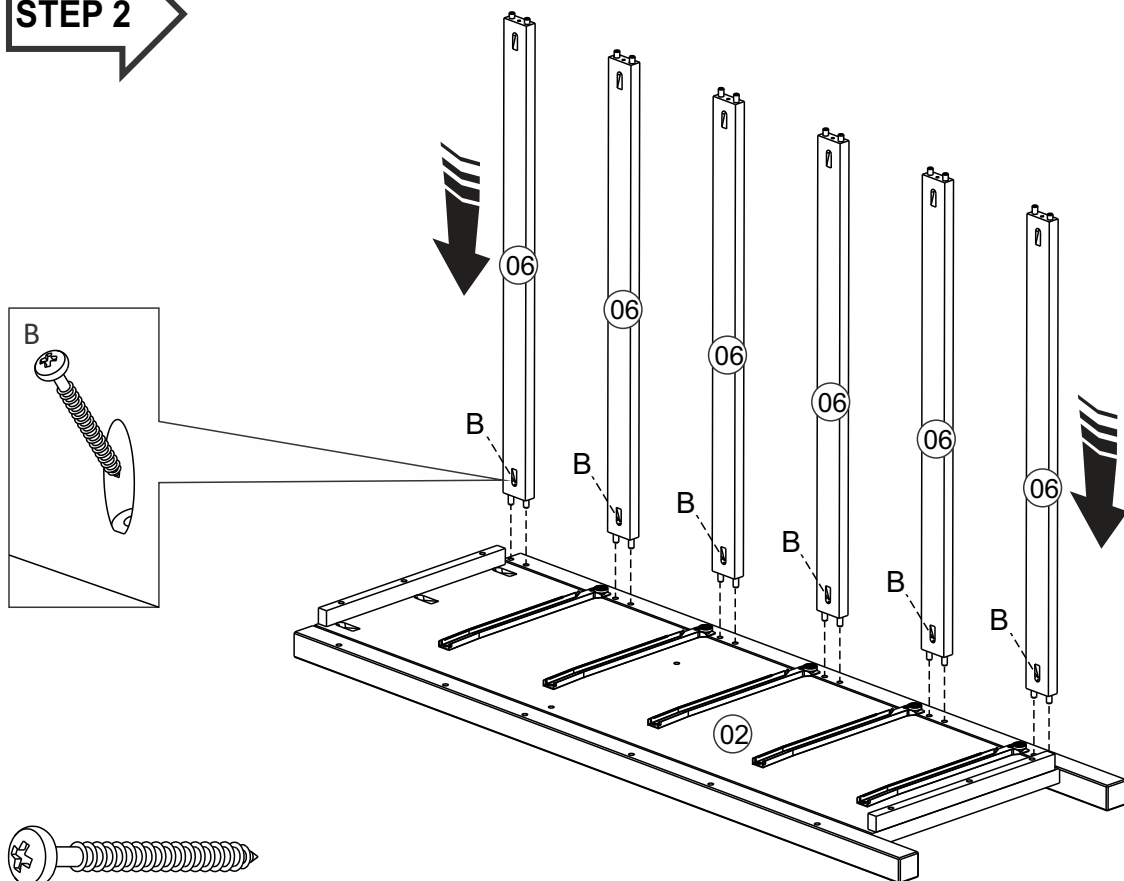



B - 4,0x30 Screw
Qty. 06

STEP 3

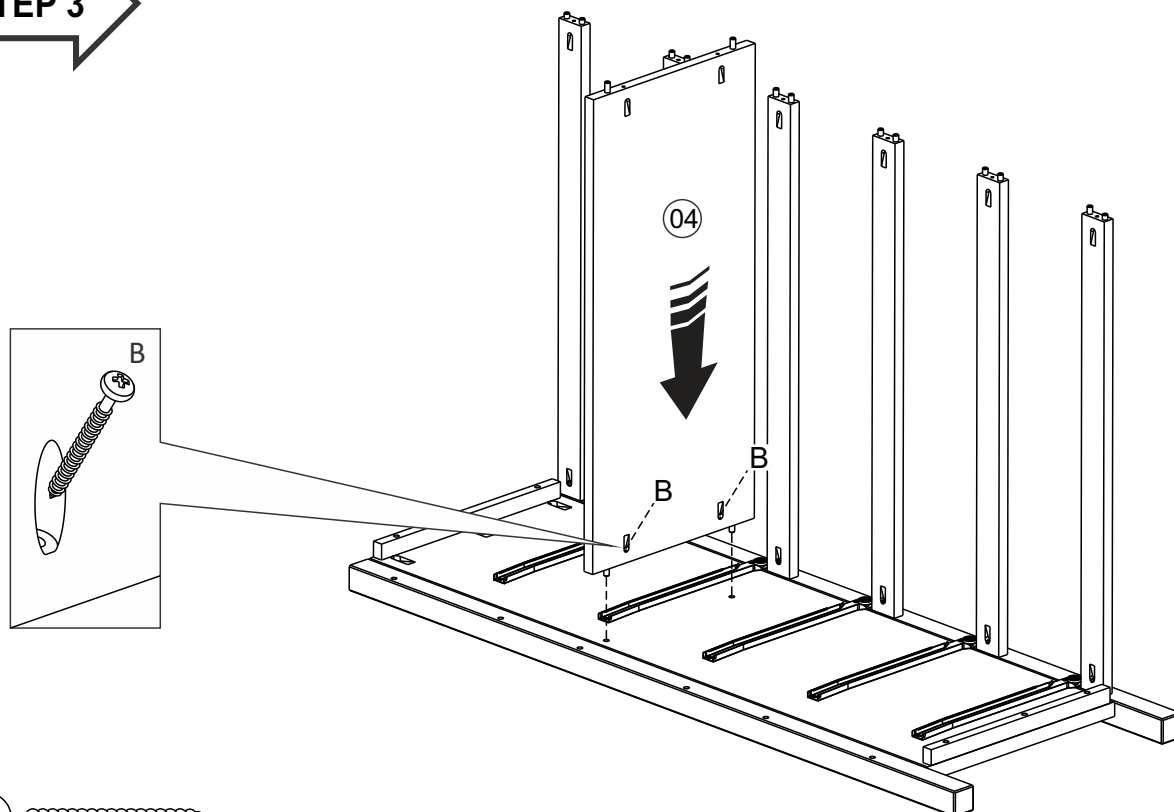



B - 4,0x30 Screw
Qty. 02

STEP 4

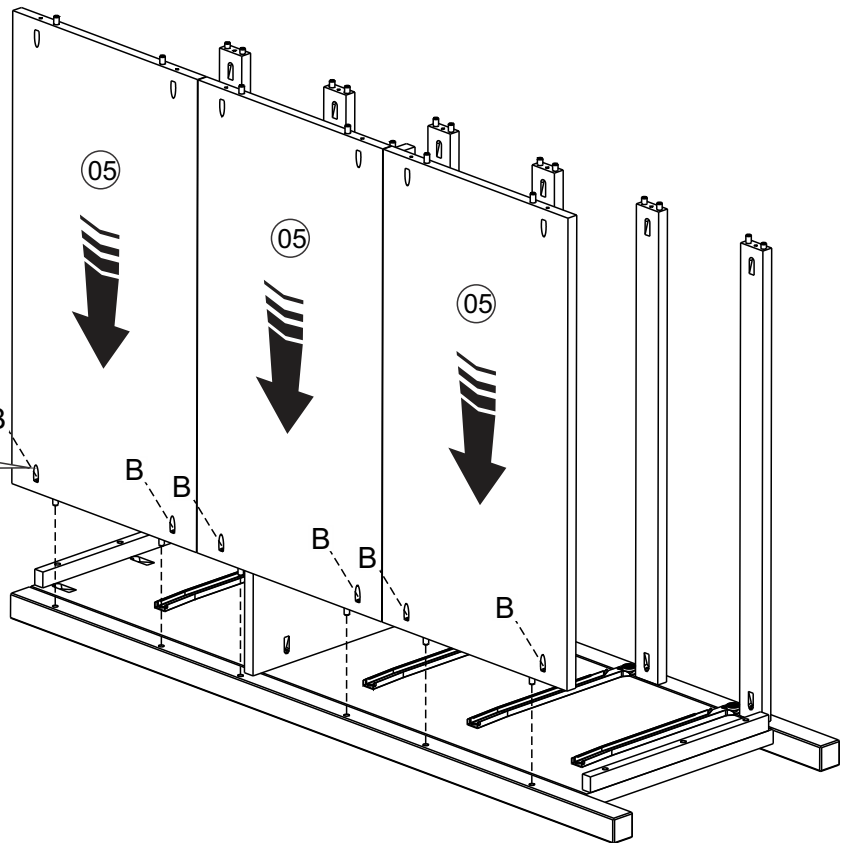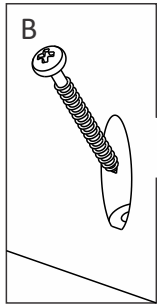


B - 4,0x30 Screw
Qty. 06

STEP 5

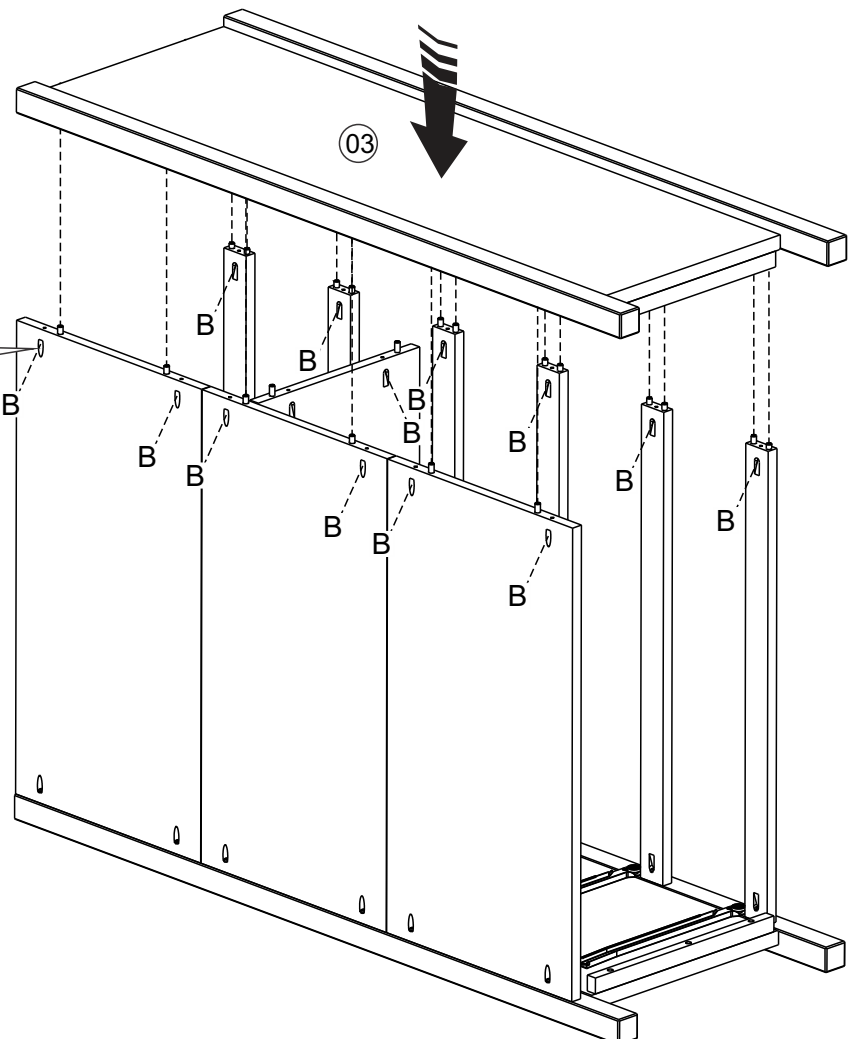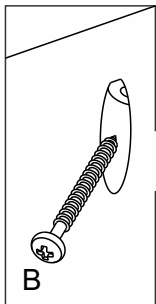


B - 4,0x30 Screw
Qty. 14

STEP 6

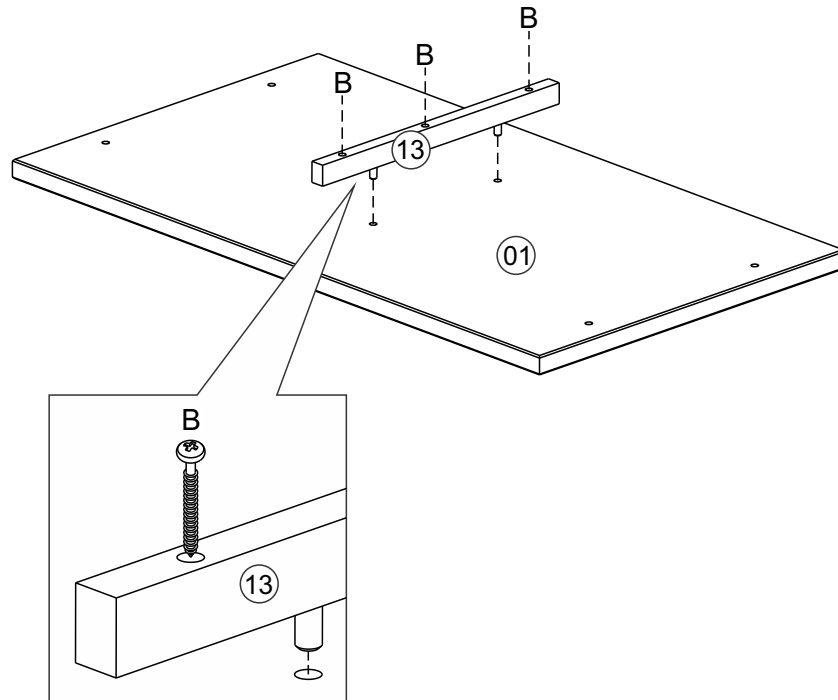




B - 4,0x30 Screw
Qty. 03

STEP 7

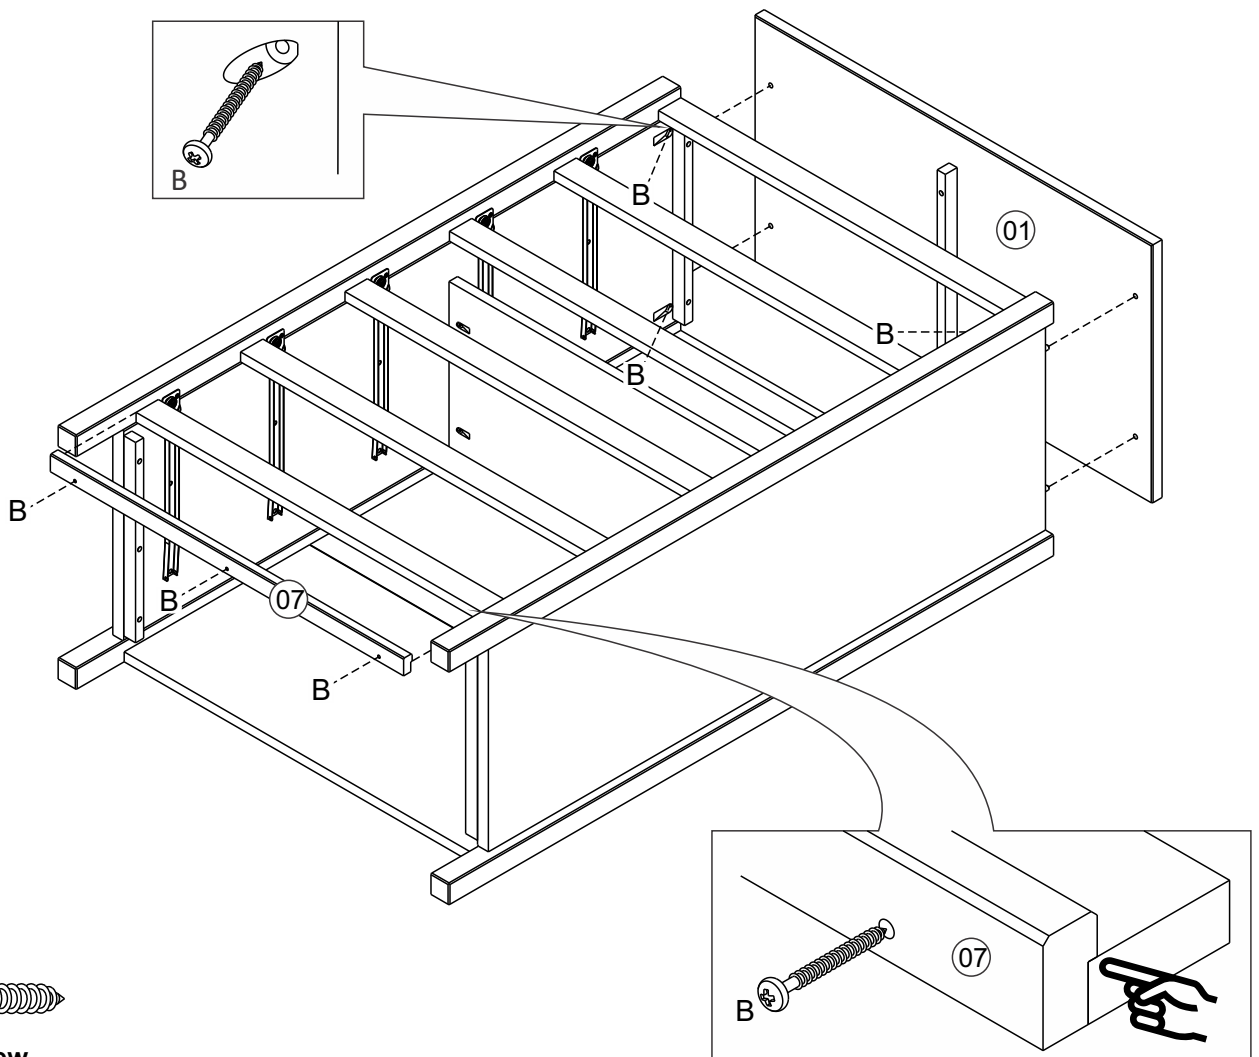


B - 4,0x30 Screw
Qty. 07

STEP 8

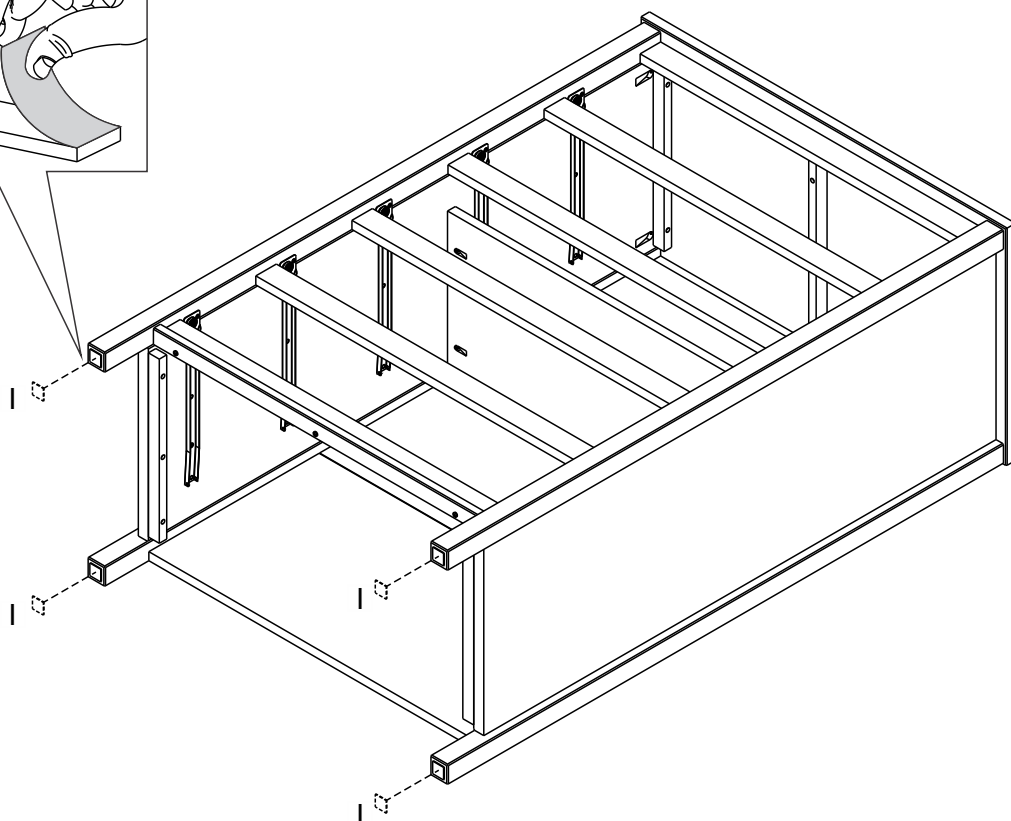
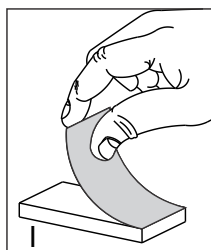


I - 25x25 Sticker Ribbon
Qty. 04

STEP 9

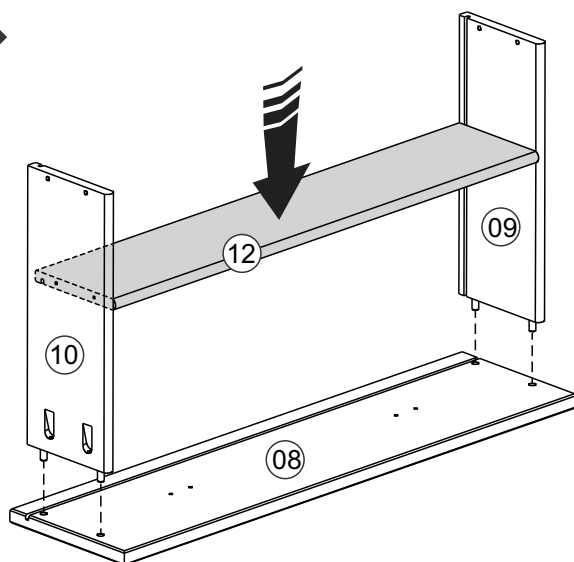


5x

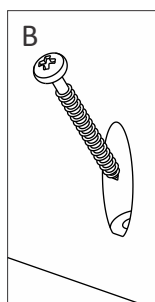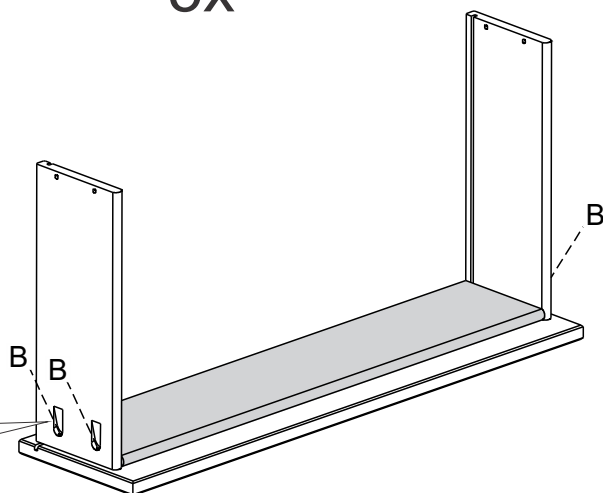


B - 4,0x30 Screw
Qty. 20

STEP 10

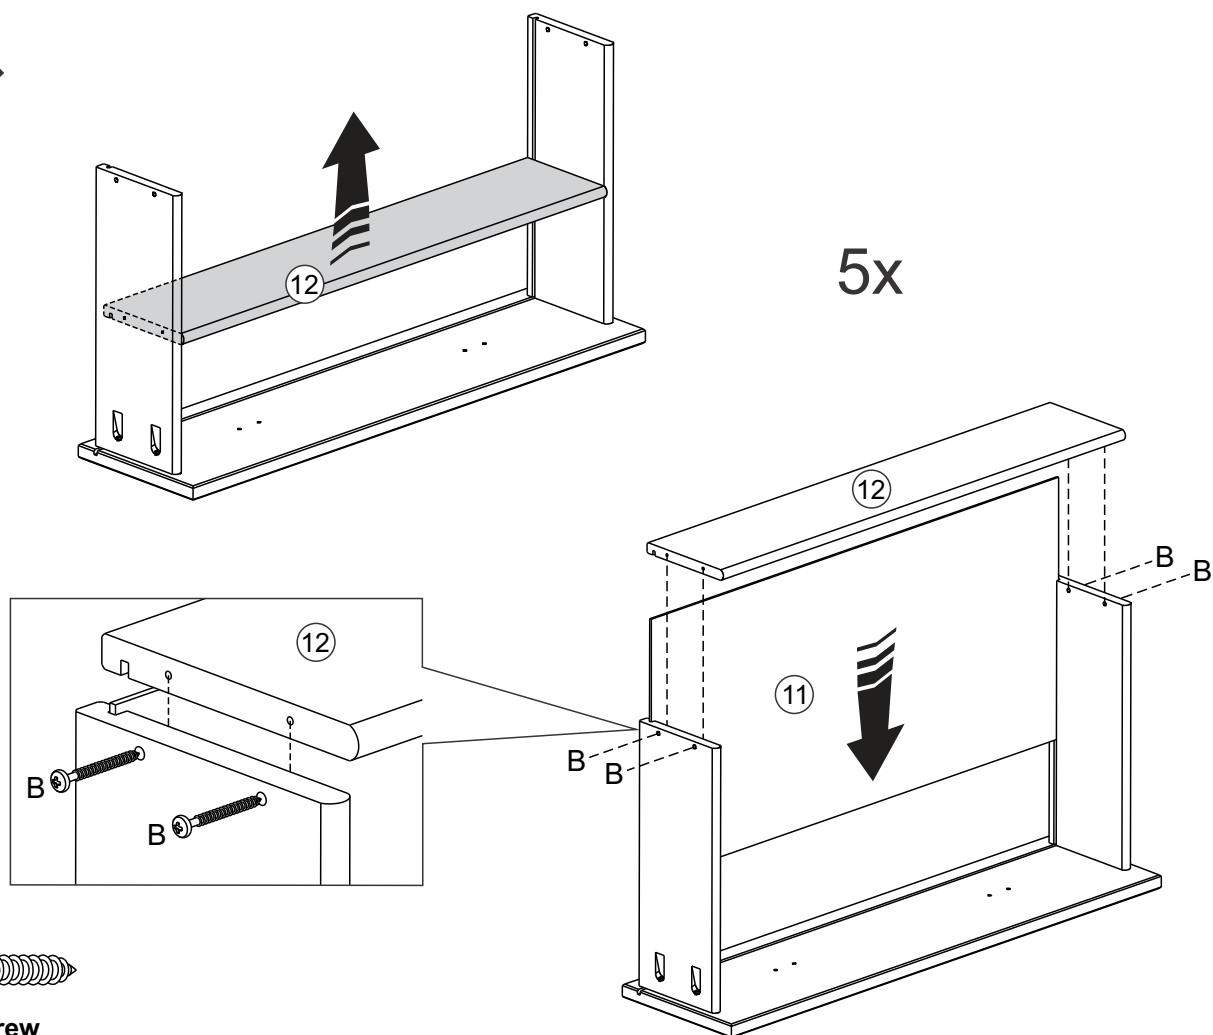

B - 4,0x30 Screw
Qty. 20


STEP 11

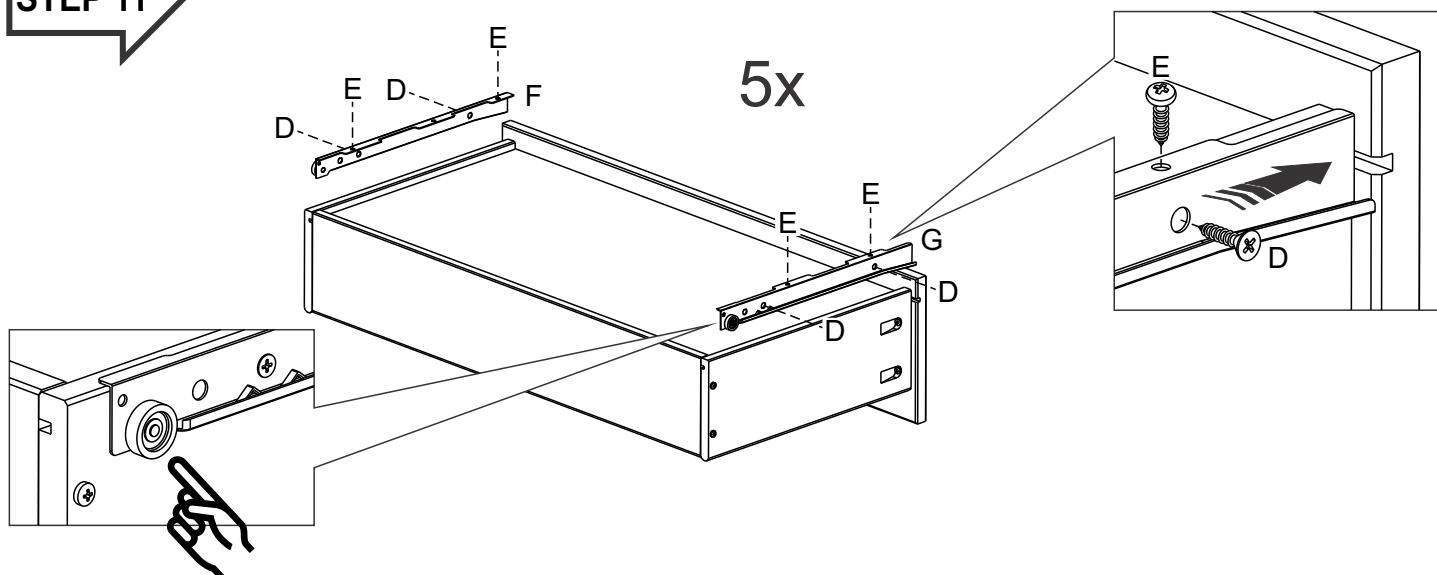


D - 4,0x14 Screw
Qty. 20



E - 3,5x16 Screw
Qty. 20

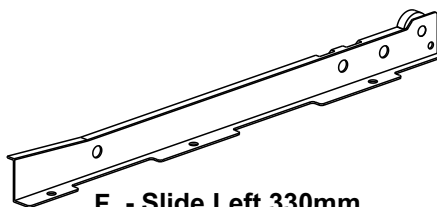


F - Slide Left 330mm
Qty. 05


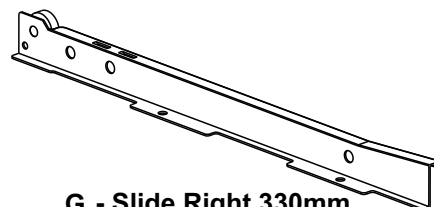


G - Slide Right 330mm
Qty. 05

STEP 12

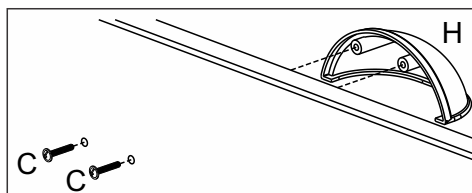

5x

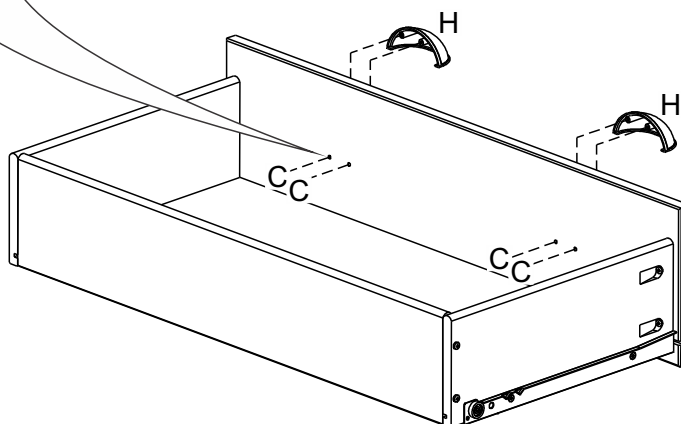




C - M4x22 Screw
Qty. 20



H - Drawer Knob
Qty. 10

STEP 13

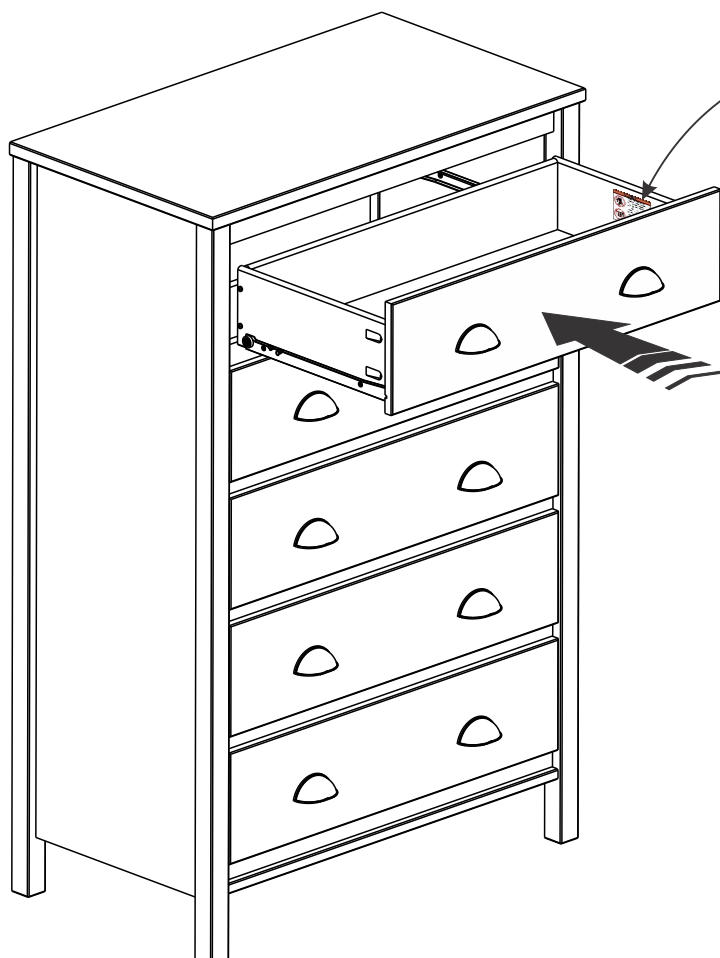

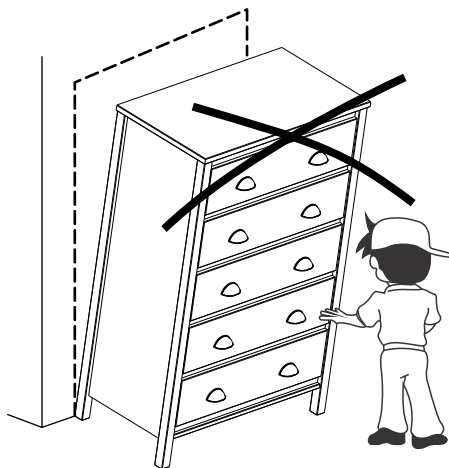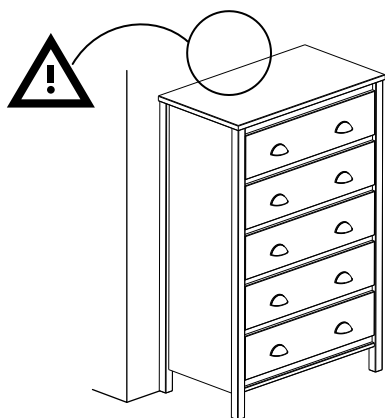

Anti-Tip Kit

