

**installation instructions:**

# WOOD DECORATIVE FLAT TRIM

## SAFETY INSTRUCTIONS

Make sure to use the correct tools recommended.

Wear safety goggles.

Follow fixture, power tools, and paint manufacturers' instructions and users manuals.

Use common sense and follow good construction practices.

## TOOL & MATERIAL CHECKLIST

- Standard power grab adhesive
- Circular Saw or Table Saw
- Paint or quality wood stain
- Brad nailer or hammer
- Fine sandpaper
- Small brad nails
- Chalk line and measuring tape

## IMPORTANT INFO

- It is highly recommended that you paint or stain the panels before installation.
- It is recommended for finishing to use quality paint for MDF panels and stain for all other wood species.
- Make sure the surface and the back of the panel are completely dry before installation.
- Before installing, acclimate the wood panels in the room where you will be installing them.
- In most applications you will have to trim some panels. Cut them with a standard table saw or power tool. Sand cut edge to remove debris.
- Depending on your installation method, use standard power grip adhesive and small brad nails.


## INSTALL INSTRUCTIONS:

### GENERAL INSTALLATION

1. It is highly recommended that you paint or stain the panels before installation.
2. Smooth installation surface with sandpaper by removing excessive bumps or texture. Wipe wall clean to clear debris.
3. Locate studs and mark for nail placement.
4. Apply a continuous 1/2" bead of construction adhesive along the back of moulding lengths.
5. Press moulding against wall at the desired location.
6. Use finishing nails to secure moulding into place.
7. Apply putty/filler in remaining gaps and smooth with finger.
8. Touch-up moulding as needed with paint or stain.



## EXAMPLE DIAGRAM:

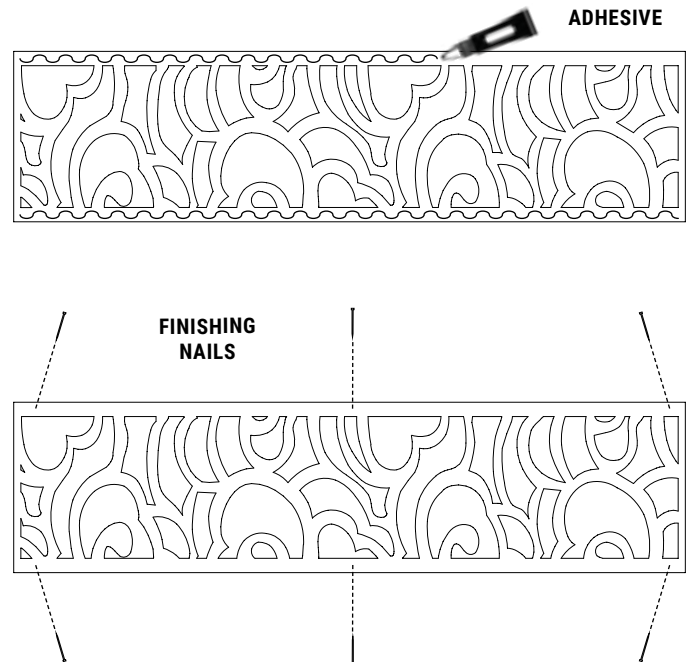

Industry leading manufacturer of urethane, PVC, wood, rustic, and metal millwork

We Can Help. Call (866) 607-0453

[www.ekenamillwork.com](http://www.ekenamillwork.com)