


8'x10'Resin Outdoor Storage Shed

If you have any questions about the product, please feel free to contact us.

E-Mail: Patiofurniture Serviceteam@outlook.com

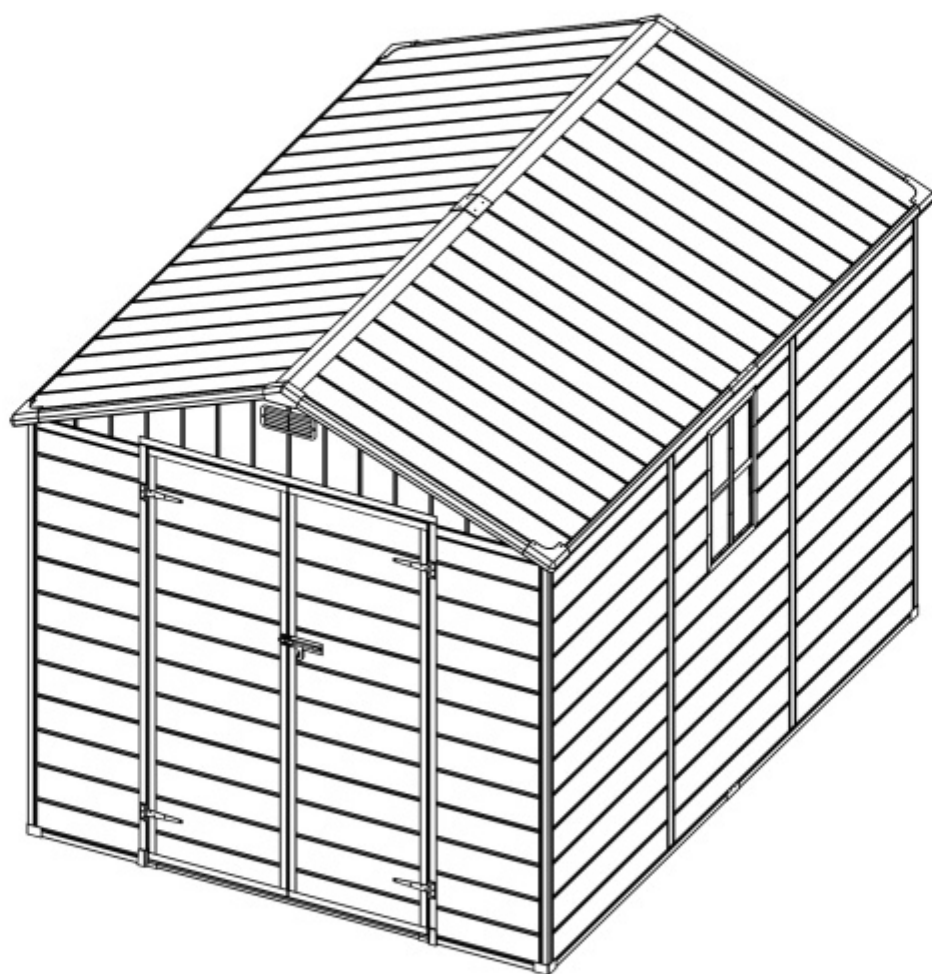

After-sales mailbox:

Patiofurniture Serviceteam@outlook.com

NOTICE



Please keep these instructions for future reference.

Dear Customer

- Thank you for your purchase. When you receive the product, please make sure that all the parts are intact. Then follow the entire installation instructions to install!
- When installing, please be careful not to tighten the screws immediately! You need to make sure that all the screws are secured to 80%, then tighten them!

- A. The outer box is damaged
- B. The product is damaged / bent / cracked while you open the box
- C. The parts / accessories / assembly tools are missing
- D. The instructions are not clear and can not be referred
- E. The product has functional problems
- F. Other aspects that you are not satisfied with

Please feel free to contact us for help, and provide the following information:

Platform/Shop name/Order ID/buyer's name/ Receiver's address/Problem description.

(Patiofurniture Serviceteam@outlook.com) will reply within 24 hours and will do our best to resolve the problem for you.

°



Please keep the original boxes for returns, refunds will be refused for other boxes. Check the integrity of the components and handle them gently during installation!

The assembly area requires protective measures to avoid surface damage during the assembly process.


Level the ground surface | Nivelez la surface du sol | Nivela la superficie del suelo | Ebnet Sie die Bodenoberfläche | Maak de bodem vlak | Livellare la superficie del terreno | Nivela a superfície do solo



Recommendation: Construct a wooden or concrete base as a foundation | Recommandation: fabriquez une base en bois ou en béton en guise de fondation | Recomendación: construya una base de madera o de cemento a modo de cimiento | Empfehlung: Bauen Sie als Fundament eine Grundfläche aus Holz oder Beton | Aanbeveling: maak een houten of betonnen ondergrond als fundering | Raccomandazione: Costruire una base di legno o di cemento come fondamenta | Recomendação: Construa uma base de madeira ou de cimento como fundação

Option | Opción | optie | opzione | opção

A

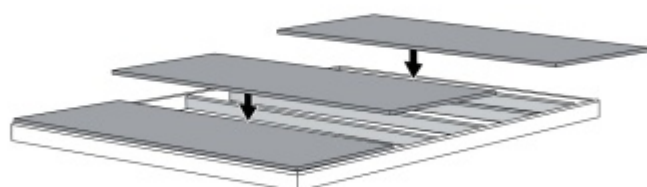


Option | Opción | optie | opzione | opção

B



External floor measurements are: | Les mesures externes de la étage sont: | Las medidas del suelo externo son: | Die Außen-Bodenmaße betragen: | De afmetingen van de externe vloer zijn: | Le dimensioni esterne del pavimento sono: | As medidas externas do chão são:

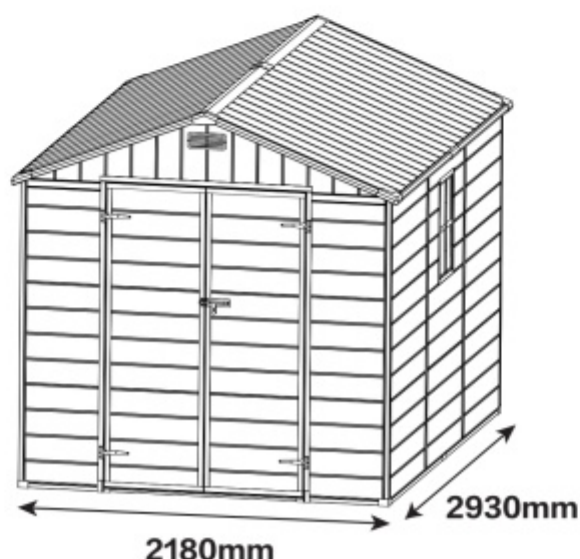

BEFORE STARTING ASSEMBLY | AVANT DE COMMENCER LE MONTAGE | ANTES DE EMPEZAR EL ARMADO | VOR MONTAGEBEGINN | VOORDAT U BEGINT TE MONTEREN | PRIMA DI INIZIARE L'ASSEMBLAGGIO | ANTES DE INICIAR A MONTAGEM

Read the care and safety guidelines at the end of this manual | Check to ensure that there are no missing or damaged parts BEFORE starting or arranging assembly | Remove all parts from the package(s) and spread them out on a clean work surface | Review all assembly instructions | Assemble all the parts according to the directions in this manual. Do not skip any steps.

Lisez les instructions de précaution et de sécurité à la fin de ce manuel | Assurez-vous qu'il n'y a pas de pièces manquantes ou endommagées AVANT de commencer ou d'organiser l'assemblage | Retirez toutes les pièces du/des paquet(s) et étalez-les sur une surface de travail propre | Lisez toutes les instructions de montage | Assemblez toutes les pièces selon les instructions de ce manuel. Ne sautez aucune étape.

Lea las instrucciones de precauciones y seguridad que están al final de este manual | Asegúrese de que no faltan piezas ni están dañadas ANTES de comenzar o disponer el montaje | Saque todas las piezas del paquete o paquetes y póngalas sobre una superficie de trabajo limpia | Revise todas las instrucciones de montaje | Monte todas las piezas según las instrucciones de este manual. No se saltee ningún paso.

Lesen Sie die Sicherheitsrichtlinien am Ende des Benutzerhandbuchs durch | Prüfen Sie bitte VOR dem Zusammenbau, dass keine Teile beschädigt sind oder fehlen | Nehmen Sie alle Teile aus der Verpackung und breiten Sie sie auf einer sauberen Arbeitsfläche aus | Gehen Sie noch einmal die komplette Aufbauanleitung durch | Bauen Sie alle Teile entsprechend der Anleitung in diesem Handbuch zusammen. Lassen Sie dabei keinen Arbeitsschritt aus.

Lees de richtlijnen voor zorg en veiligheid achterin deze handleiding | Controleer dat er geen onderdelen mankeren, of beschadigd zijn, VOORDAT u met de montage begint | Haal alle onderdelen uit het pakket (of uit de pakketten) en leg ze op een schoon werkoppervlak | Bekijk alle montagehandleidingen | Monteer alle onderdelen volgens de aanwijzingen van deze handleiding. Sla geen stappen over.

Leggere le linee guida di assistenza e sicurezza alla fine di questo manuale | Assicurarsi che non ci siano parti mancanti o danneggiate PRIMA di iniziare l'assemblaggio | Estrarre tutti i componenti dall'imballo e posizzarli su una superficie di lavoro pulita | Consultare tutte le istruzioni di montaggio | Assemblare tutti i componenti secondo le istruzioni contenute nel manuale. Non saltare nessuna fase.

Leia as diretrizes de cuidados e segurança que constam da parte final deste manual | Verifique para se assegurar de que não há peças em falta ou danificadas ANTES de começar a preparar a montagem | Retire todas as peças da embalagem e espalhe-as numa superfície de trabalho limpa | Reveja todas as instruções de montagem | Monte todas as peças de acordo com as instruções do manual. Não salte quaisquer passos.

REQUIRED TOOLS | OUTILS EXIGÉS | HERRAMIENTAS NECESARIAS | BENÖTIGTE WERKZEUGE | BENODIGD GEREEDSCHAP | ATTREZZATURA OCCORRENTE | FERRAMENTAS NECESSÁRIAS



SPATULA | SPATULE | ESPÁTULA | SPACHTEL | SPATEL | SPATOLA | ESPÁTULA

- Use spatula (part "SG8") for easier insertion of panel into profile.
- Utilisez la spatule (partie "SG8") pour une meilleure insertion du panneau dans le profil.
- Utilice una espátula (pieza "SG8") para una mejor inserción del panel en el perfil.
- Benutzen Sie den Spachtel (Bezeichnung "SG8"), um die Platten leichter in die Nut einführen zu können.
- Gebruik spatel (onderdeel SG8) voor het gemakkelijk invoeren van het paneel in het profiel.
- Utilizzare la spatola (parte SG8) per inserire il pannello più facilmente nel profilo.
- Utilize uma espátula (peça "SG8") para facilitar a inserção do painel no perfil.
















SG8 x2



ASSEMBLY REQUIRES TWO PEOPLE | LE MONTAGE DOIT ÊTRE EFFECTUÉ PAR DEUX PERSONNES | SE NECESITAN DOS PERSONAS PARA ARMARLO | ZWEI PERSONEN ZUR MONTAGE NOTWENDIG | MONTAGE VEREIST TWEE PERSONEN | L'ASSEMBLAGGIO RICHIEDE DUE PERSONE | A MONTAGEM EXIGE DUAS PESSOAS







PART LIST

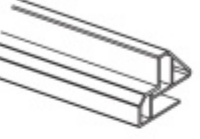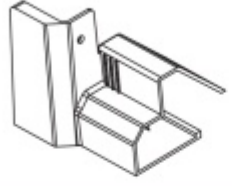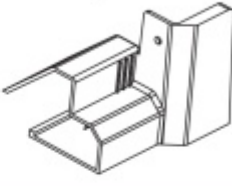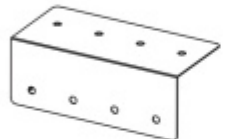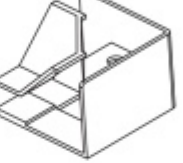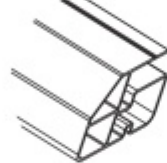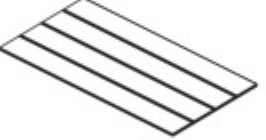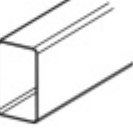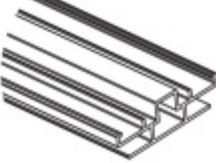QF6-1 	QF6-2 	QP3 	QP50 	QP1 
8 pcs	2 pcs	2 pcs	4 pcs	2 pcs
QP52B 	QP52A 	DP4 	SG7-1 	SG7-2 
2 pcs	2 pcs	1 pc	1 pc	1 pc
SG19 	SG6 	QP51 	QP35 	CS4-1 
3 pcs	4 pcs	4 pcs	4 pcs	3 pcs
CS2-12 	CS4 	QR5-1 	QR5-6 	QS8G1 
6 pcs	2 pcs	8 pcs	2 pcs	1 pc
QS8G2 	QS8B 	QP53 	SG44 	CS3A 
1 pc	1 pc	2 pcs	1 pc	3 pcs
QP33 	SG2 	SG1 	SG20B 	QP34 
4 pcs	4 pcs	2 pcs	2 pcs	8 pcs






PART LIST

QW12-1	QW12-2	QW12-3	QW2-1	QW2-2
14 pcs	2 pcs	2 pcs	4 pcs	2 pcs
QW3-2	QW3-1	QT1-6	QT1-21	QT1-8
2 pcs	4 pcs	1 pc	1 pc	1 pc
QT1-9	QT1-10	QT1-1	QT1-17	QT1-20
1 pc	1 pc	1 pc	1 pc	1 pc
QT1-19	QT1-5	SS3	SS4	QS7
1 pc	1 pc	1 pc	1 pc	1 pc
QS9	PPA1	PPA2	QAP1	QAP3
4 pcs	4 pcs	1 pc	2 pcs	2 pcs
DP5	QS8	SS6	SG43	BY
4 pcs	2 pcs	1 pc	4 pcs	2 pcs

PART LIST

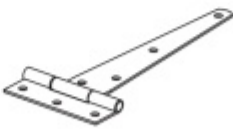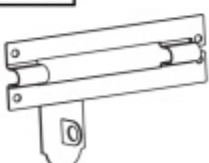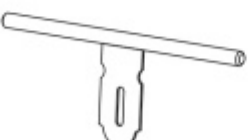BJ-1 	DA3 	DA1L 	DA2L 	DA1 
1 pc	1 pc	1 pc	1 pc	1 pc
DA2 	DA2R 	DA1R 	DA4 	DS1 
1 pc	1 pc	1 pc	2 pcs	2 pcs
DD1-1 	DD1-2 	DD1-3 	DD1-4 	DD1-5 
1 pc	1 pc	1 pc	1 pc	1 pc
DD1-6 	SG10 	SG101 	SG102 	JT 
1 pc	2 pcs	2 pcs	2 pcs	2 pcs
JT-1 	MO1 	M03-6L 	M03-7 	M04 
1 pc	4 pcs	1 pc	1 pc	1 pc
SG9 	DC 	Drill 	SG8 	Z410 
5 pcs	2 pcs	1 pc	2 pcs	220 pcs

PART LIST

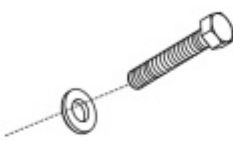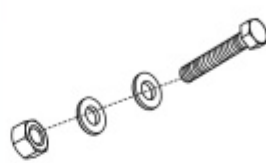
Z420	Z425	ZW413	ZW426	QS6
				
164 pcs	16 pcs	79 pcs	1 pc	1 pc
M820	M850			
				
2 pcs	3 pcs			




- Use spatula  (part"SG8") for easier insertion of panel into profile.
- Please ensure the panels are all installed on position before screwing.
- Please be mindful of the screw size used during installation; using screws that are too long may damage the shed.

1. Please ensure that all accessories are complete before starting the installation.
2. Due to the variety of accessories, many accessories may be glued together, please check carefully
3. If any accessories are missing or damaged, please contact the seller immediately.

E-Mail: Patiofurniture Serviceteam@outlook.com

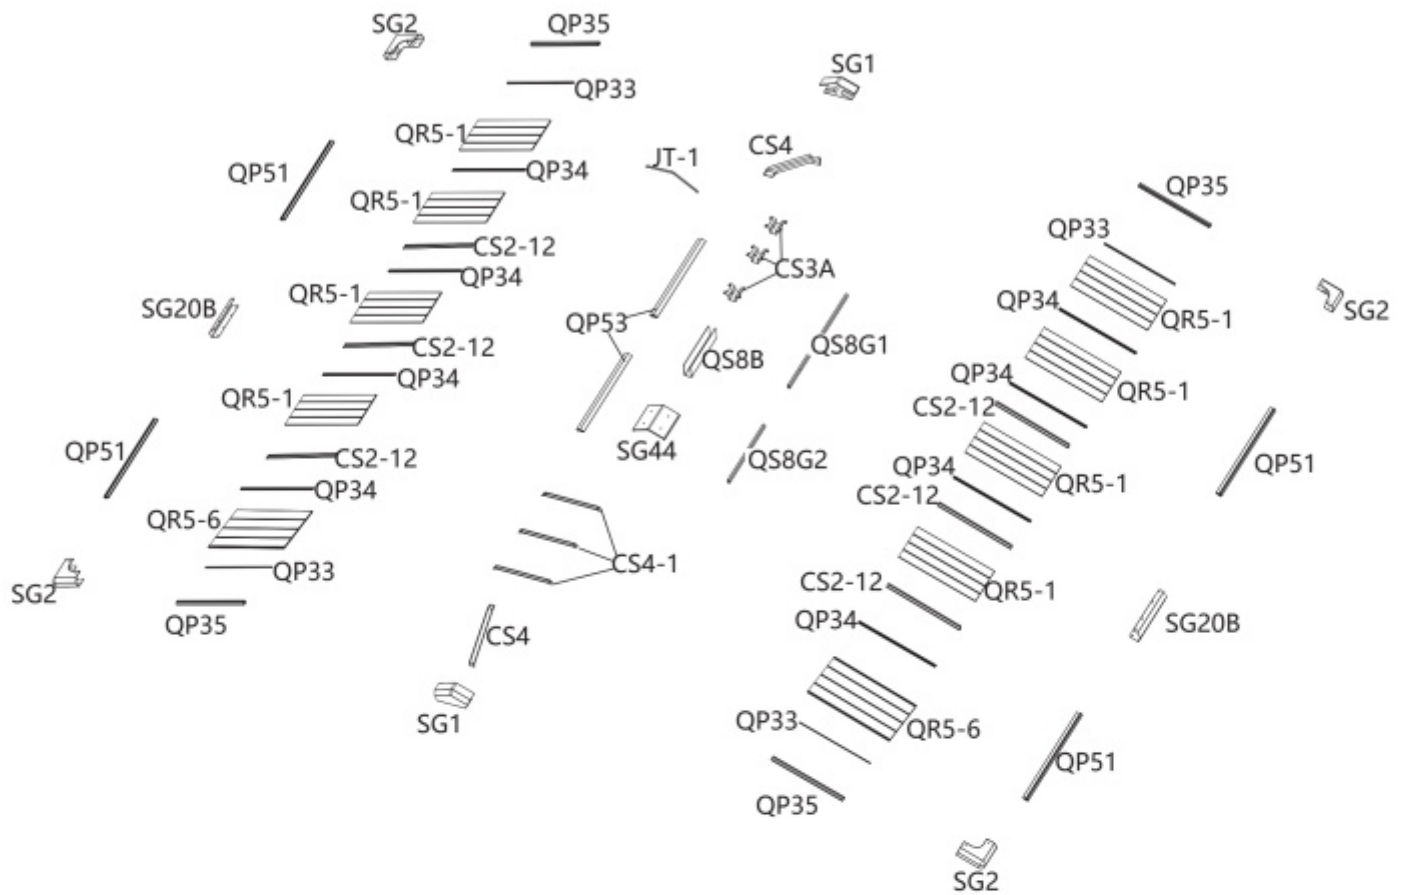


Floor pars

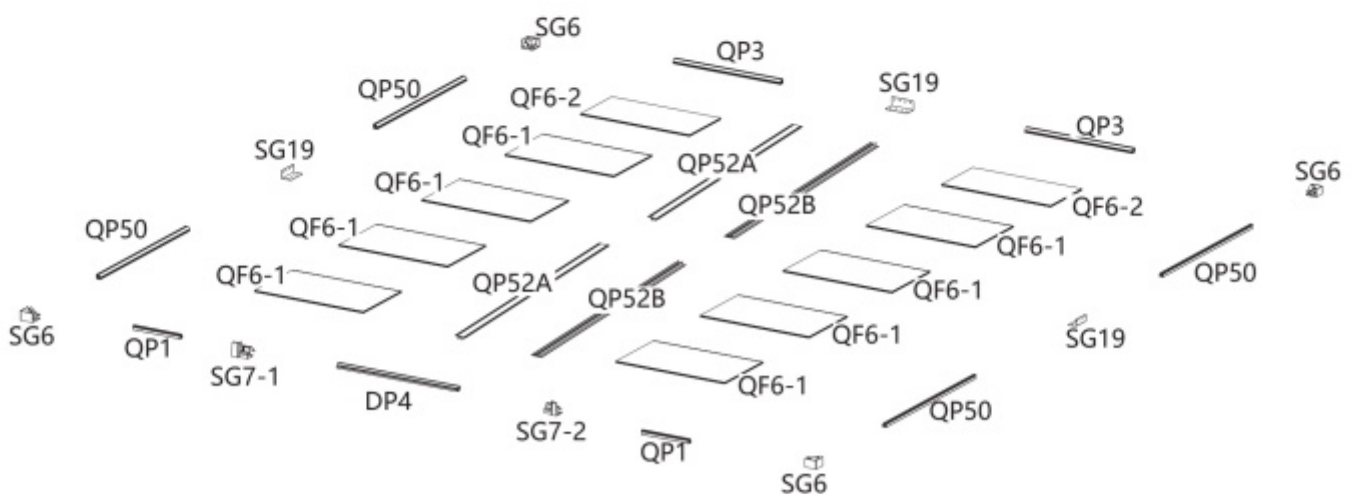


PARTS SCHEMATIC


Rear side

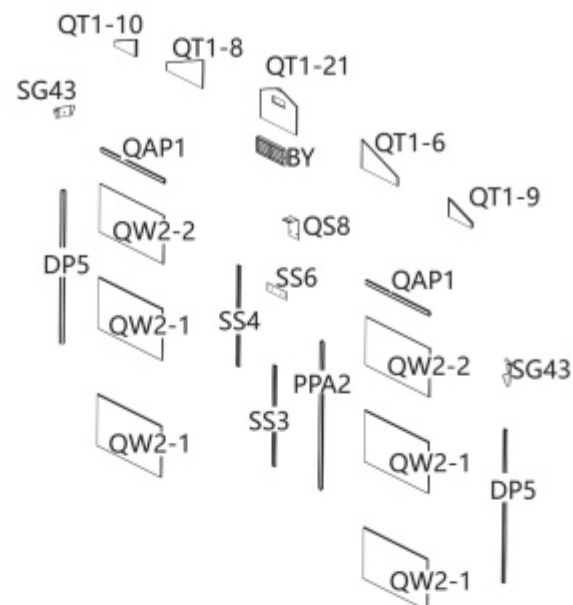


Left

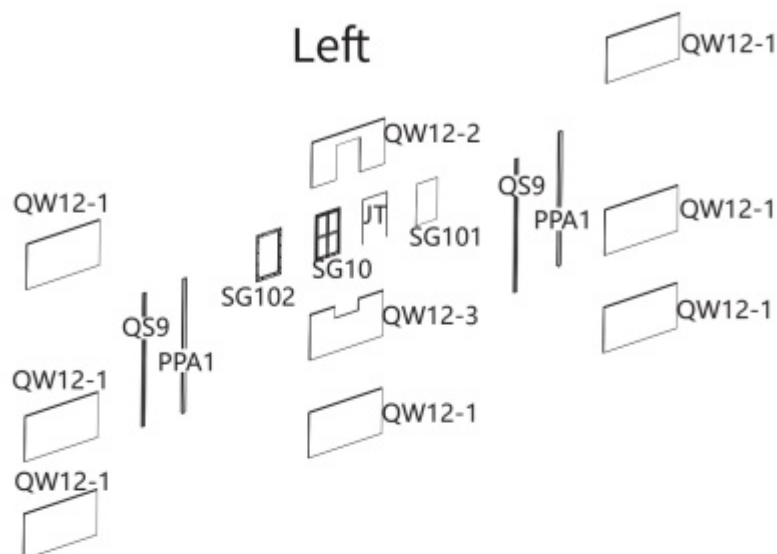



Right

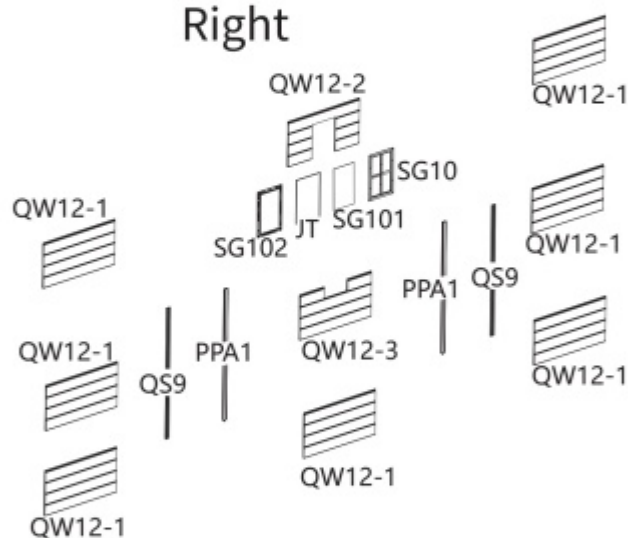


Front and door parts

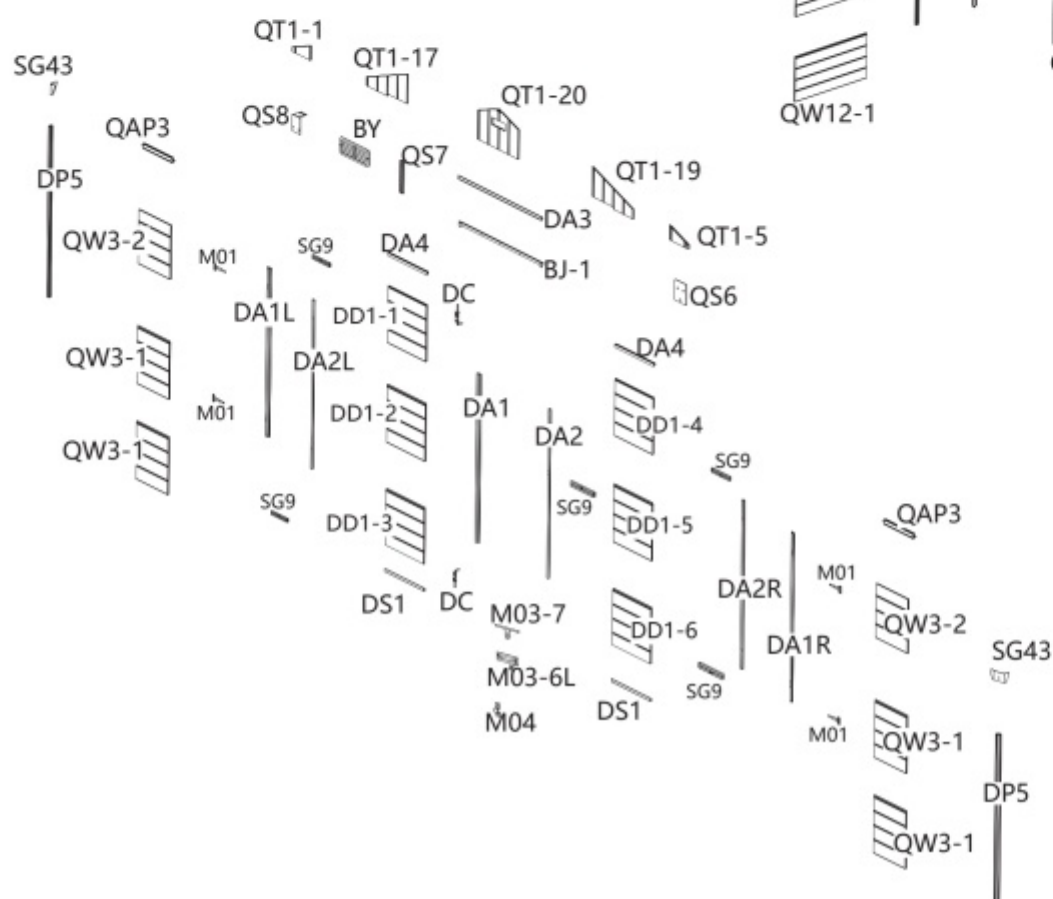


FLOOR ASSEMBLY

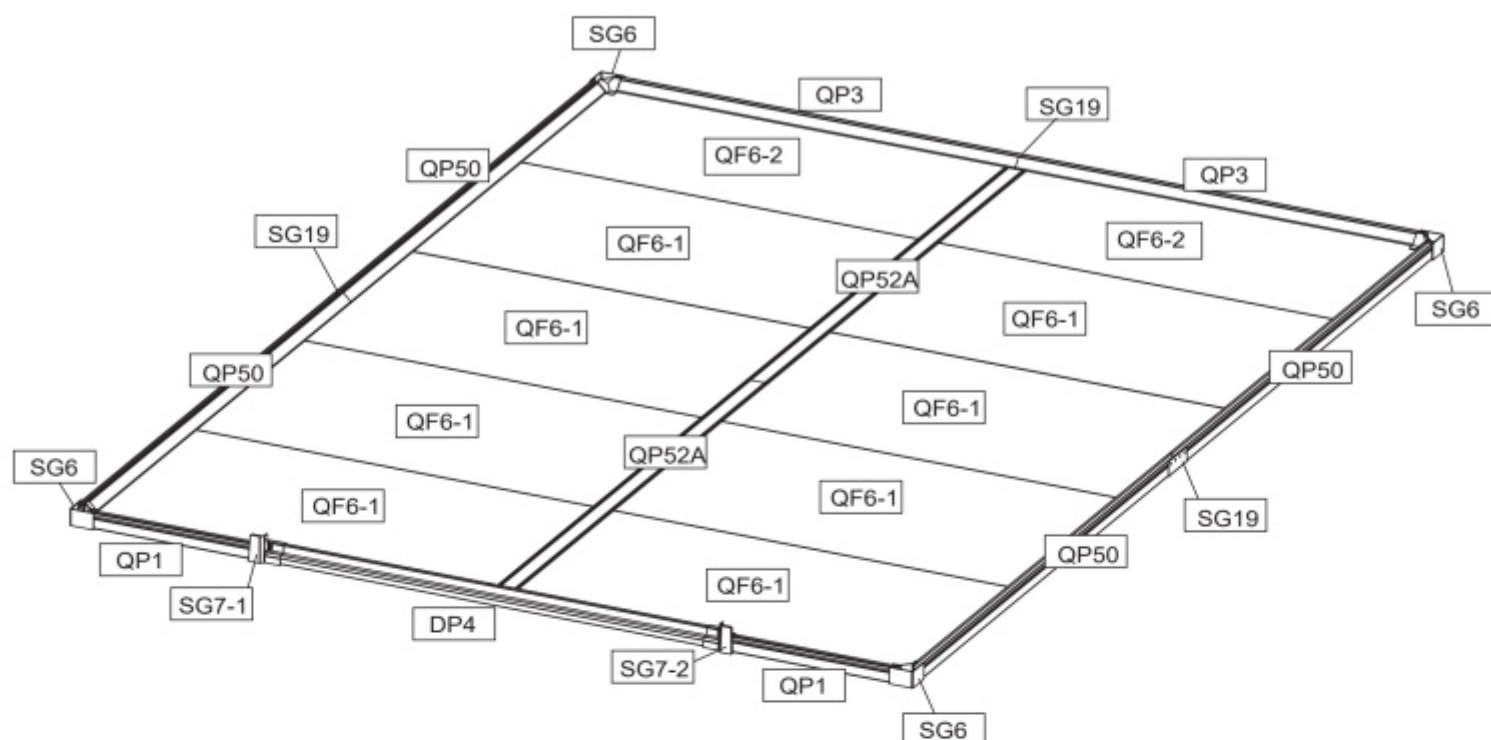


- After the floor is installed, it should be laid out neatly.

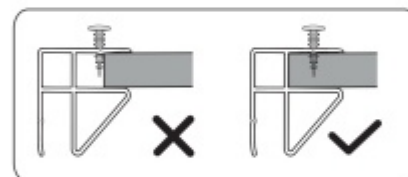

- The screws are to connect the sheet metal and the profile together.

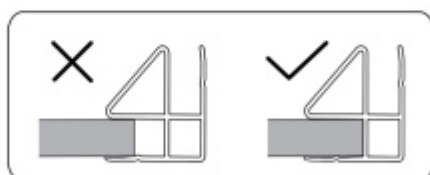

- The plates and sections should be in close contact.

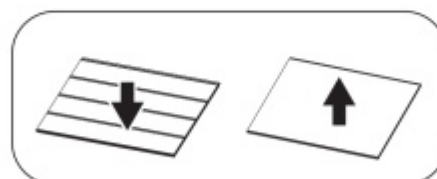

- The side of the floor with the grain should face down.



- Use spatula (part "SG8") for easier insertion of panel into profile.


STEP 1






- In this step, place the flooring with the grain surface facing up.

QF6-1	QF6-2	Z410
8 PC	2 PC	16 PC

01-1

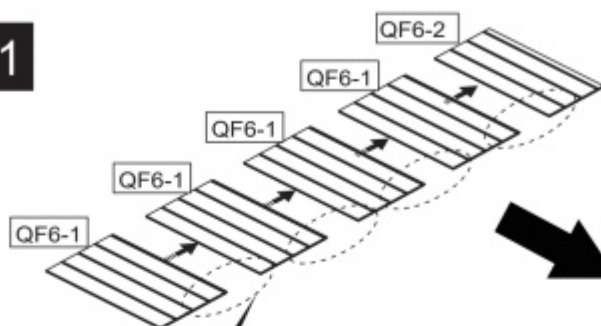


- Measure the diagonal of the assembled board E=F.

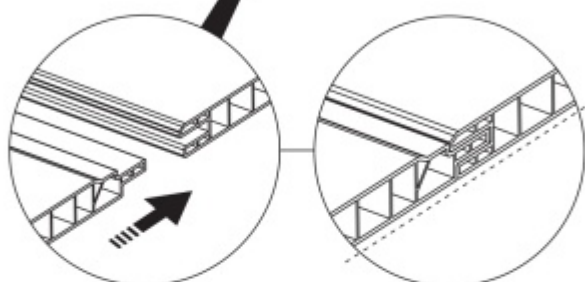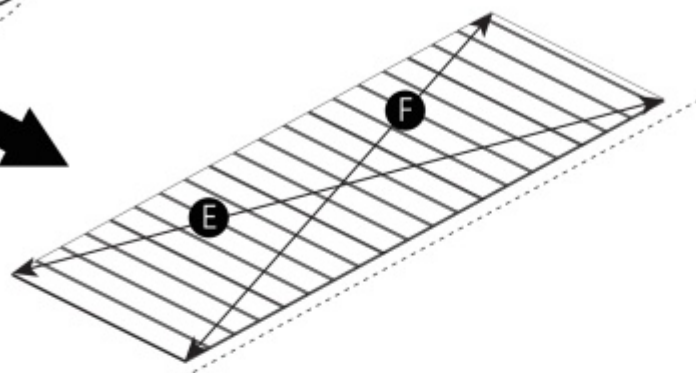



- After the floor is installed, it should be laid out neatly.

x2

01-2

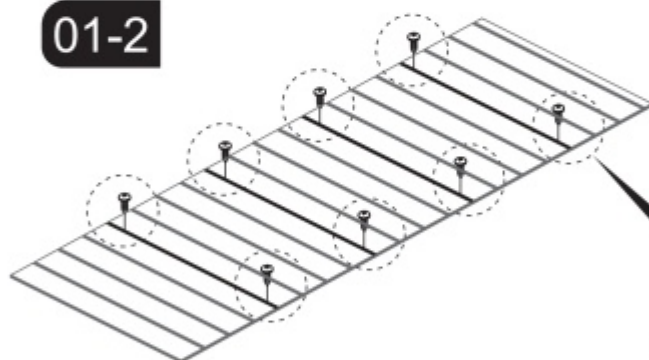


- Drill a screw into the joint of the board according to the drawing.

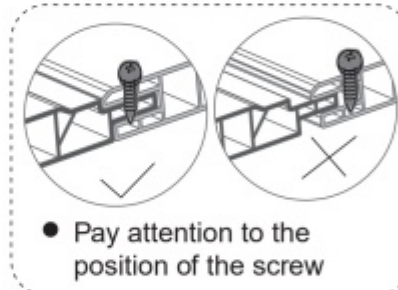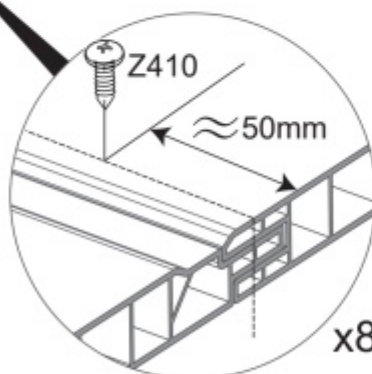

- Pay attention to the position of the screw

x2

01-3

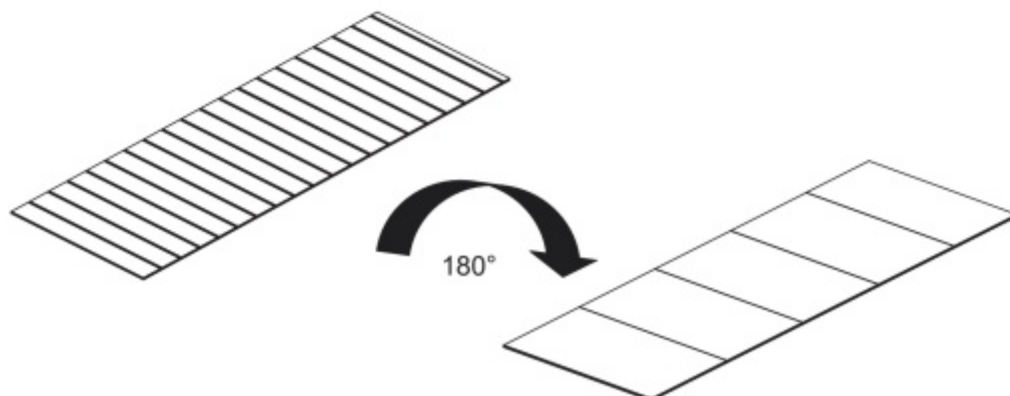


x2

STEP 2


02-1



SG6	QP3	QP50
2 PC	2 PC	4 PC

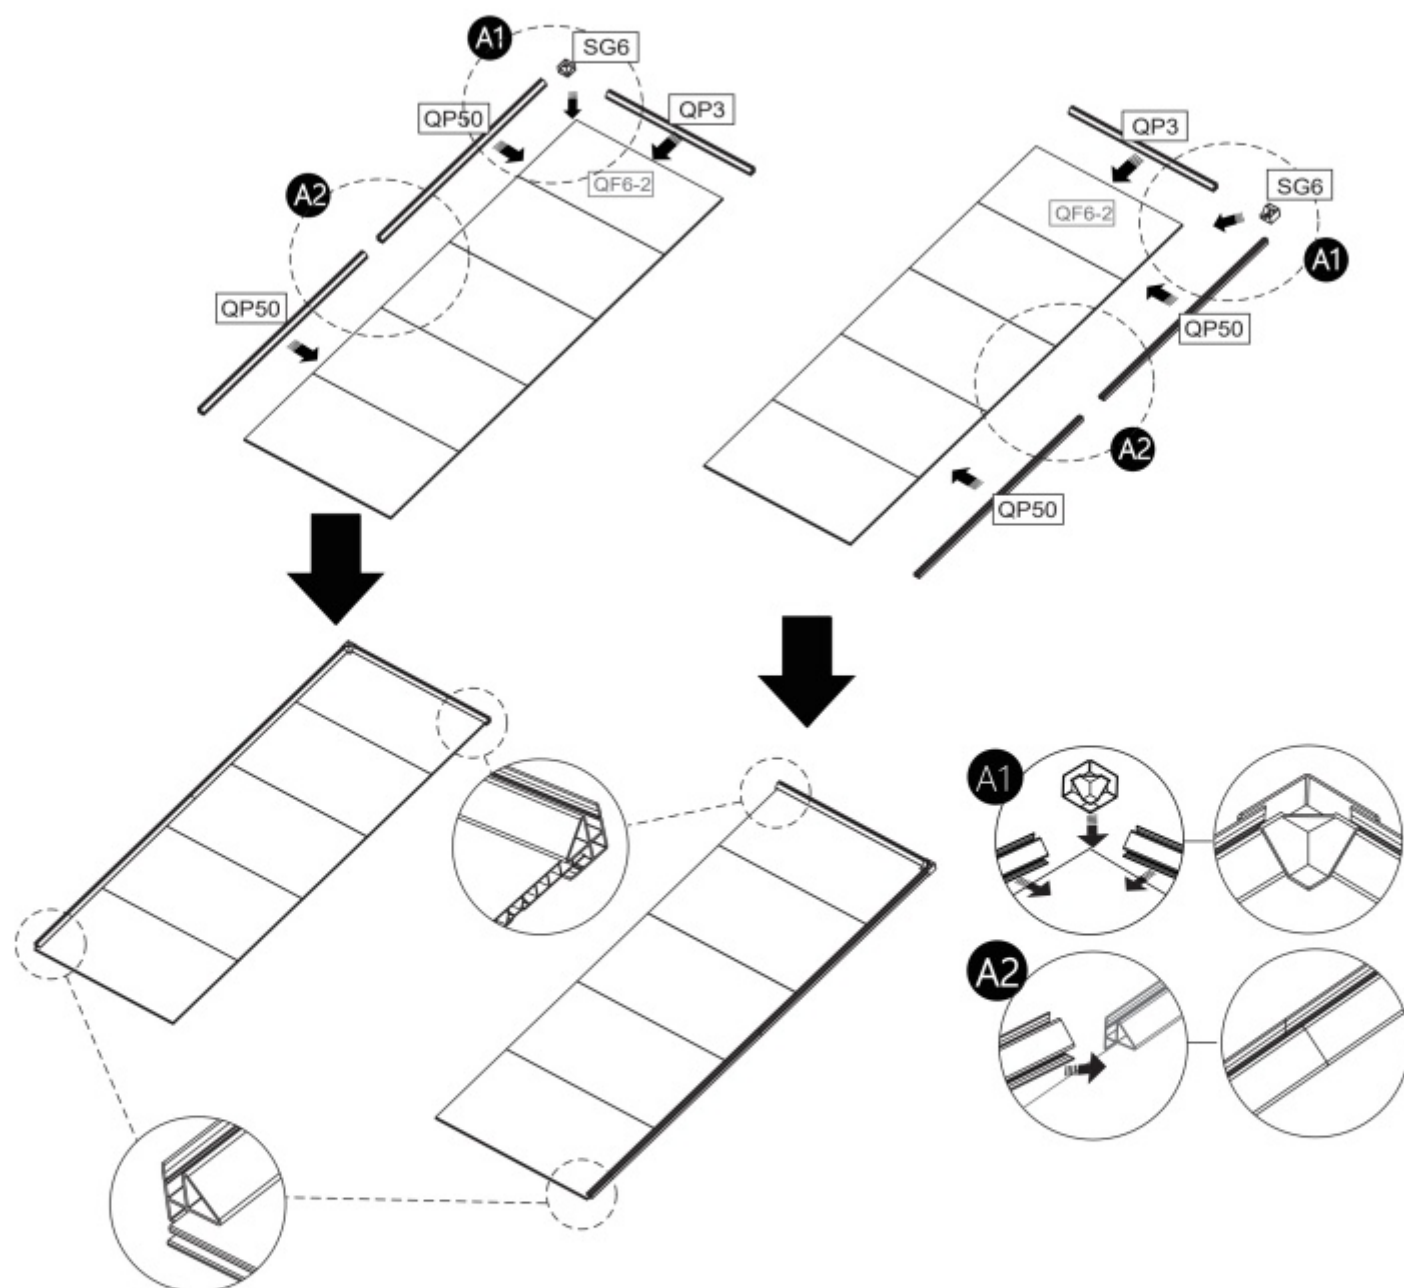

02-2

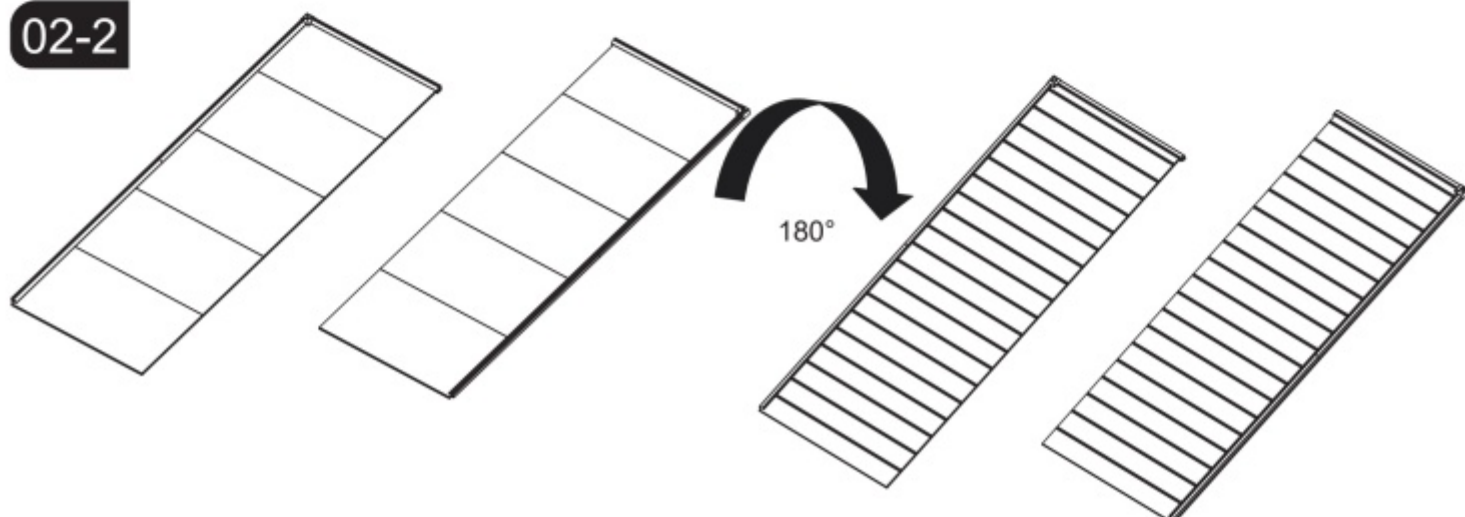

STEP 2

02-3



• It is recommended to use screws directly. If it is difficult, you can drill a 1mm hole in advance and then use screws.



• Drive the nails according to the marking lines on the profile.

SG19




2 PC

Z420



24 PC

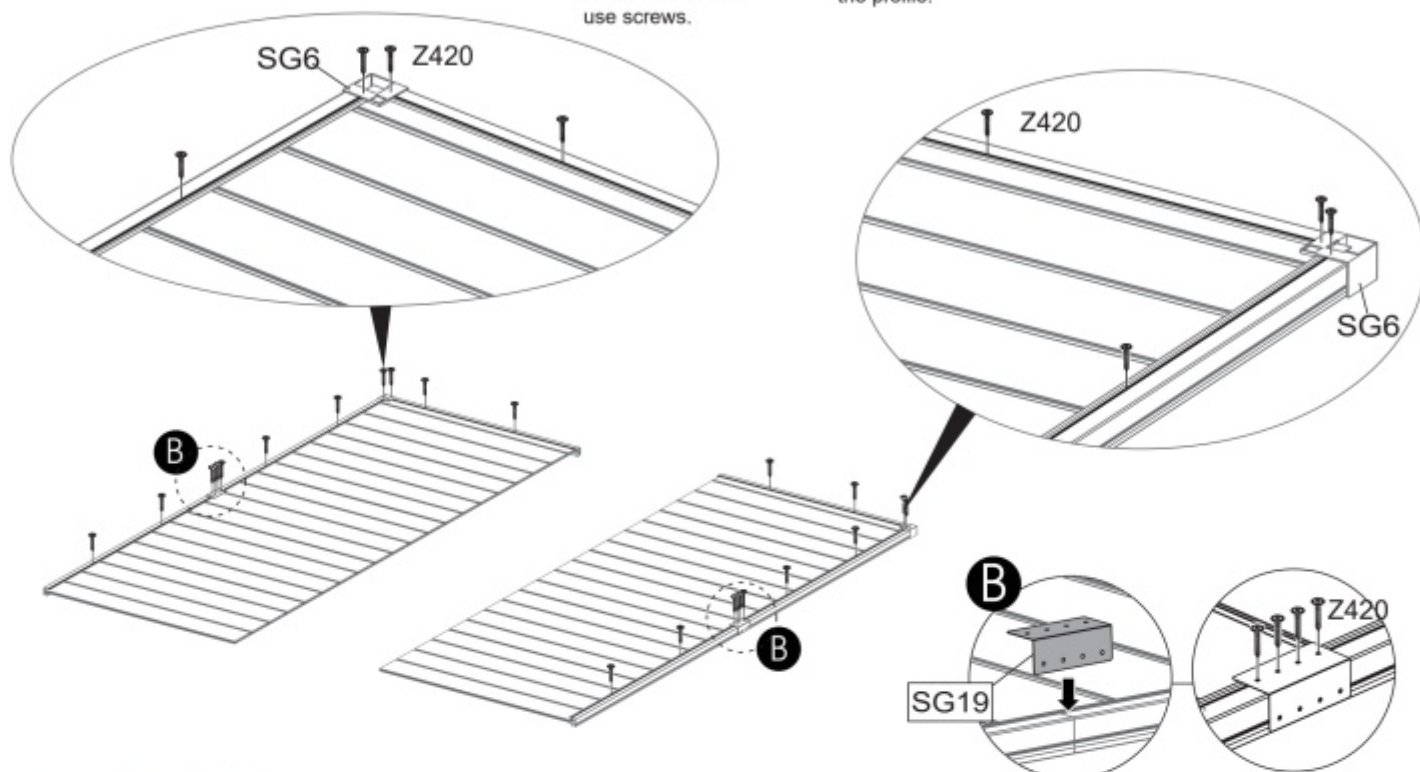


STEP 3

03-1

QP52B



2 PC

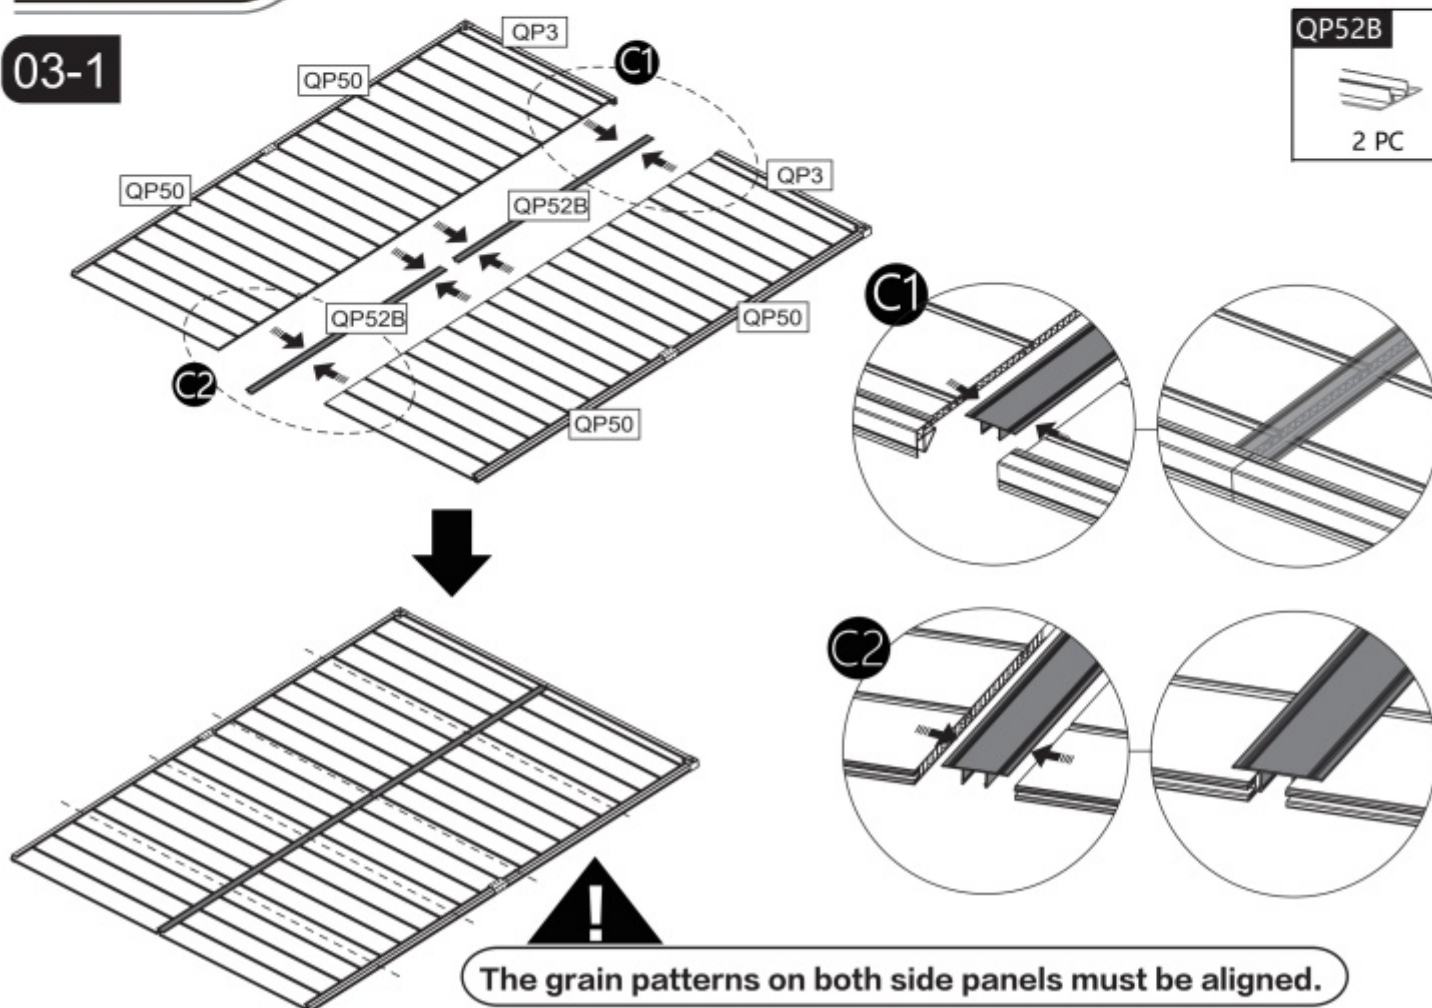


The grain patterns on both side panels must be aligned.

STEP 3

03-2



After ensuring that the grain patterns of the two sides of the boards are aligned, fix them with nails.

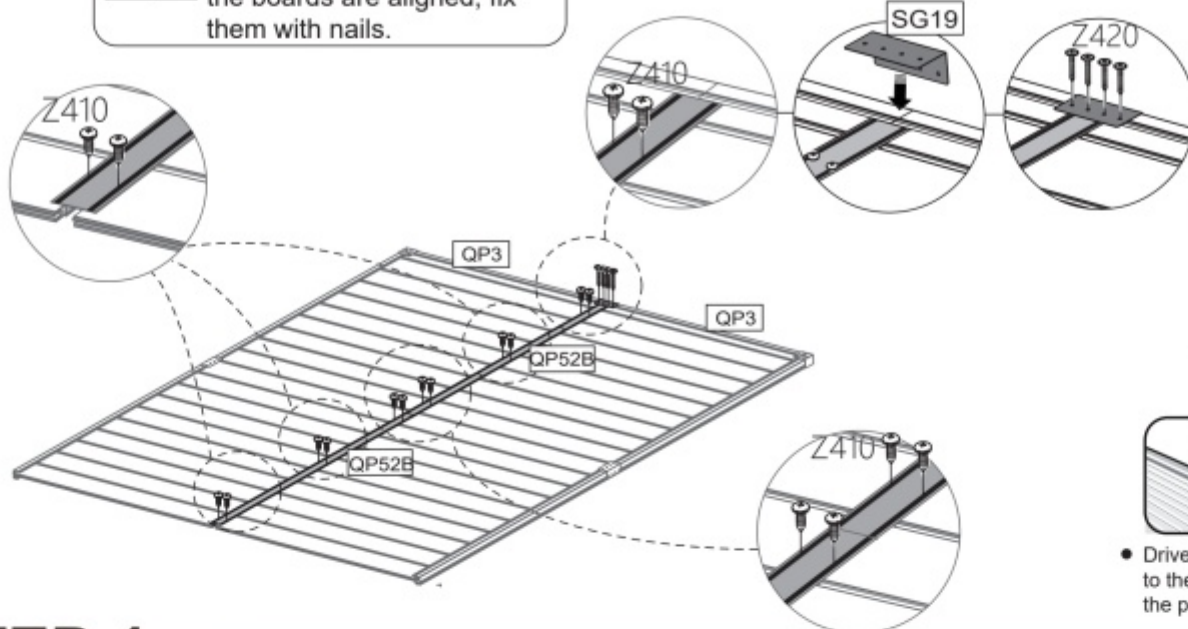


Z410
12 PC
SG19
1 PC
Z420
4 PC



- Drive the nails according to the marking lines on the profile.

STEP 4

04-1

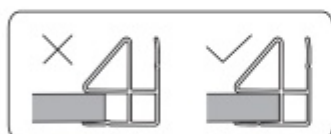


QP1	SG7-2	SG6	SG7-1	DP4
2 PC	1 PC	2 PC	1 PC	1 PC

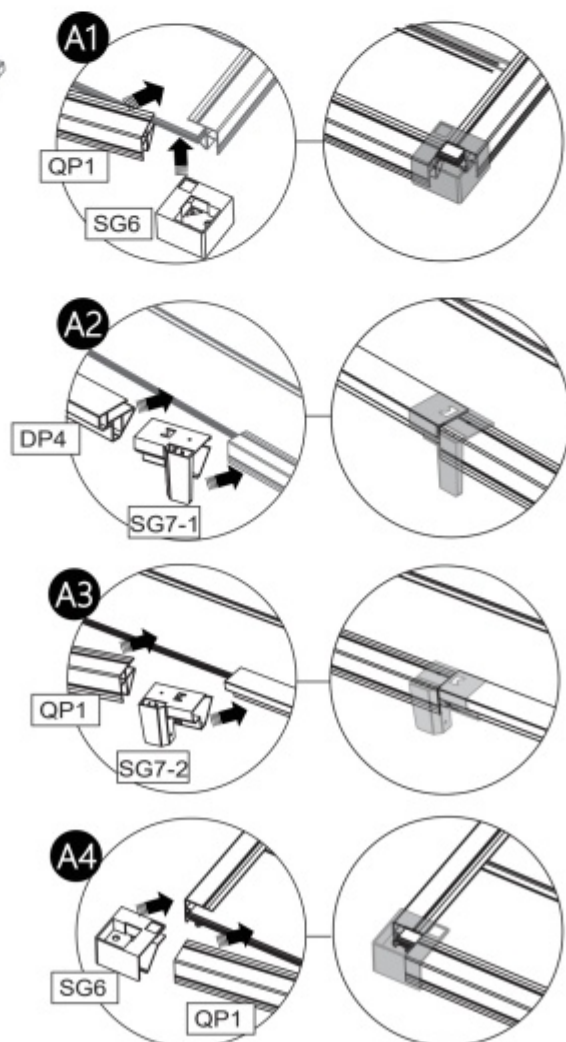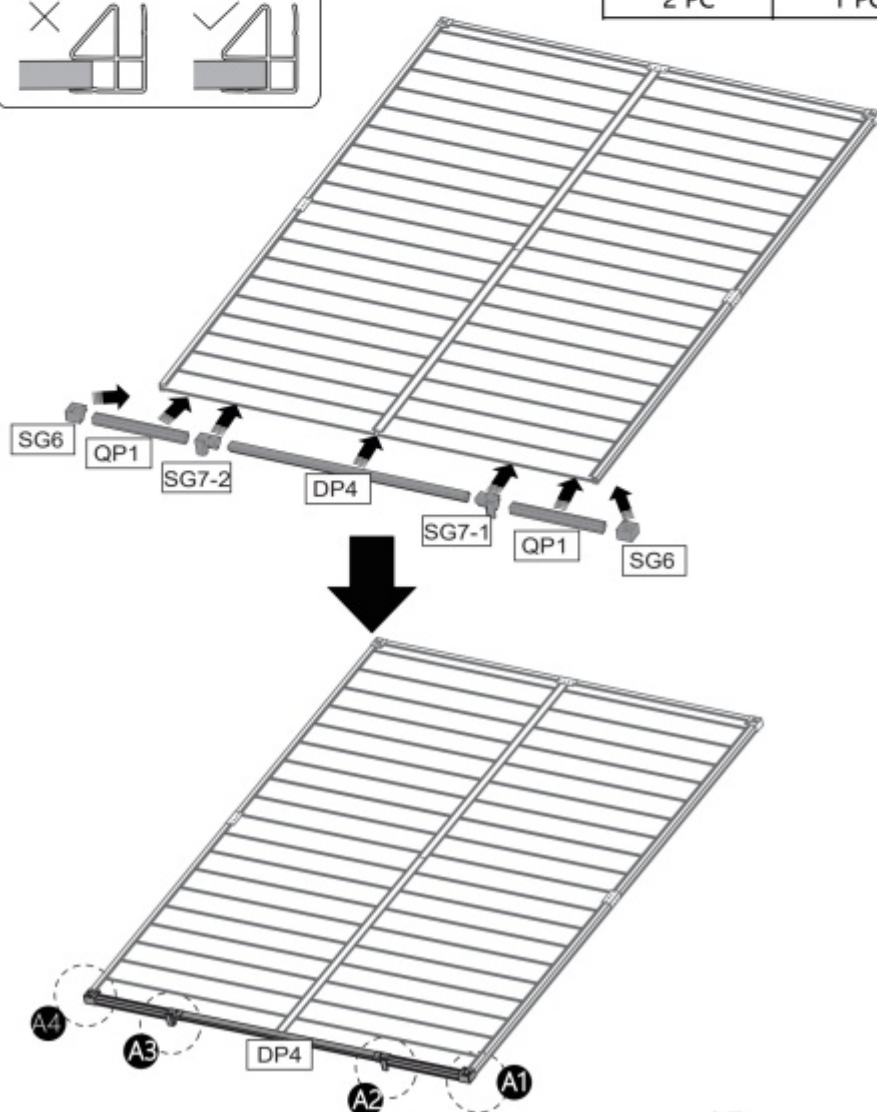


STEP 4

04-2

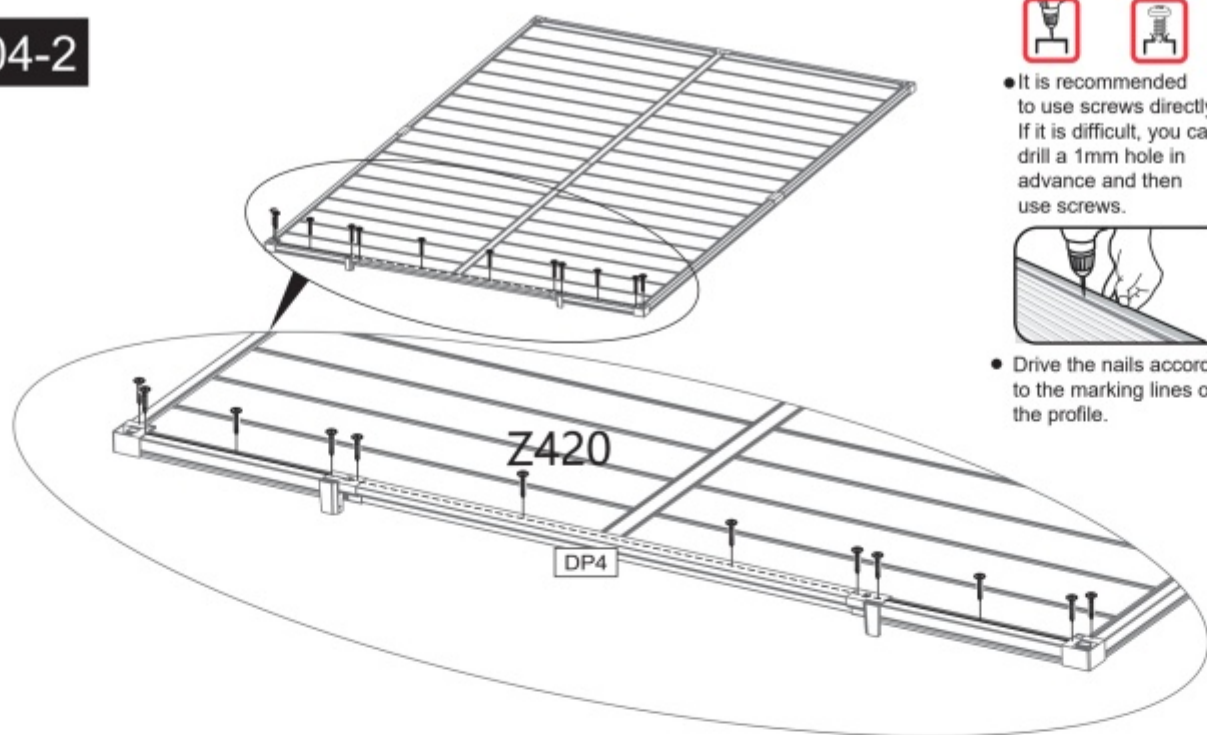

- It is recommended to use screws directly. If it is difficult, you can drill a 1mm hole in advance and then use screws.

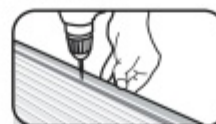

- Drive the nails according to the marking lines on the profile.


Z420




12 PC

STEP 5

05-1

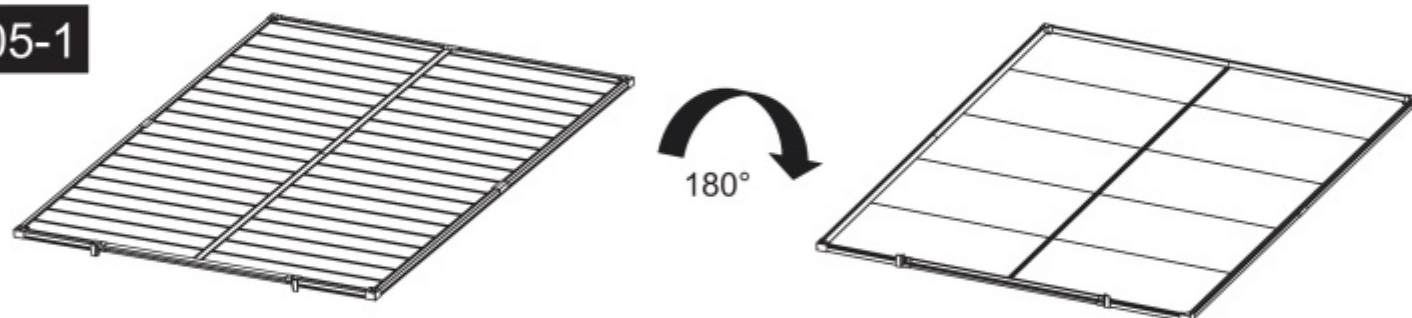



05-2

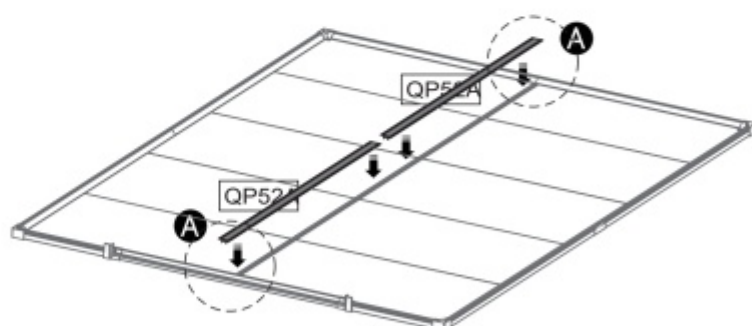


QP52A






2 PC

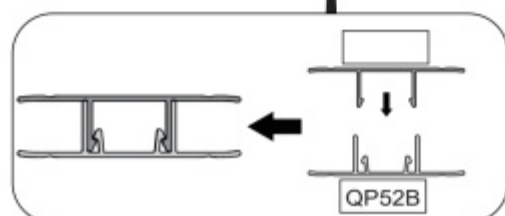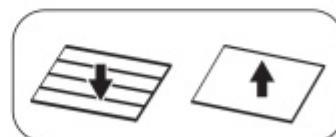



STEP 6

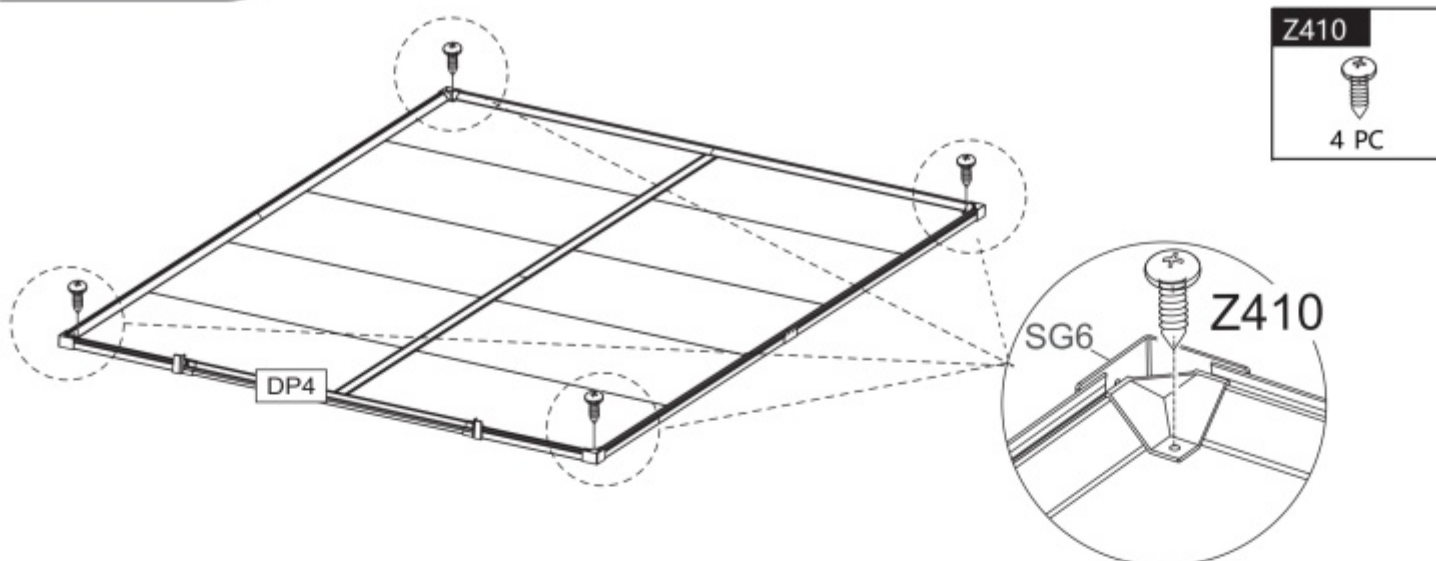

WALL PANEL ASSEMBLY







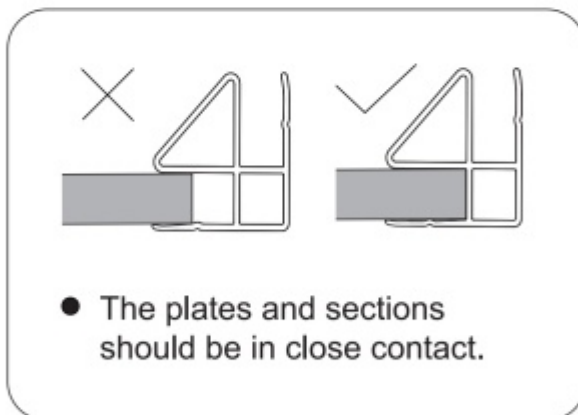
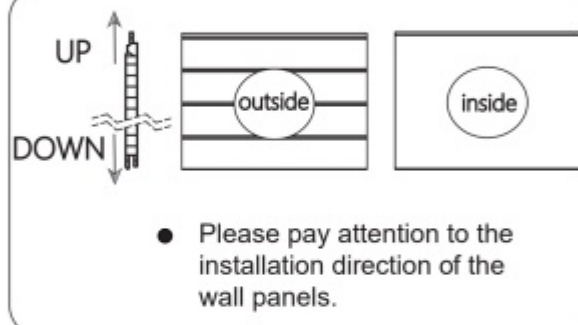
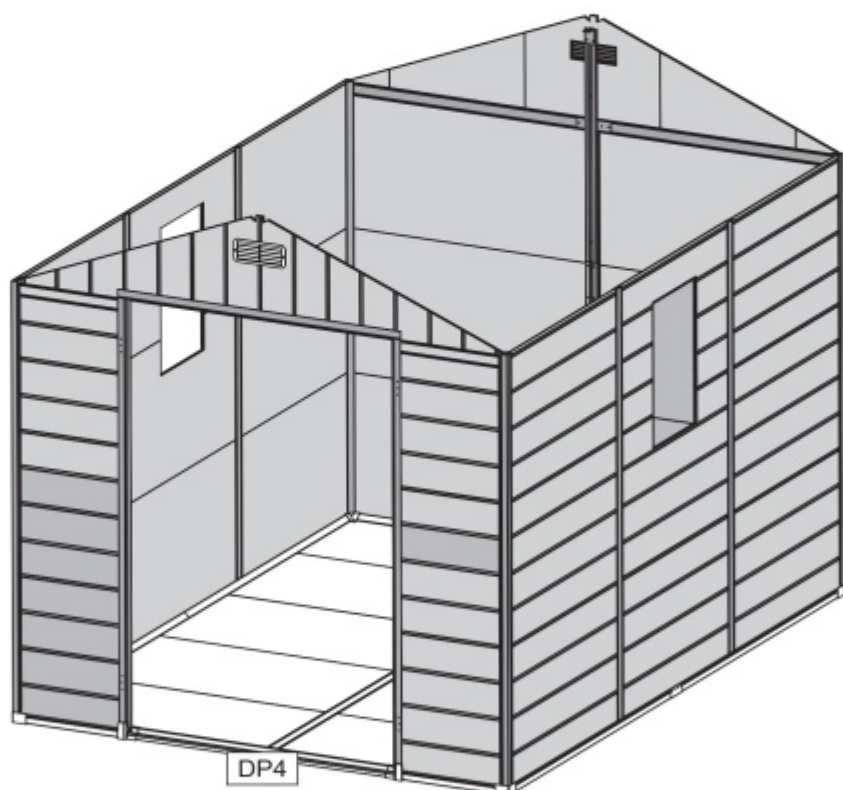


- The inclined insertion of the wall panel into the profile will make the installation smoother.

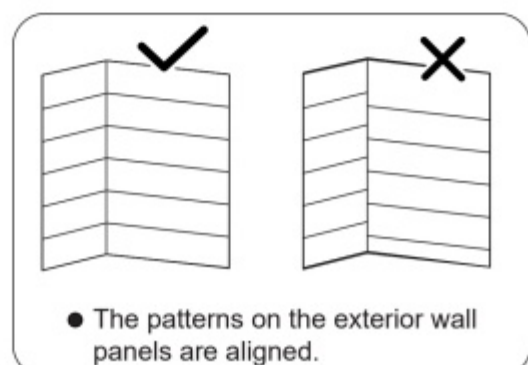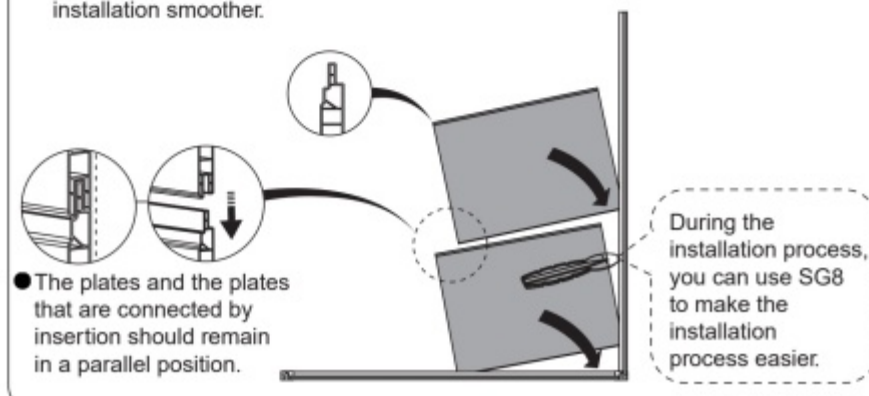

STEP 7


DP5	QW2-1	QW12-1	QW2-2	PPA1	PPA2
					
1 PC	2 PC	3 PC	1 PC	1 PC	1 PC

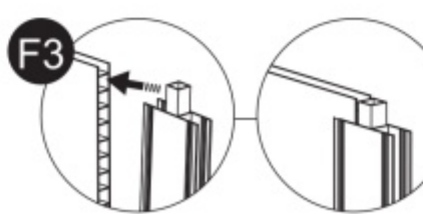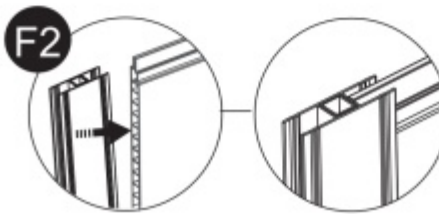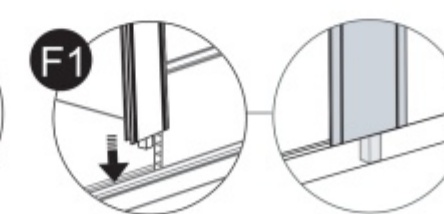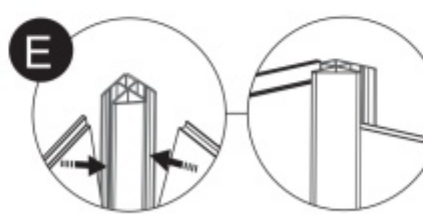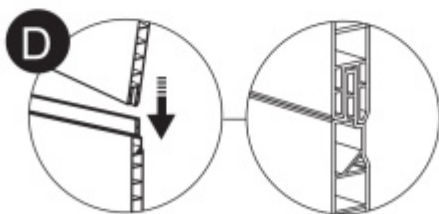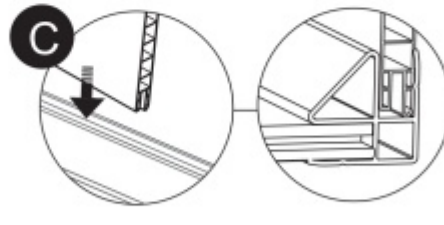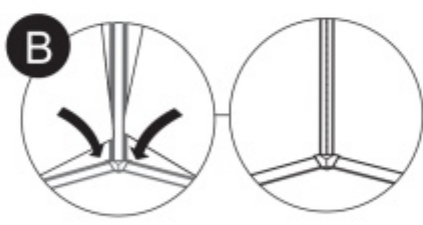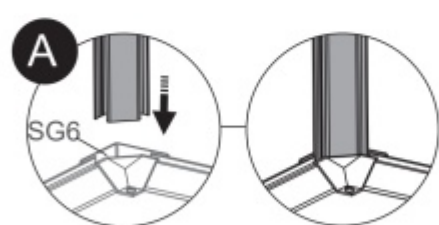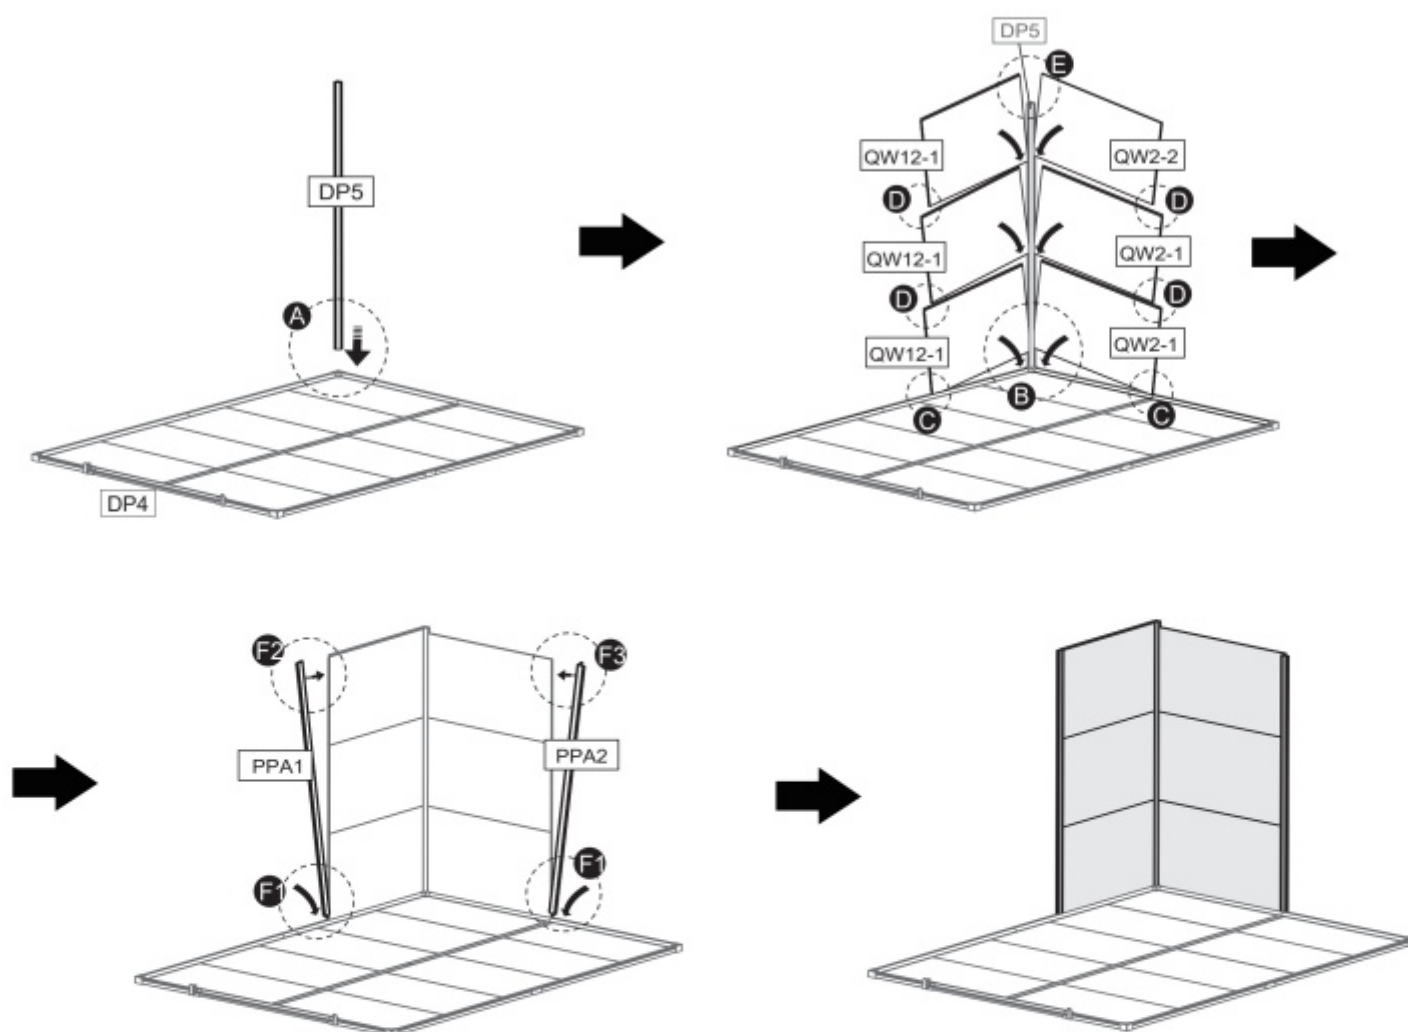



STEP 8

QW12-1  11 PC	QW12-3  2 PC	QW12-2  2 PC	QW2-1  2 PC	QW2-2  1 PC	PPA1  3 PC	DP5  3 PC
---	--	--	---	---	--	---

08-1


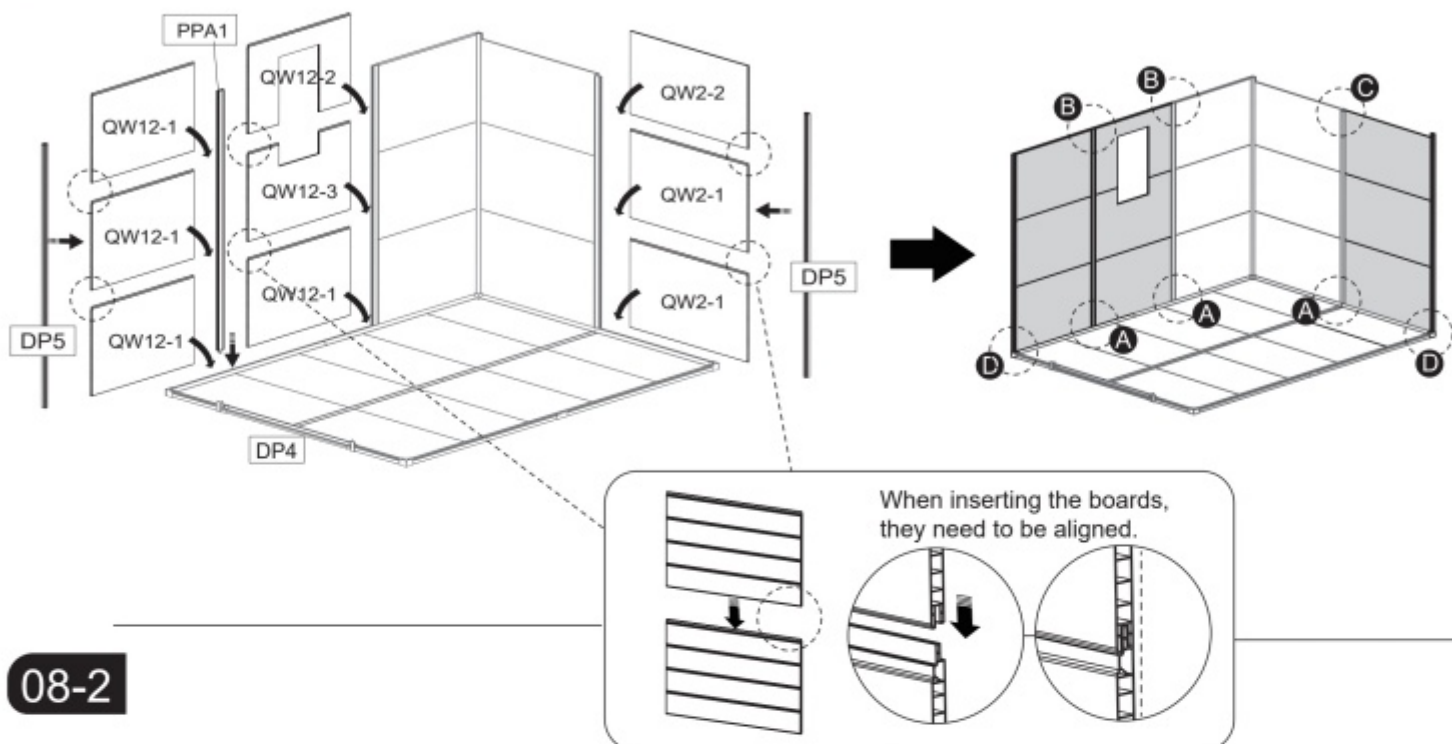


08-2

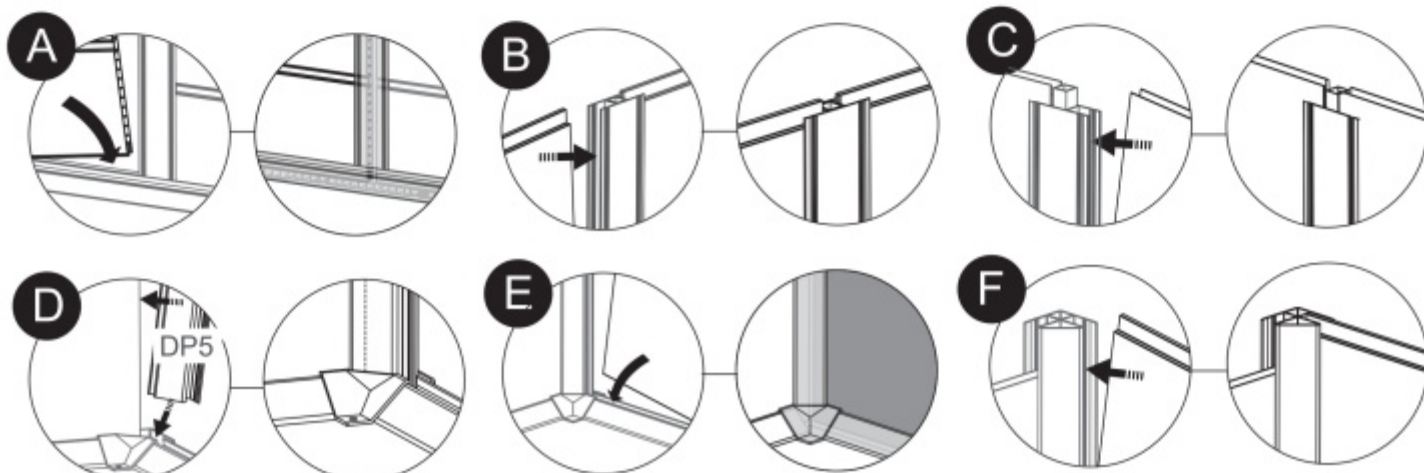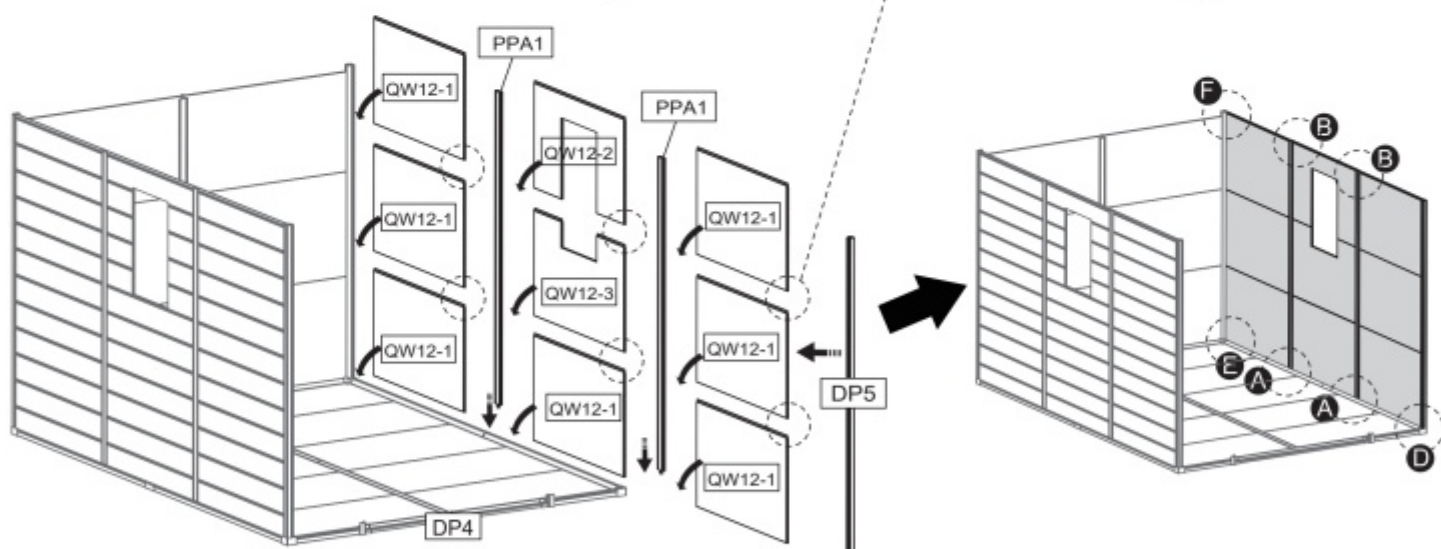

STEP 9

09-1

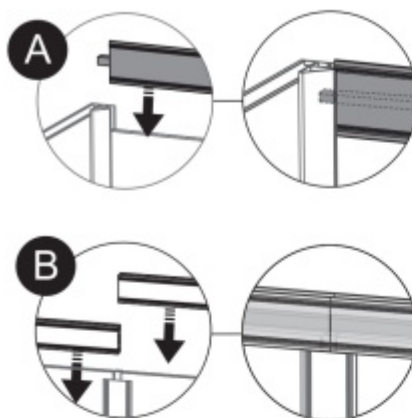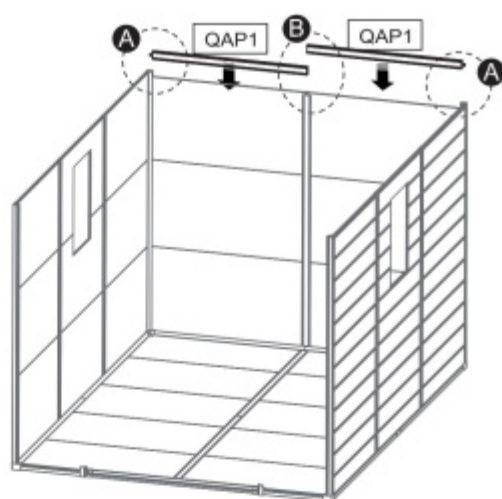

QAP1

2 PC
QW3-1

4 PC
QW3-2

2 PC
Z410


10 PC
SS6

1 PC
ZW413



4 PC

09-2


● The patterns on the outside of the wallboard are aligned with each other.

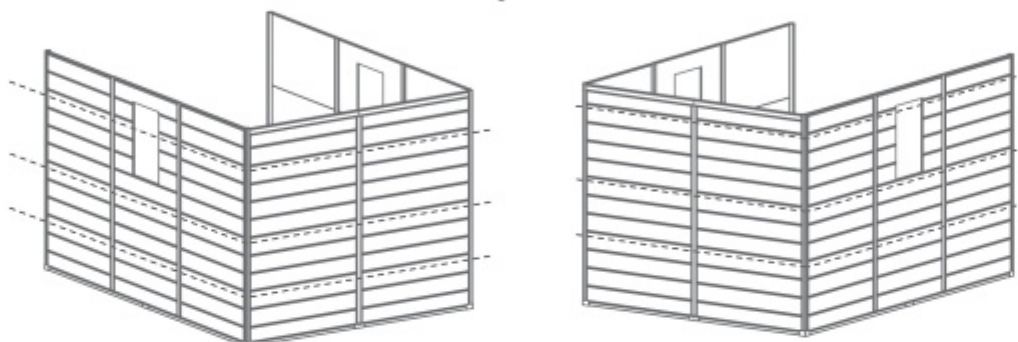

09-3

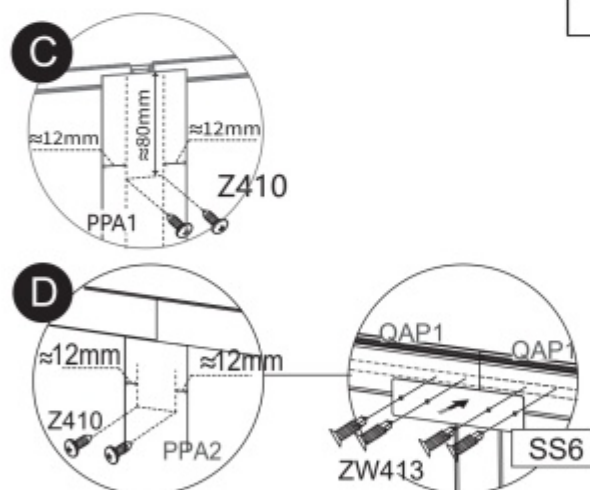
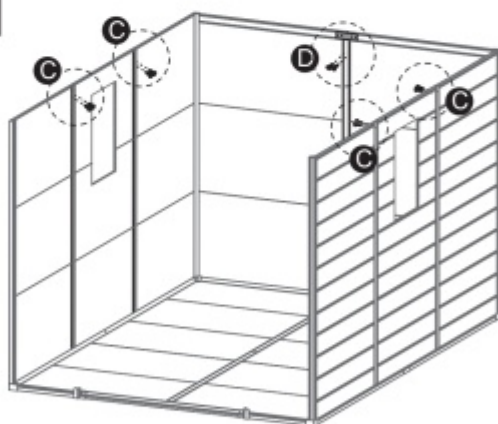


09-4

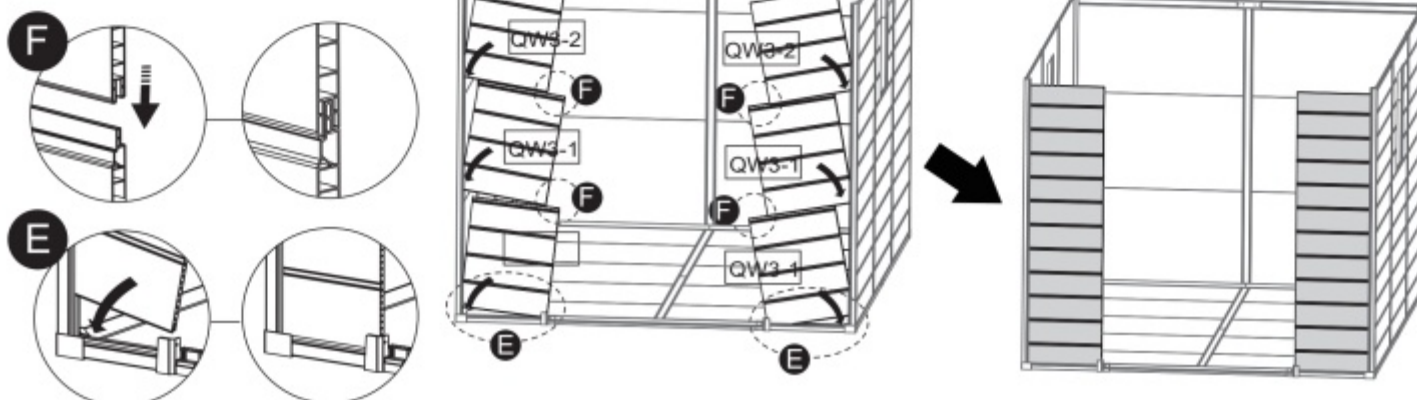




STEP 10

10-1



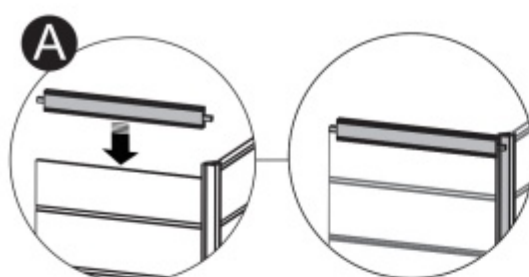
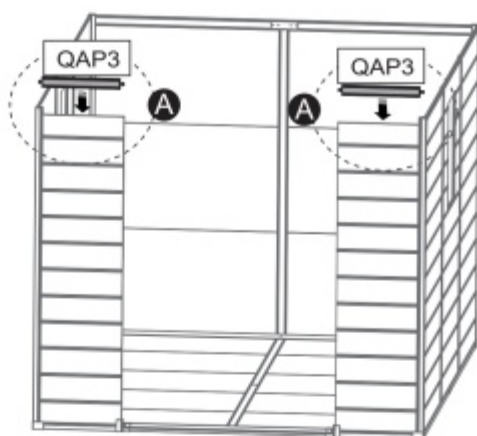


QAP3
2 PC
DA1L
1 PC
DA1R
1 PC
QT1-21
1 PC
BY
1 PC
Z410
4 PC


10-2

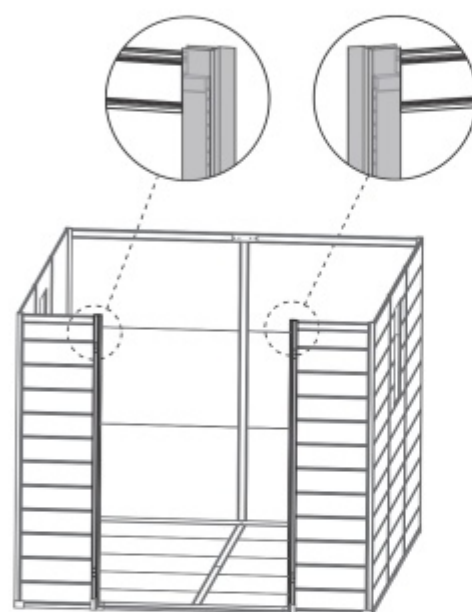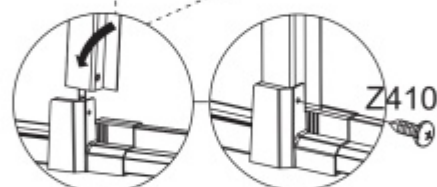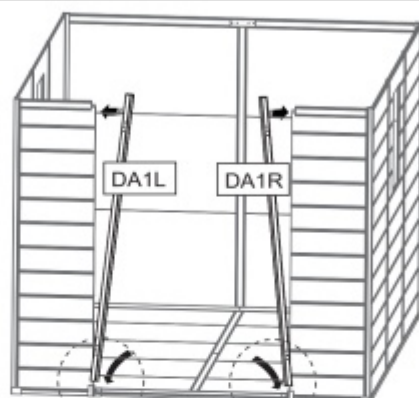





10-3

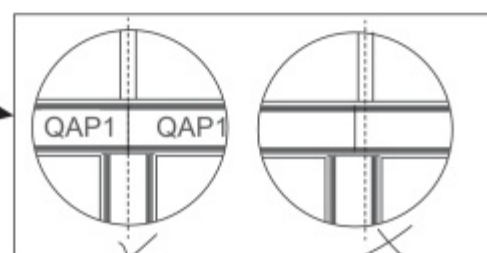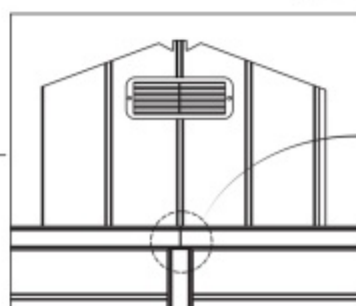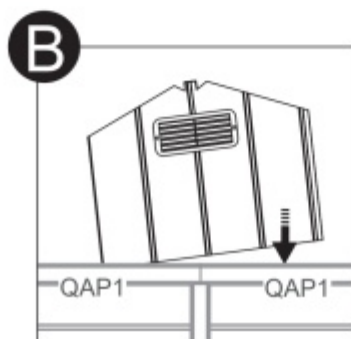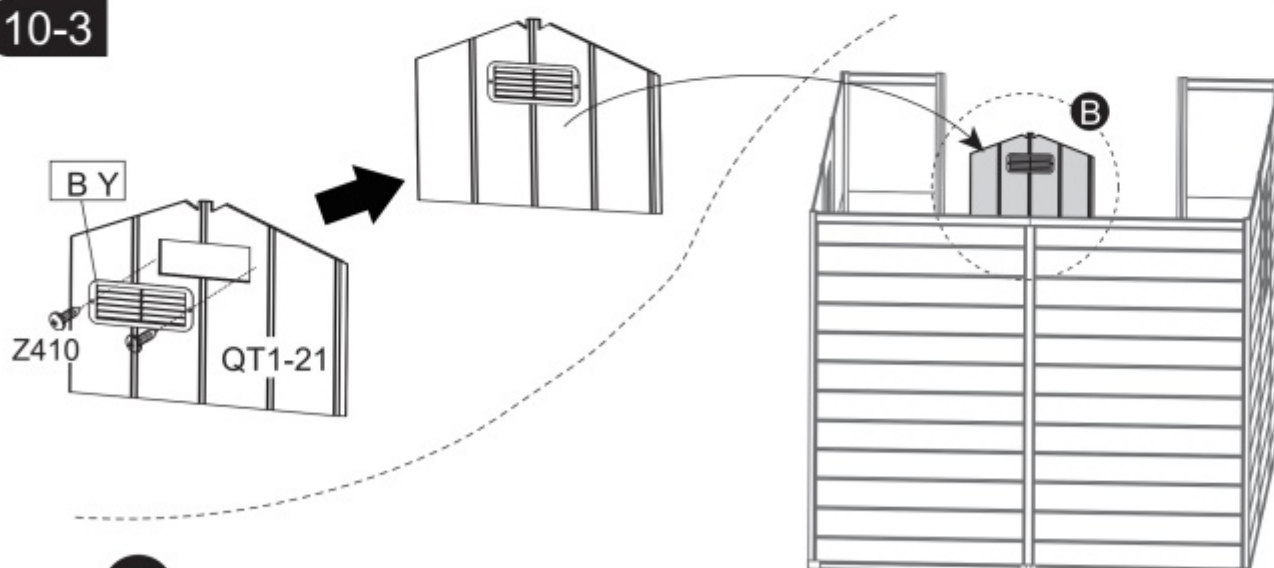

STEP 11

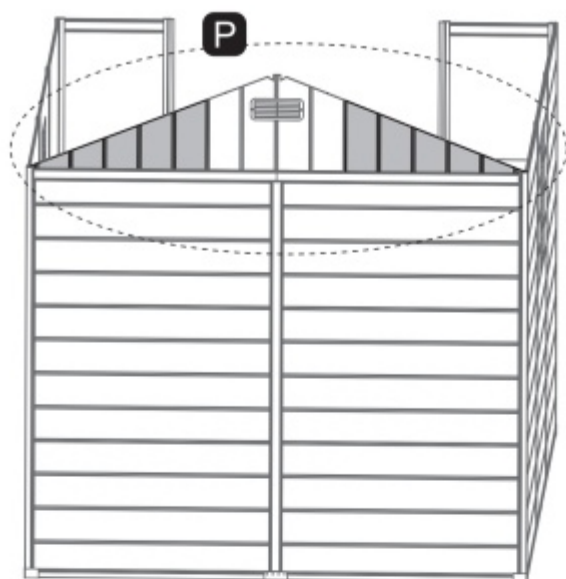


QT1-9 1 PC	QT1-6 1 PC	QT1-8 1 PC	QT1-10 1 PC	Z410 12 PC
---------------	---------------	---------------	----------------	---------------

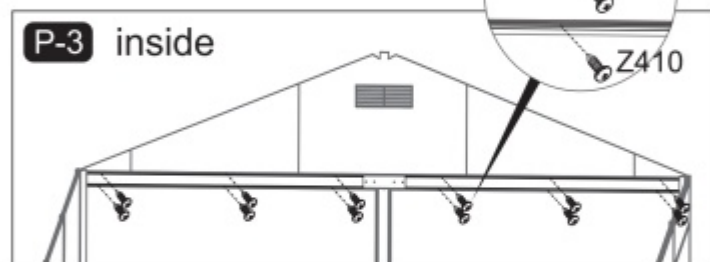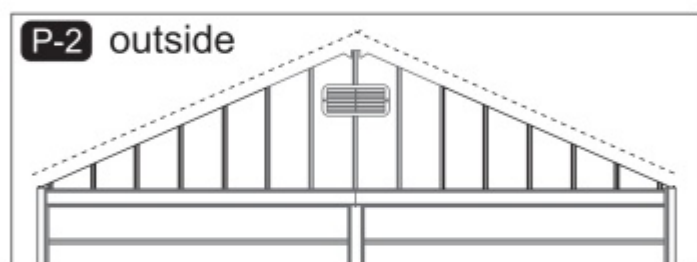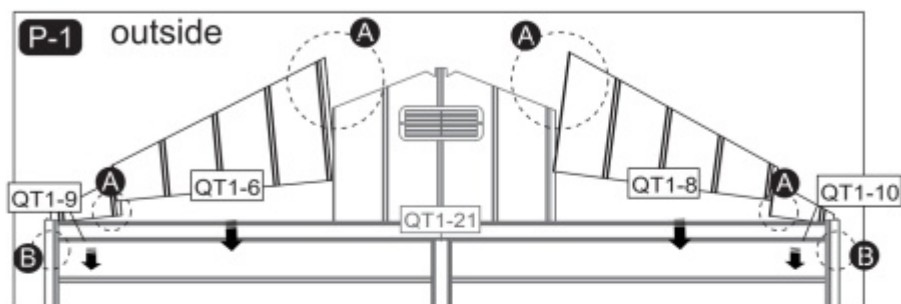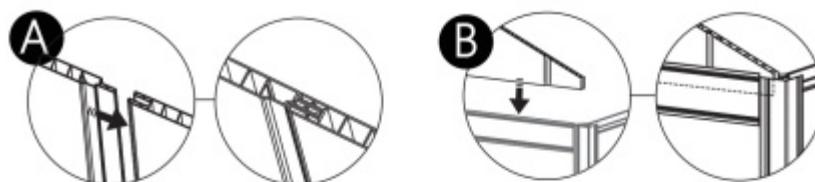


STEP 12

12-1

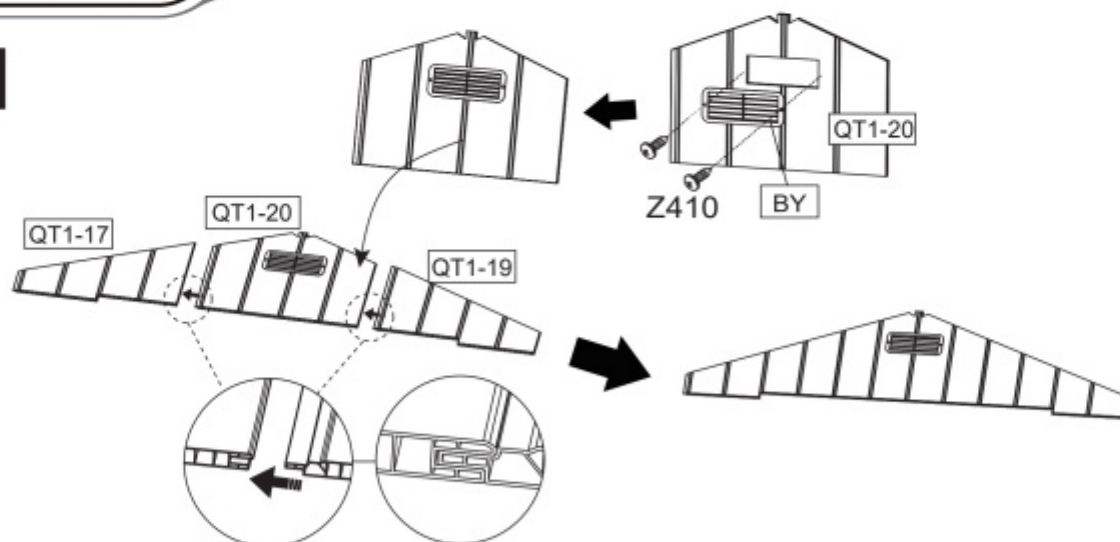


12-2

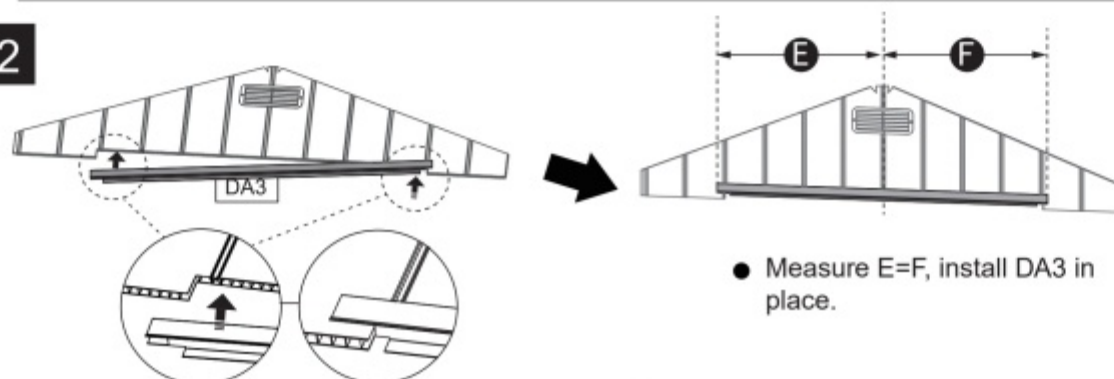

QT1-20 1 PC	QT1-19 1 PC	QT1-17 1 PC	BY 1 PC	DA3 1 PC	Z410 2 PC
----------------	----------------	----------------	------------	-------------	--------------


STEP 12

12-3

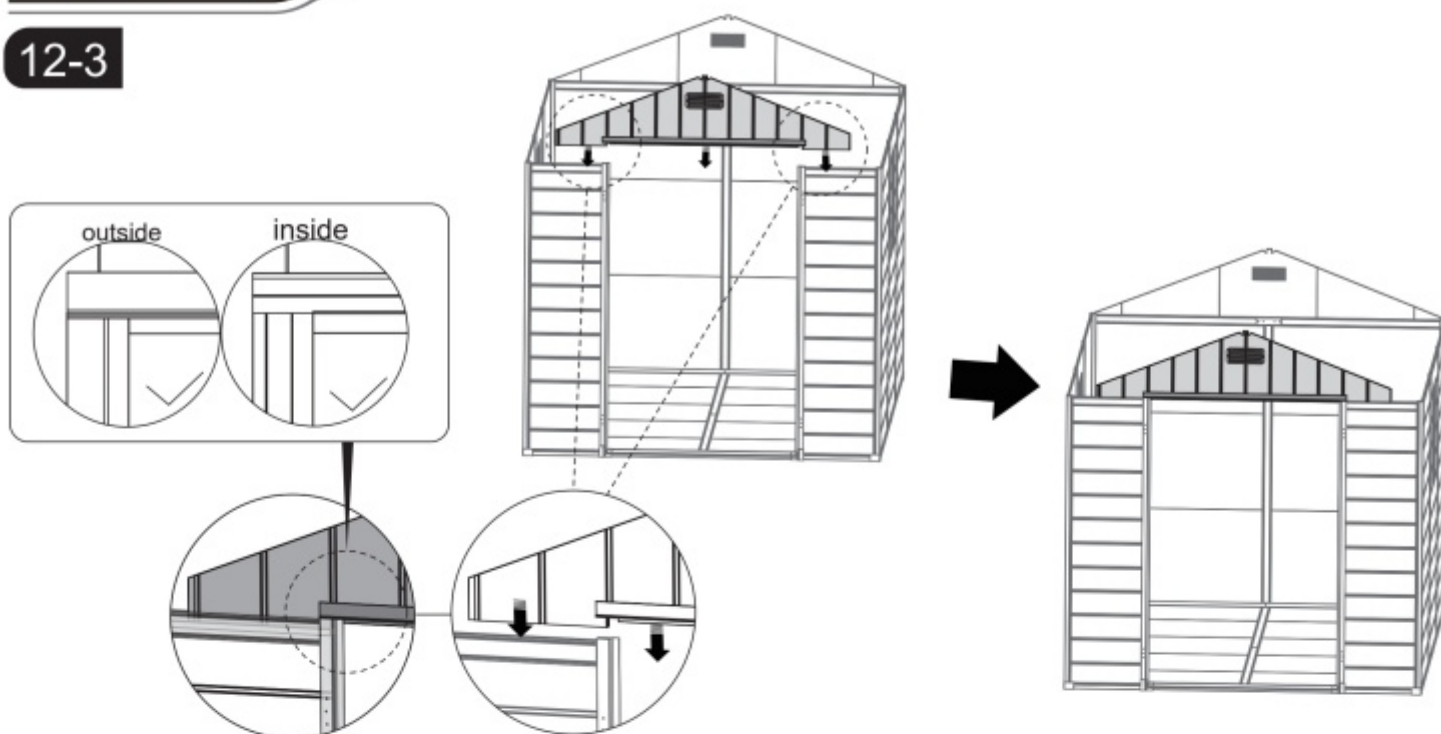


STEP 13

13-1

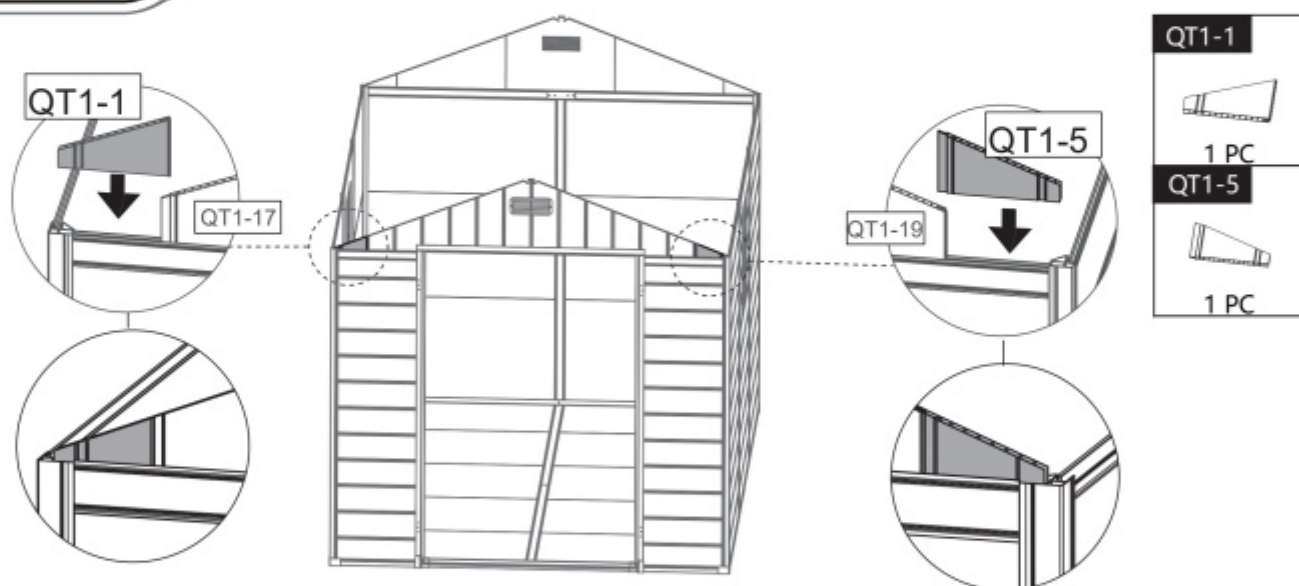


13-2


- The patterns on the outside of the wallboard are aligned with each other.

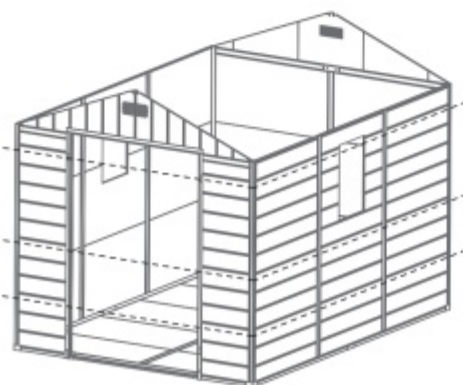

- The QAP3 on both sides are horizontally aligned.

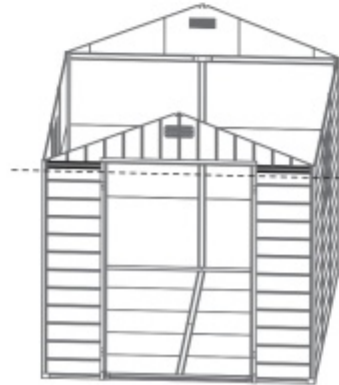


- Measure the diagonal A=B of the doorway.

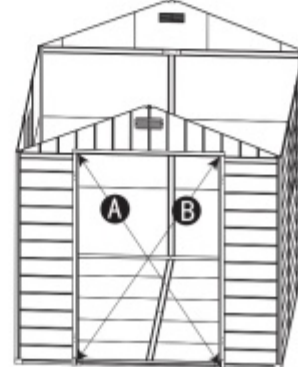

STEP 14

14-1

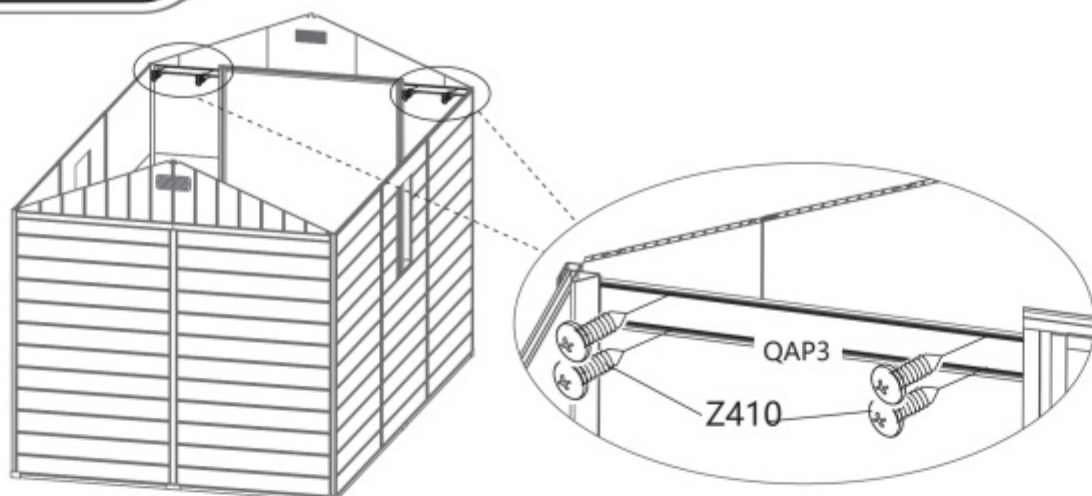

BJ-1



1 PC

Z410



8 PC

ZW413




8 PC

Z420




56 PC



14-2

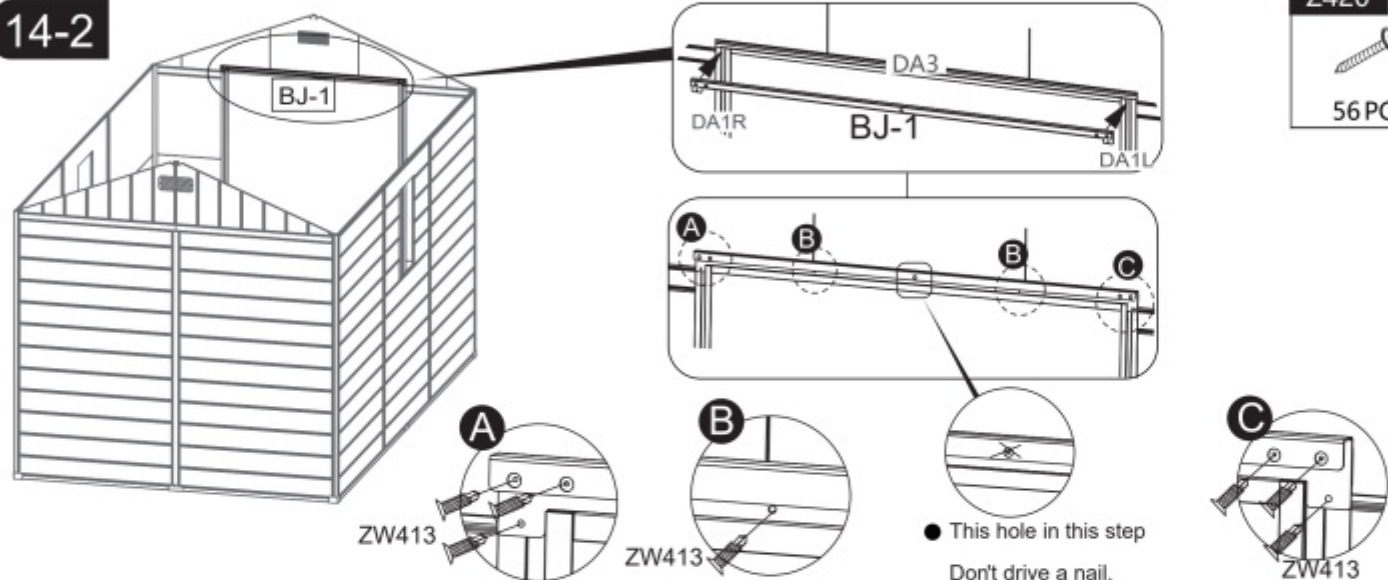

14-3

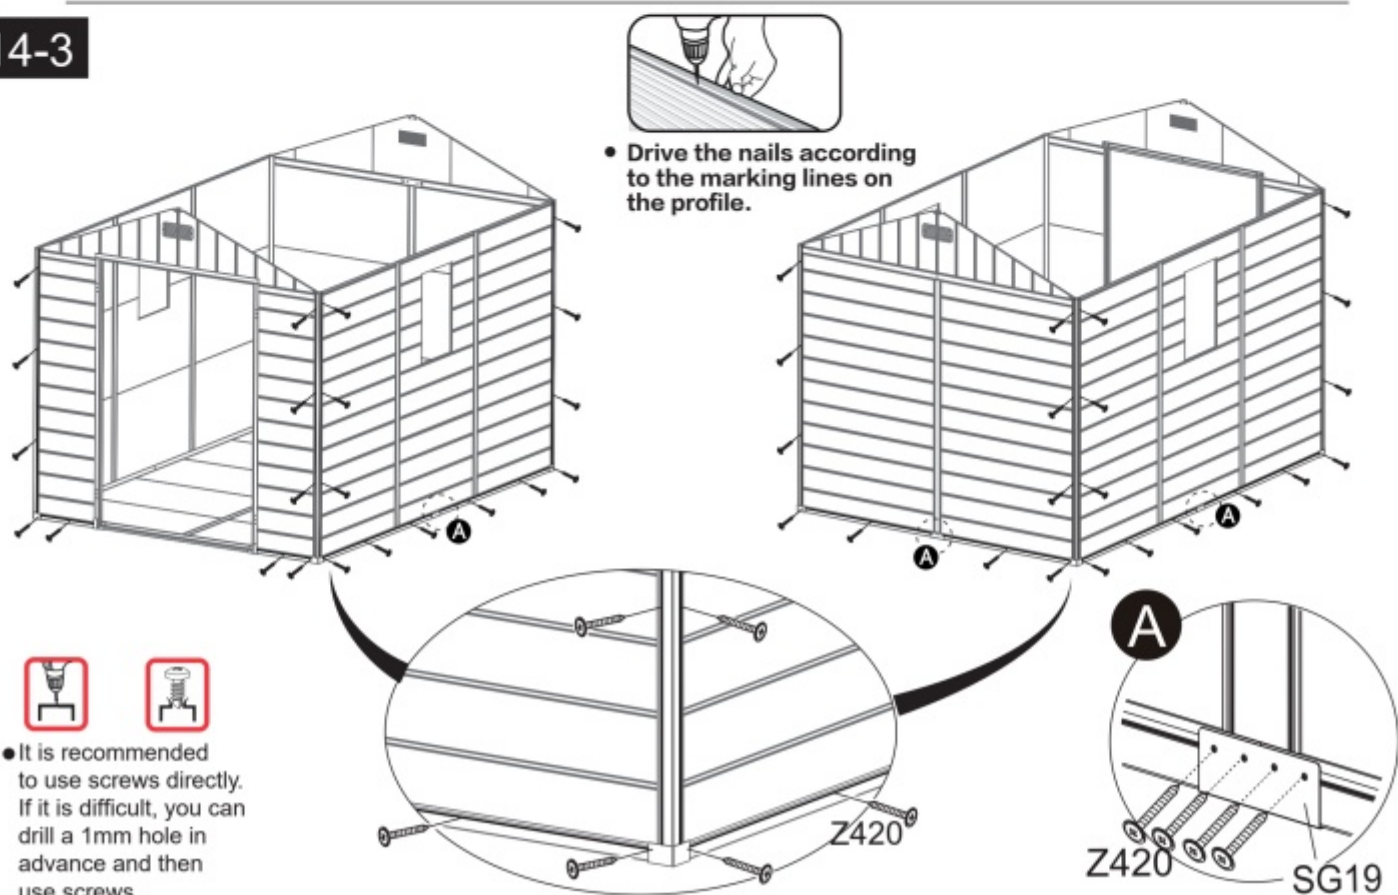

STEP 15

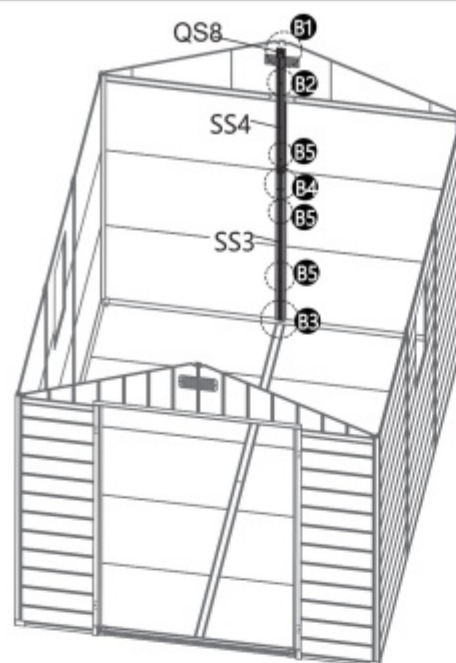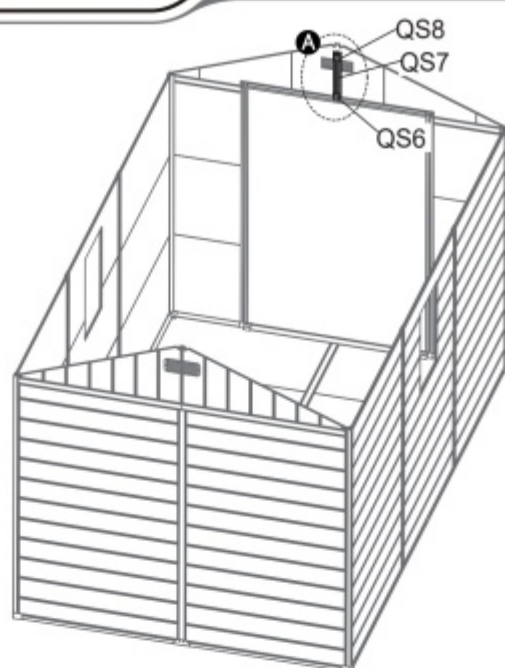

QS7



1 PC

SS3



1 PC

SS4



1 PC

QS8



2 PC

Z410



8 PC

ZW413



7 PC

QS6




1 PC

ZW426





1 PC

A




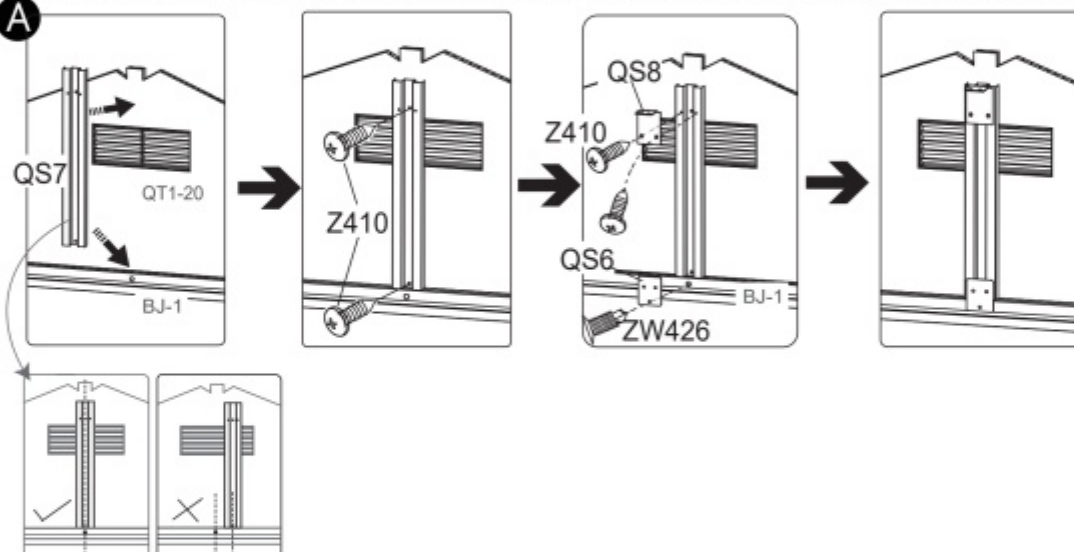


● Pay attention to the placement of the SS4.

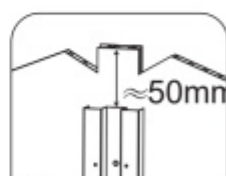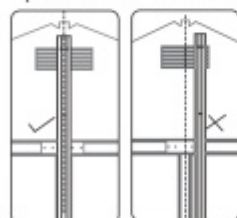


● Pay attention to measuring the dimensions.



B1

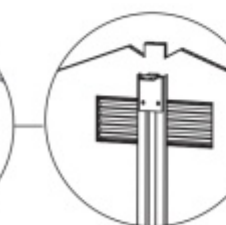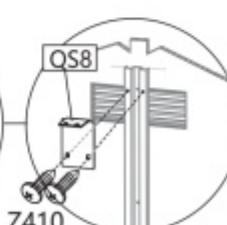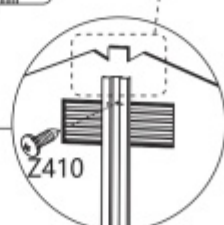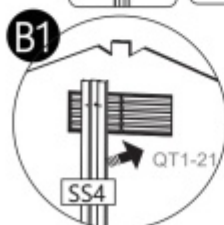


B2

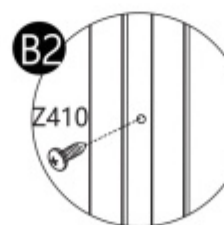

B3

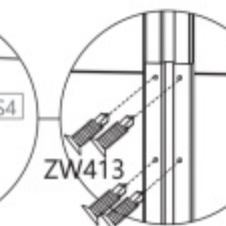
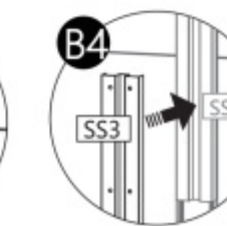


B5

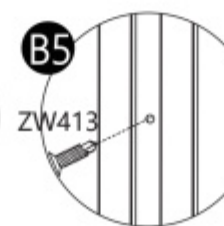

They need to be fixed on the aluminum tube inside the profile.


ROOF SECTION

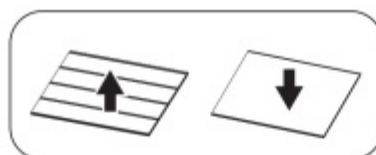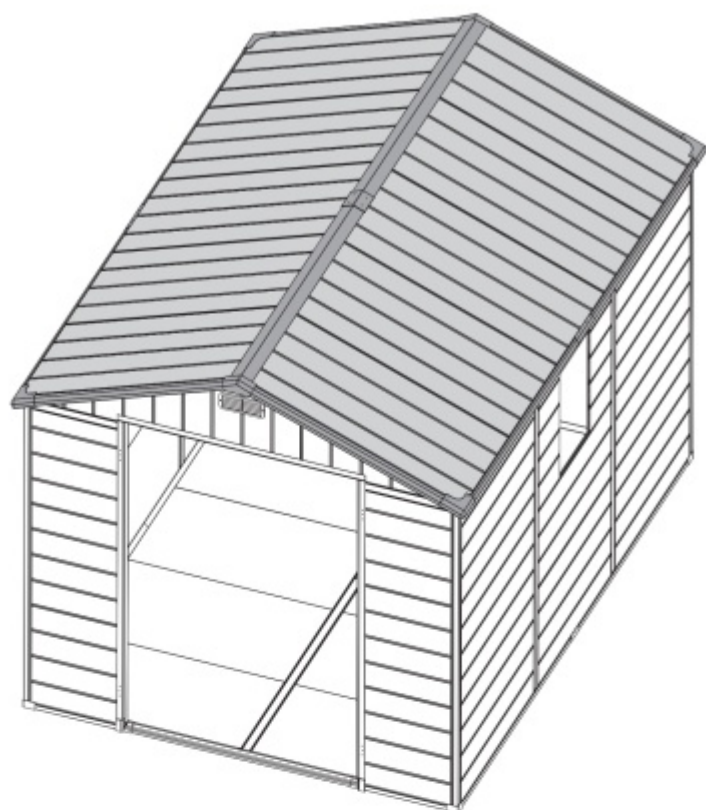


- The roofing board with a pattern is facing up.



- The plates and sections should be in close contact.

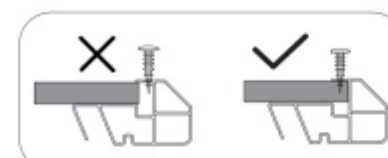

- The screws are to connect the sheet metal and the profile together.




- After connecting the roof panels, they are level.

STEP 16


QS8G1 1 PC	QS8G2 1 PC	QS8B 1 PC	M820 2 PC	QP53 2 PC	ZW413 10 PC
CS3A 3 PC	M850 3 PC	QP51 4 PC	SG20B 2 PC	Z420 8 PC	

16-1

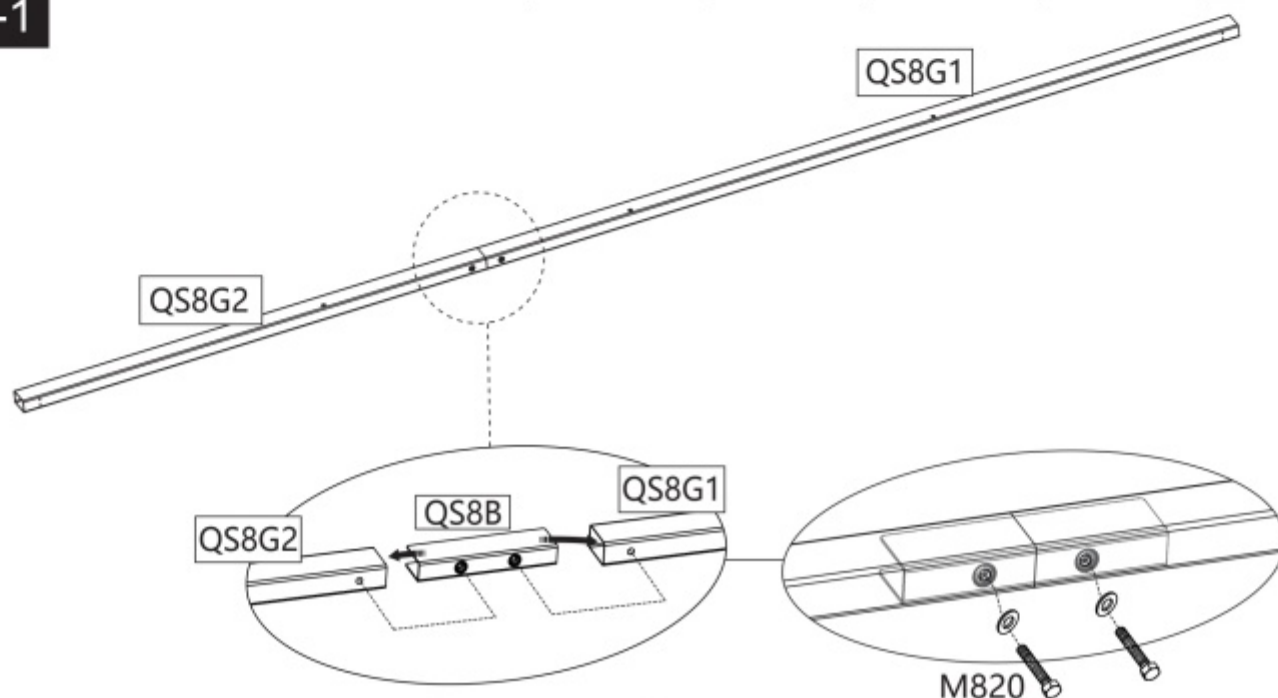


STEP 16


16-2

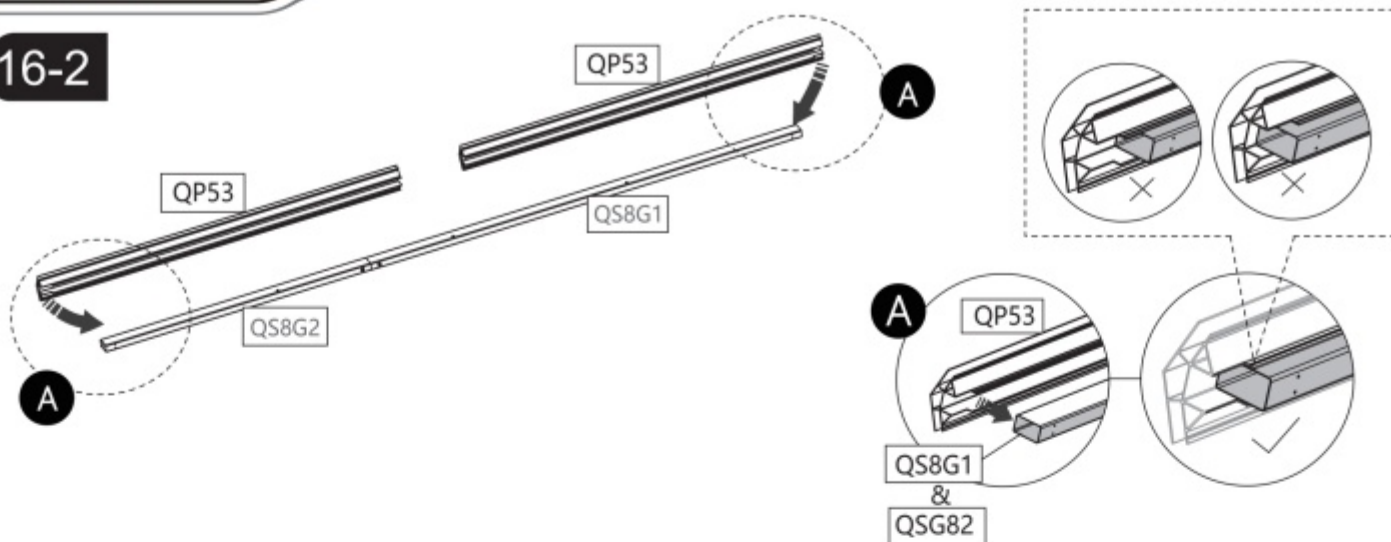


16-3

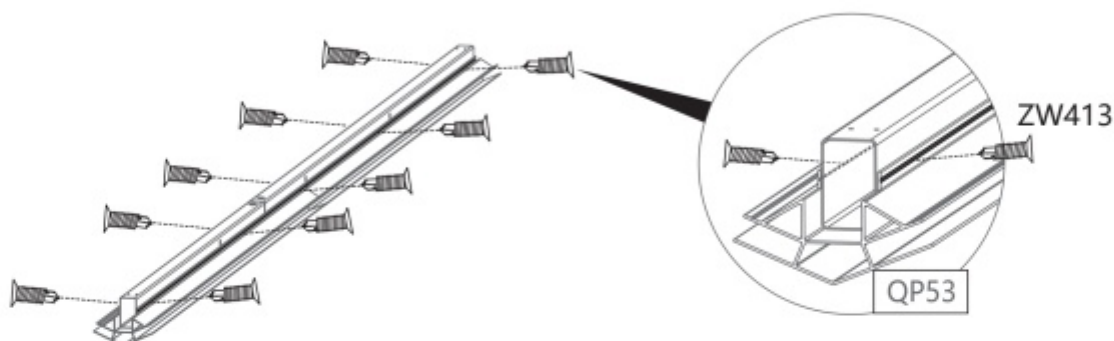

16-4






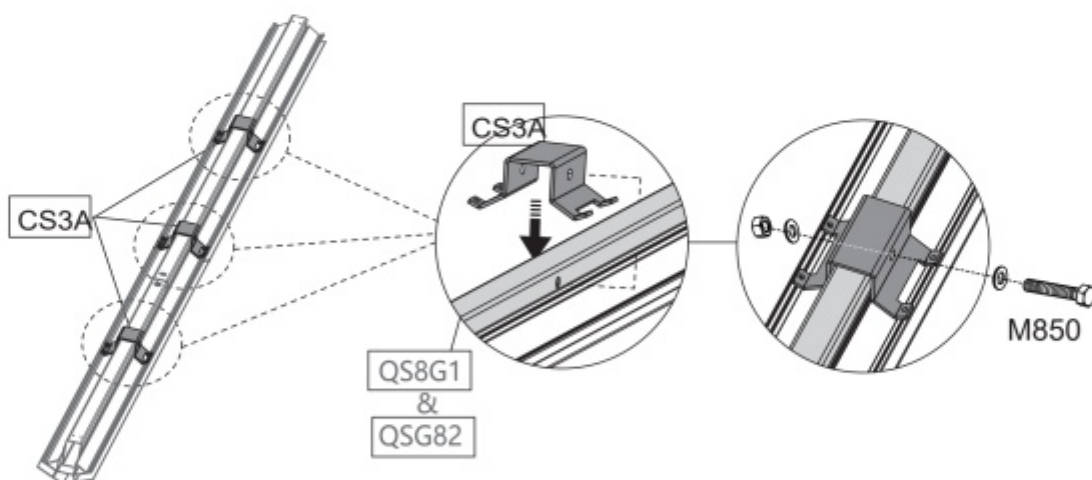


16-5


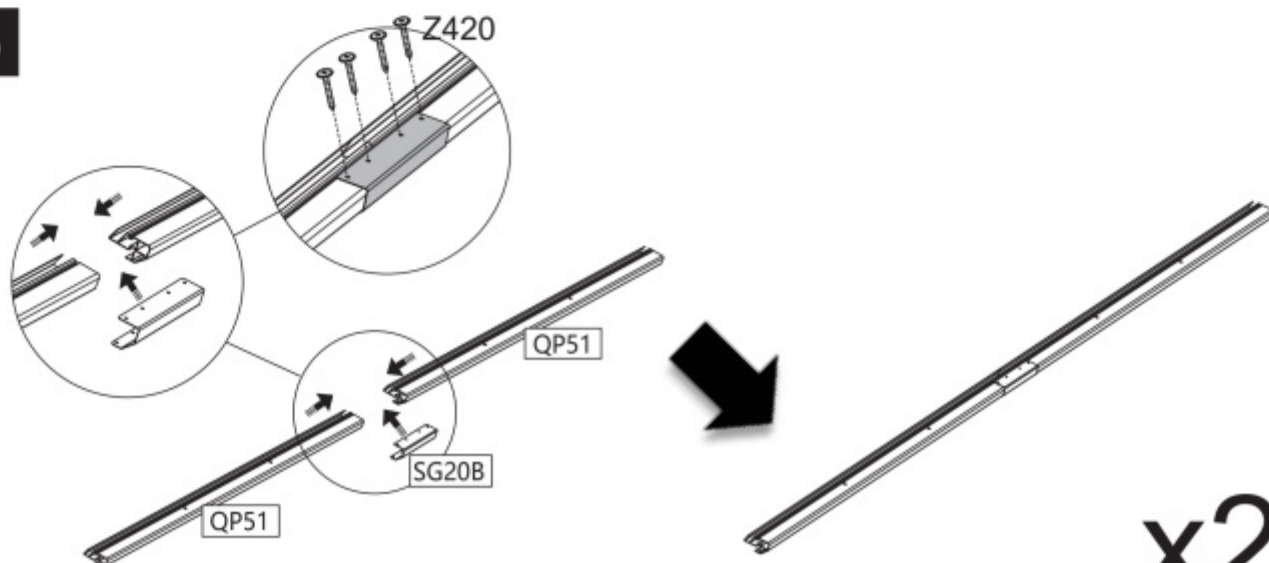


STEP 17

17-1

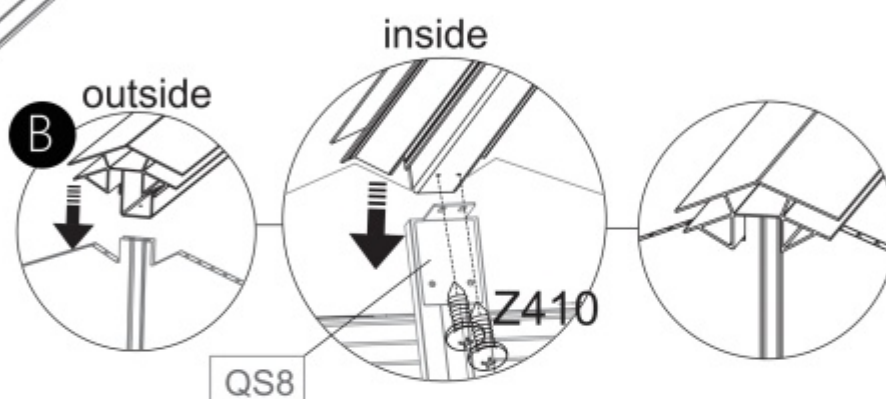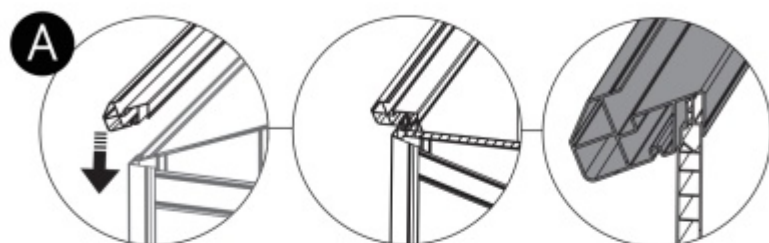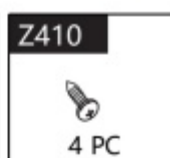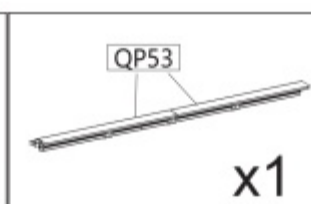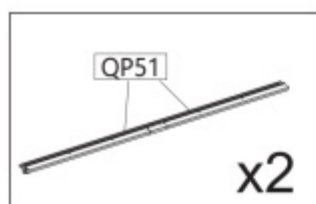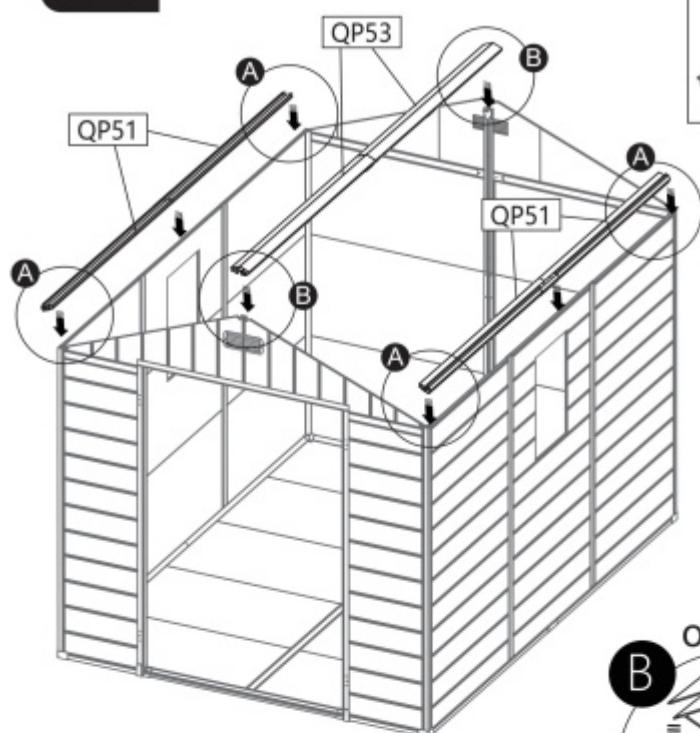


17-2

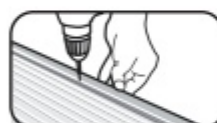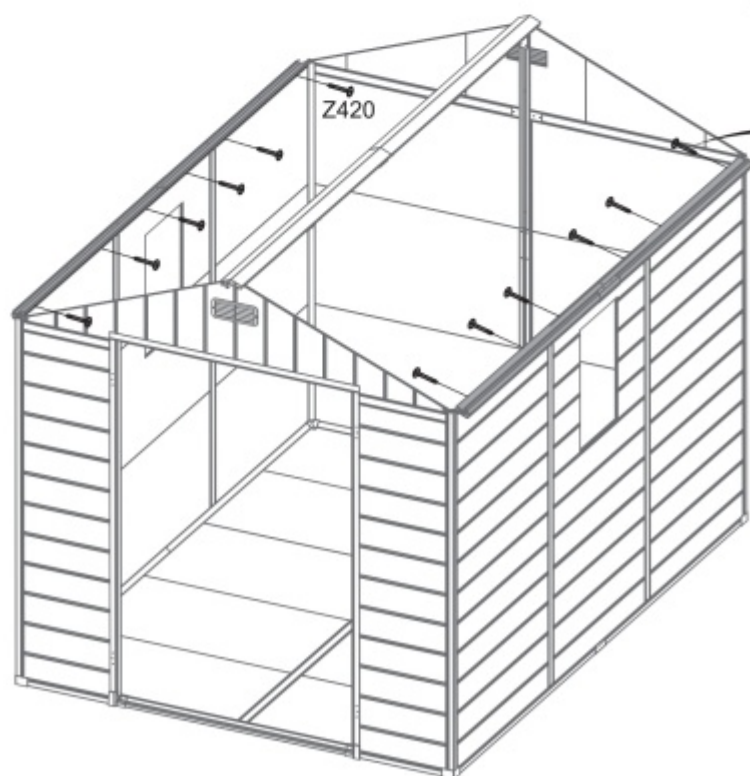

- Drive the nails according to the marking lines on the profile.




- It is recommended to use screws directly. If it is difficult, you can drill a 1mm hole in advance and then use screws.

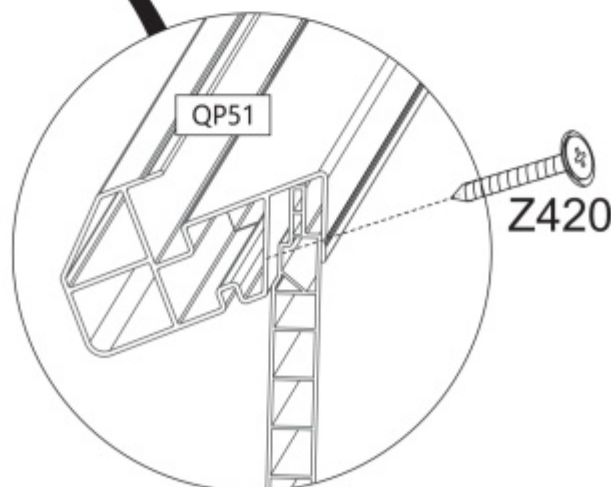




STEP 18

18-1

CS2-12	Z410	Z420	CS4	ZW413
 6 PC	 12 PC	 12 PC	 2 PC	 8 PC


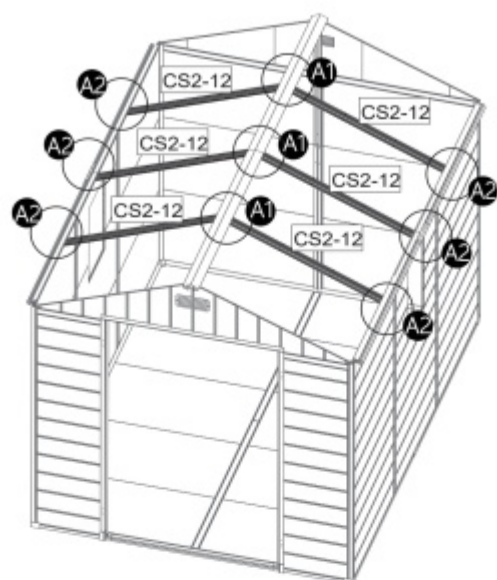


Do not have the screw from this step go through QP53 to avoid scratching the top plate in future steps.

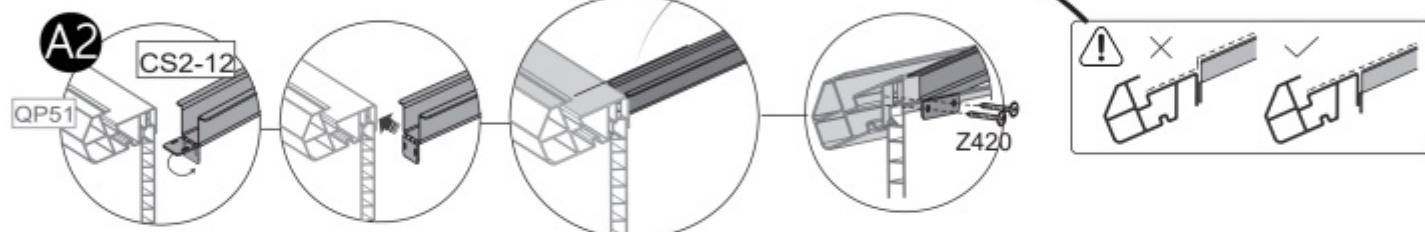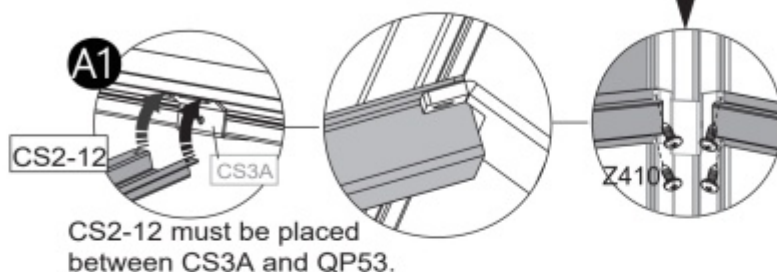
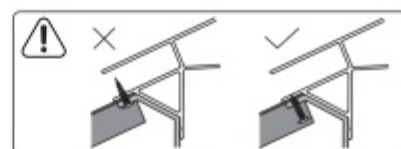


18-2

- Please fold the CS4 here to the angle that needs to be matched with the workpiece before installation.

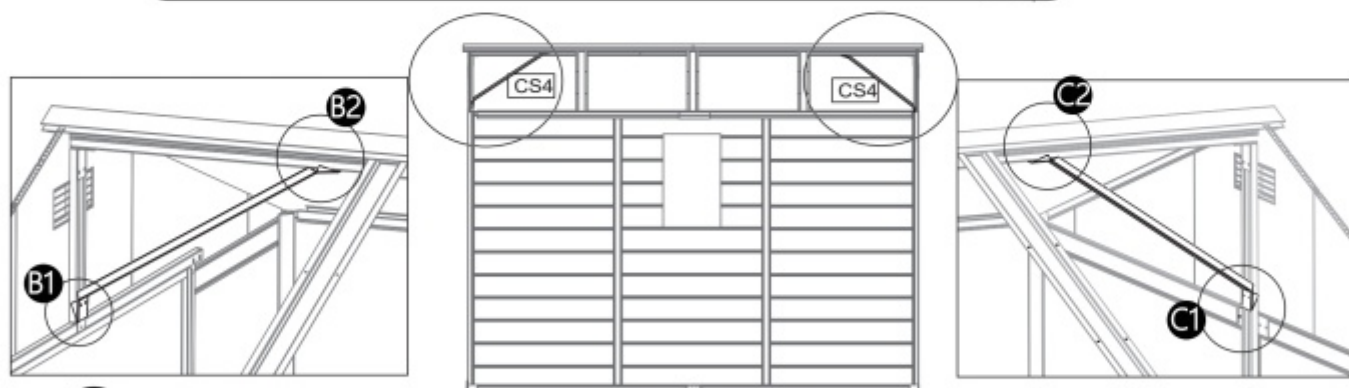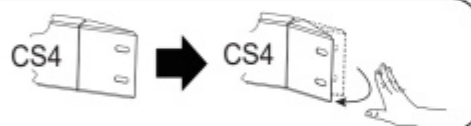


The end of CS4 should be aligned with the black line on QAP1.

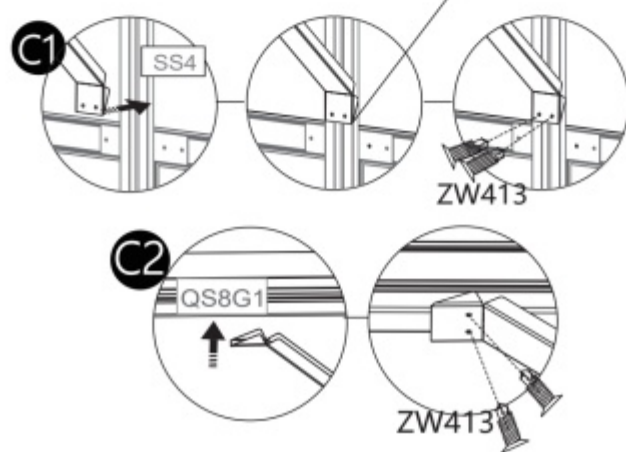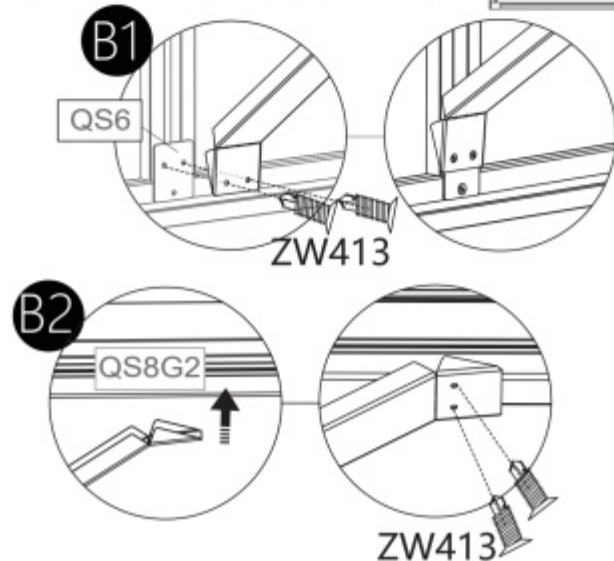

STEP 18

18-3


CS4-1	ZW413
	
3 PC	12 PC

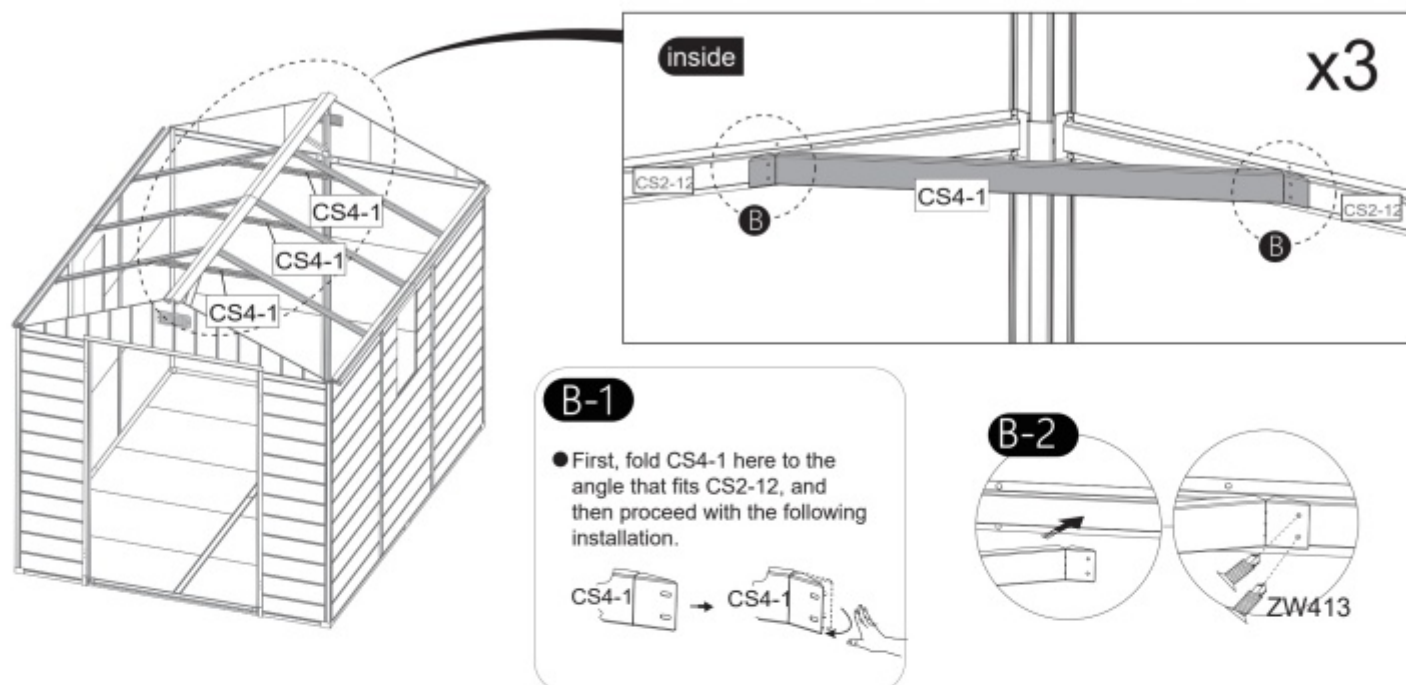

STEP 19



19-1

	QR5-1
The roofing board with a pattern is facing up.	2 PC

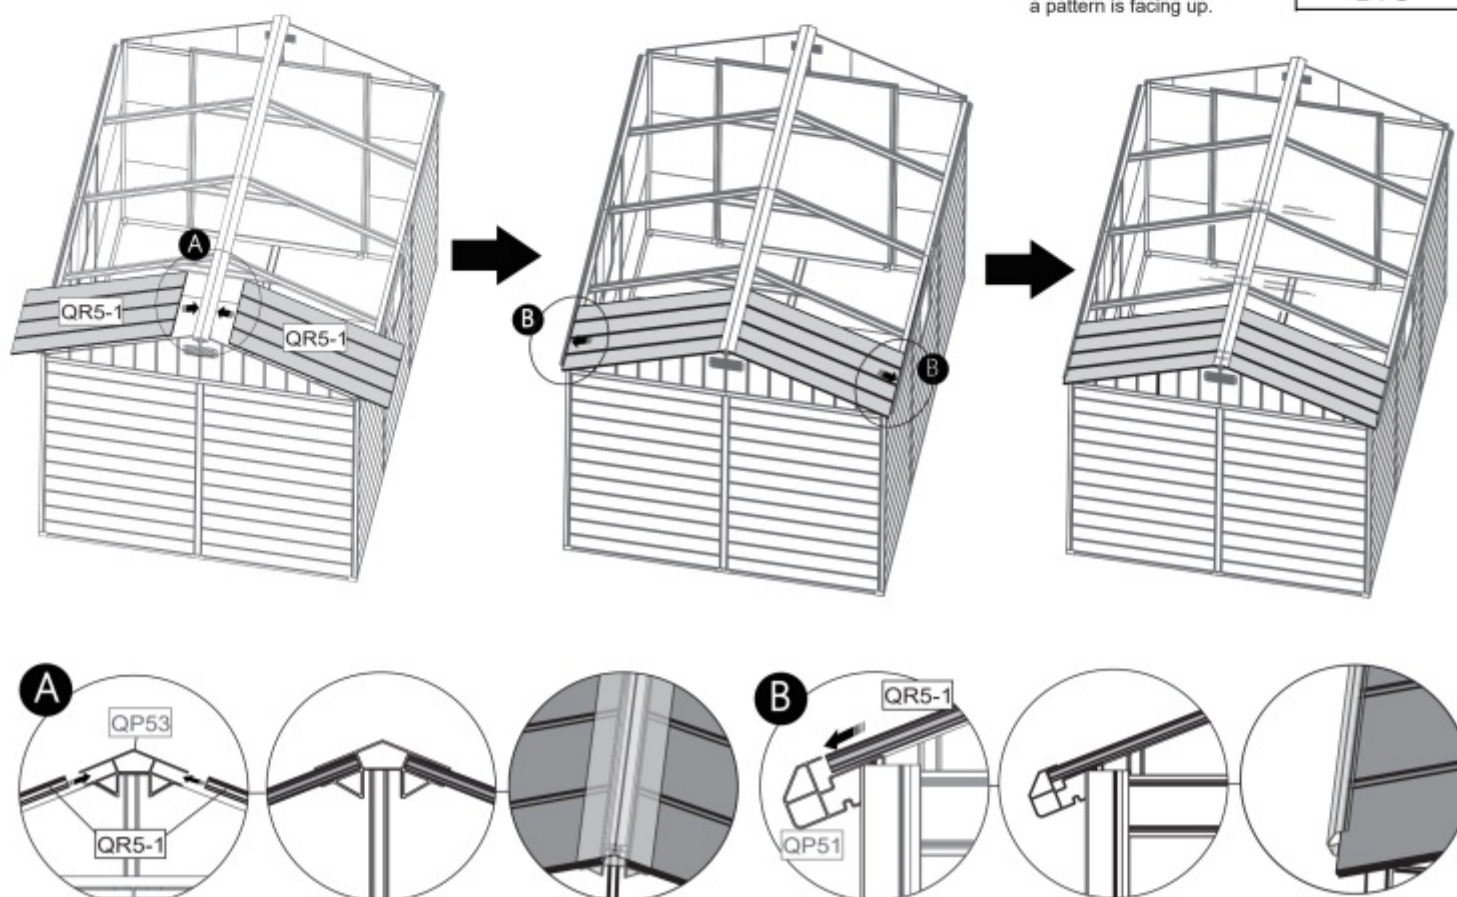

STEP 19

19-2


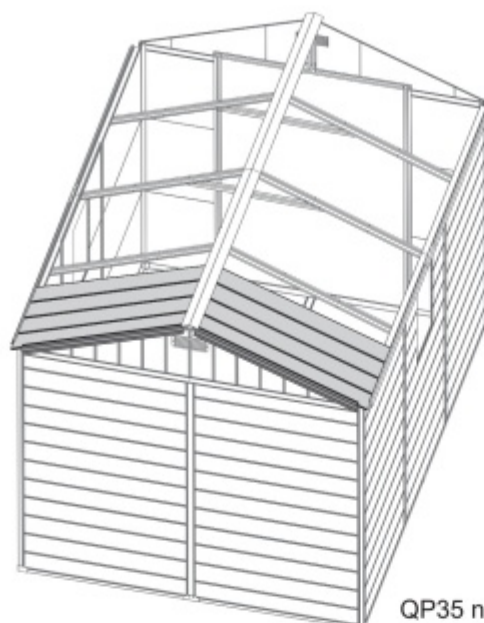
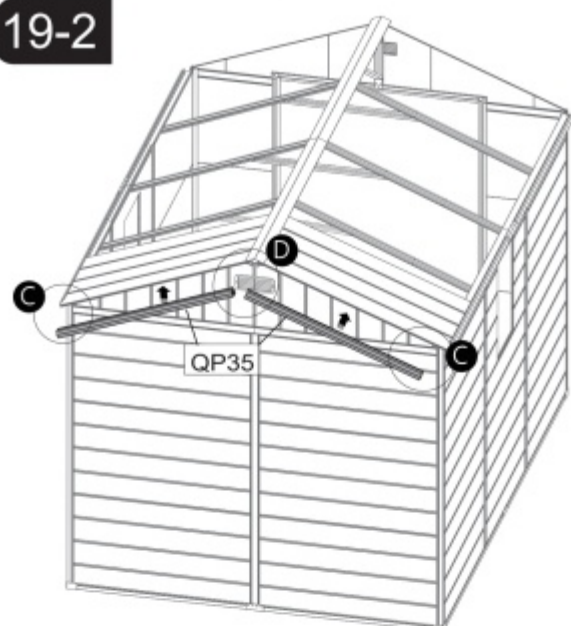


QP35



2 PC

QP35 needs to be inserted between QP53 and QR5-1.

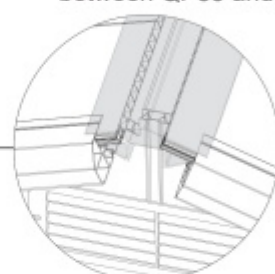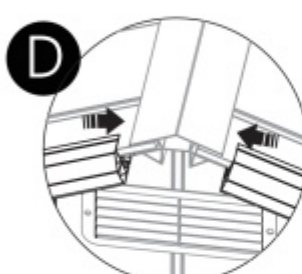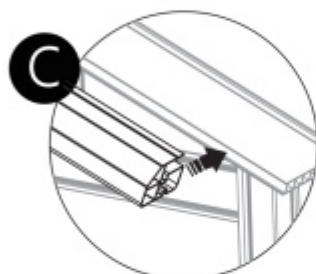

STEP 20

QP33




2 PC


Z425




6 PC

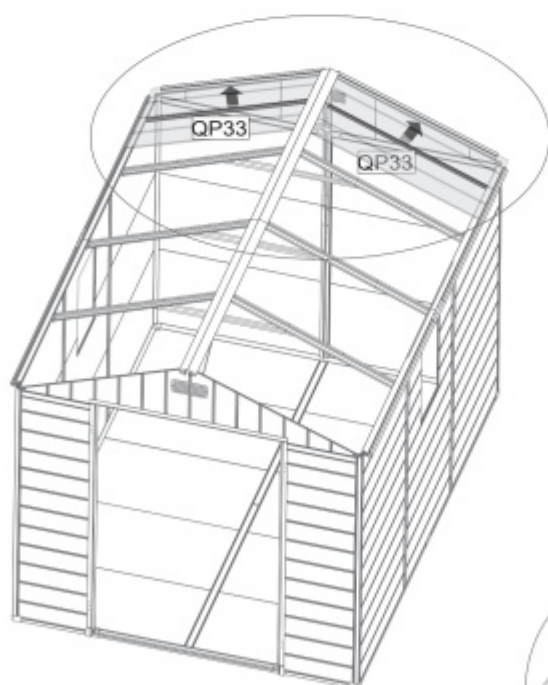




inside

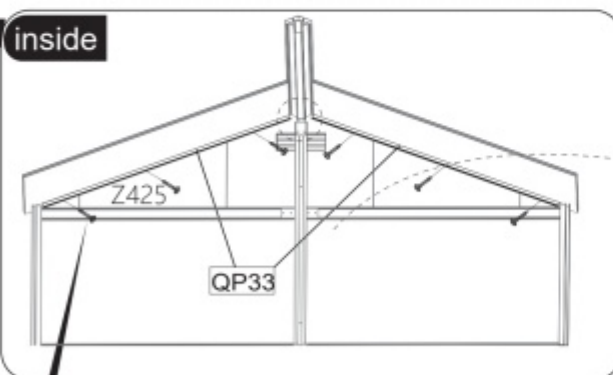

inside


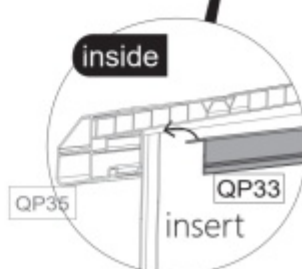


STEP 21

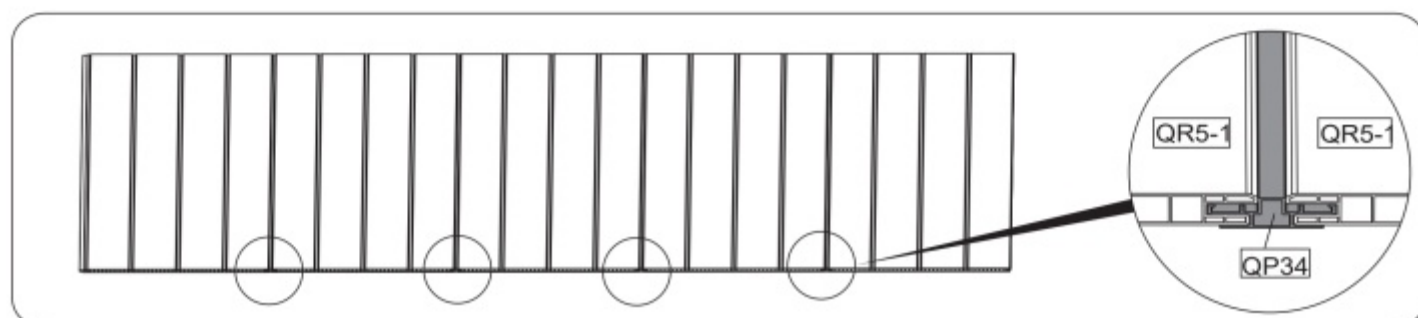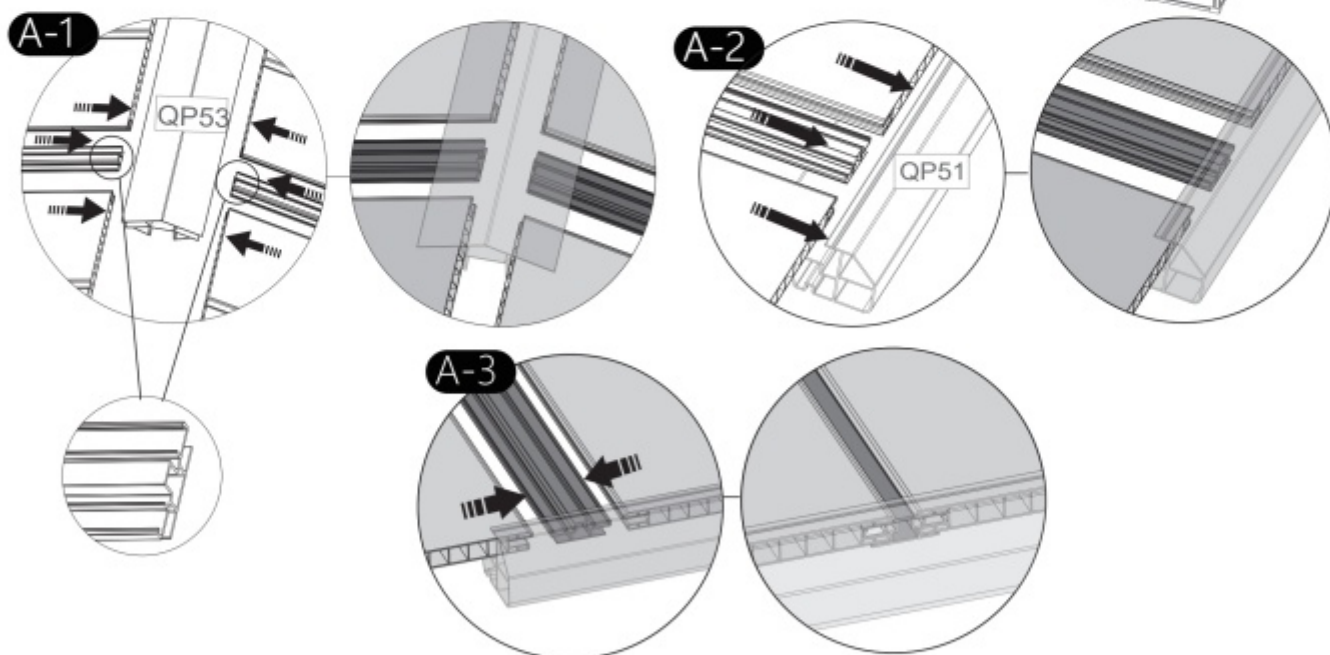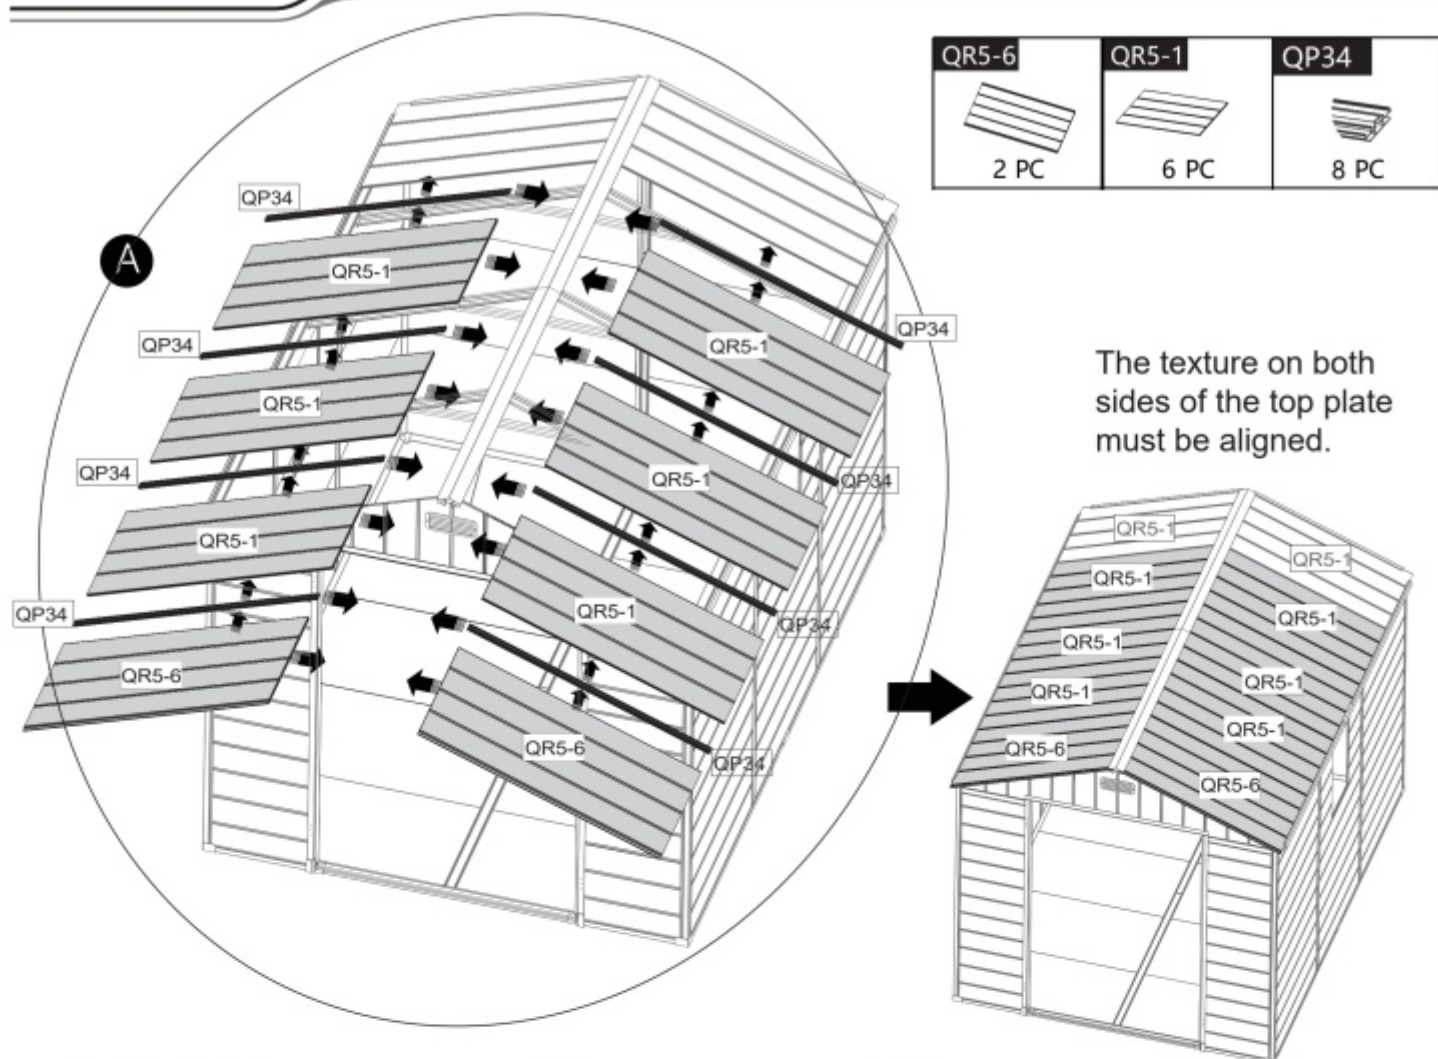

STEP 22

22-1

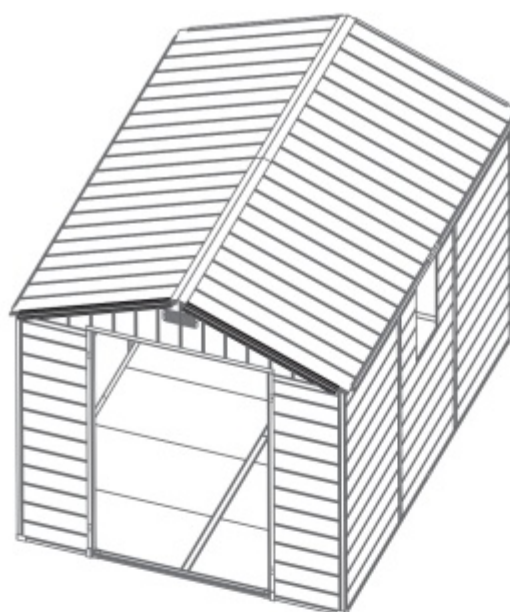
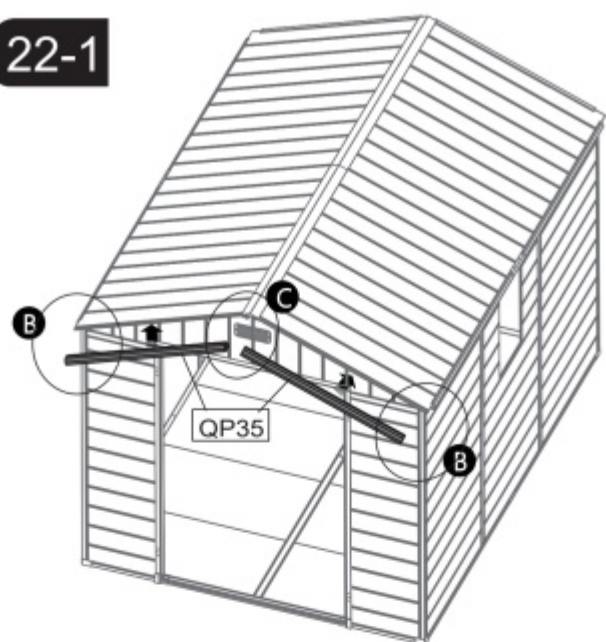


QP35




2 PC

B

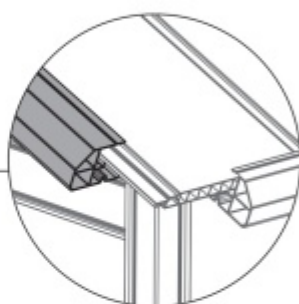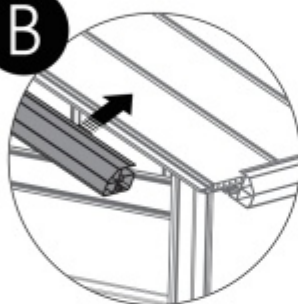


C

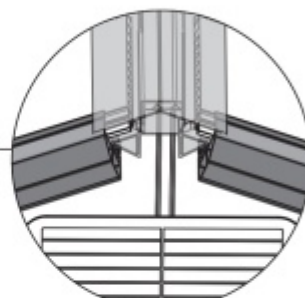


QP35 needs to be inserted between QP53 and QR5-6.


22-2

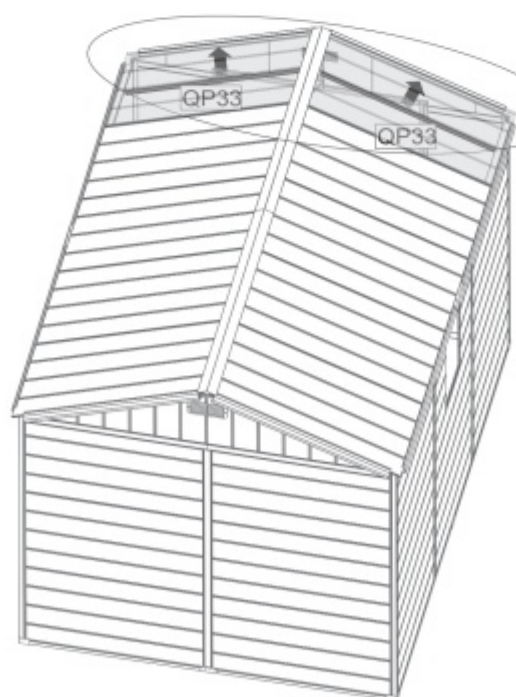

inside

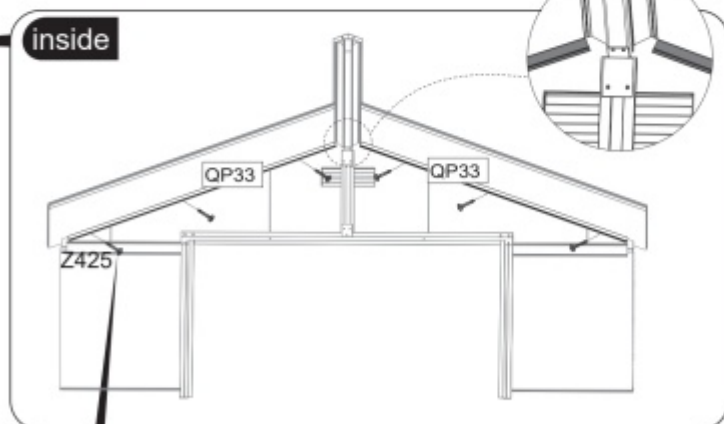

QP33




2 PC

Z425



6 PC




inside

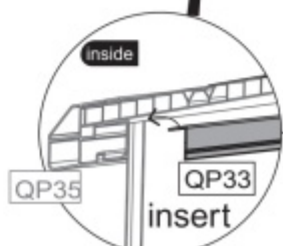

STEP 23






23-1

SG2	SG1	SG44	JT-1	Z410	Z425	Z420
						
4 PC	2 PC	1 PC	1 PC	36 PC	4 PC	8 PC

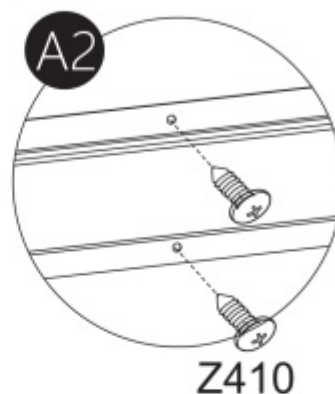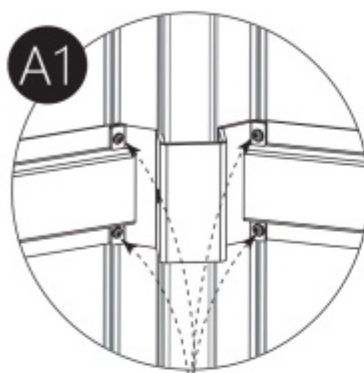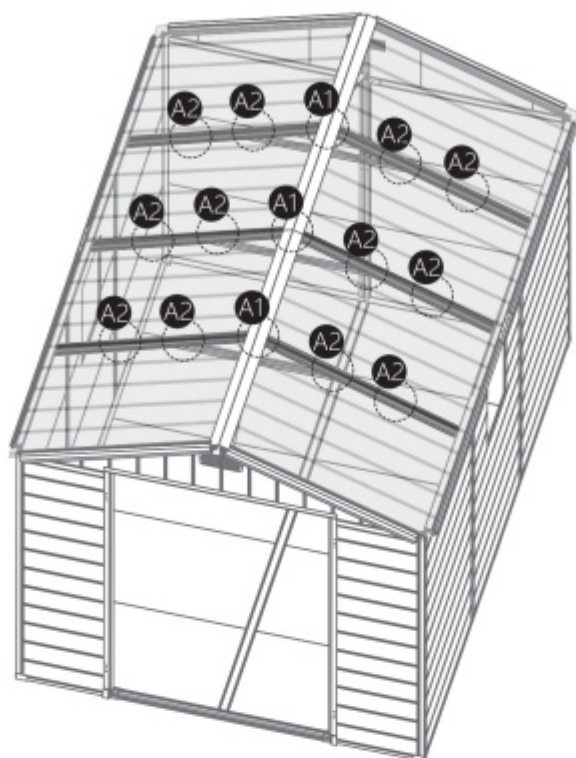


This step involves tightening the screw.

23-2

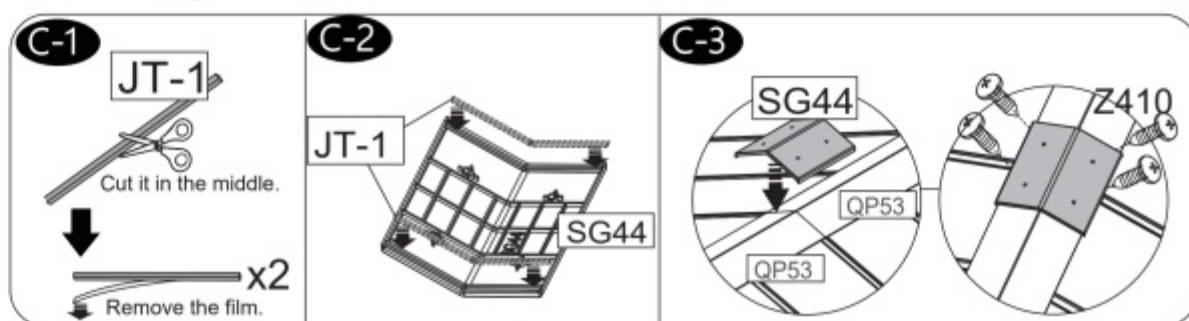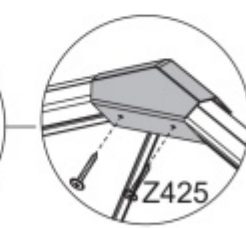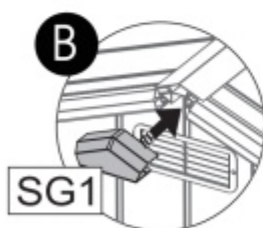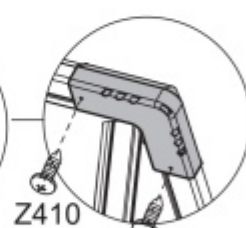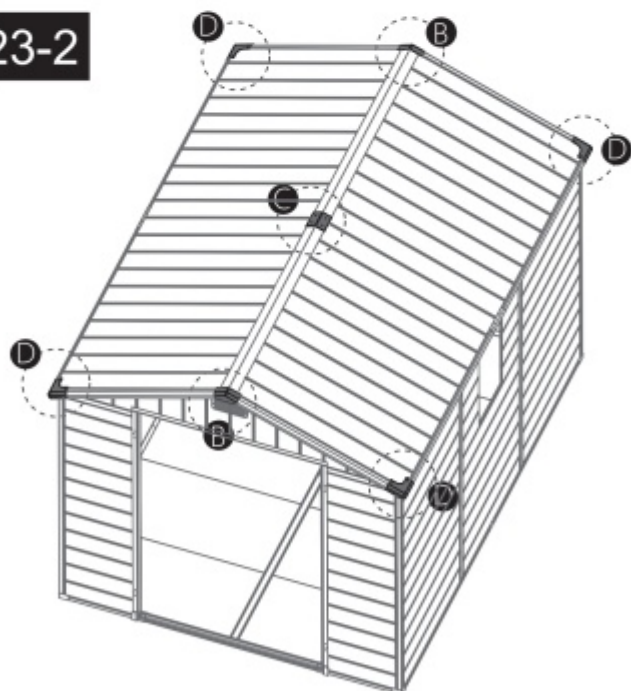


STEP 24

24-1

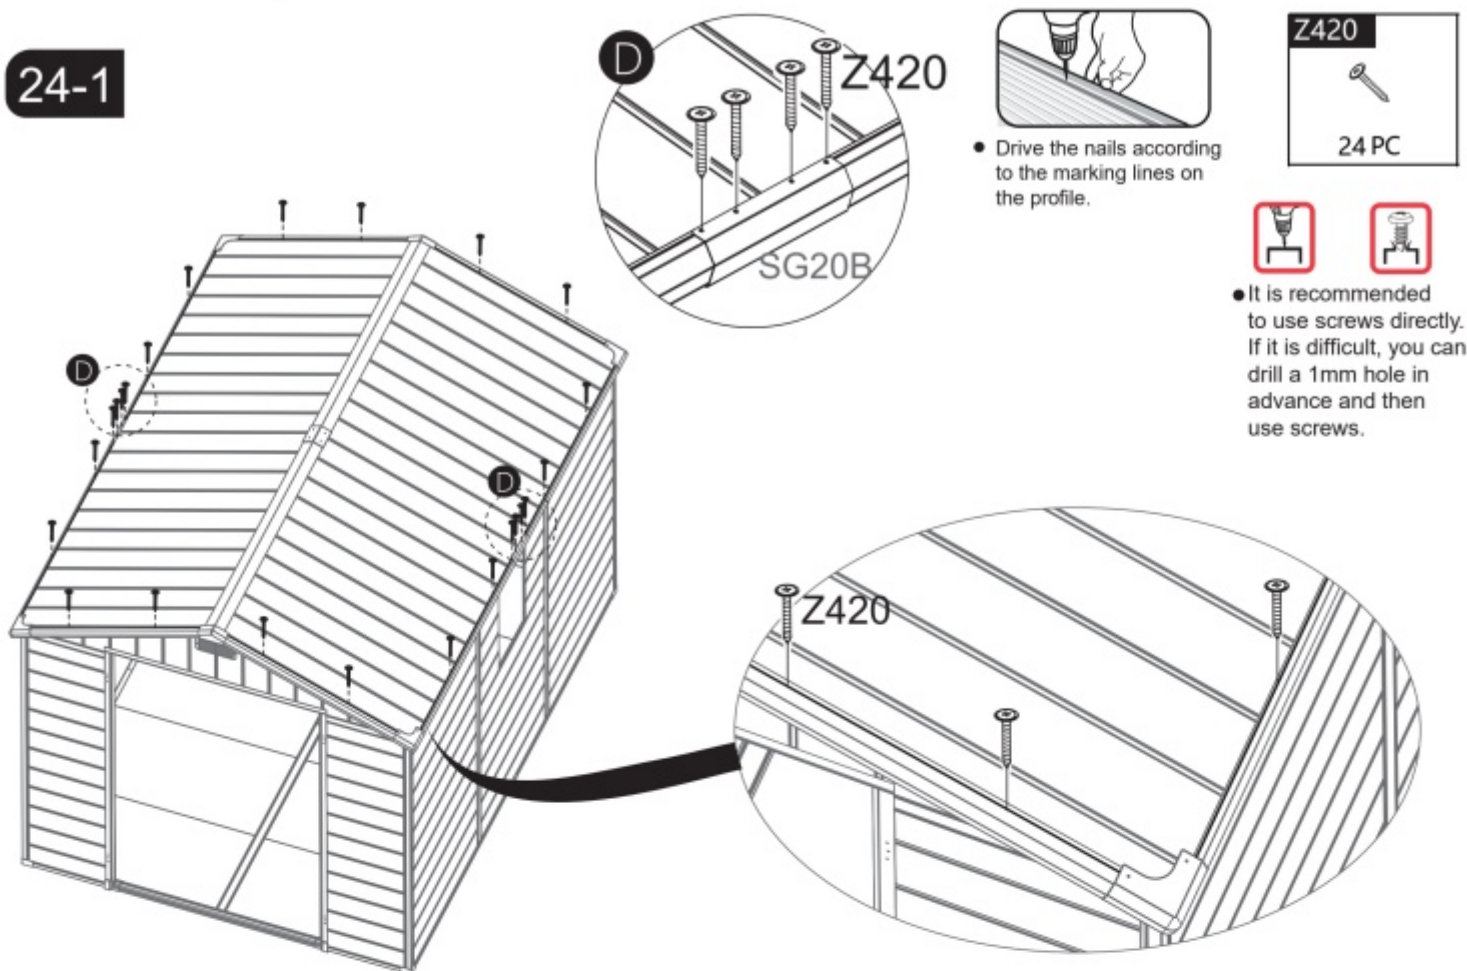


24-2

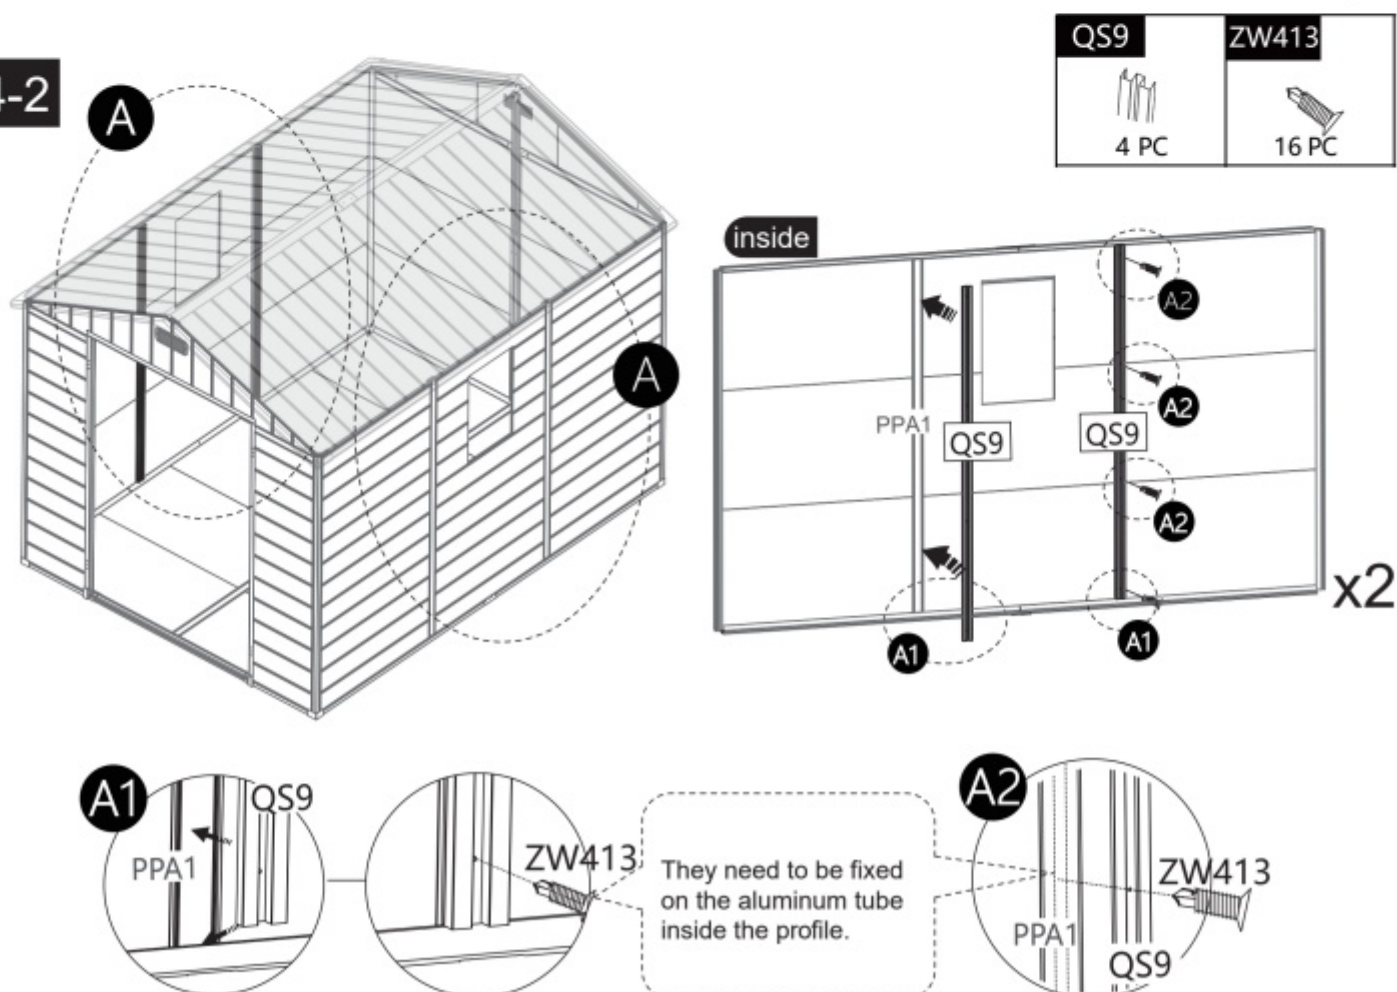

STEP 25


25-1

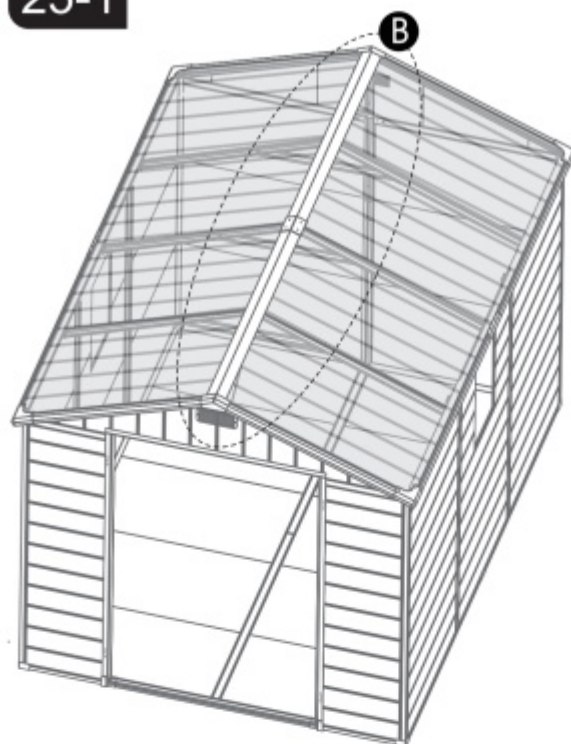

Z410



20 PC

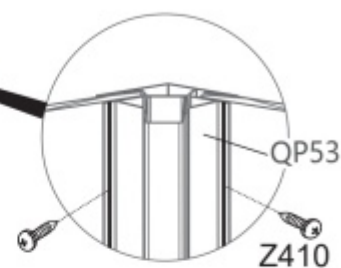

25-2

Note: SG43 is divided into A side and B side.



SG43




4 PC


Z420




4 PC

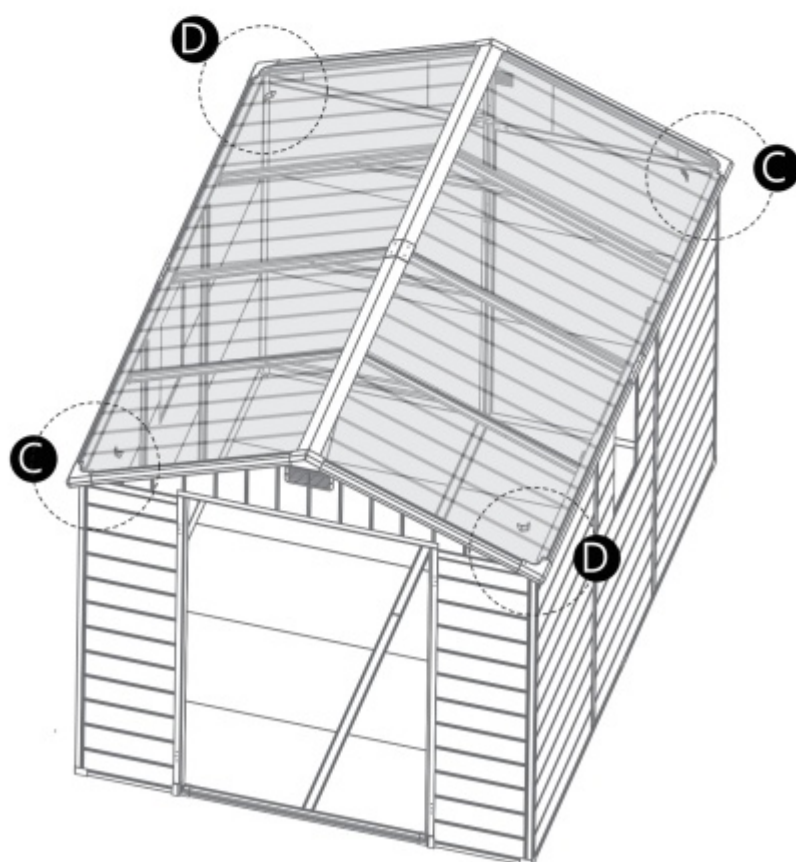



Fold the A side of SG43 to the angle of adhesion in the direction of the arrow.

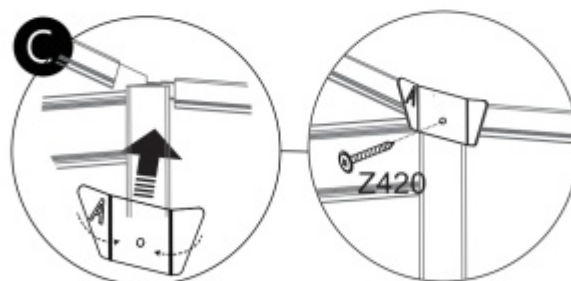


Fold the B side of SG43 to the angle of adhesion in the direction of the arrow.

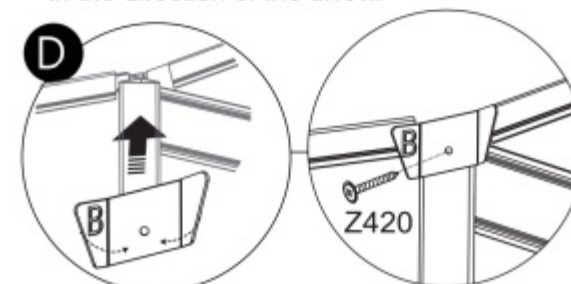

WINDOW SECTION

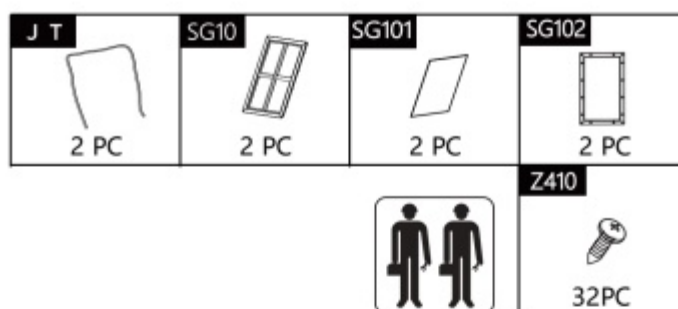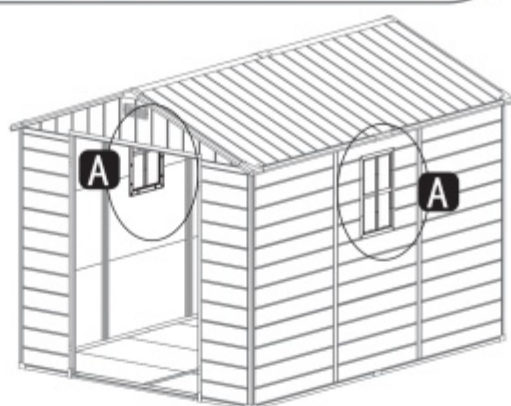


A-1

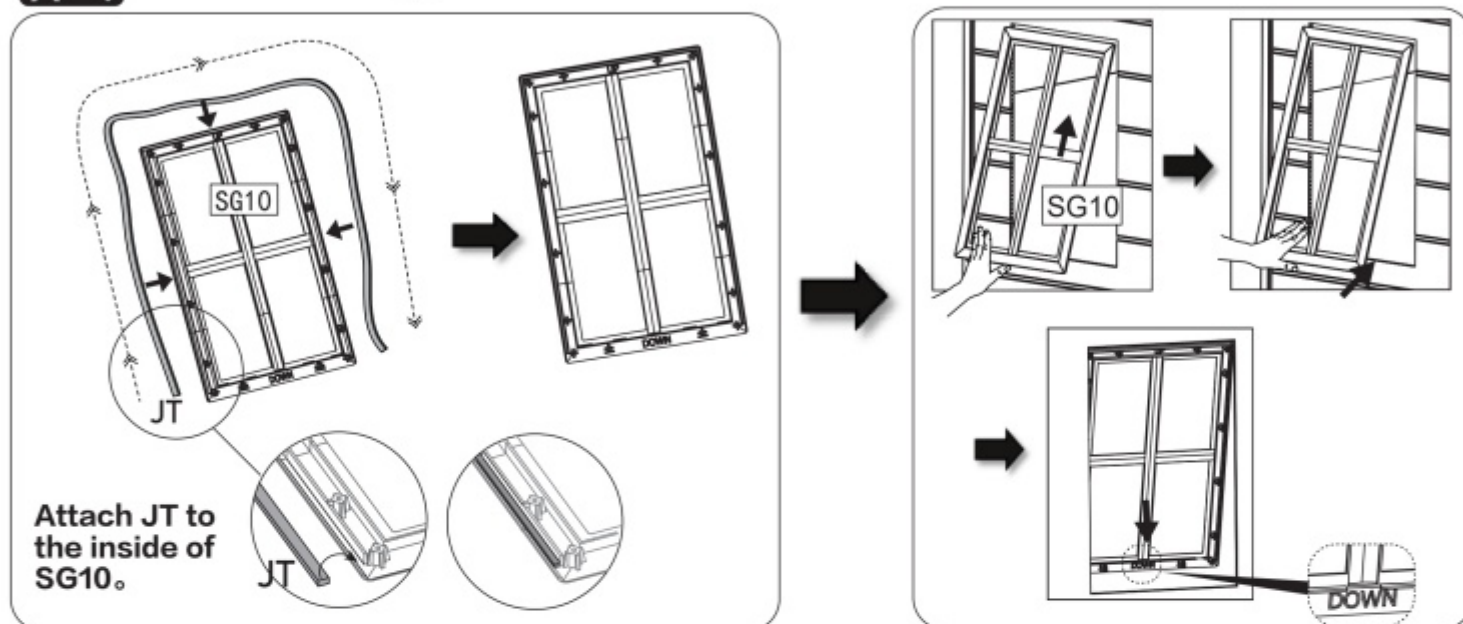


A-2

- Remove the film before fixing SG101


- Two persons are needed for this step, to press SG10 from outside and inside.

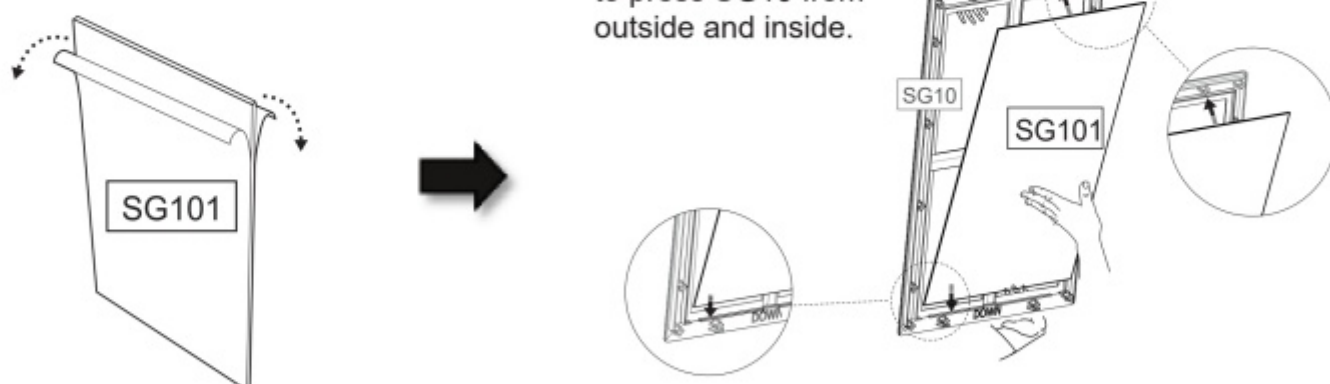



A-3

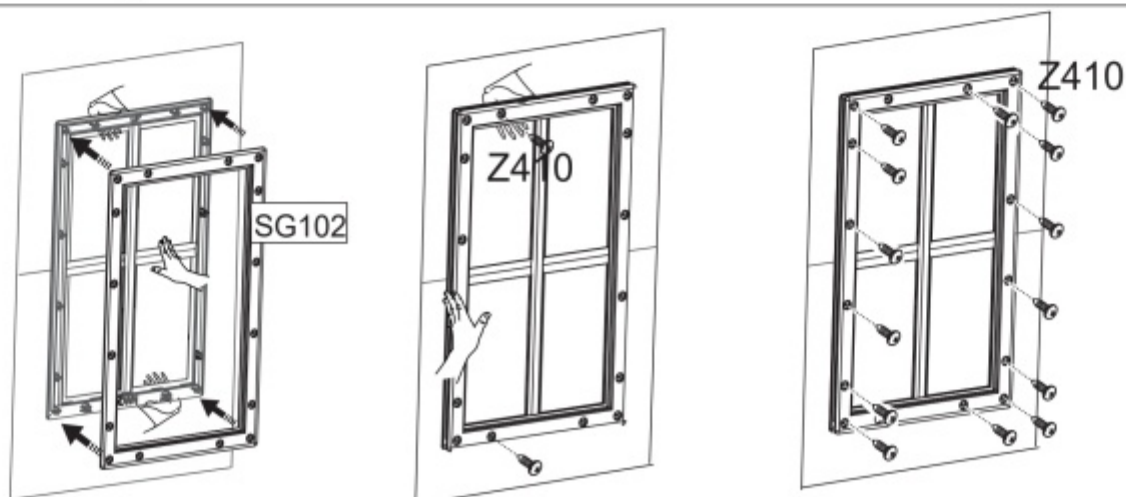

DOOR PANEL SECTION

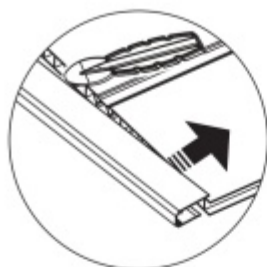

- Use spatula (part "SG8") for easier insertion of panel into profile.

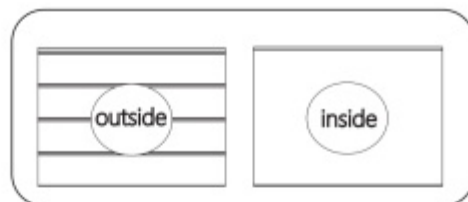
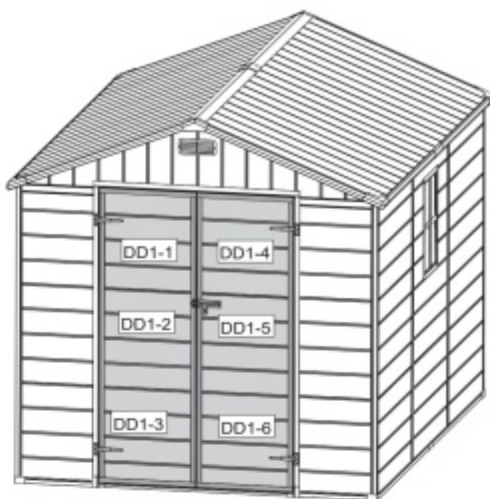


- The patterned surface of the door panel faces outward.




- After the door panels are connected, they should be aligned neatly.

LEFT DOOR




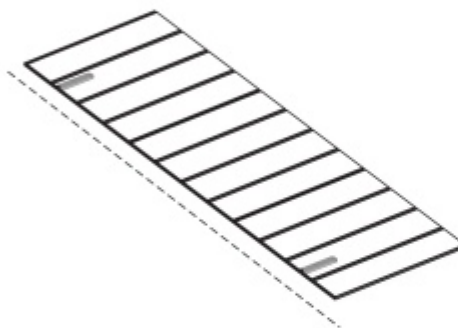
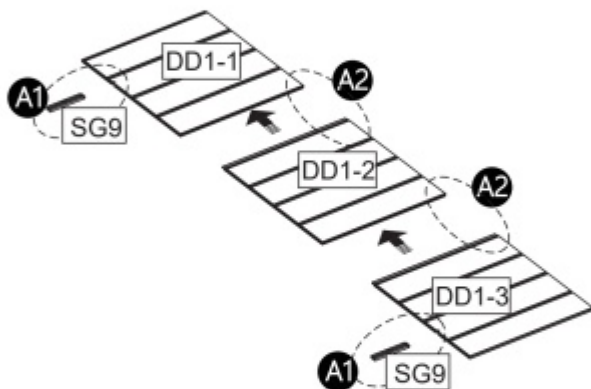


DD1-1		1 PC
DD1-2		1 PC
DD1-3		1 PC
DD1-4		1 PC
DD1-5		1 PC
DD1-6		1 PC
SG9		5 PC

RIGHT DOOR

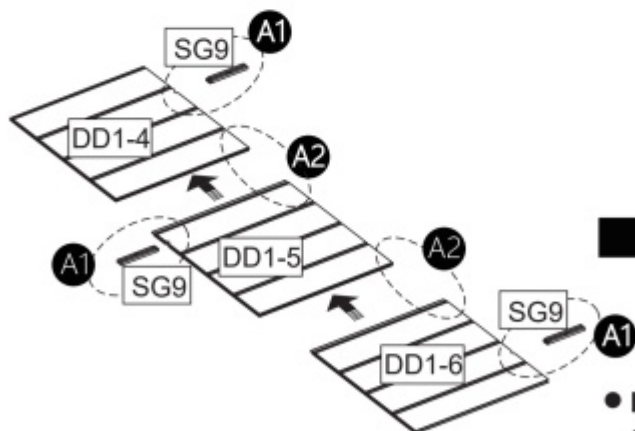


- Please insert the SG9 into the corresponding board first.

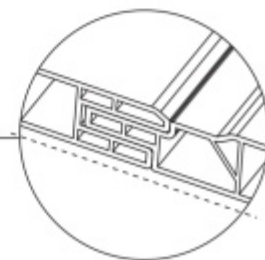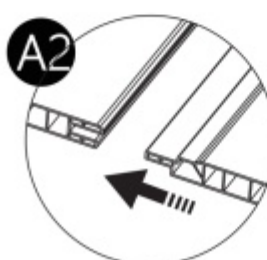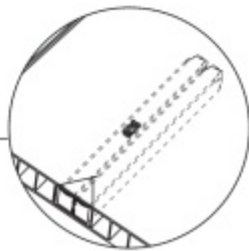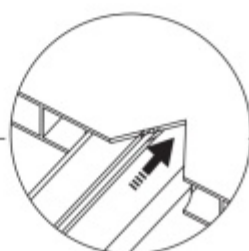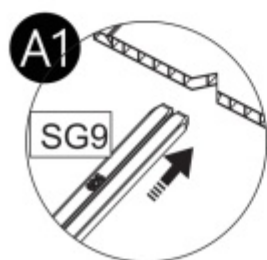


STEP 28

28-1

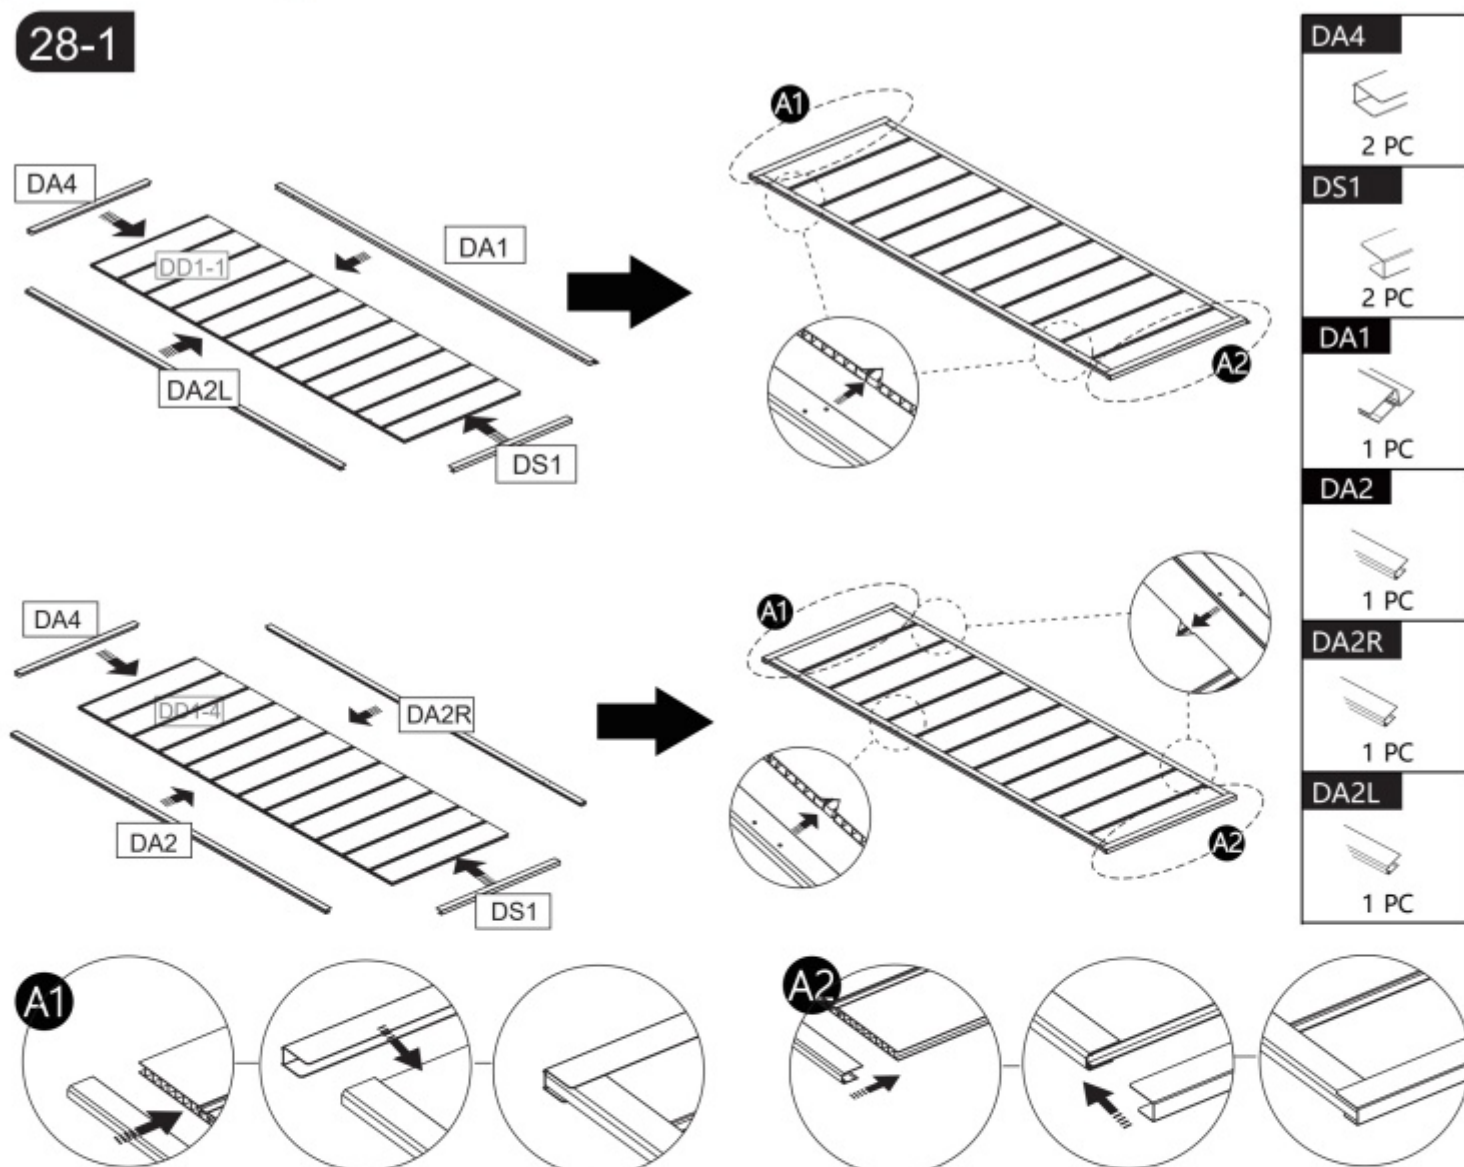

28-2


- Turn the door panel over, with the grain facing down, and then measure the diagonal of the door panel $E=F$, $L=K$, to ensure that the door panel and frame are properly installed.

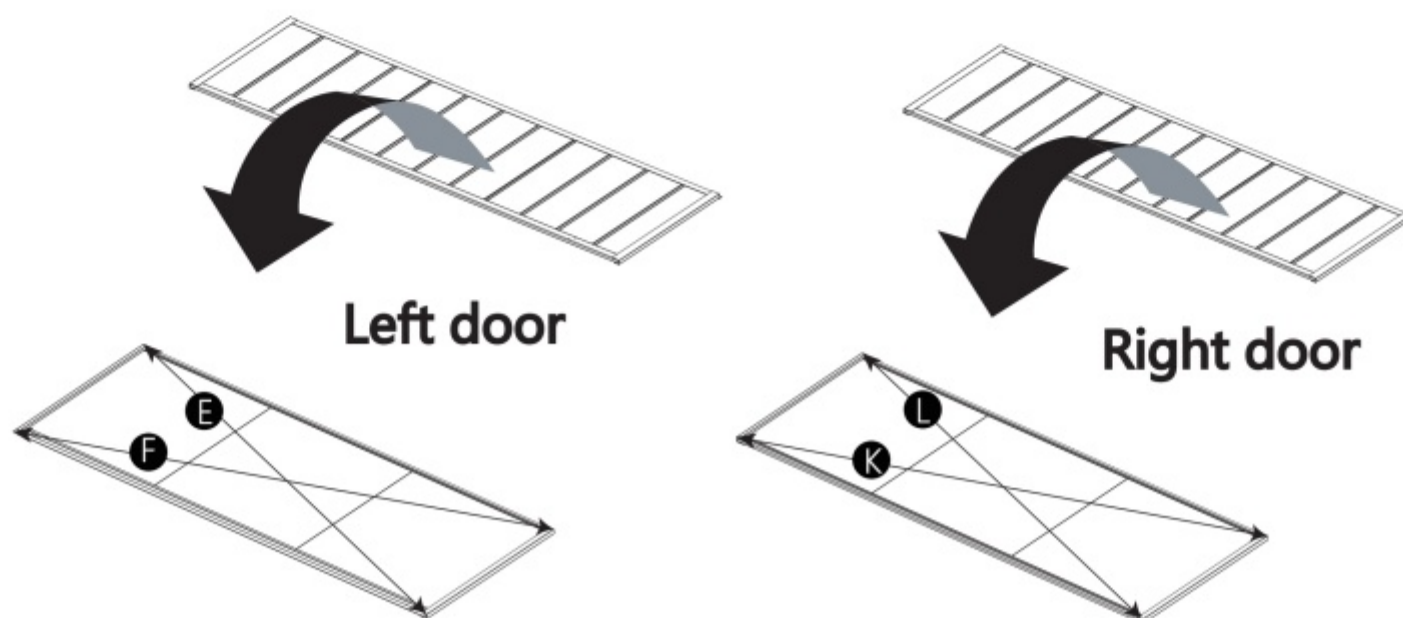

STEP 29

29-1



- Before driving the nail, you can first put the assembled door panel into the door frame, adjust it to match the angle of the door frame, and then drive the nail to fix it when the texture of the door panel is consistent with the texture of the wall panel.

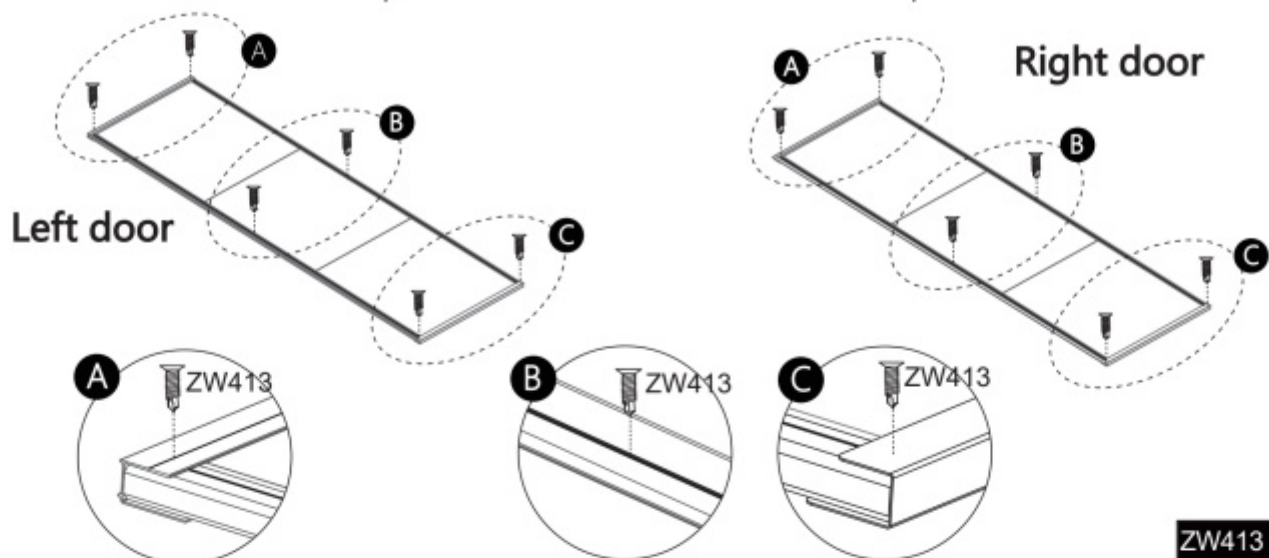


29-2

- First, flip the door panel over, with the grain facing up; Then install MO1 to the corresponding position on the door with a screw, in order to facilitate the fine adjustment of the door panel, do not tighten the screw of MO1.

Left door

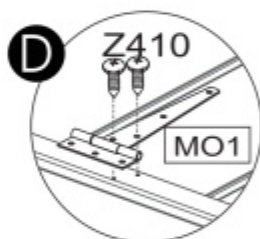
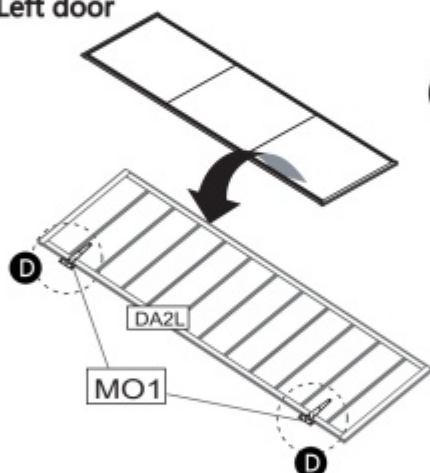


Right door

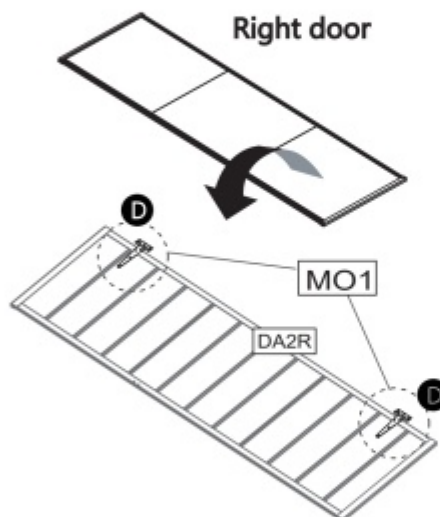

ZW413
12 PC
MO1
4 PC
Z410
28 PC




29-3

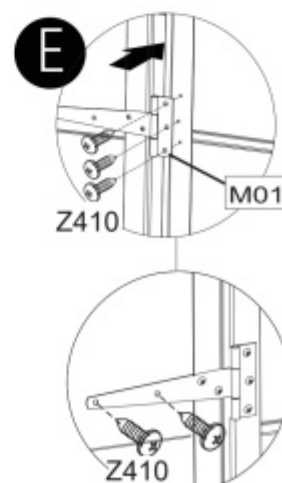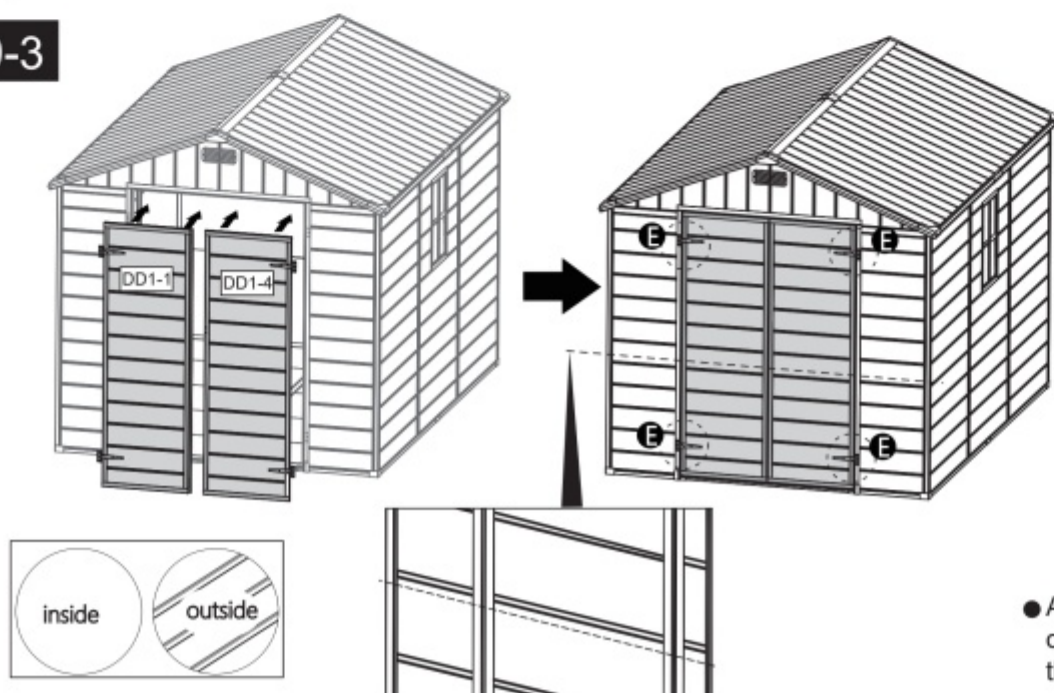

- After adjusting the position of the door panel, tighten all the screws.



STEP 30

30-1

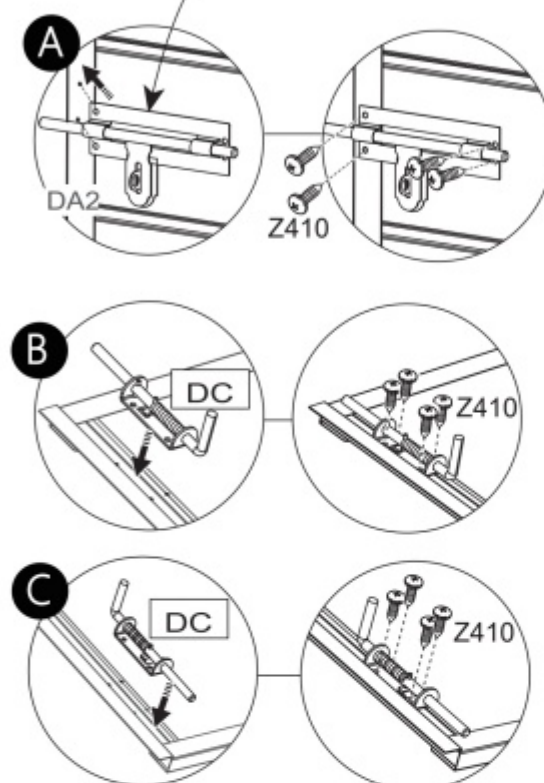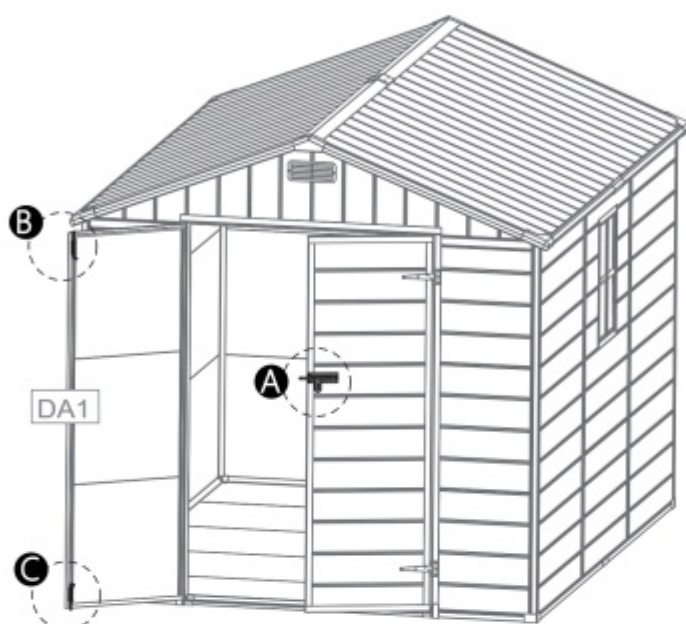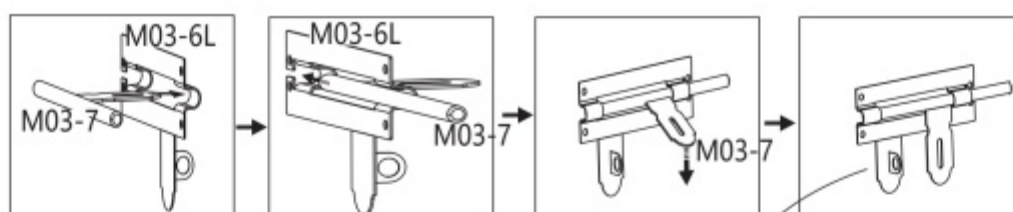

DC		2 PC
M03-6L		1 PC
M03-7		1 PC
Z410		12 PC
M04		1 PC
ZW413		2 PC


30-2

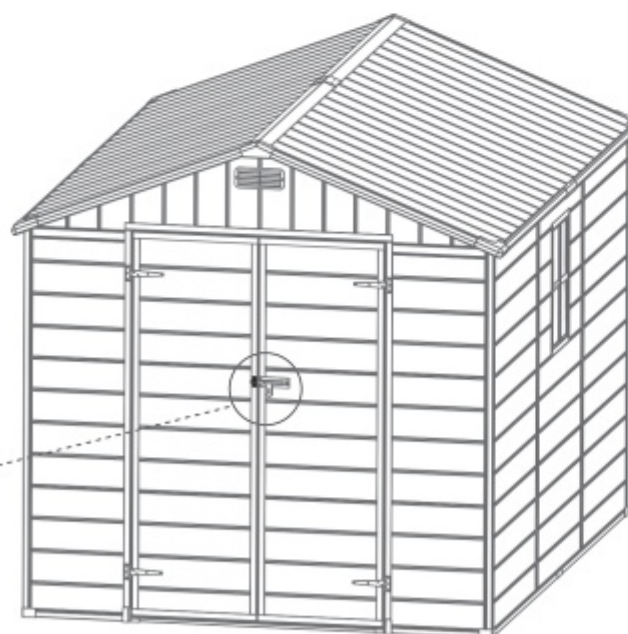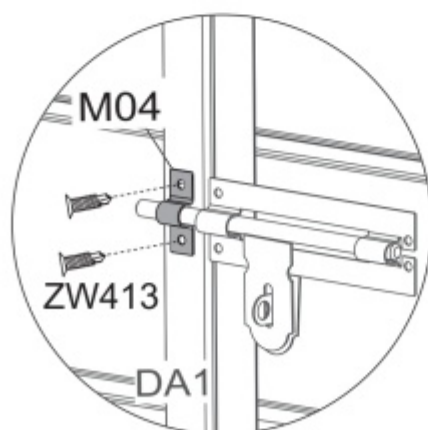

In areas with frequent special storms, when the house is fully installed, it is recommended to seal with glue on both sides of QP53.

STEP 31

**The installation is complete.
Make sure all the screws are fully tighten.**

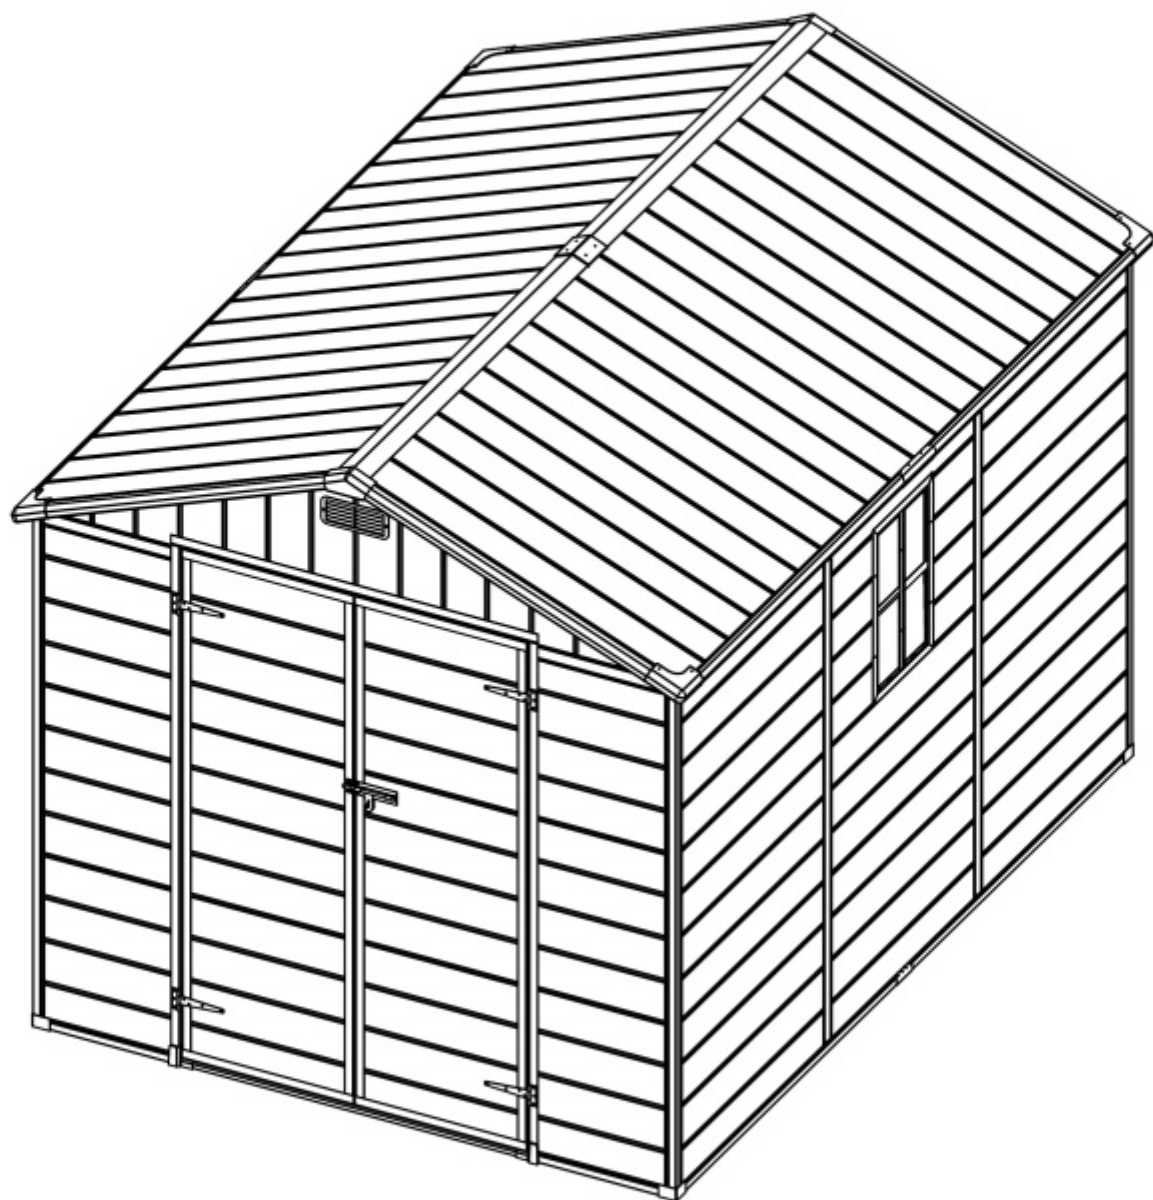

AFTER-SALE SERVICE CARD

If you have any suggestions for our products or find that the products have quality problems, please contact us first, our after-sales team will reply you within 24 hours, and we will do our best to give you solutions until you are satisfied.

Guaranteed Customer Service

Your shopping experience is very important to us!
Feel unsatisfied? **Contact us!**
Have any questions? **Contact us!**

Wanna share how wonderful our smart products makes your home?
Share your pictures with us.
Any suggestions? **Contact us!**
We gotcha back!

✉ Patiofurniture Serviceteam@outlook.com

