




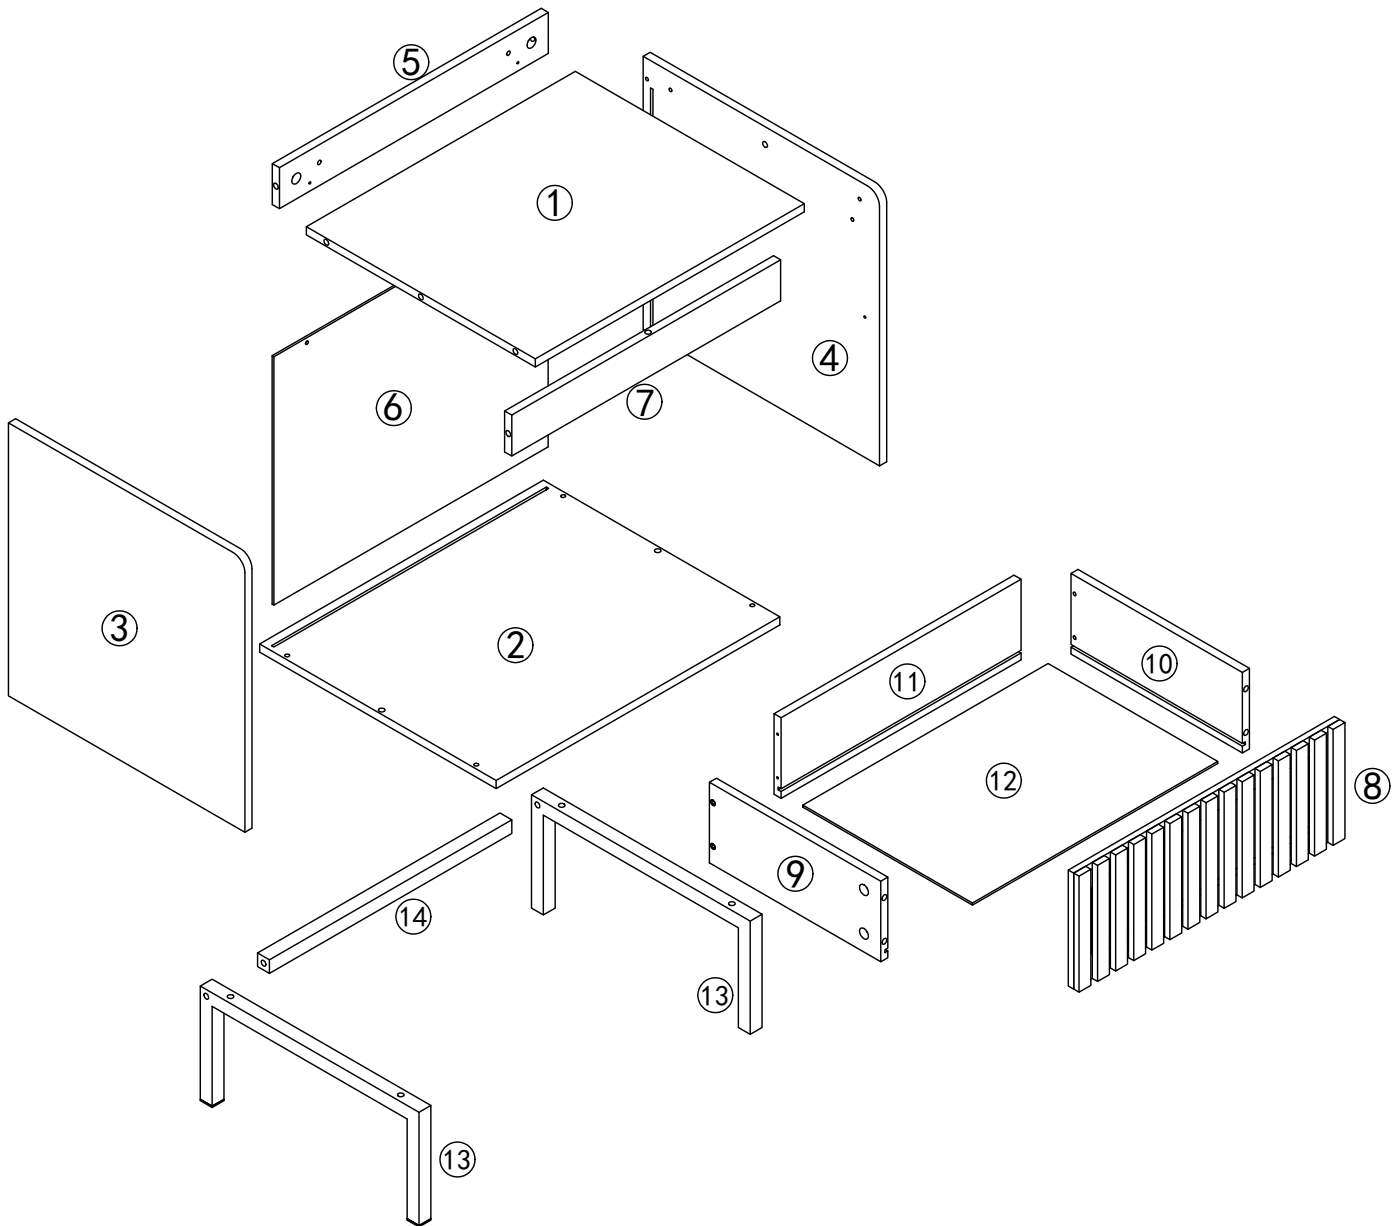




Assembly Instruction

A M6×35mm  26PCS	B Ø15×9 mm  26PCS	C M3 ×12 mm  24PCS	D Ø8×30mm  8PCS	E M4×35mm  8PCS	F M6×28mm  8PCS	G M6×40mm  4PCS	H 4mm  1PC	I M5X40mm  12PCS
J  8PCS	K M3 ×16mm  8PCS	L  CL DL 2PCS	R  DR CR 2PCS					


Cam Lock FasteningSystem

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

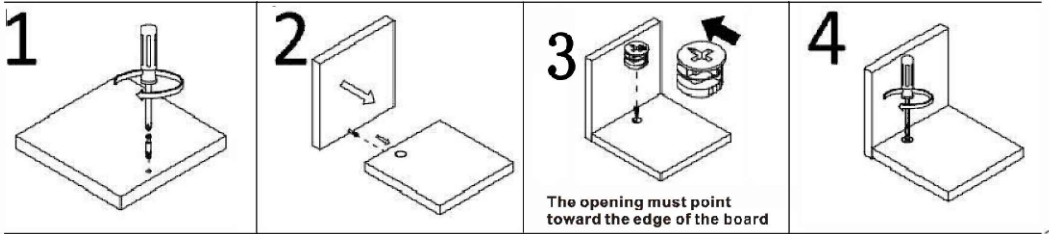

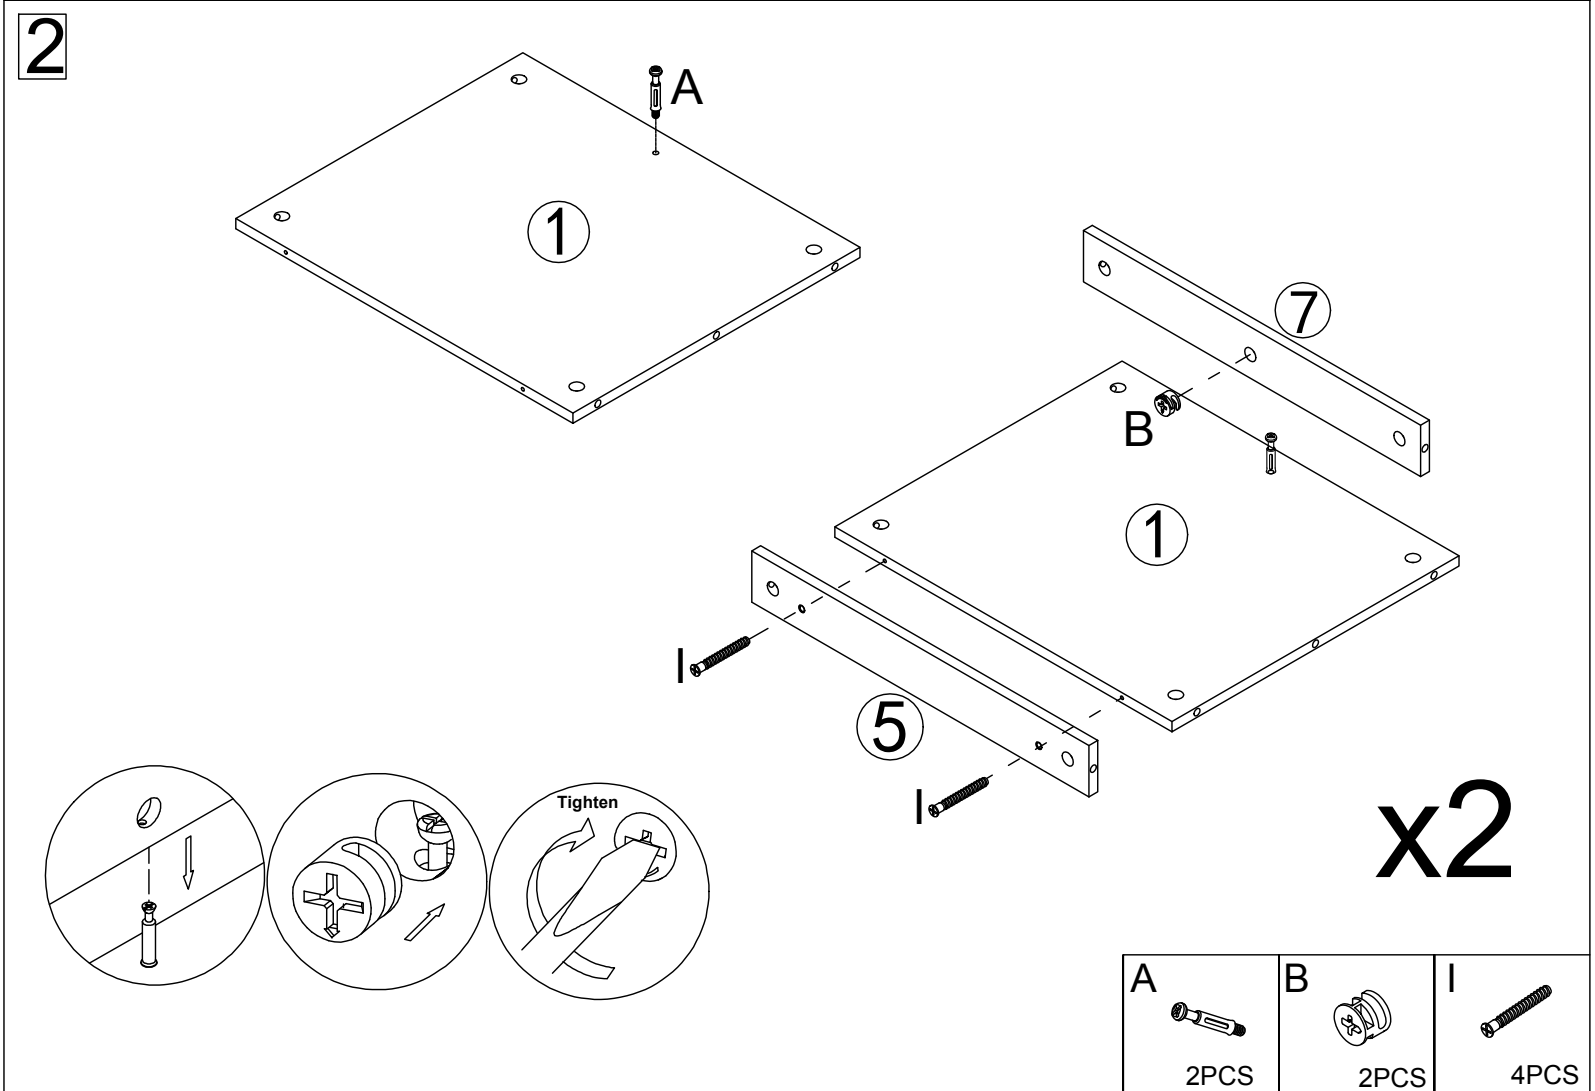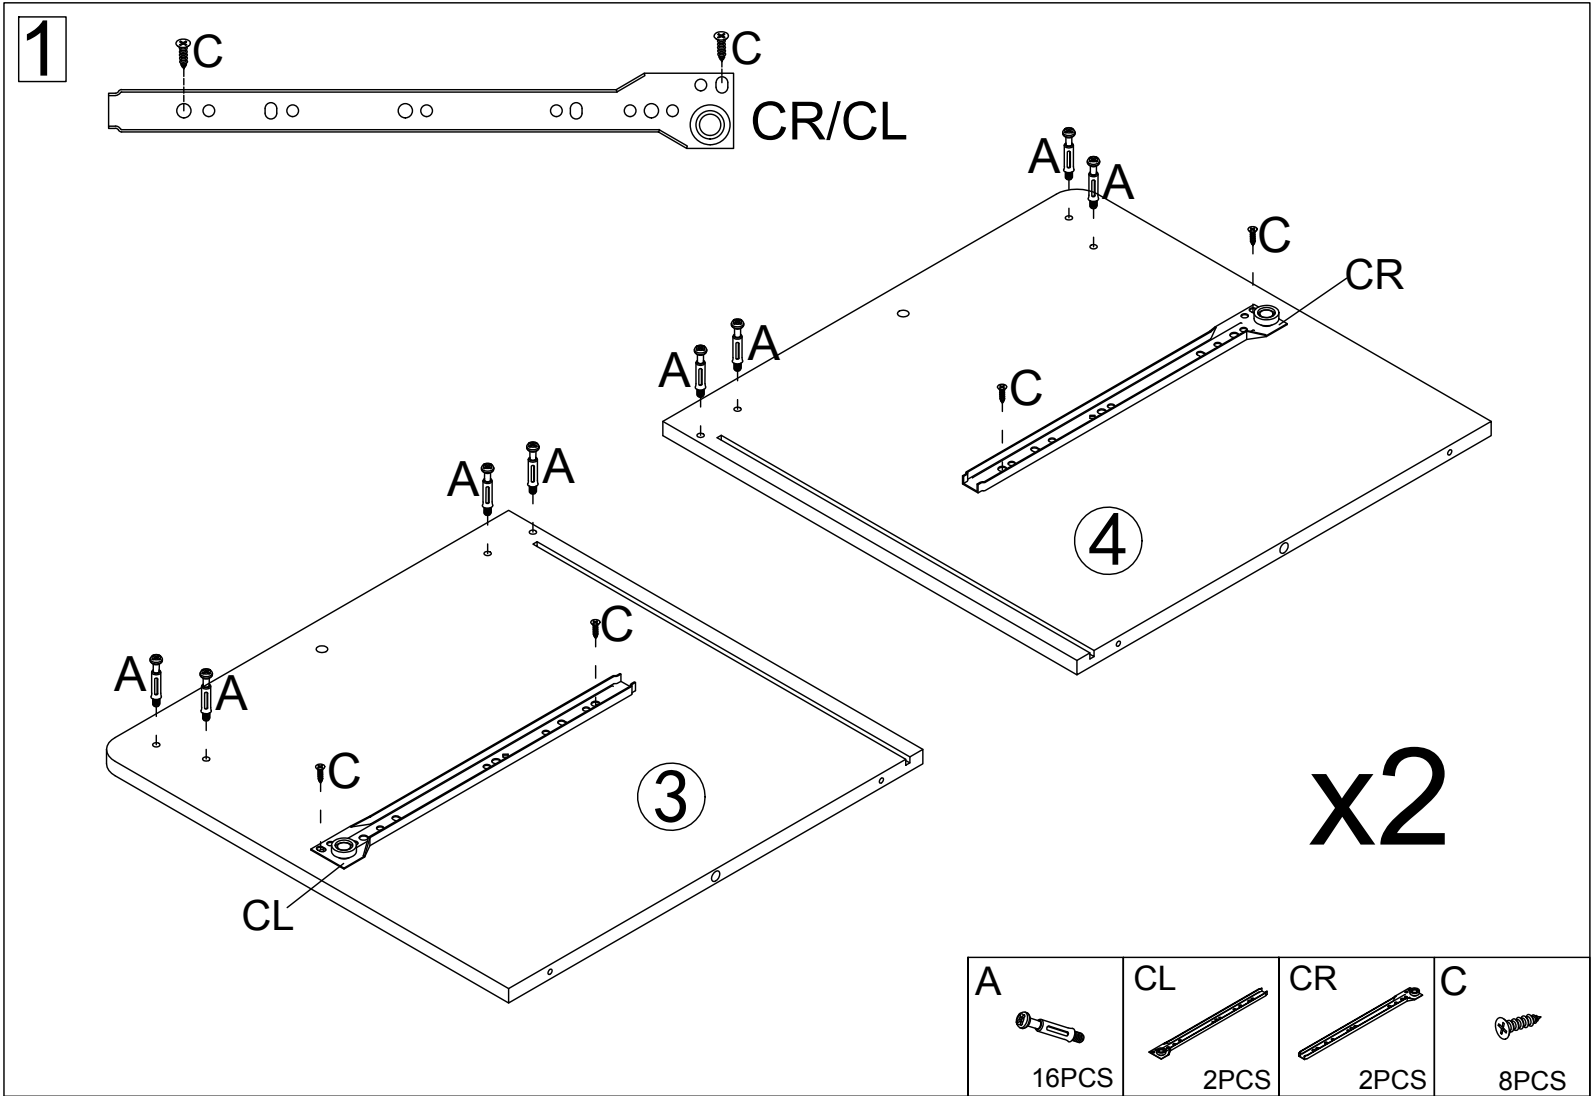


3

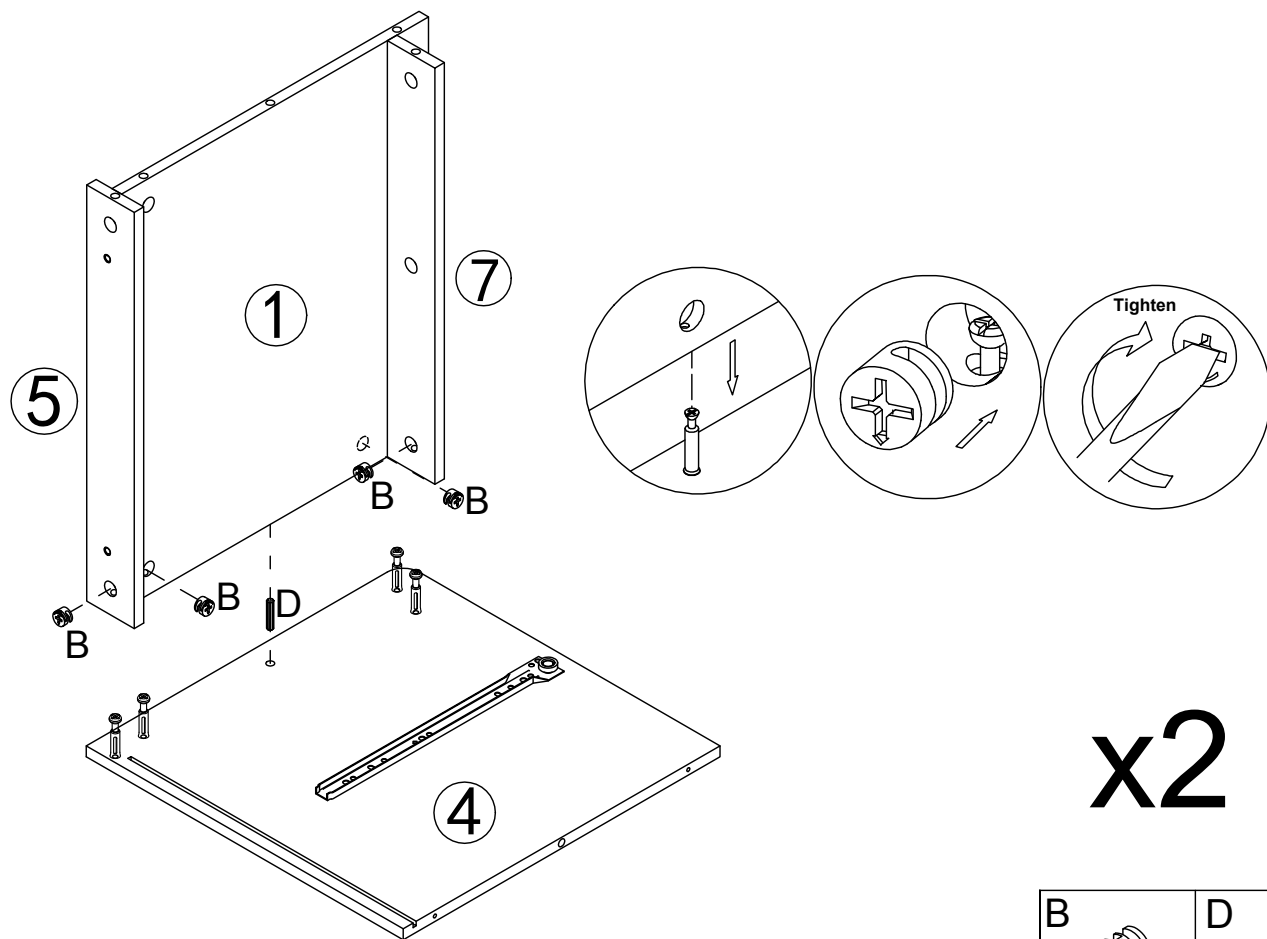


B	D
	
8PCS	2PCS

4

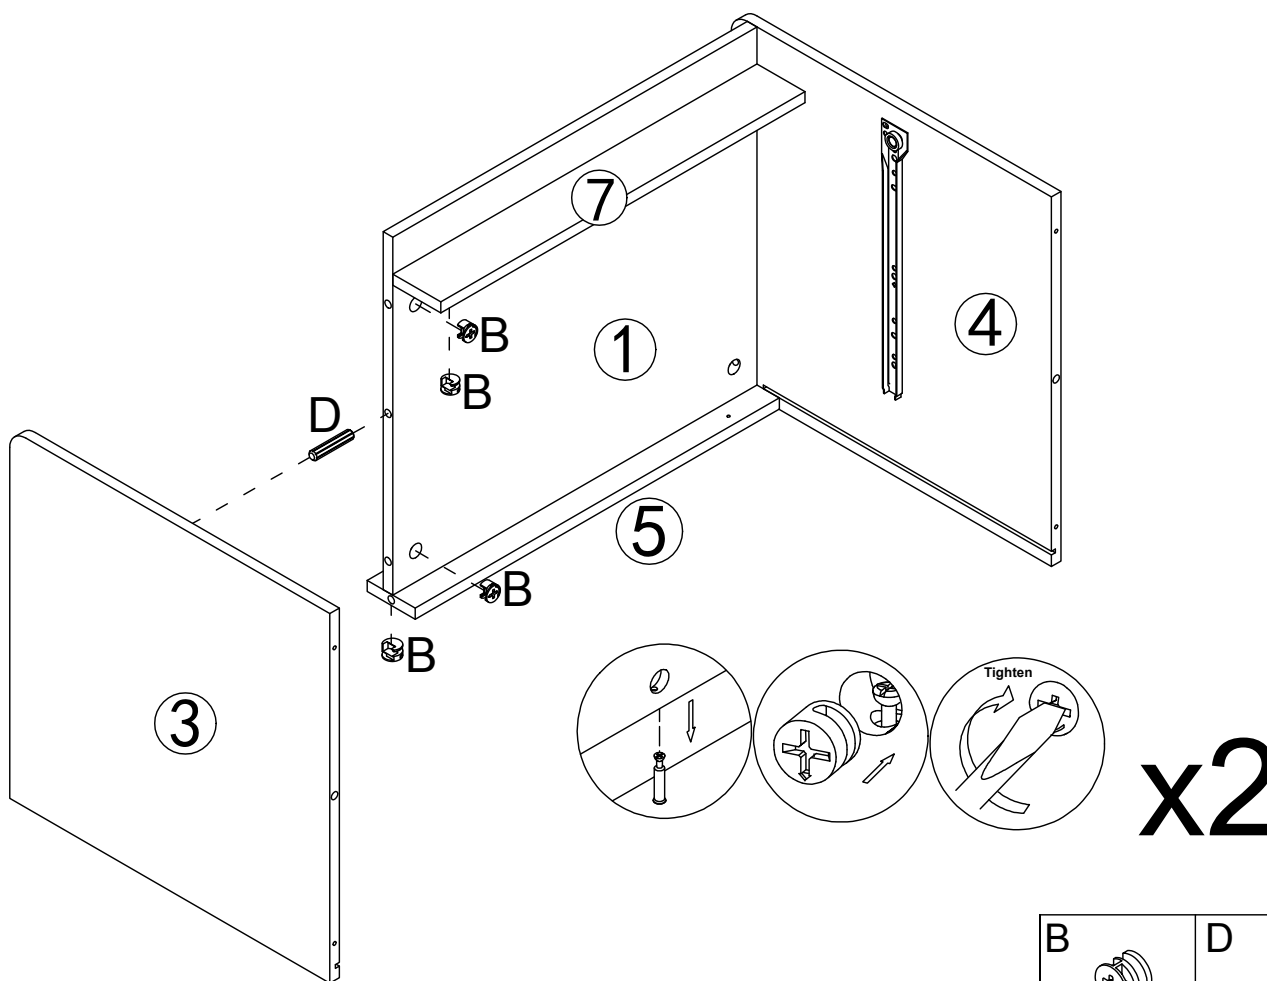


B	D
	
8PCS	2PCS

5

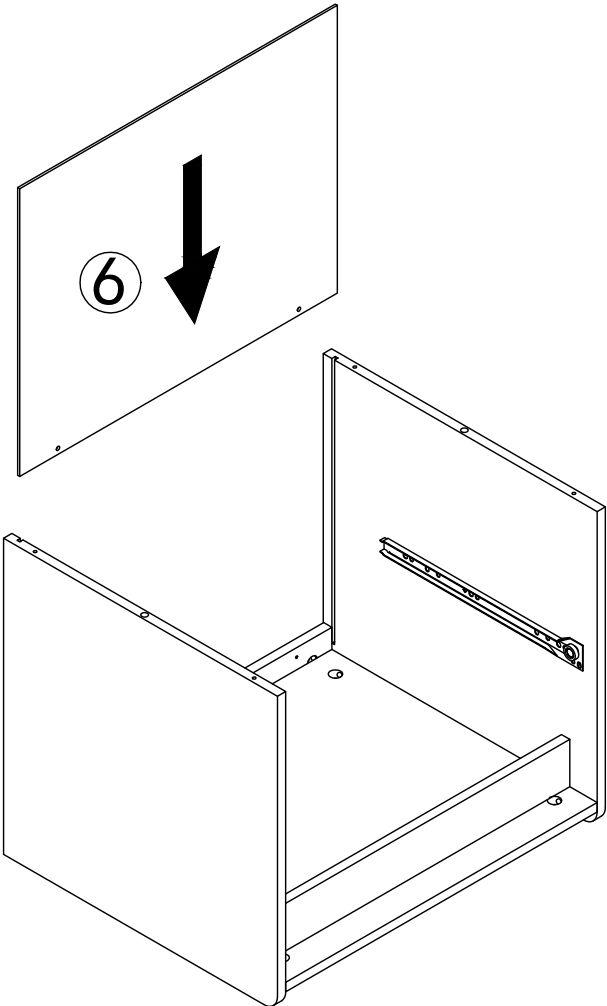

x2

6

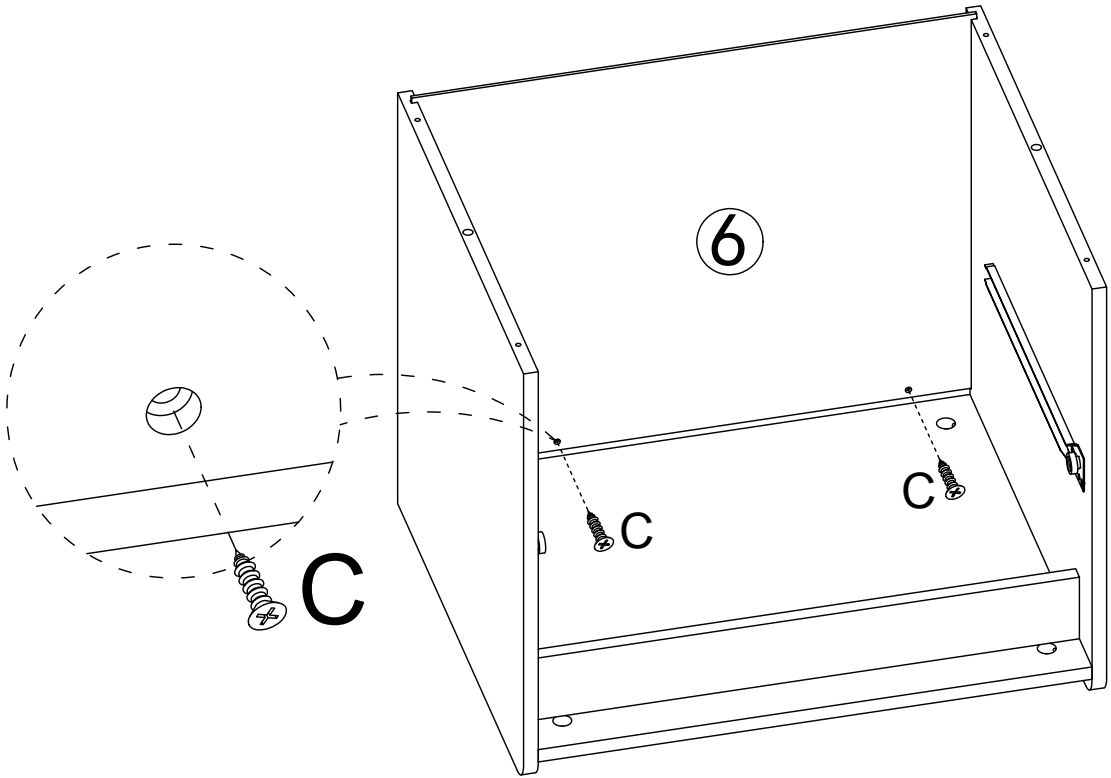


x2

C




4PCS


7

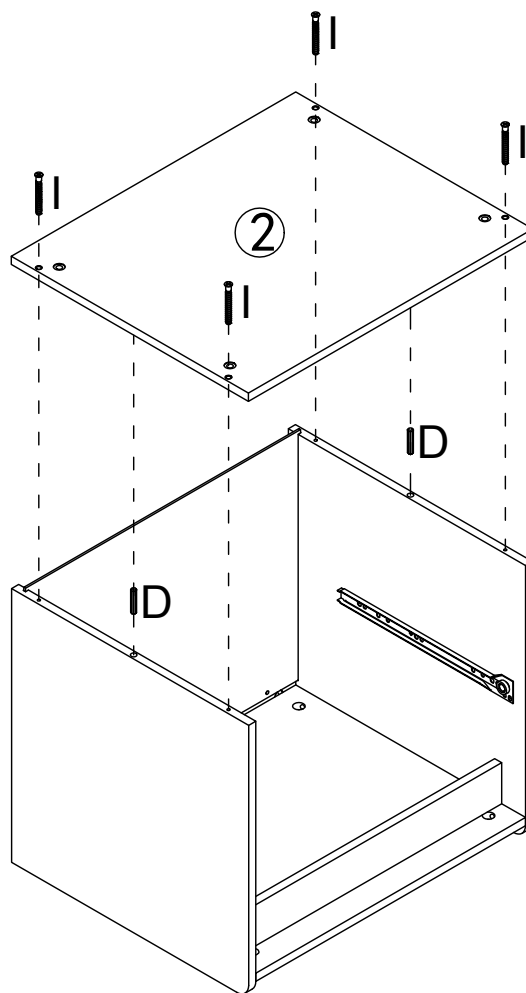


x2

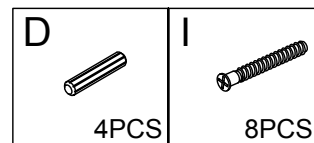


8

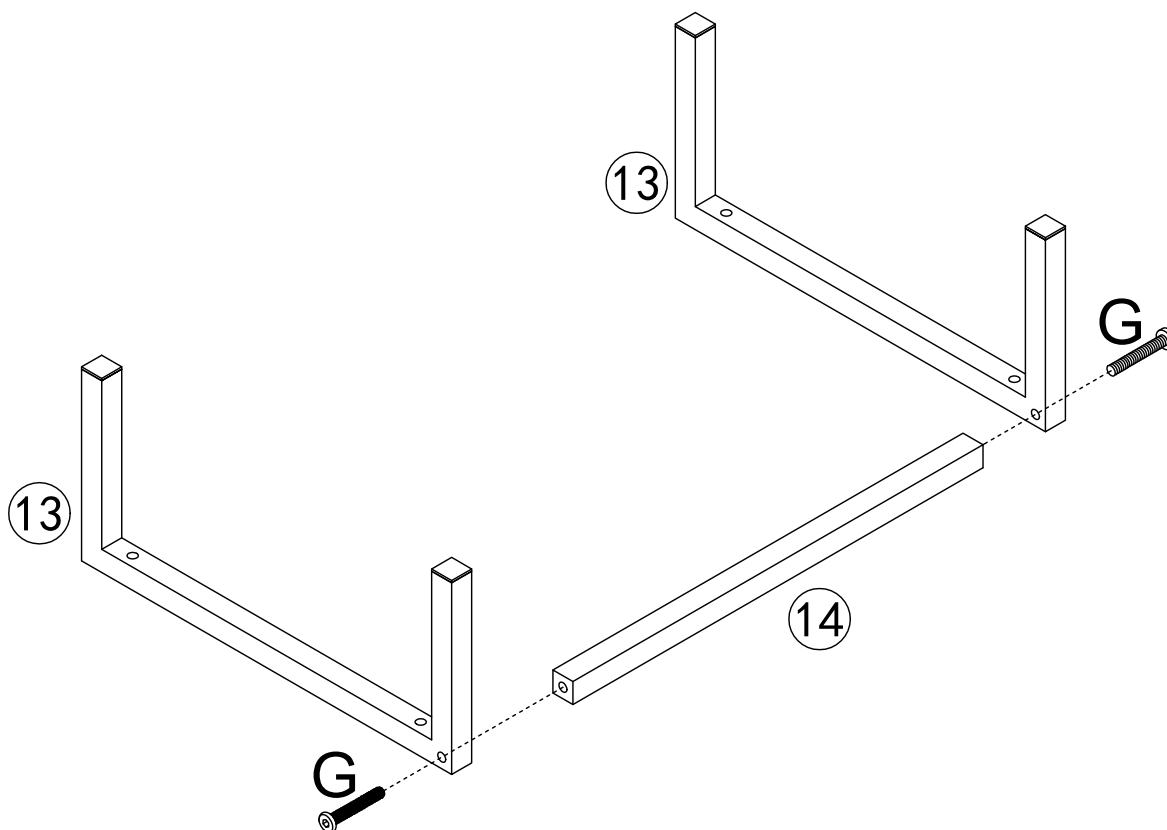


x2

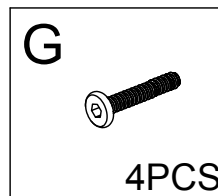


9

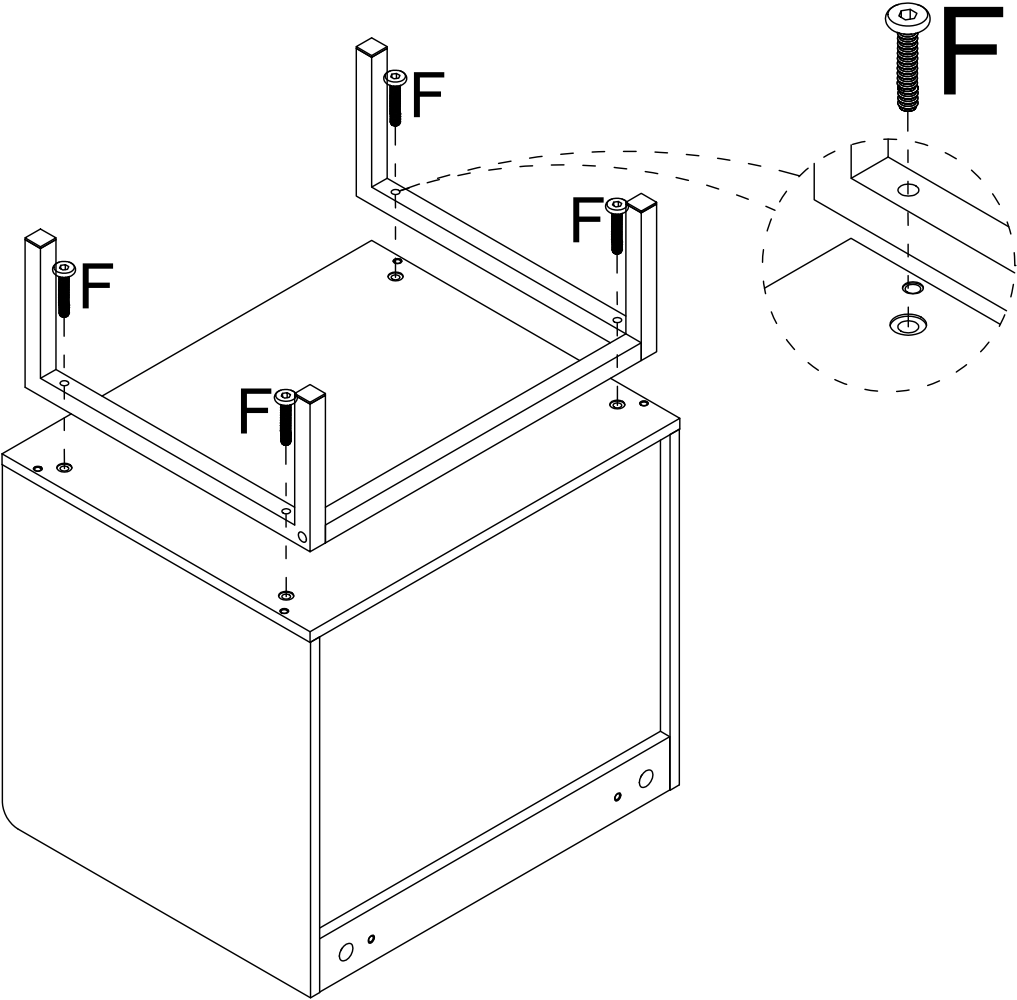


x2

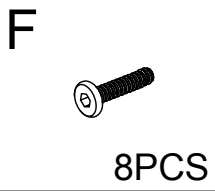


10

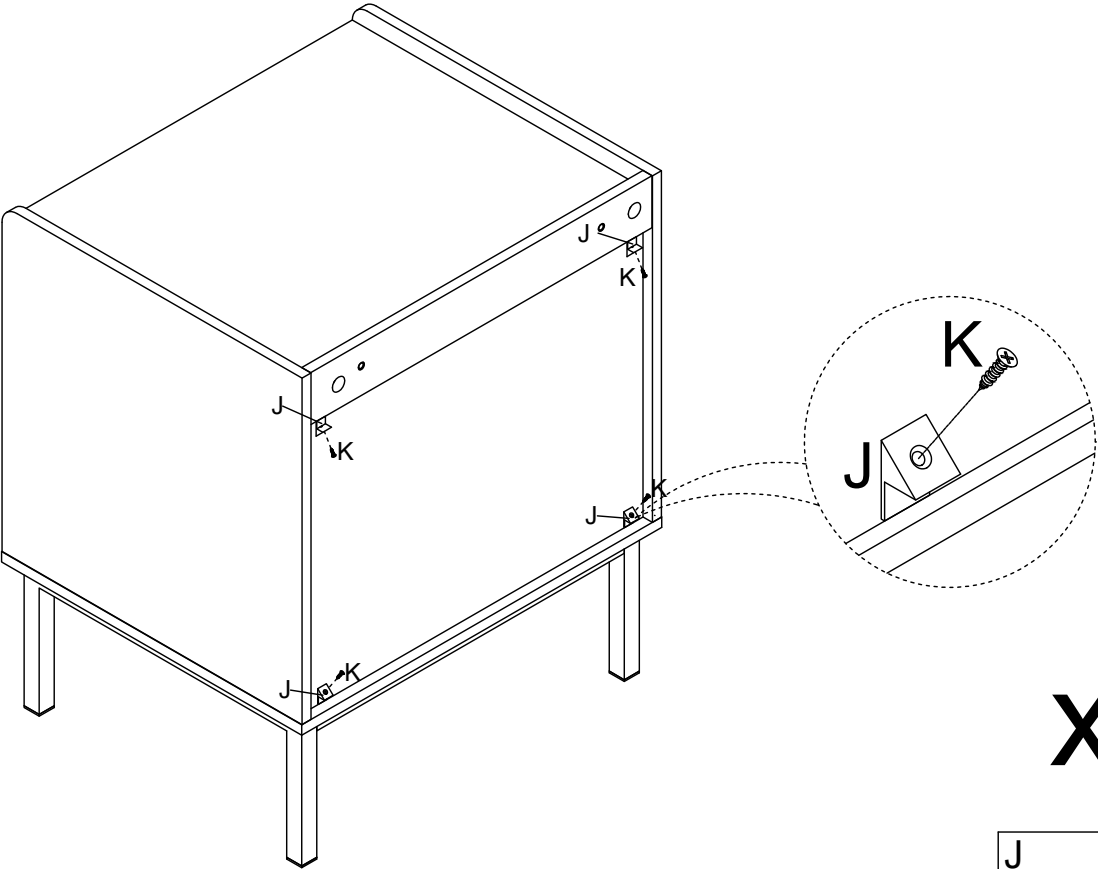


x2

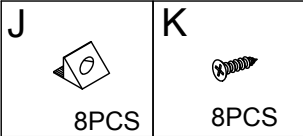


11

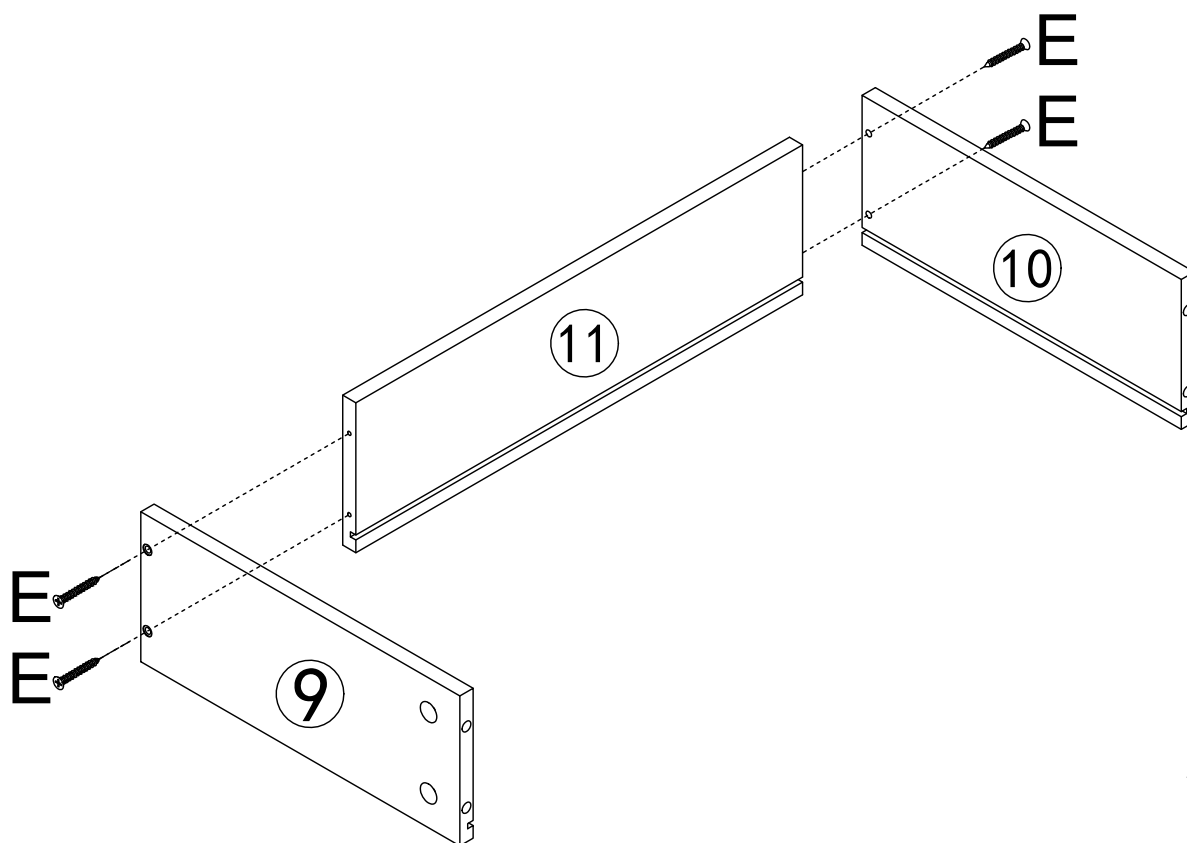

x2

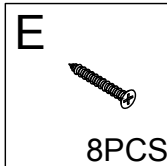


12




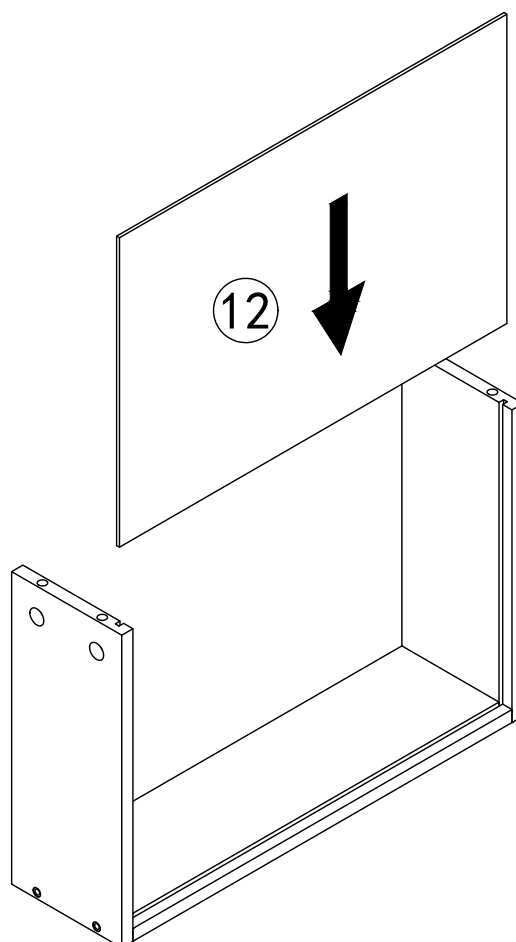


x2


13

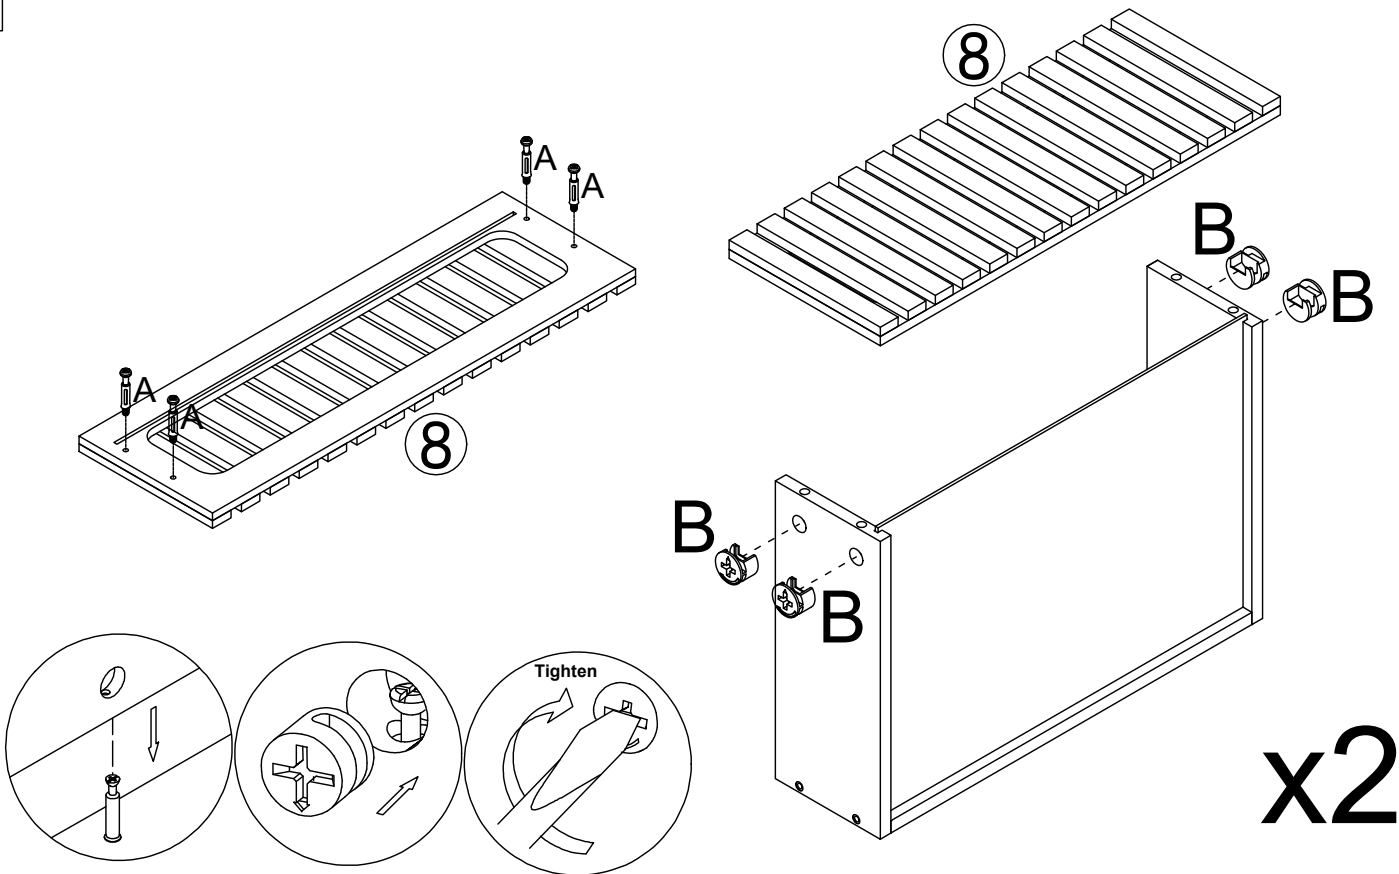

14

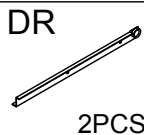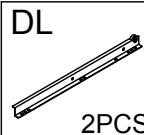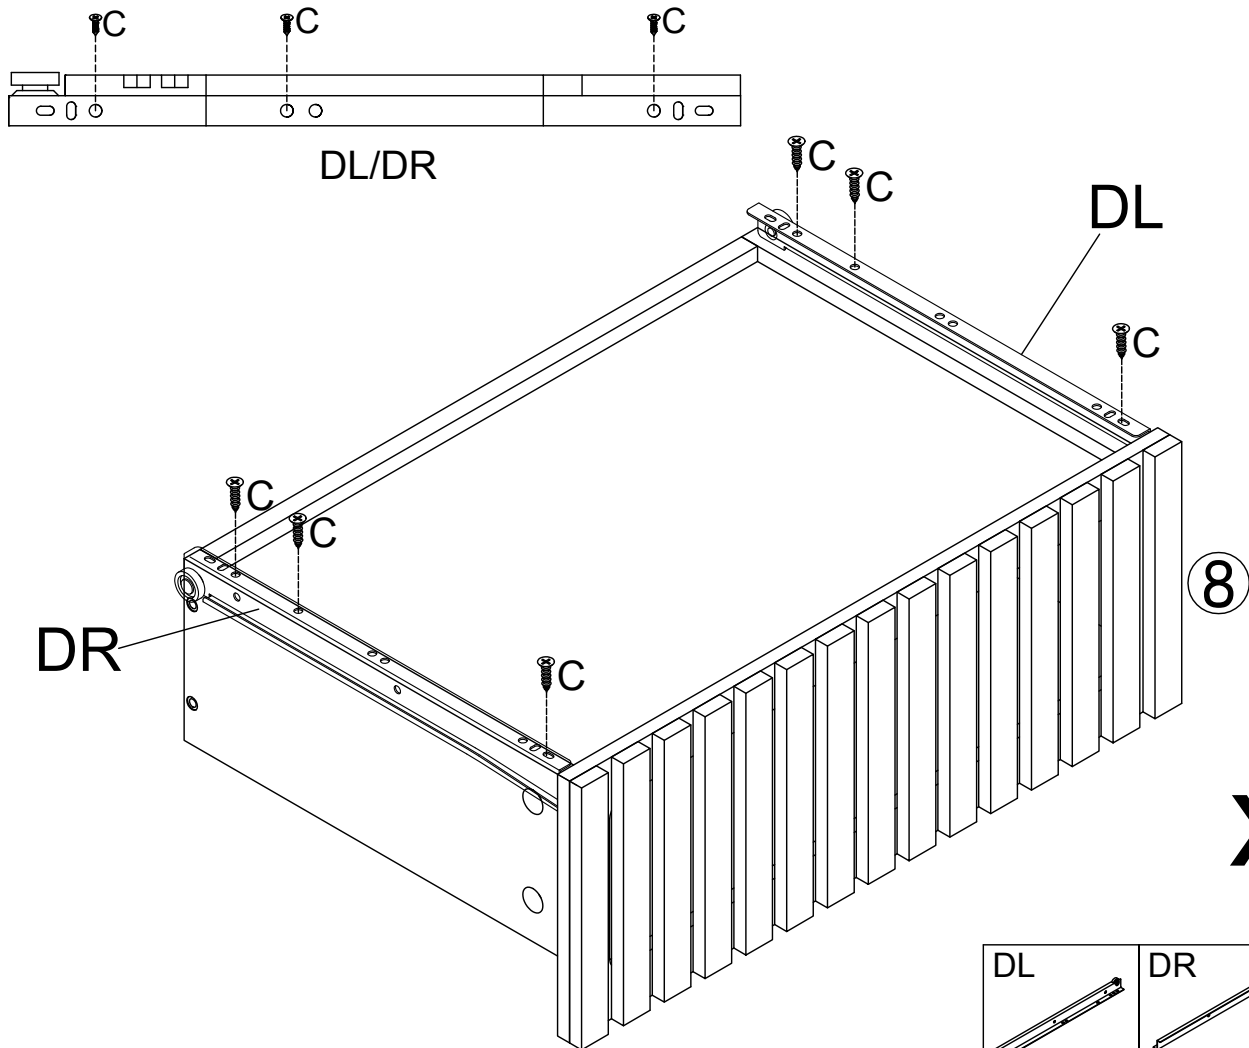

15

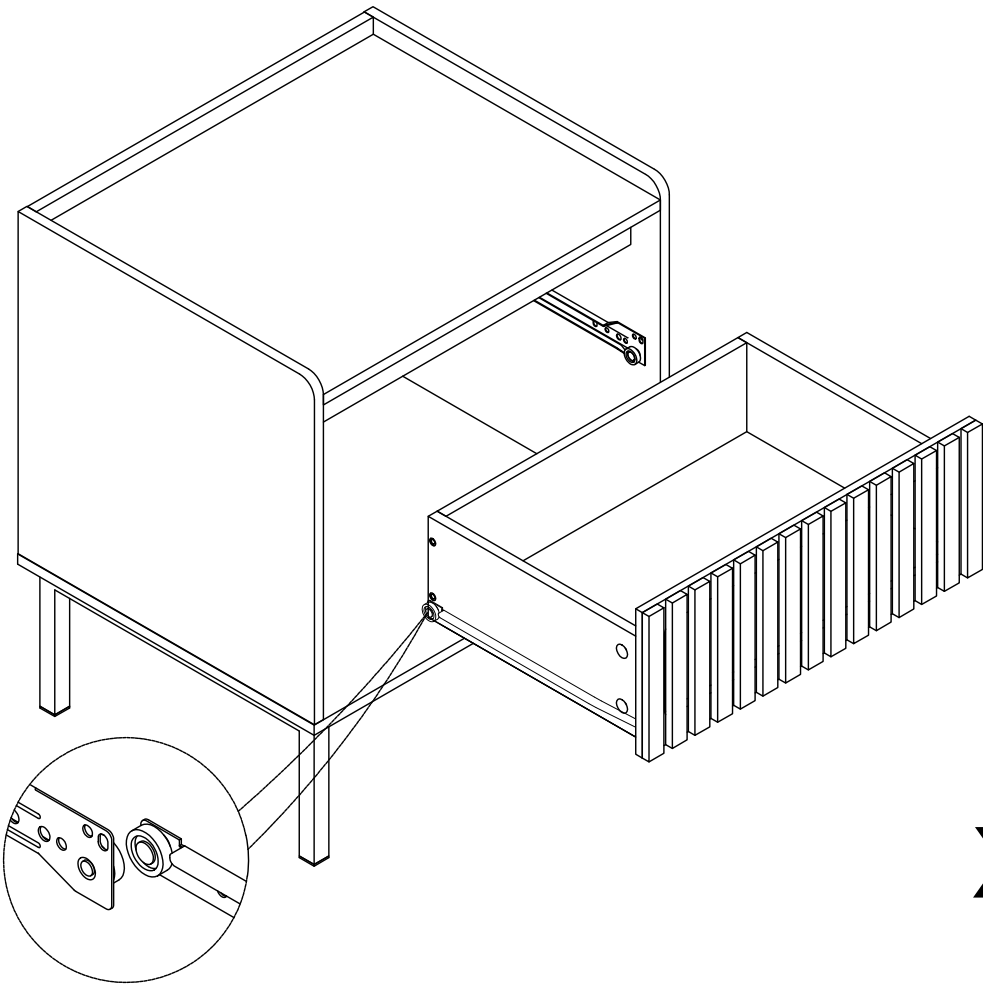

x2

16

