
FPSCLFC

Assembly Instructions

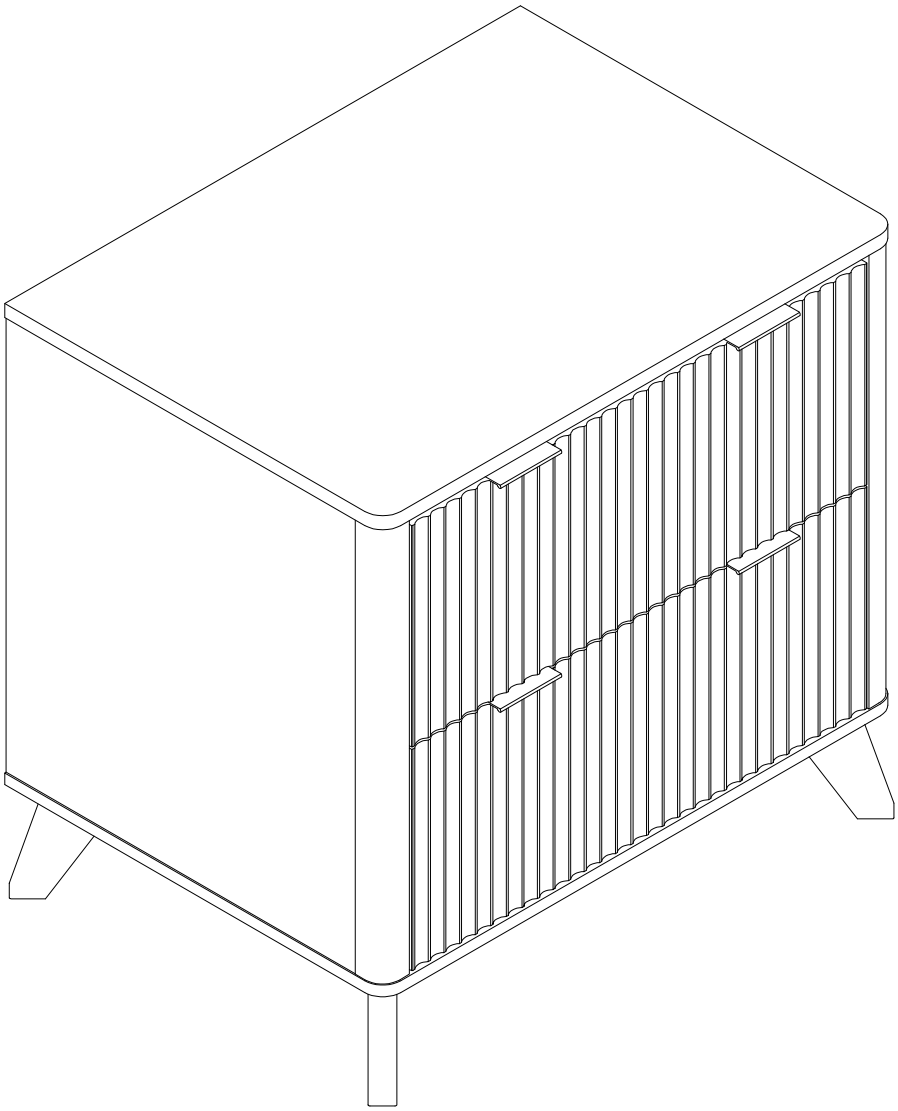

Date 2025-02-28 Rev.01-A


General Assembly Guidelines

I. Ensure that all parts and hardware are available before beginning assembly.


II. Follow each step carefully to ensure the proper assembly of this product.

III. Two people are recommended for ease in the assembly of this product.


IV. A Phillips head screwdriver is required for the assembly of this product .

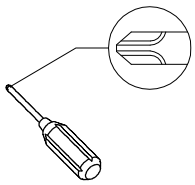

V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

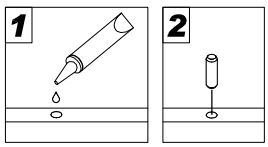

In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

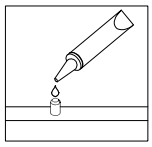


VI HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS

1.Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure Cam Bolt goes into the pre-drilled hole on the end of panel for Cam Lock.


2.Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of Cam Lock points towards Cam Bolt.

3.Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.


4.Use the sticker to conceal the Cam.

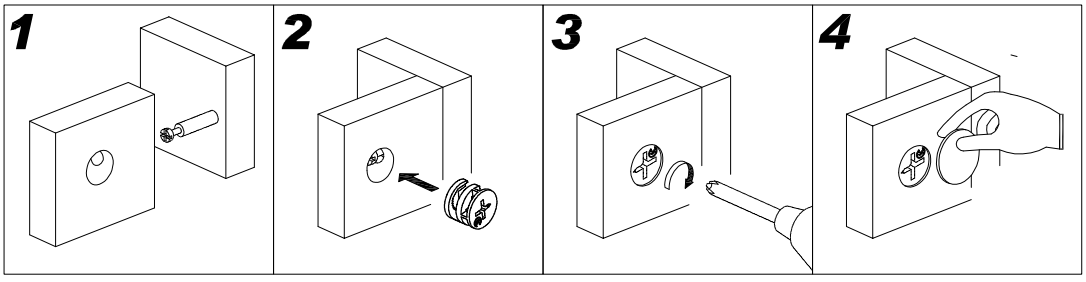







VII. Power tools should not be used to assemble this product .

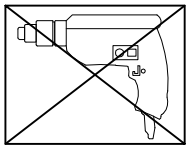


Parts List

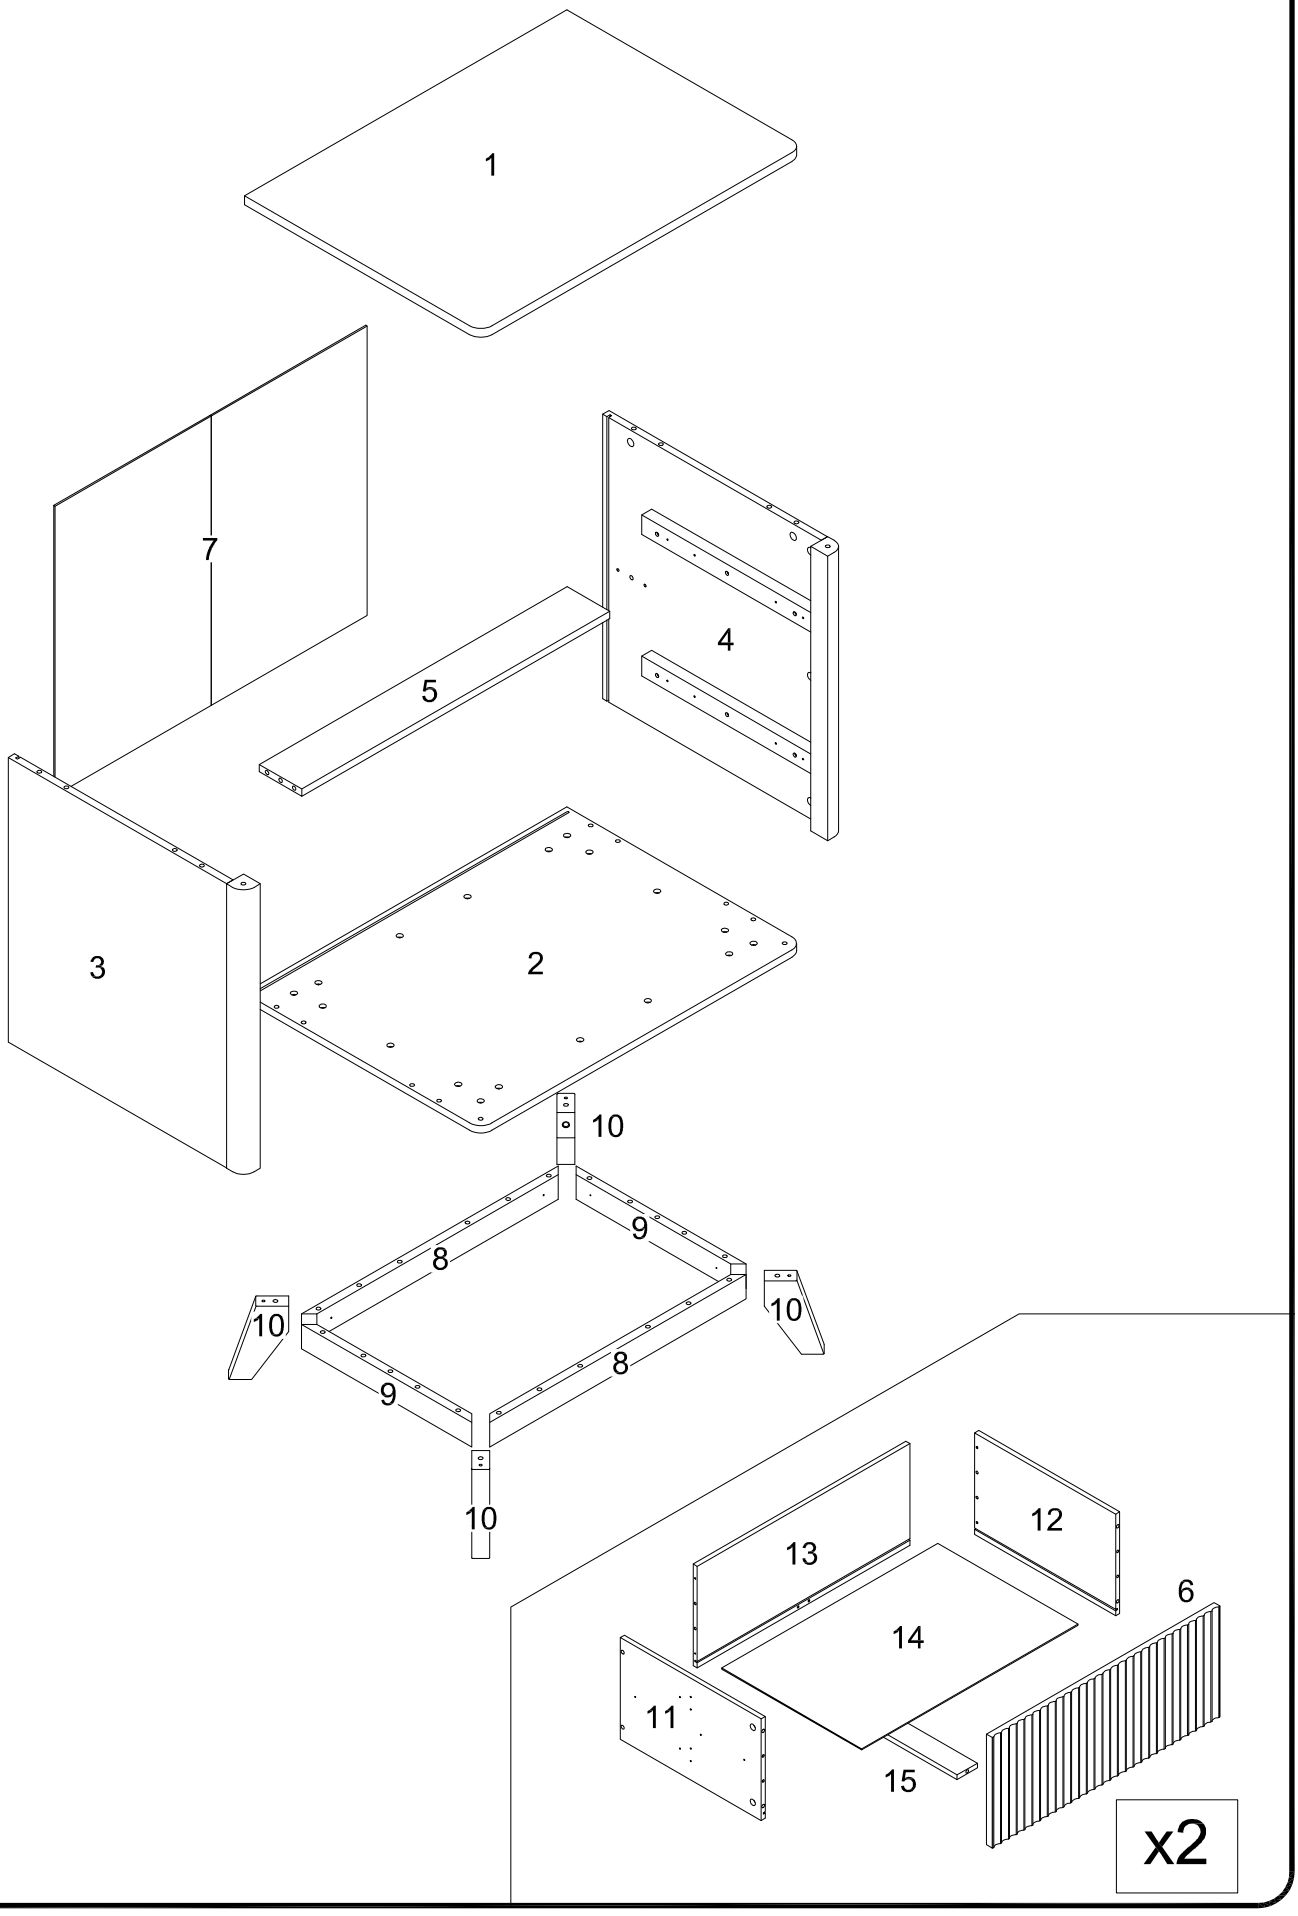



Hardware List

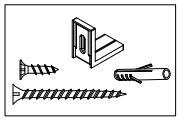
A		Ø8x30mm	Dowel(Big)	26	pcs
B		Ø6x35mm	Cam bolt	18	pcs
C		Ø15x11mm	Cam lock(Big)	8	pcs
D		Ø30mm	Cam cover	18	pcs
E		Ø5x15mm	Screw	8	pcs
F		1/4"x50mm	Bolt	14	pcs
G		M4	Allen Wrench	1	pc
H			Handle	4	pcs
I			Glue tube	1	pc
J			Plastic wedge	12	pcs
K		Ø3x17mm	Flat-head screw	12	pcs
L		Ø6x50mm	Bolt	8	pcs
M		1/4"x28mm	Bolt	4	pcs
N		Ø3x14mm	Flat-head screw	8	pcs
O			Tipping Restraint Hardware	1	set
P			Metal Bracket	4	pcs
Q		Ø15x9mm	Small Cam lock	10	pcs
R		Ø6x30mm	Small Dowel	16	pcs

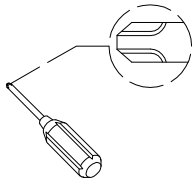

Philips head screwdriver required for assembly
(not included)


Hardware List

S		16"L*45mm	Drawer Slider	2	sets
T		Ø3.5x12mm	Flat-head screw	28	pcs
U			Butterfly Clasp	1	pc
V			Anti-tip Mechanism	2	pcs
W		Ø4*12mm	Screw	14	pcs
X		L623mm	Fixed file rail	2	pcs
Y		L623mm	File rail	2	pcs
Z		L398mm	File rail	4	pcs
AA			File holder	2	pcs
BB		Ø4*38mm	Screw	12	pcs
CC		Ø4*14mm	Screw	3	pcs

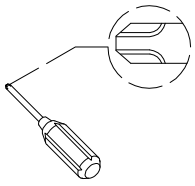


Philips head screwdriver required for assembly
(not included)


Step 1

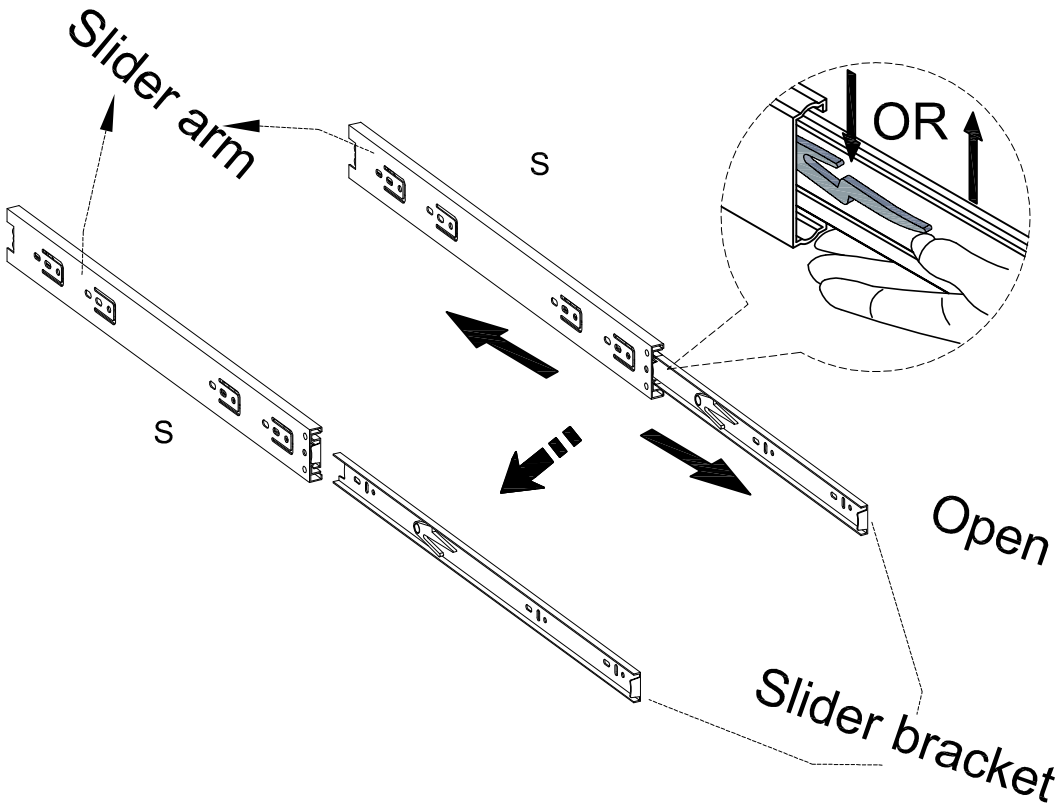

Slider arm
S
OR
S
Open
Slider bracket

Step 2

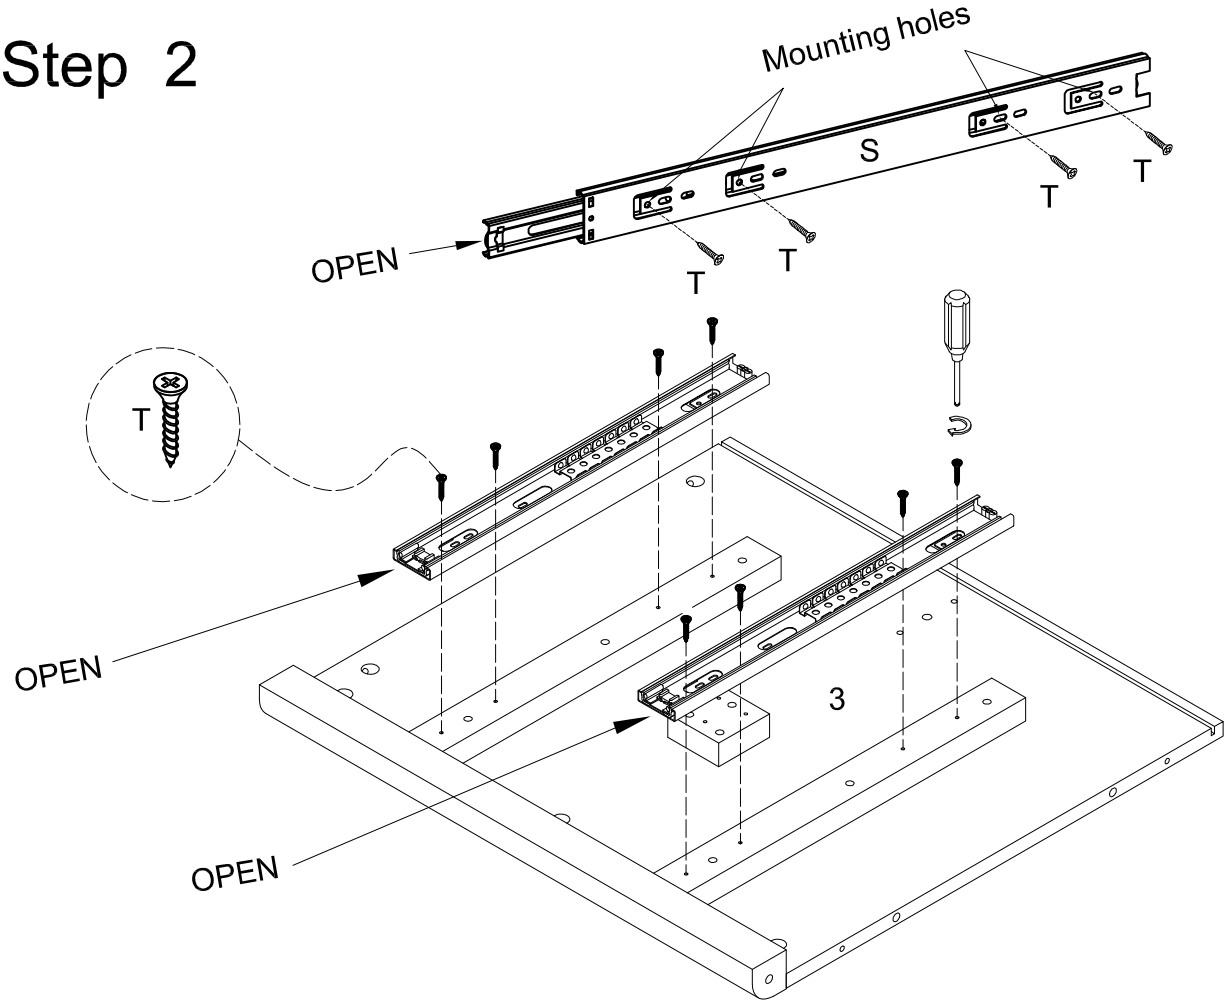

Mounting holes
S
T
T
T
T
OPEN
T
OPEN
3
OPEN

Step 3

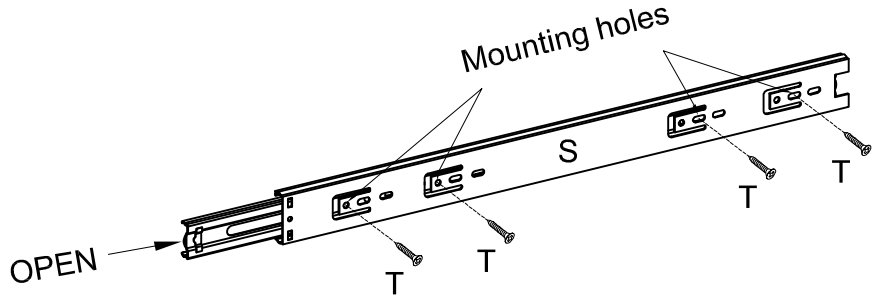


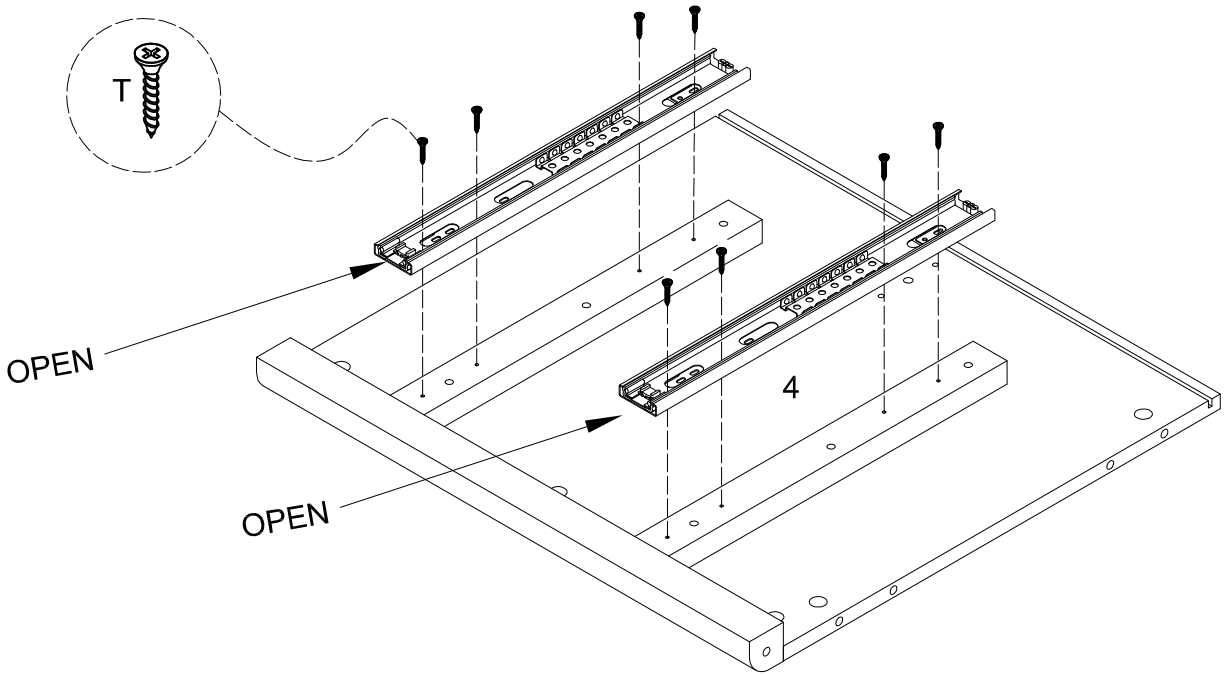



Step 4

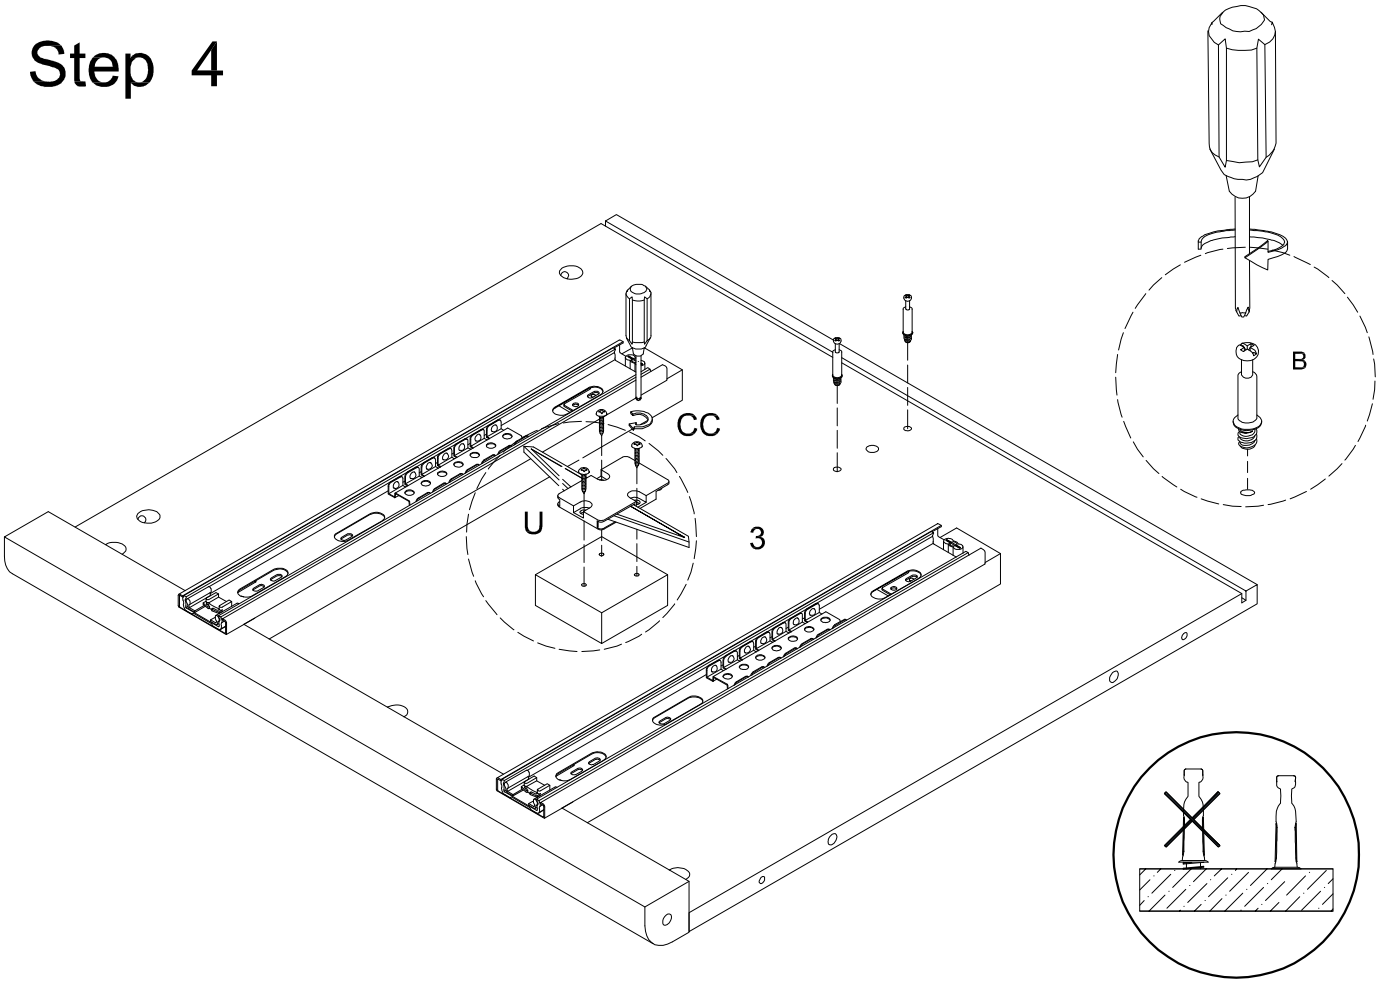


Step 5

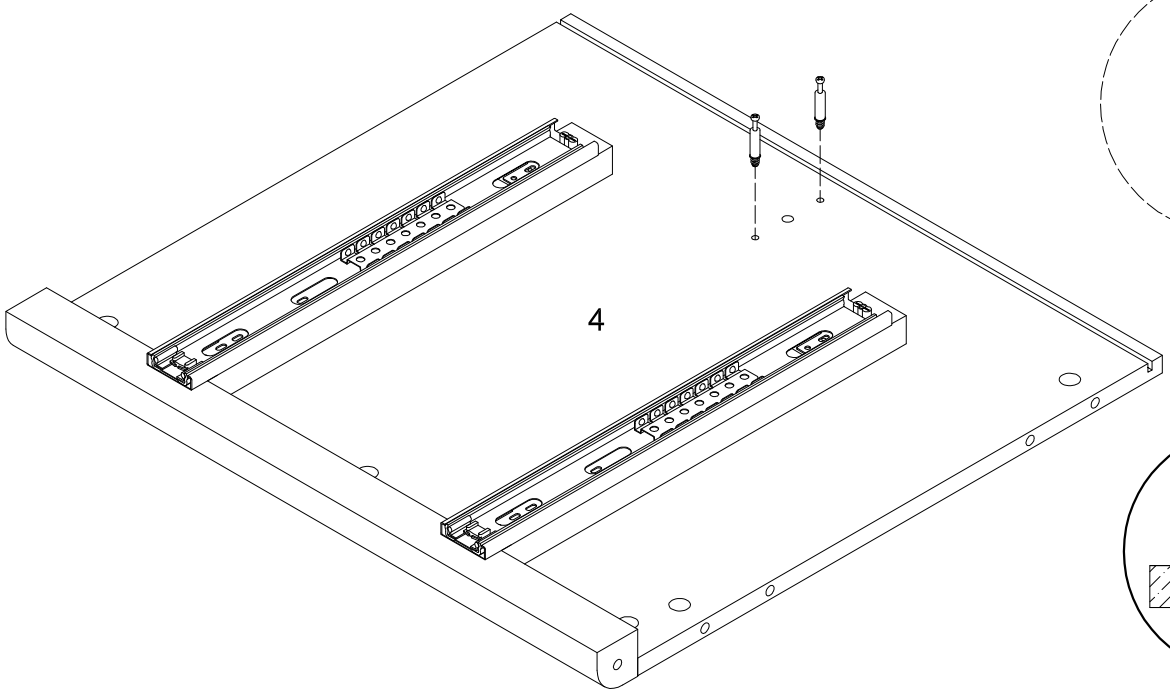


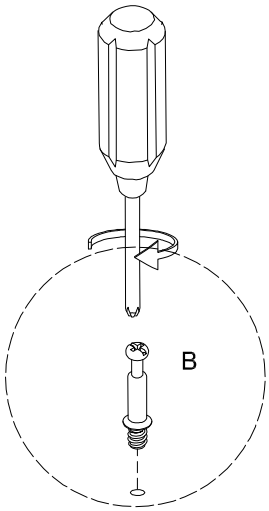


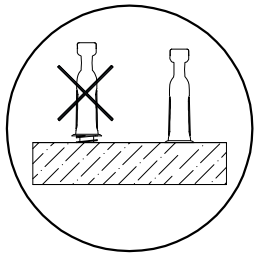


Step 6

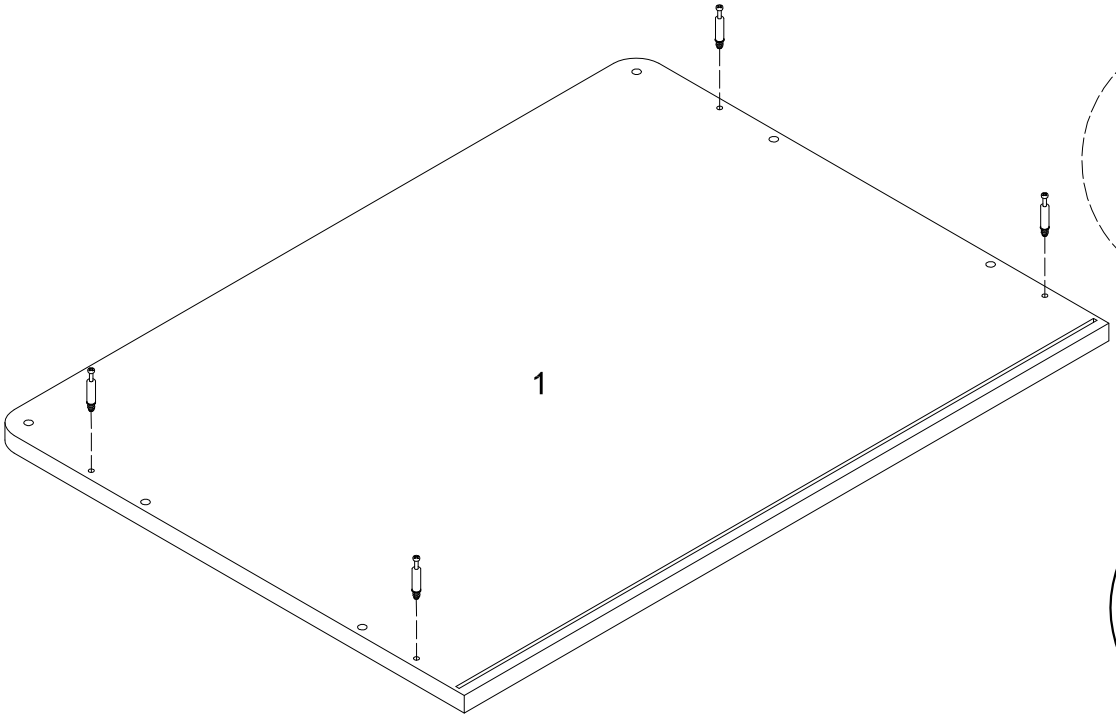

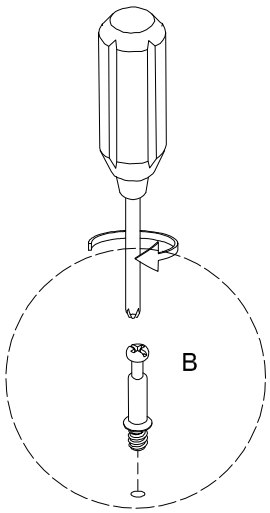

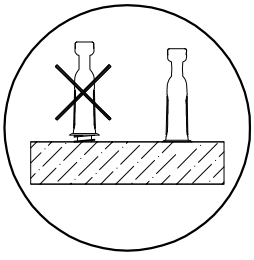


Step 7

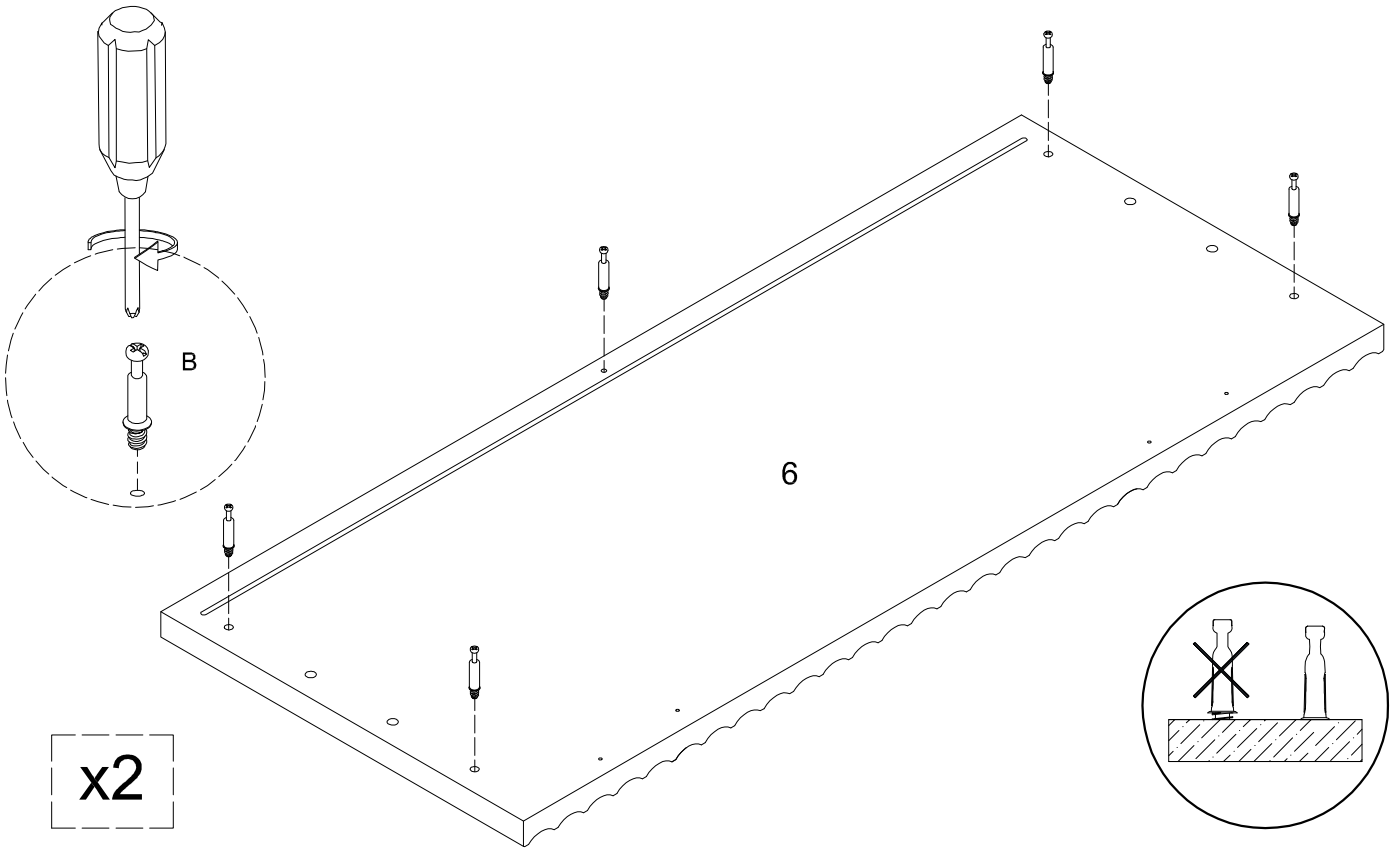


x2

Step 8

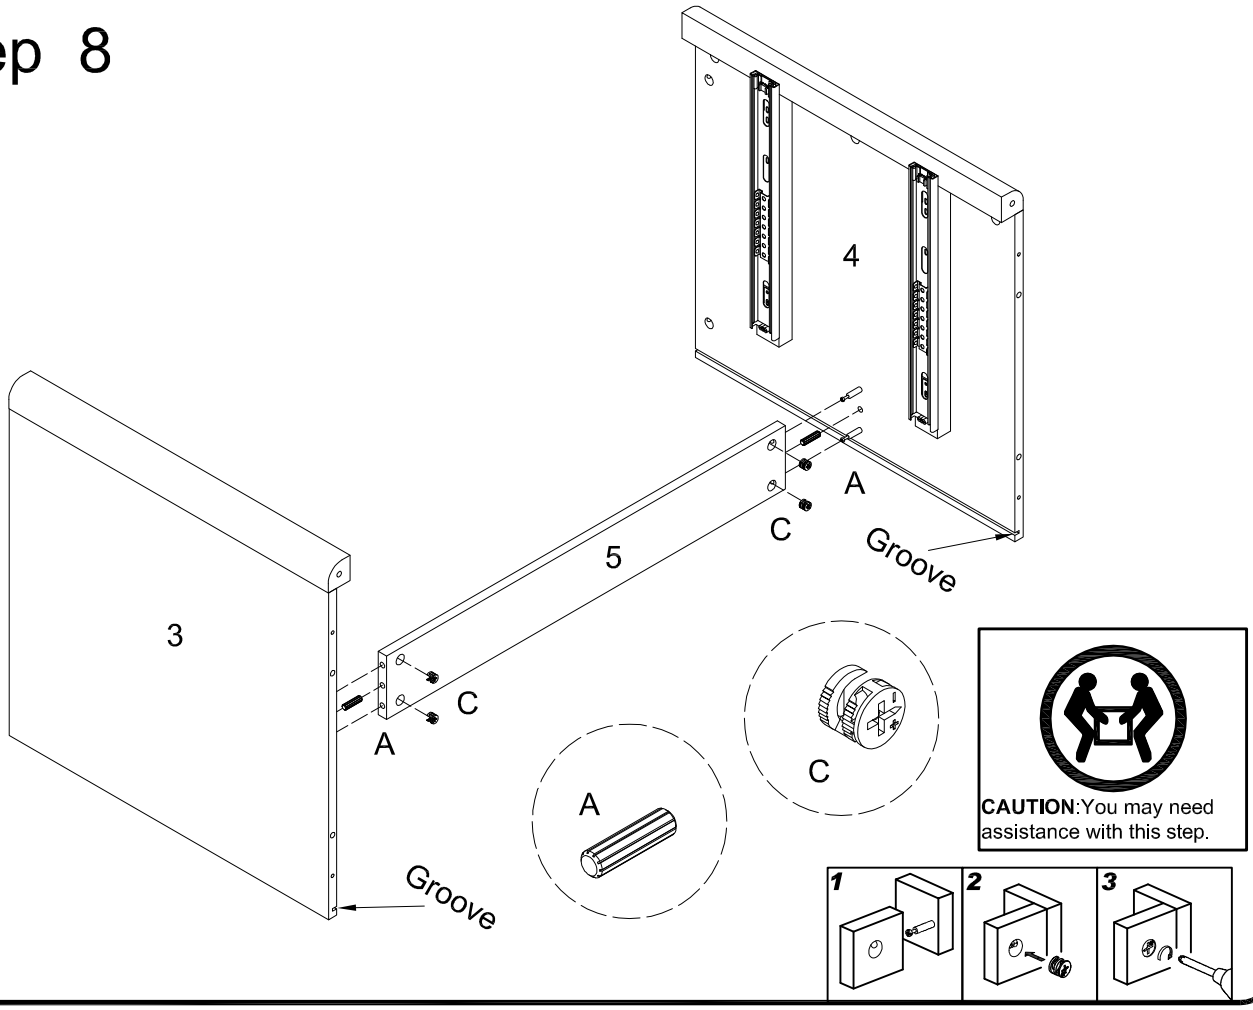


CAUTION:You may need assistance with this step.


Step 9

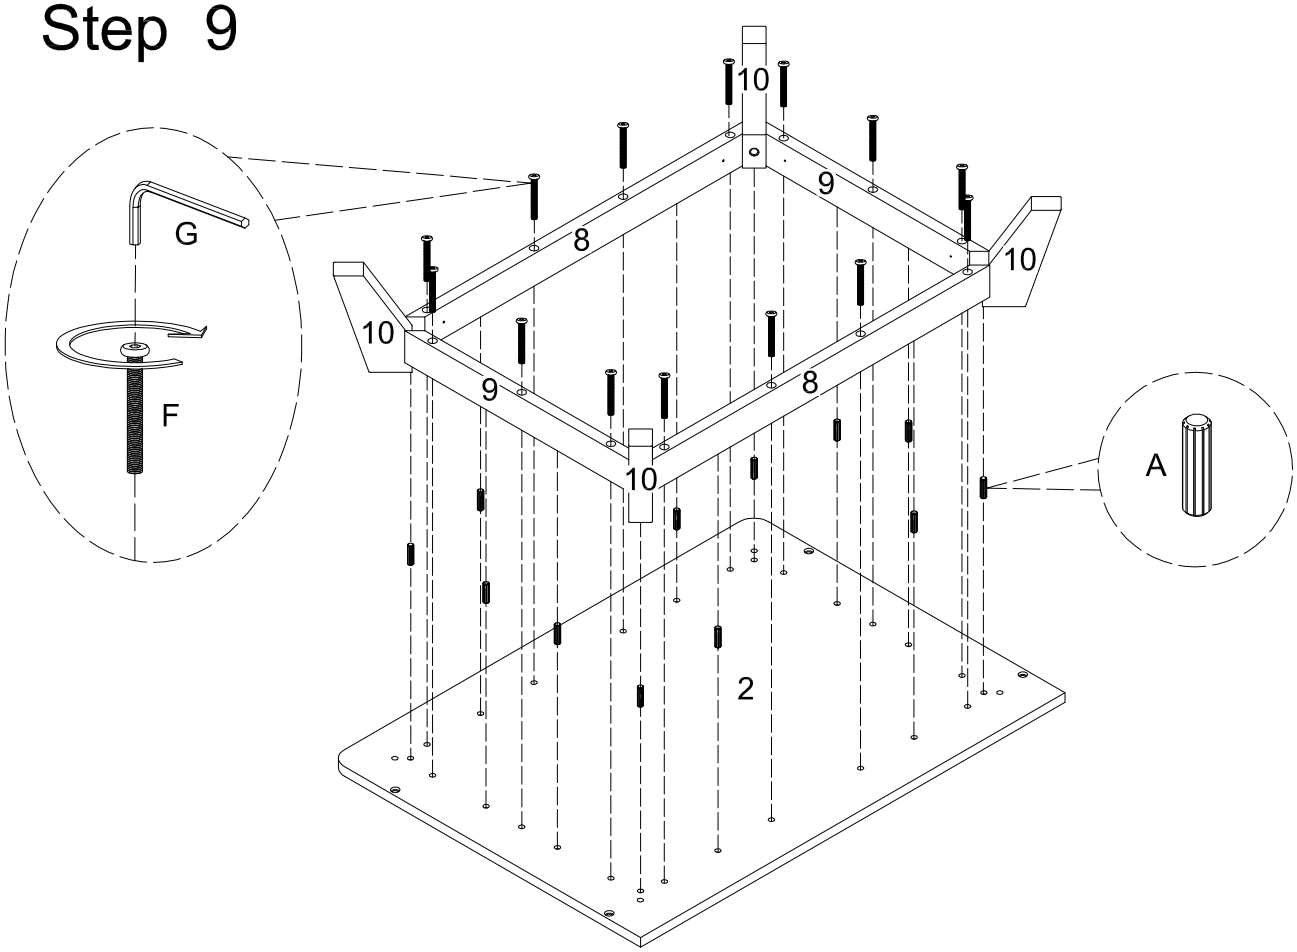

Step 10

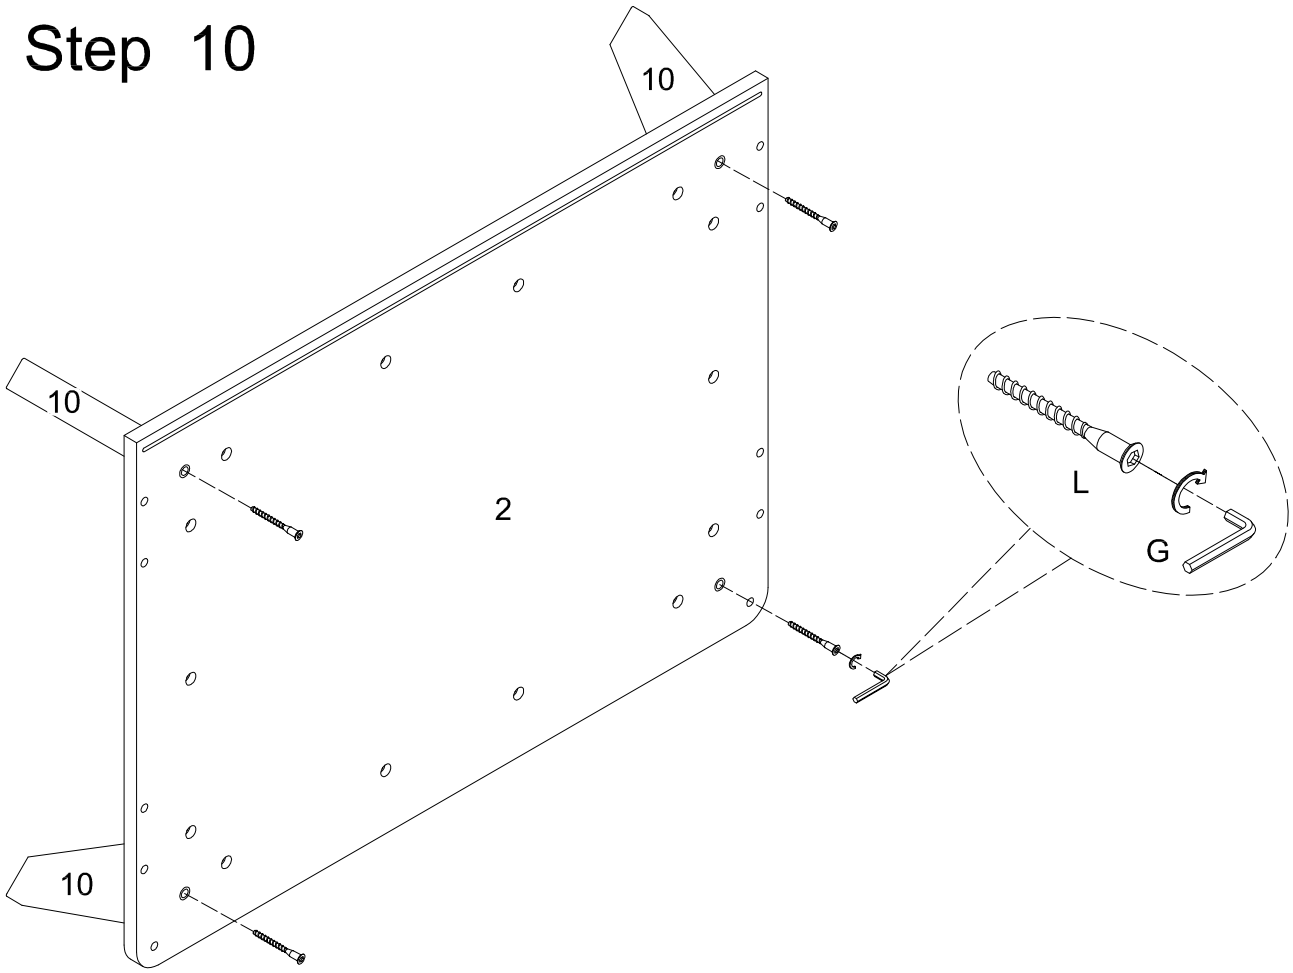


Step 11

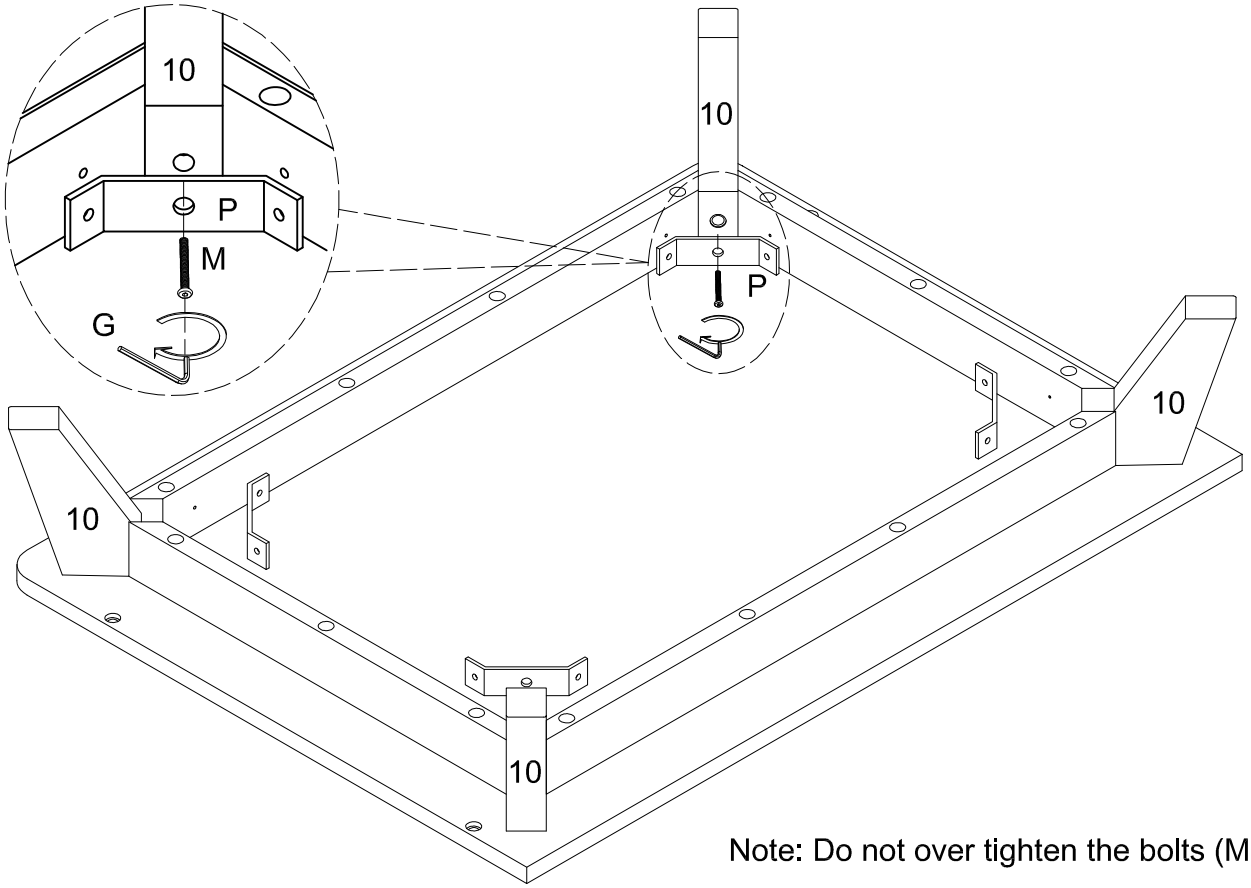


Note: Do not over tighten the bolts (M)

Step 12

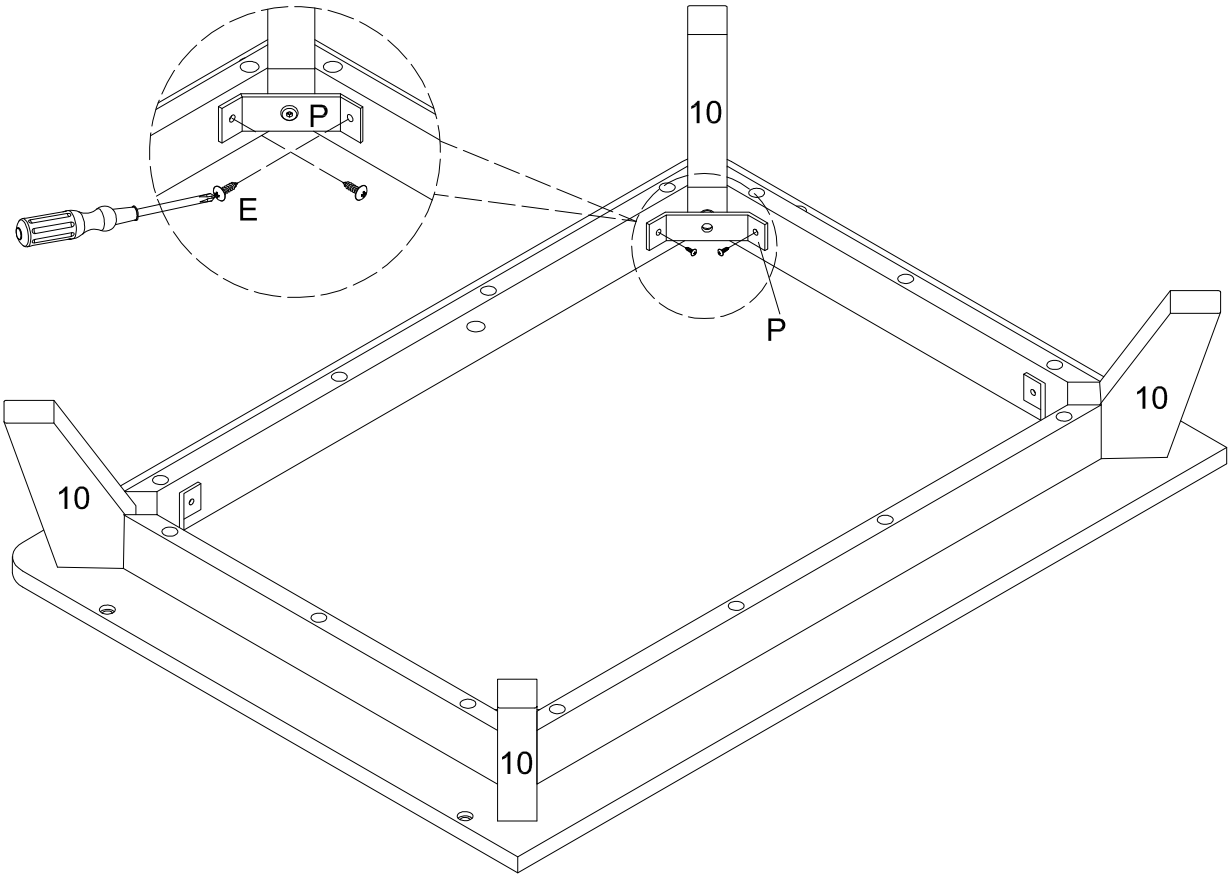


Step 13

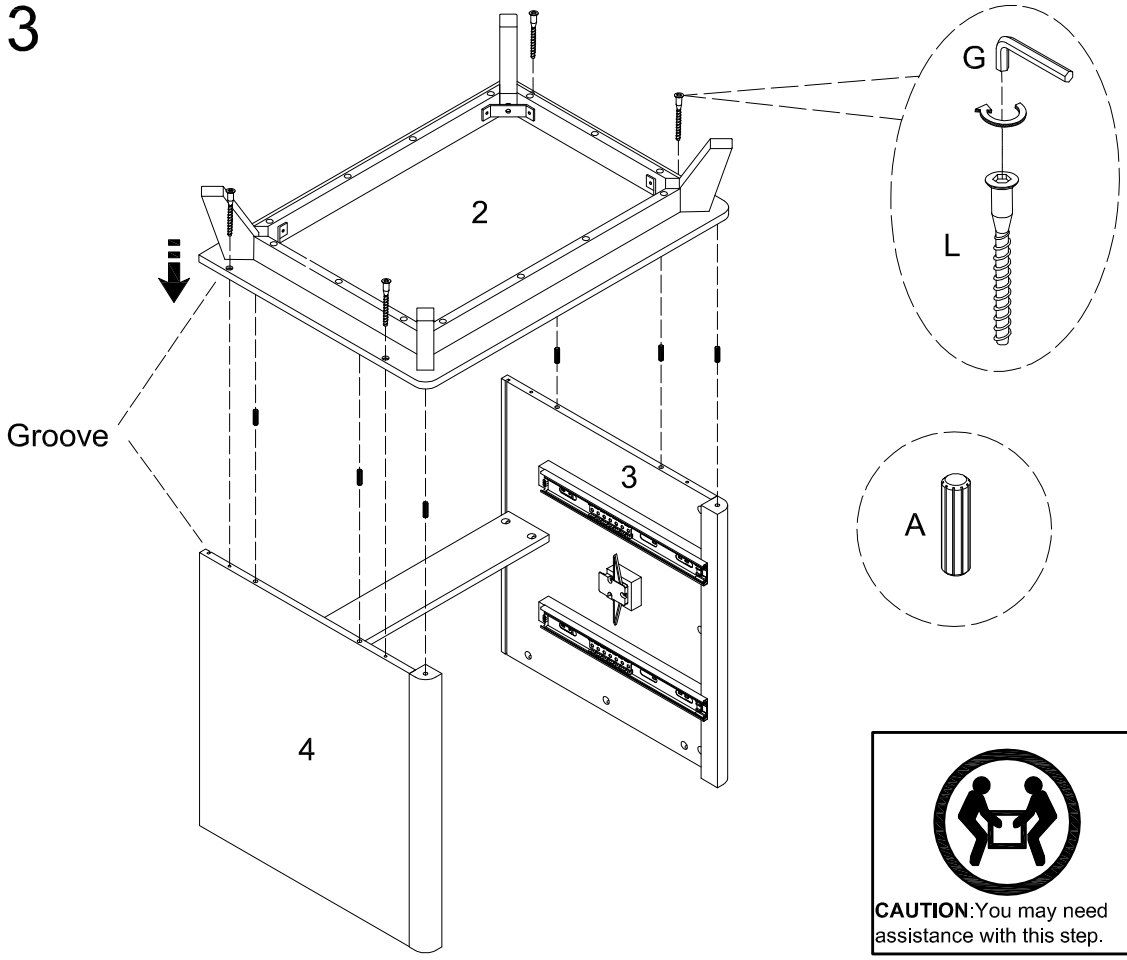



CAUTION:You may need assistance with this step.


Step 14

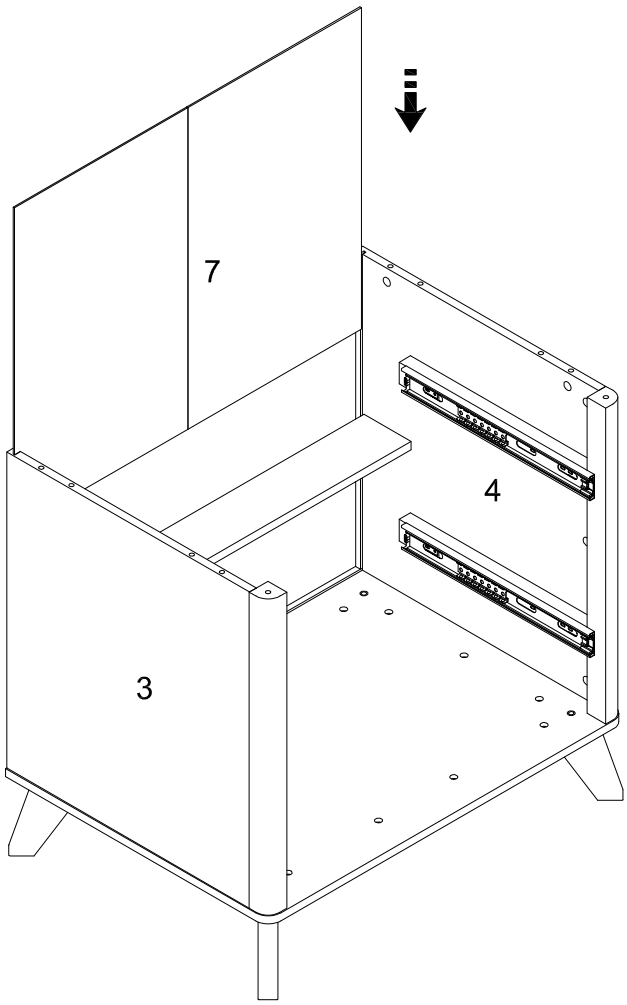


Step 15

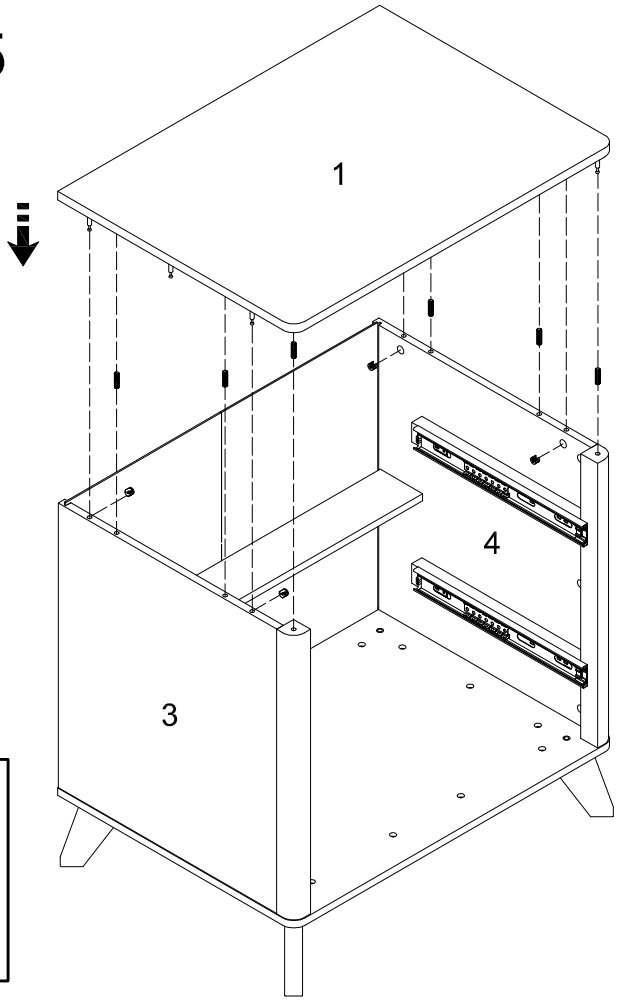

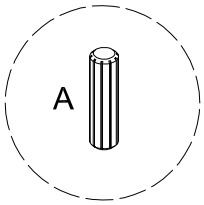


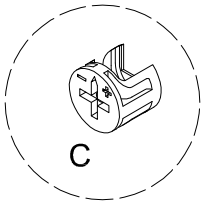



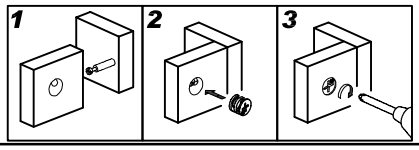


Step 16

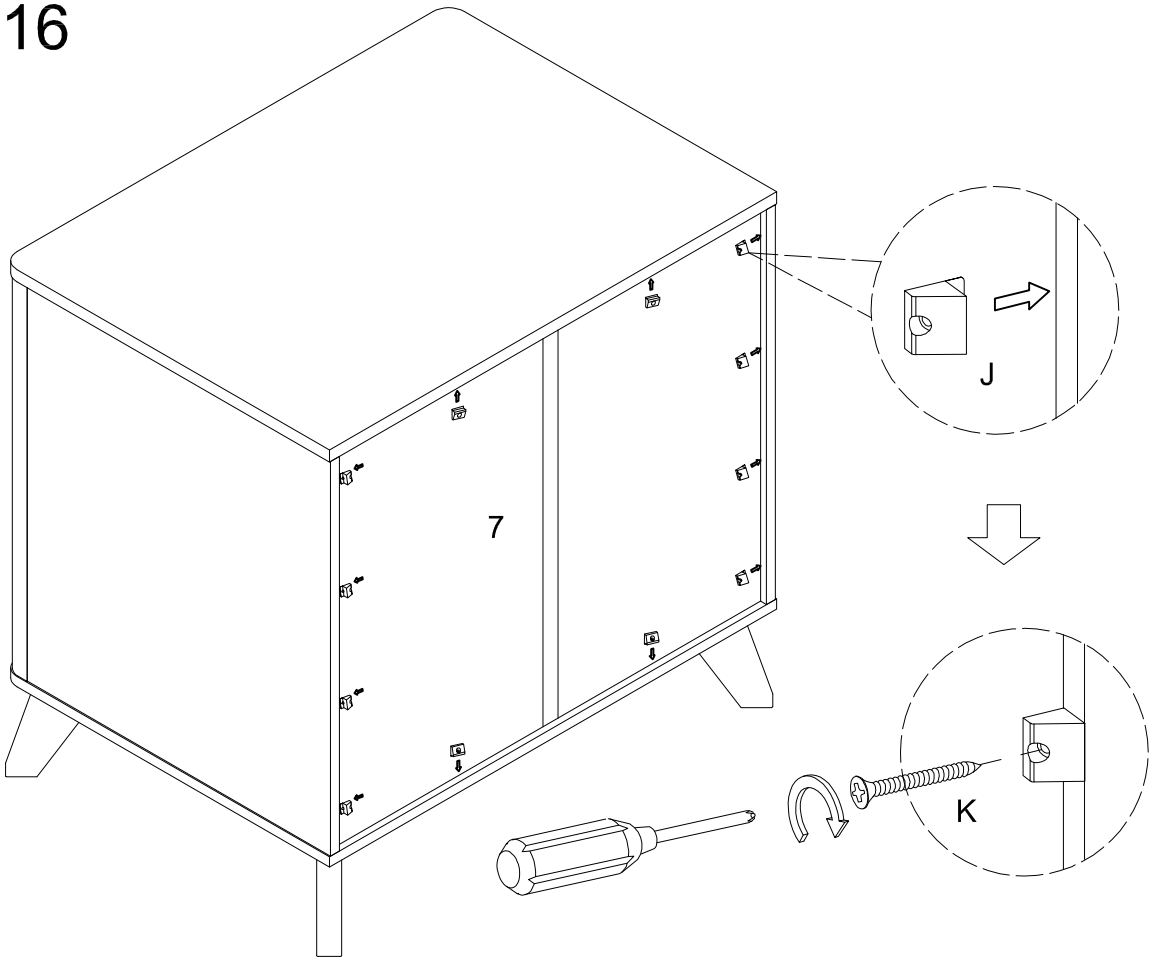


Step 17


Care the location of hardware V

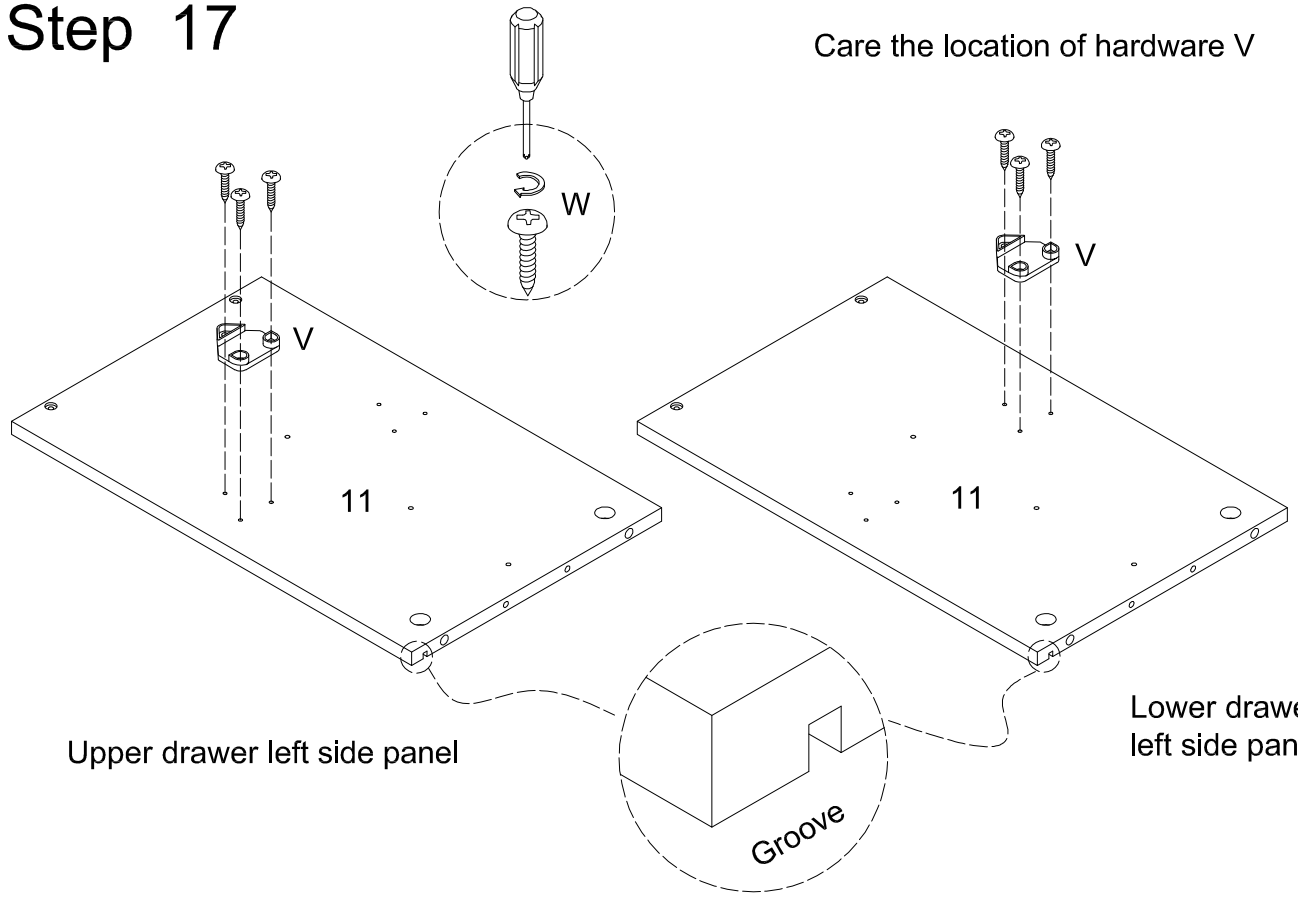

Step 18

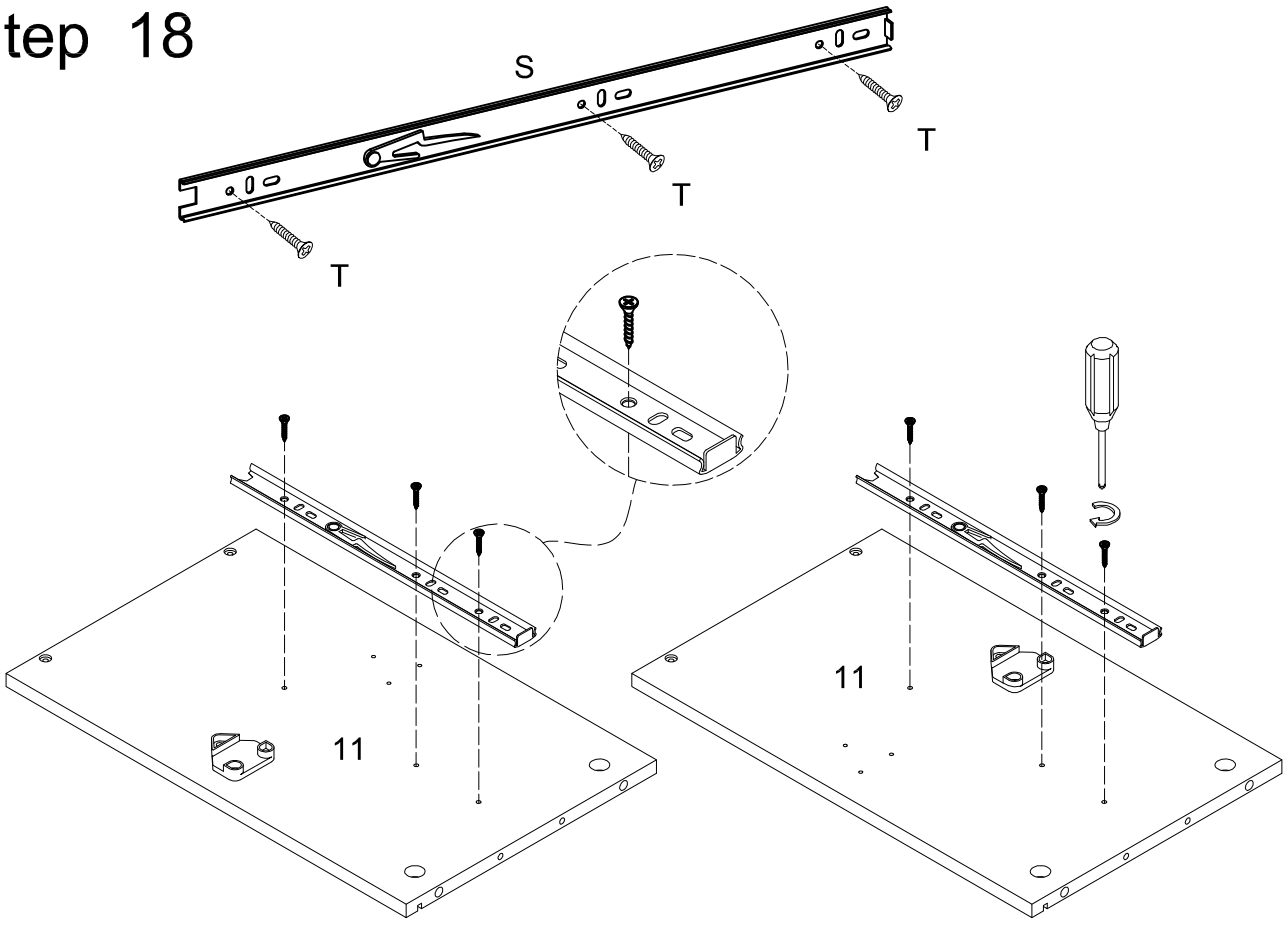


Step 19

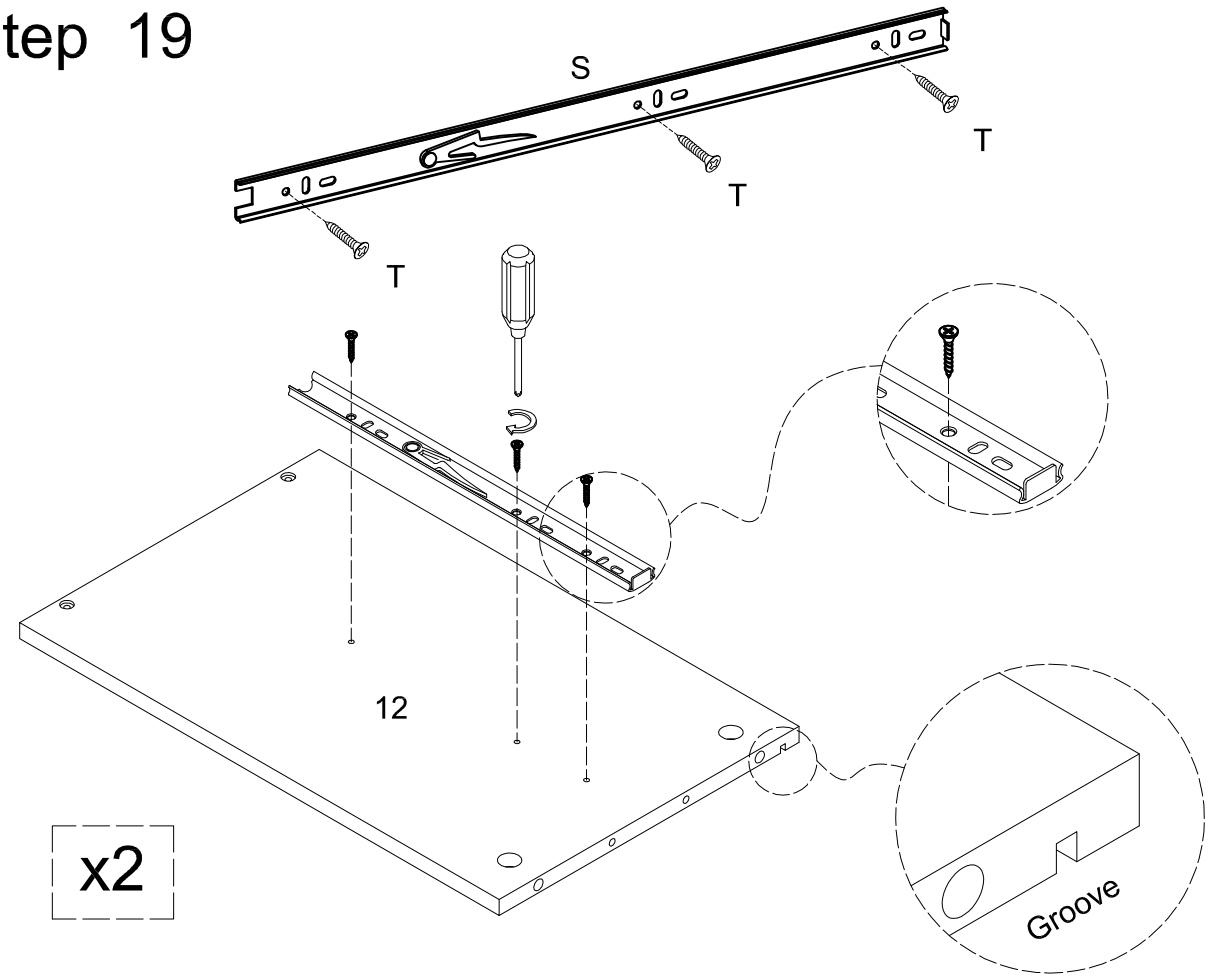


Step 20


Small wood dowel

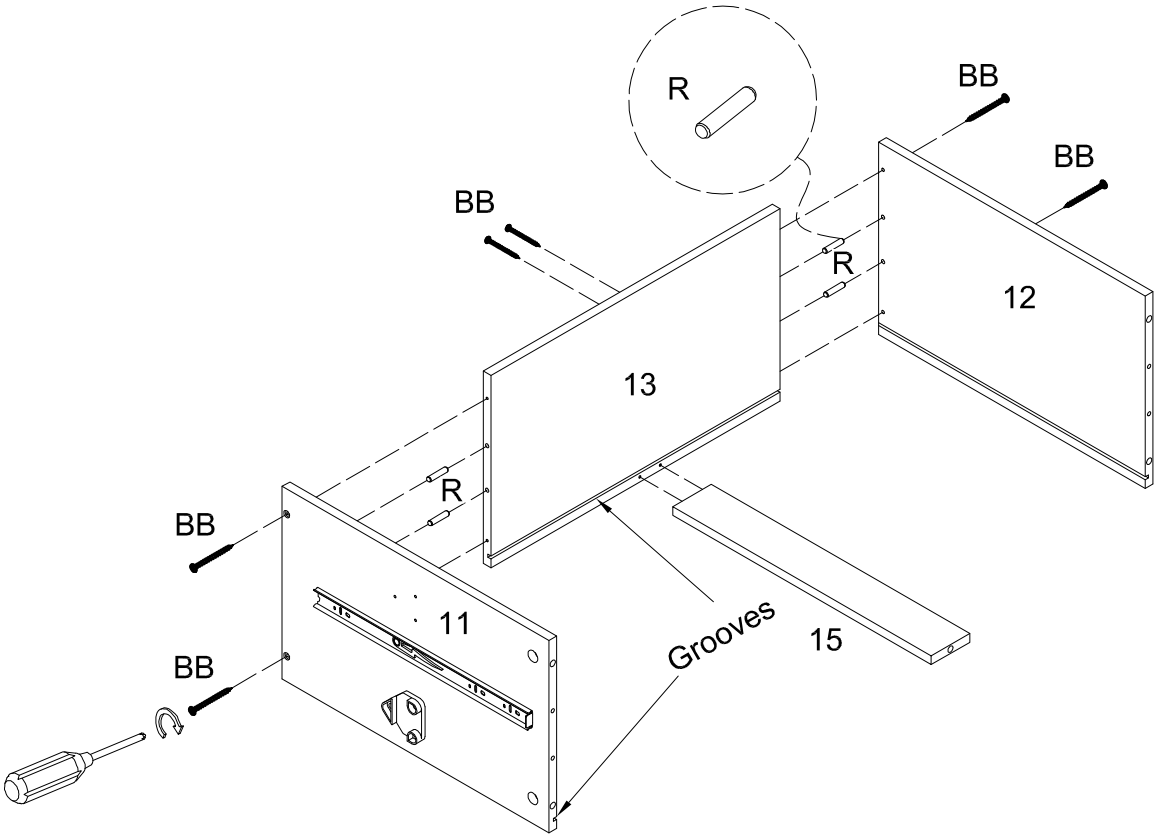


Step 21

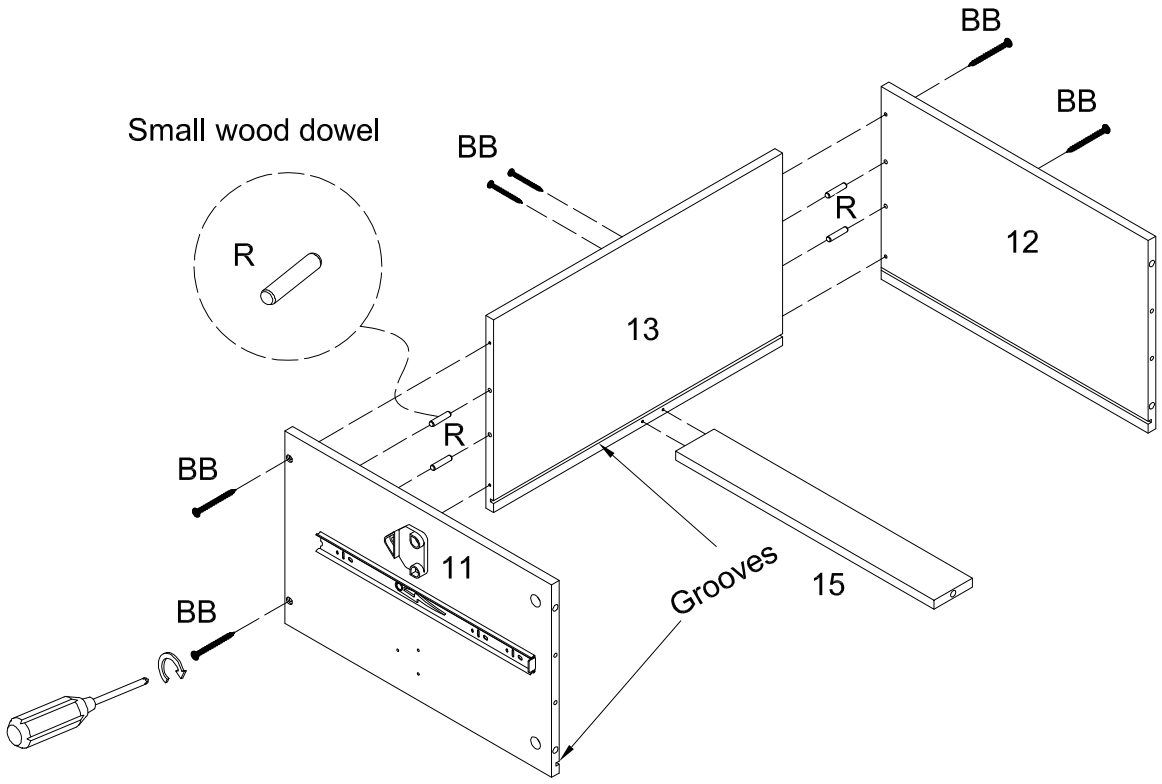


Step 22

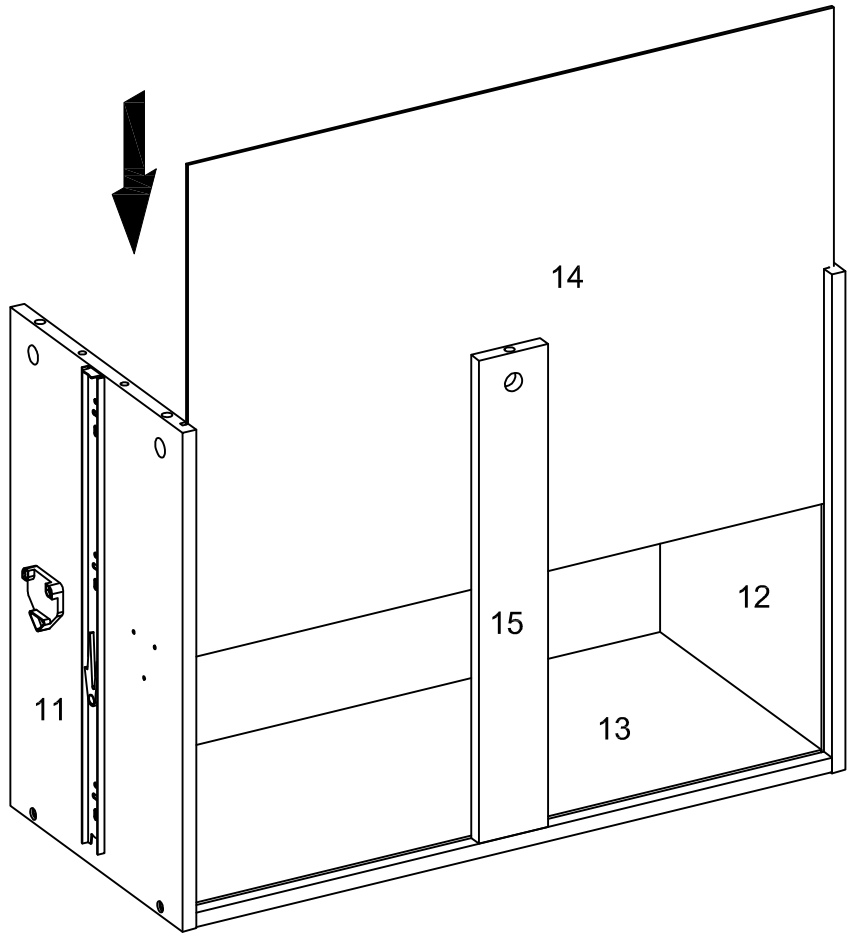


Step 23

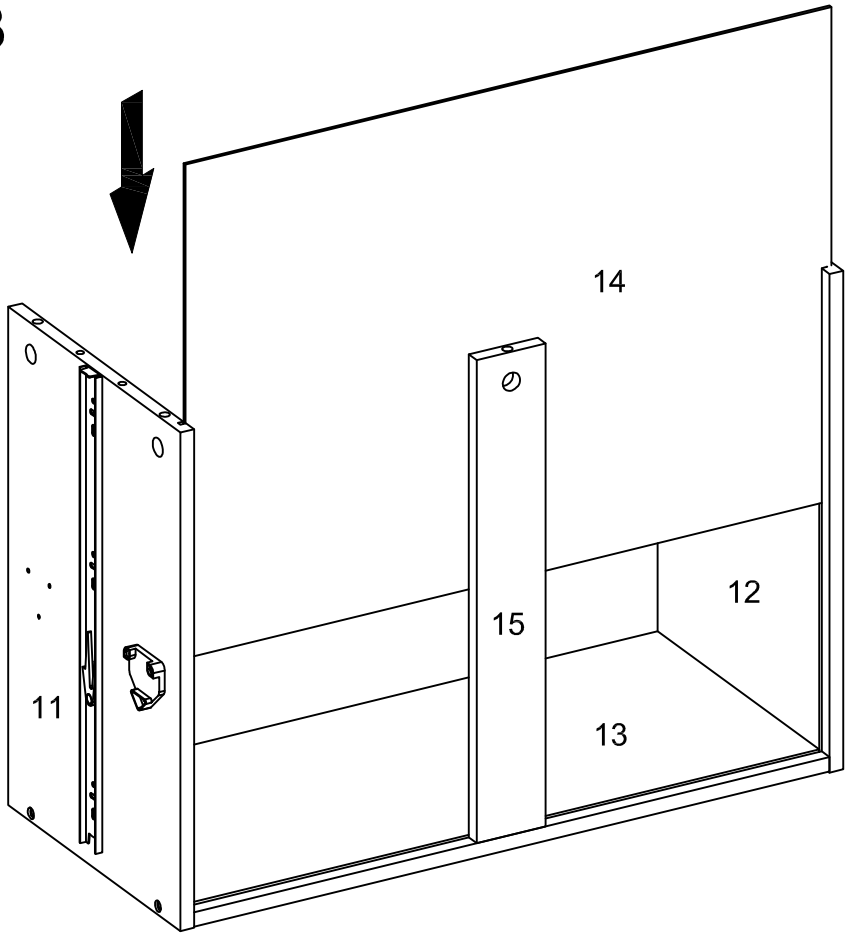



Step 24

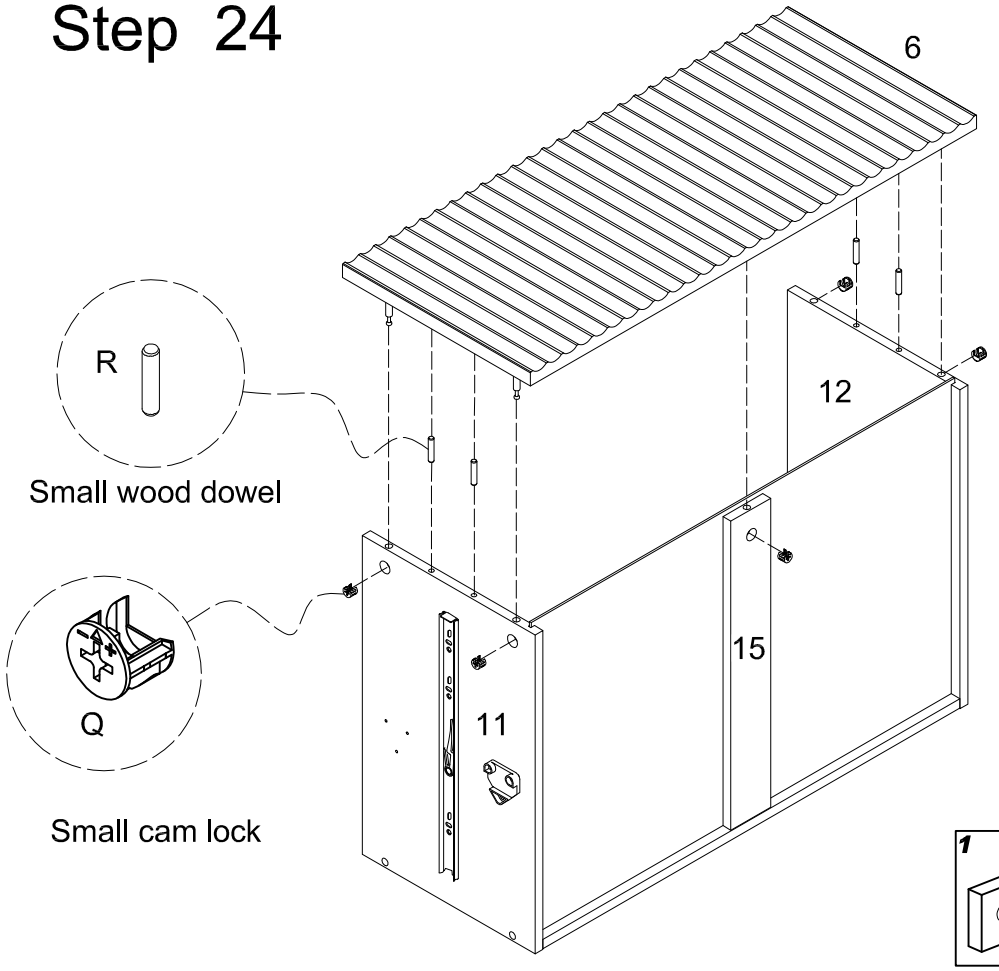

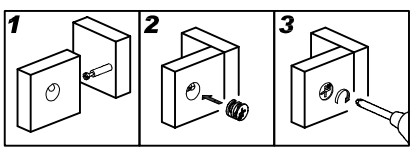


Step 25

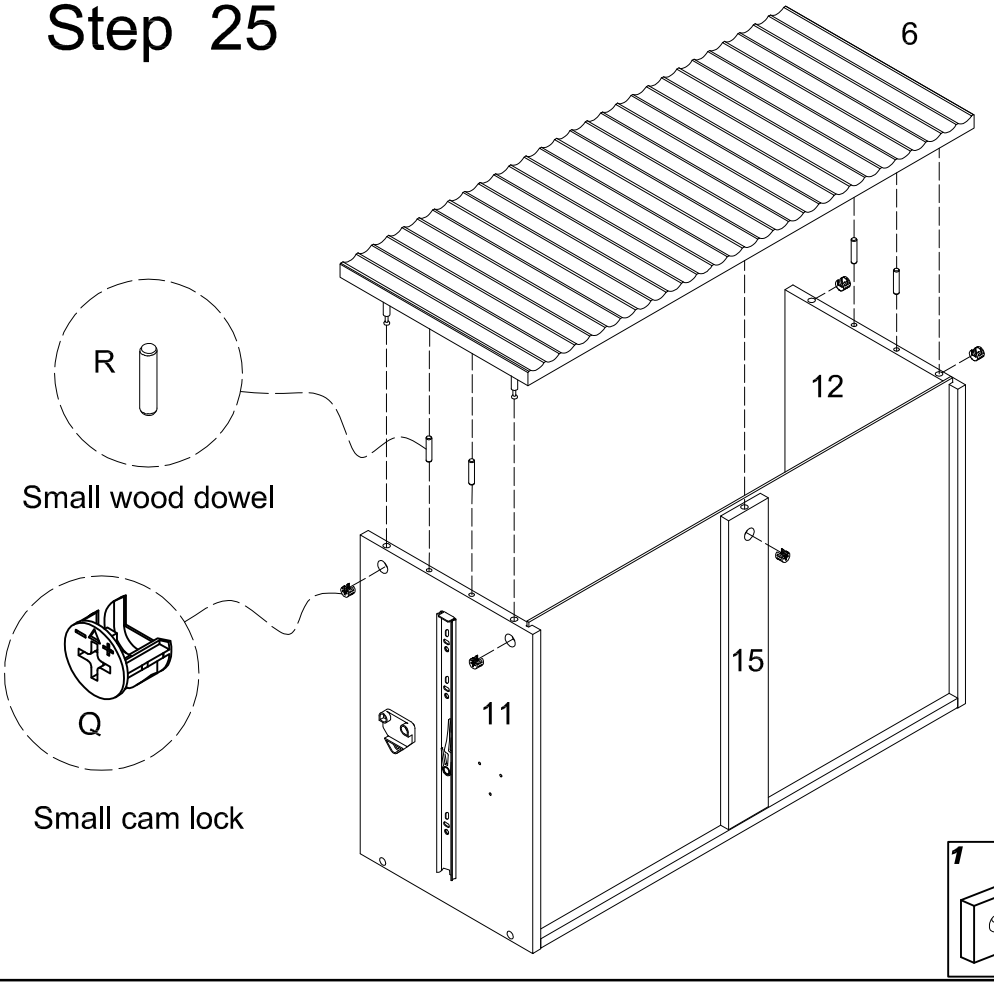

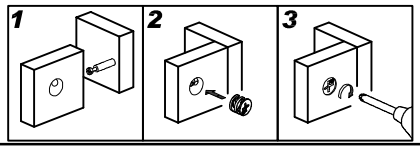


Step 26

Care the location of pilot holes

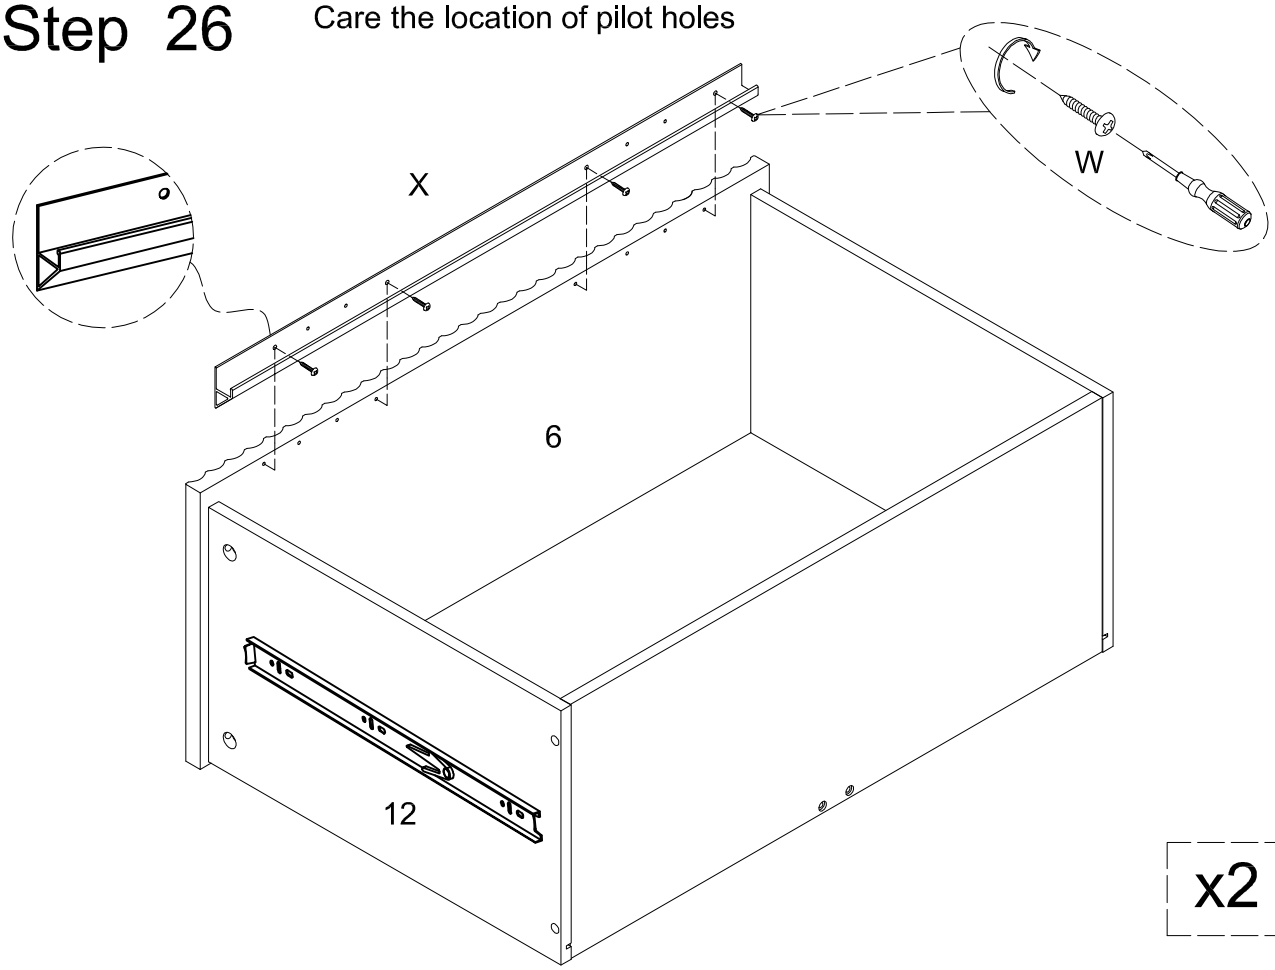


x2

Step 27

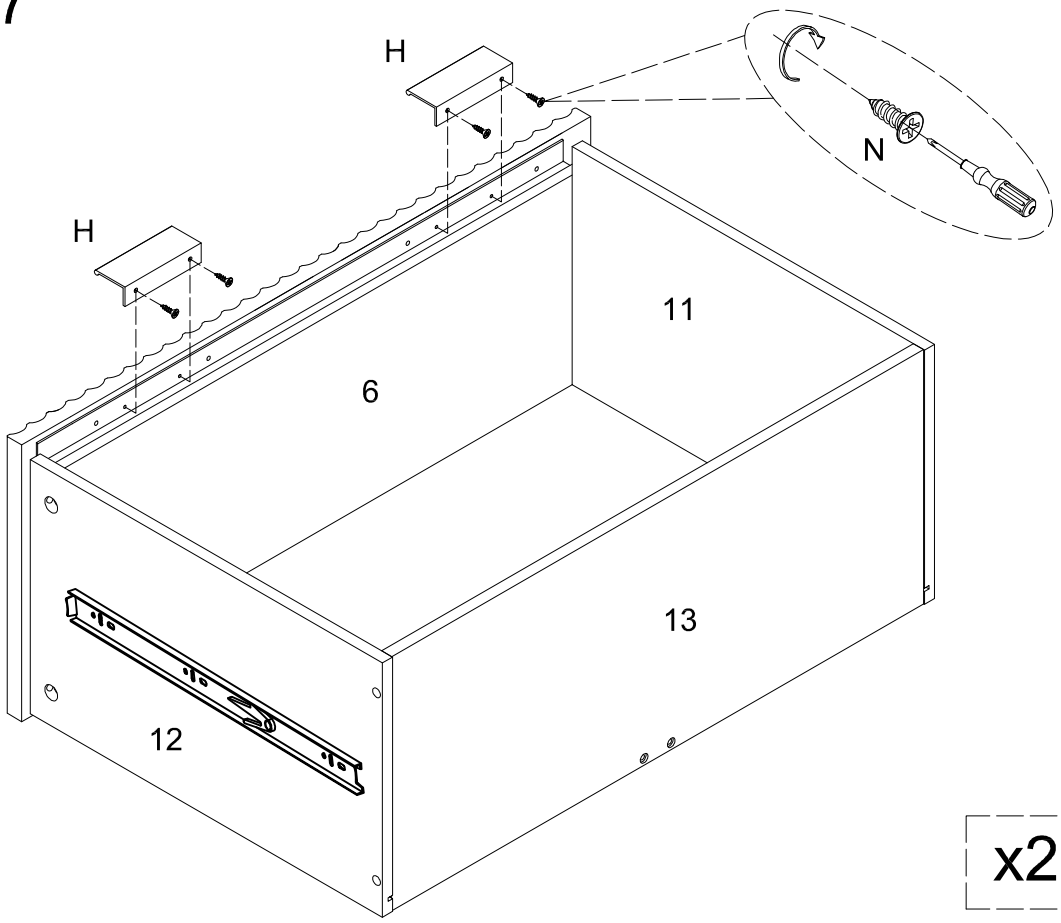


x2

Step 28

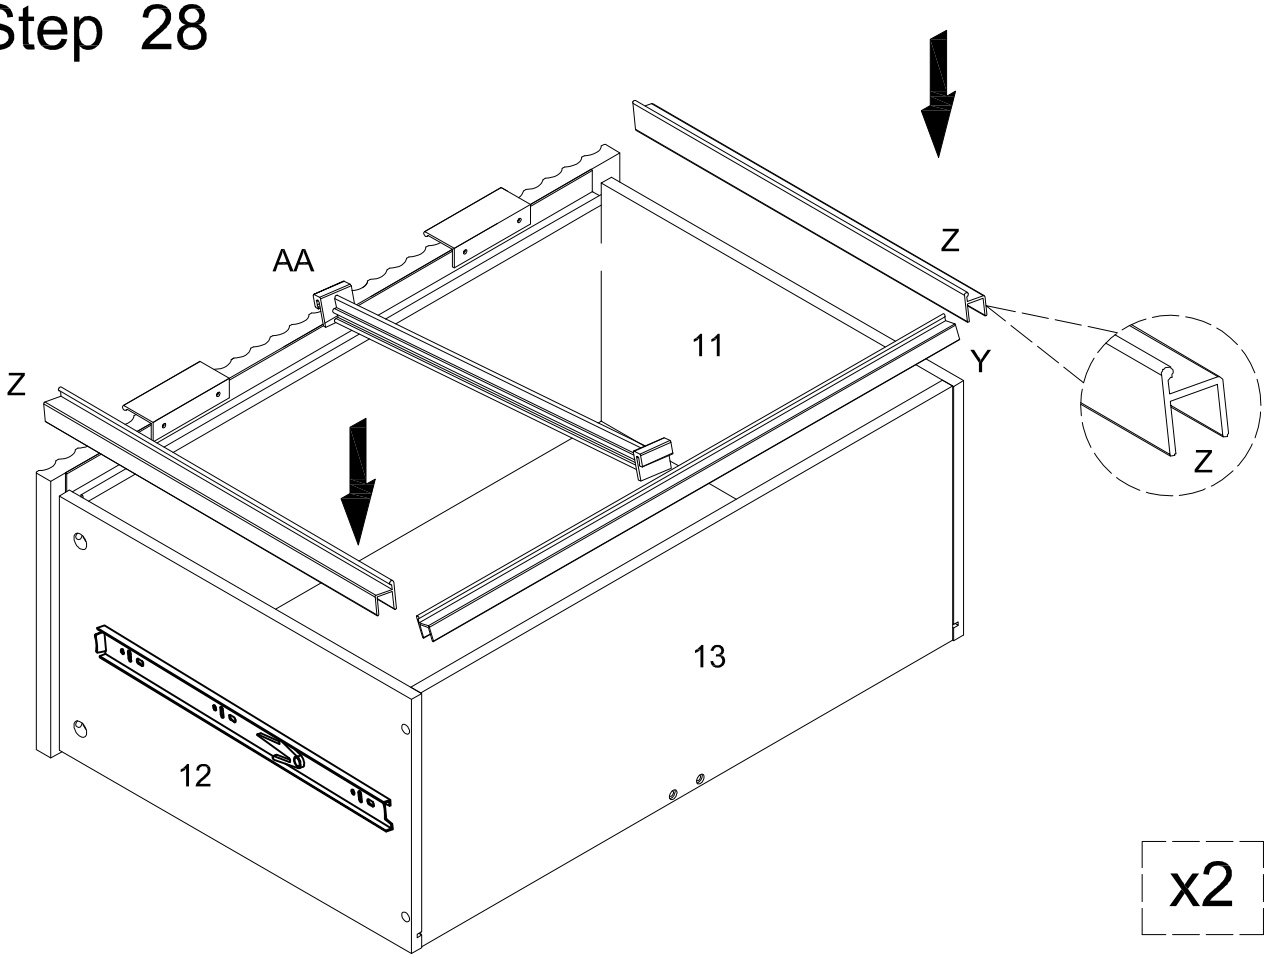


x2


Step 29

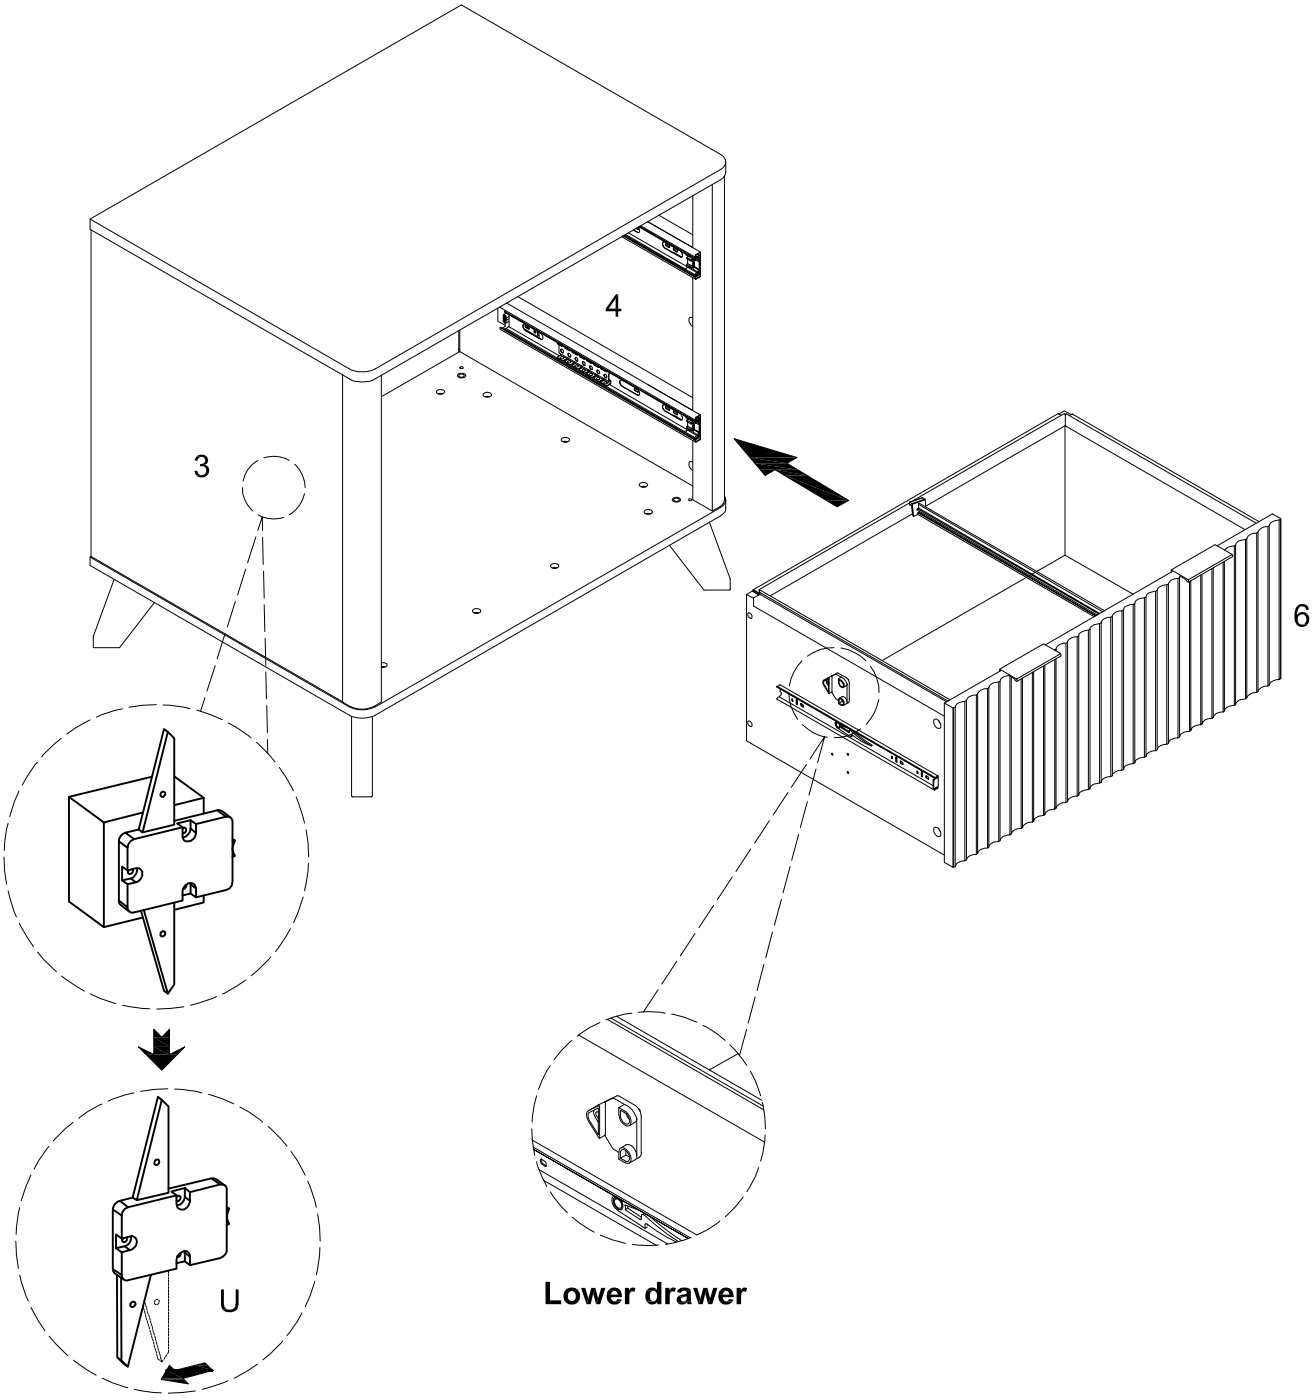



More attention

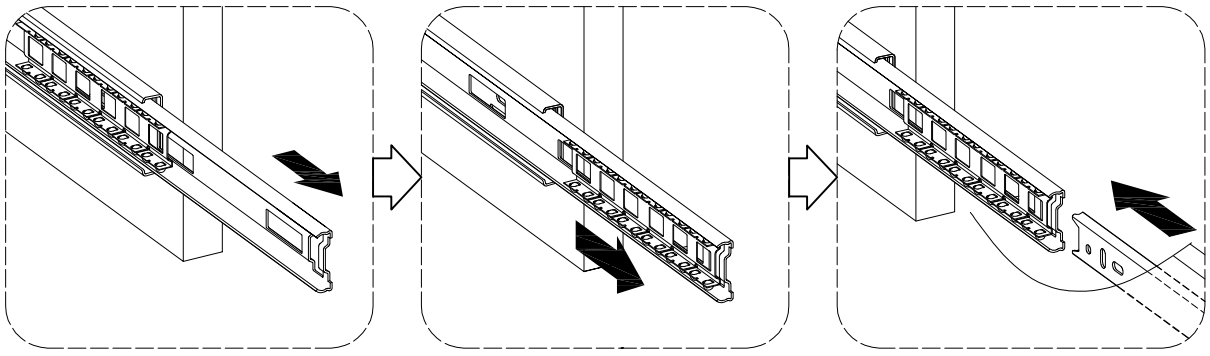



Step 30

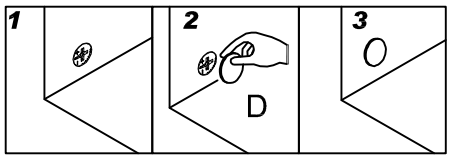

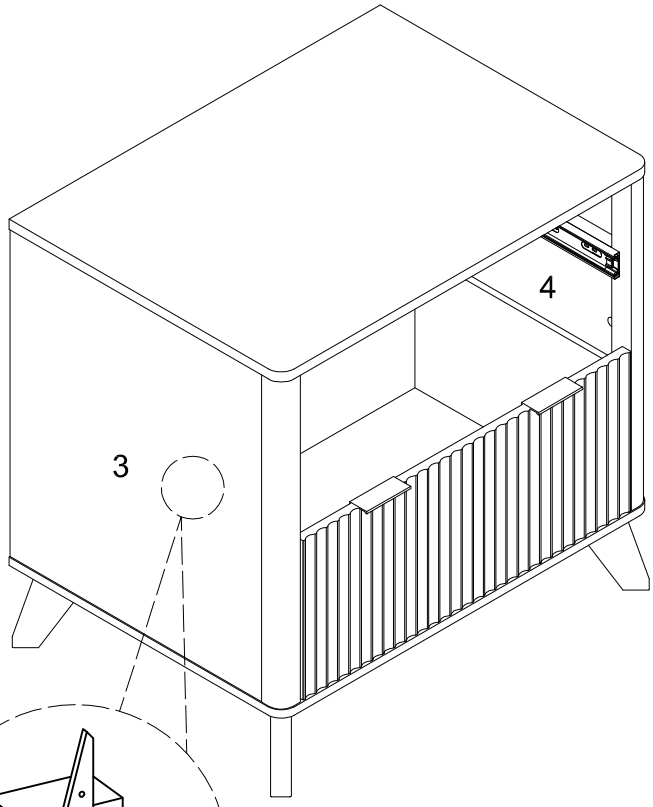


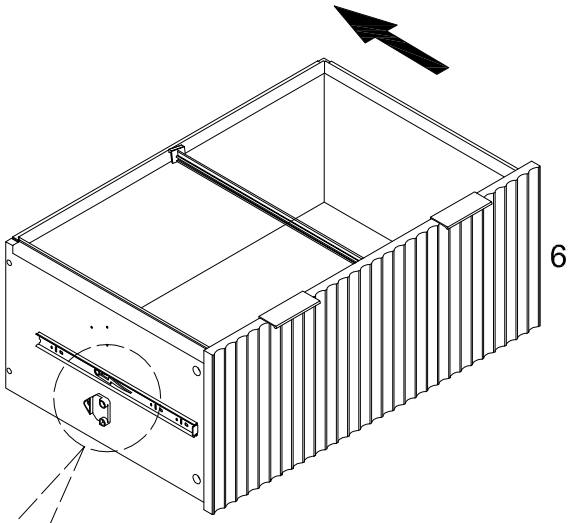

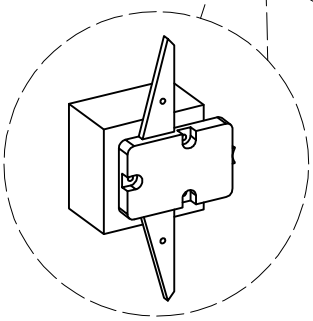


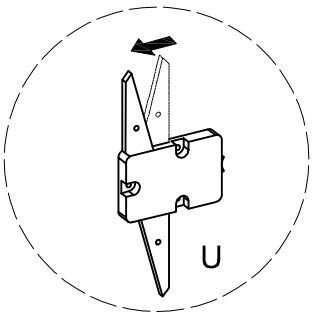


More attention

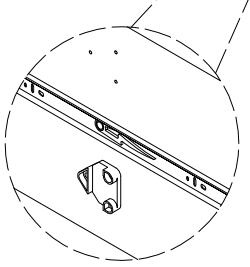


Upper drawer

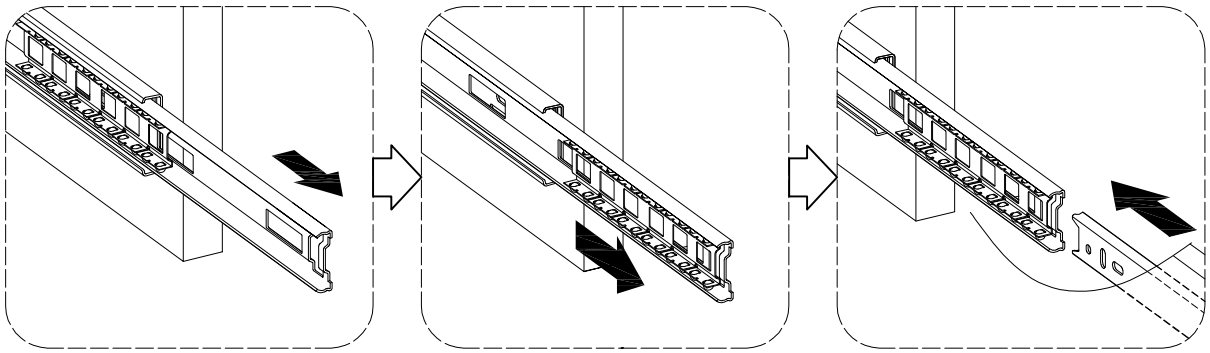


Step 31

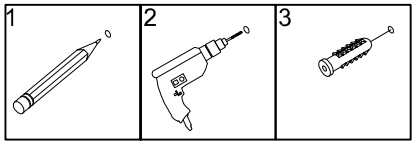

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

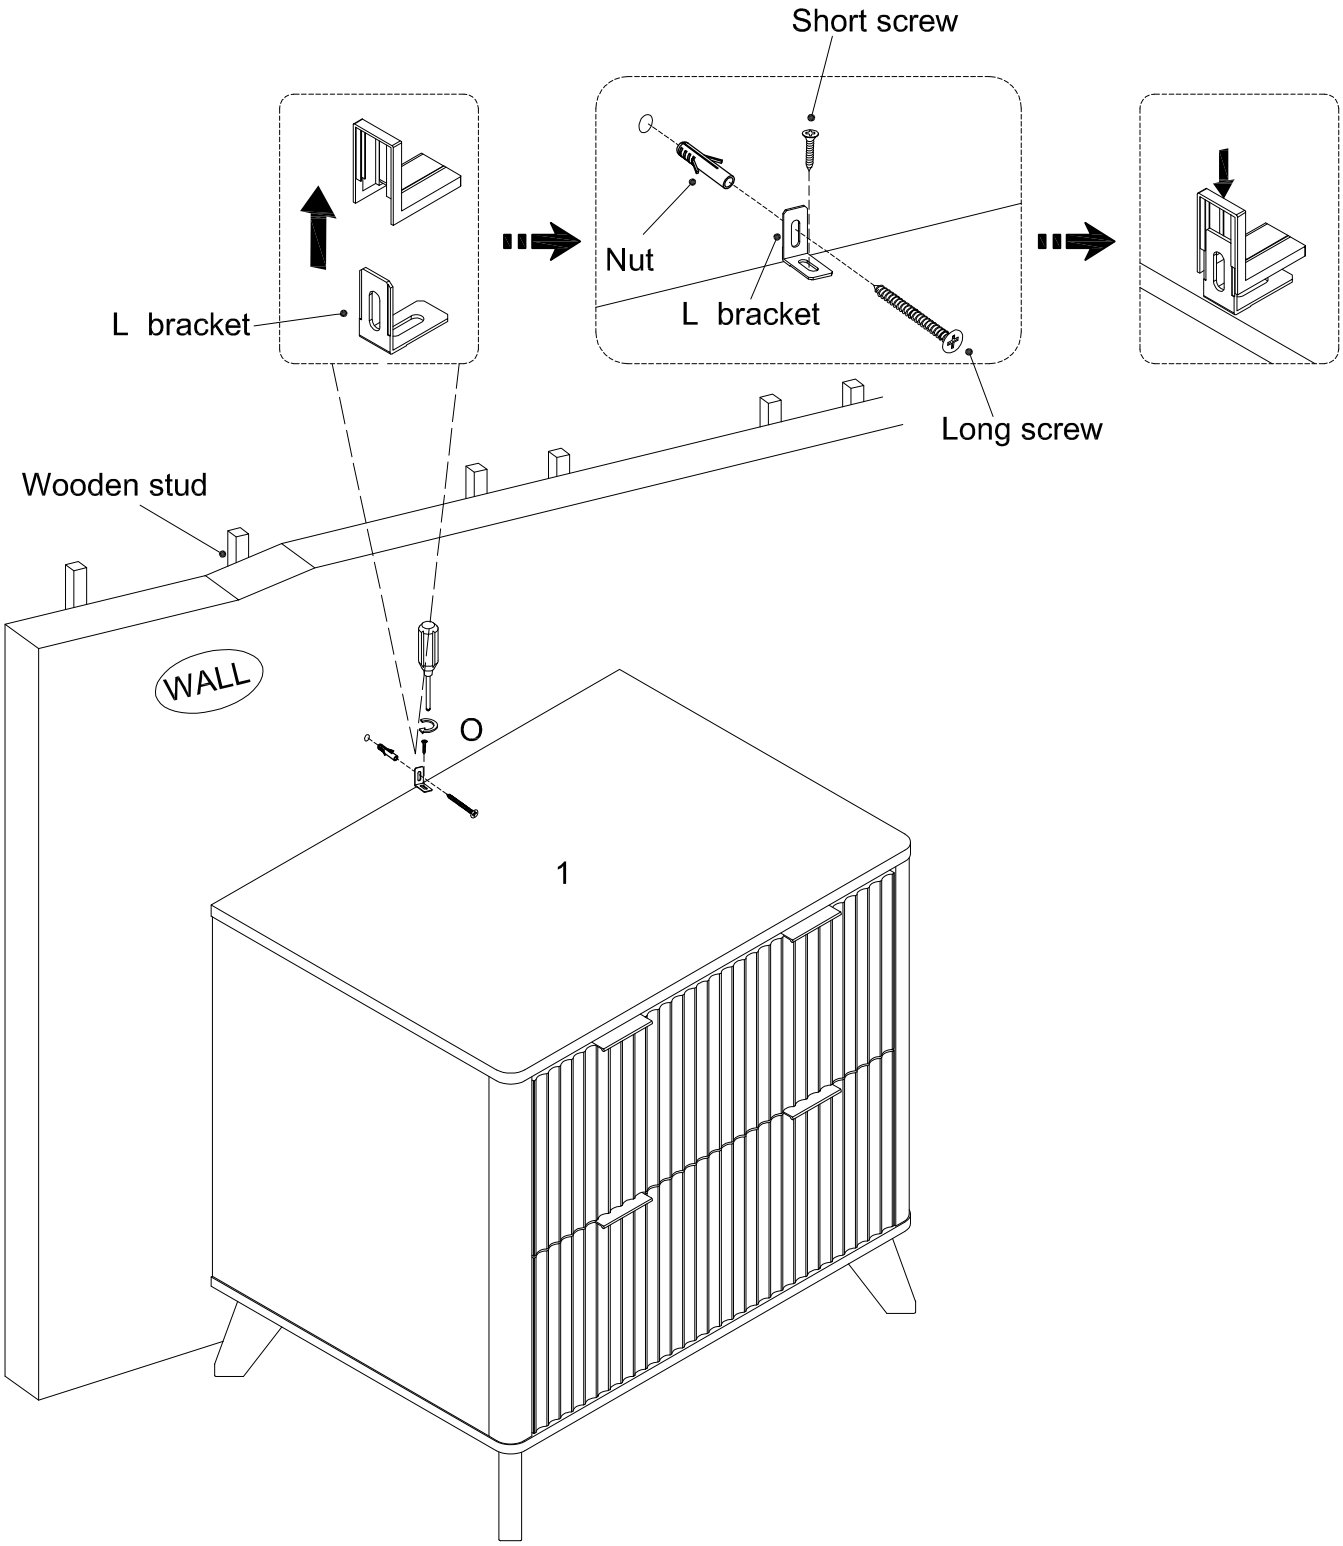

Step 32

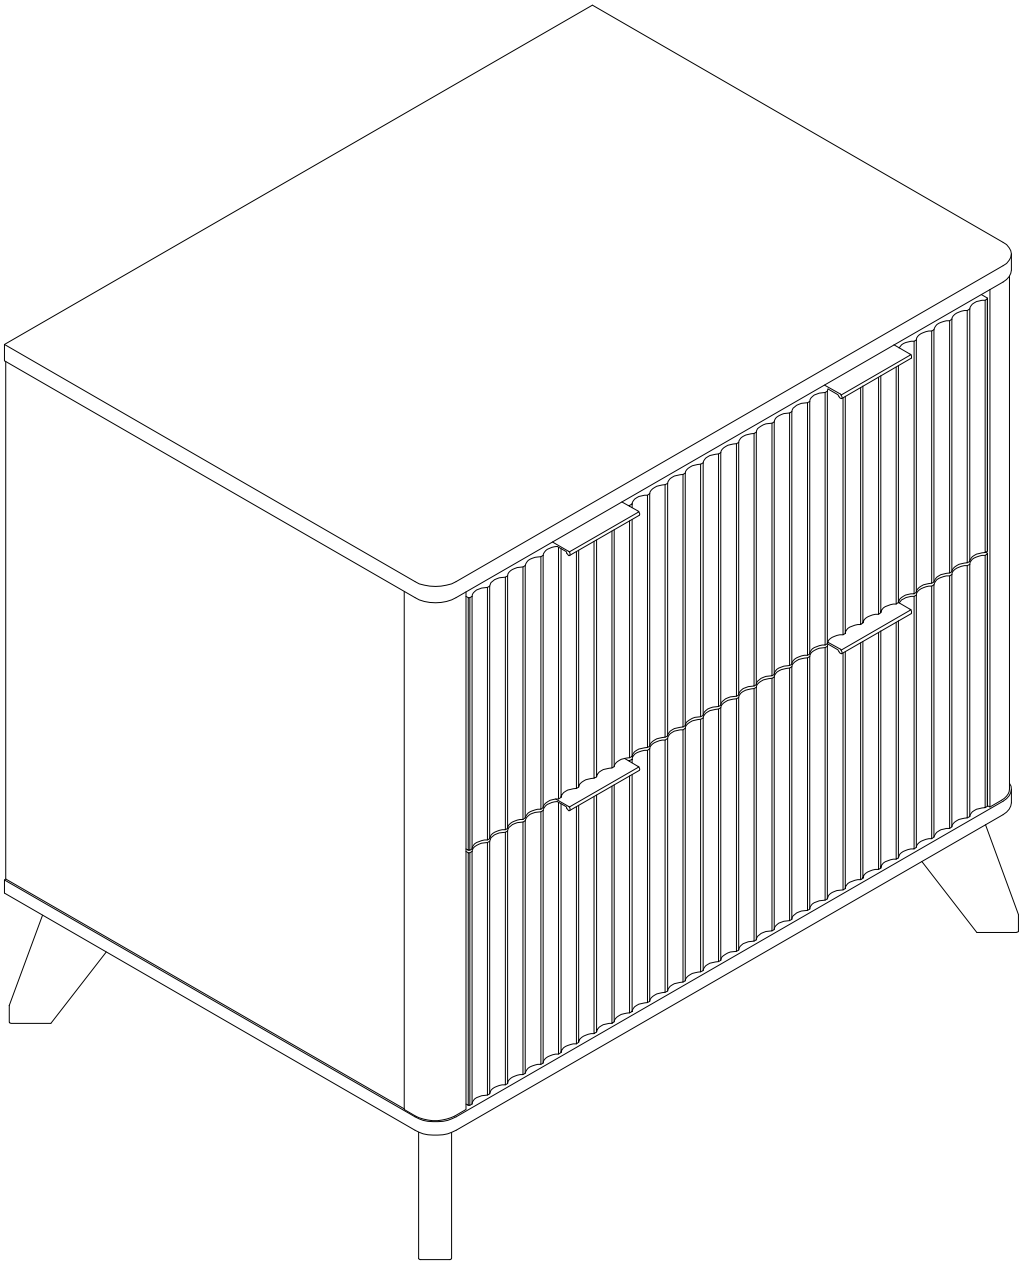

Final Assembly