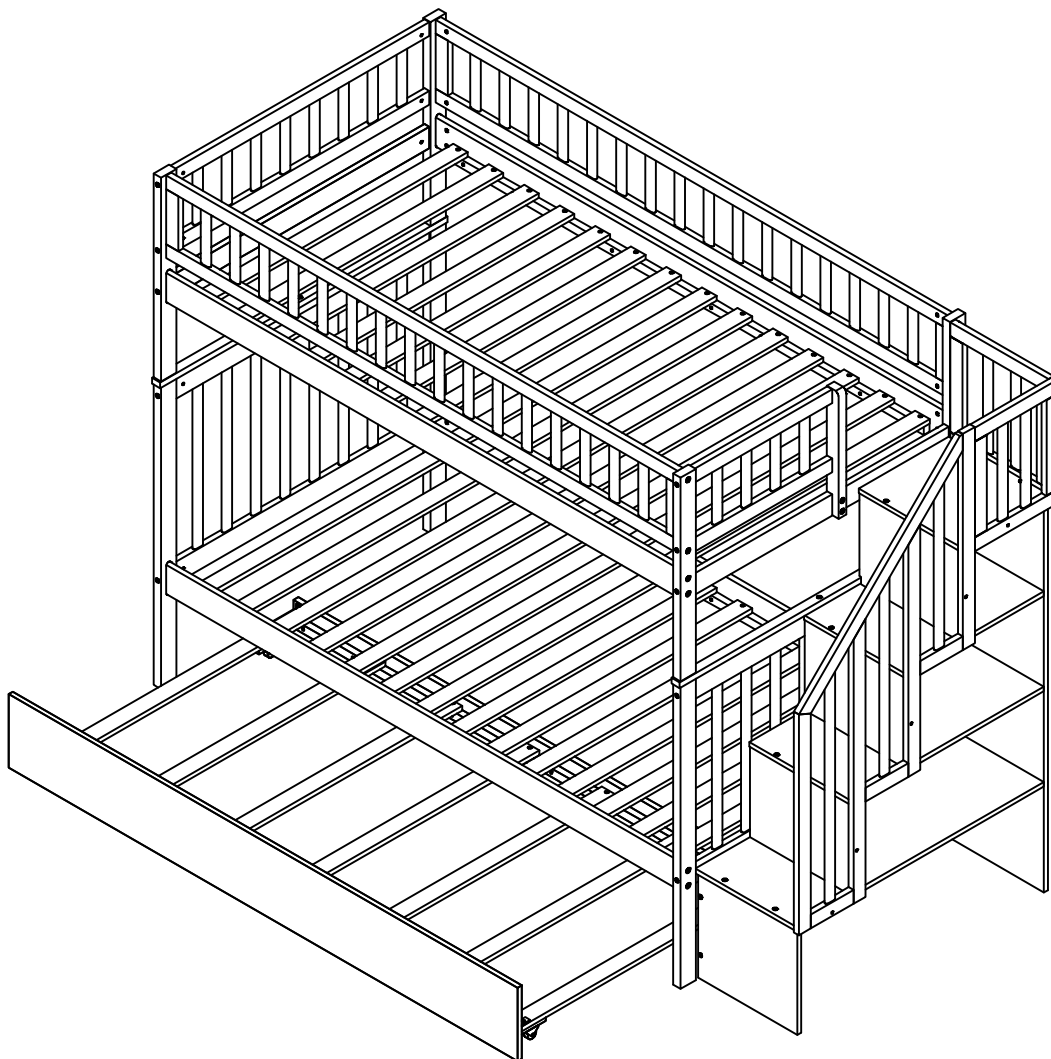


ASSEMBLY INSTRUCTIONS

TWIN/TWIN/TRUNDLE BUNK BED



This set is included 2 boxes if don't receive full 2 boxes please contact our customer service team.

If you have any questions, please feel free to contact us.

Email: service@qualfurn.net

WF286068/WF286069

SAFETY WARNINGS AND GENERAL NOTES :

Follow the information on the warnings on the bunk bed end structure and on the carton. Do not remove the warning label from the bed. Always use the recommended size mattress on mattress support, or both, to help prevent the likelihood of entrapment or falls.

The top surface of the mattress must be at least 5*inch (127mm) below the upper edge of the guardrail.

Do not allow children under 6 years of age to use the upper bunk.

Periodically check and ensure the guardrail, ladder and other components are in their proper position, free from damage, and all connectors are tight.

Do not allow horseplay on or under beds.

Always prohibit jumping on the bed.

Prohibit more than one person on upper bunk.

Always use the ladder for entering and leaving the upper bunk.

Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.

Use of a night-tight may provide added safety precaution for a child using the upper bunk.

Always use guardrails on both long sides of the upper bunk.

If the bunk bed will be placed next to a wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.

The use of water or sleep flotation mattresses is prohibited.

STRANGULATION HAZARD-Never attach or hang items to any part of the bunk bed that are not designed for use with the bed.

Keep these instructions for future reference.

We recommend assembling your bunk bed on the shipping carton to protect your floor or carpet.

Be certain all staples are out of the box before beginning assembly on the shipping carton.

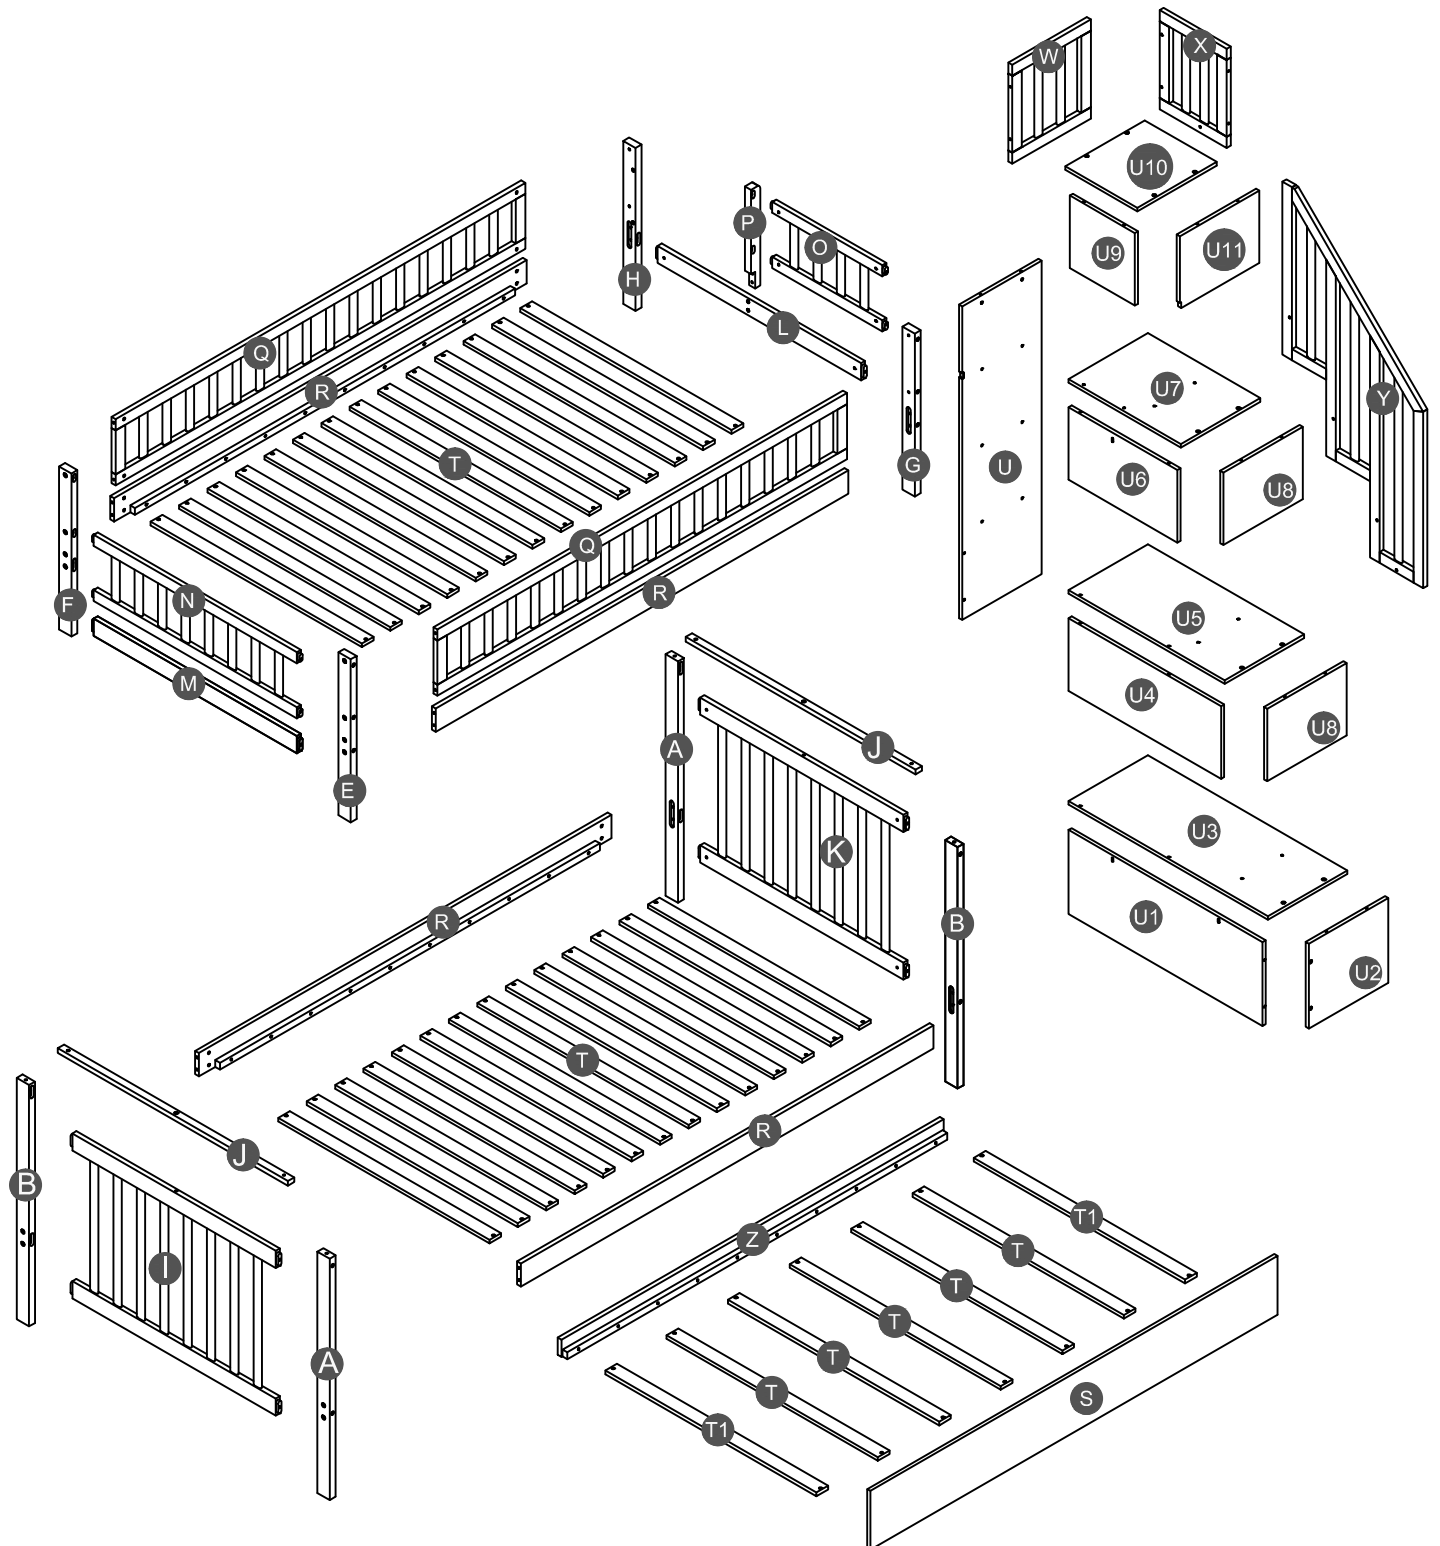
USE ONLY MATTRESSES WHICH ARE 74"-75" LONG AND 37 1/2" - 38 1/2" WIDE ON UPPER AND ON LOWER BUNKS. ENSURE THICKNESS OF MATTRESS DOES NOT EXCEED 6".

SURFACE OF MATTRESS MUST BE AT LEAST 5" (127MM) BELOW THE UPPER EDGE OF GUARDRAILS.

Replacement Parts:










Replacement Parts, including additional guardrails, may be obtained from any of our (GIGACLOUD TECHNOLOGY (USA) INC.) dealers

Detail View














Part List








Hardware List WF286068

A		B		E	
Lower leg(Left) - 2pcs		Lower leg (Right)- 2pcs		Upper leg(Left front) - 1pc	
F		G		H	
Upper leg(Right back) - 1pc		Upper leg (Right front)- 1pc		Upper leg (Left back)- 1pc	
J		Q		R	
Cap for lower HB&FB-2pcs		Upper front & back side rail-2pcs		Lower&upper side rail - 4pcs	
N		O		T	
Upper HB - 1pc		Upper FB - 1pc		Slats - 28pcs	
S		Z			
Trundle front panel - 1pc		Trundle back panel - 1pc			








WF286069

U		U1		U2	
Back panel - 1pc		Lower left side panel - 1pc		Lower front panel - 1pc	
U3		U4		U5	
Lower step ladder panel -1pc		Lower center left side panel - 1pc		Lower center step ladder panel -1pc	
U6		U7		U8	
Upper center left side panel - 1pc		Upper center step ladder panel -1pc		Center front panel - 2pcs	
U9		U10		U11	
Upper left side panel - 1pc		Upper step ladder panel -1pc		Upper front panel - 1pc	
T1		T		W	
Trundle Slats - 2pcs		Trundle Slats - 5pcs		Upper guard back - 1pc	

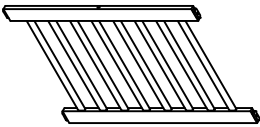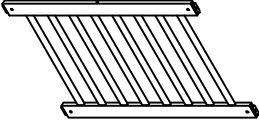
Part List

I  Lower HB - 1pc	K  Lower FB - 1pc	L  Horizontal upper bar FB-1pc
M  Horizontal upper bar HB-1pc	P  Support guard rail - 1pc	Y  Guard side - 1pc
X  Upper guard side - 1pc		

Hardware List

1  Ø8*30mm Wood dowel (12pcs)	2  (Ø15)1/4"*100mm Hex-Head bolts (18pcs)	3  (Ø15)1/4"*80mm Hex-Head bolts (24pcs)
4  (Ø12)1/4"*70mm Hex-Head bolts (2pcs)	5  (Ø12)1/4"*60mm Hex-Head bolts (37pcs)	6  (Ø12)1/4"*35mm Hex-Head bolts (2pcs)
7  (Ø12)1/4"*30mm Hex-Head bolts (3pcs)	8  1/4"*15 (9.5mm) Horizontal-Hole bolts(79pcs)	9  Ø9*90mm Connecting bar (4pcs)
10  (Ø12)1/4"*40mm Hex-Head bolts (2pcs)	11  (1/4")4.5*58mm Allen key (1pc)	12  Ø4*30mm Wood screws (78pcs)
13  Ø1/4"*19*2mm Flat Washer (3pcs)	14  95*95*18*3mm Metal bracket (2pcs)	15  Ø3.5*15mm Wood screws (16pcs)
16  100*63*20mm Wheels (4pcs)	17  40*18*18*2mm Metal bracket (2pcs)	


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)



DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT !


Remark: We recommend you assemble your bed in the flat ground.

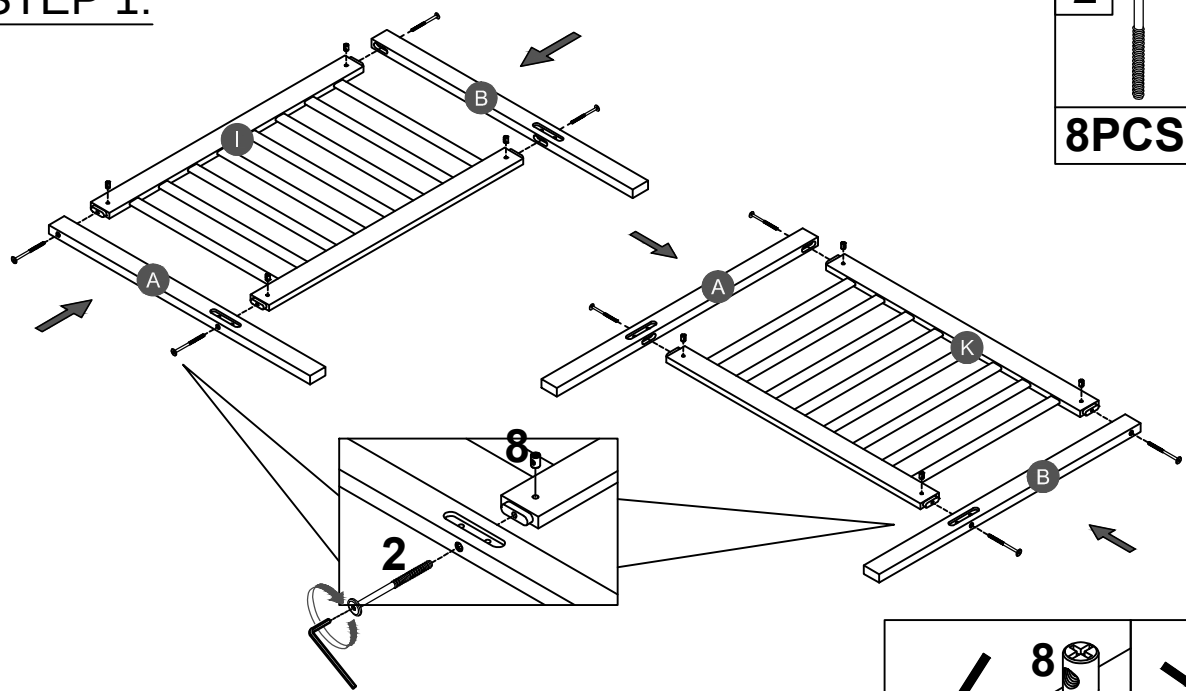STEP 1:




2		8	
8PCS		8PCS	

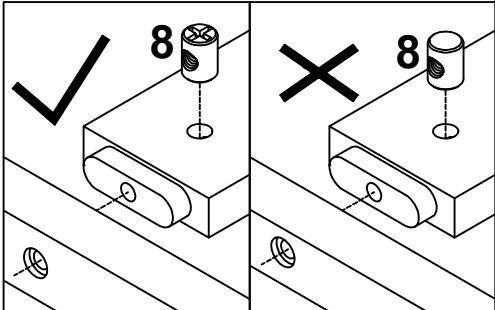Note:Part 8 will face up with the "x" mark on it, otherwise it cannot be tightened



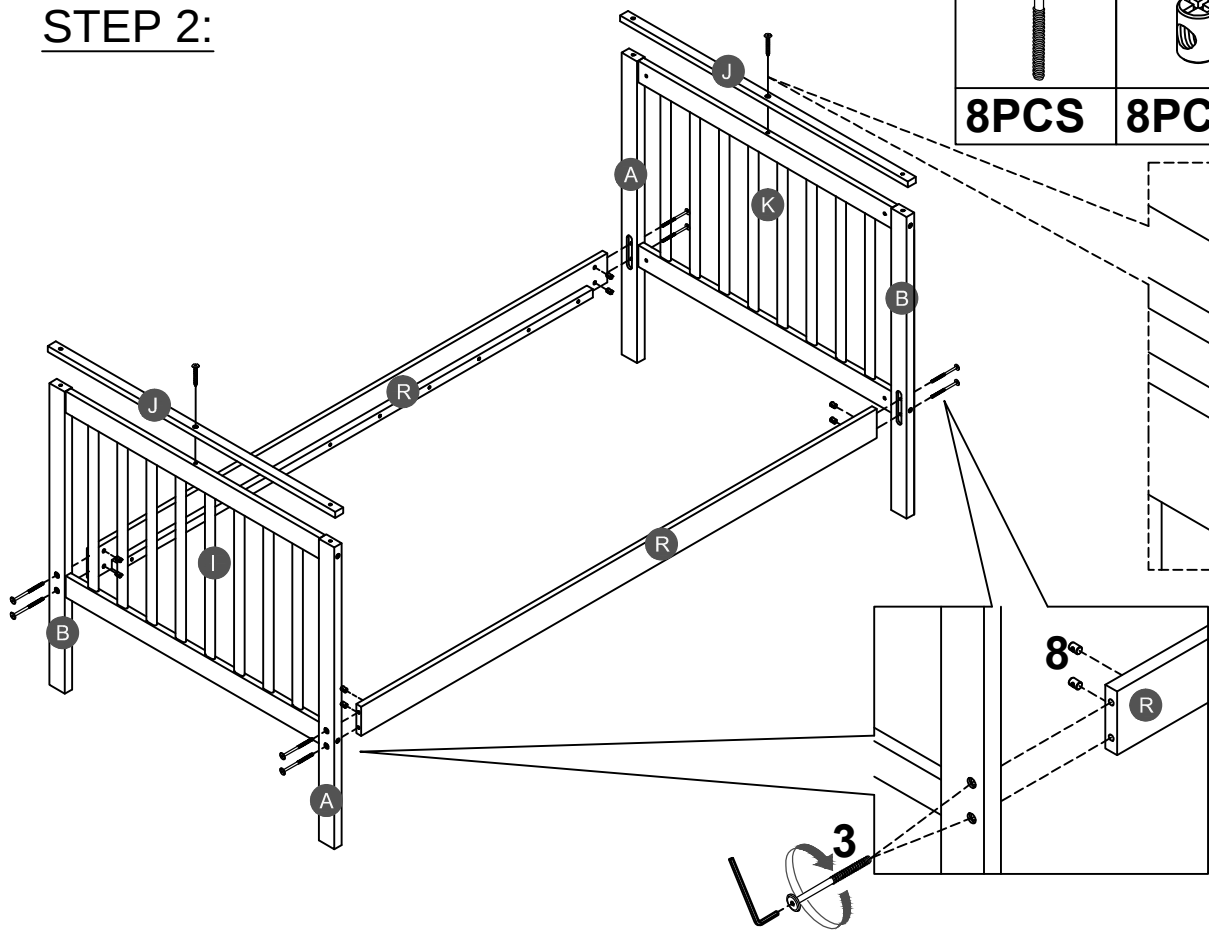
STEP 2:



3		8		10	
8PCS		8PCS		2PCS	

STEP 3:

2		4		6		8	
10PCS		2PCS		2PCS		12PCS	

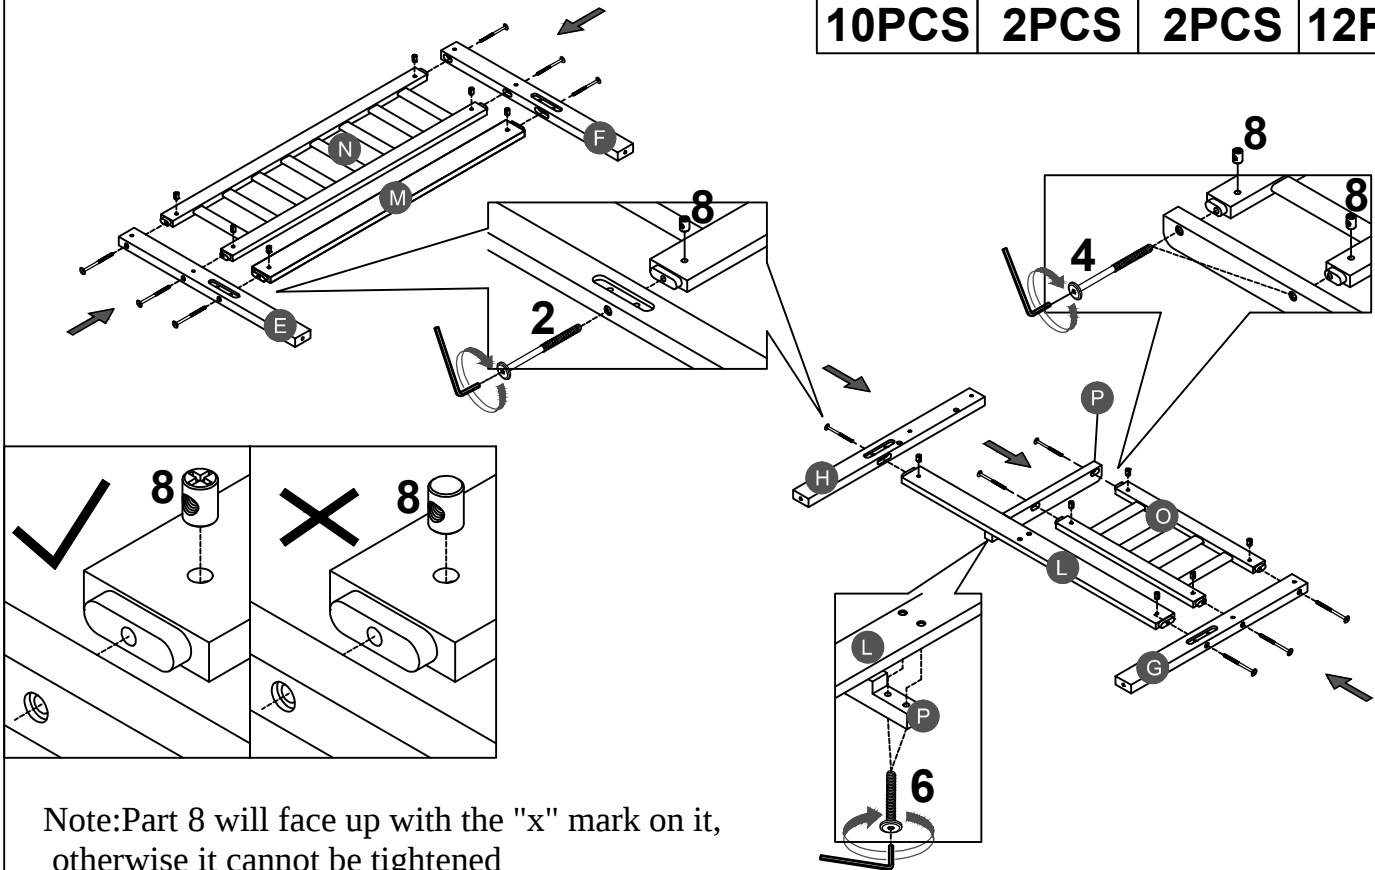


Note: Part 8 will face up with the "x" mark on it, otherwise it cannot be tightened

STEP 4:

Balcony don't tighten these yet . Leave them a bit loose to make fitting the lower side rail more easily.

3		8	
16PCS		16PCS	


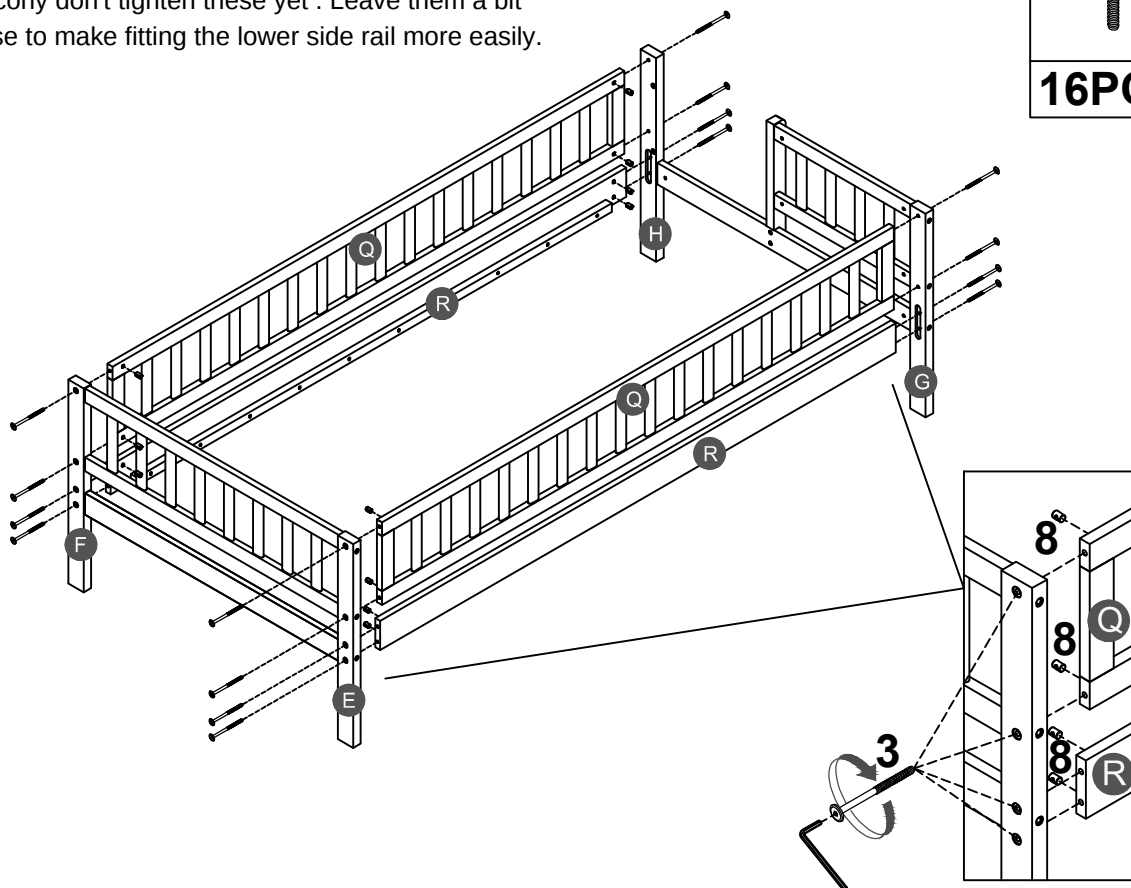


STEP 5:

9




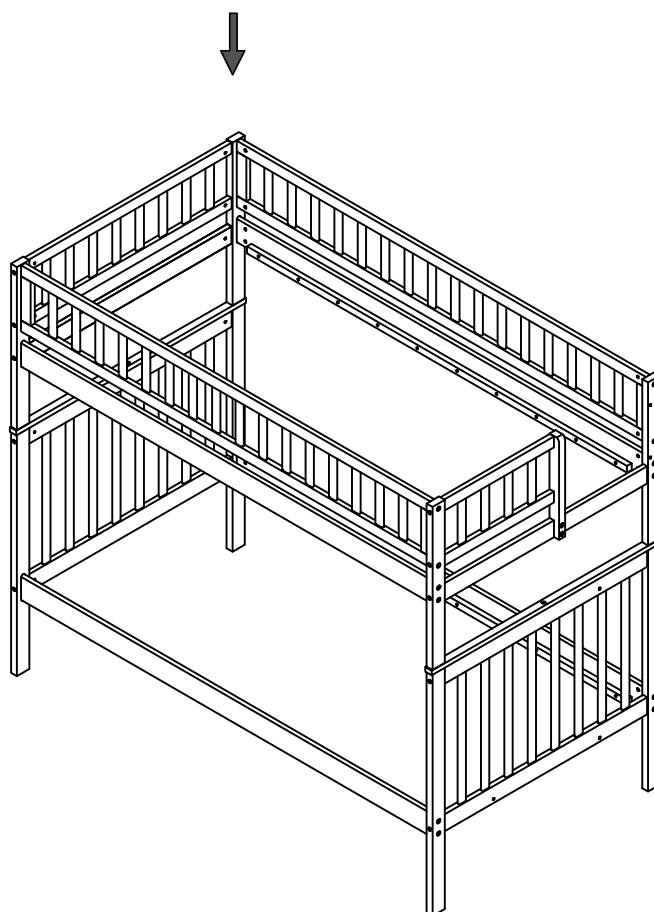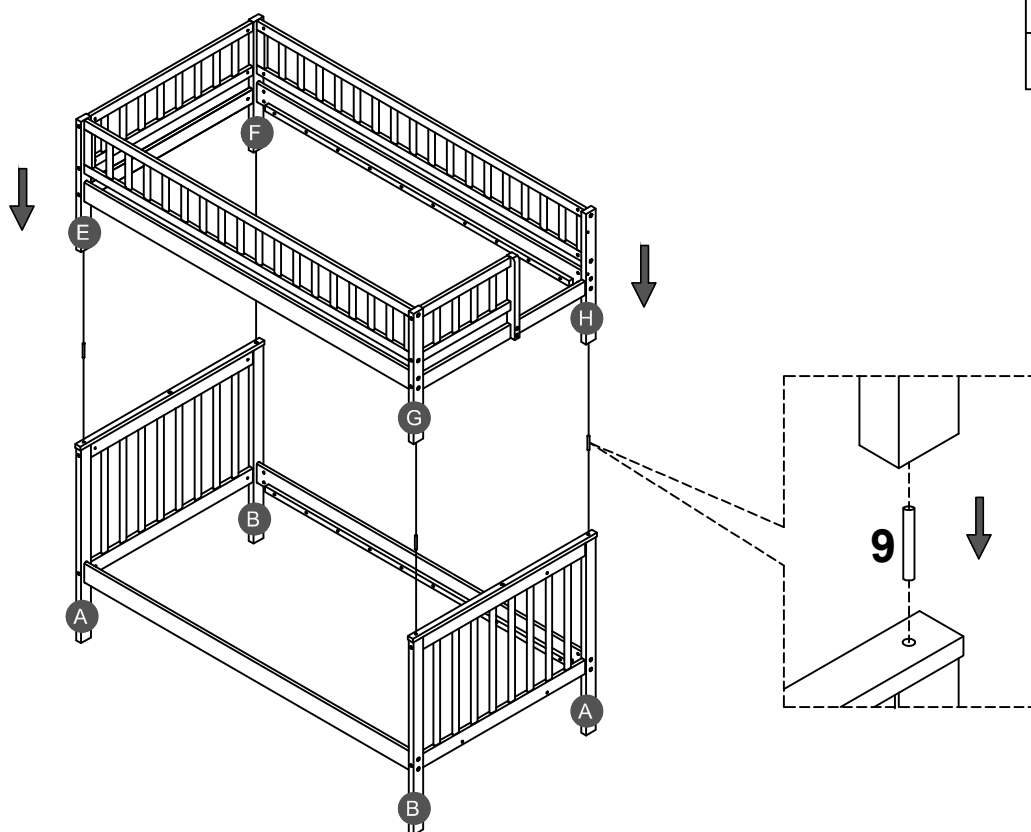4PCS




STEP 6:


1	5	8
		
12PCS	26PCS	26PCS

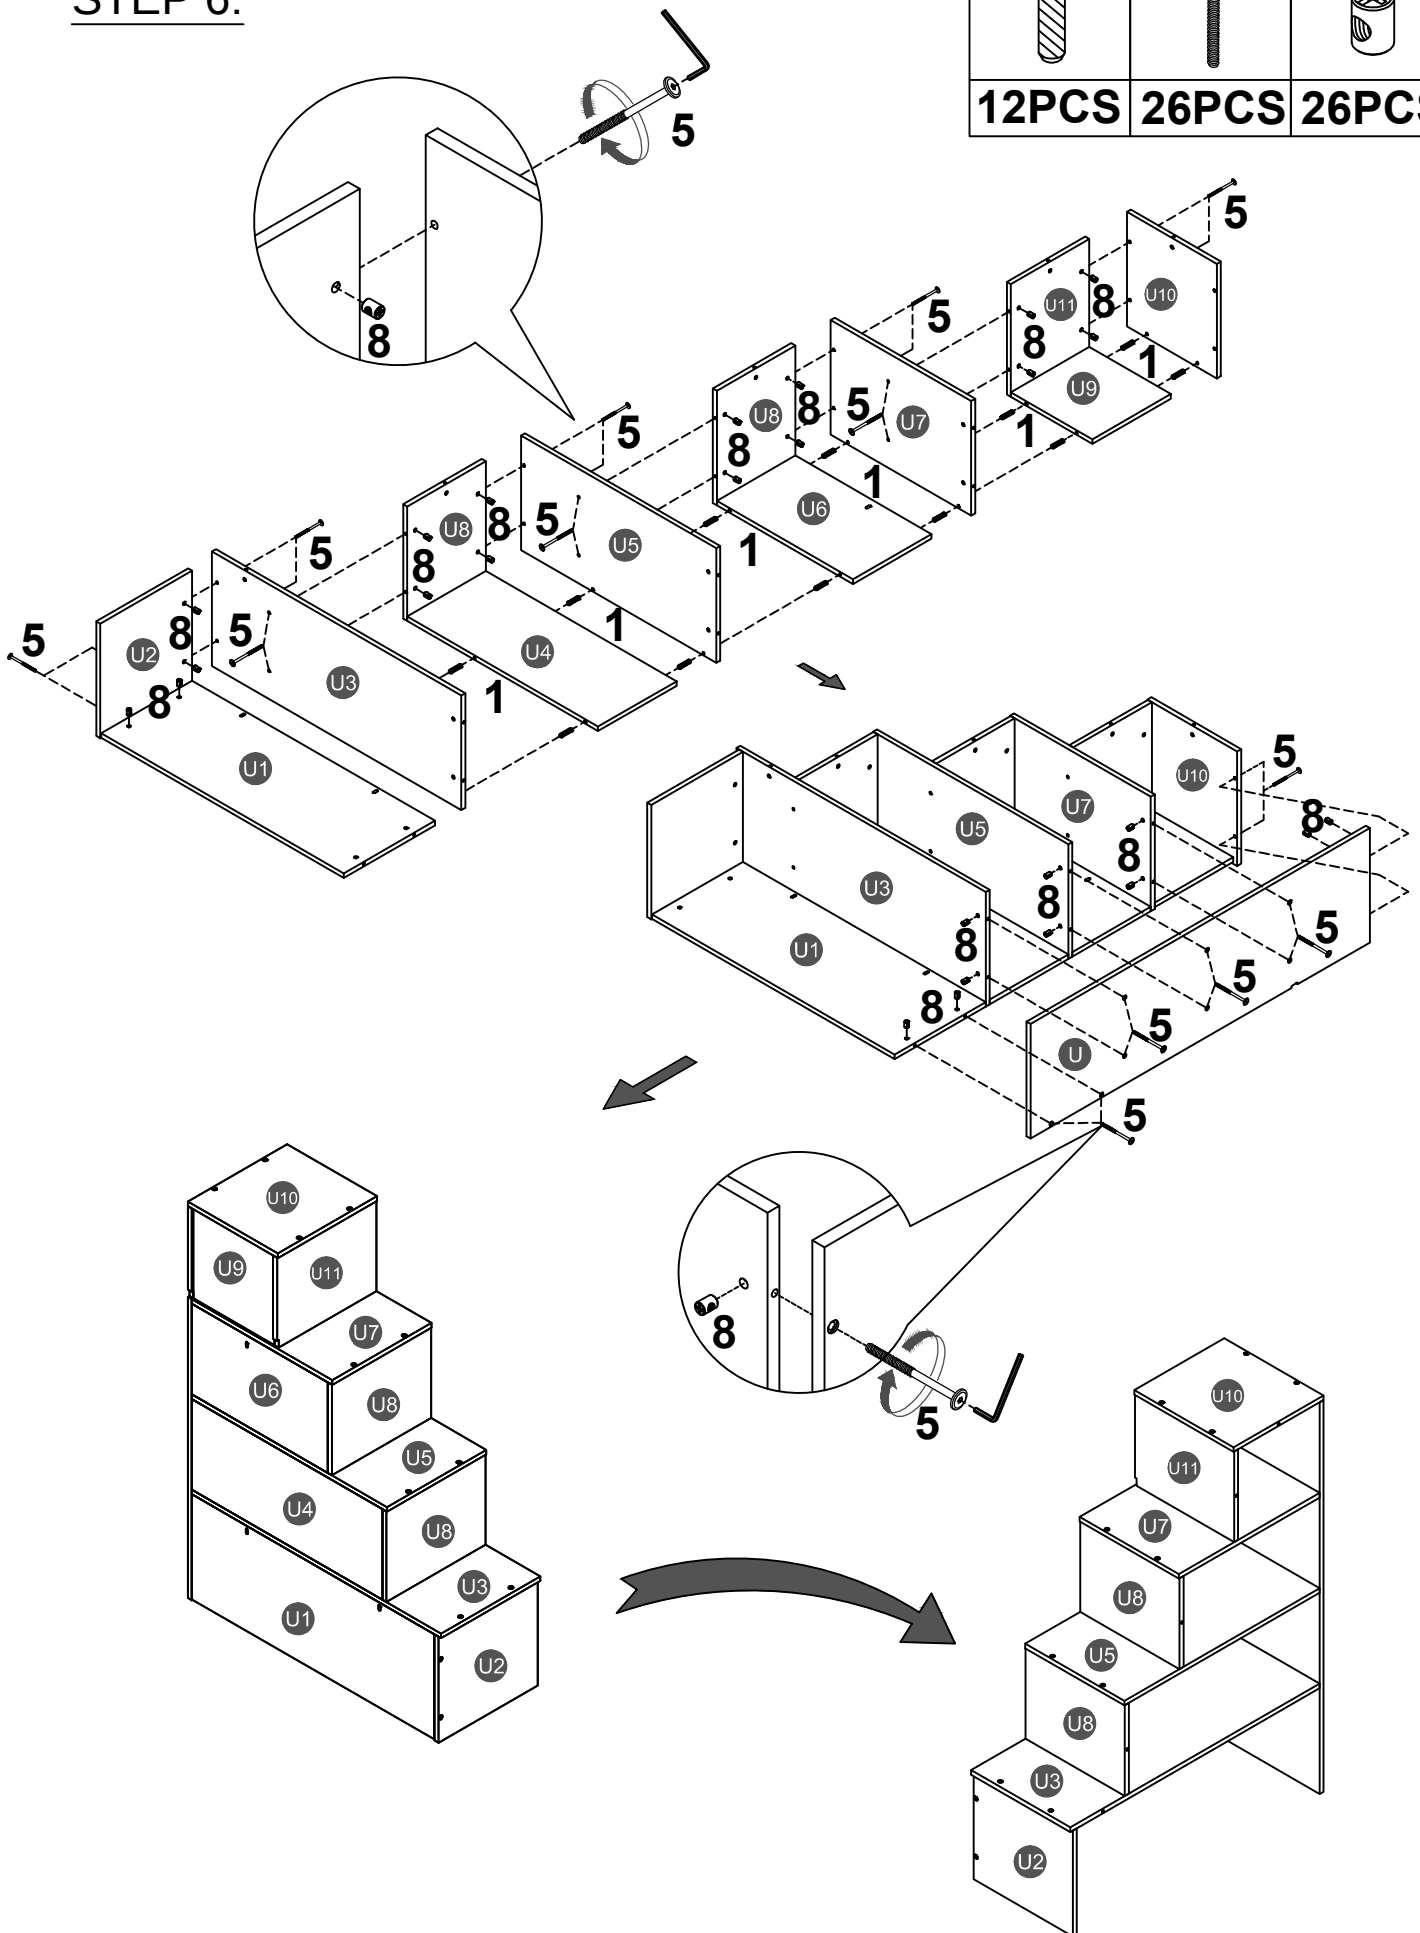

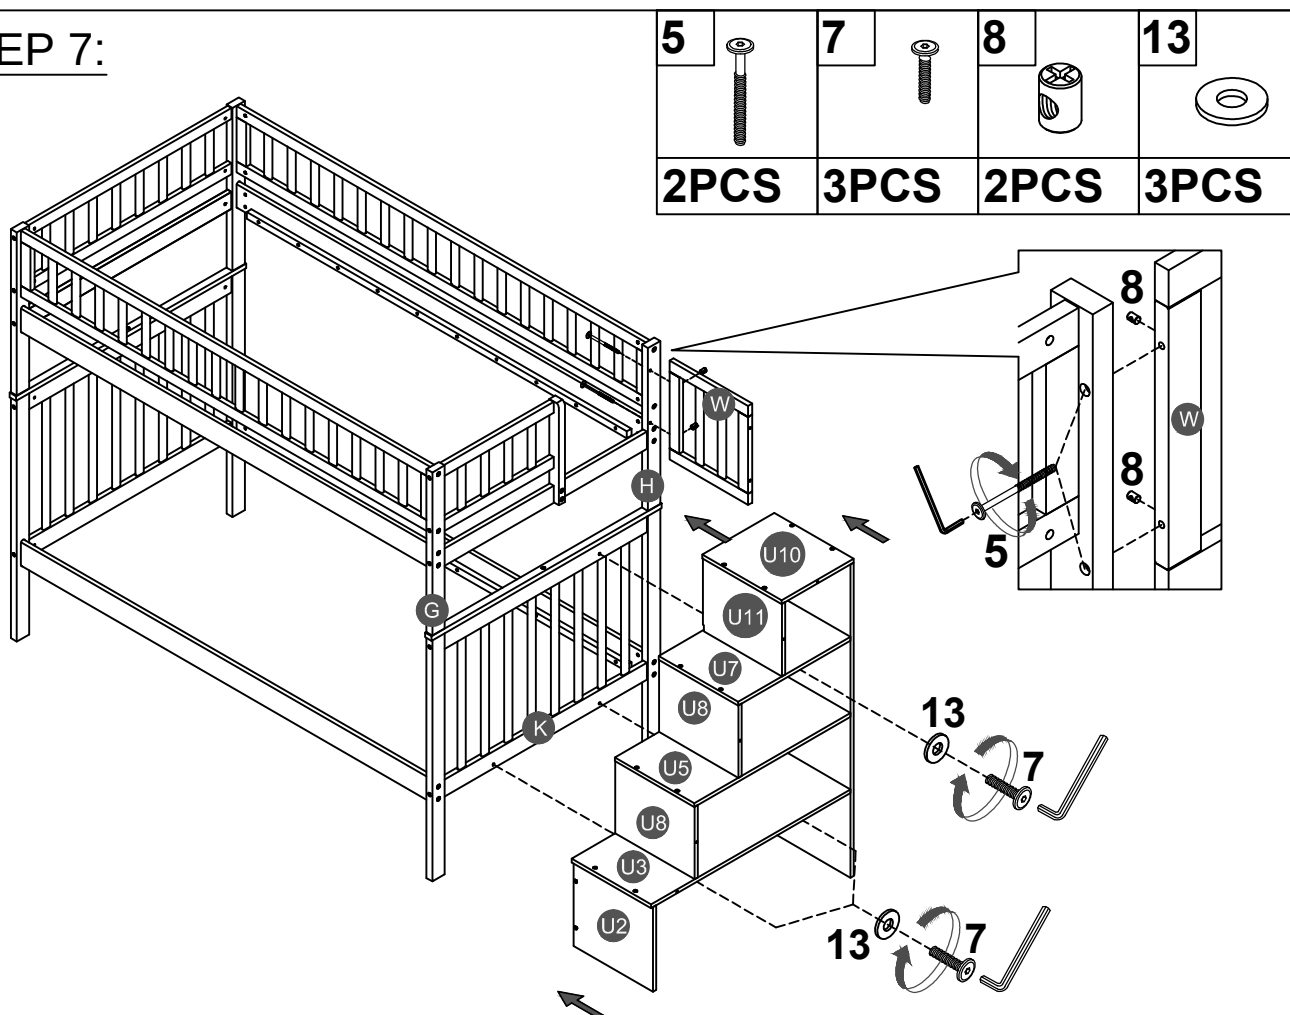STEP 7:



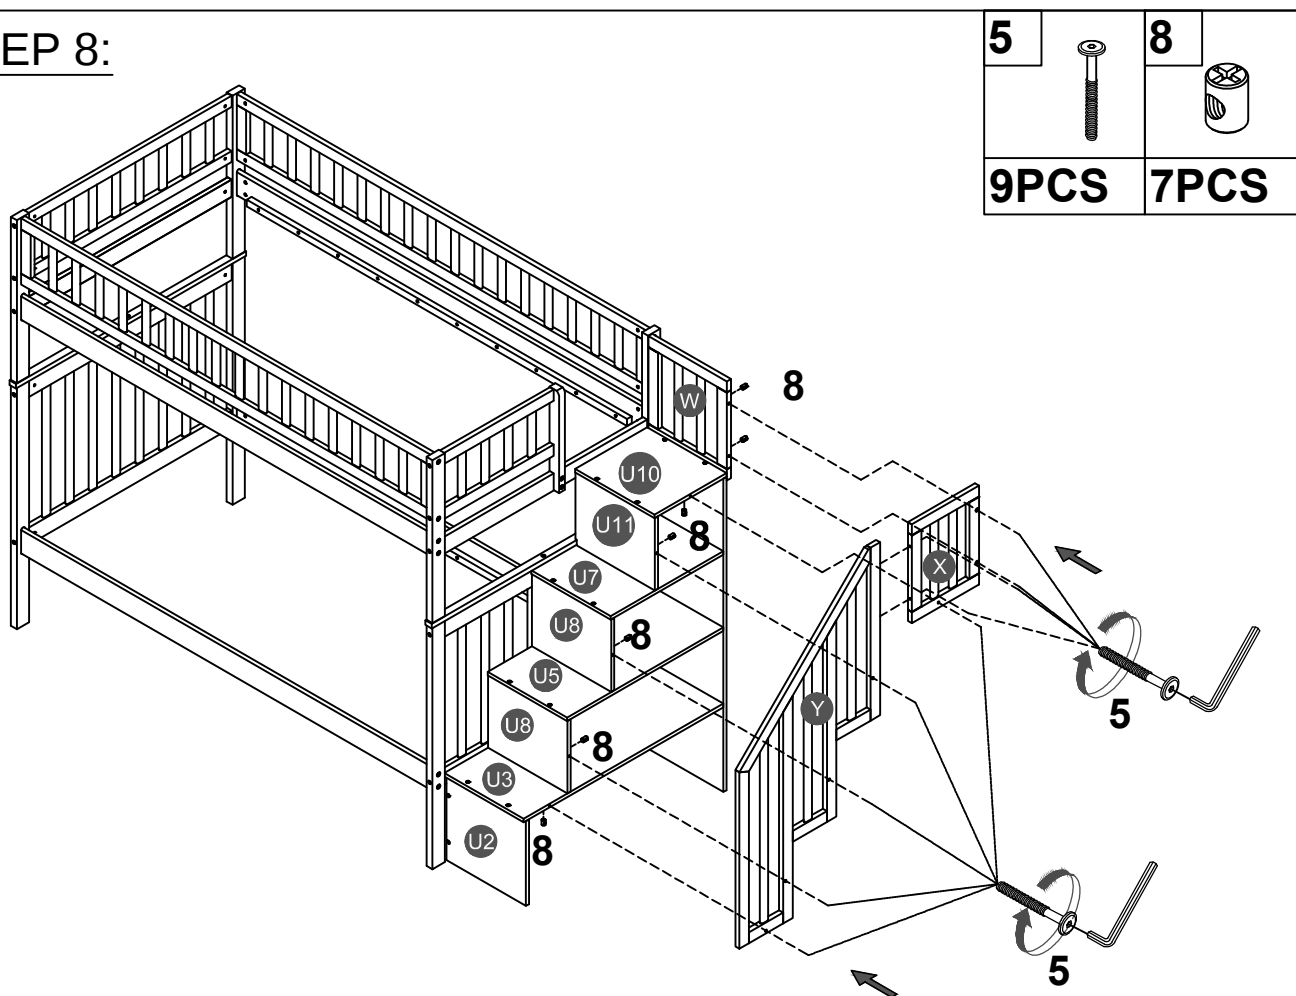STEP 8:






STEP 9:

12



56PCS

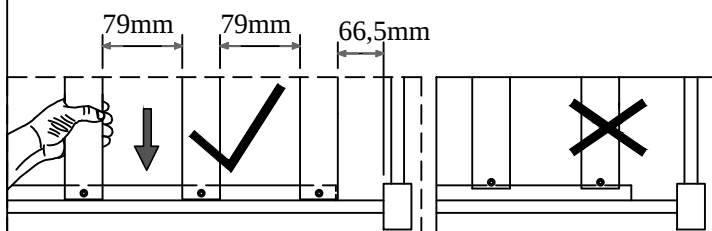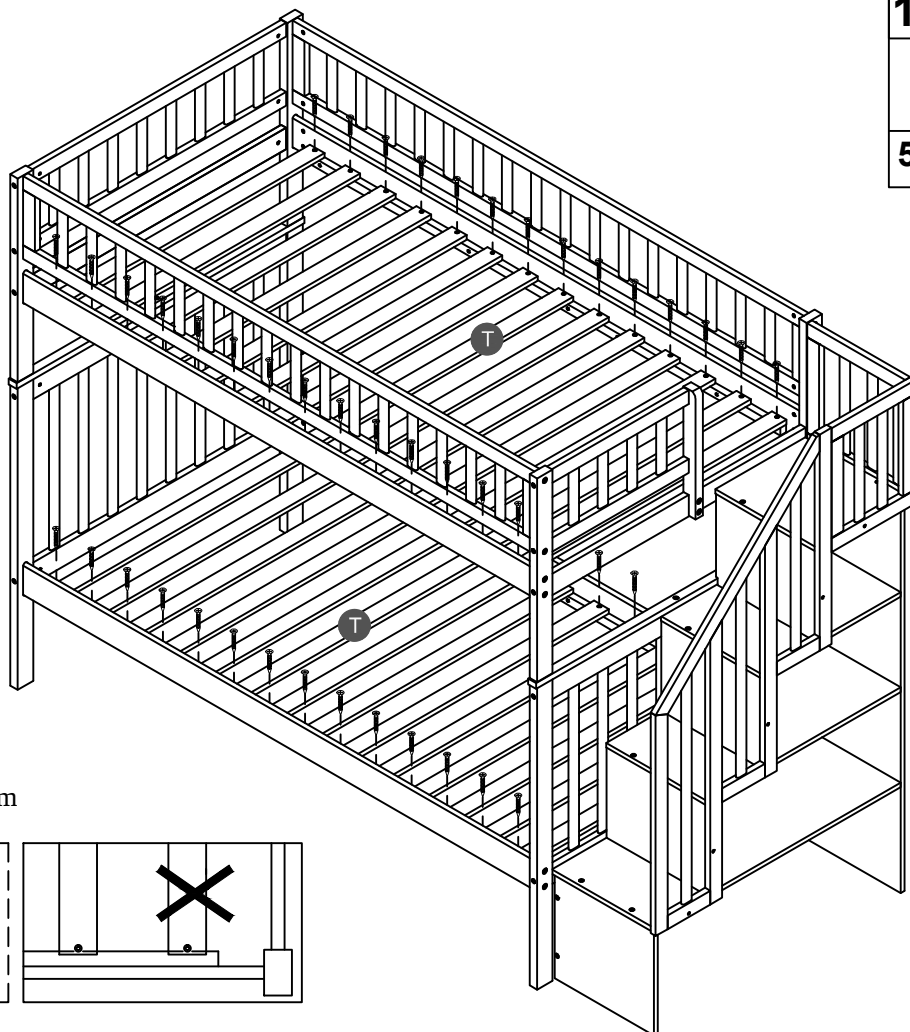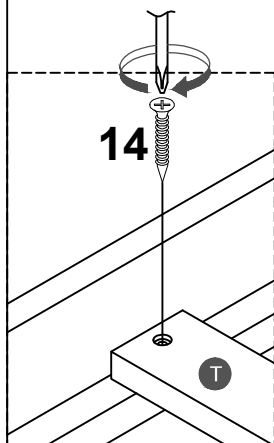14



Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.
Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.

STEP 10:

12

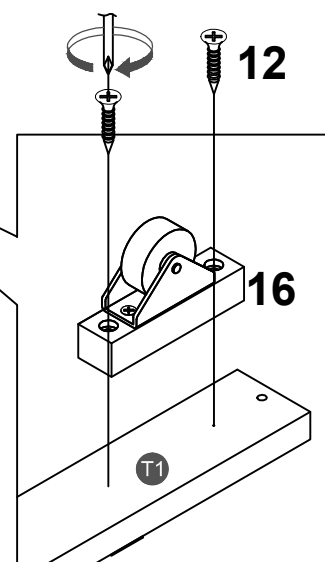
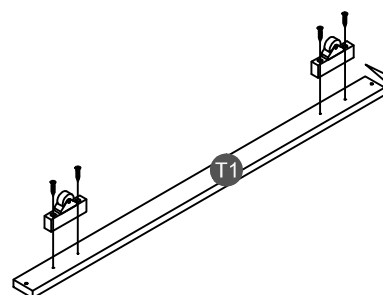
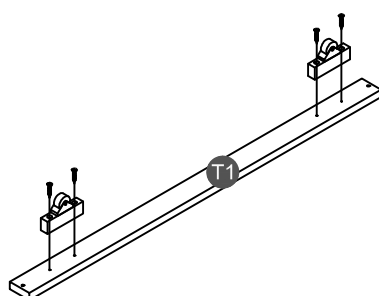


8PCS

16



4PCS




STEP 11:

12



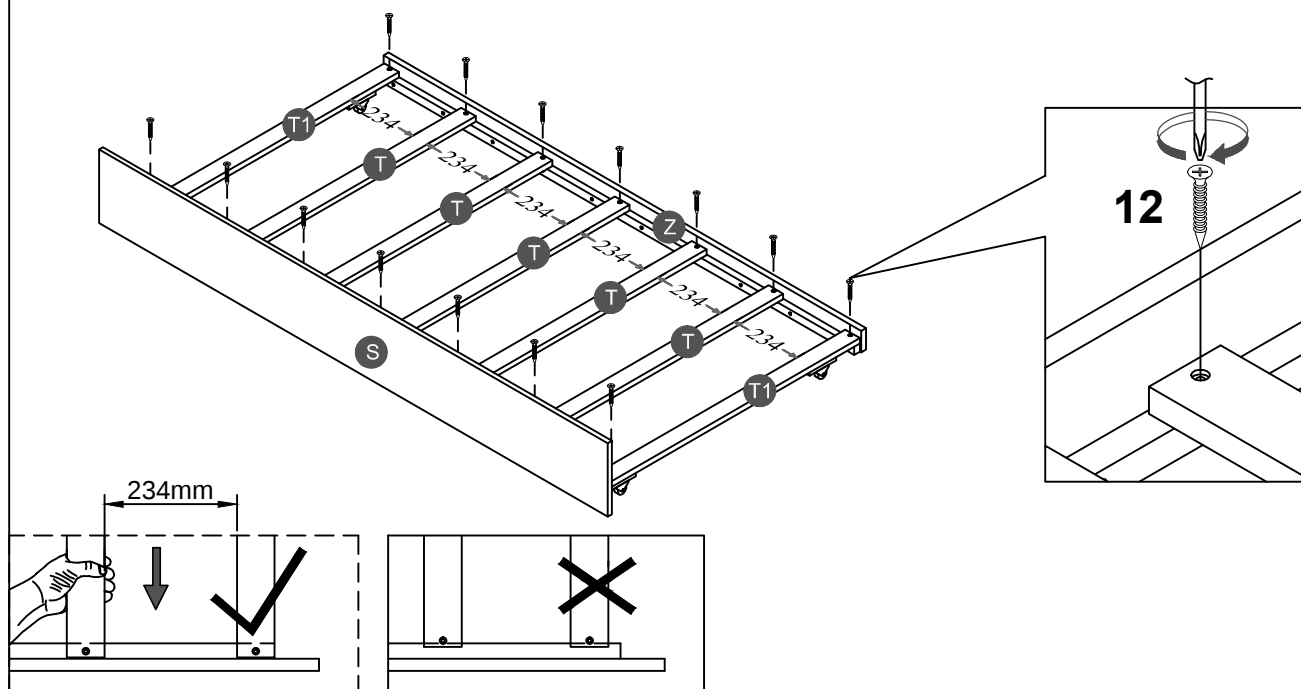14PCS



Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.
Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

STEP 12:

14

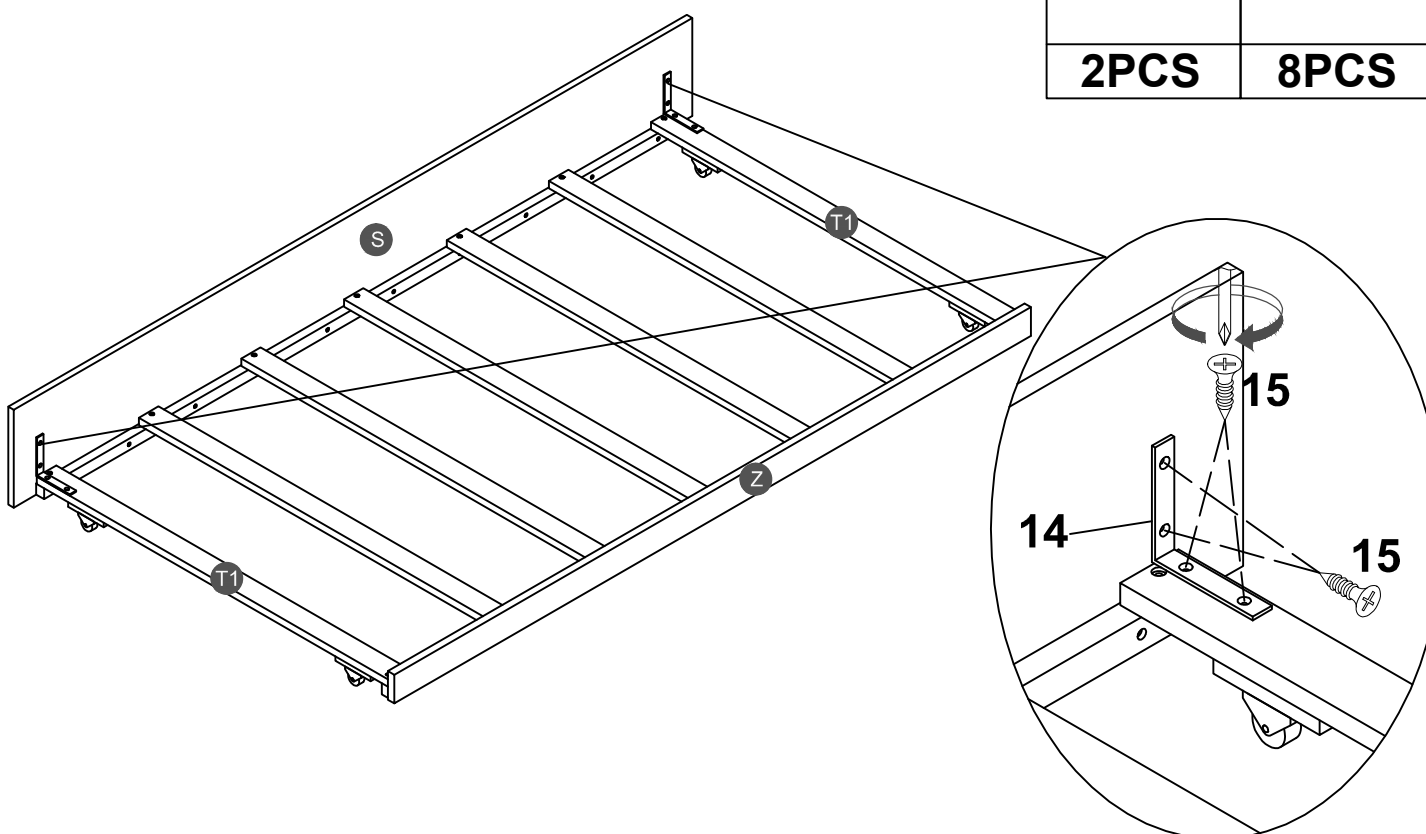


2PCS


15



8PCS



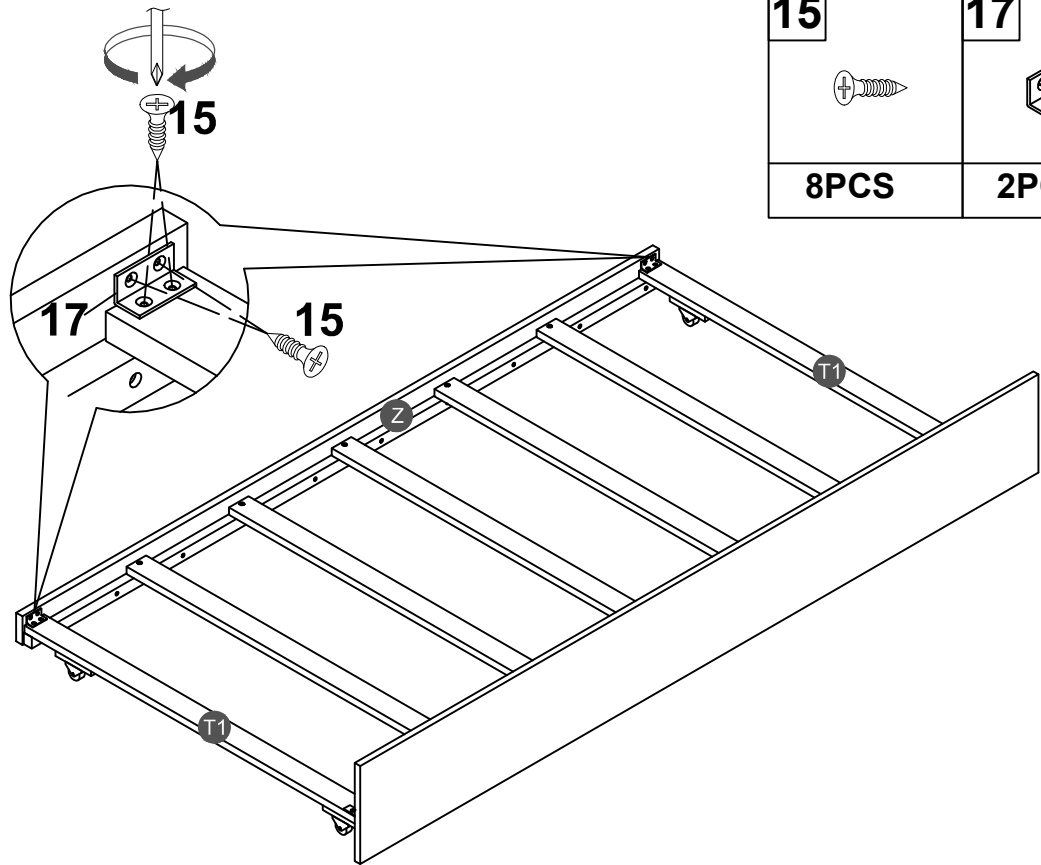STEP 13:



STEP 14:

