


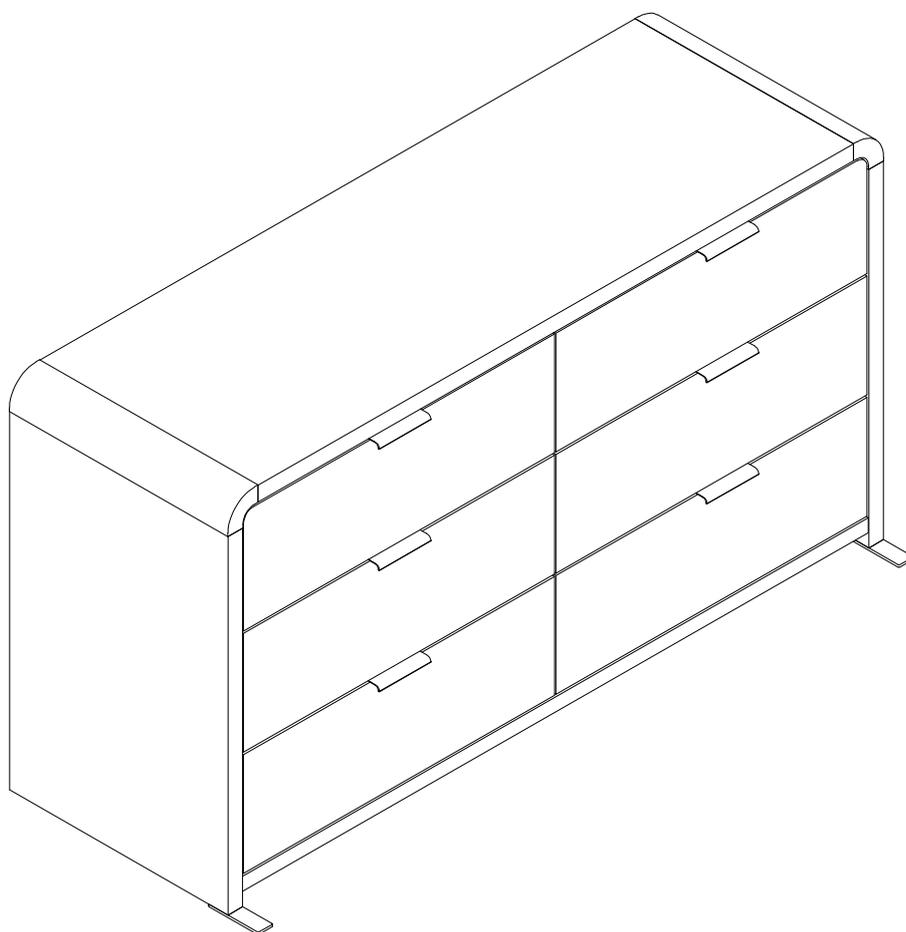

**MANHATTAN
COMFORT**

DR009



V.10102024





STOP!

Before beginning the assembly process, ensure all boxes and parts have been delivered.

FOR BEST RESULTS:

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

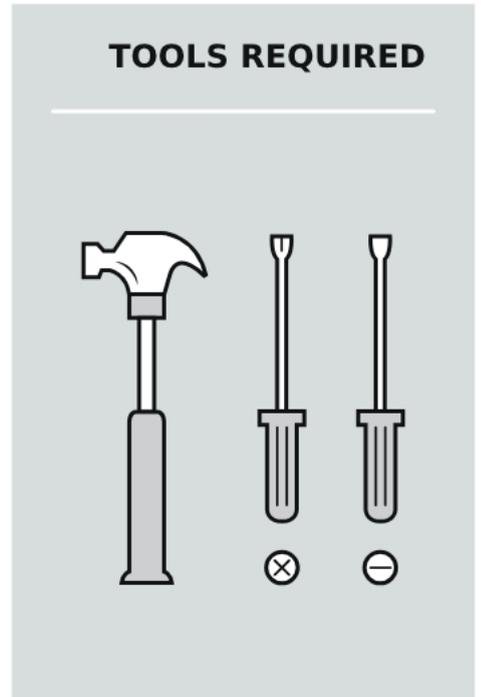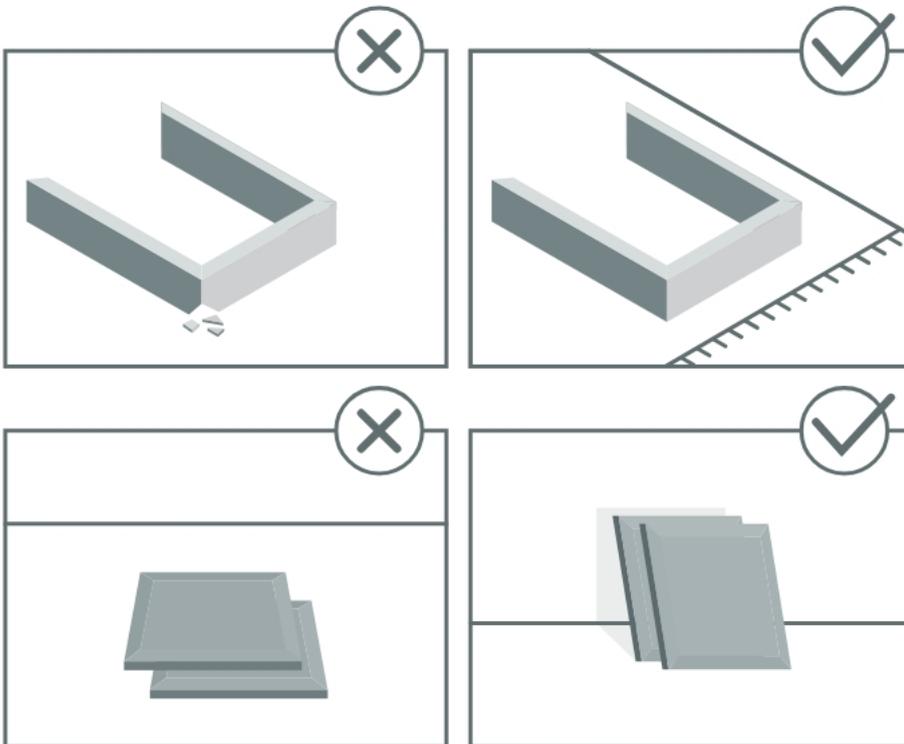

View our assembly video online:
WWW.MANHATTANCOMFORT.COM



Stuck? Question? We are here to help.
tel: **908-888-0818**
e-mail:

Support Site




Included in this package:

BOX 01/02

- B. BETWEEN PANEL(1)
 - C. LEFT PANEL (1)
 - D. RIGHT PANEL (1)
 - F. CURVED PANEL (2)
 - H. HORIZONTAL PANEL (4)
 - P.DRAWER UP LEFT FRONT PANEL(1)
 - Q.DRAWER UP RIGHT FRONT PANEL(1)
 - R.DRAWER MIDDLE LEFT FRONT PANEL(2)
 - S.DRAWER MIDDLE RIGHT FRONT PANEL(2)
- ALL HARDWARE ARE IN BOX 01/02

BOX 02/02

- A. TOP PANEL(1)
- E. LOWER BACK PANEL (1)
- G. UPPER BACK PANEL (1)
- J. DRAWER LEFT PANEL (6)
- K. DRAWER RIGHT PANEL (6)
- L. DRAWER BACK PANEL (6)
- M. DRAWER BOTTOM PANEL (6)
- N. DRAWER SUPPORT PANEL (6)
- O. LOWER FRONT HORIZONTAL PANEL (1)

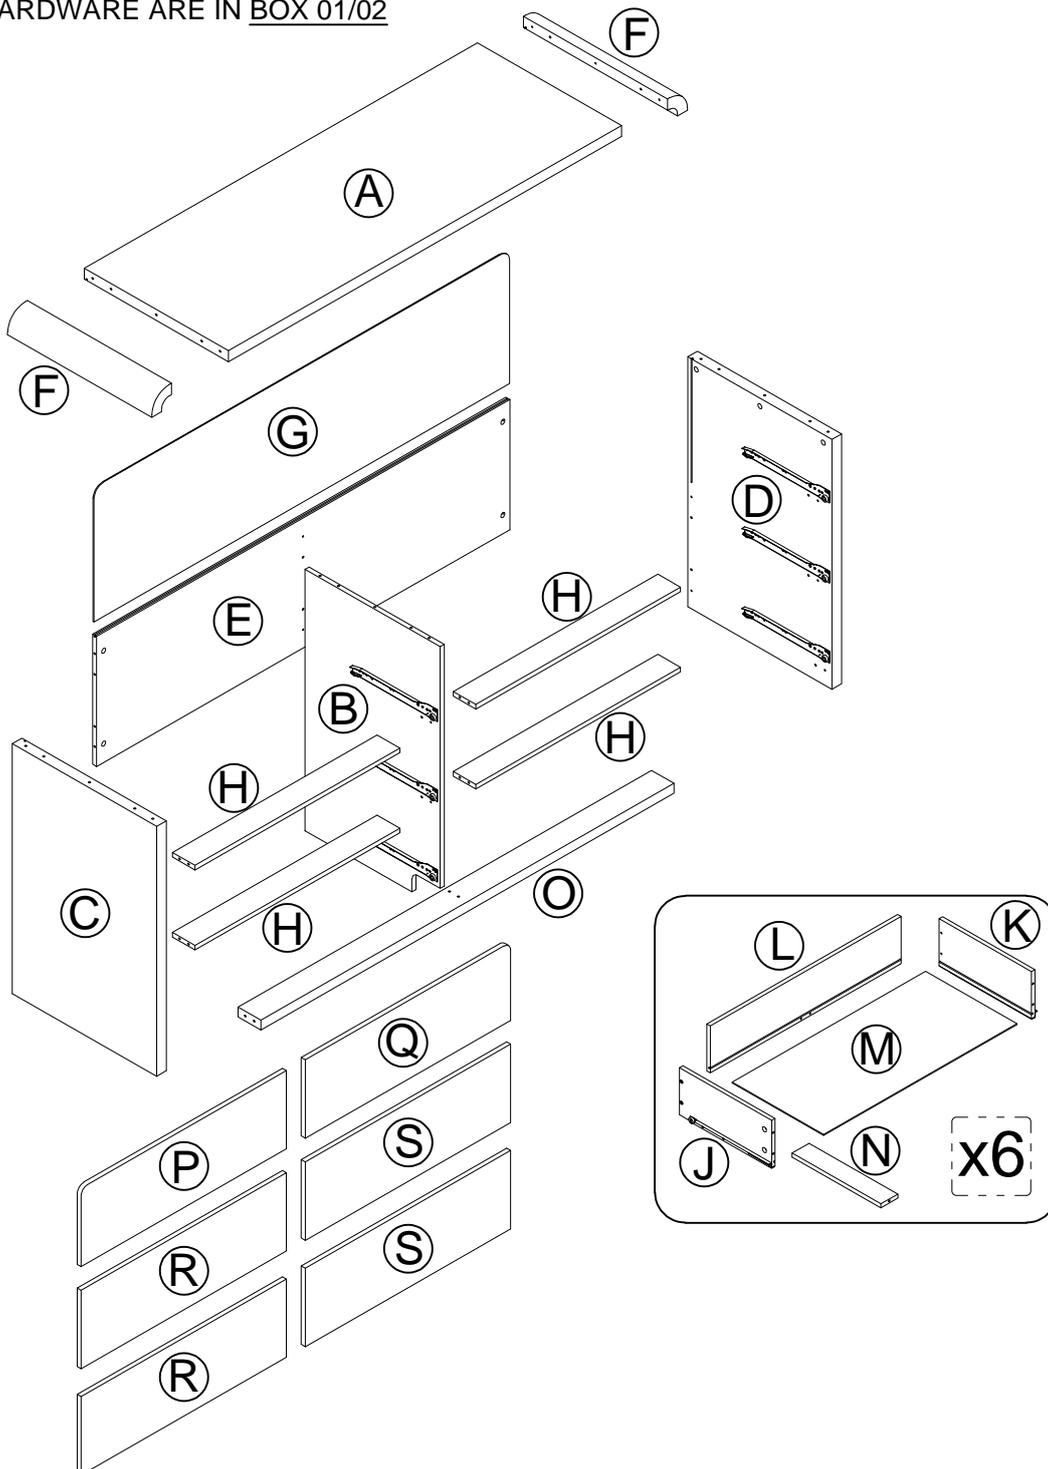


Hardware Identification


- ① KD BOLT - 61pcs
L=35mm




- ② KD LARGE CAM - 31pcs
Ø15*11mm



- ③ COVER CAP - 61pcs




- ④ WOOD DOWEL - 27pcs
Ø8*30mm




- ⑤ KD SMALL CAM - 30pcs
Ø15*9mm




- ⑥ STRAPS - 2pcs

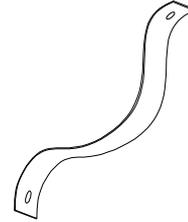

- ⑦ SCREW - 2pcs
Ø4*18mm



- ⑧ SCREW - 2pcs
Ø4*25mm



- ⑨ PLASTIC - 2pcs




- ⑩ LOCK - 1pc



- ⑪ SCREW - 44pcs
Ø4*38mm



- ⑫ BLACK HANDLE-6pcs




- ⑬ SCREW - 12pcs
Ø3.5*12mm




- ⑭ SCREW - 1pc
Ø6*50mm




- ⑮ PLASTIC WEDGE - 8pcs




- ⑯ SCREW - 8pcs
Ø3*17mm




- ⑰ METAL PLATE - 2pcs

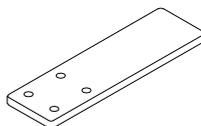



- ⑱ GOLD HANDLE-6pcs



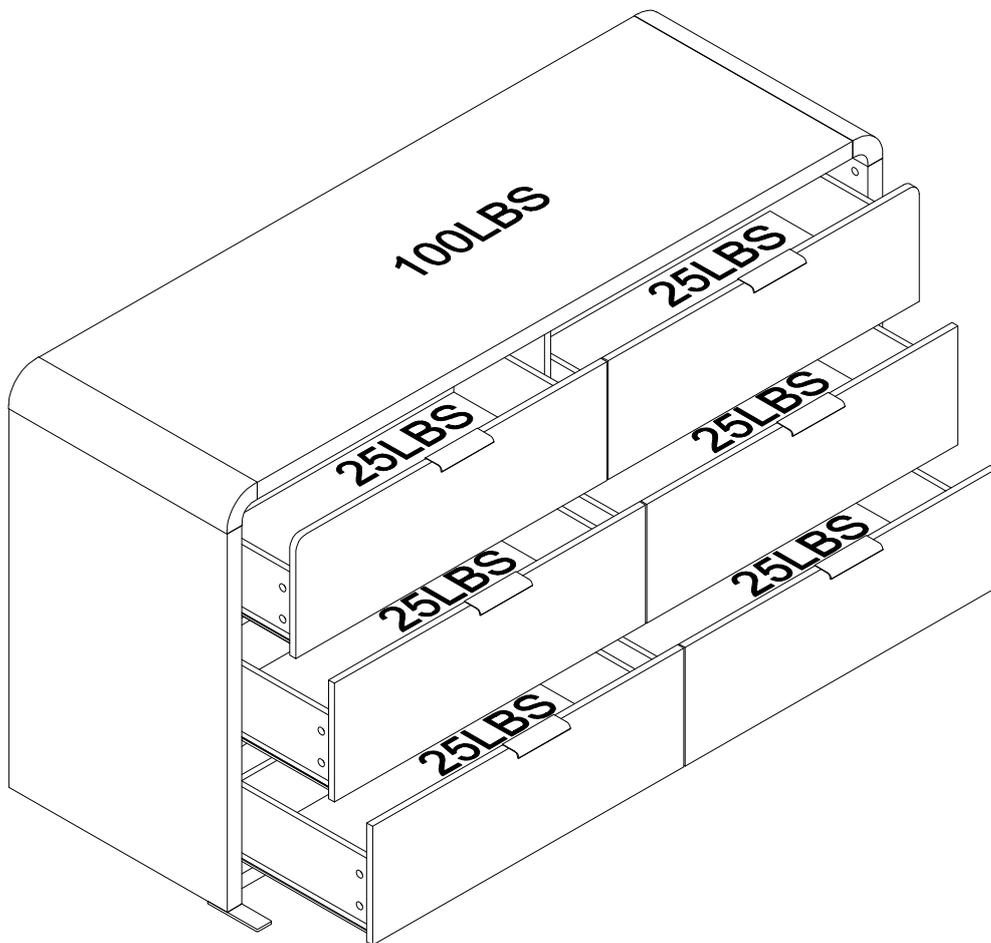


Step 1:

* Insert Fifteen KD BOLT (1) to the TOP PANEL (A) and Two CURVED PANEL(F)

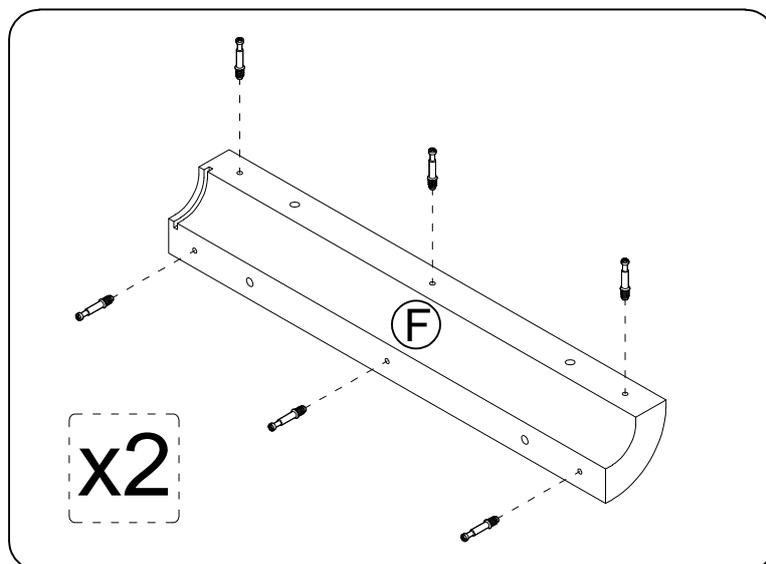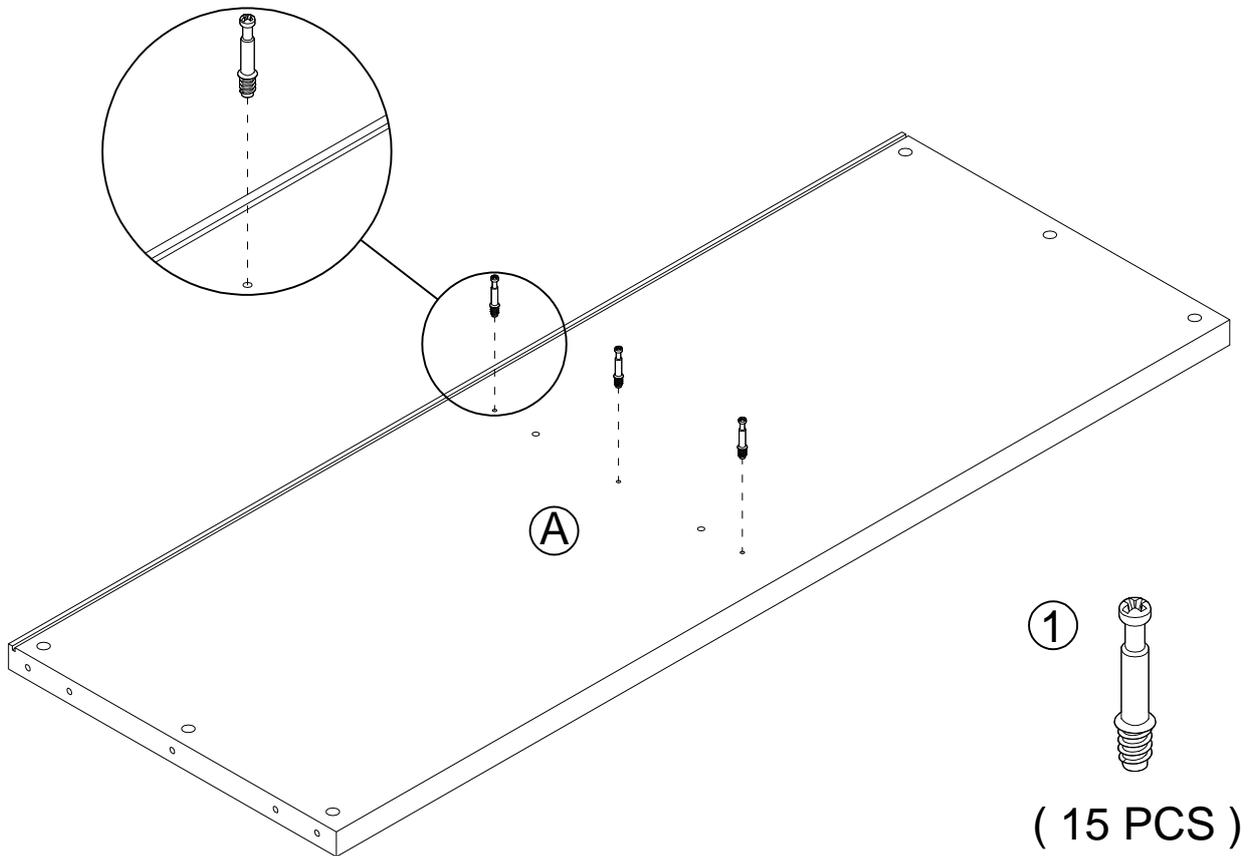



Step 2:

* Insert Ten KD BOLT (1) to the LEFT PANEL (C) and RIGHT PANEL(D).

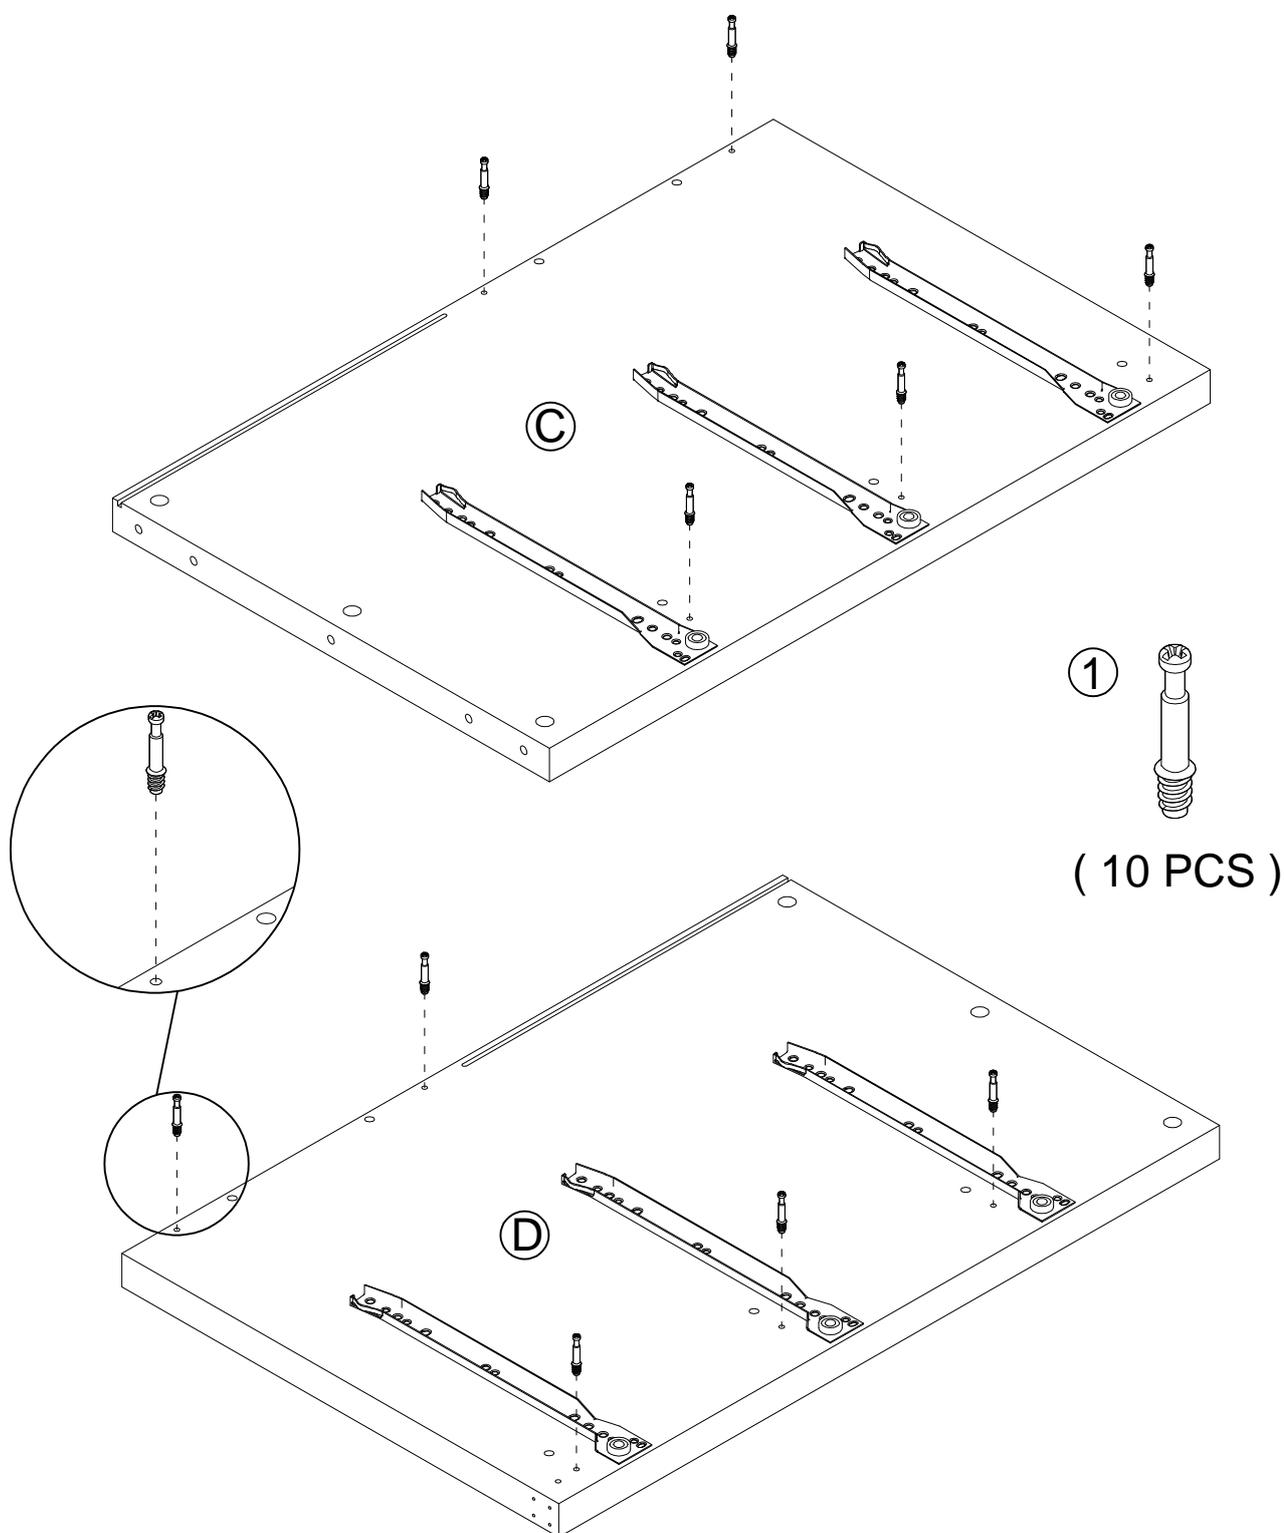

Step 3:



* Insert Four KD BOLT (1) to the both side of BETWEEN PANEL (B).

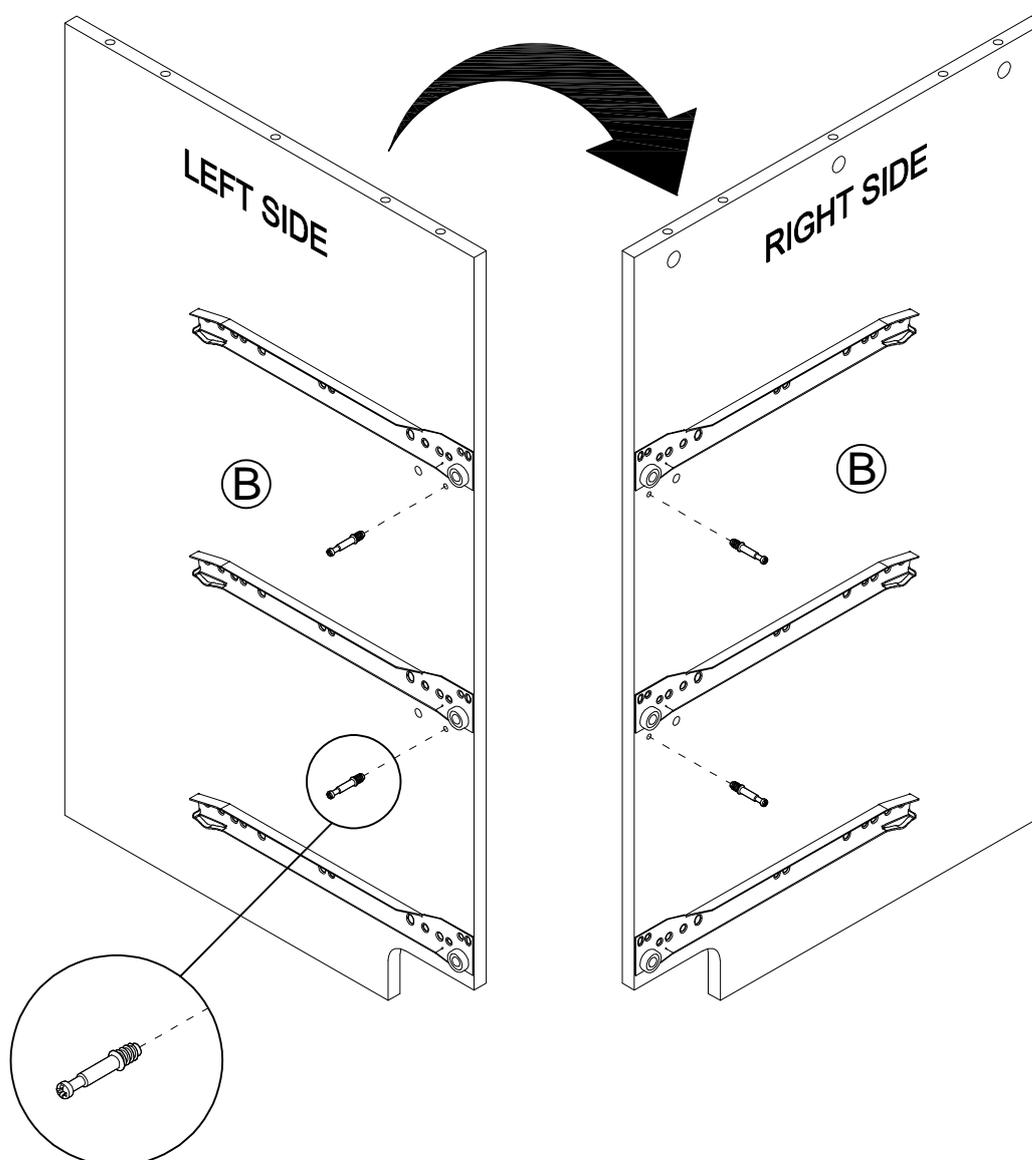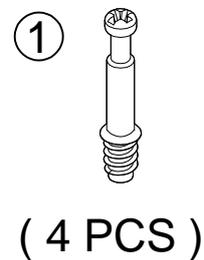

Step 4:


* Insert Two KD BOLT (1) to the LOWER BACK PANEL (E).

* Attach the BETWEEN PANEL (B) to the LOWER BACK PANEL (E) by the Two KD LARGE CAM (2) , Two COVER CAP (3) and Two WOOD DOWEL (4) .

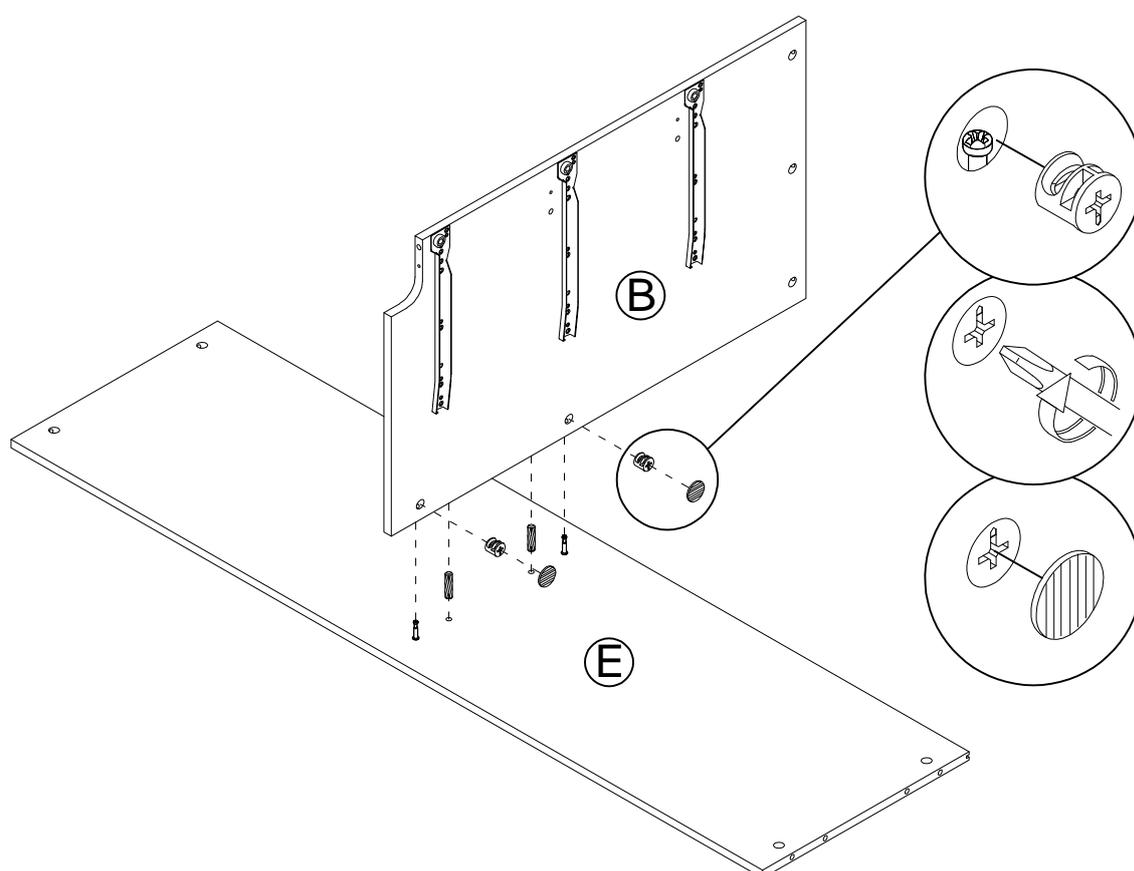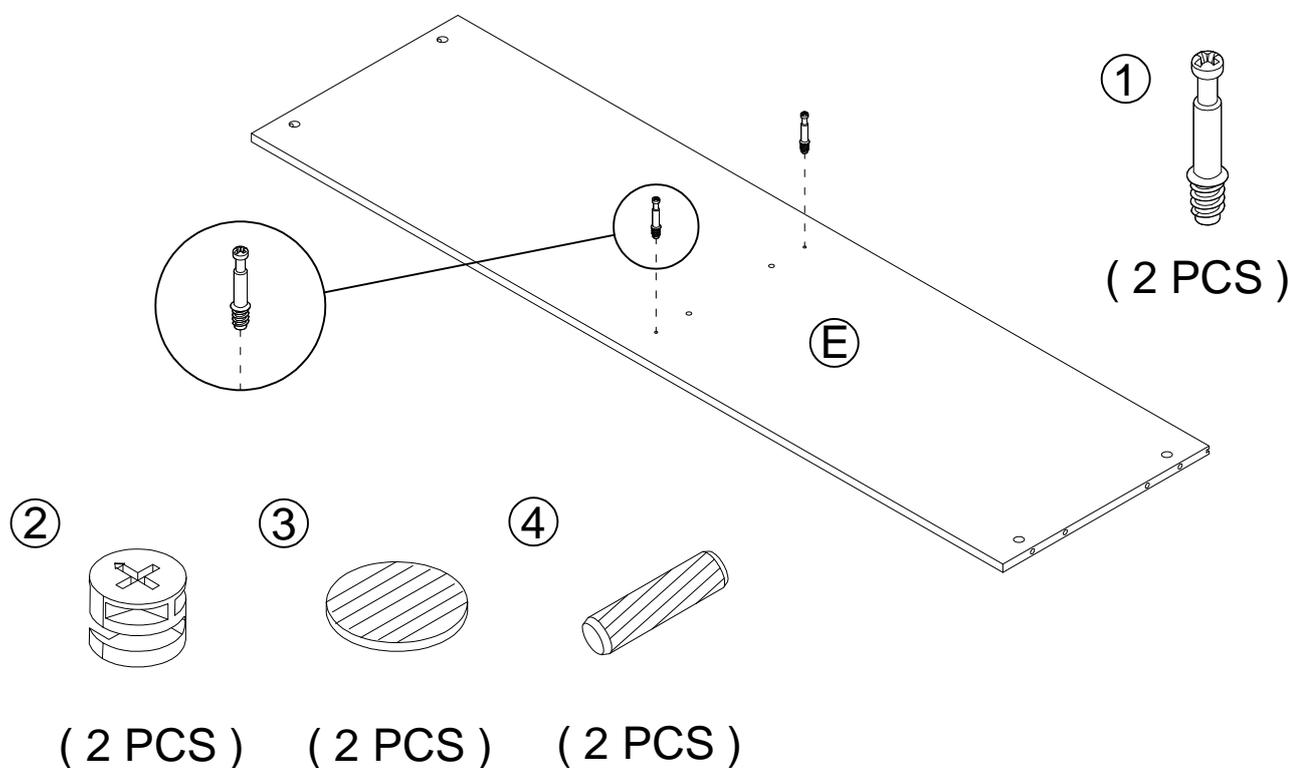

Step 5:


* Attach the HORIZONTAL PANEL(H) to the BETWEEN PANEL (B) by the Two KD LARGE CAM (2) , Two COVER CAP (3) and Two WOOD DOWEL (4) .

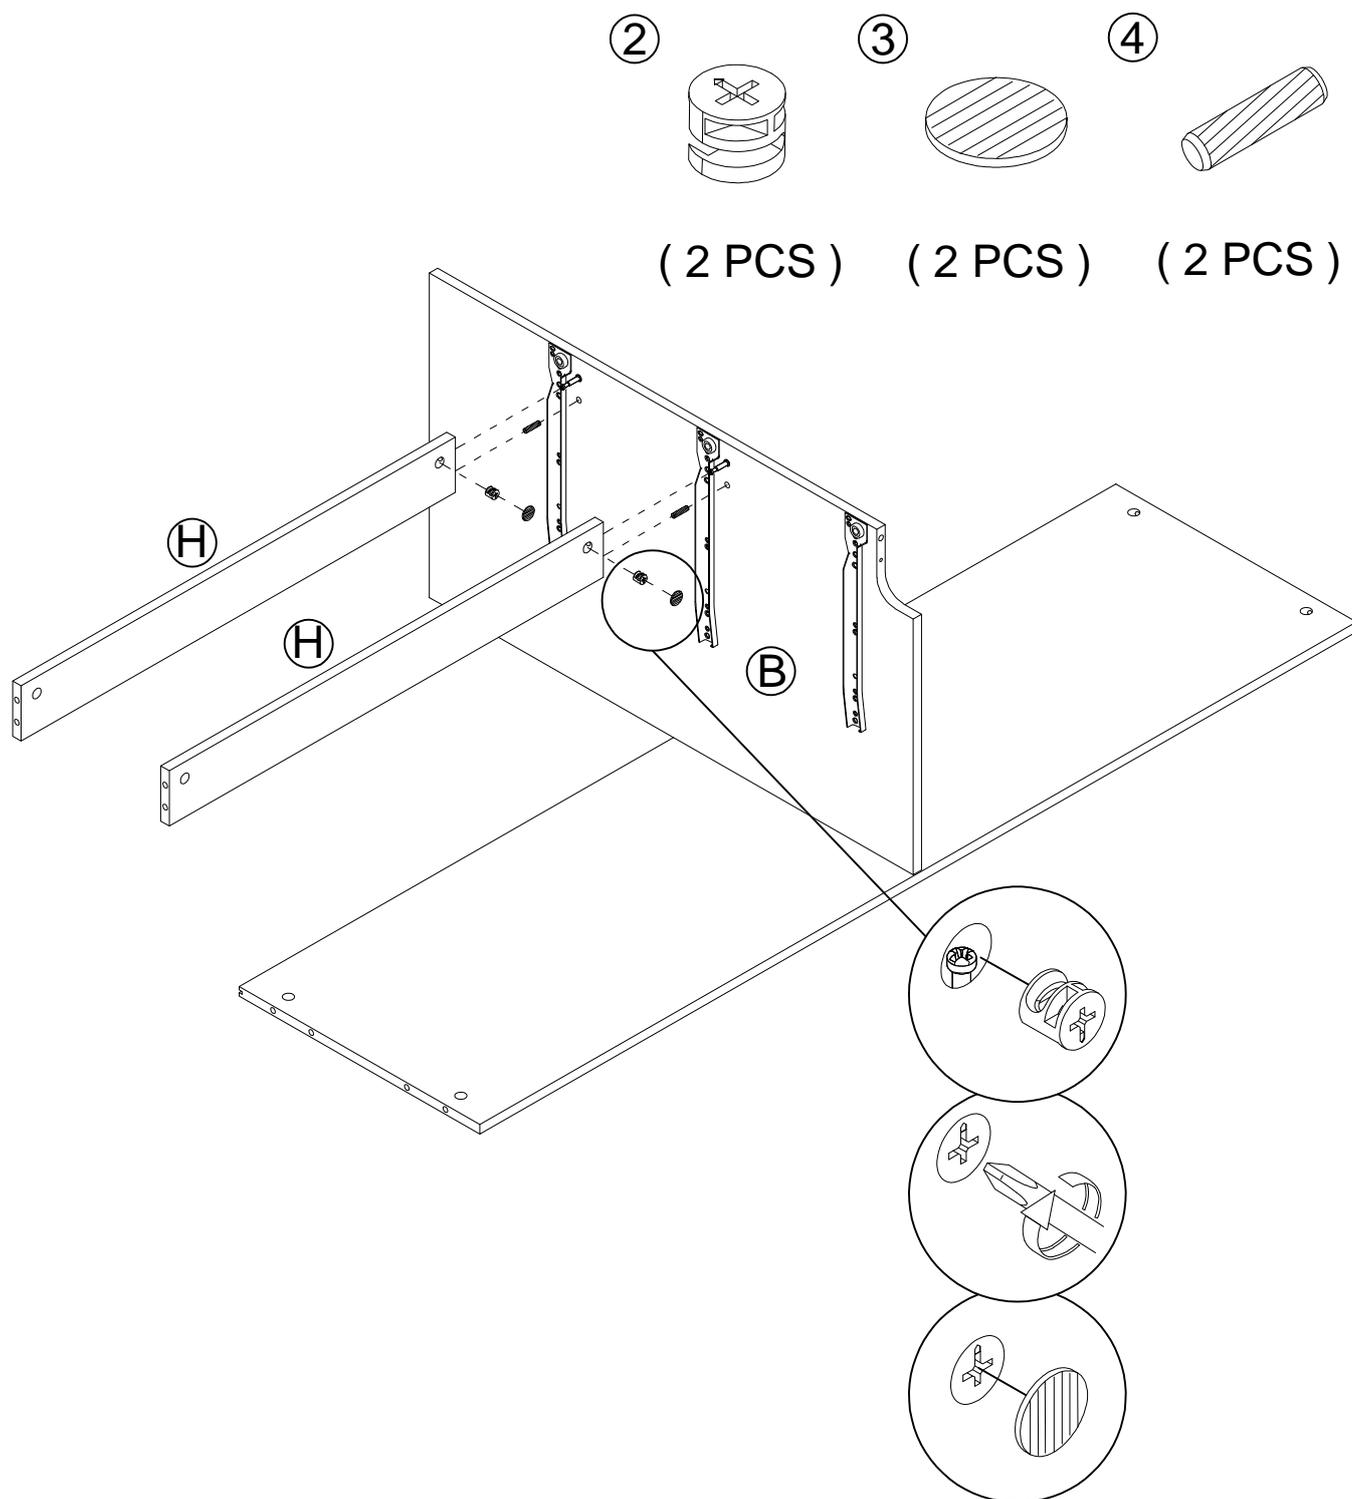

Step 7:


* Attach the LEFT PANEL(C) to the Two HORIZONTAL PANEL(H), LOWER FRONT HORIZONTAL PANEL(O) and LOWER BACK PANEL(E) by the Five KD LARGE CAM (2) , Five COVER CAP (3) and Five WOOD DOWEL (4) .

②




(5 PCS)

③




(5 PCS)

④




(5 PCS)

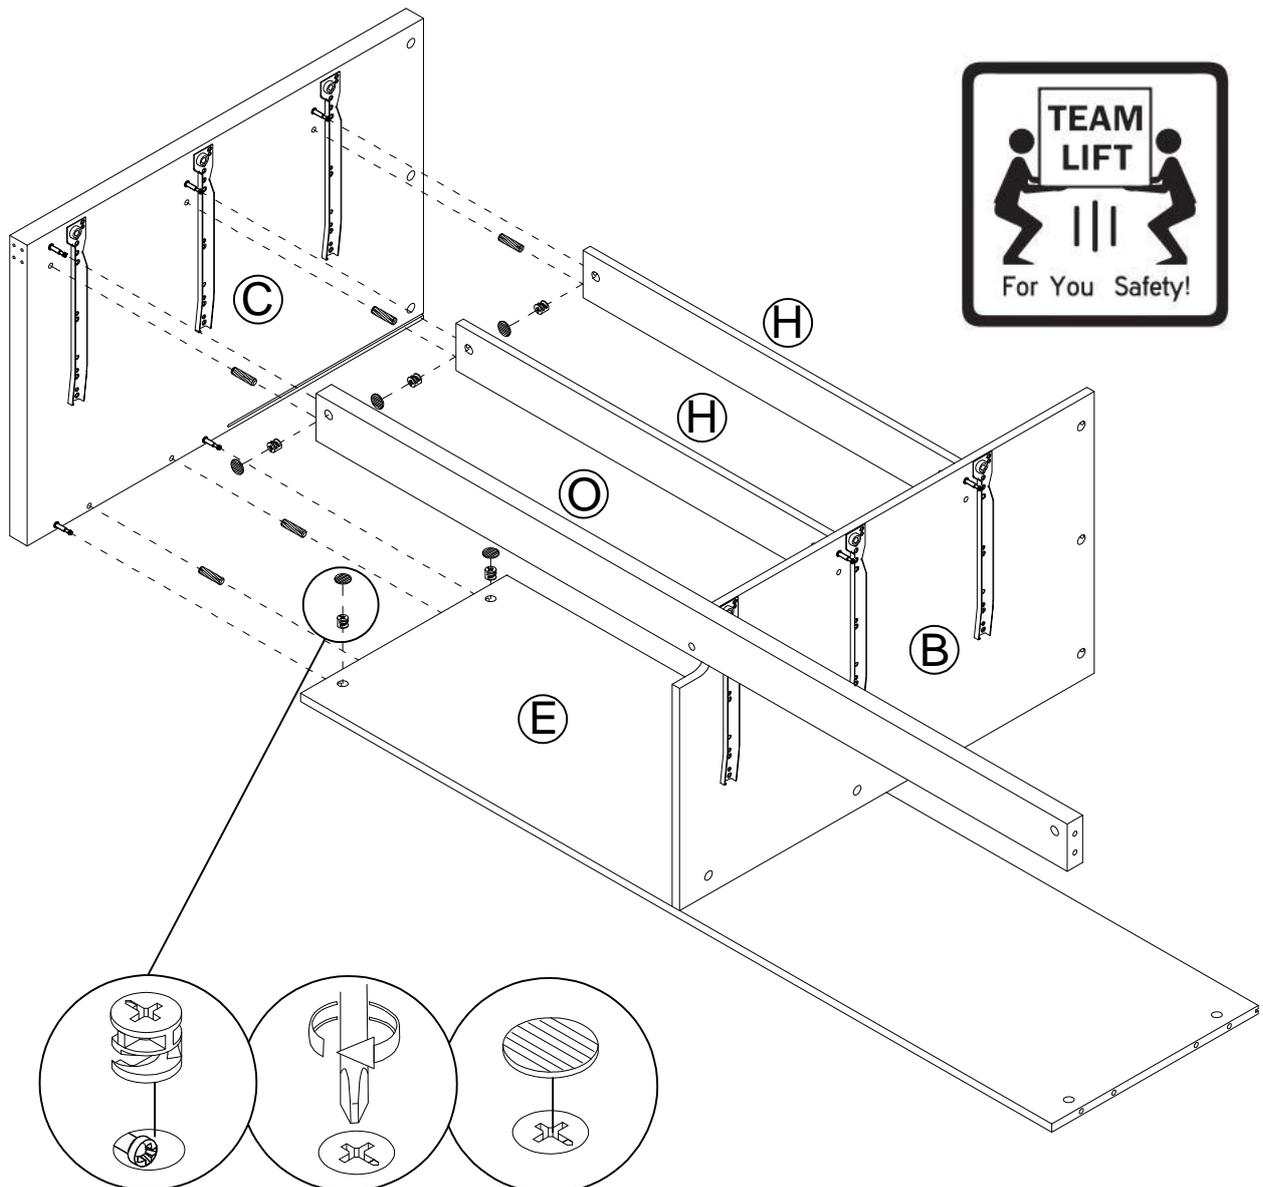



Step 8:

* Attach the Two HORIZONTAL PANEL(H) to the BETWEEN PANEL (B) by the Two KD LARGE CAM (2) , Two COVER CAP (3) and Two WOOD DOWEL (4) .

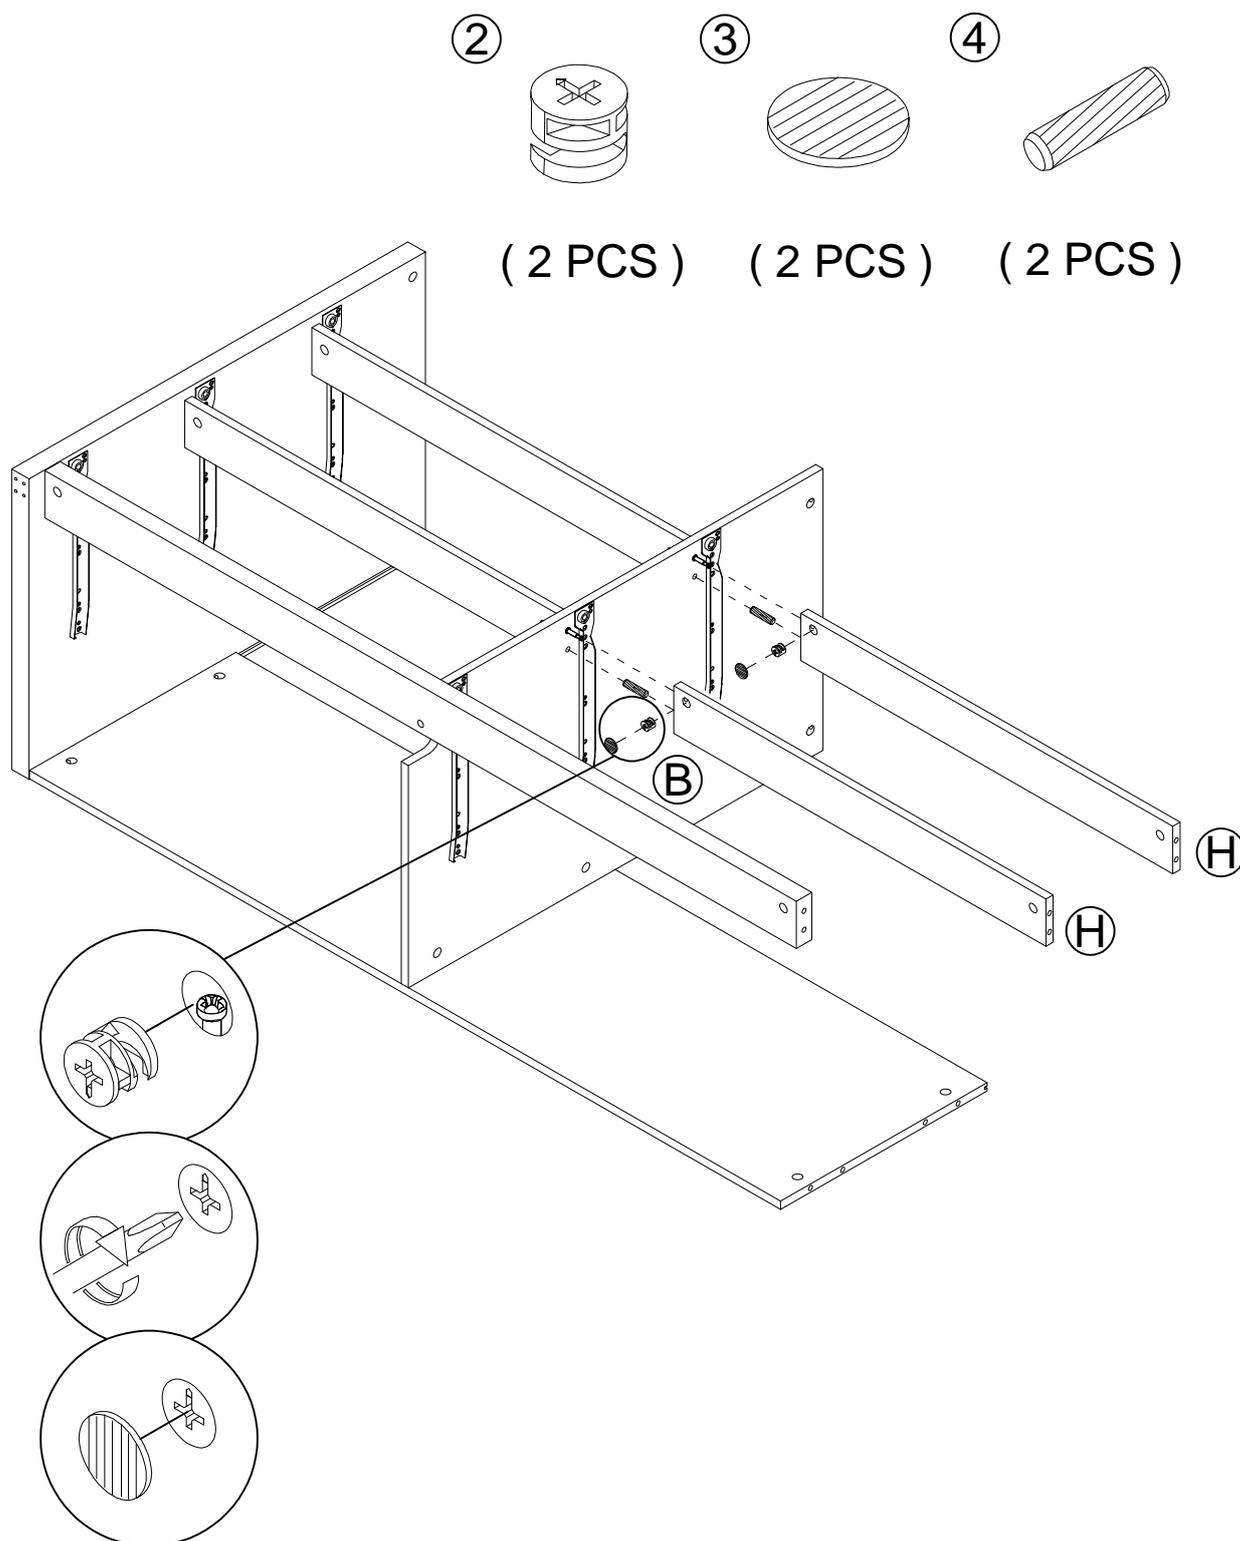


Step 9:

* Attach the RIGHT PANEL(D) to the Two HORIZONTAL PANEL(H), LOWER FRONT HORIZONTAL PANEL(O) and LOWER BACK PANEL(E) by the Five KD LARGE CAM (2) , Five COVER CAP (3) and Five WOOD DOWEL (4) .

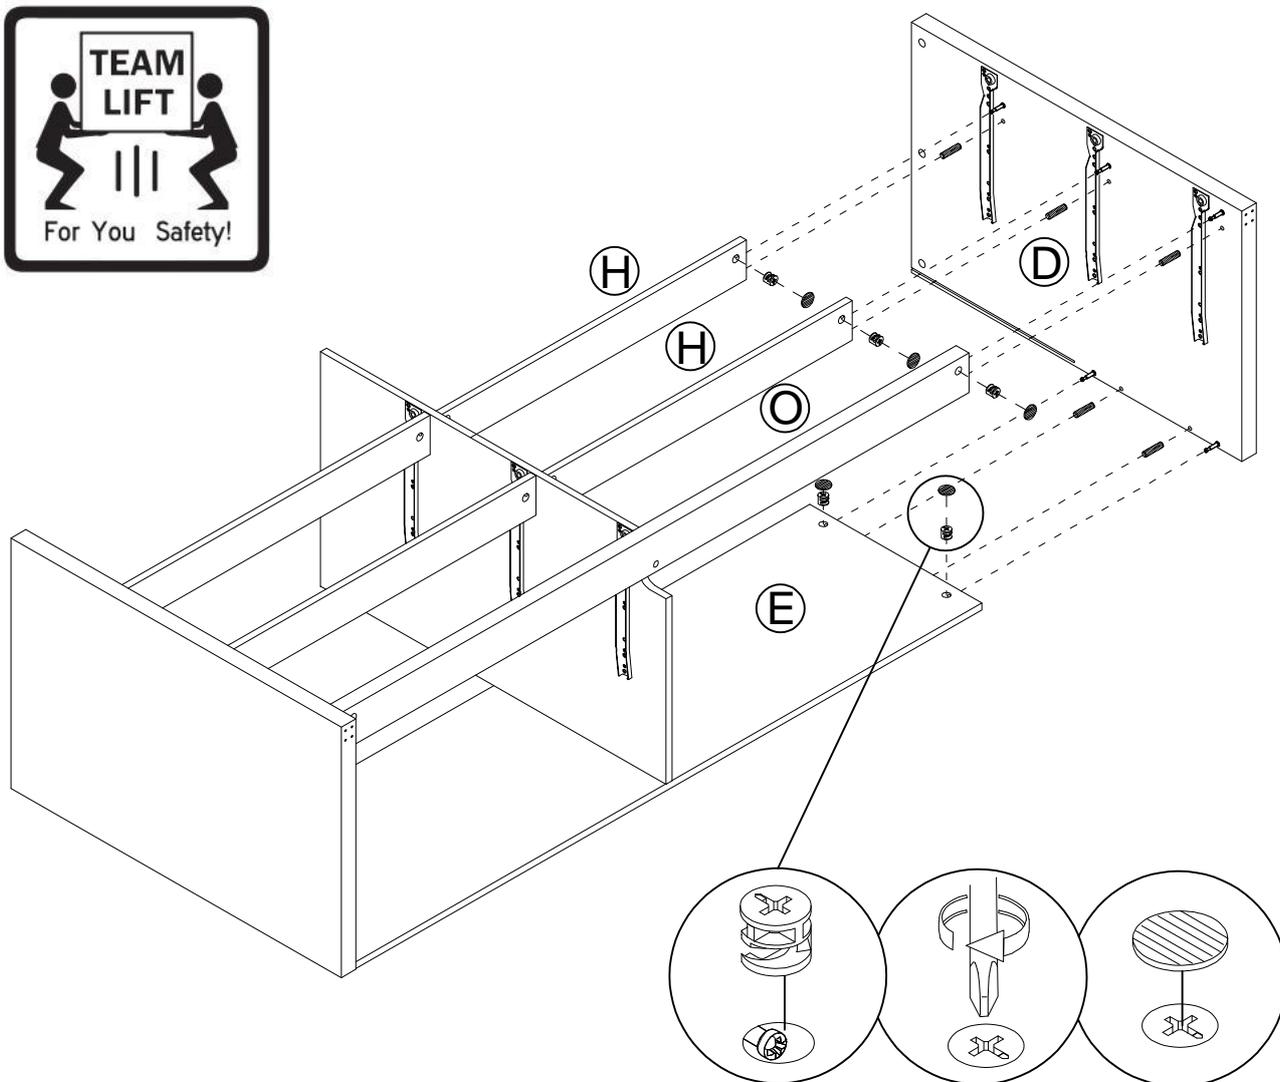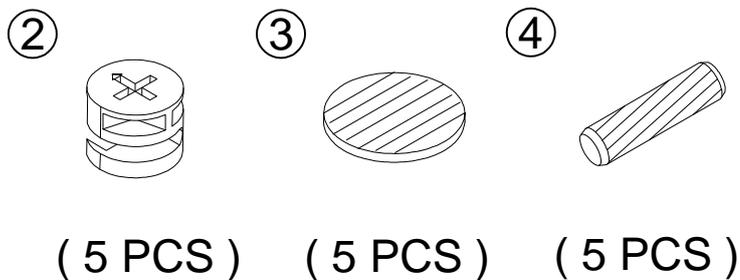

Step 10:


* Insert the UPPER BACK PANEL (G) to the stand.

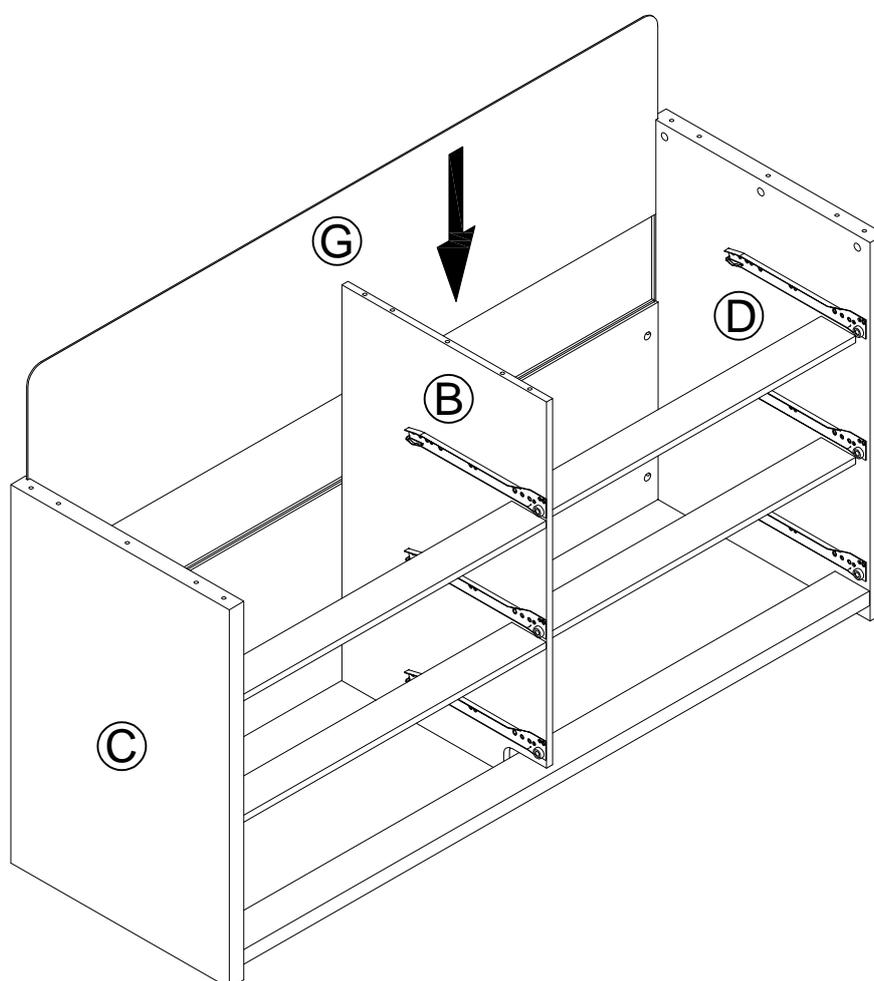

Step 11:


* Attach the Two CURVED PANEL(F) to the TOP PANEL(A) by the Six KD LARGE CAM (2) , Six COVER CAP (3) and Four WOOD DOWEL (4) .

②




(6 PCS)

③




(6 PCS)

④




(4 PCS)

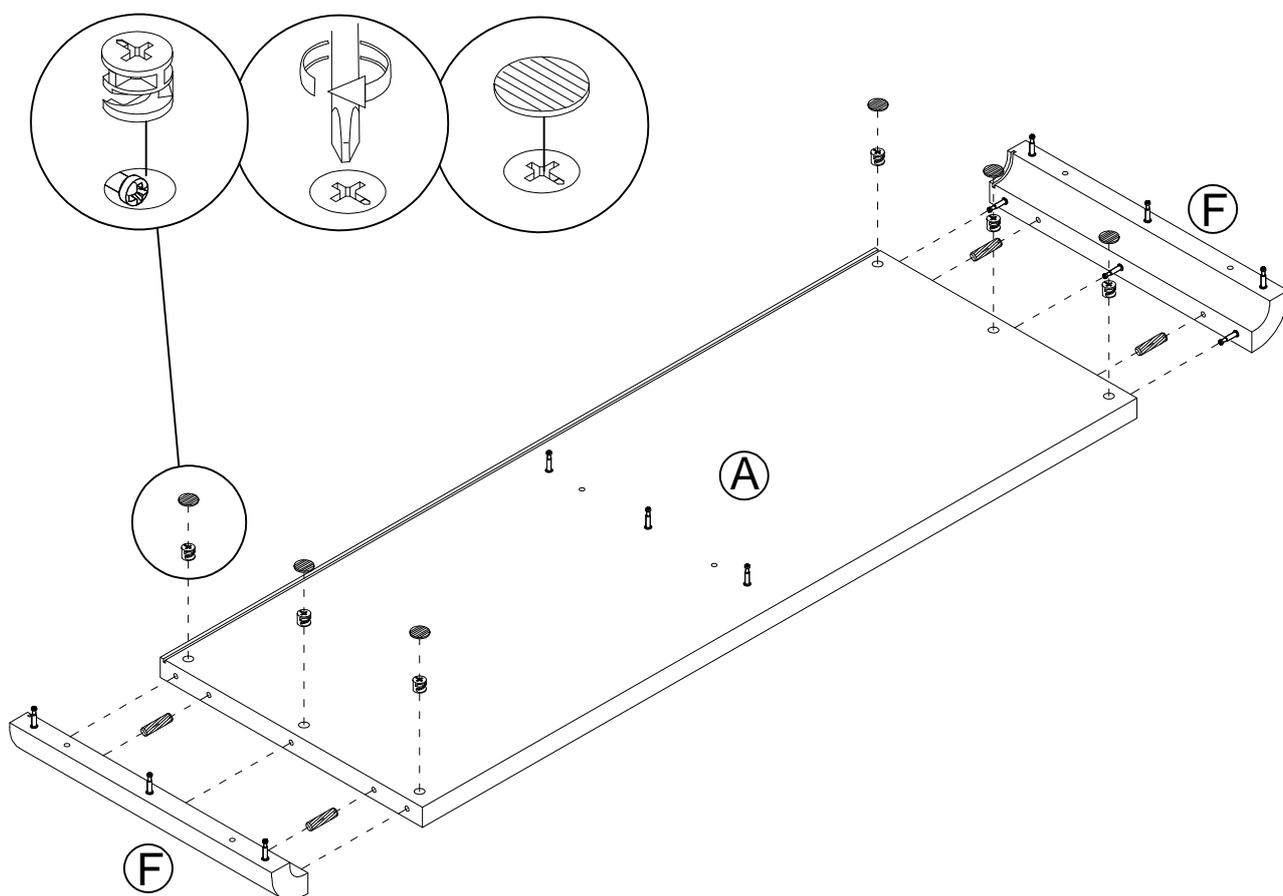

Step 12:


* Attach the Two CURVED PANEL(F) to the LEFT PANEL(C), BETWEEN PANEL(B) and RIGHT PANEL(D) by the Nine KD LARGE CAM (2) , Nine COVER CAP (3) and Six WOOD DOWEL (4) .

②




(9 PCS)

③





(9 PCS)

④




(6 PCS)

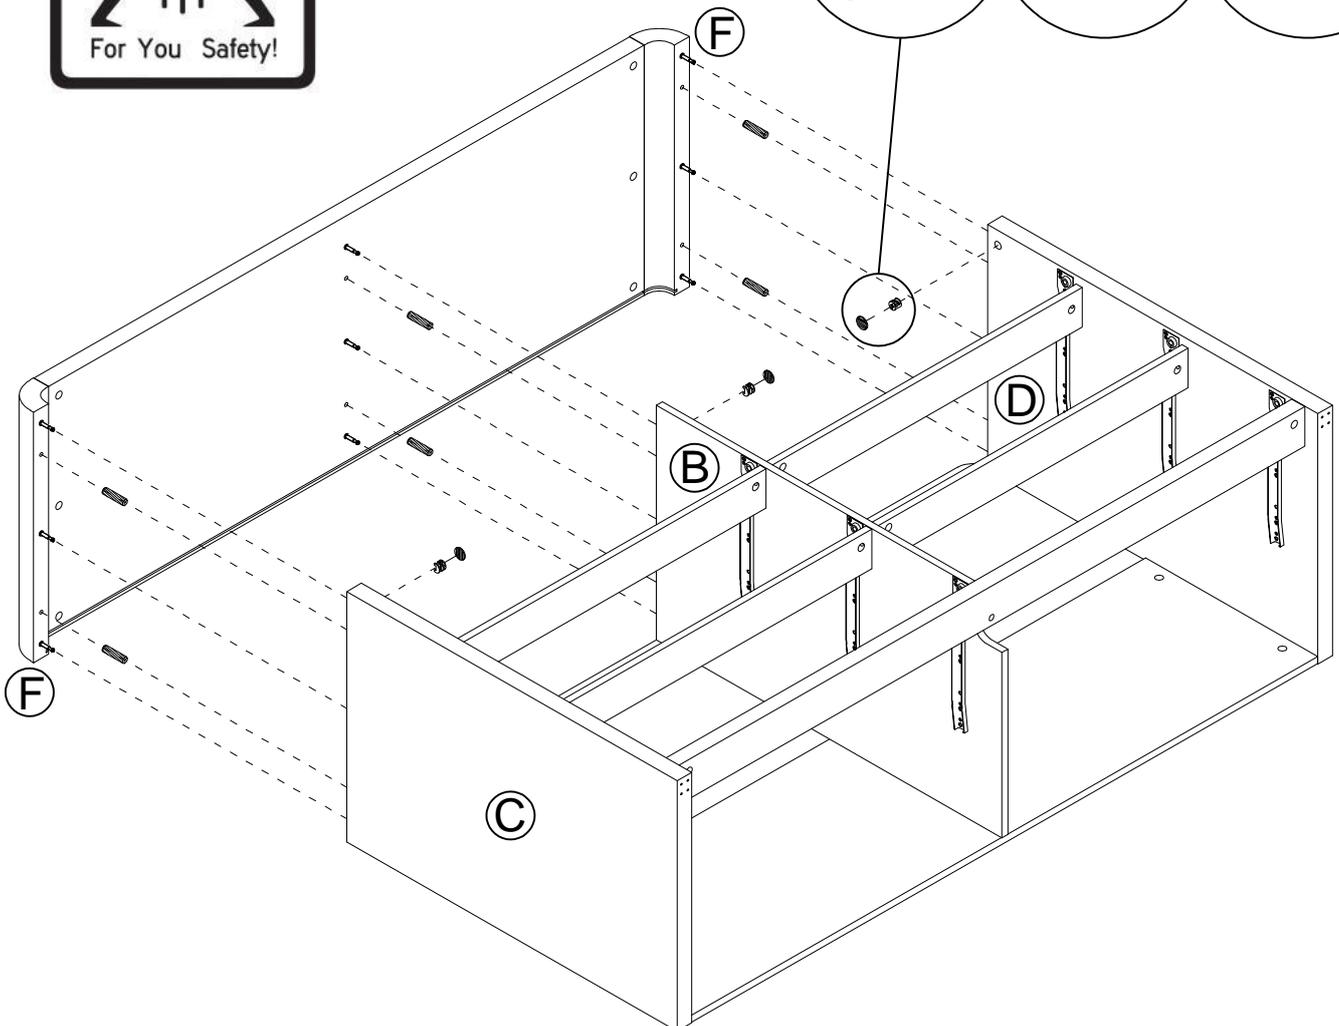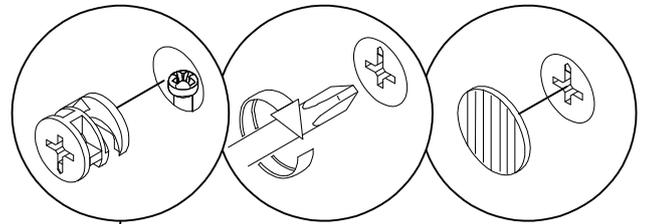


Step 13:

* Attach the Two METAL PLATE(17) to the LEFT PANEL (C) and RIGHT PANEL(D) by the SCREW (11).

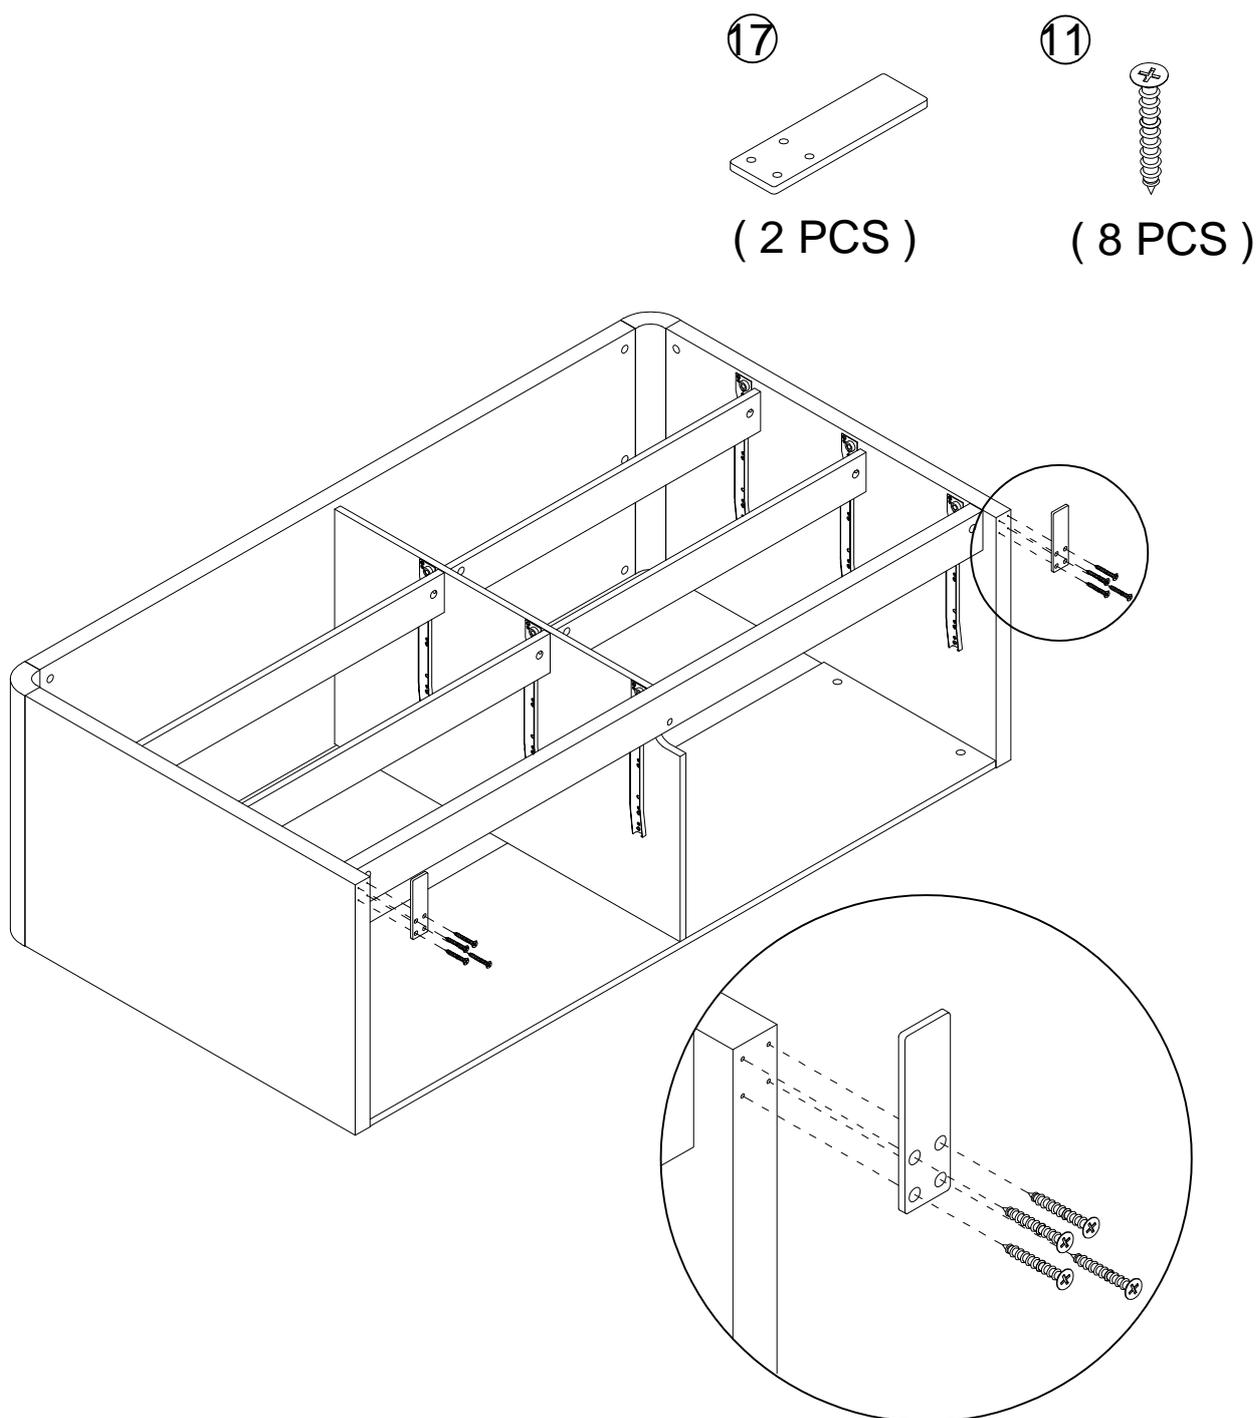



Step 14:

* Assemble the DRAWER BACK PANEL(L) to the DRAWER LEFT PANEL (J) and DRAWER RIGHT PANEL (K) by the SCREW (11) .

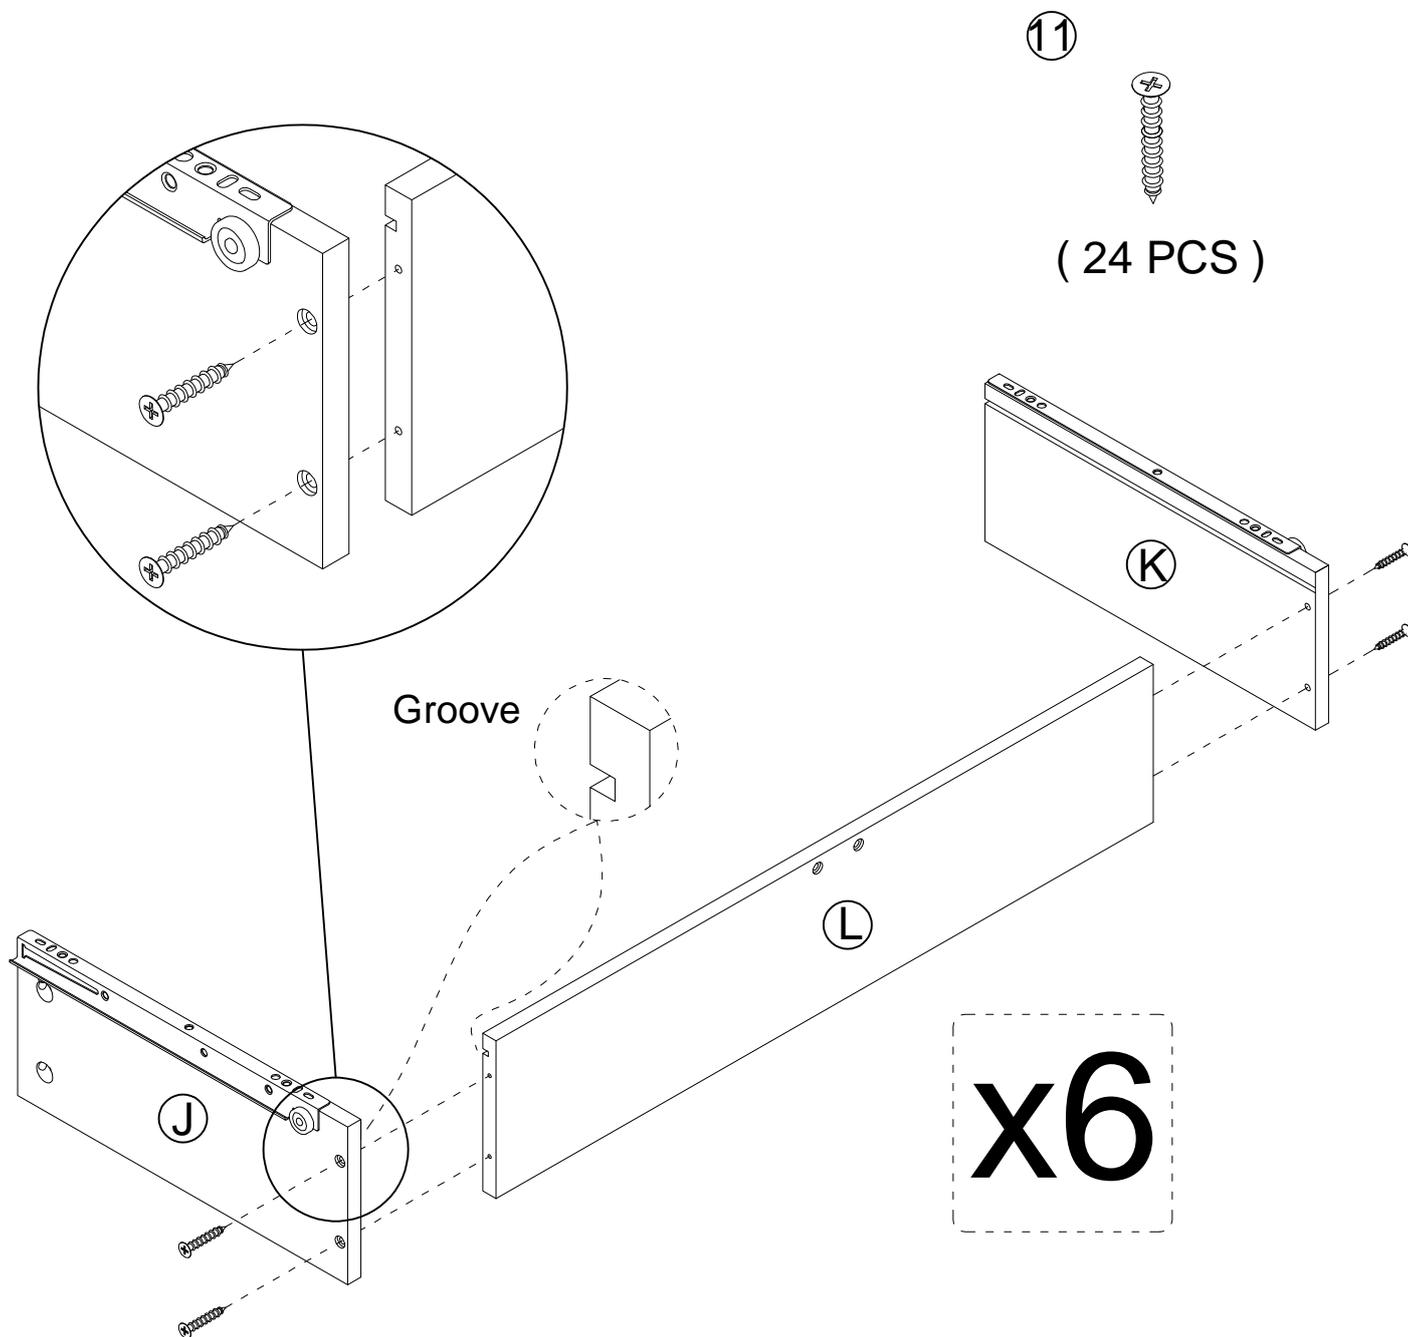

Step 15:


- * Slide in the DRAWER BOTTOM PANEL (M).
- * Assemble the DRAWER SUPPORT PANEL (N) to the DRAWER TRAY by the SCREW (11) .

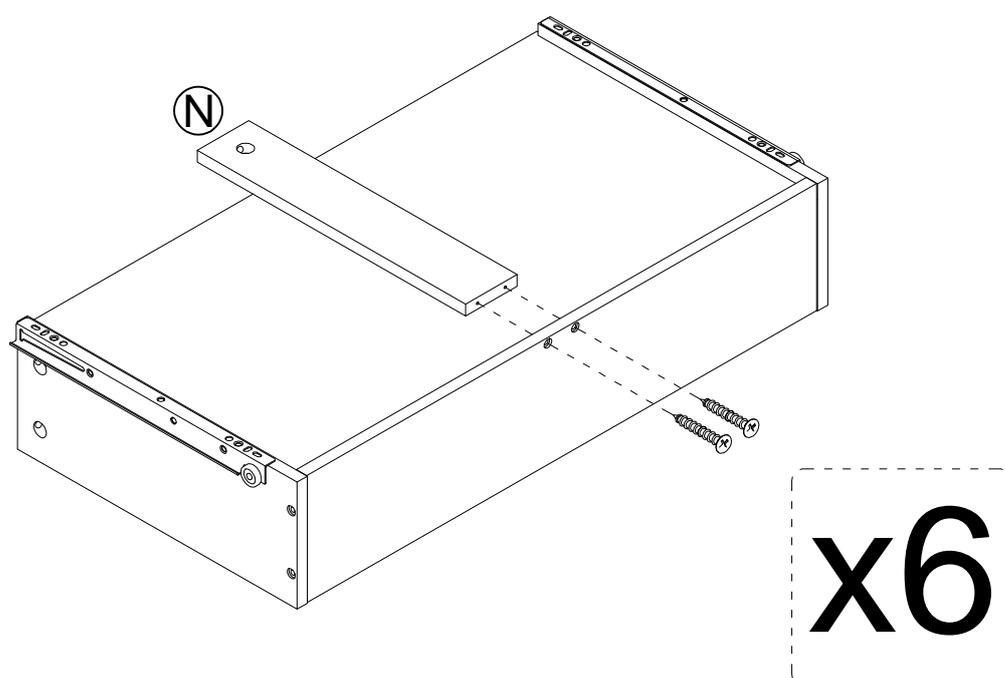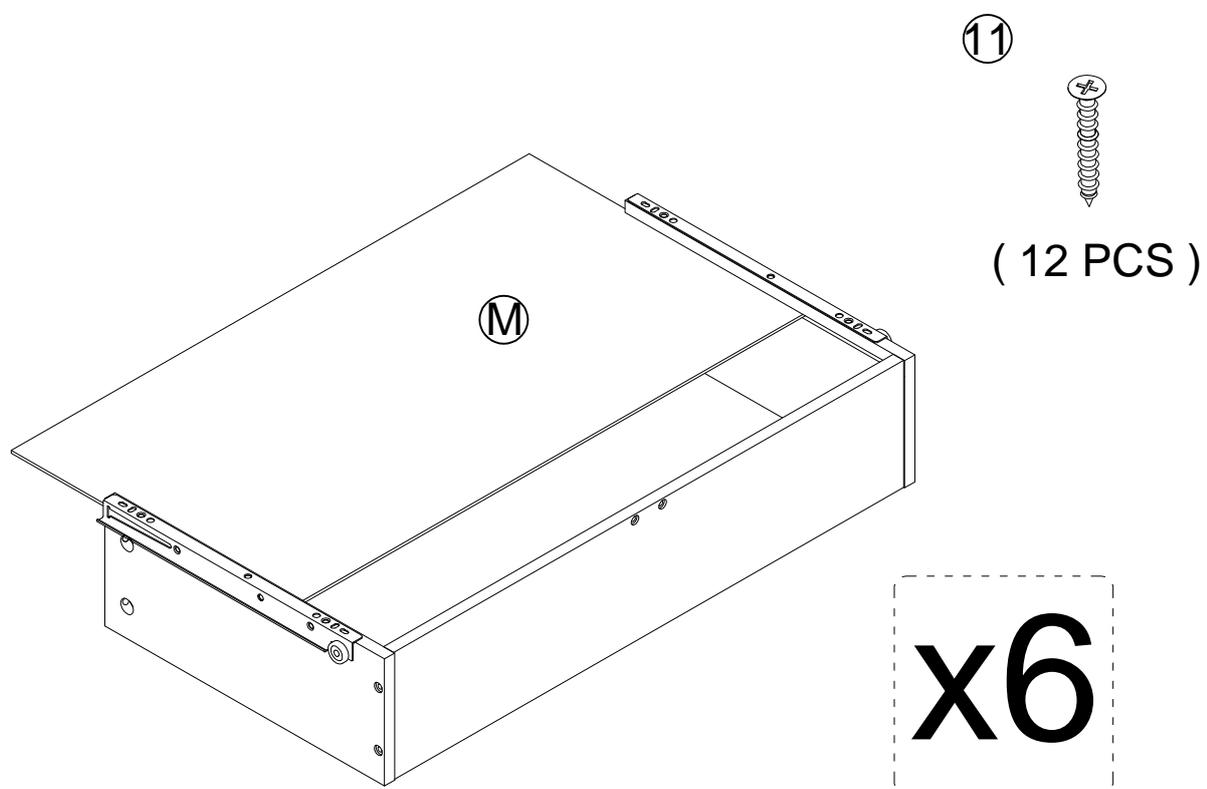

Step 16:


* Insert Ten KD BOLT (1) to the DRAWER UP LEFT FRONT PANEL (P) and DRAWER UP RIGHT FRONT PANEL (Q).

* Attach the Two BLACK HANDLE(12) or Two GOLD HANDLE(18) to the DRAWER UP LEFT FRONT PANEL (P) and DRAWER UP RIGHT FRONT PANEL (Q) by the SCREW (13).

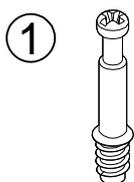


(10 PCS)

12



(2 PCS)

18




(2 PCS)

13




(4 PCS)

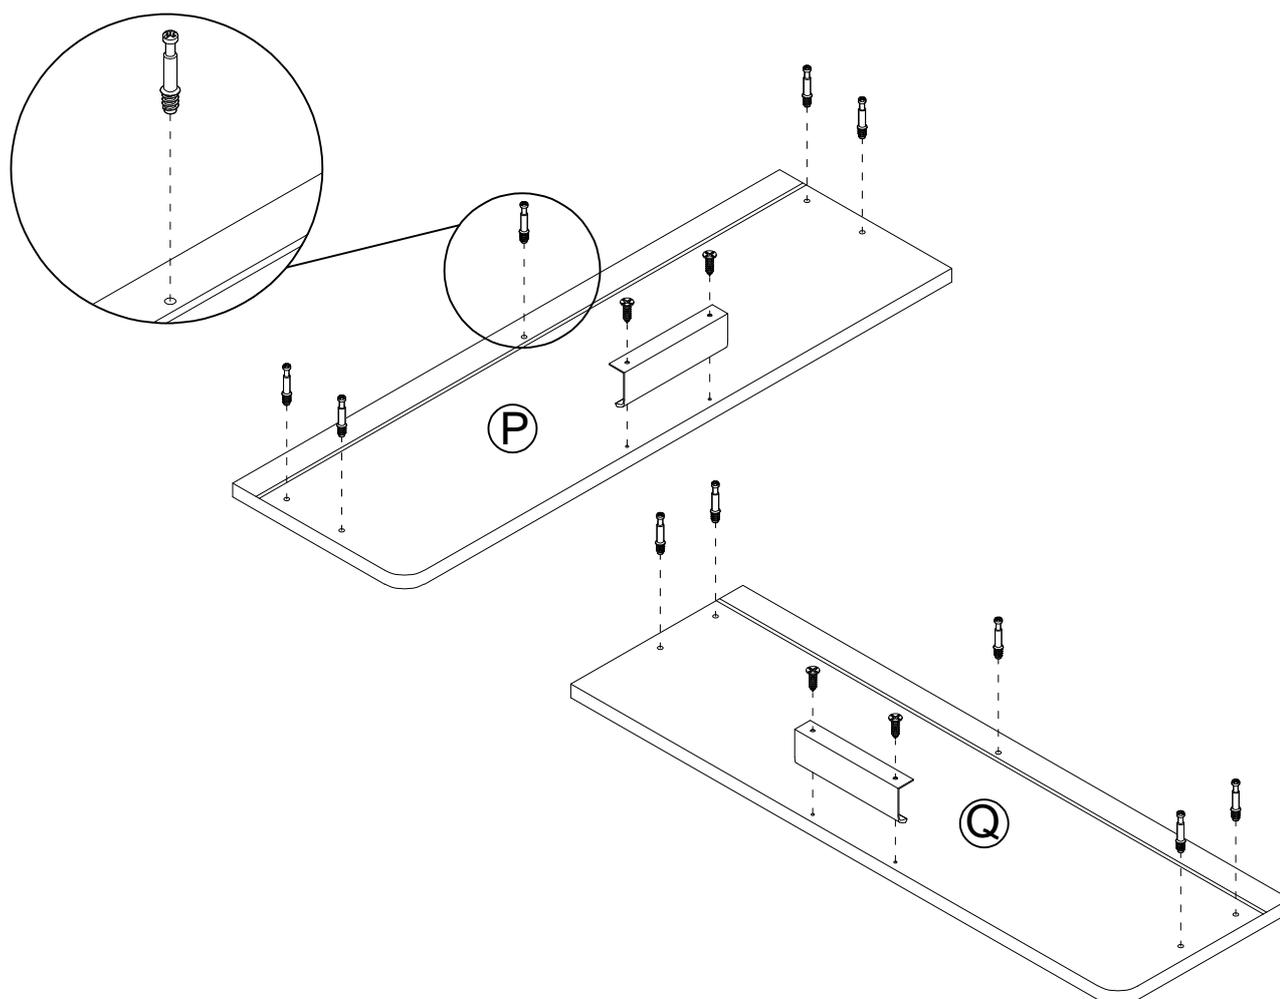

Step 17:

* Insert Twenty KD BOLT (1) to the Two DRAWER MIDDLE LEFT FRONT PANEL (R) and Two DRAWER MIDDLE RIGHT FRONT PANEL (S).

* Attach the Four BLACK HANDLE(12) or Four GOLD HANDLE(18) to the Two DRAWER MIDDLE LEFT FRONT PANEL (R) and Two DRAWER MIDDLE RIGHT FRONT PANEL (S) by the SCREW (13).

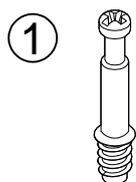


(20 PCS)

12



(4 PCS)

18




(4 PCS)

13




(8 PCS)

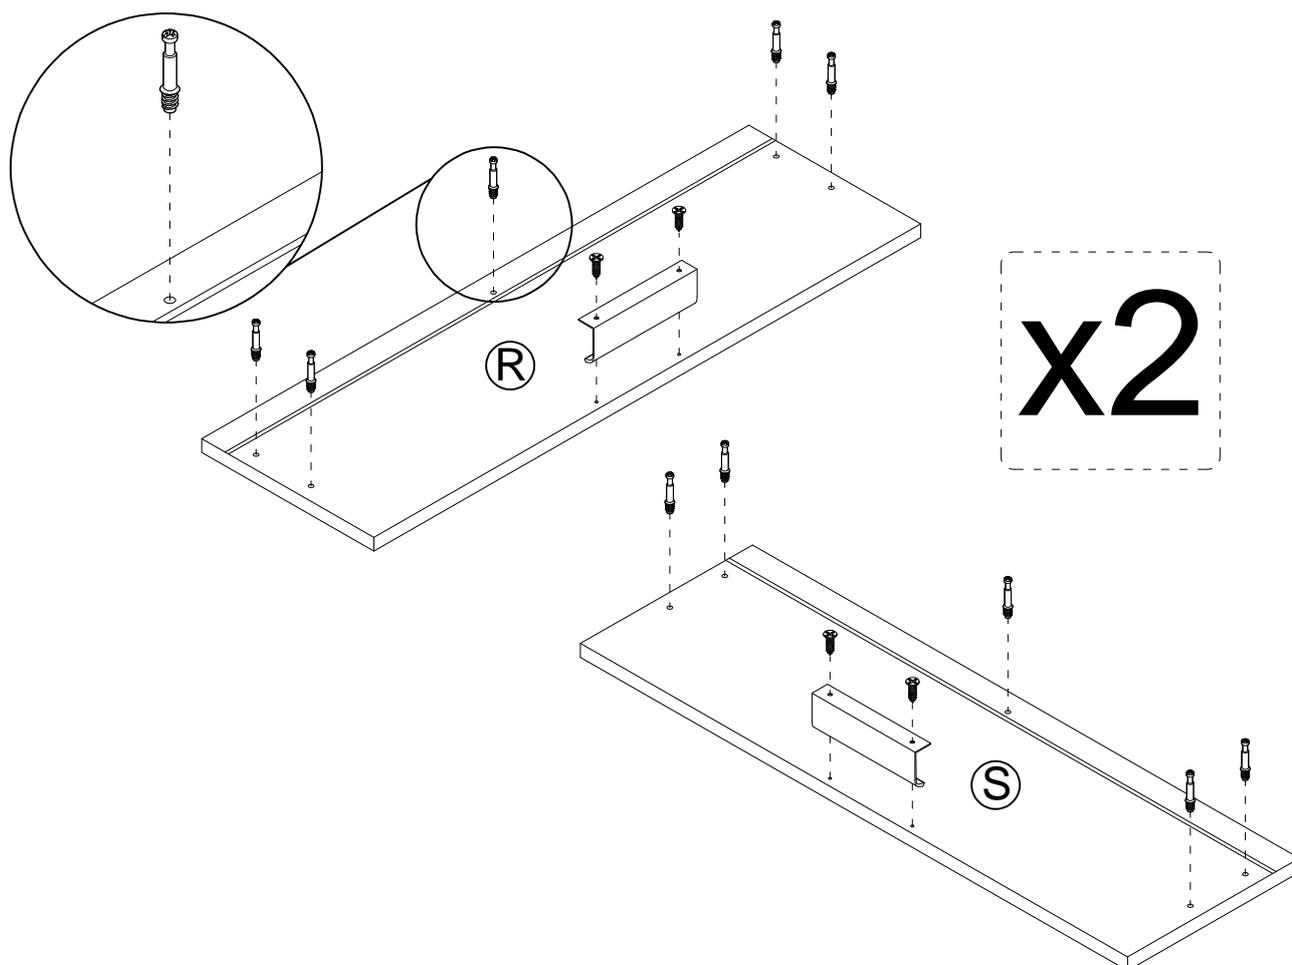


Step 18:

* Assemble the DRAWER UP LEFT FRONT PANEL (P) and DRAWER UP RIGHT FRONT PANEL (Q) to the DRAWER TRAY by the Ten KD SMALL CAM (5) and Ten COVER CAP (3).

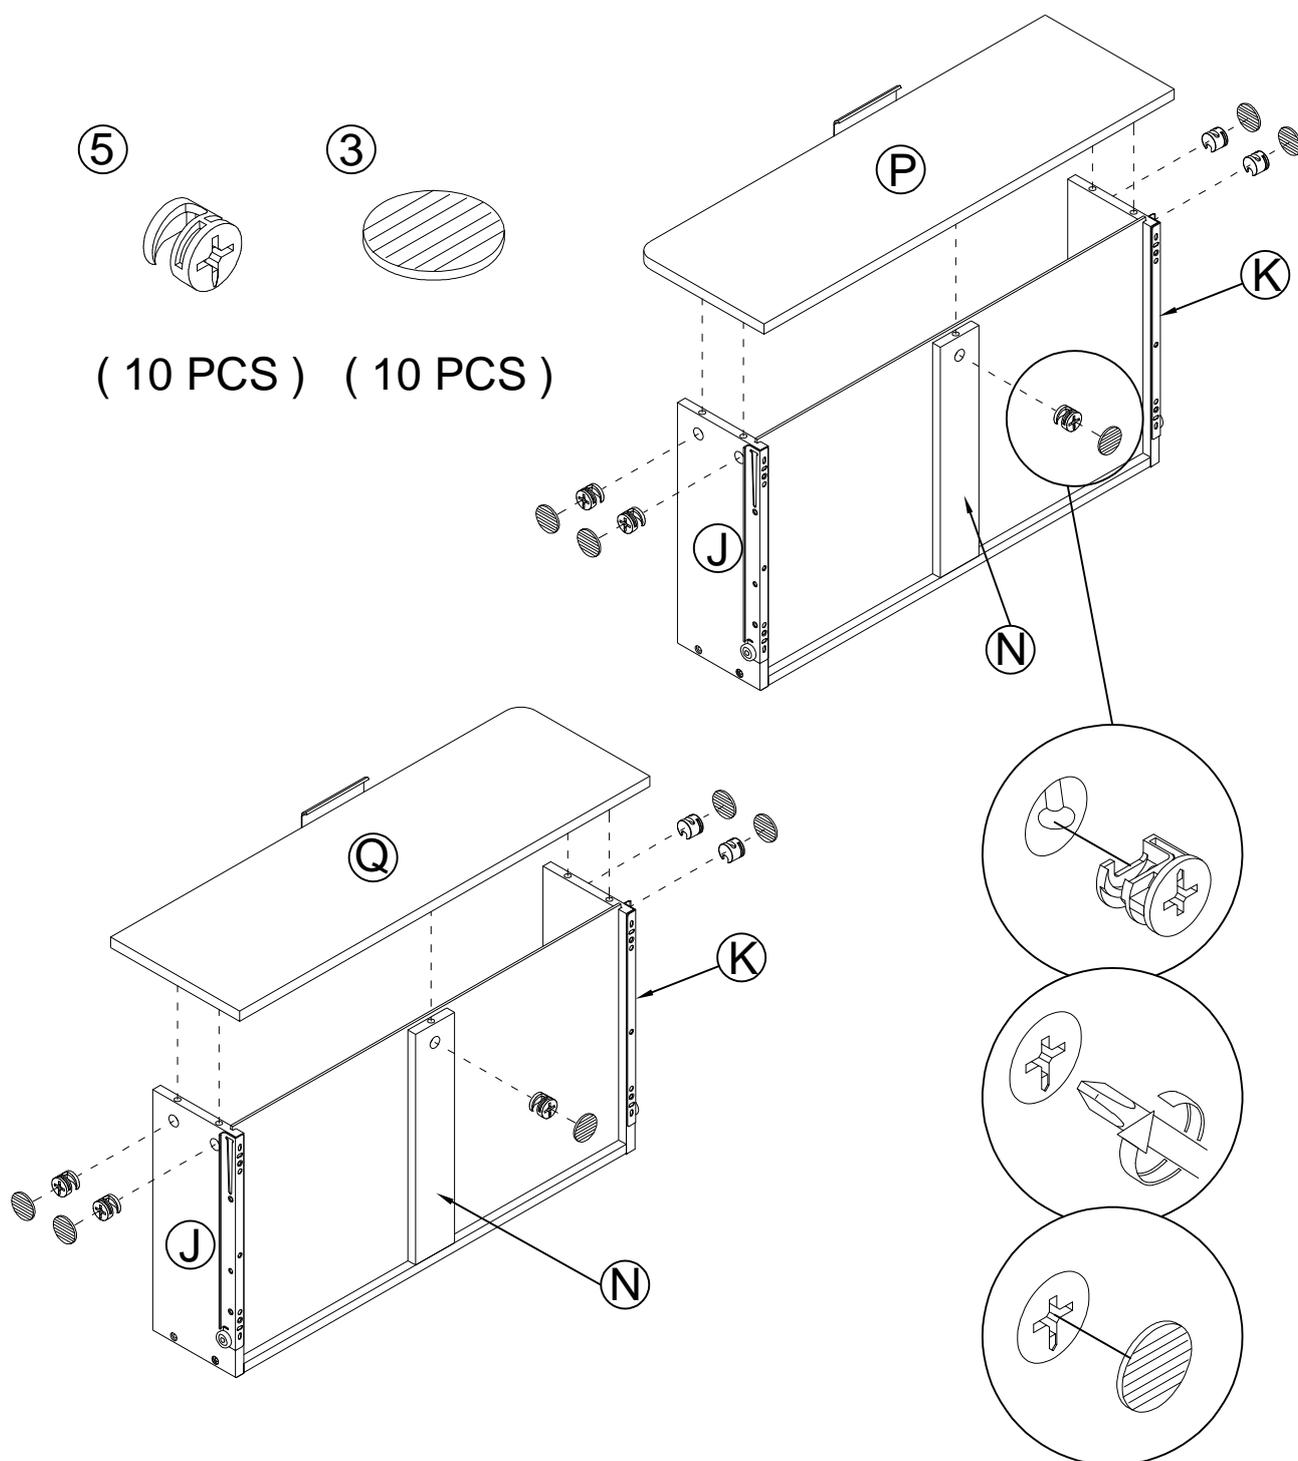



Step 19:

* Assemble the Two DRAWER MIDDLE LEFT FRONT PANEL (R) and Two DRAWER MIDDLE RIGHT FRONT PANEL (S) to the DRAWER TRAY by the Twenty KD SMALL CAM (5) and Twenty COVER CAP (3).

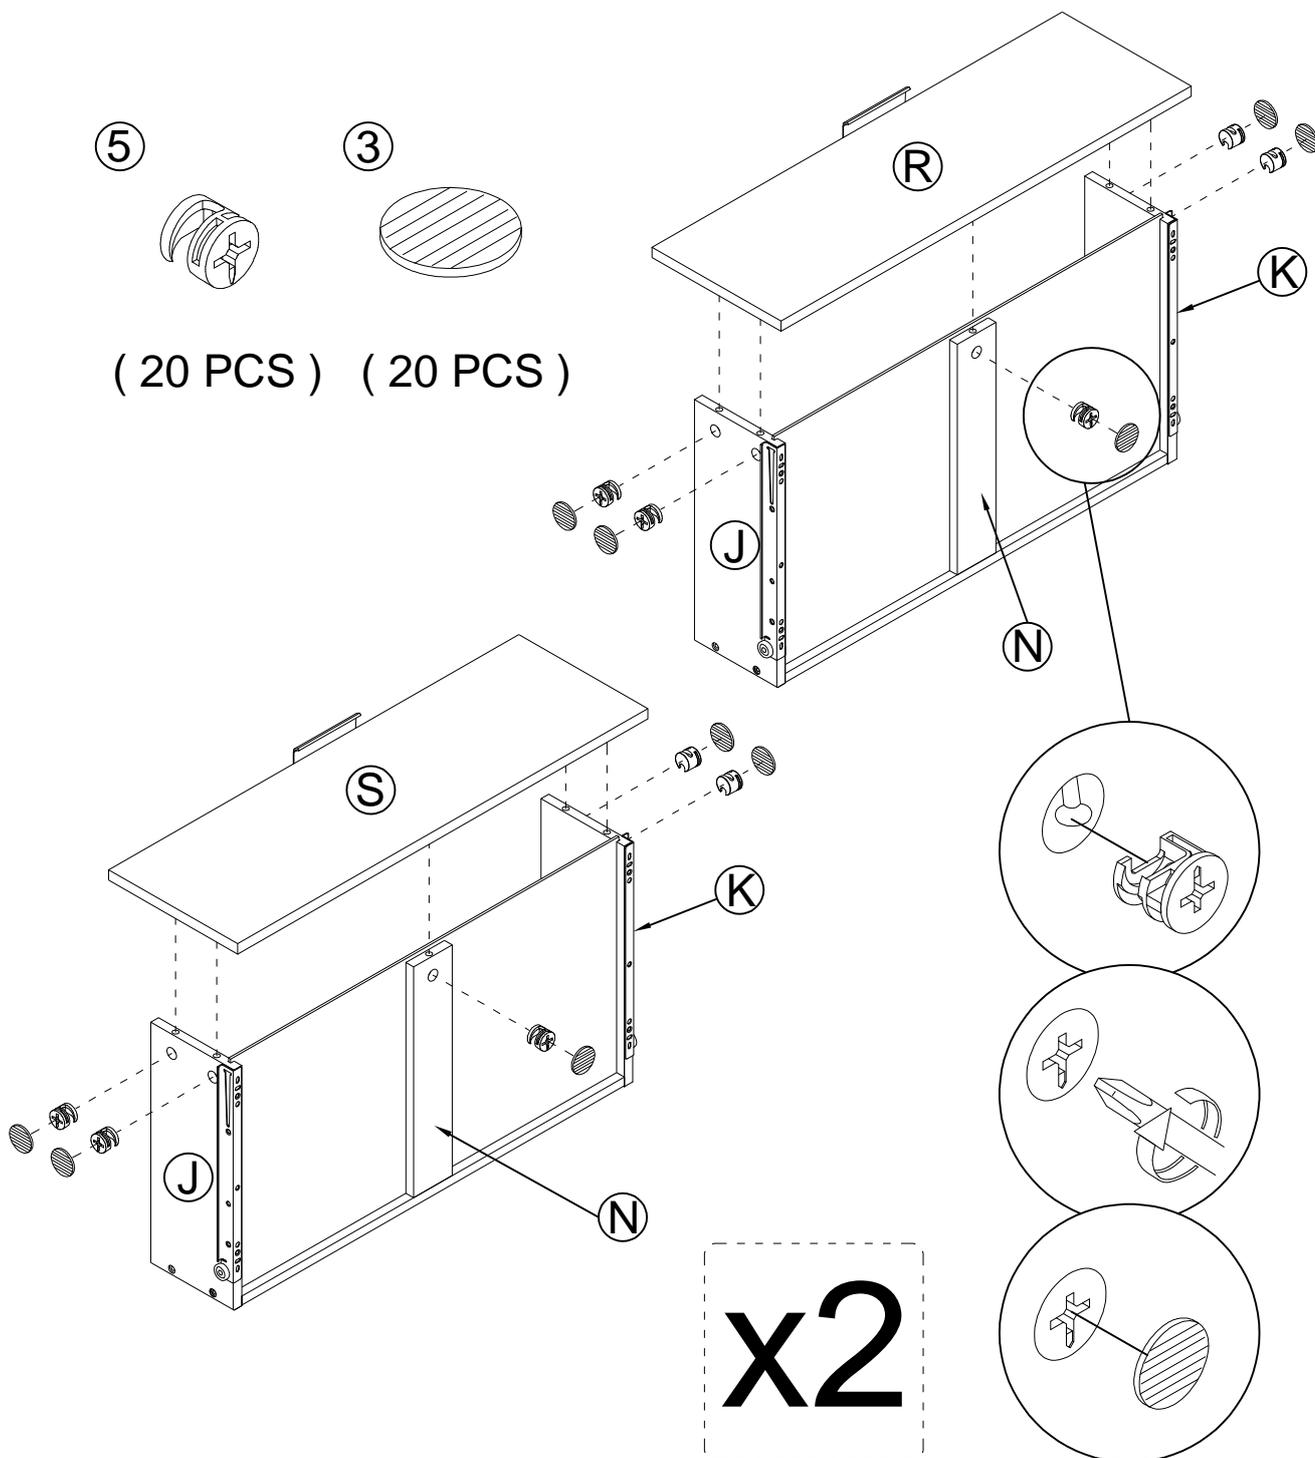

Step 20:


*Input Six Drawer tray to the stand.

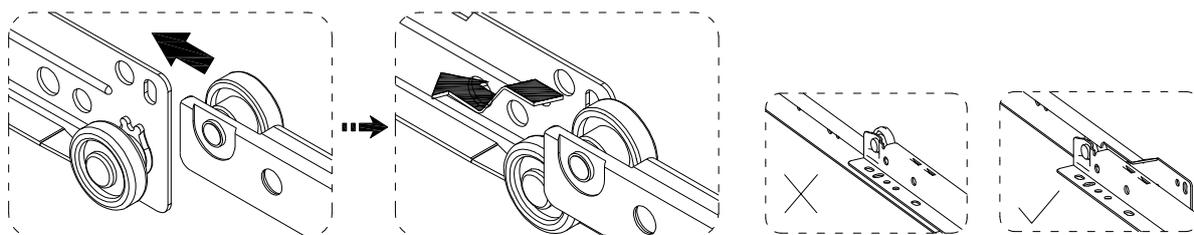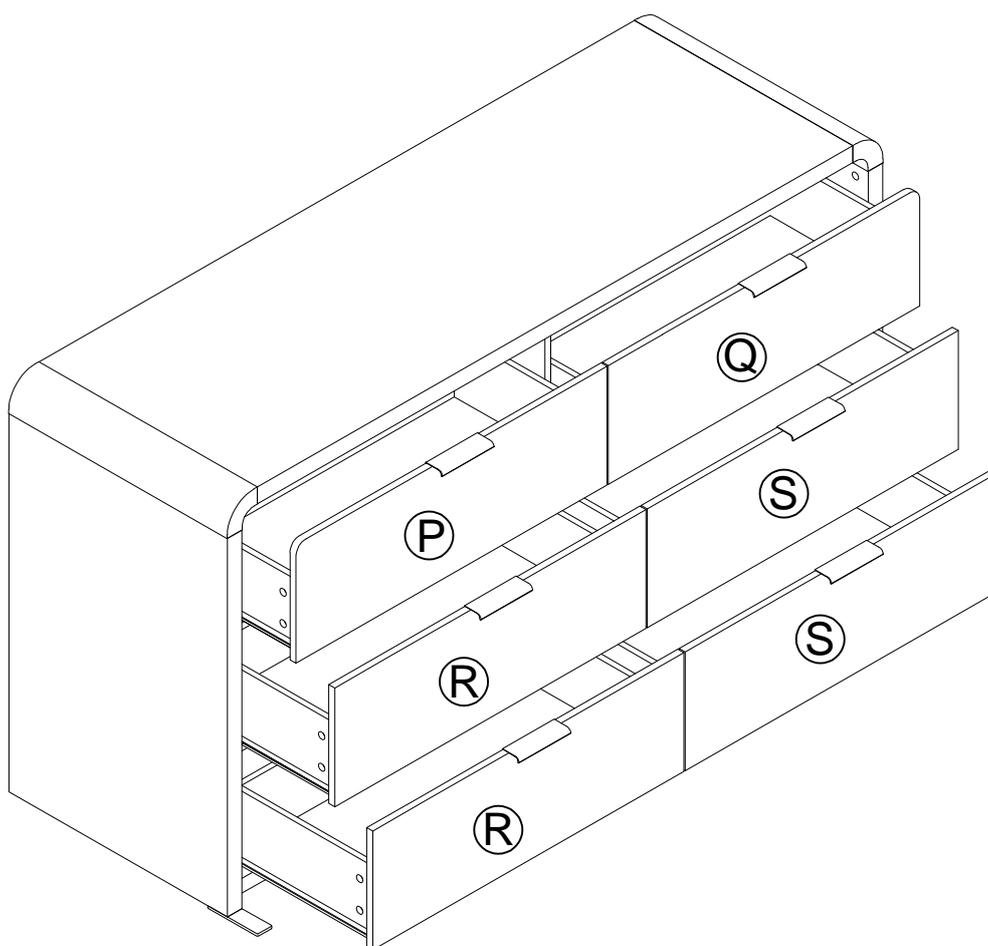

Step 21:


* Insert Eight PLASTIC WEDGE(15) and Eight SCREW(16) to the UPPER BACK PANEL (G).

15




(8 PCS)

16




(8 PCS)

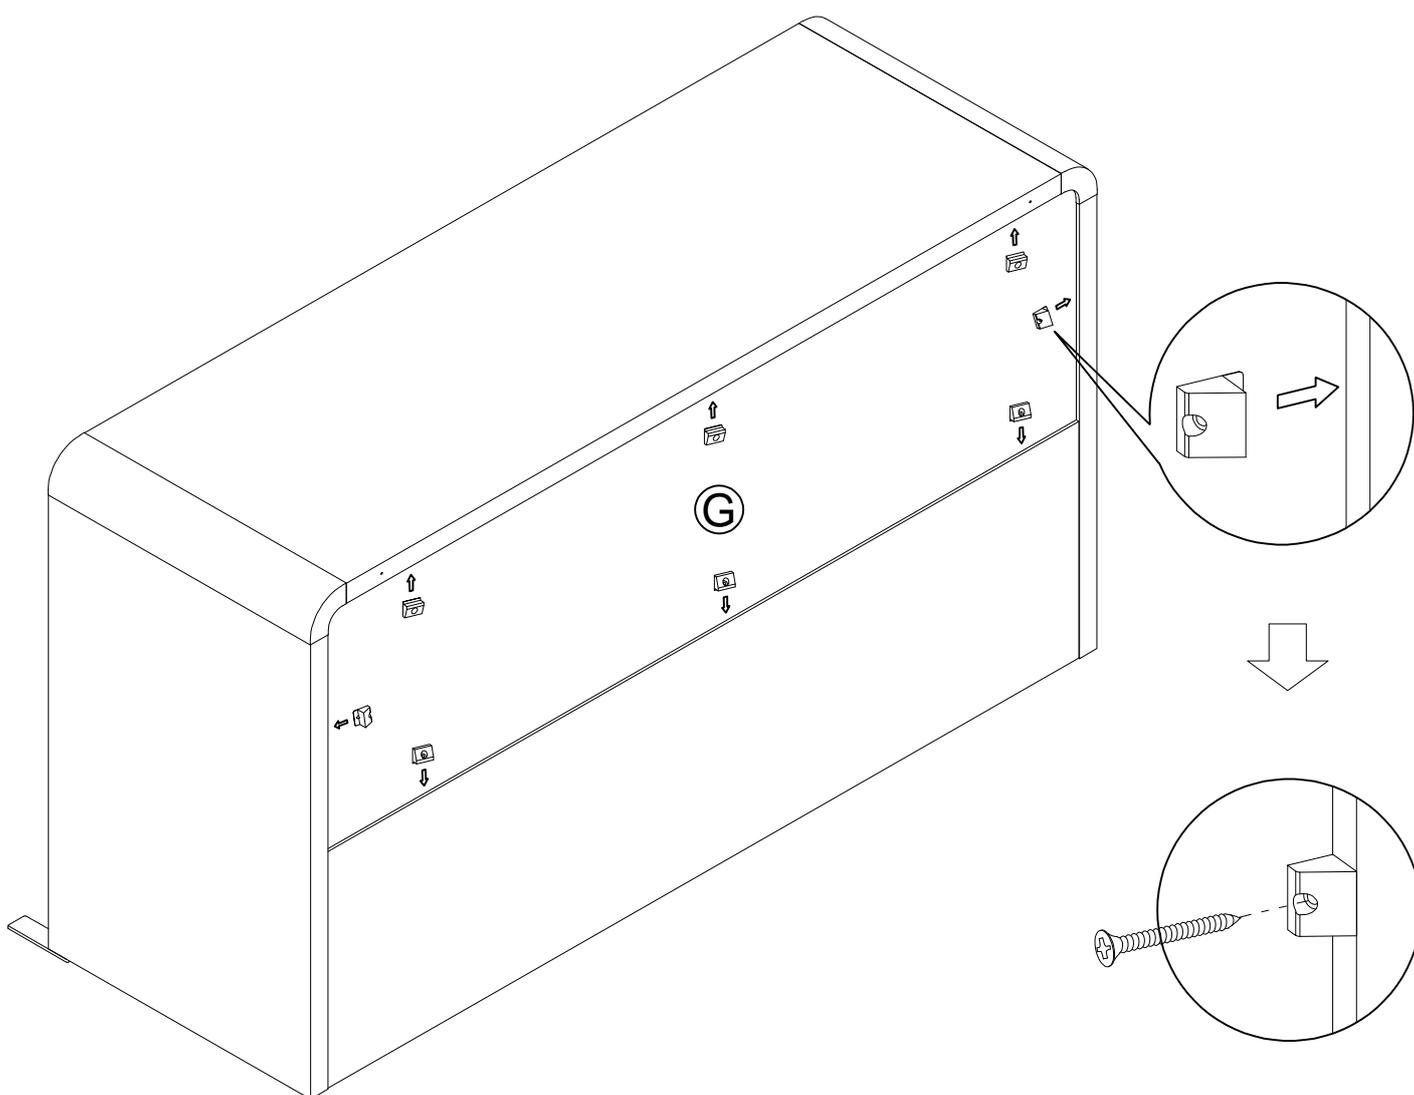

Step 22:

* Attach anti-tipping straps to the back of the stand.

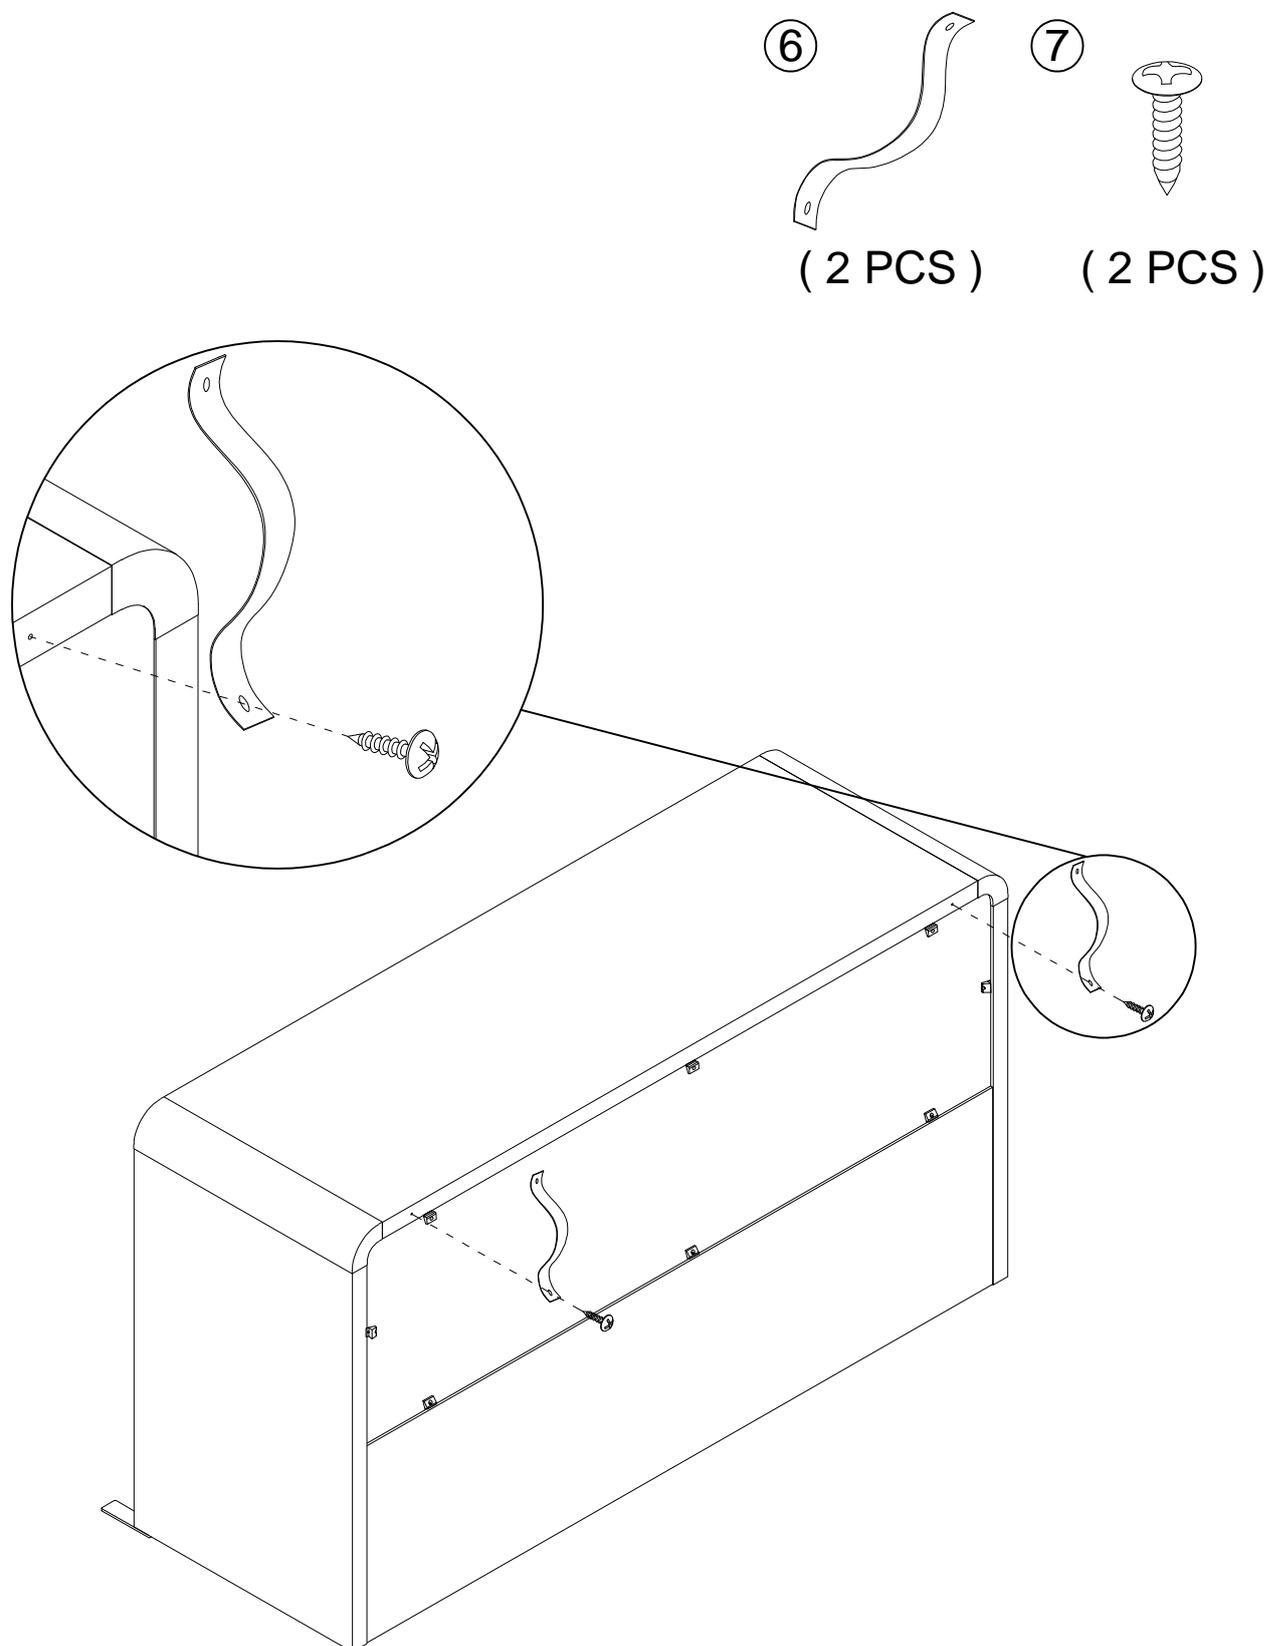

Step 23:


1st- With your pencil, strike a mark through the center of the hole in the SAFETY STRAP.

2nd- Drill a 3/8" hole on the mark.

3rd- FURNITURE TIPPING RESTRAINT KIT (9) into the hole until it is even with the surface of the wall.

4th- Turn the LONG SCREW through the hole in the SAFETY STRAP and into the WALL ANCHOR.

NOTE: You will need to turn the LONG SCREW multiple turns to completely tighten and secure your unit.

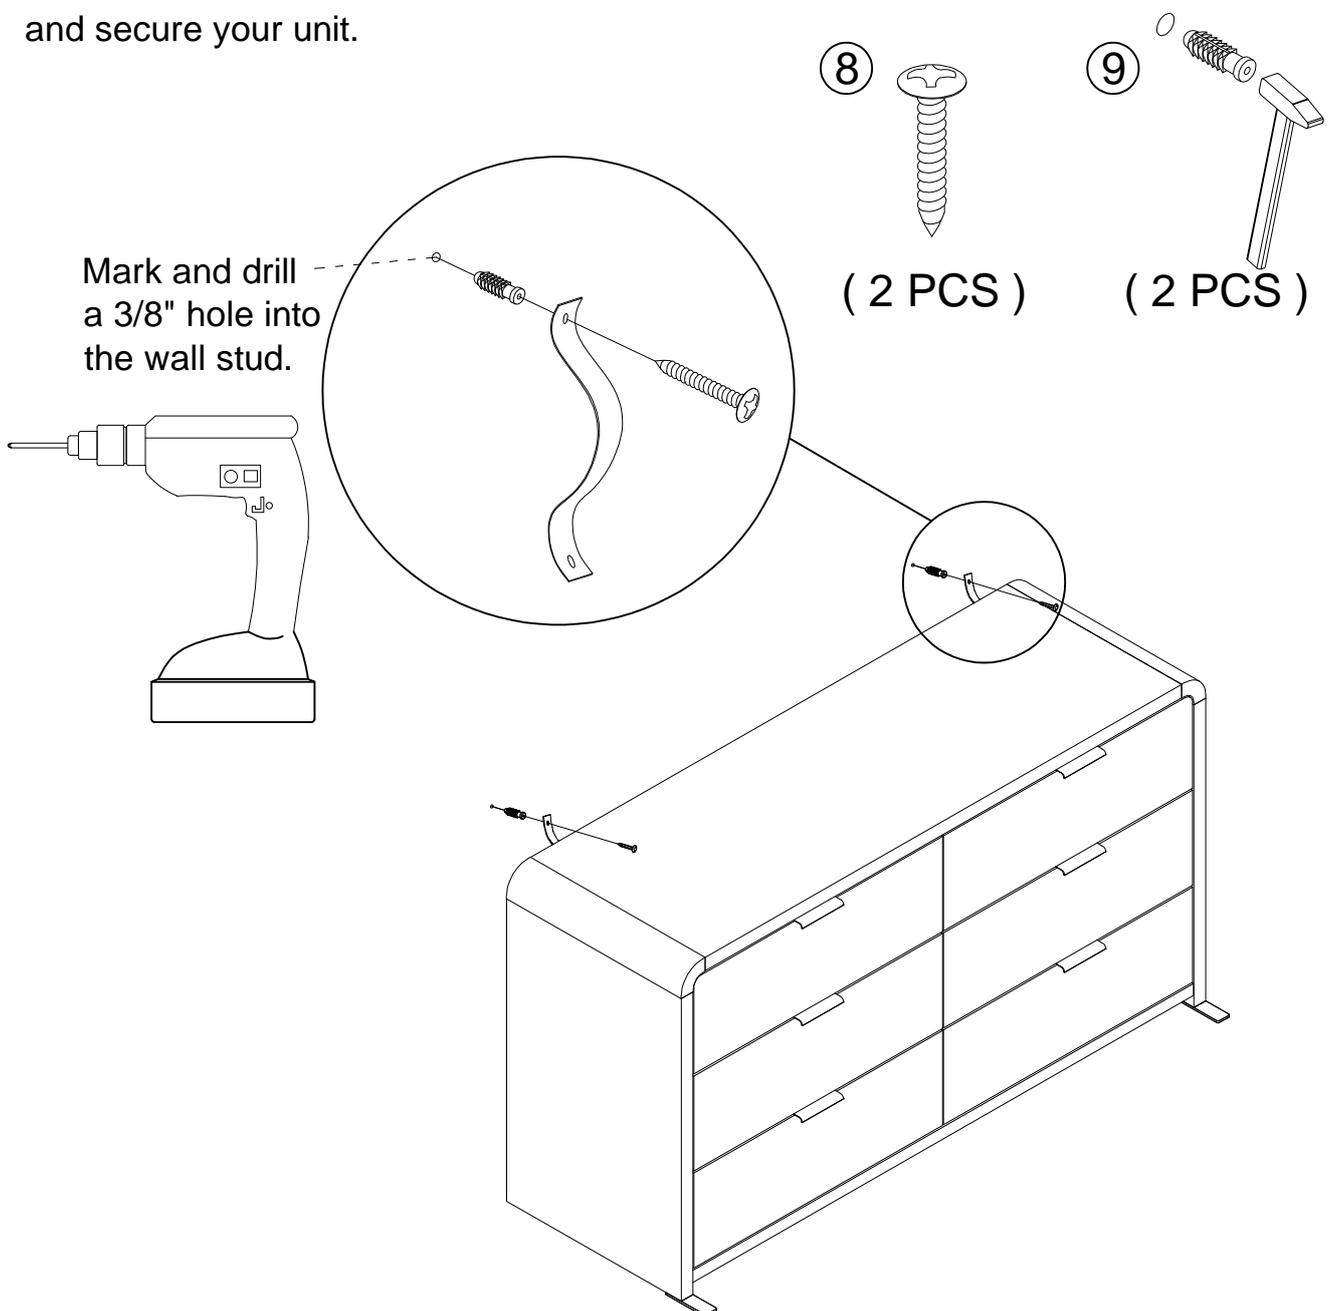



WARRANTY POLICY

All Manhattan Comfort furniture products are warranted, to the original purchaser at the time of purchase and for a period of 30 days thereafter.

Our warranty is limited to new products purchased in factory sealed cartons. This warranty is valid in the United States of America and Canada.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton.

Manhattan Comfort offers a 30-day parts replacement warranty on all items.

Our furniture products are not intended for outdoor use.

THE WARRANTY DOES NOT COVER:

- Defects/damages by improper assembly or disassembly.
- Defects/damages caused by shipping. Claims for damage during transit should be placed immediately to the transportation company.
- Defects/damages caused by inappropriate use of the furniture.



319 Ridge Rd. Dayton, NJ 08810

908-888-0818