



80in & 84in Height Pine Wood Barn Door

Installation Manual





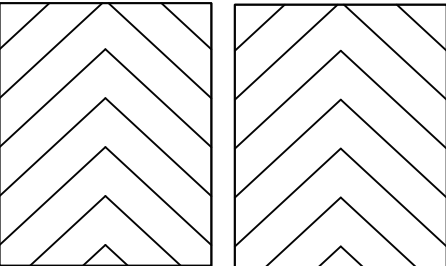


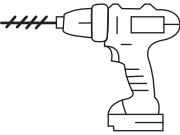
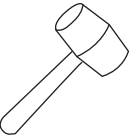
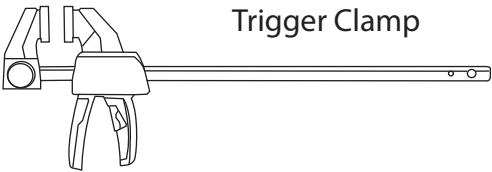
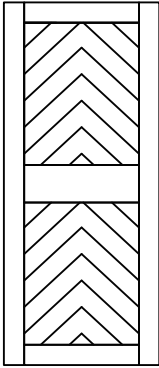
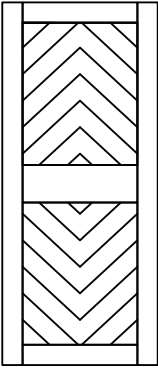
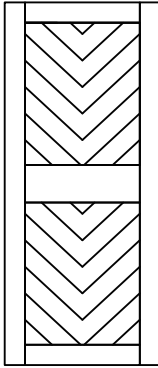
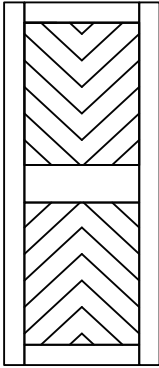
SAFETY PRECAUTIONS

!CAUTION!

- Power tools can cause serious damage if not professionally used. Safety gear must be worn before installation to prevent unexpected injuries.
- Pick an area free of hazardous condition before you start on the project. Please use tools and power tools responsibly any loss of control and accident deaths may occur due to abuse of tools.
- Big objects required in this project are needed to be carefully and responsibly moved. Be sure to wear safety gloves and shoes to prevent any serious injury.
- Be extremely careful to not put any parts of your body against a moving part of the hardware. This may cause bruising, punctures, and other results of injuries when for example when fingers are caught in the closing area of the doors.
- Precautions should be taken when opening or closing the door(s). Handles should be used when attempting to slide the door(s). Always keep you and children aware and safe from any unexpected situations.
- Any extreme uncontrolled pressure opening or closing the door(s) can damage the hardware gradually. Use handle(s) to open and close the door(s) with care at all times.

HARDWARE INCLUDED


Please check that you have the correct quantity of door panels and hardware before installation.

MAIN COMPONENTS	TOOLS NEEDED
<div><p>A x 2</p></div> <div><p>B1 x 1 B2 x 1 (for 80") B2 x 1 (for 84") B3 x 1</p></div> <div><p>C x 2</p></div> <div><p>(Dowel)  E x 10</p><p>(Long Screw)  F x 10</p></div>	<div><p>Drill or Phillip Screw Driver</p></div> <div><p>Rubber Mallet</p></div> <div><p>Trigger Clamp</p></div>
<p>Possible designs that could be achieved with the C panels that you purchased:</p> <p>You can flip the panel as you prefer and build a door to your liking!</p> <div><p>E1</p><p>E2</p><p>E3</p><p>E4</p></div>	

INSTRUCTIONS

Before assembly confirm two of your A Panels has white foam dowels installed in the grooves like the diagram below. There should be 4 foam dowels in each panel. If you happen to know they are missing please contact us and let us know. These foam dowels are important for the assembly because it helps to minimize the appearance of gaps in between the C panels.

WHITE FOAM DOWELS




STEP 1

A


x1

Components Needed

- B1** x1
(for 80")
- B2** x1
(for 84")
- B2** x1
(for 84")
- B3** x1
- Wooden Dowel **E** x5
- Long Screw **F** x5
- Drill or Phillip Screw Driver
- Rubber Mallet

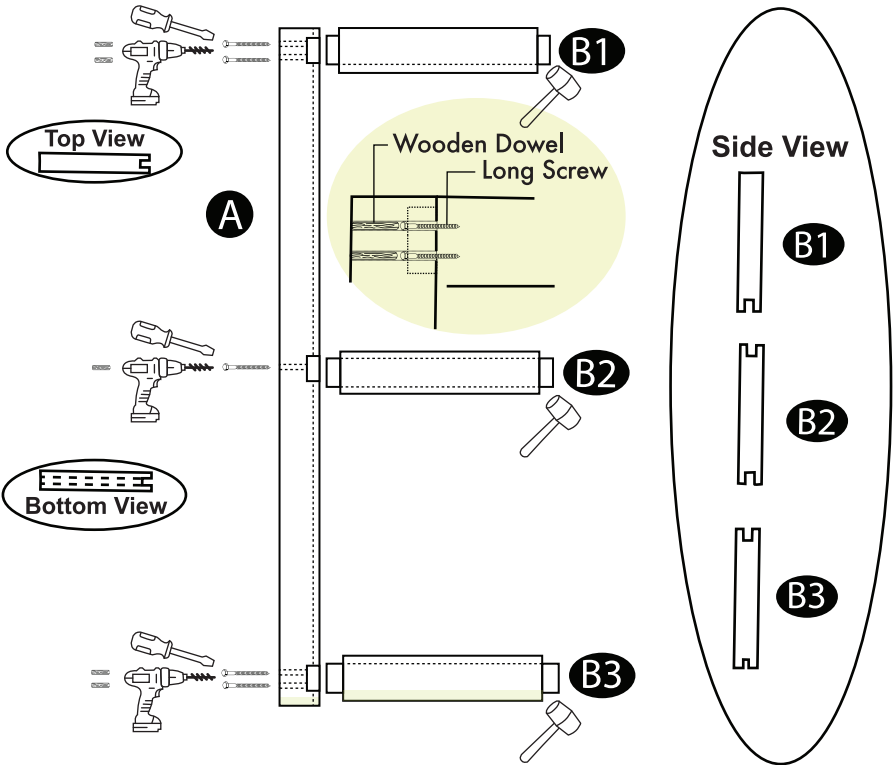

STEP 2

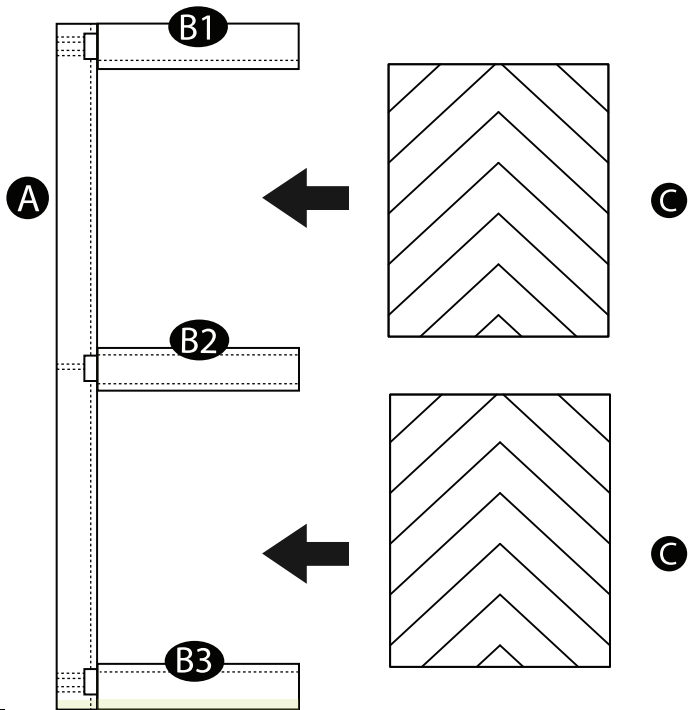



Carefully slide your 2 x C panels into the already-built structure.

NOTICE


If the gap between **A** and **B** panels occurs, remove the foam dowels from one of the **A** panels as the expanding foam prevents a tight closure.

STEP 3


Components Needed

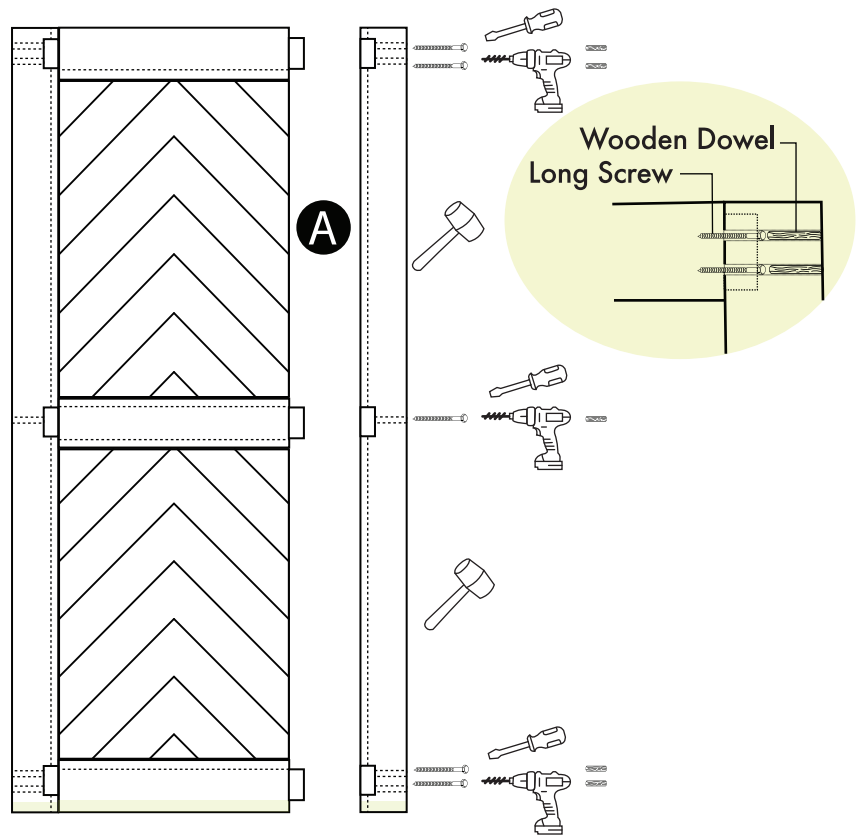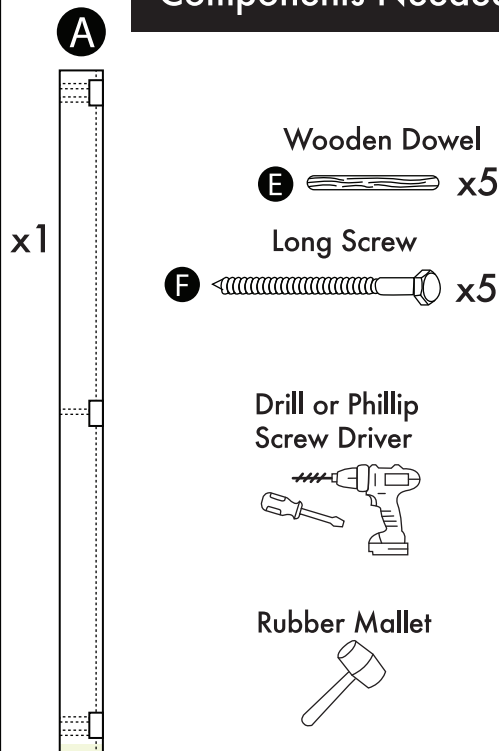

OPTIONAL

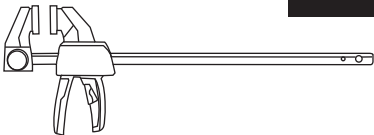


You can also use a trigger clamp to clamp your doors together before drilling in your final A panel. You might need this if you do not have a second person assisting you with holding the door together.

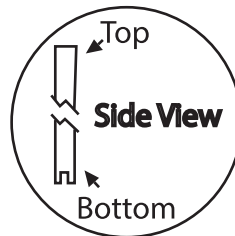

Determining the top and bottom side of your A panel:

There is a pre-routed groove at the bottom side of your A panel, so please assemble the A panel accordingly (like shown in picture).



ON YOUR OWN PREFERENCE

Cut down the dowels that is sticking out of the door after installing. Then sand off to smoothen the sides and the whole door to prepare for the finishes needed for your door.

YOUR INSTALLATION IS COMPLETE!



SLIDING HARDWARE / BARN DOORS

High Quality • Exquisite Design • Outstanding Services

ABOUT US

At Homacer, our goal is to provide the finest sliding barn door hardware products and services for our valued customers. We keep polishing our products to make their quality better, prices lower and installation easier. We make it possible for you to get everything you need from us when you think about installing sliding barn doors.

CONTACT US

Bulk Membership Program

To learn more about bulk / dropship order program you may contact us at

Office #: 1(770)-559-5849

Website: www.homacer.com/pages/membership-program

Email us: sales@homacer.com

CUSTOMER SERVICE TECH SUPPORT

Office #: 1(770) 864-5437

Website: www.homacer.com

Email us: support@homacer.us

LOCATION

1885 Beaver Ridge Cir, Ste A
Norcross, GA 30071

For additional hardware and accessories such as floor guide, soft close, and door handles, they can all be found on our website at www.homacer.com if you have any other inquiries you can always contact us through the phone or emails.