




PART


NO.	PART.	Qty.	NO.	PART.	Qty.
1	**	5	Q1		4
2		10	Q2		2
3	1620mm	10	Q3		6
4	1546mm	24	Q4		4
6	1080mm	3	Q5		10
7	1256mm	3	Q6		10
7 F	1274mm	2	Q7		48
8	1574mm	4	Q8	420mm	4
8L	1604. 5mm	2	Q9		130
8R	1604. 5mm	2	Q32	M4x14mm	210+10
9	1906mm	4	Q13	∭mm → M5x16mm	240+10
10	1544mm	16	Q14	M6x38mm	48+3
D1	1650mm	8	Q15	M6x55mm	94+3
D2	1898mm	40	Q16	M6x65mm	36+2


NO.	PART.	Qty.	NO.	PART.	Qty.
Q17	(O) M6	178+5	Q23		1
Q18		210+10	Q24		1
Q19		200+10	Q25		1
Q20		130+10	Q26		1
Q21	M8x50mm	20	Q27		1
Q22		2			

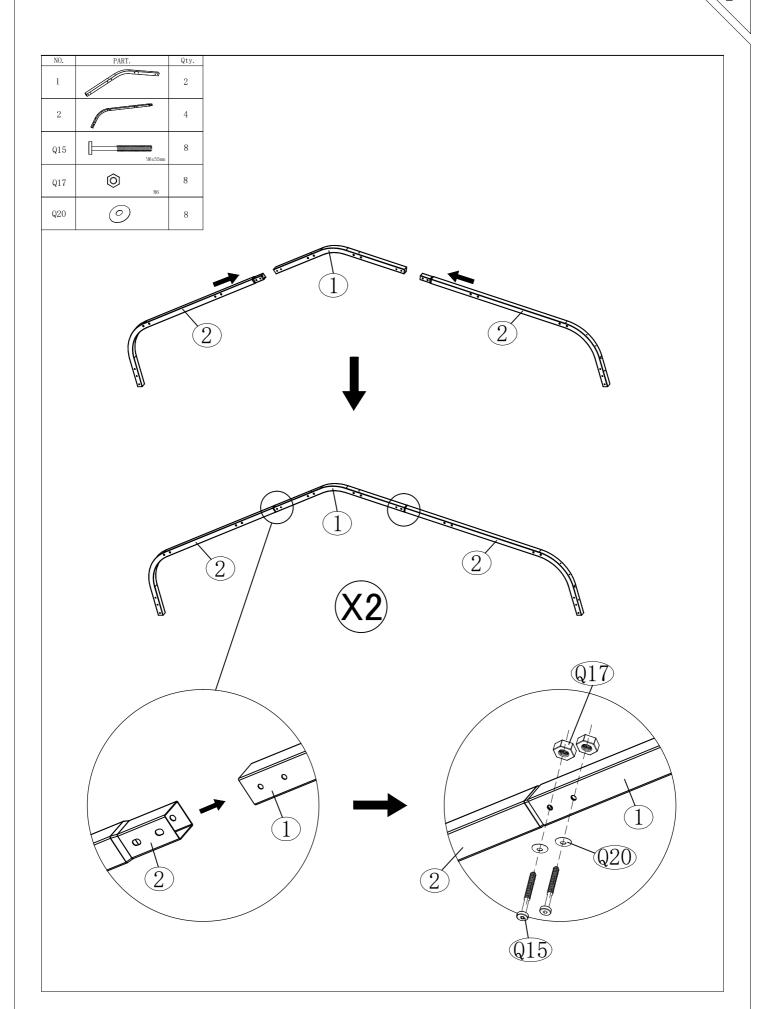


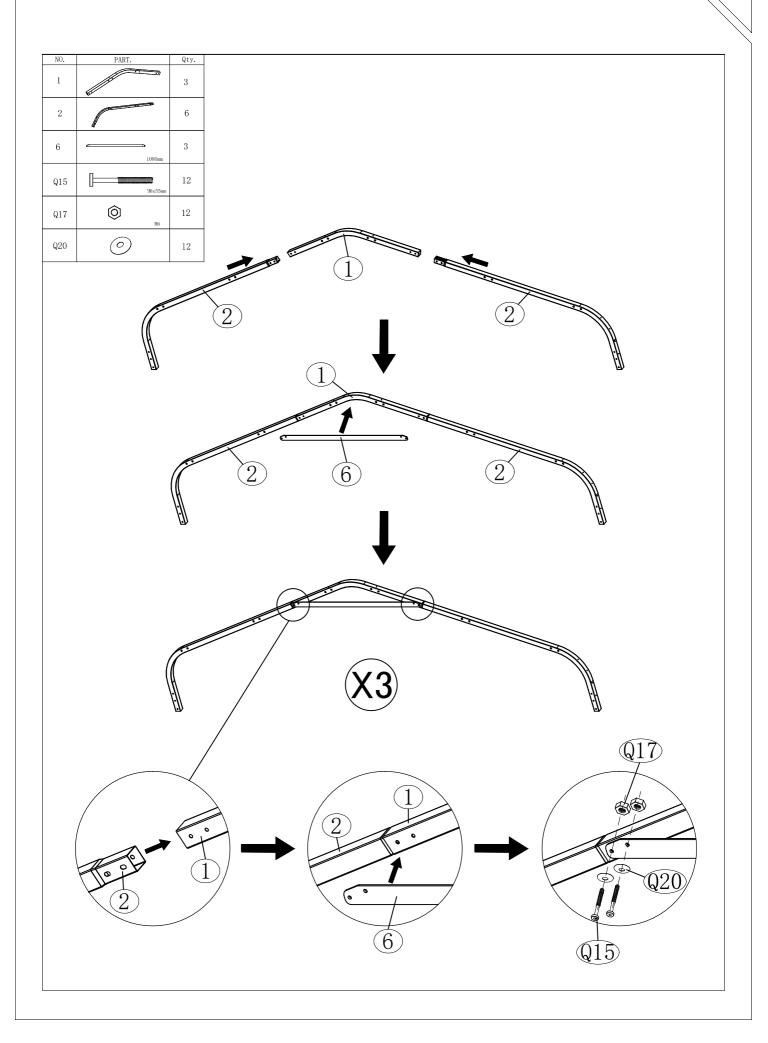


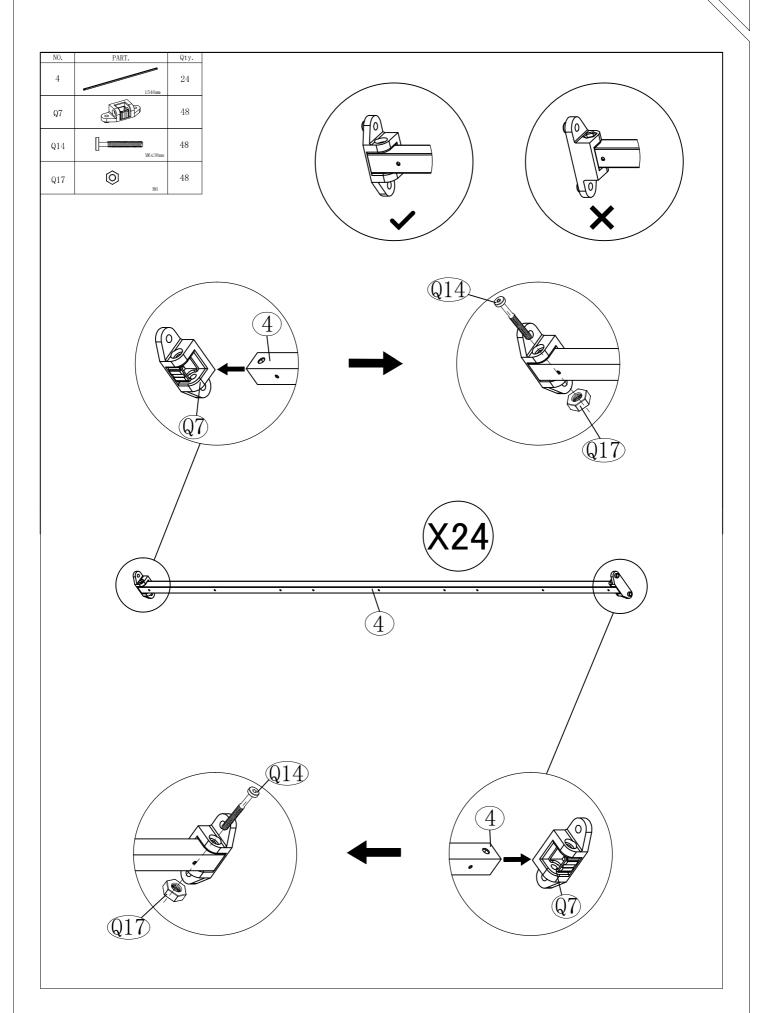


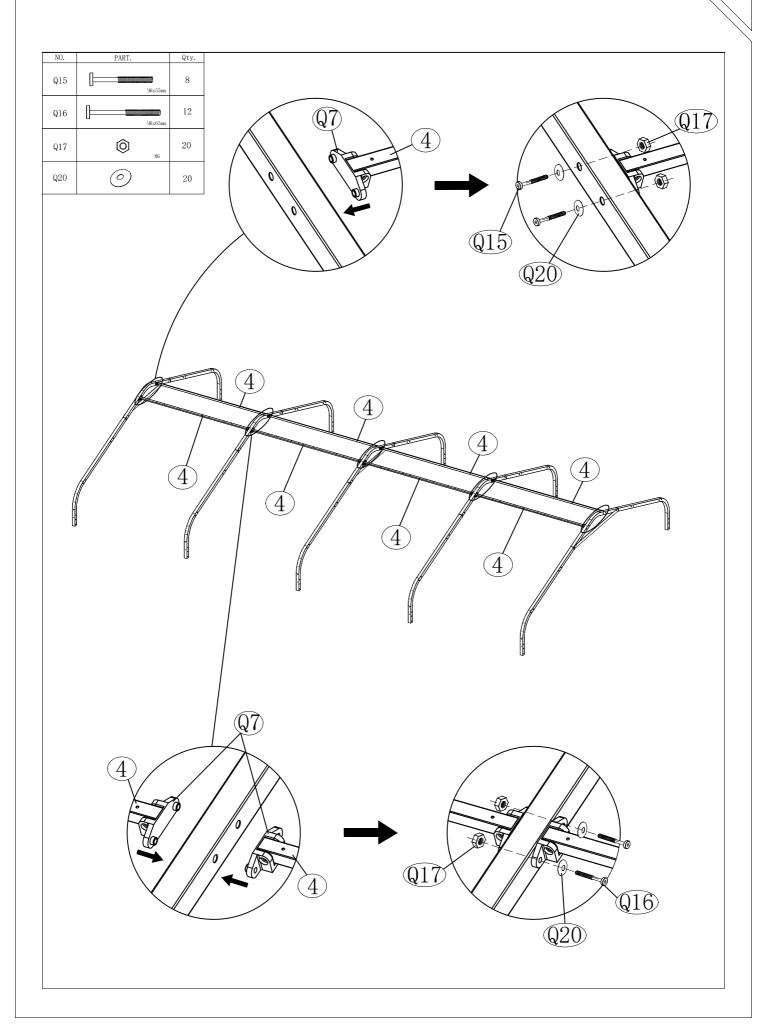


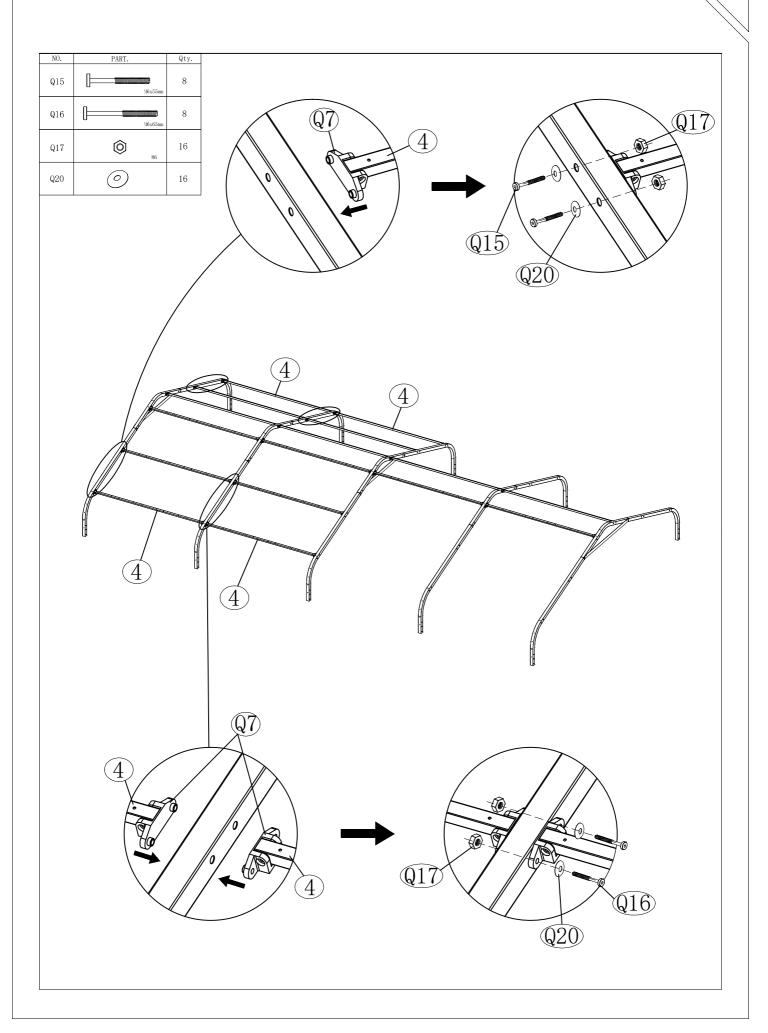


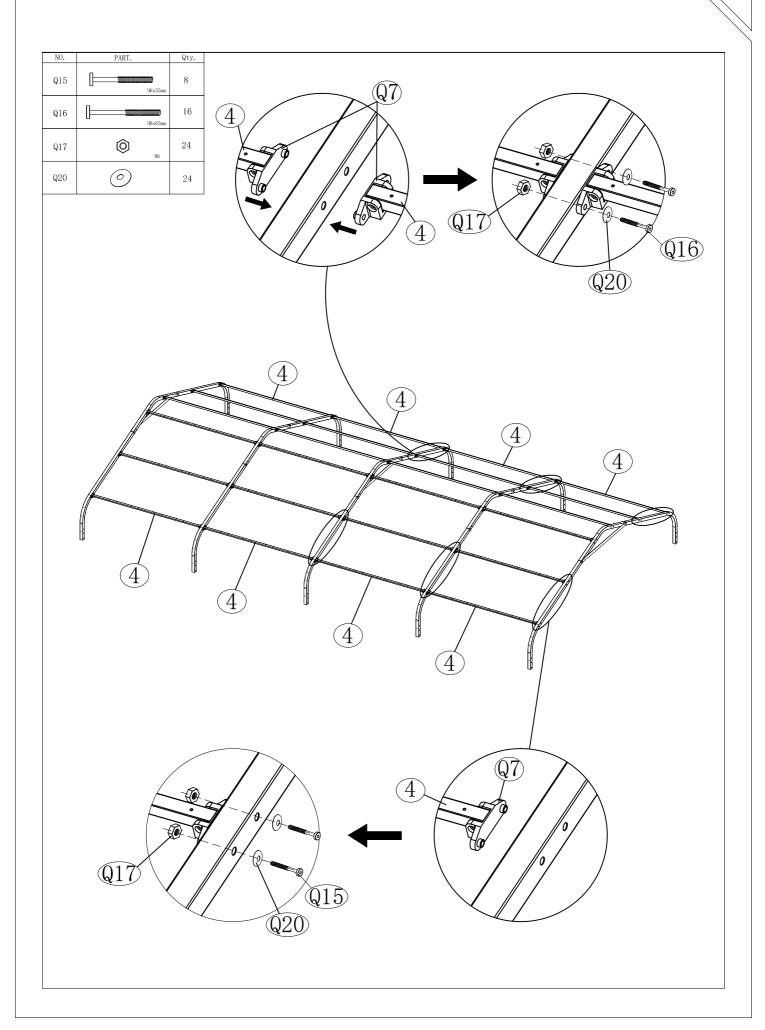

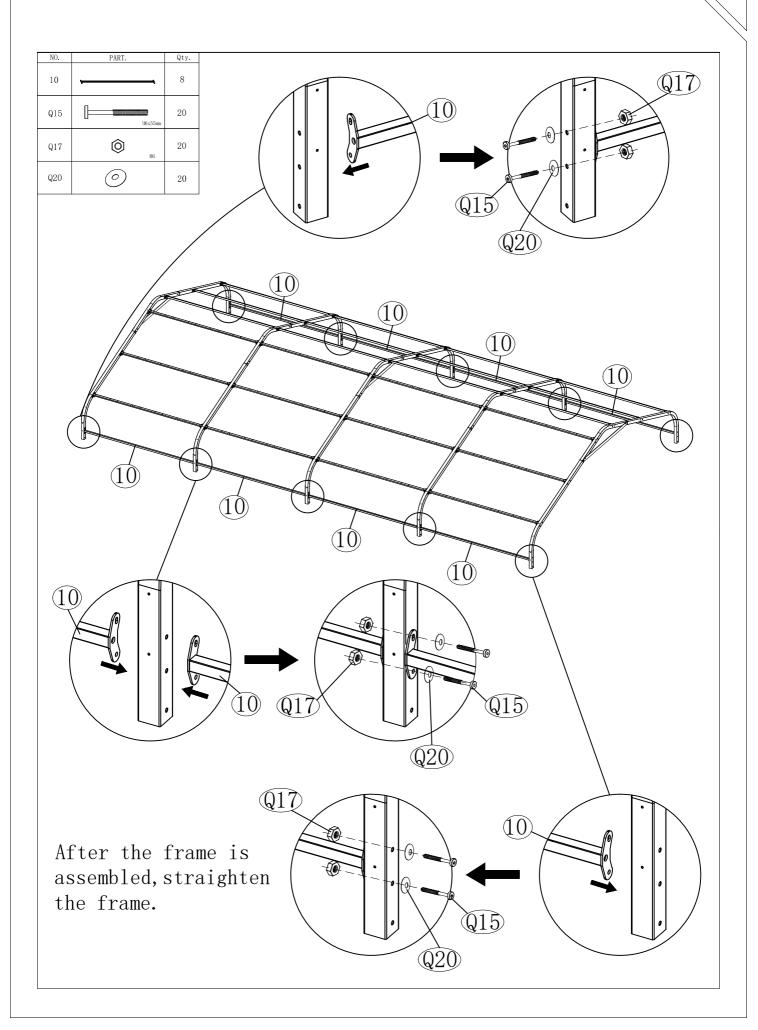

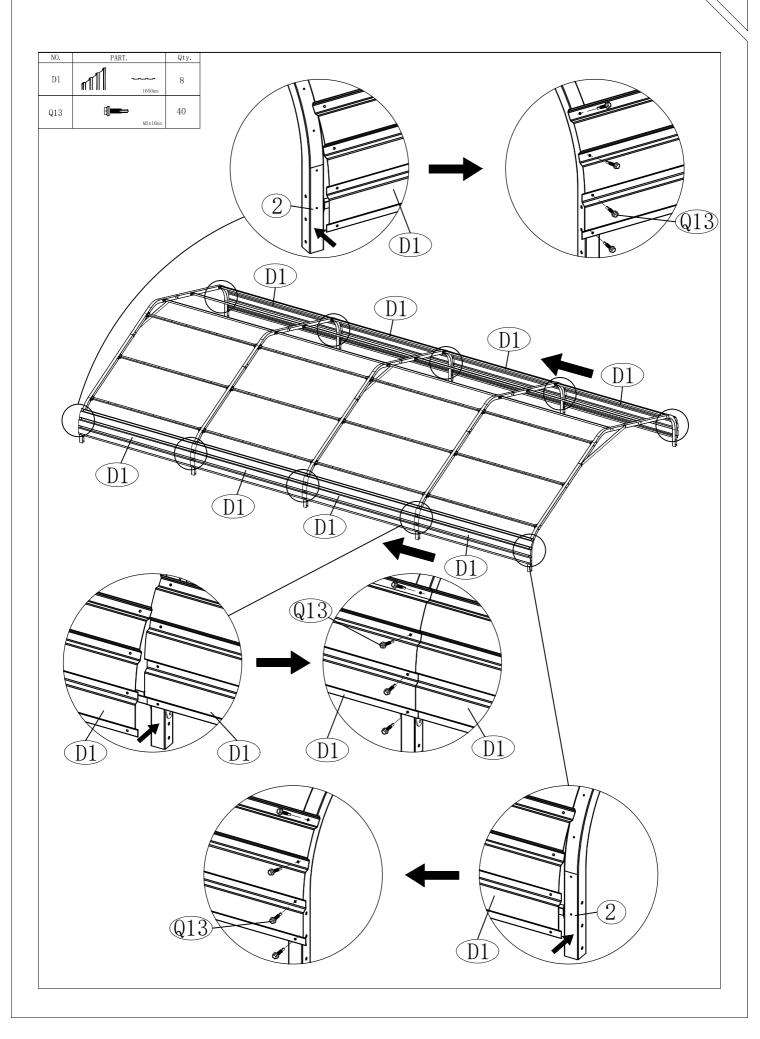


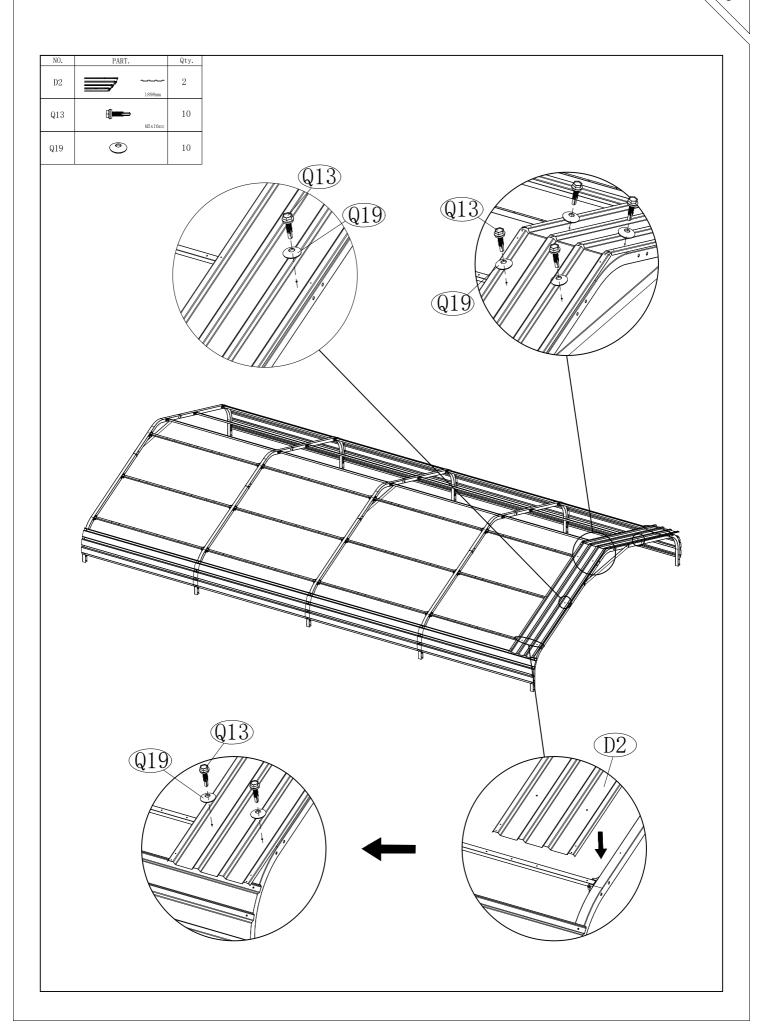


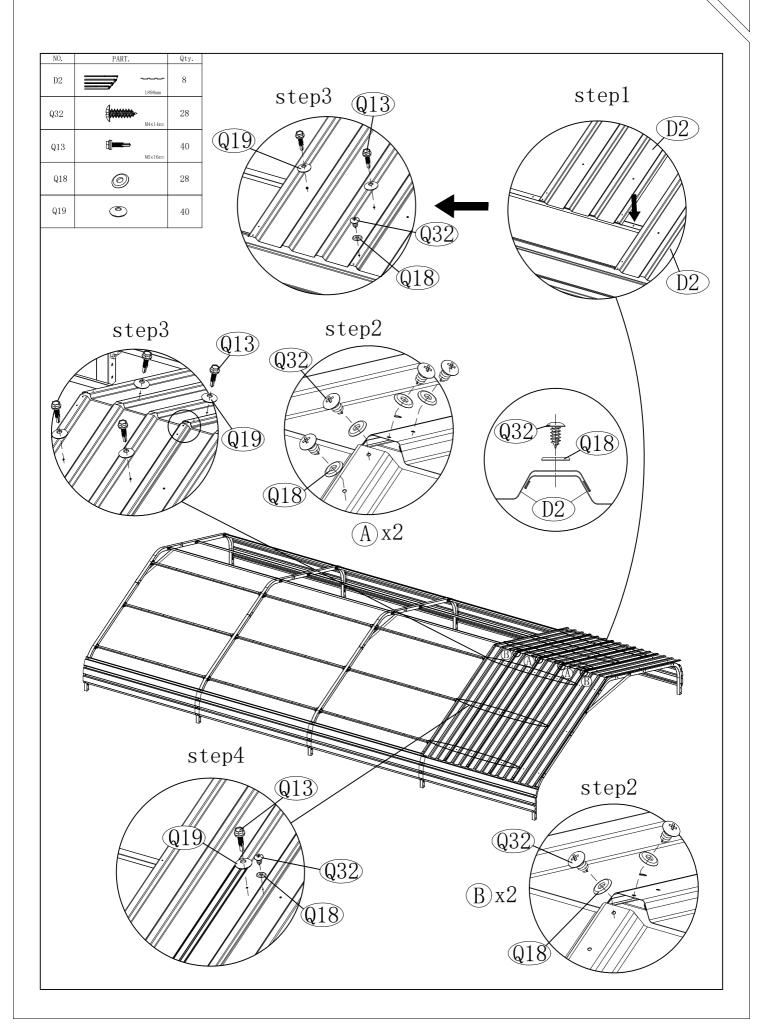



NO.	PART.	Qty.
Q32	M4x14mm	2
Q18	0	2
Q4		1


D2 Install plastic Q4 between the 4th and 5th pieces

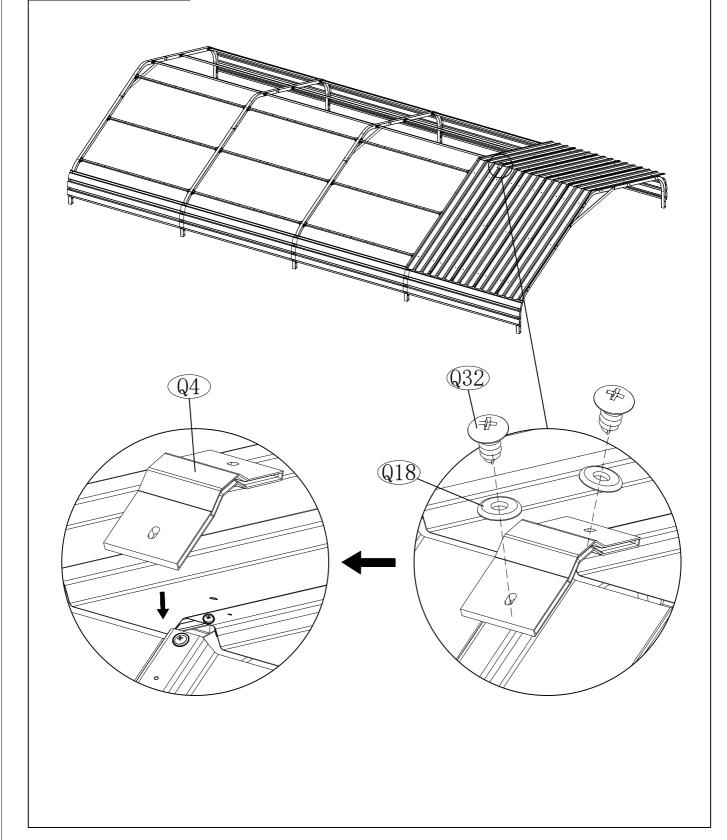


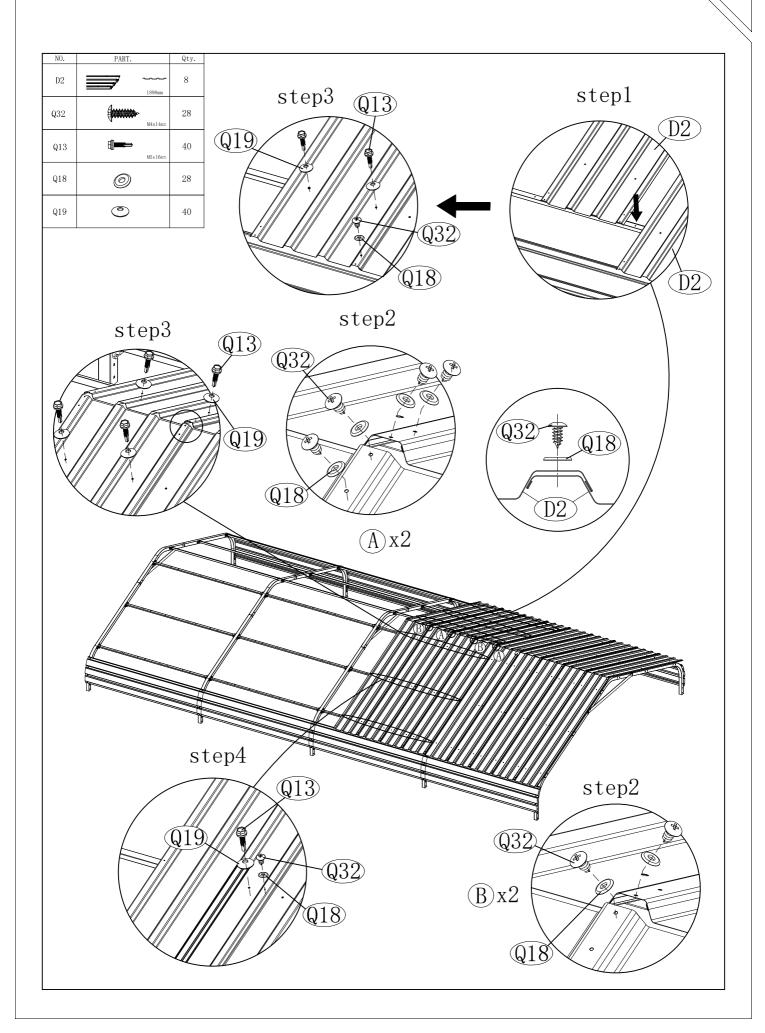


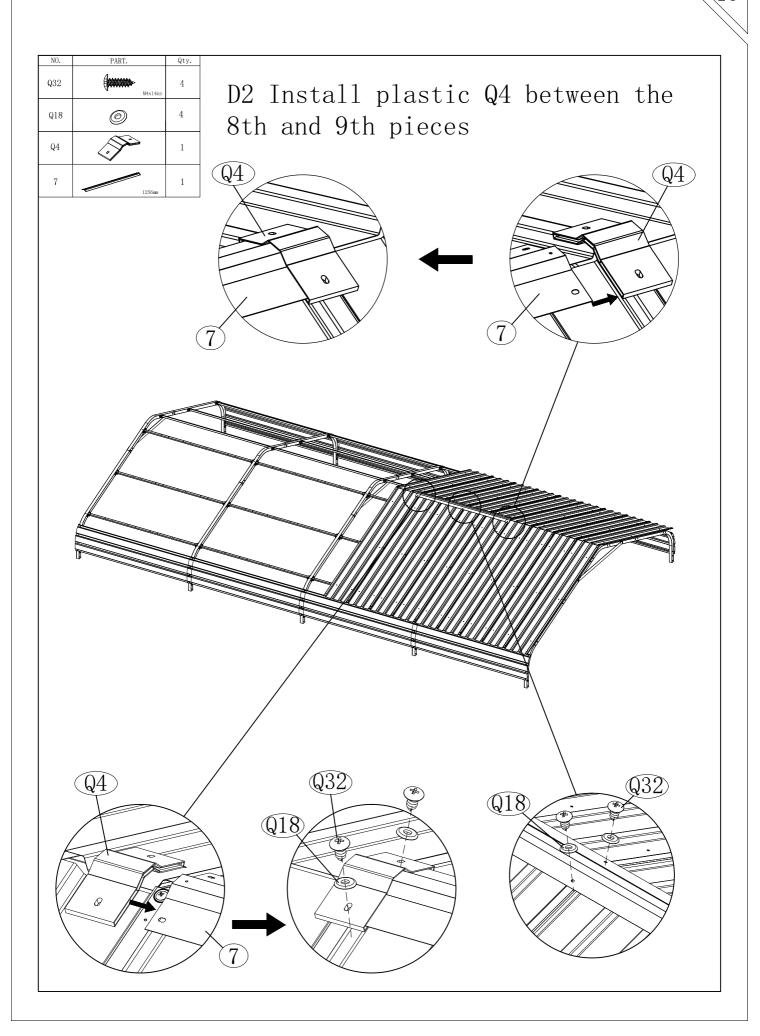


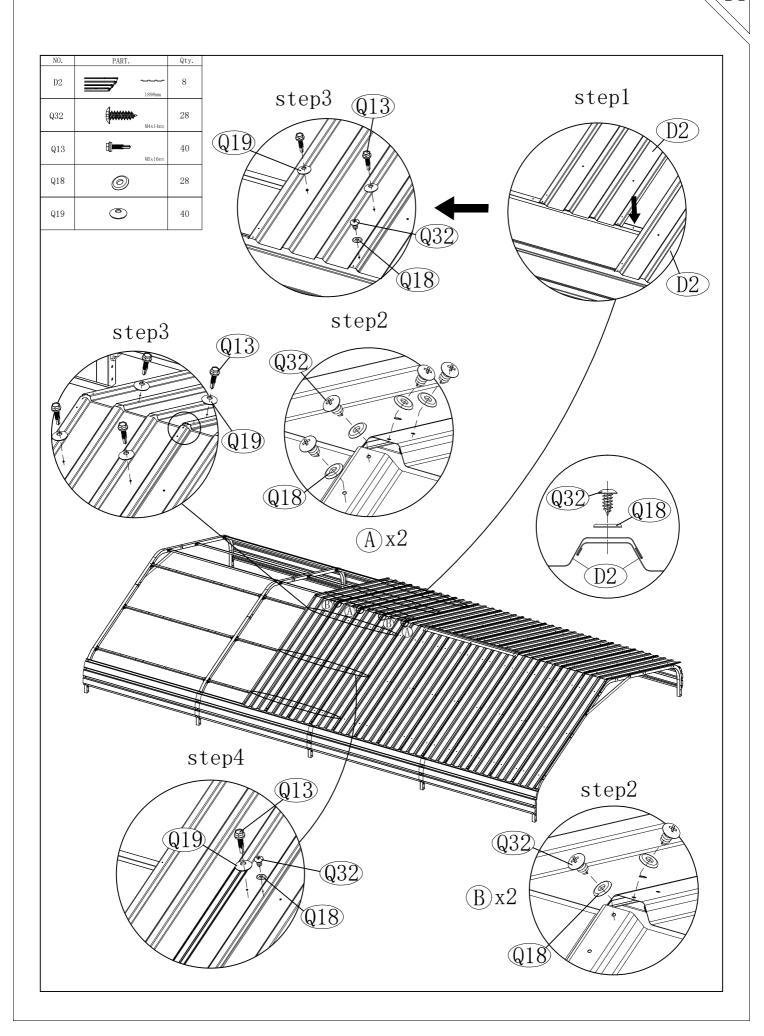


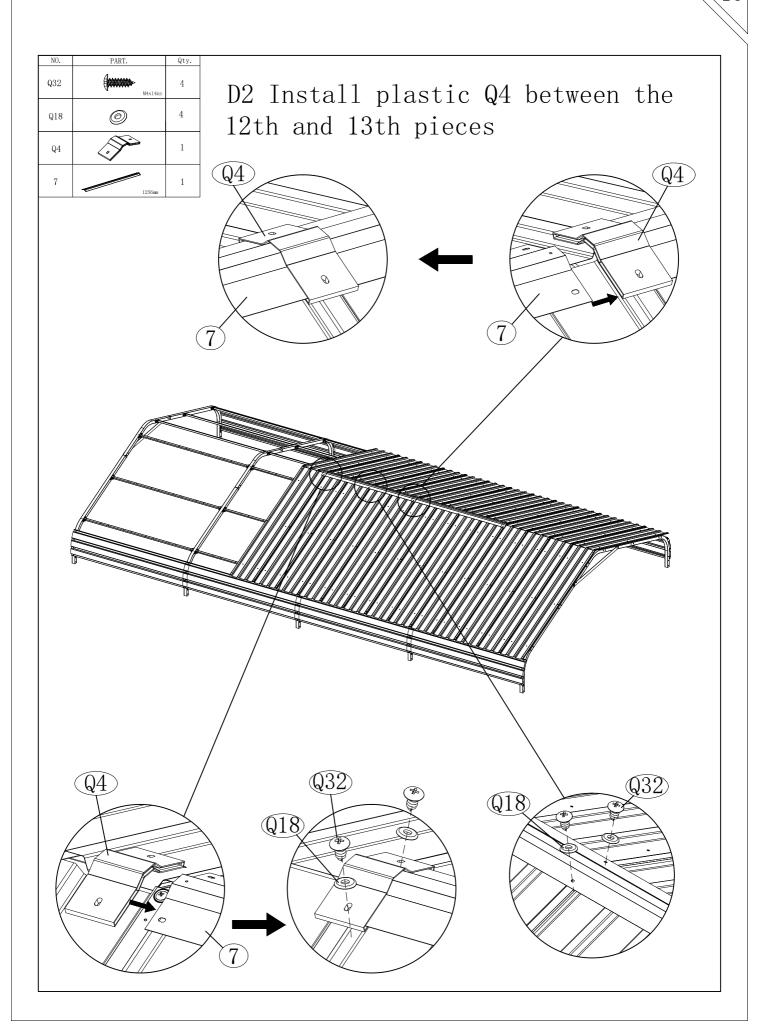


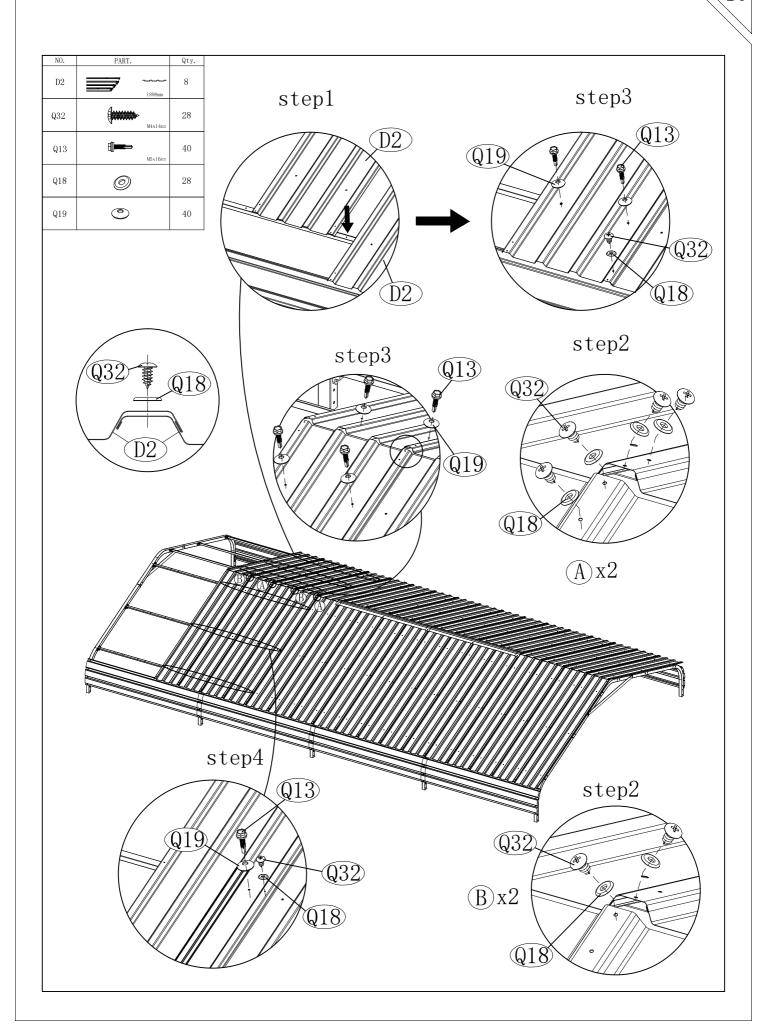


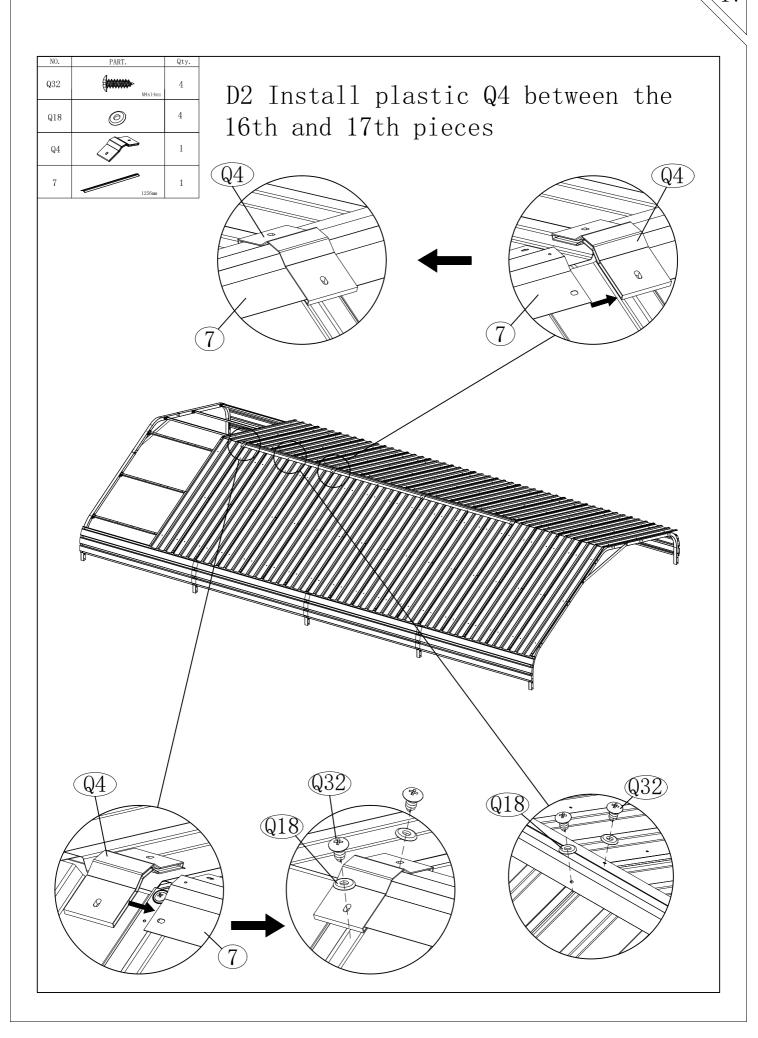


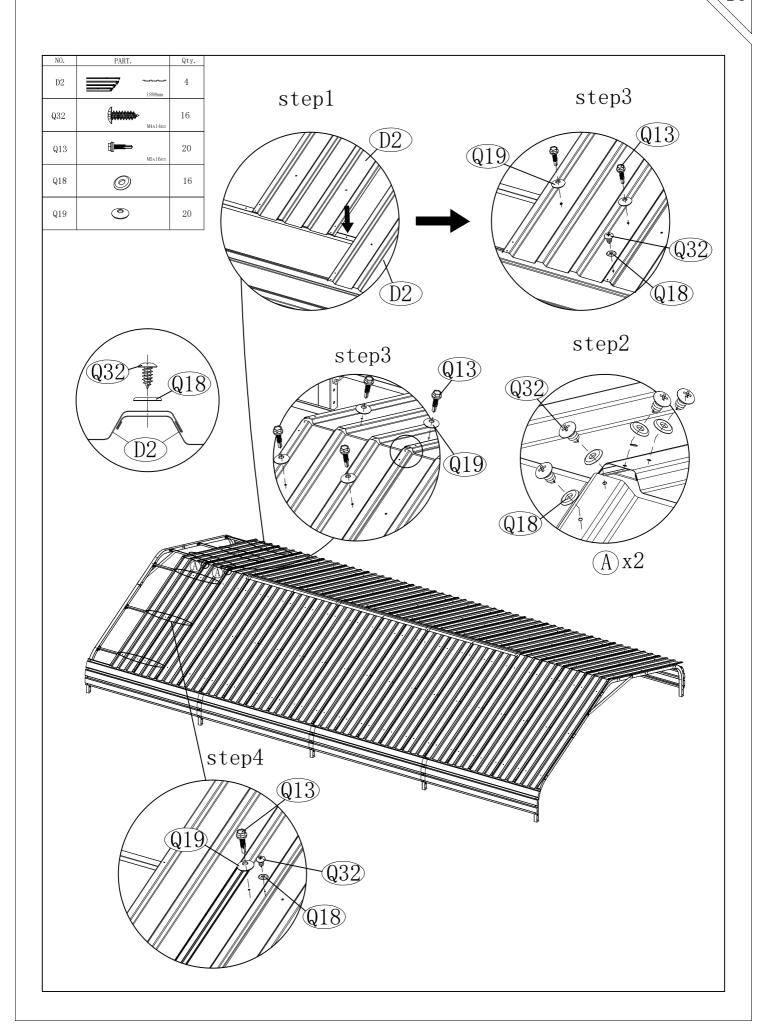


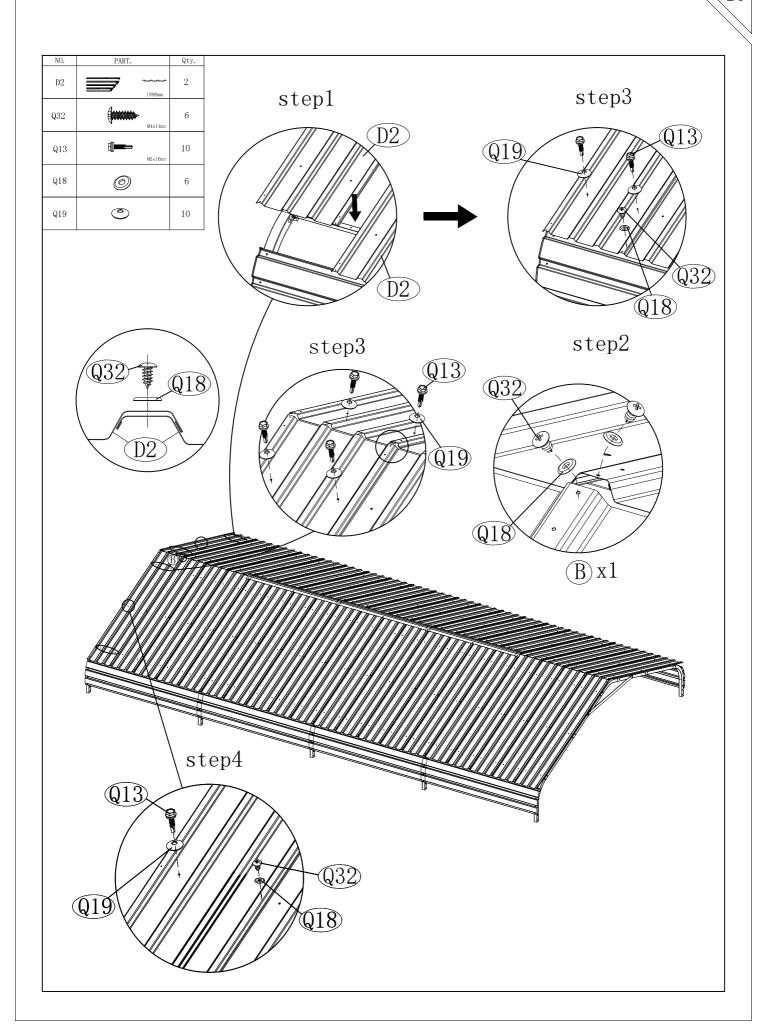


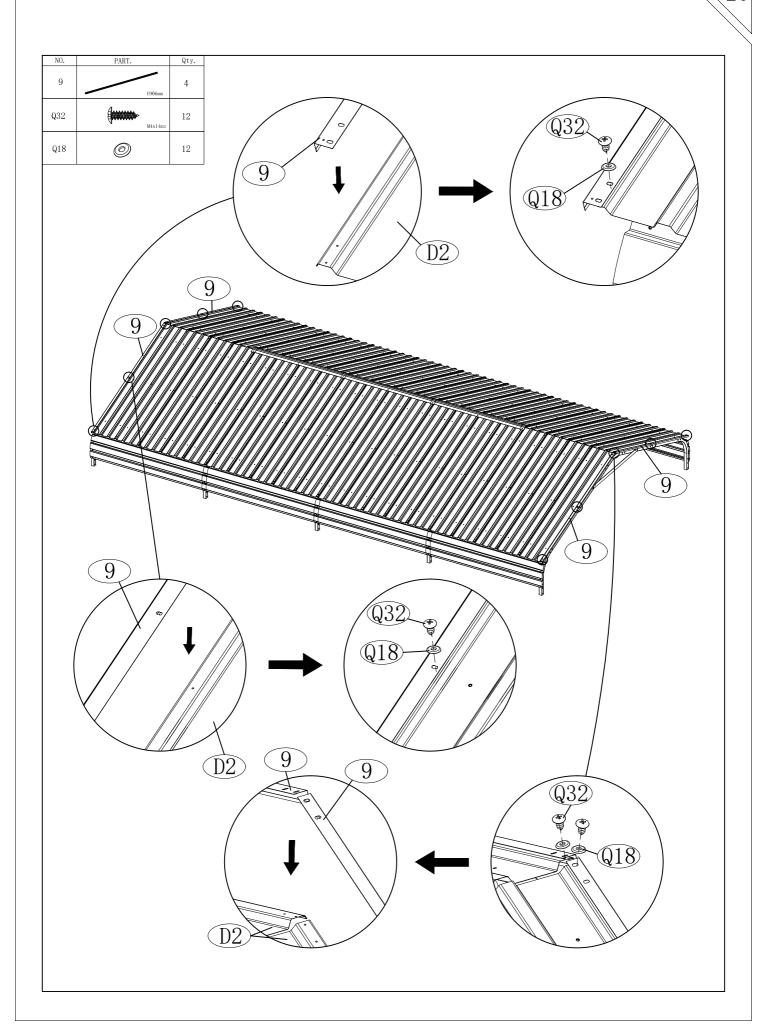


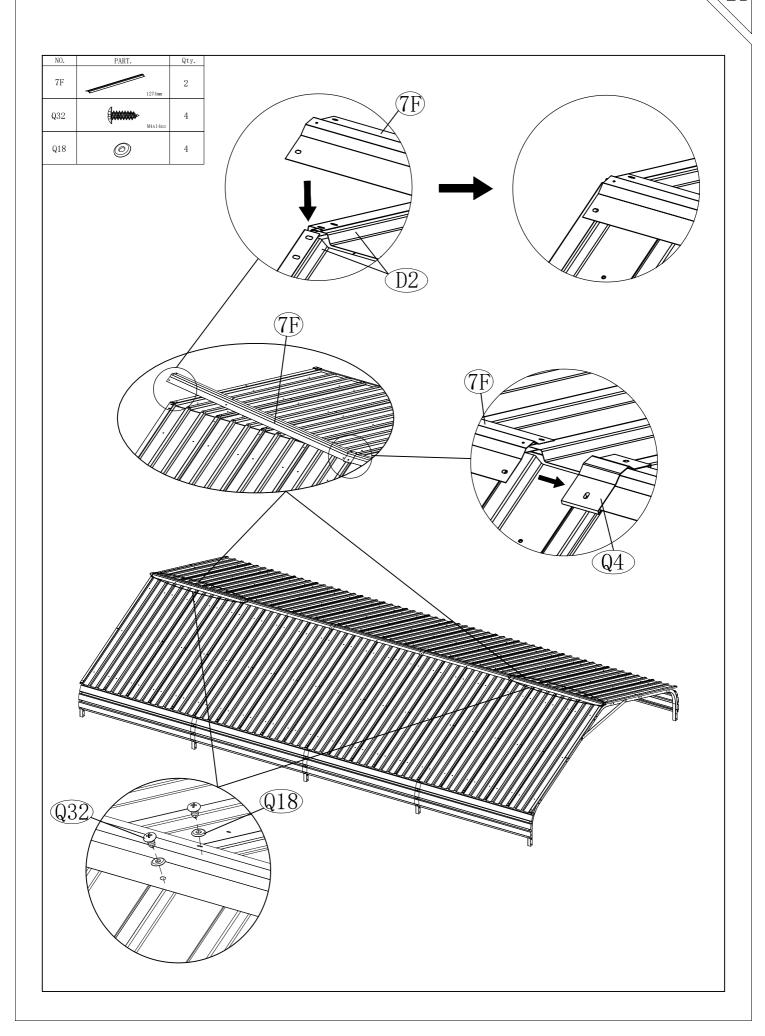


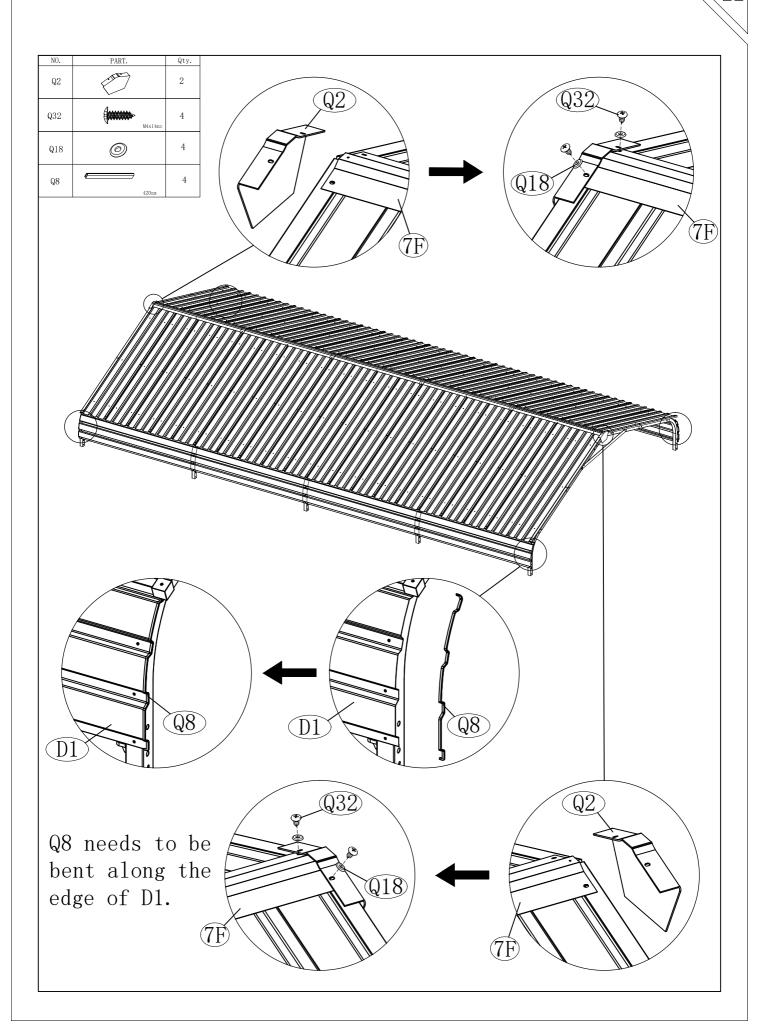


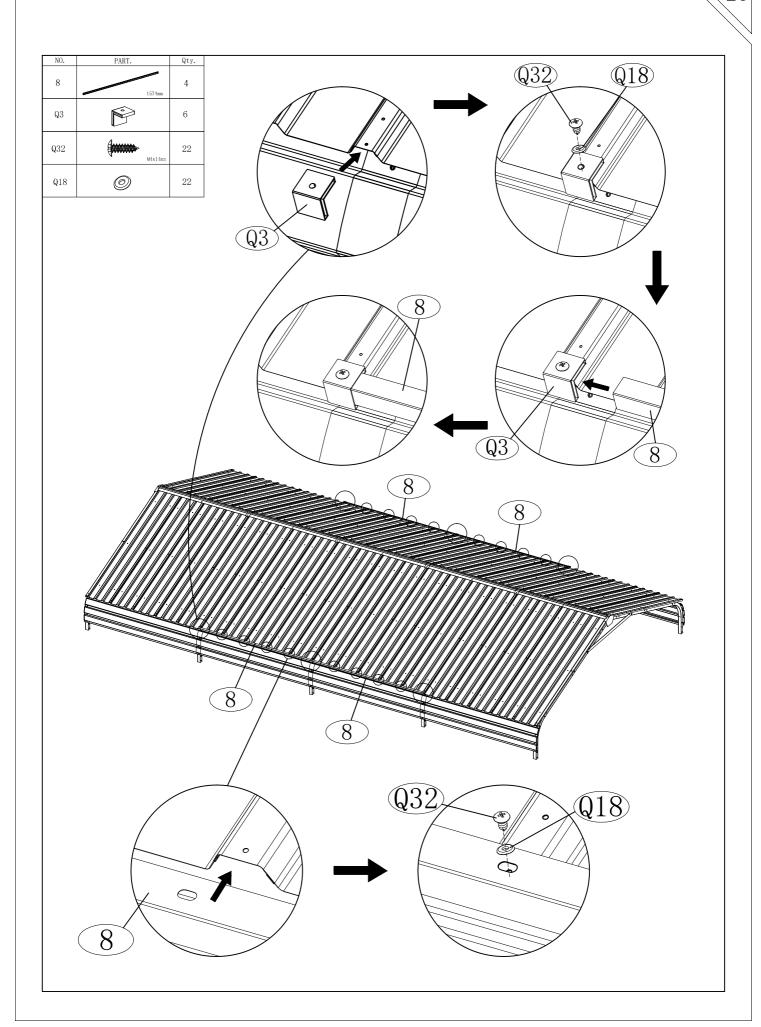

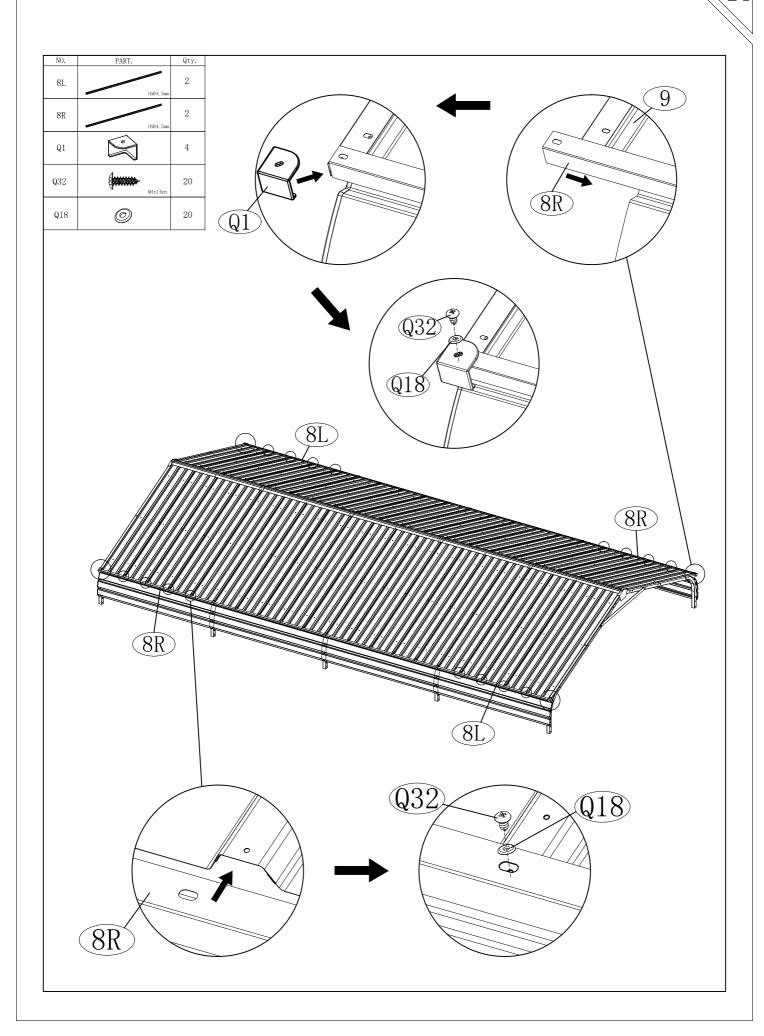

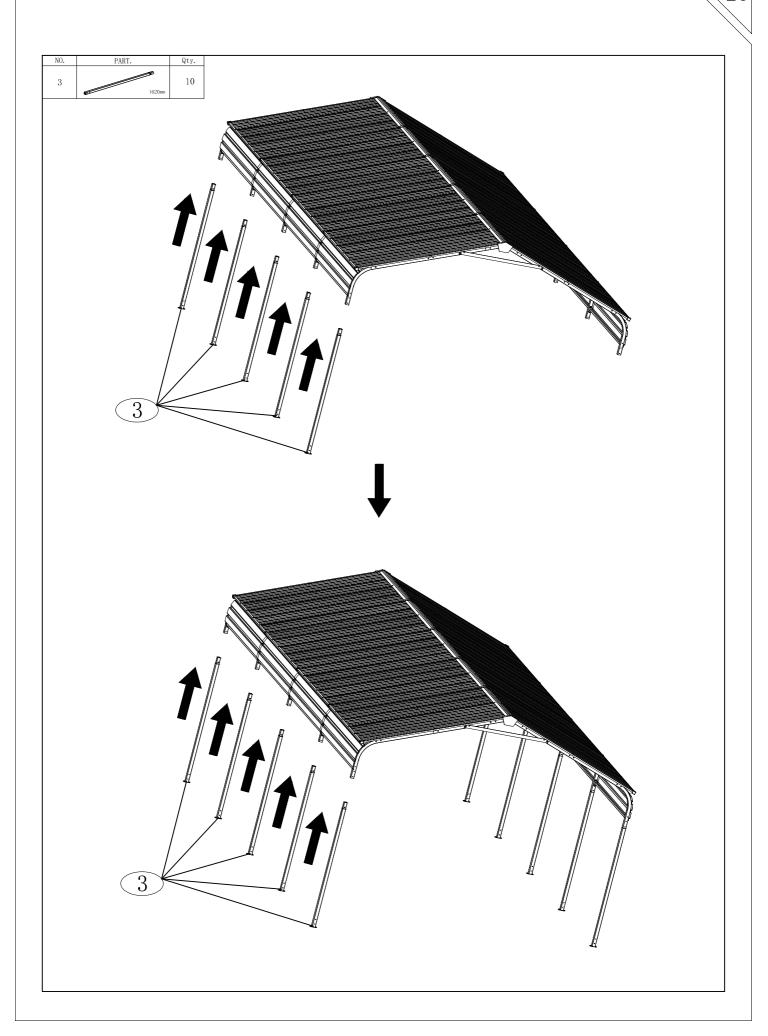

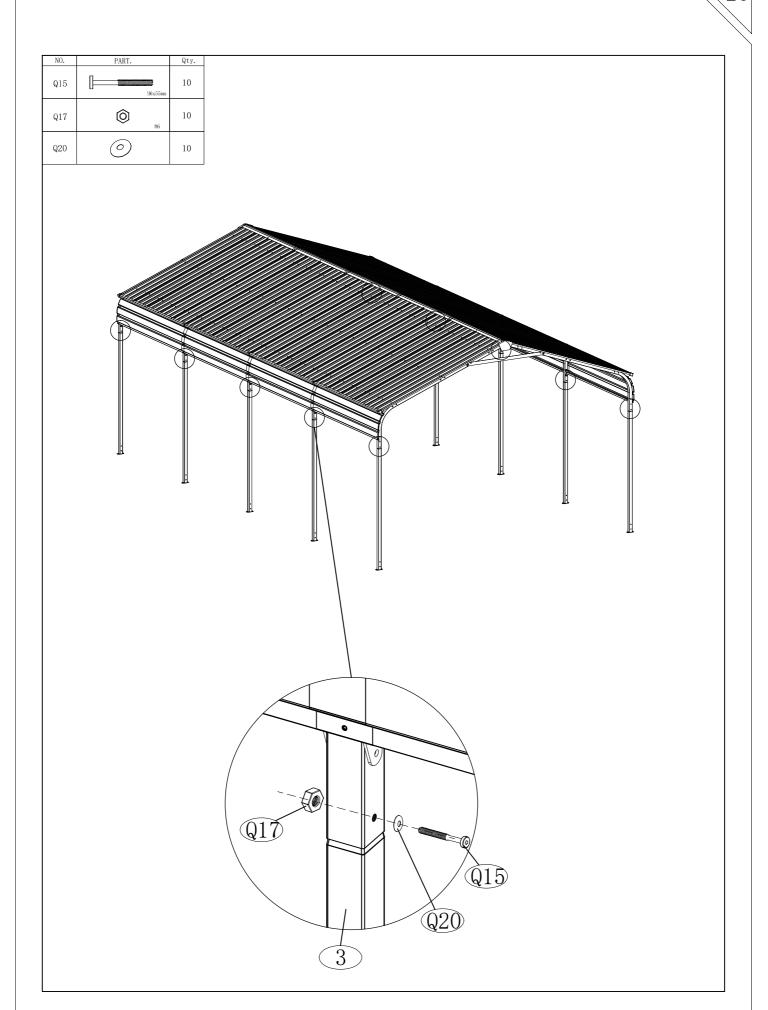

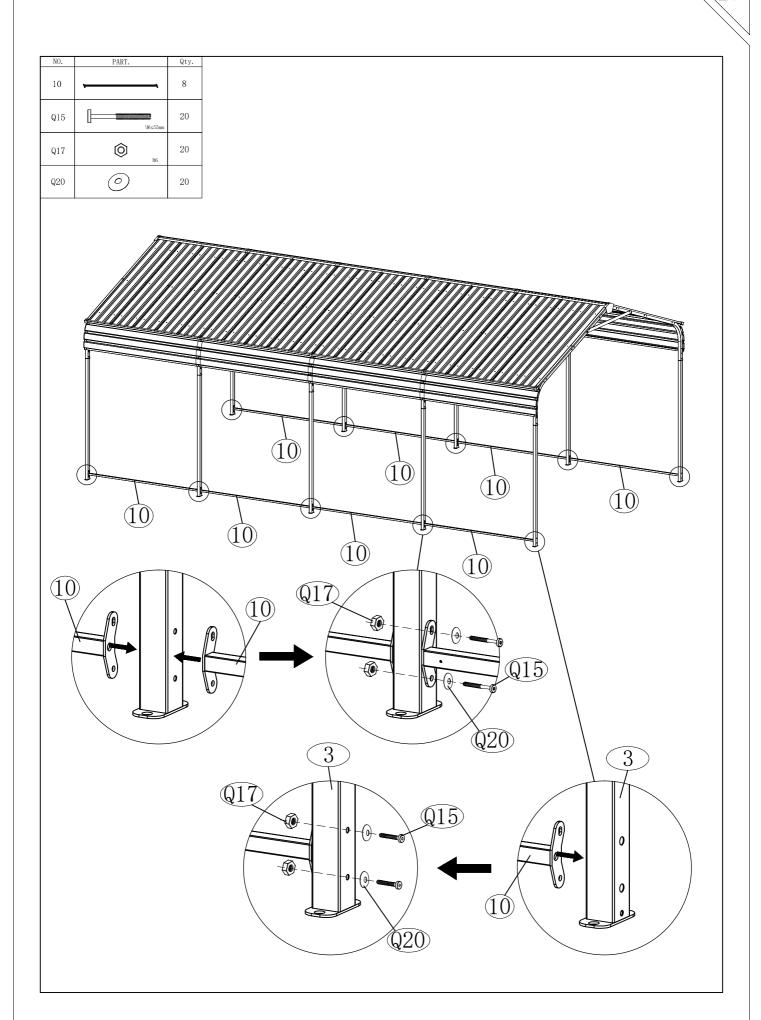

NO. PART. Qty. 95 Plastic screw cap 0158016
1 Tastic sciew cap WisaMio
is used to prevent
the sharp end of
the screw from
scratching people.
1. It is necessary to use ground
3 nails and expansion screws,
/ whether installed on stable
ground, to avoid the collapse
of the car shed to the inside
or nearby personnel causing
devastating injuries and
property losses.
Q6
Q5
Q5
QU