

# Print in china

# **Instruction Manual**

# **LED Wall Lamp**




### **PACKAGE CONTENTS**

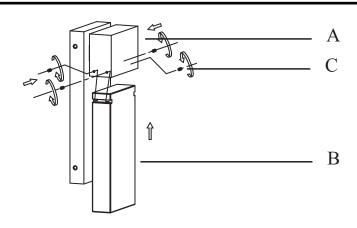

| PART | DESCRIPTION    | QUANTITY |
|------|----------------|----------|
| A    | Fixture body   | 1        |
| В    | Square crystal | 1        |
| С    | Small screw    | 4        |

# **HARDWARE CONTENTS(shown actual size)**

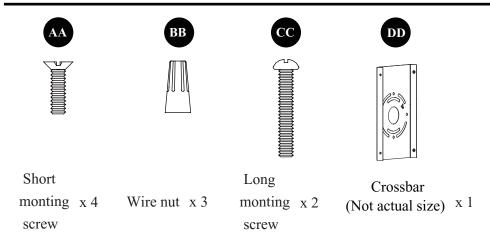



# **SAFETY INFORMATION**

Please read and understand this entire manual before attempting to assemble, operate or install the product.



# WARNING

- TURN OFF ELECTRICITY at main fuse box (or circuit breaker box) before beginning installation by removing fuse (or switching off circuit breaker).
- MINIMUM 90°C SUPPLY CONDUCTORS.

### **PREPARATION**

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

## **Estimated Assembly Times: 25 minnutes**

Tools Required for Assembly (not included): Flathead screwdriver, Phillips screwdriver, Pliers, Electrical tape, Wire cutters, Safety glasses.

Helpful Tools (not included): Wire strippers, Step ladder.


Customer Service: service@24h-reply.com


### **ASSEMBLY INSTRUCTIONS**

4. Attach wire nuts (BB). Tape wire nuts (BB)

1. Insert the square crystal (B) into the fixture body (A) and tighten the small screws (C) with the L-shaped wrench.

**Hardware Used** 

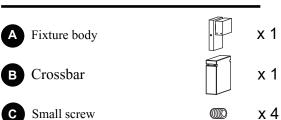

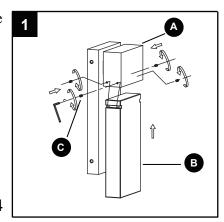

Hardware Used

BB Wire nut


X 3

2. Attach the crossbar (DD) to the outlet box (not included) with the long mounting screws (CC).

### **Hardware Used**

Co Long mounting screw x 2

**DD** Crossbar



2


5. Place fixeture (A) onto the crossbar (DD). Secure with short mounting screws (AA).


### **Hardware Used**

AA Short mounting screw


and wires together.





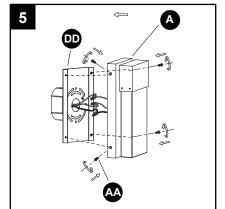

3. Strip 3/4 in. of insulation from wire ends. Twist stripped ends together with pliers (not included), black to black (power) and white to white (neutral). Attach copper wire to ground wire. Helpful hint: If necessary, attach copper ground wire to grounded outlet box.

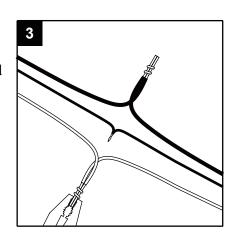

6. The lamp installation has been completed, no bulb is required.

