

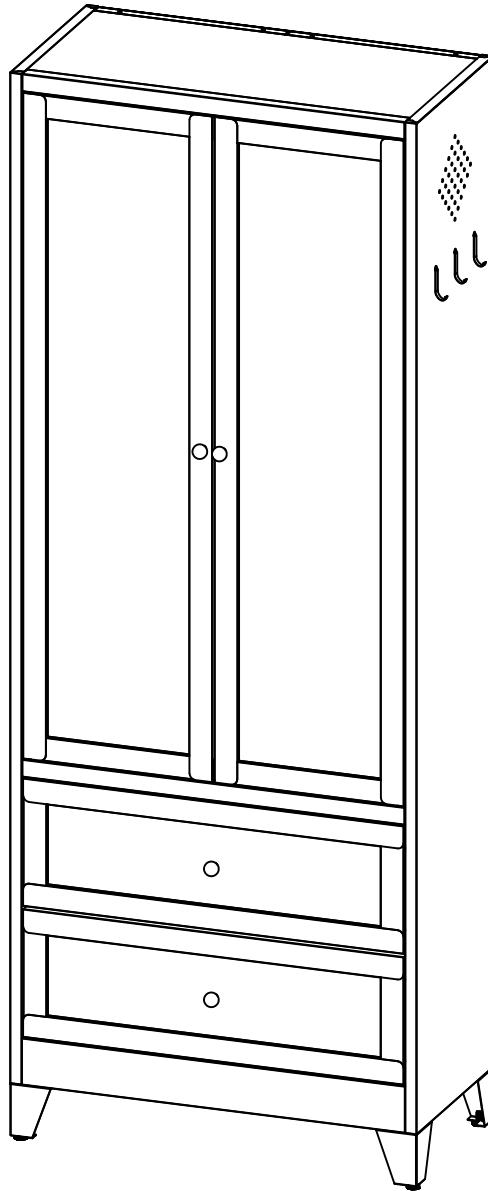
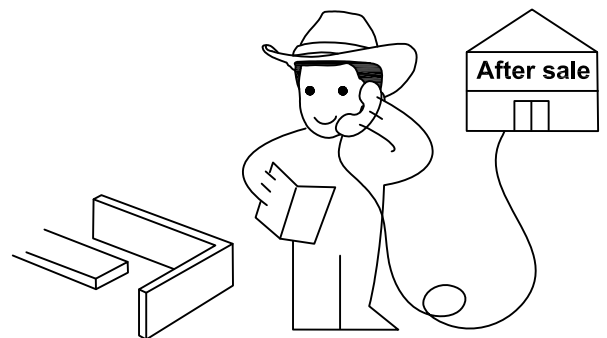
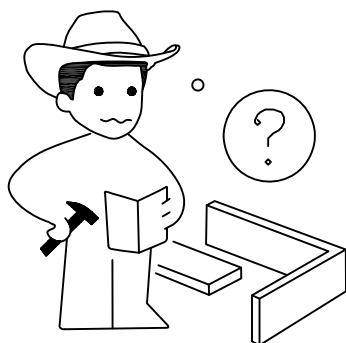
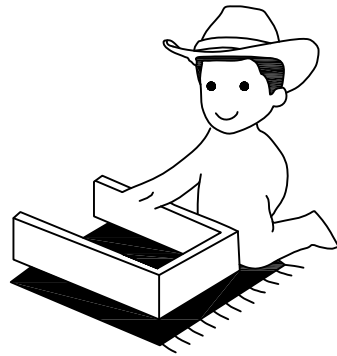
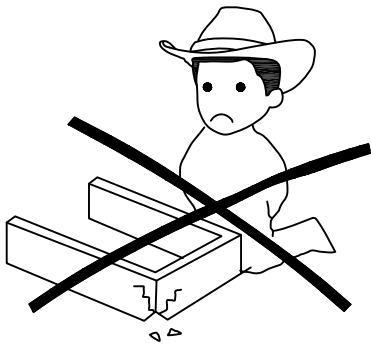
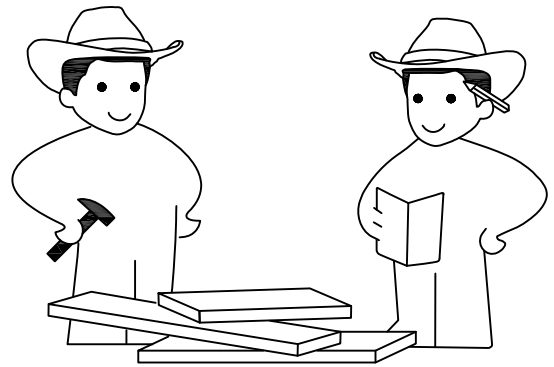
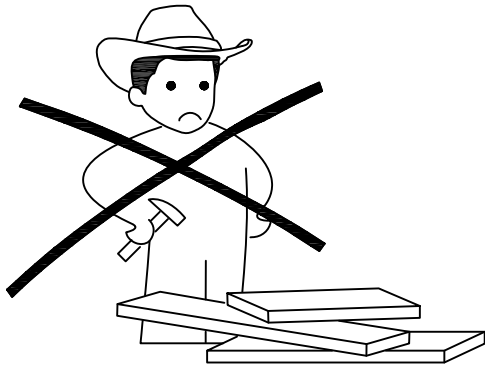


















B03SC-004WM




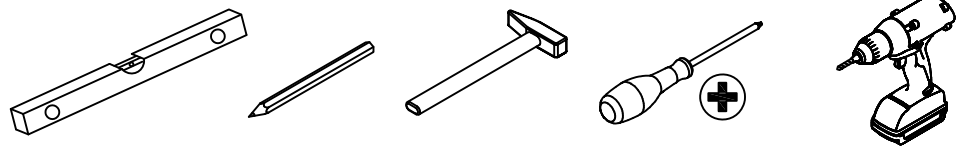


Version 1.0

Installation video

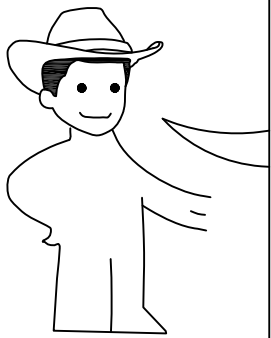


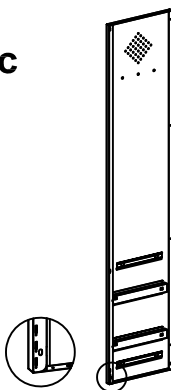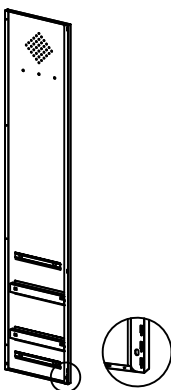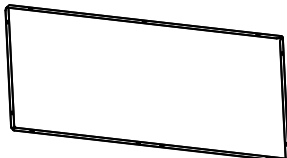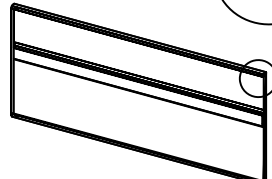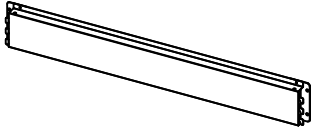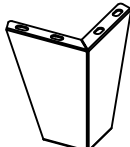1× 1*pc		2× 1*pc		3× 1*pc		4× 1*pc	
							
5× 1*pc		6× 1*pc		7× 1*pc		8× 2*pcs	
							
9× 2*pcs		10× 1*pc		11× 1*pc		12× 1*pc	
							
13× 2*pcs		14× 2*pcs		15× 2*pcs		 	
A×4*pcs		B×2*pcs		C×65*pcs		D×4*pcs	
				 			
F×8*pcs		G×2*pcs		H×4*pcs			
							
I×2*pcs		J×4*pcs		K×2*pcs		L×1*pc	
							
M×6*pcs		N×4*pcs		O×4*pcs		P×2*pcs	
							

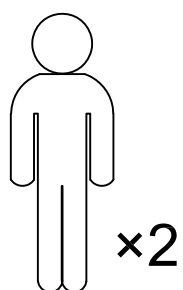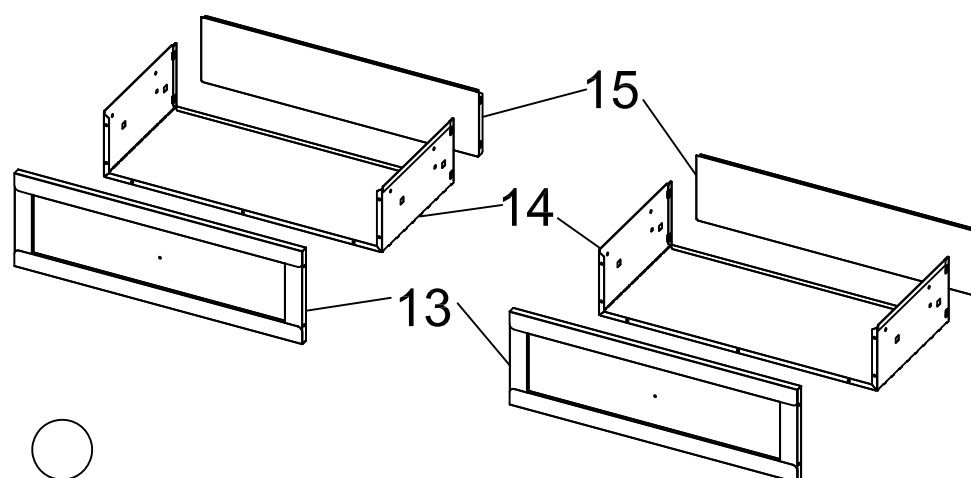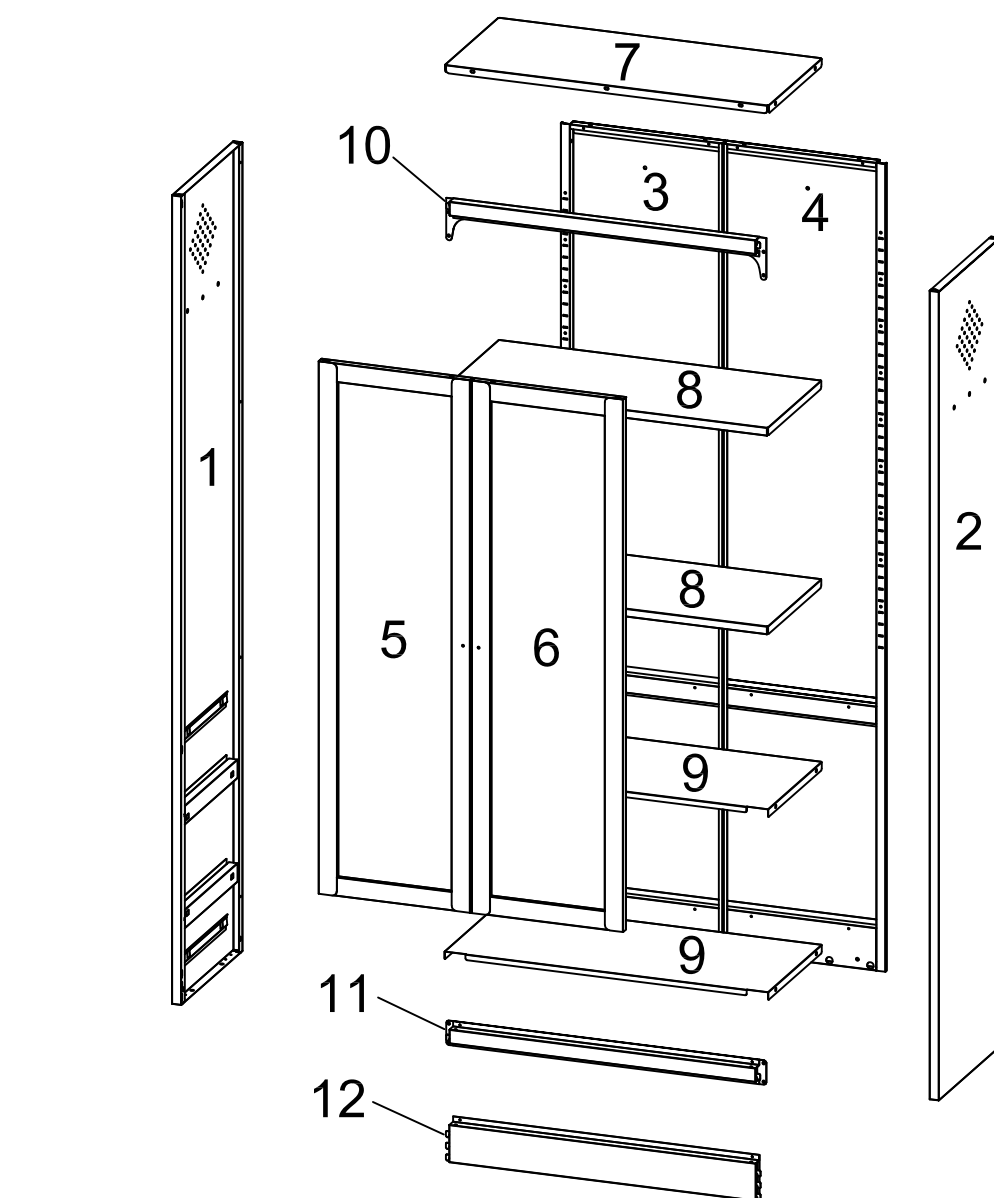

1


Put the two rear walls together and put three bolts and nuts to hold them in place.

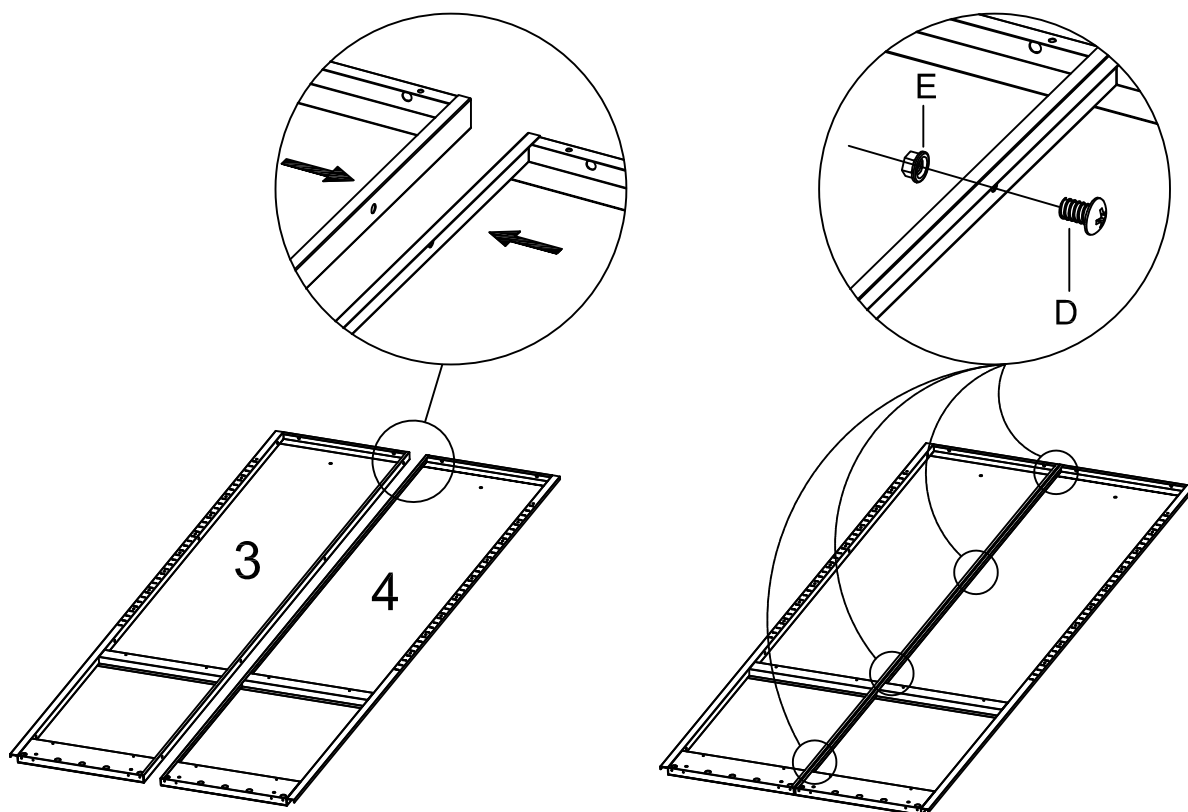

D×4 
E×4 


2

Simply overlap each sidewall in the channel of the rear wall and put three screws on each side to hold them in place.

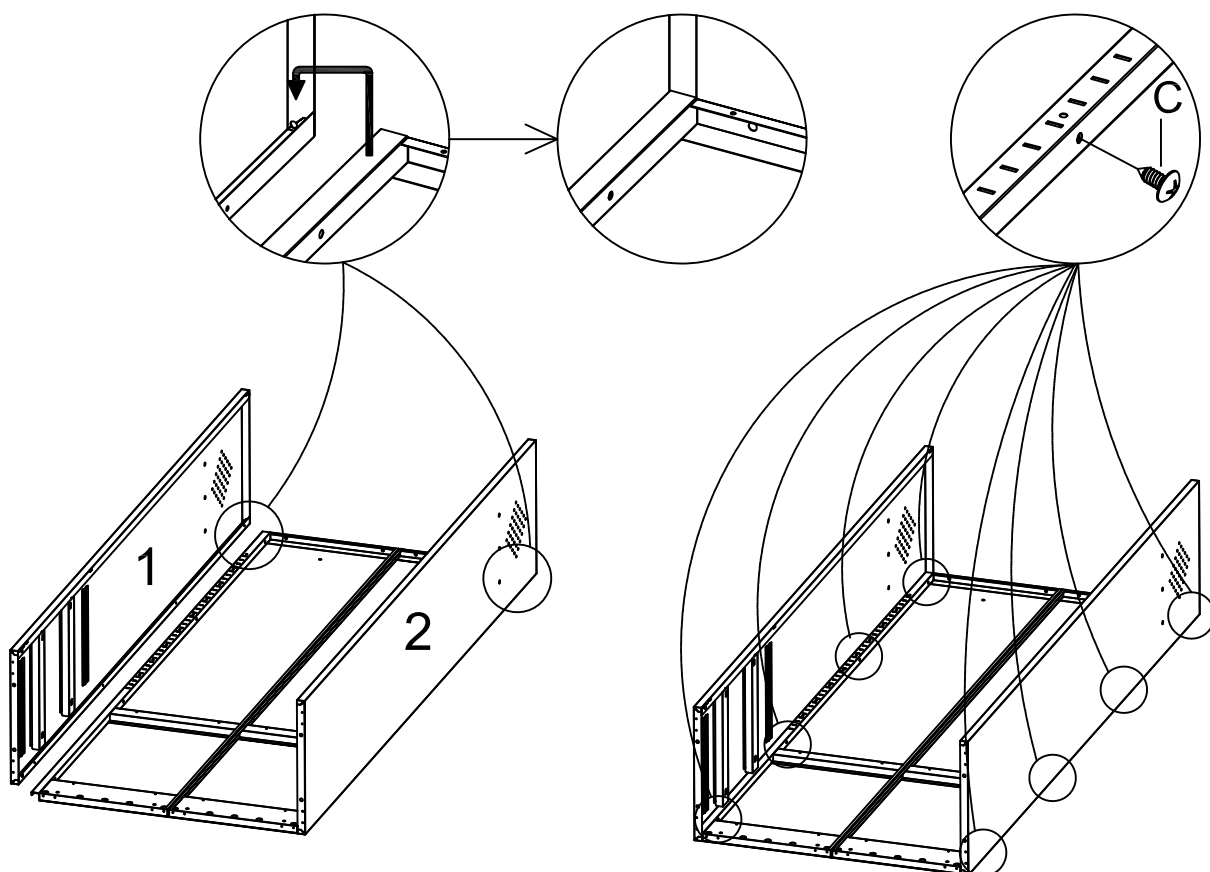


C×8 


3

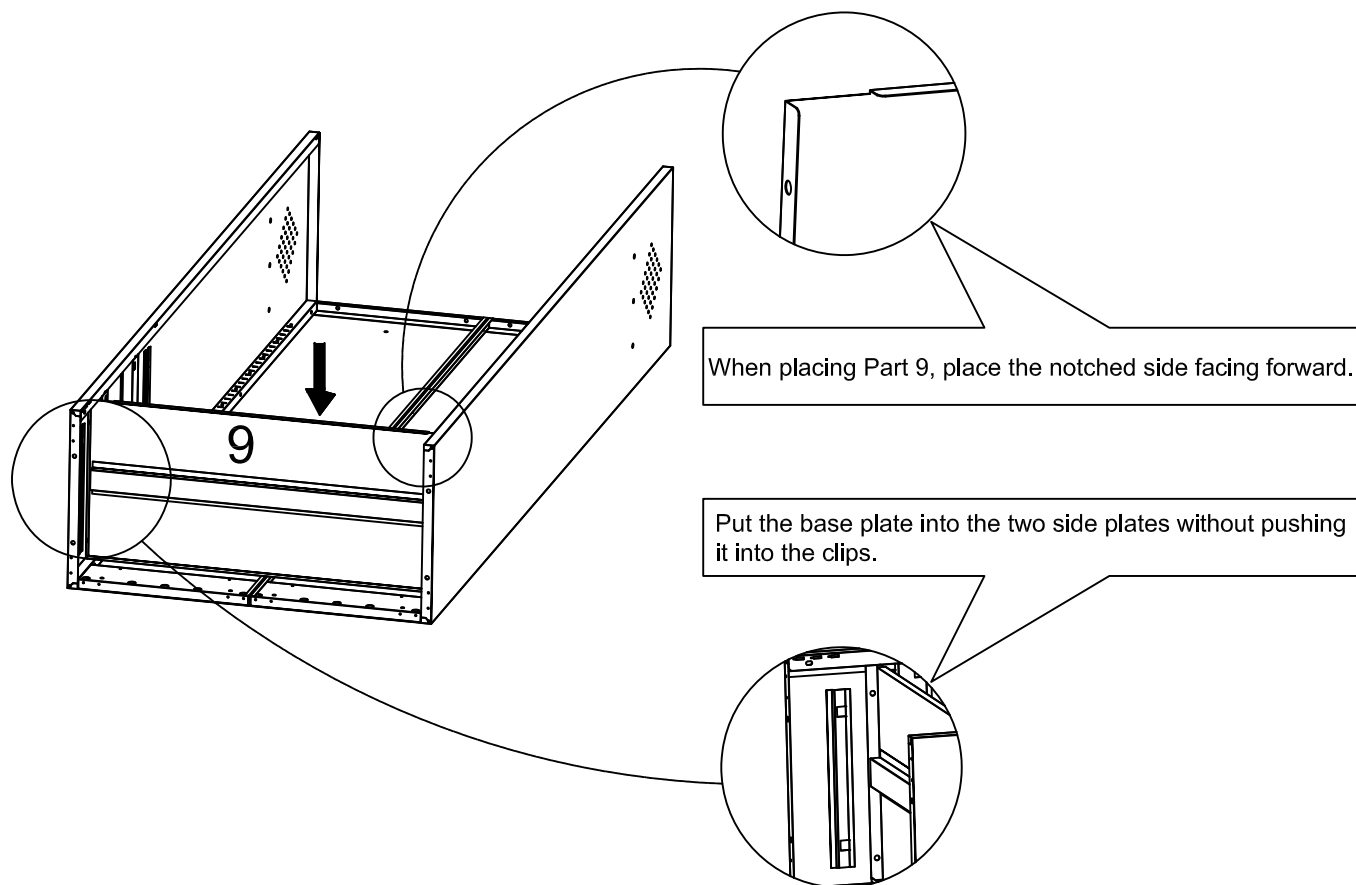

4

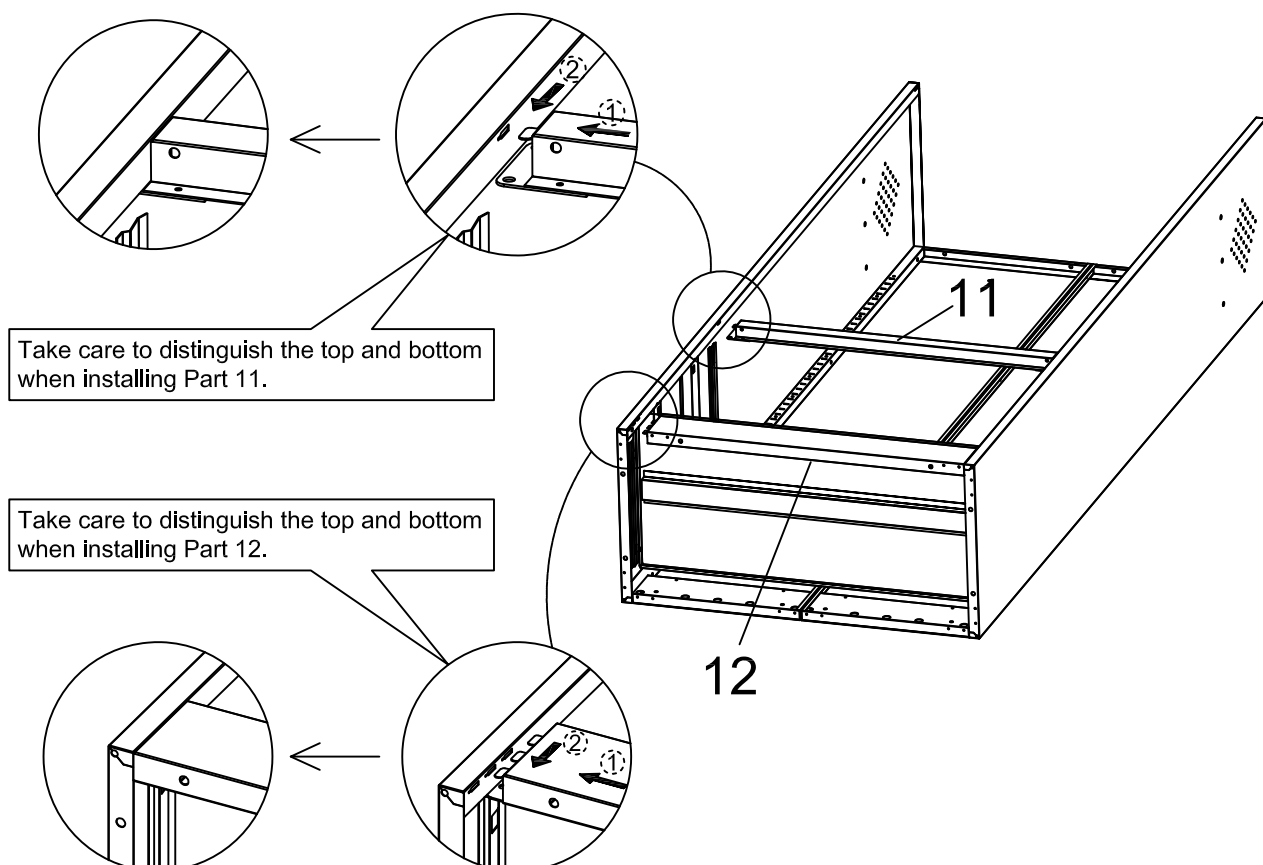


5

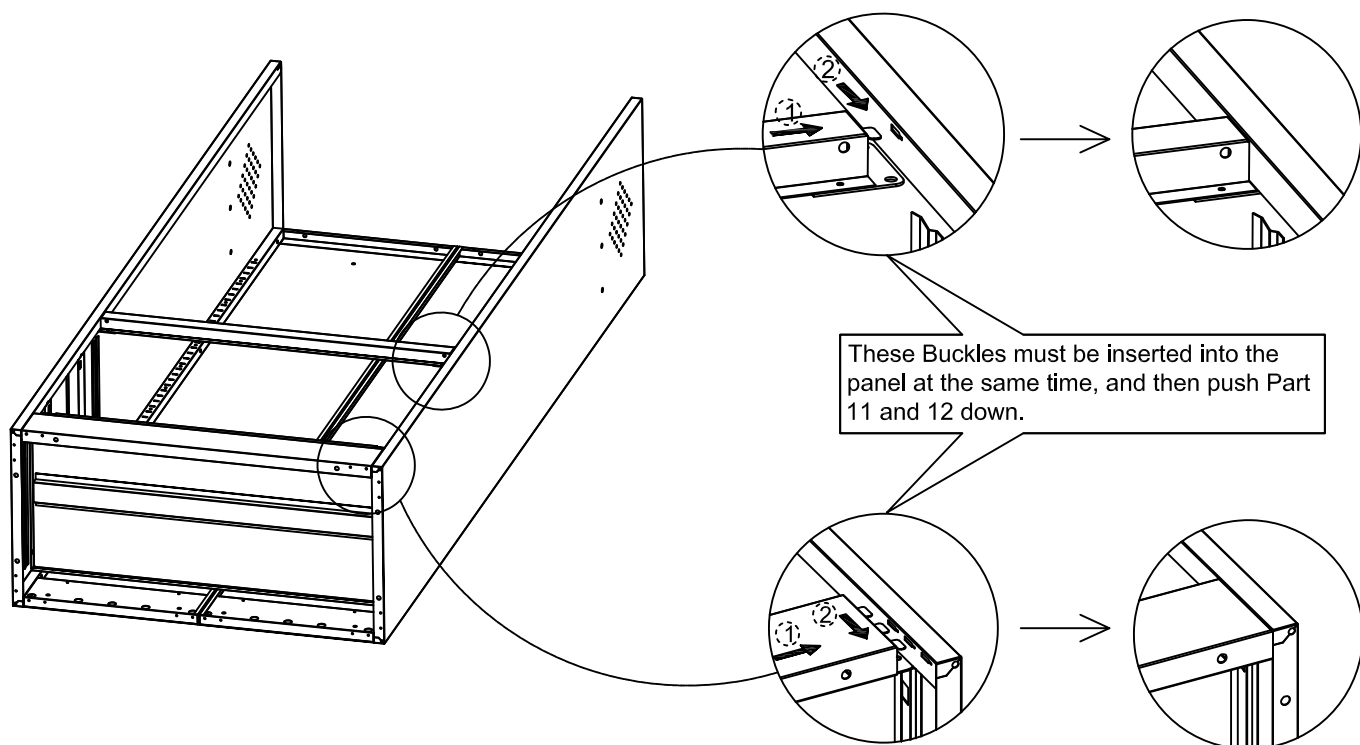


6

Push the base plate into the slot.

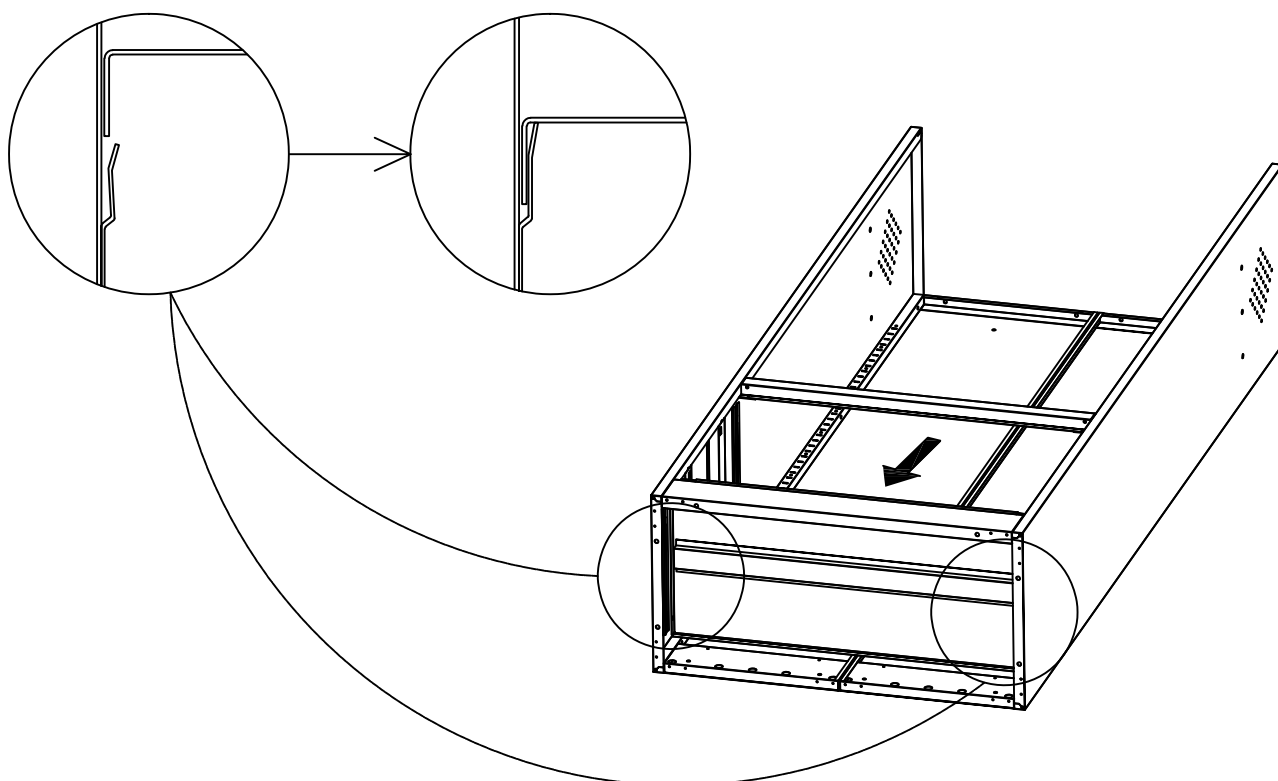

7

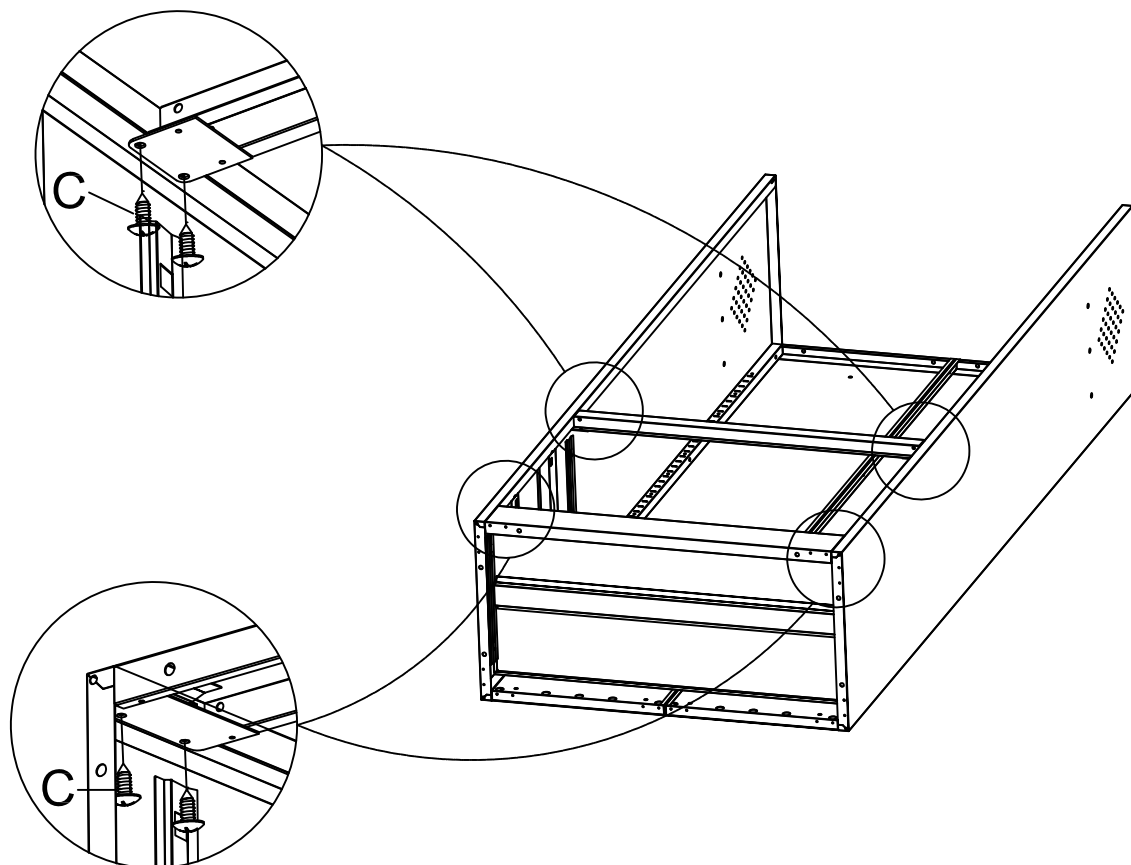


C×8



8


Insert the clips on both sides of Part 10 into the holes on the side panels, then push them upwards to fix them at the bottom of the clips.

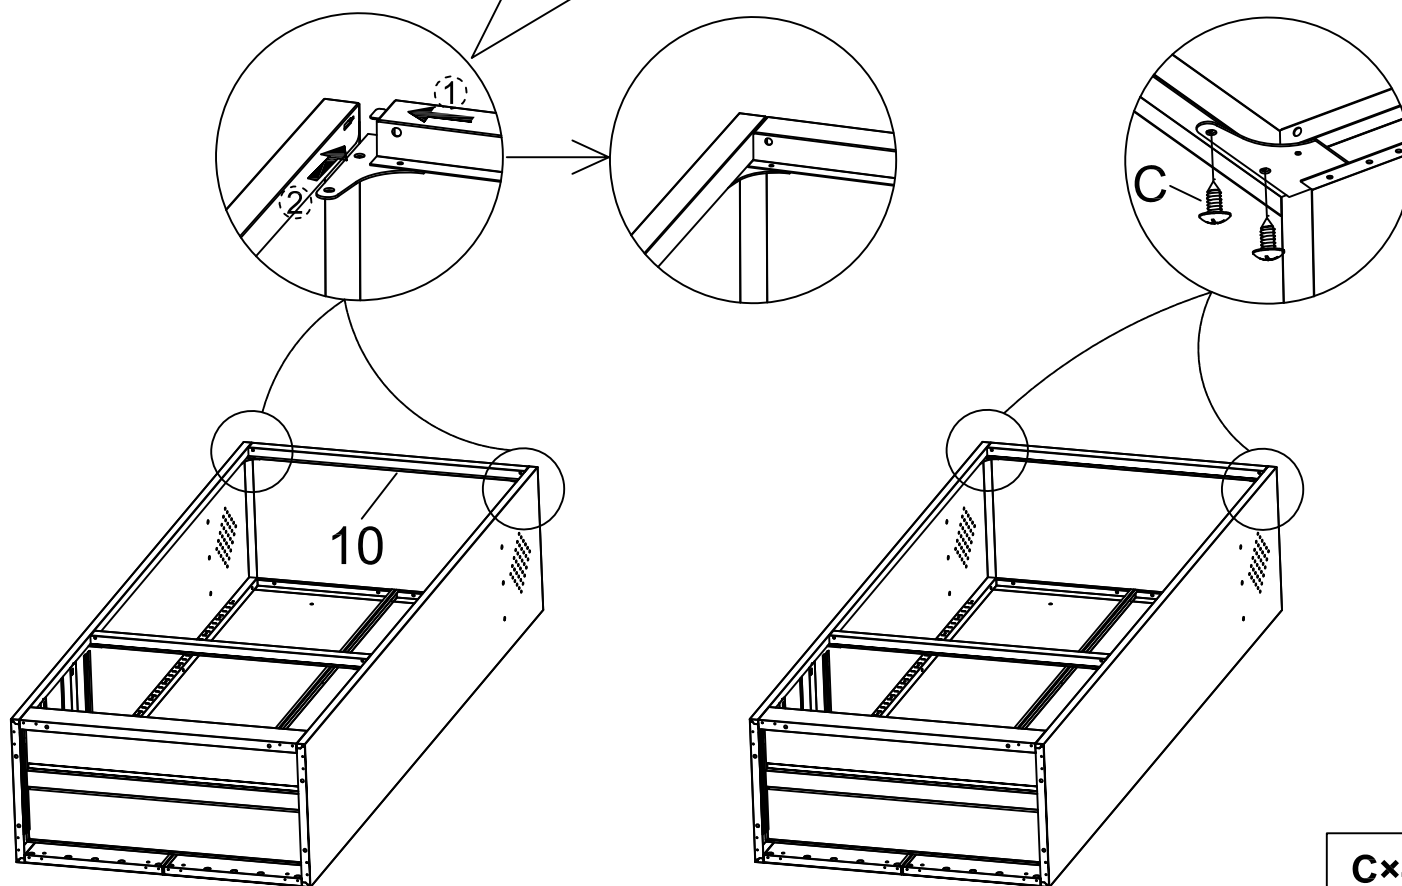

C×4




9

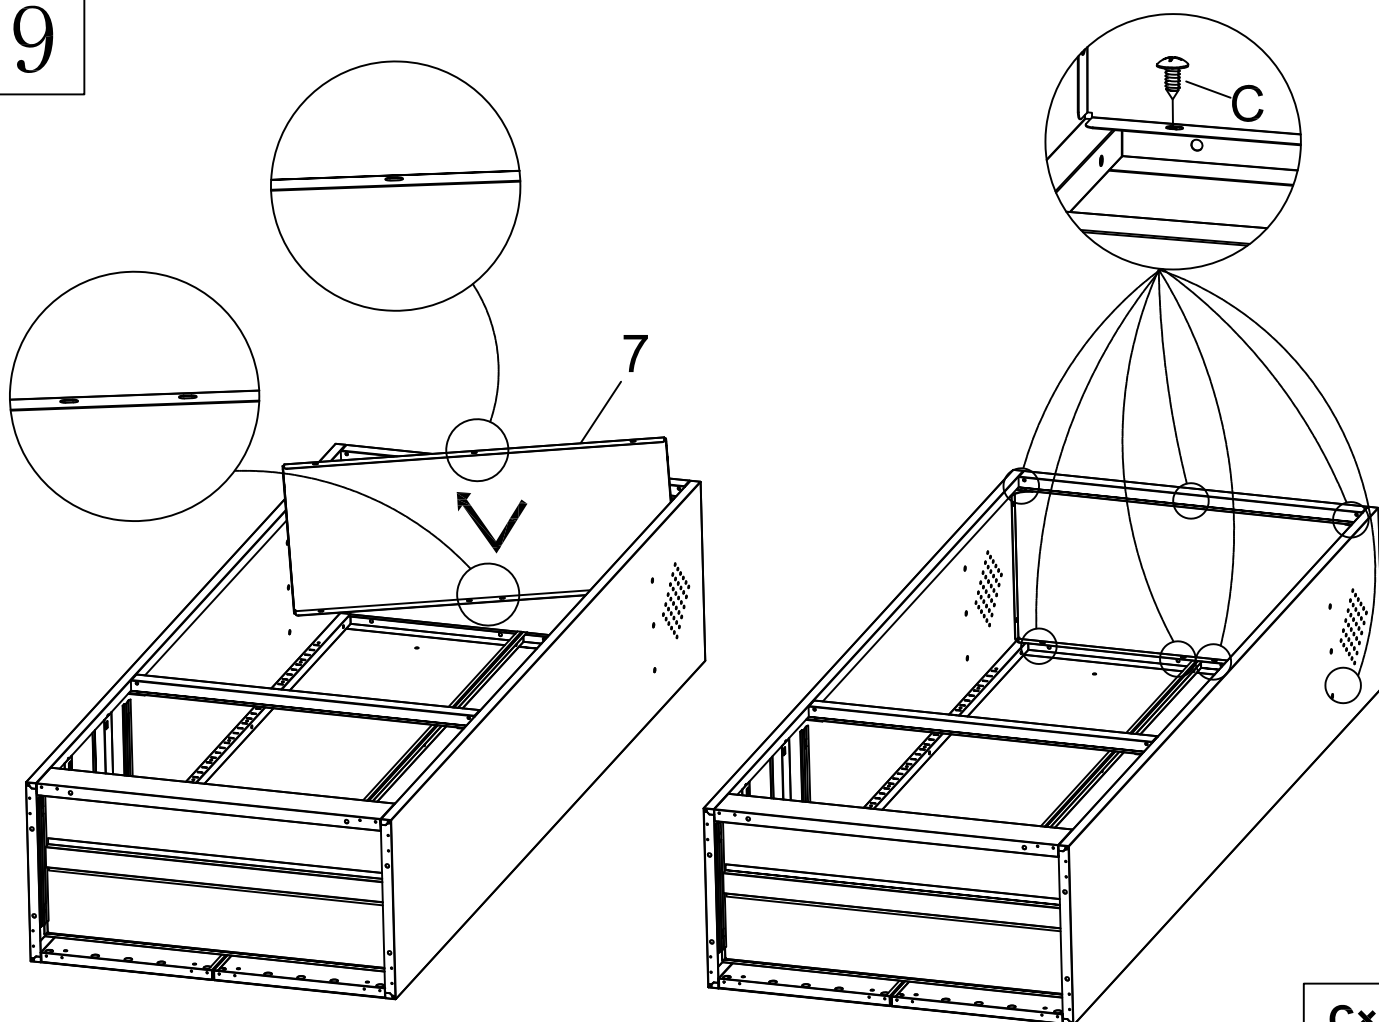


10

When placing Part 9, place the notched side facing forward.

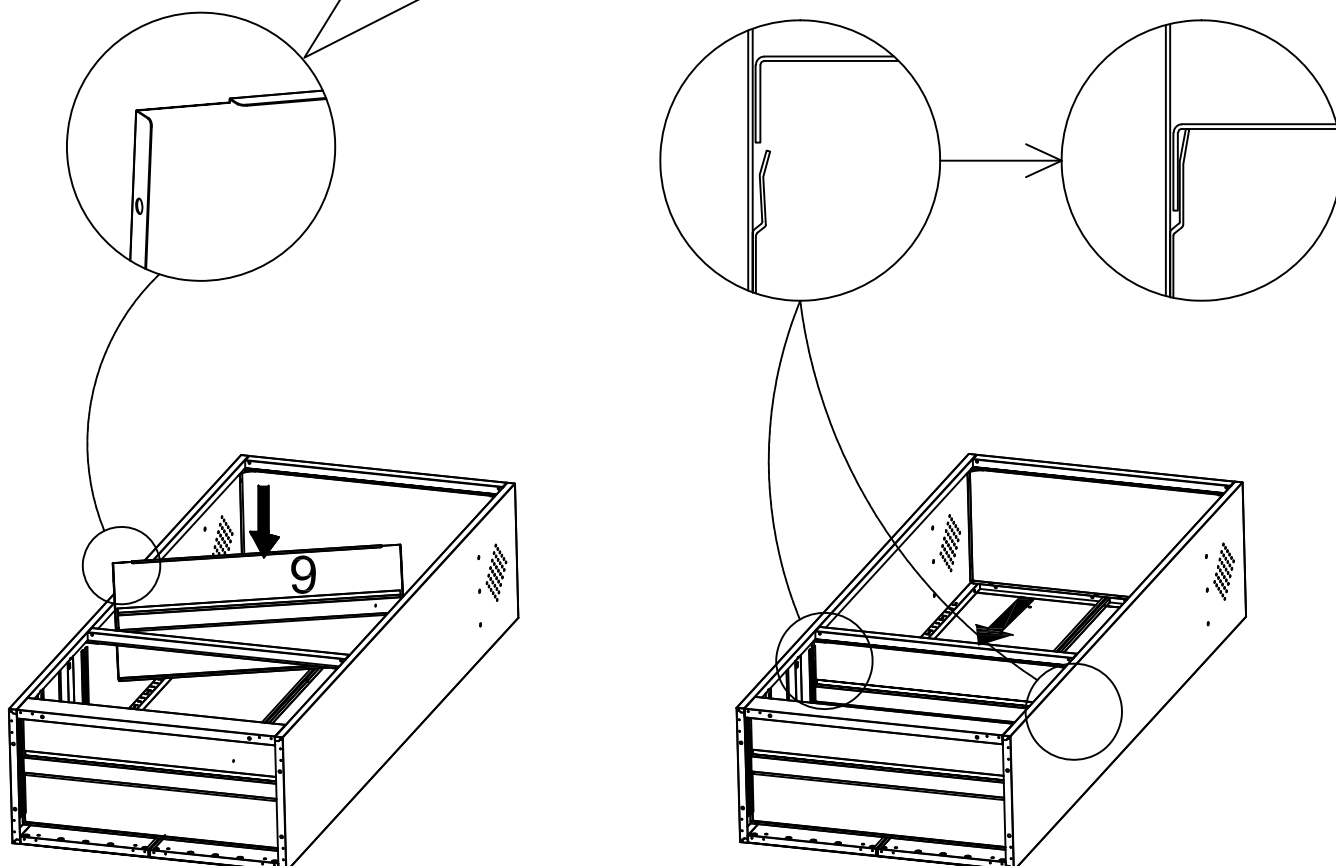


11

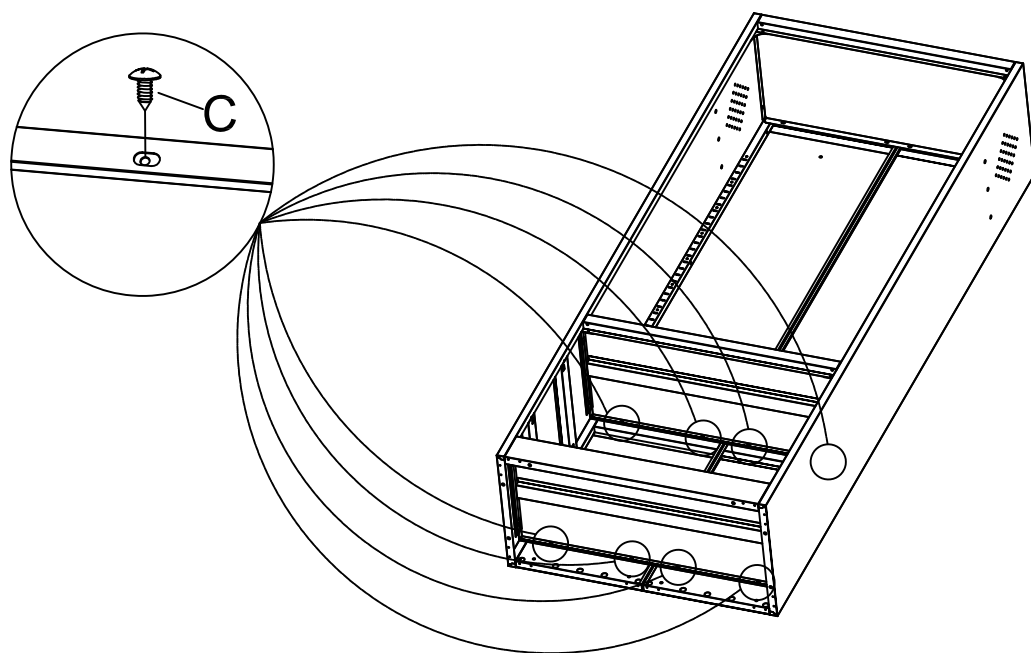

C×8 

12

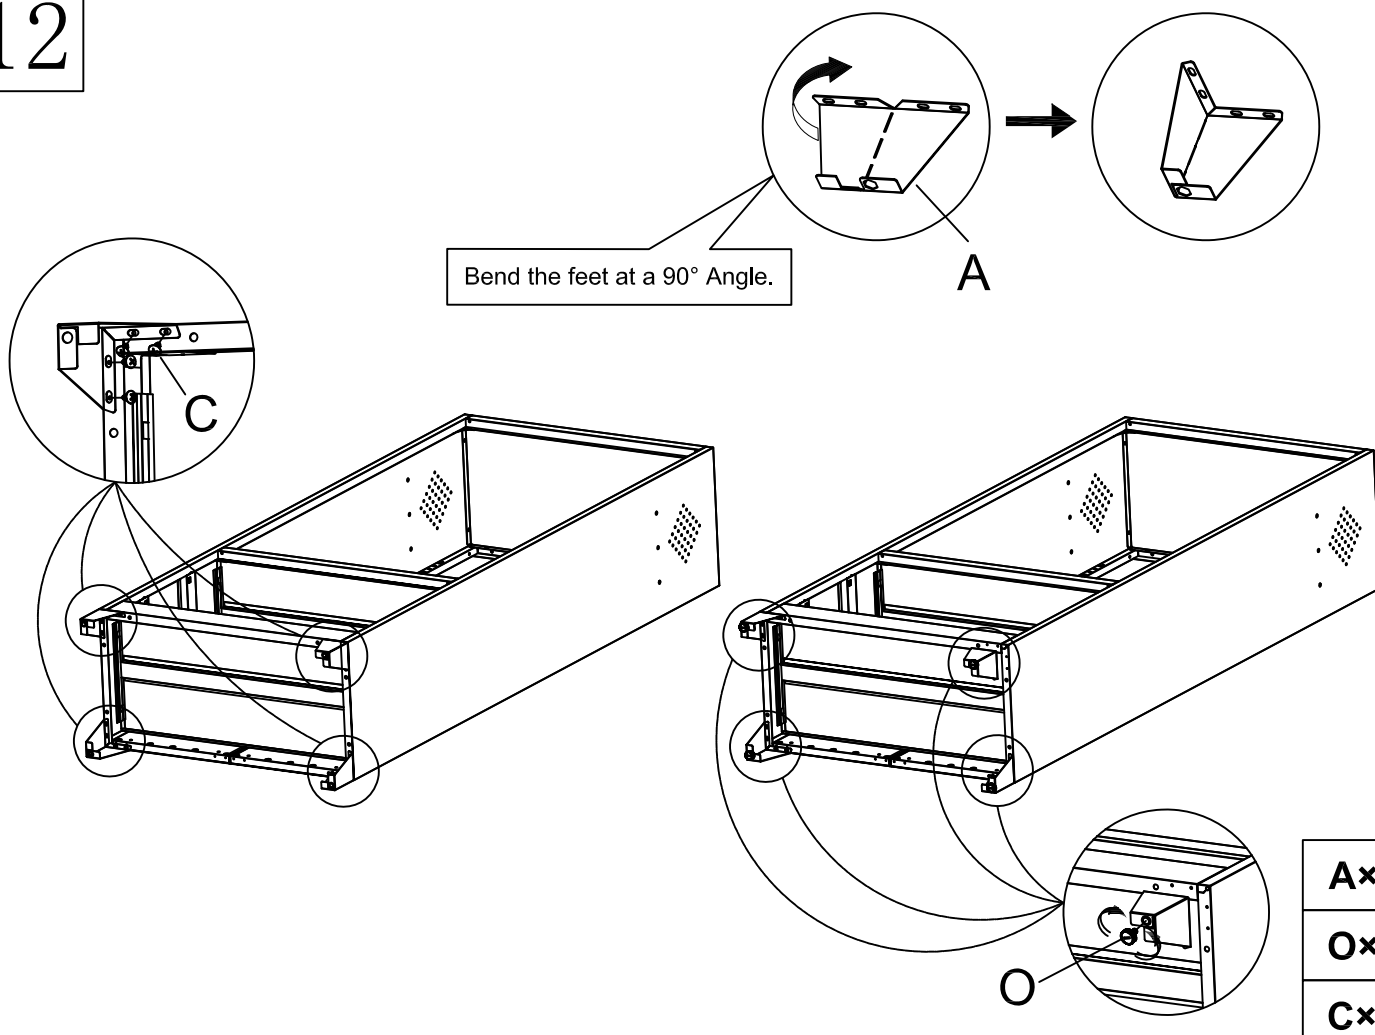



A×4 

O×4 


C×16 

13




The cabinet can be fixed to the wall as needed.

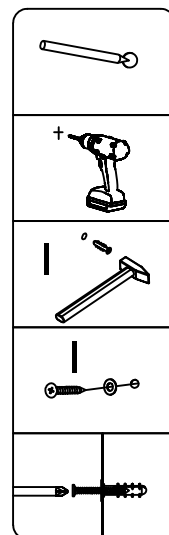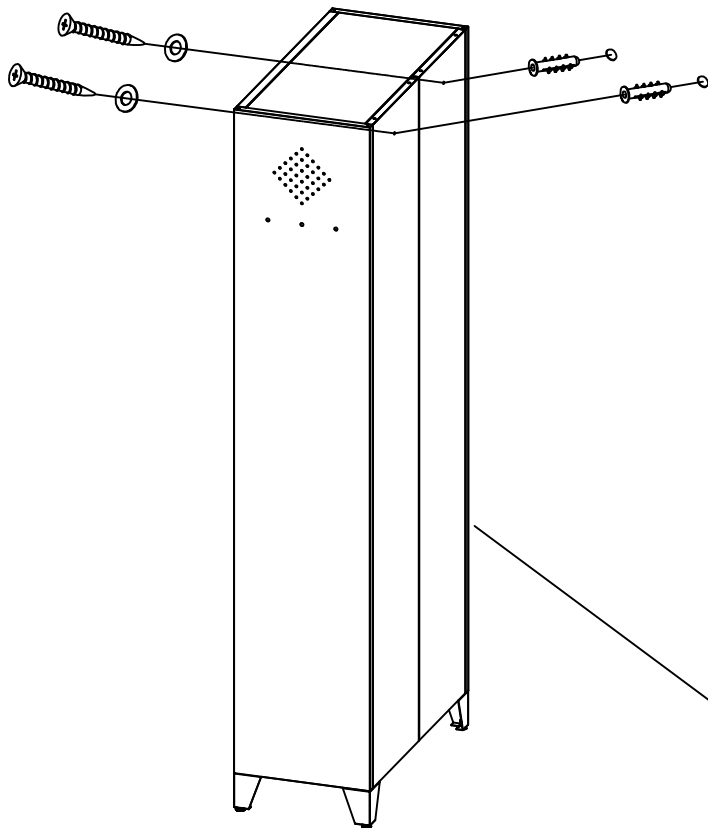

1x2




14

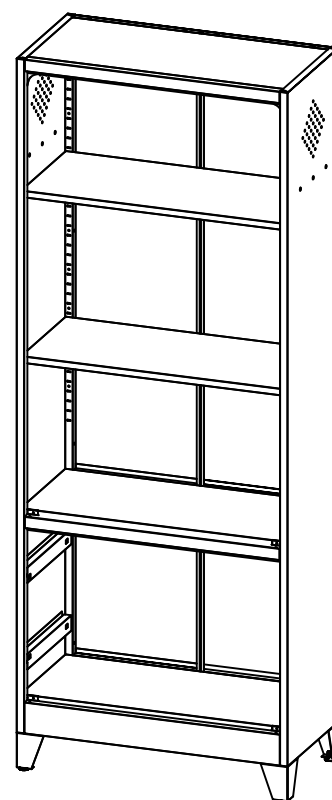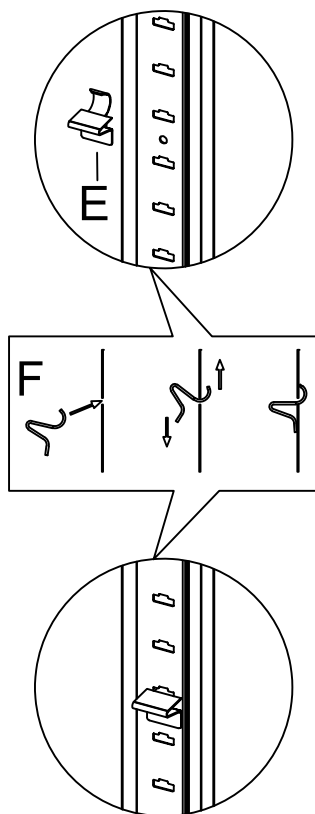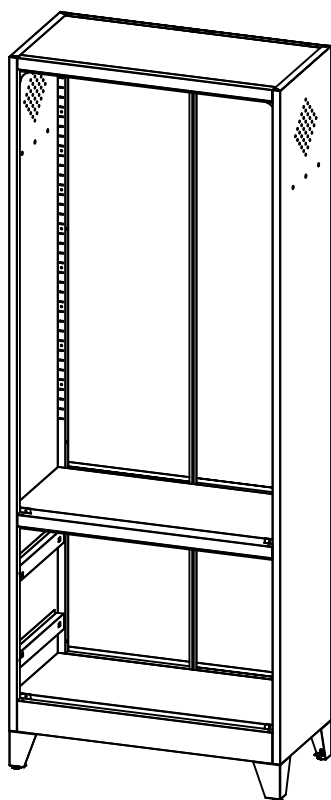

Fx8




15

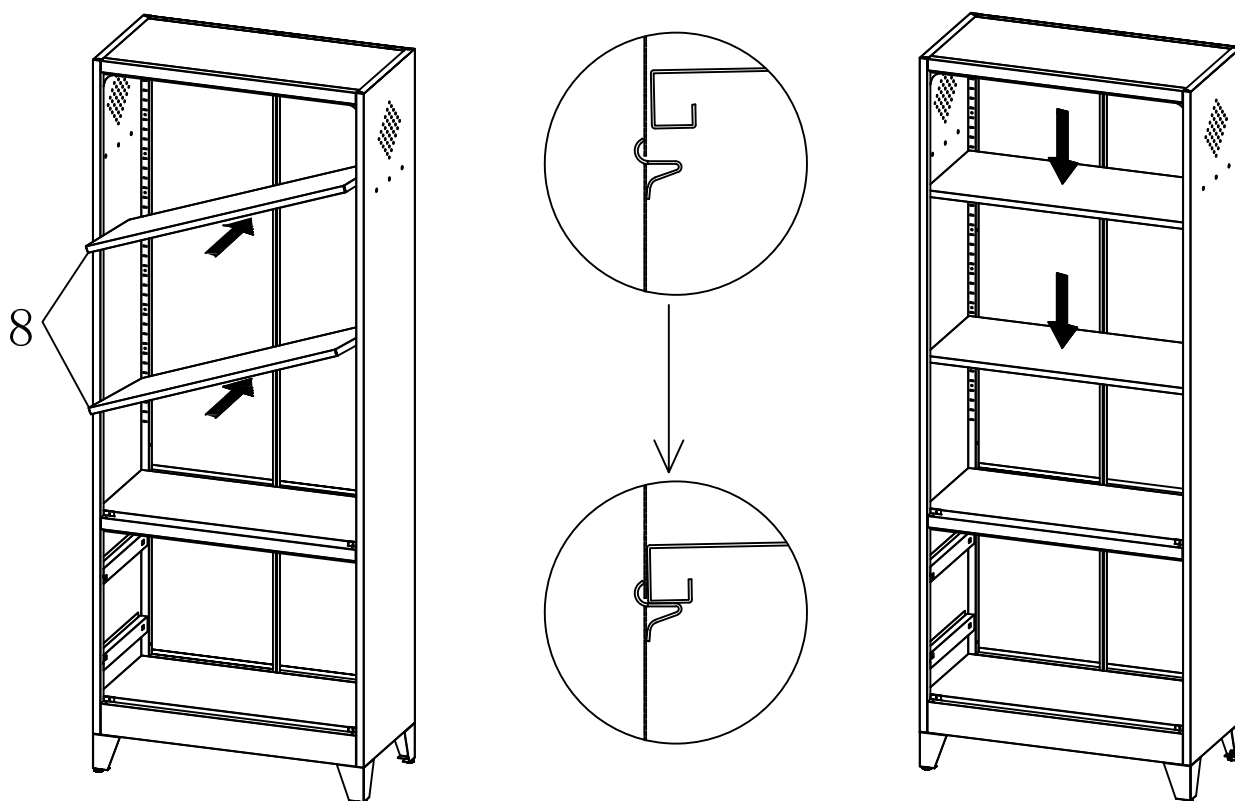

16

Install the door by first installing the door pin G, then by pressing the spring shafts on the top of the door.


If the spring screw is missing from the door, you can find the screw L in the hardware package to install it.

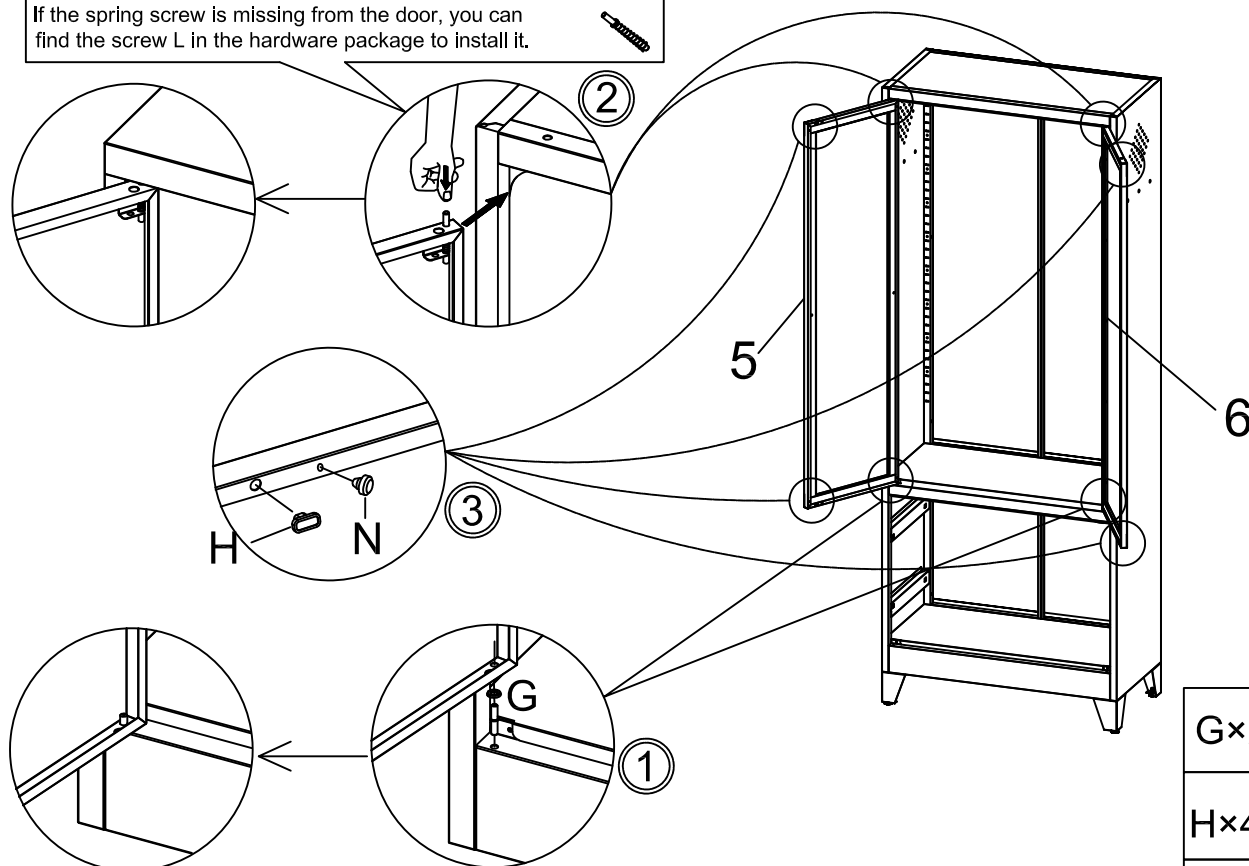

G×2	
H×4	
N×4	


17

Attach the handle I to the door panels and secure them with screws K.

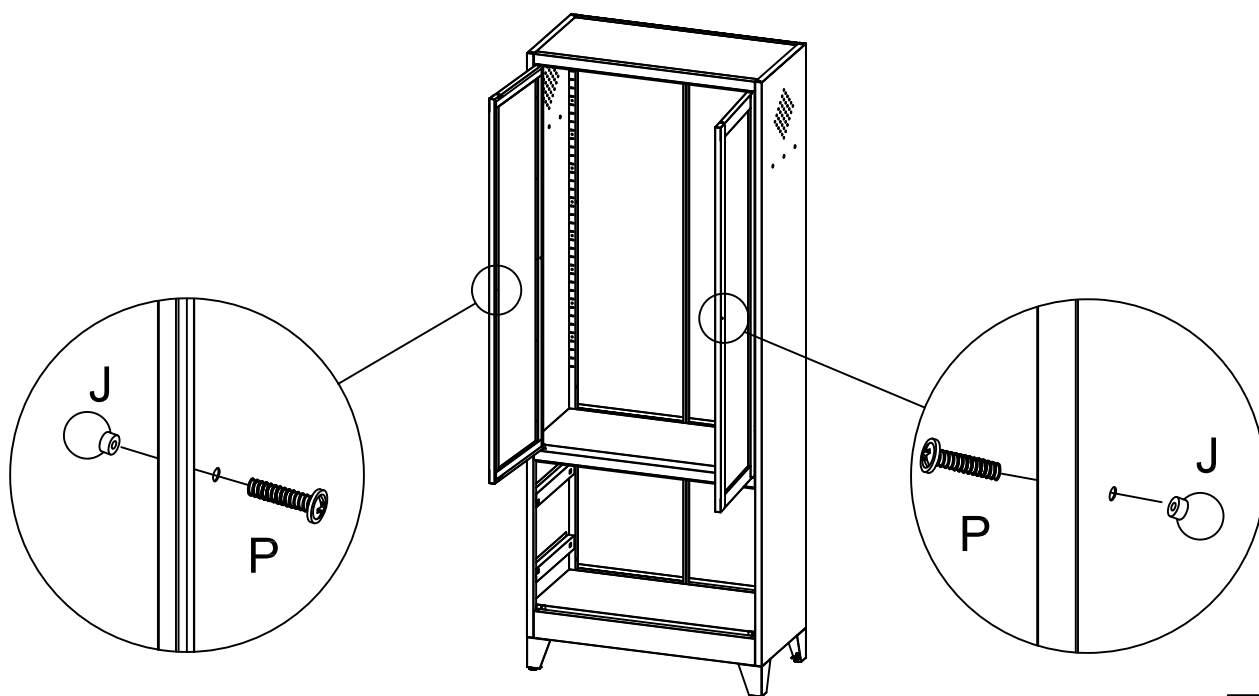


J×2 
P×2 

18

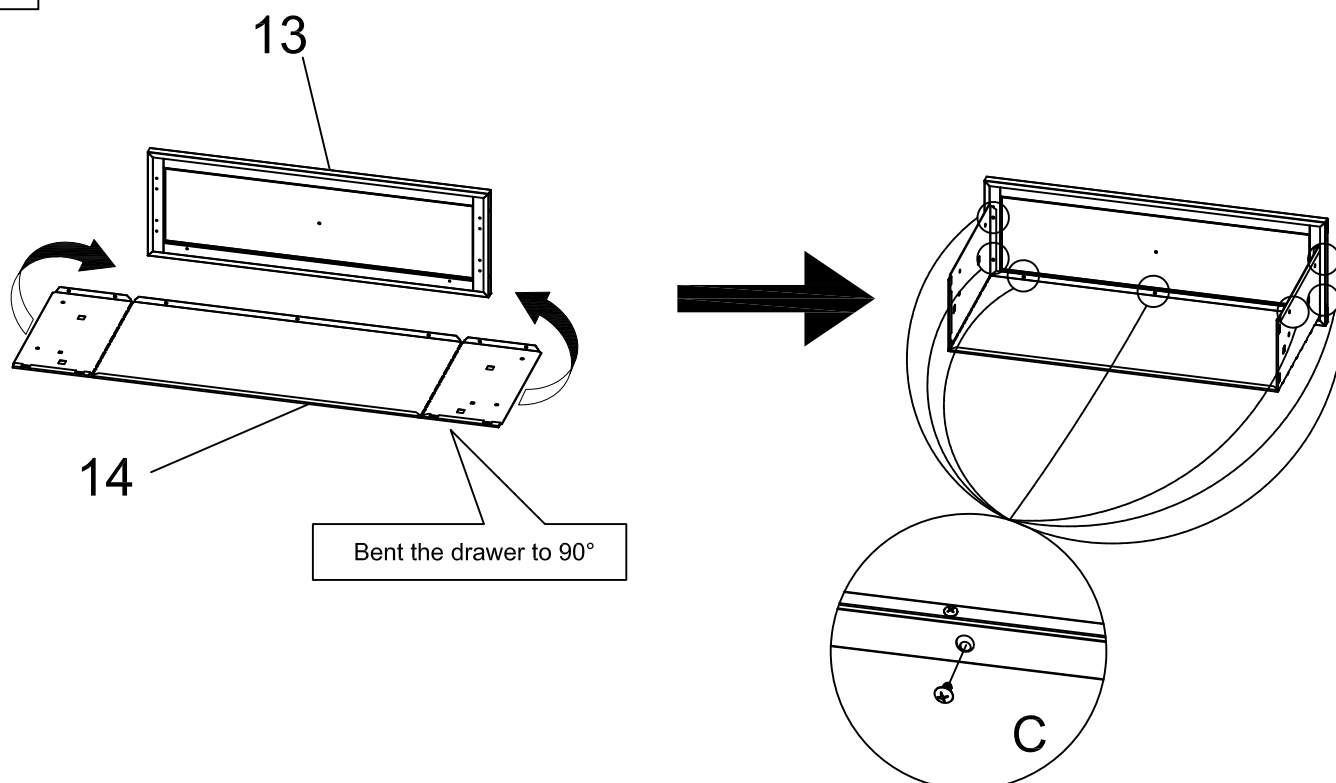

C×7 



19

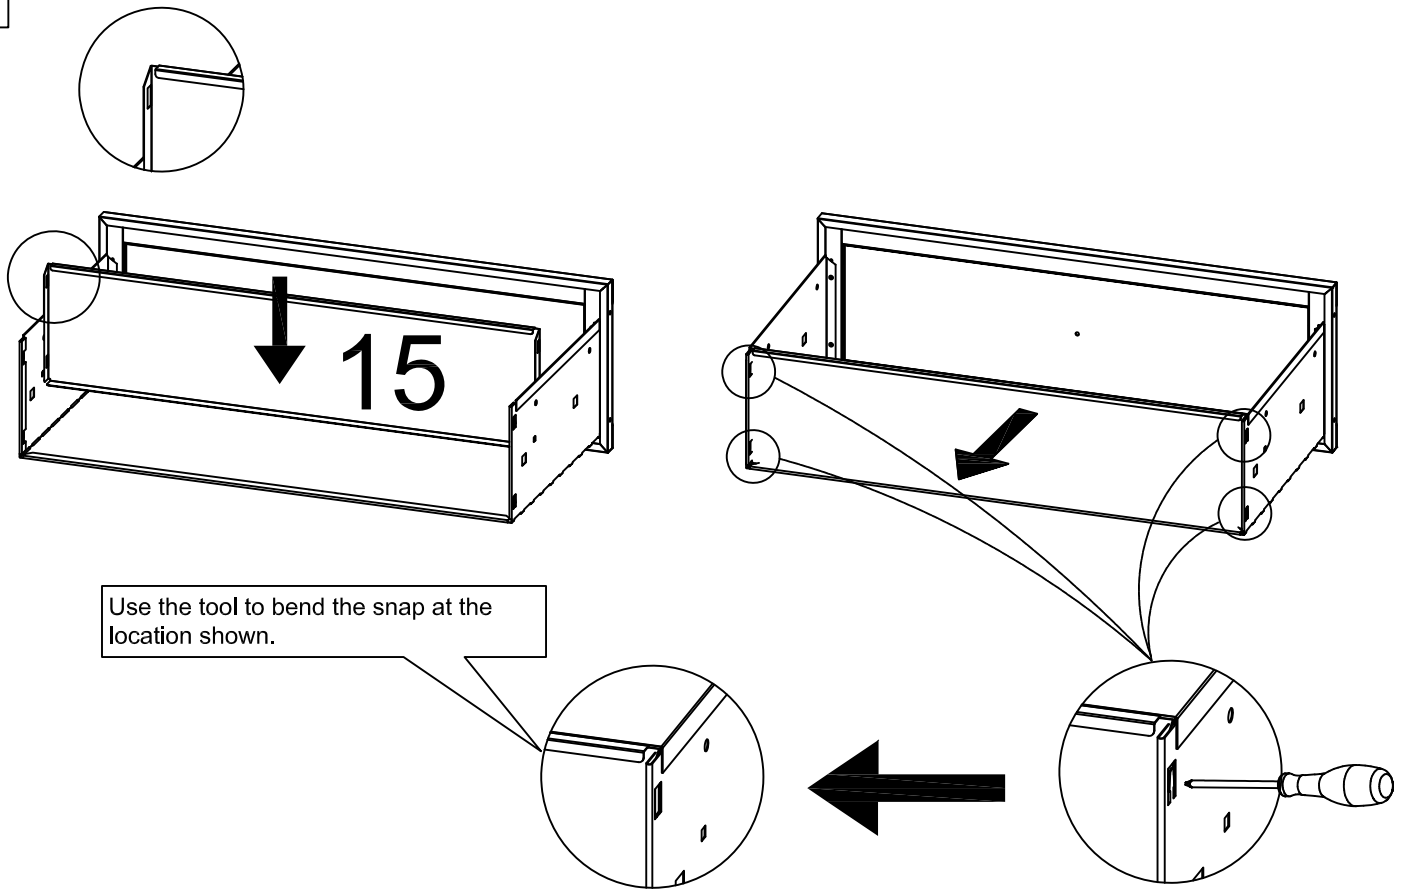

20



Drawer Installation Video

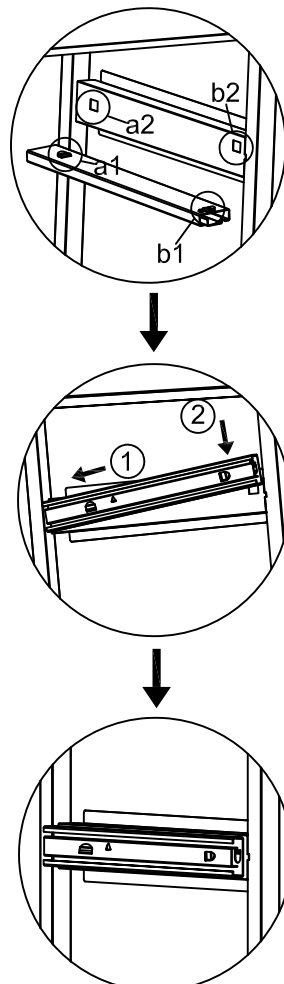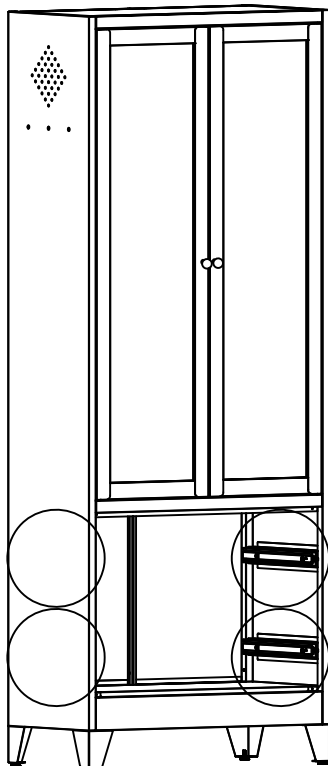

1. Insert the a1 socket on the outside of the slide rail into the a2 hole on the bracket and push it all the way in.
2. Insert the b1 socket on the outside of the slide rail into the b2 hole on the bracket and push it down all the way to ensure that the two sockets on the slide rail are completely inserted into the holes of the bracket.
3. The other three slide rails were also installed in the same way.



Drawer Installation Video

1. Pull out the small slide rail and then insert c1 into the c2 hole.

2. Push the small slide rail upwards so that d1 on the slide rail is inserted into the d2 hole on the drawer. Make sure it is fully clamped.

3. Install the two drawers completely in the same way.

