

PARLOS®


Installation Guide

BEFORE INSTALLATION


- To insure proper installation, please read the following instructions carefully.
- Please make sure that the water supply has been shut off at the stop valve.
- PARLOS® reserves the right to update product without notice.

If you have any question or need help,
please visit **PARLOS®** website
<http://www.parlos.com>


- 1.** Place the Spout in center hole of sink.
Secure it with washers and lock nut.

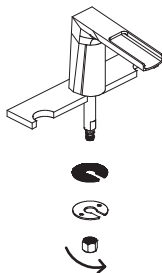


- 2.** Connect the RED striped supply line with the Hot water handle with RED indicator dot , while the BLUE one with the Cold water handle with BLUE indicator dot

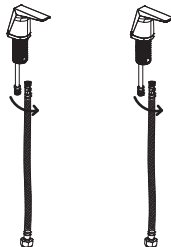


- 3.** Attach each handle with a washer and a threaded ring.
Ensure the handles are in the OFF position Align the handles as shown.

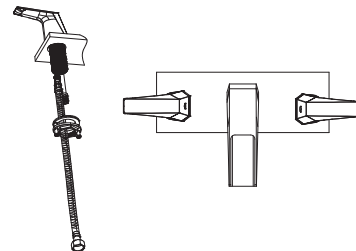


- 4.** Align spout tube ① outlet tubes ② on quick connect hose ③. Push quick connect hose ③ firmly upward and snap onto tubes ① ②. Pull down moderately to ensure each connection has been made.

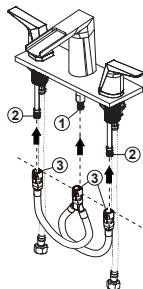

- 5.** Connect to water supplies.

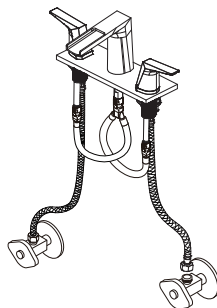

- 6.** Turn on the water supplies.
Check all connections for leaks.

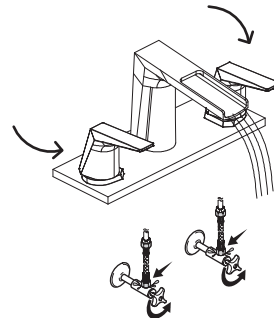


· Every once in a while, please rinse the faucet with lukewarm soapwater, and wipe it clean with a soft duster cloth.
Please avoid any abrasive cleaners, steel wools, or corrosive chemicals.




NOTES:


- Fits for sink WITH overflow hole.
- Clean the sink hole, make sure to remove debris.
- Please avoid using plumber's putty. The seal on top is leak-free. Plumber's putty might cause damage.
- Silicone and plumbing tape can be used for sealing requirement.

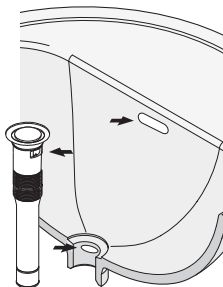


1 Unscrew components A & B to the seal.

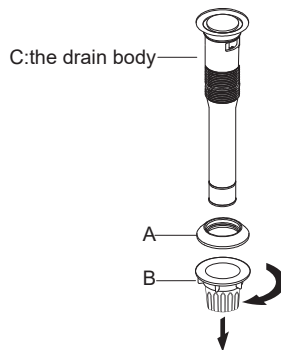


2 Slide the drain body C through the hole in the sink.

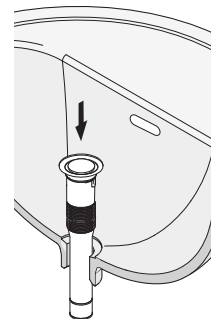

3 Screw components A & B back on as shown.

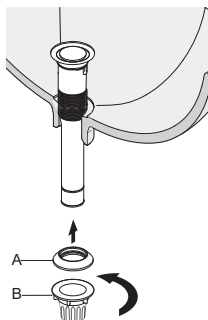

4 Connect the rear end of the drain to the Drain Pipe.

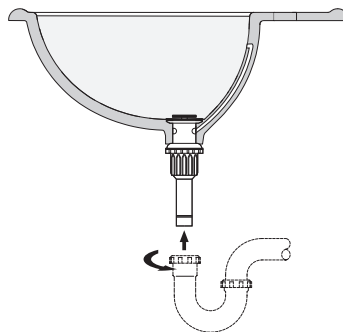

5 Push to activate.

