



Shower Door Installation Instructions

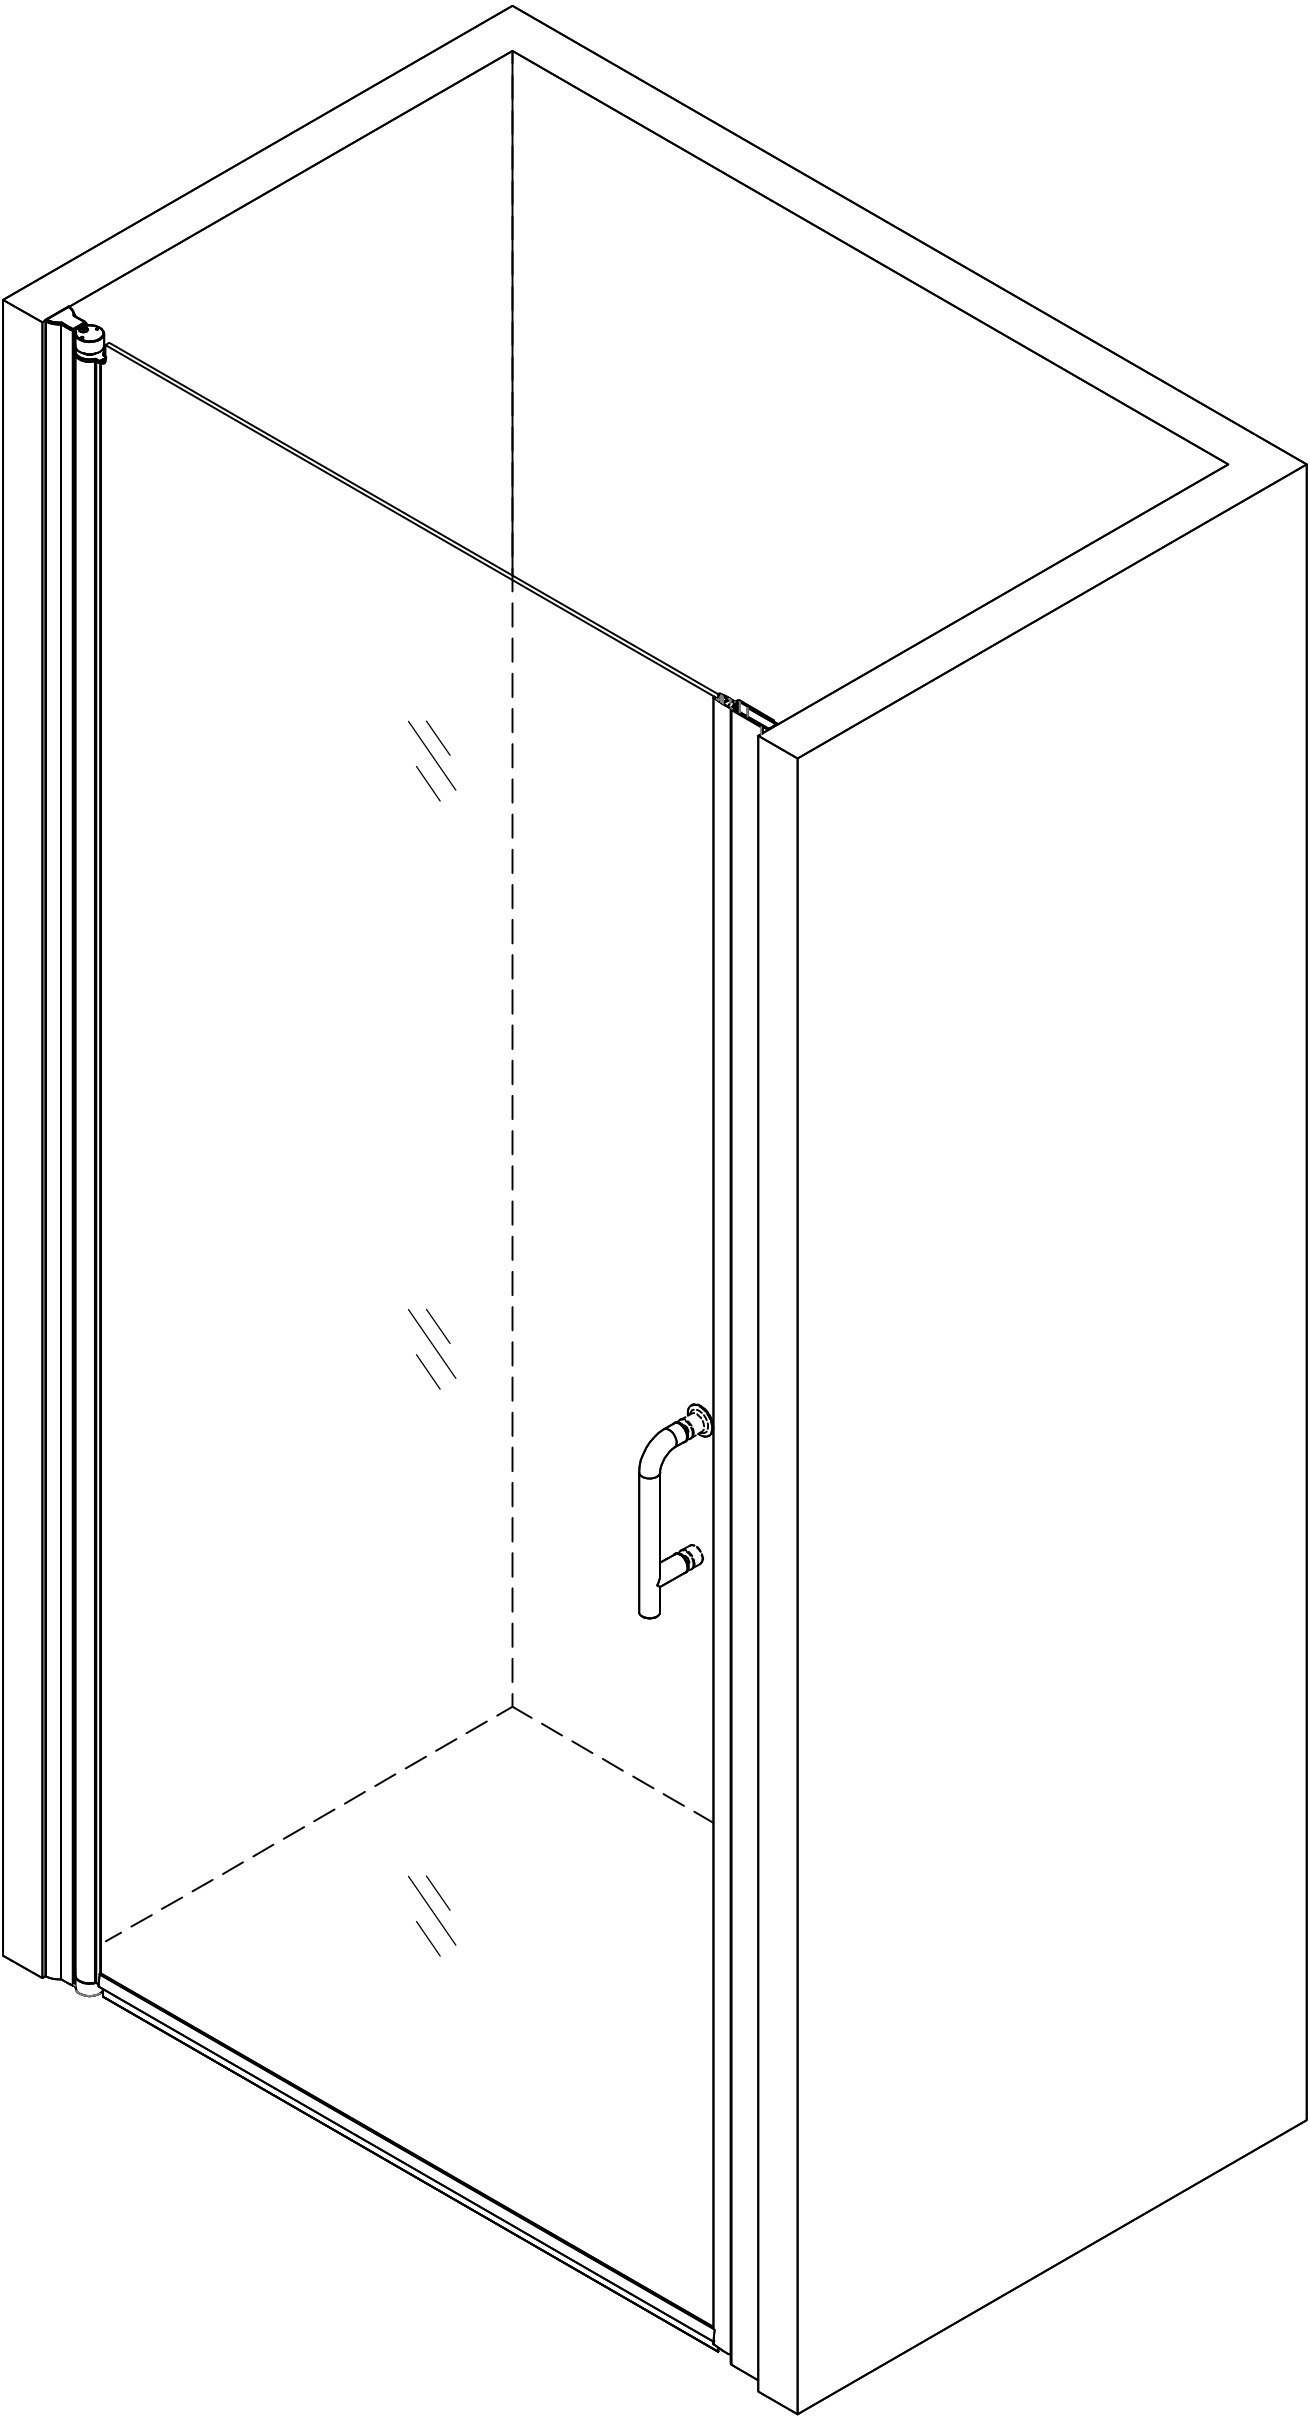





PACKAGE CONTENT








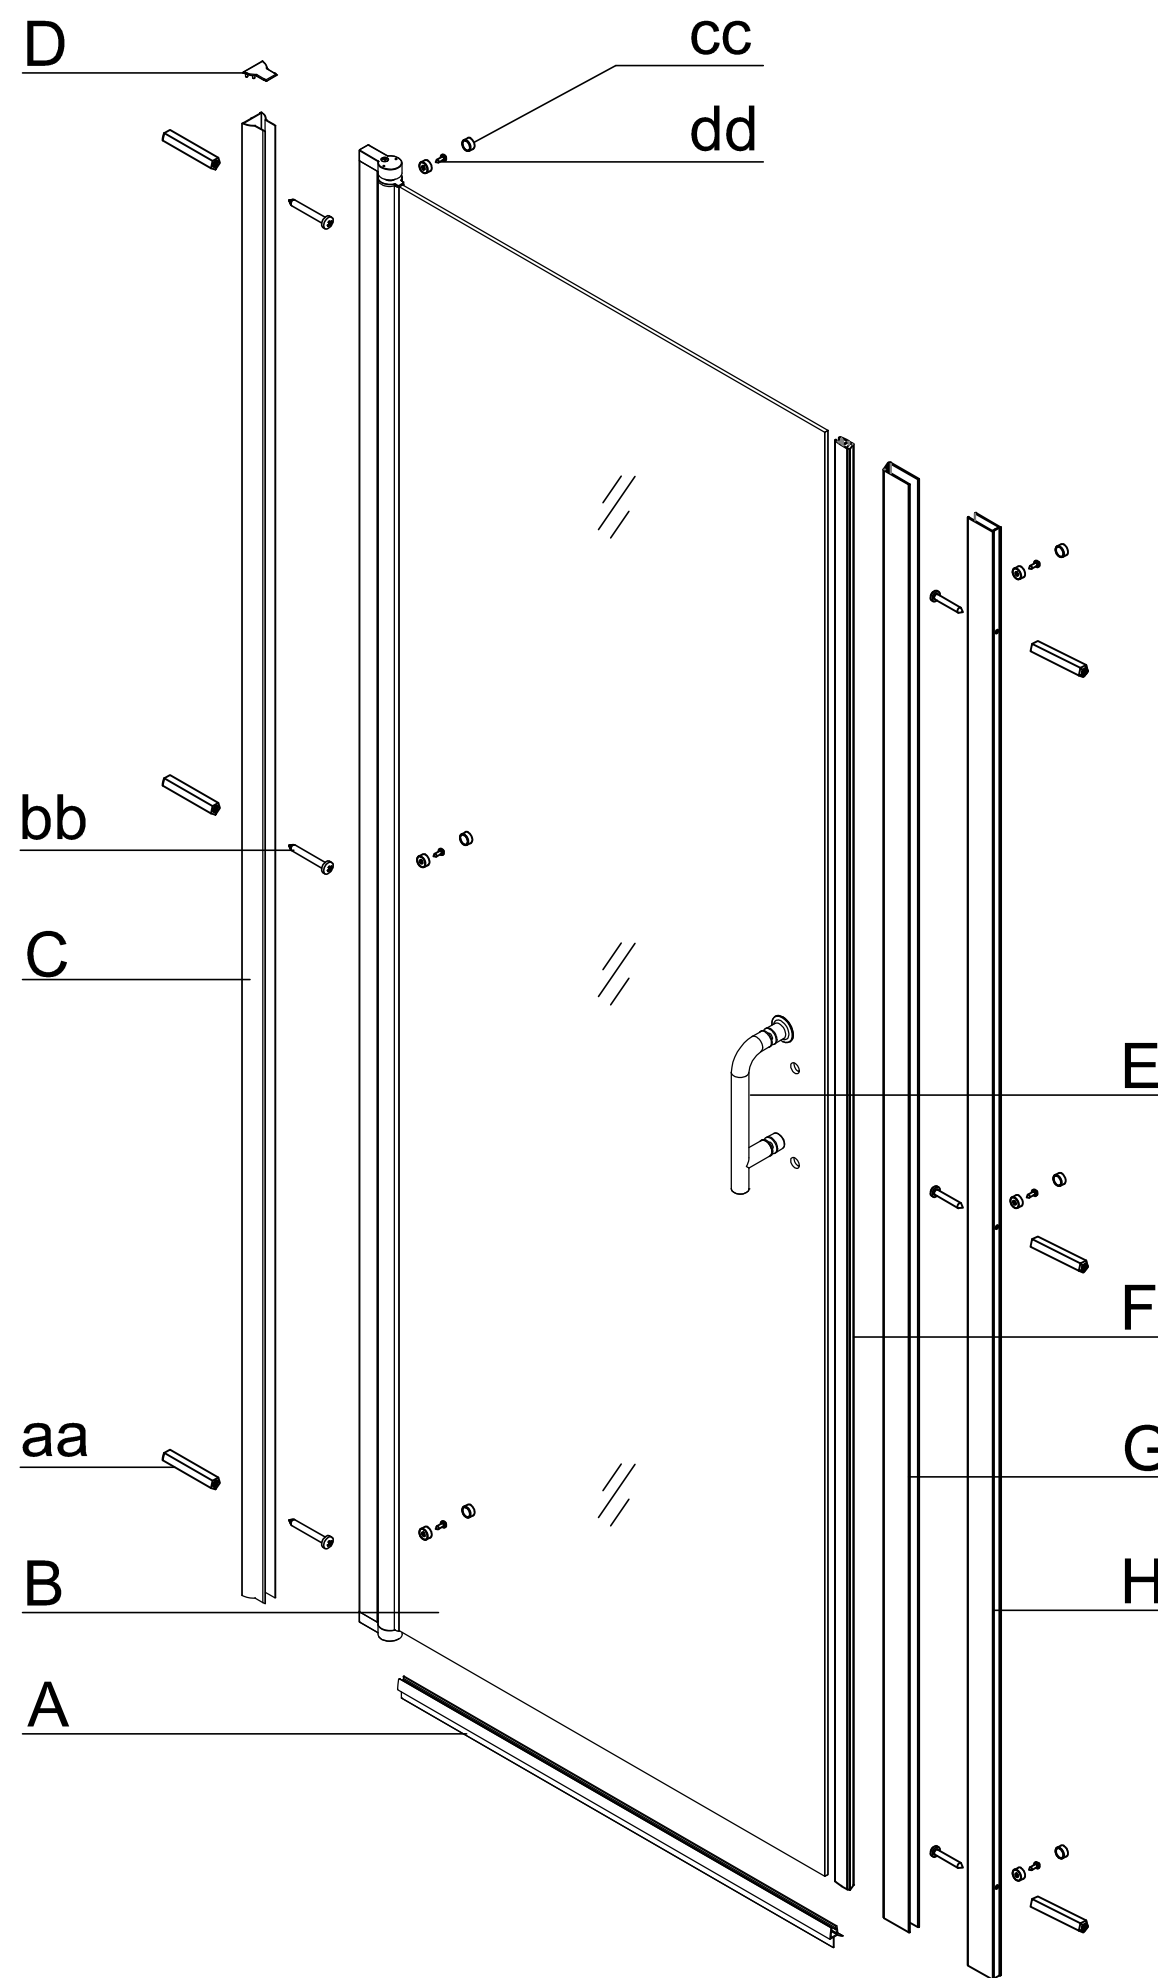


PACKAGE CONTENT





PART#	DESCRIPTION	QTY	PART#	DESCRIPTION	QTY
A	Bottom Gasket	1	E	Handle	1
B	Door panel	1	F	Magnetic strip	1
C	Wall Jamb	1	G	Magnetic Seal Aluminum	1
D	Top Cover Cap	1	H	Magnetic Seal Wall Jamb	1




PACKAGE CONTENT



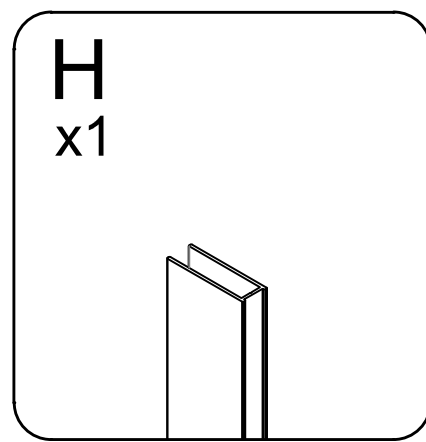
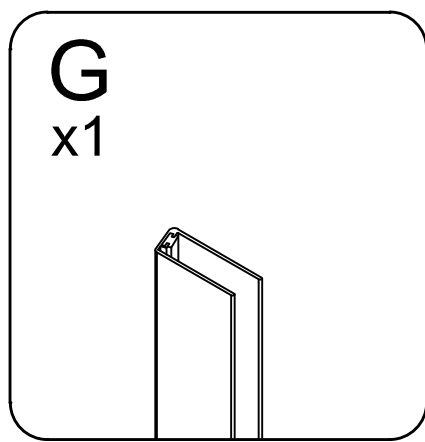
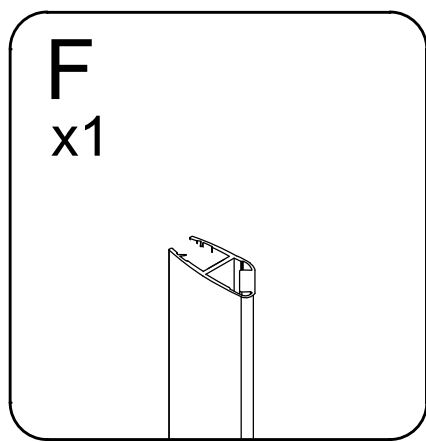
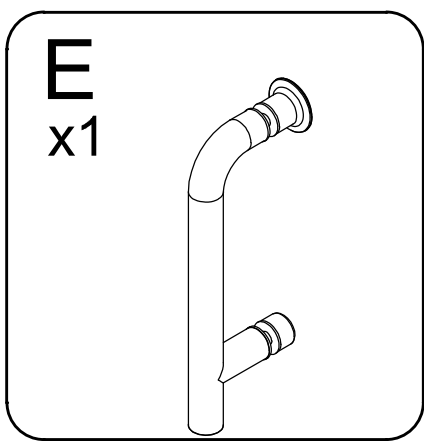
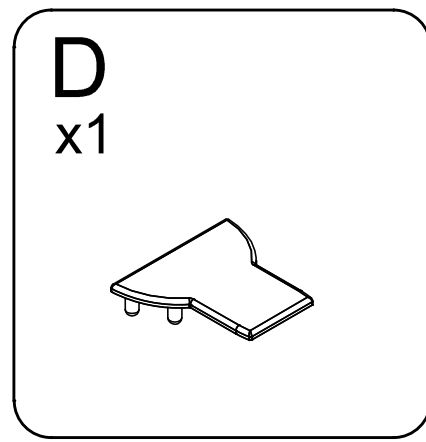
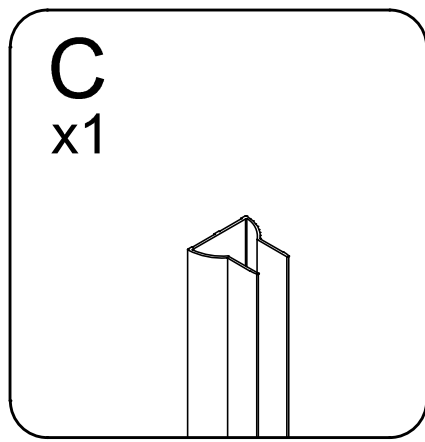
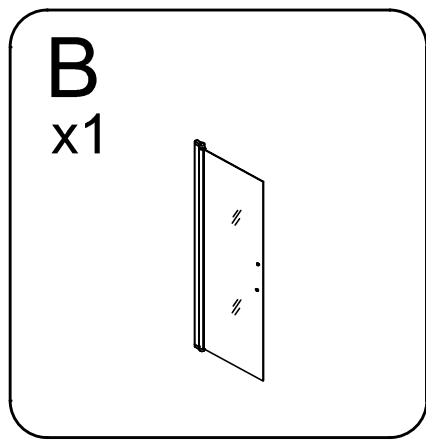
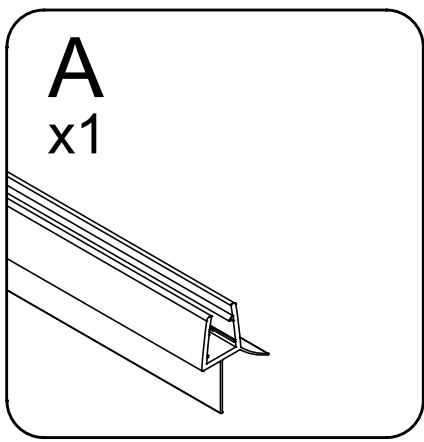






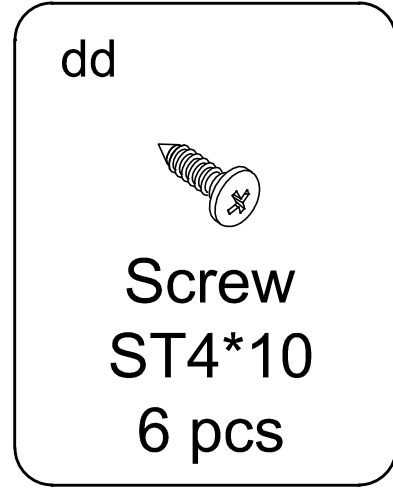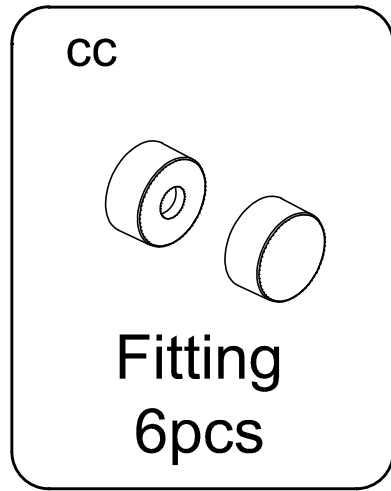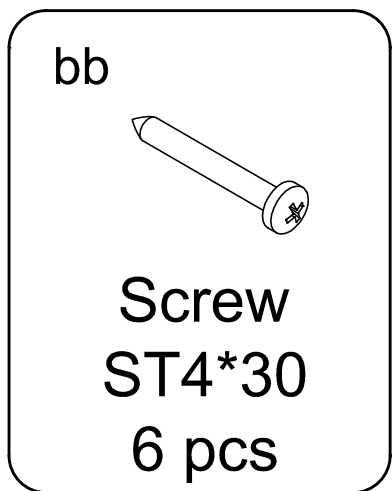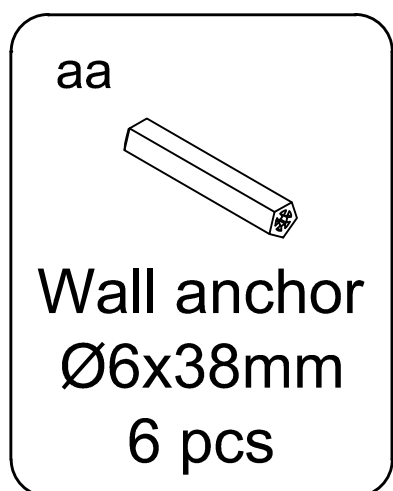HARDWARE CONTENT



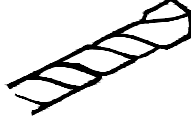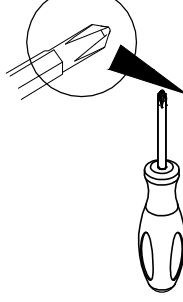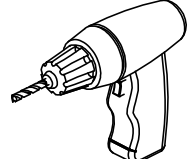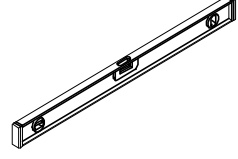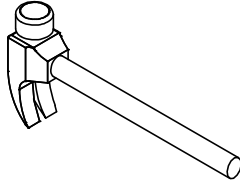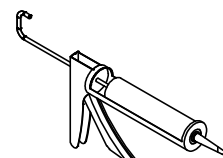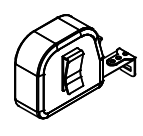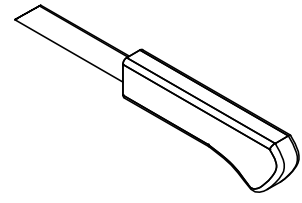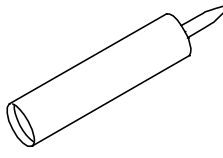

TOOLS REQUIRED

Drill Bits  3.2/6mm dia. HSS	Screw Driver 	Drill 	Level 	Mallet 
Pencil 	Silicone 	Measuring Tape 	Knife 	Sealant 
MASONRY DRILL BIT Ø6mm 	Goggles 	Glove 	Right angle Ruler 	


SAFETY INFORMATION

CAUTION









Please carefully read the following important safety information before handling or installing this shower. There is a risk of serious injury while handling this product. To minimize these risks, please note:


- Always wear safety glasses and gloves while handling.
- Always read and follow all the steps in the installation instructions.
- Inspect all contents and glass for damage before installation.
- Extreme caution should be taken while handling the glass during installation as the tempered glass may shatter if in contact with a hard surface.
- Handle the tempered glass with caution! Improperly handling the glass can cause it to break suddenly in small pieces (never in pointed fragments).
- Always take all precautions not to touch the tempered glass with any tools during the installation, or after installed.
- Do not cut or modify the tempered glass as it will shatter if cut.
- Carefully remove product from packaging and keep packaging until installation is complete.
- Inspect all parts for damage; if there is damage to the unit prior to installation, please contact customer service at the number provided in this guide.
- Install the shower on a floor that is level and able to accommodate the weight of the unit and an occupant.
- Consult local building codes and compliance standards prior to installation and ensure conformity.
- After installation, and from time to time, check the glass for fit and finish to ensure that nothing has come loose since installation.
- Keep this installation manual for future reference.

NOTE: Heavy product ! You will need at least two people to install this unit properly.












LEVEL & WALL JAMB INSTALLATION

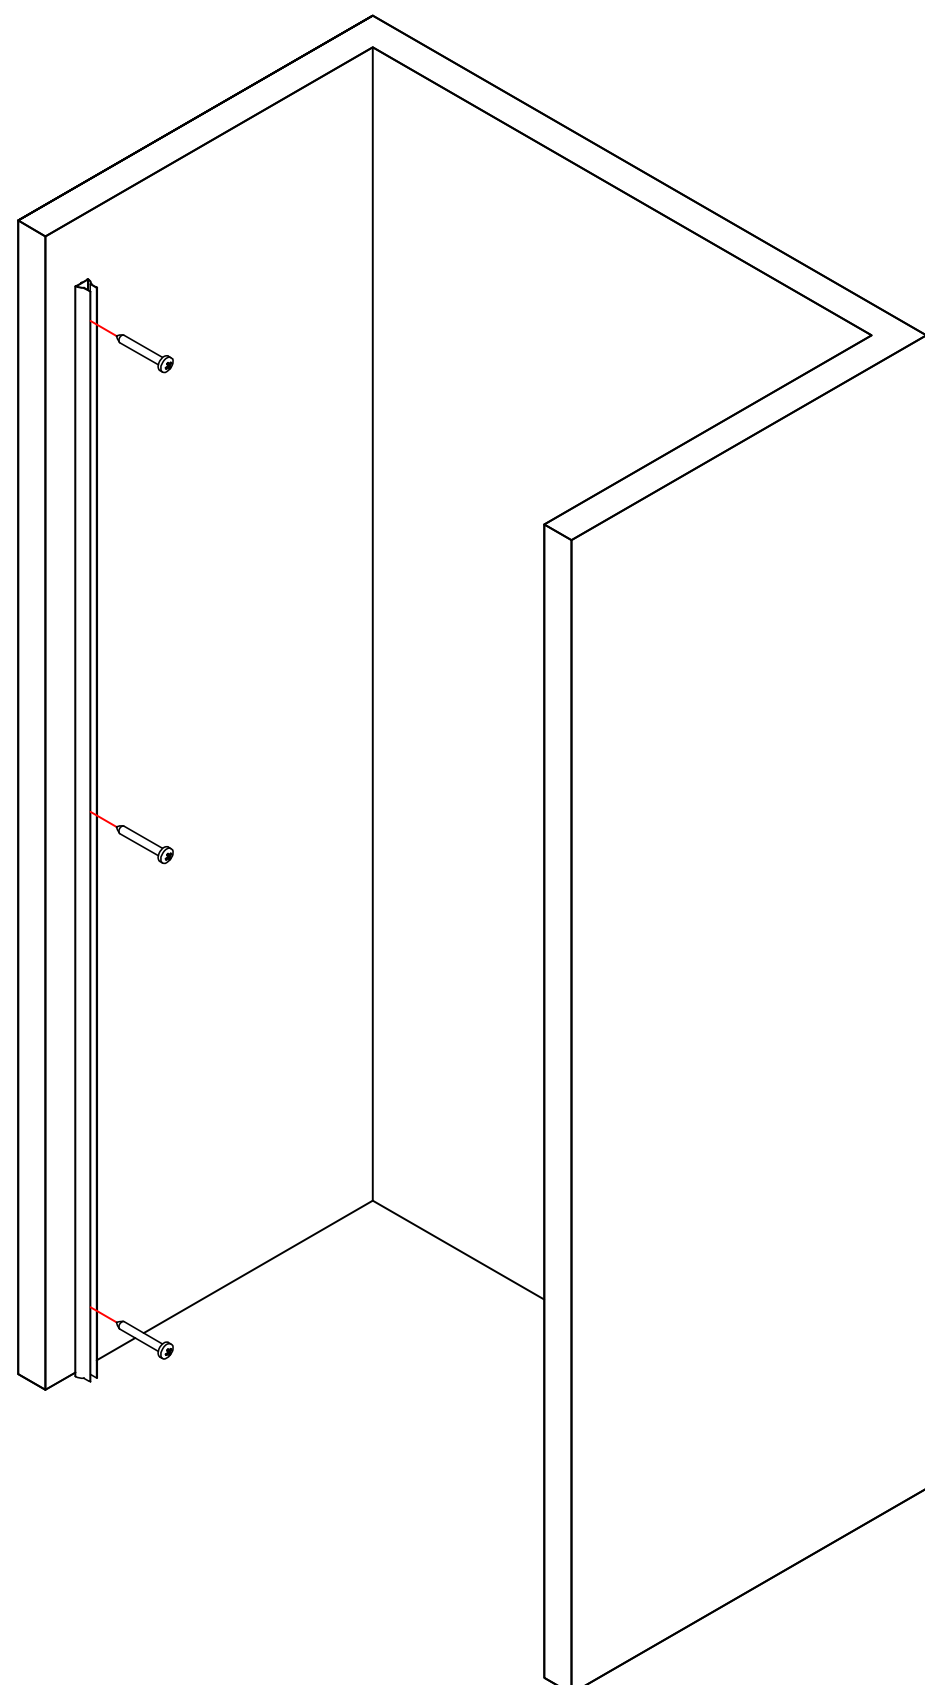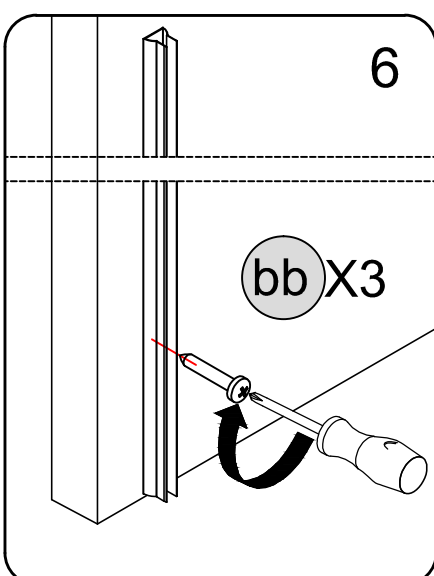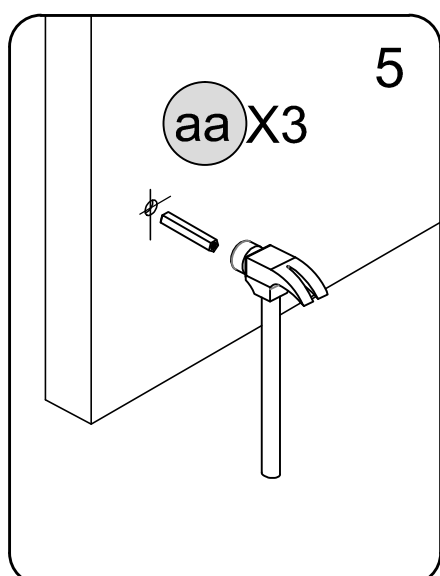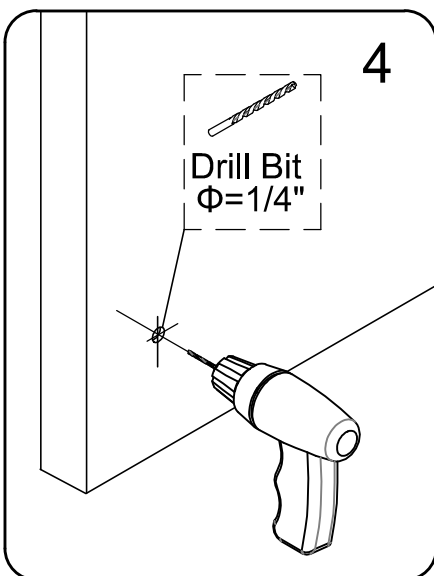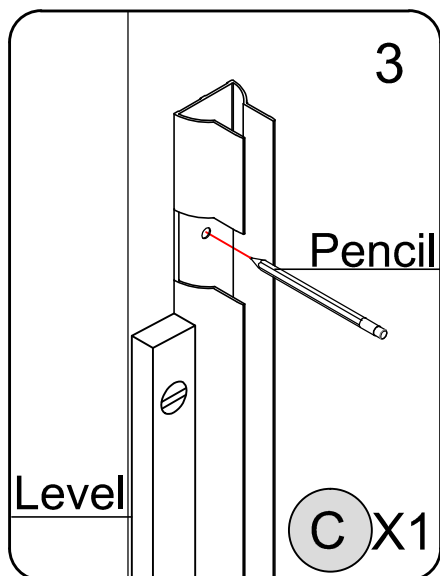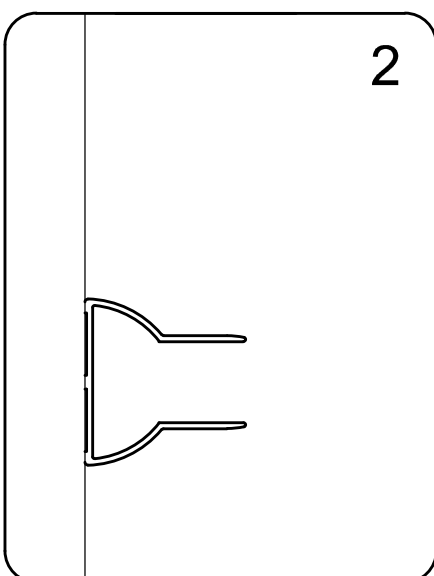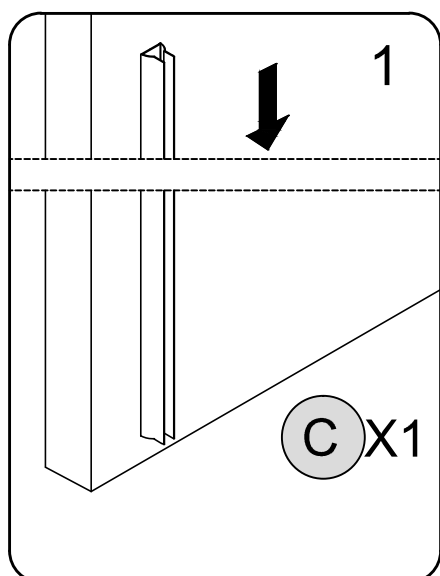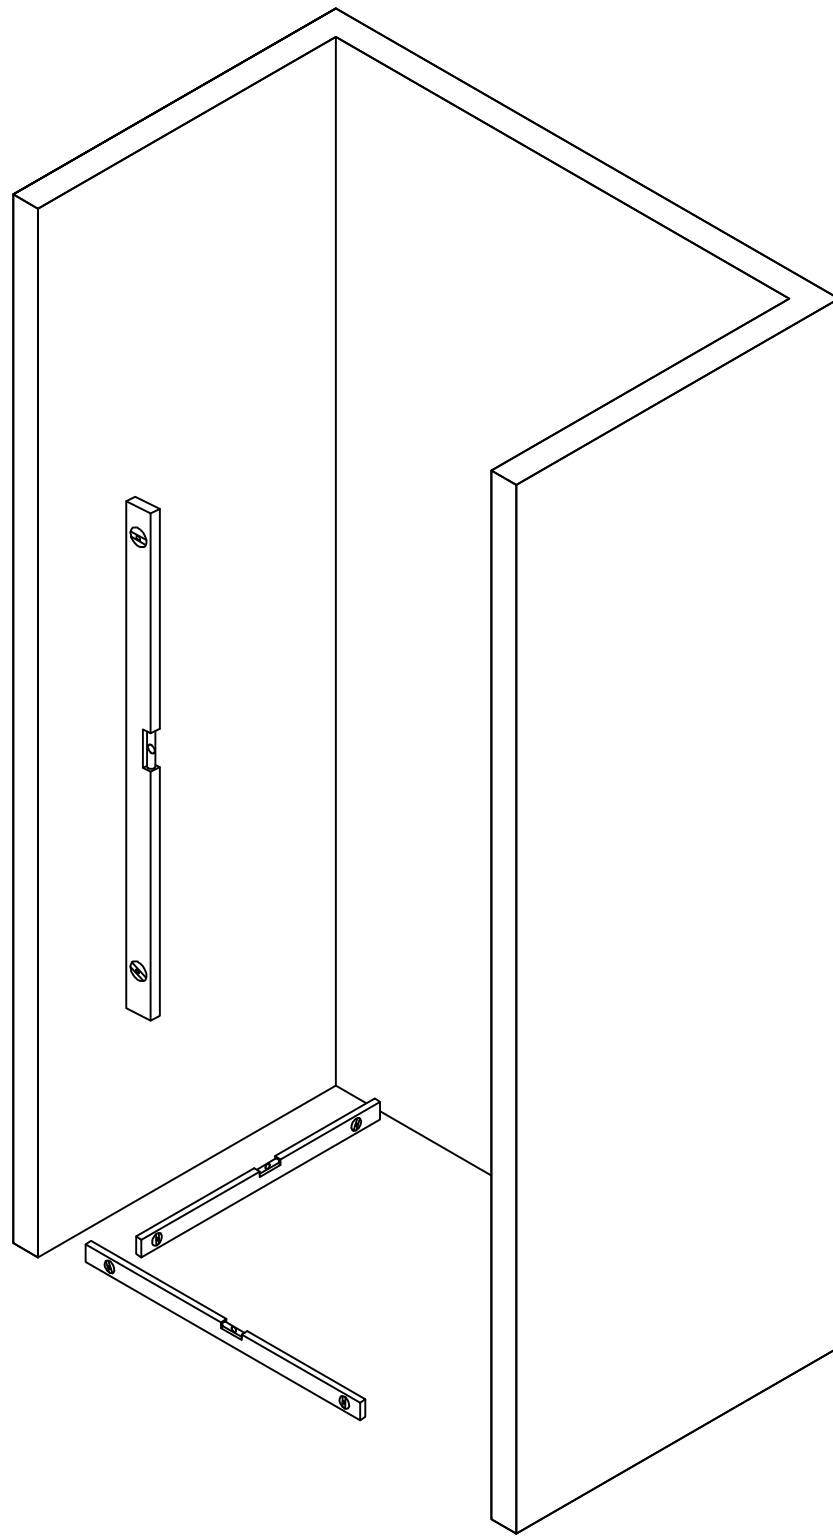

















DOOR PANEL & HANDLE INSTALLATION

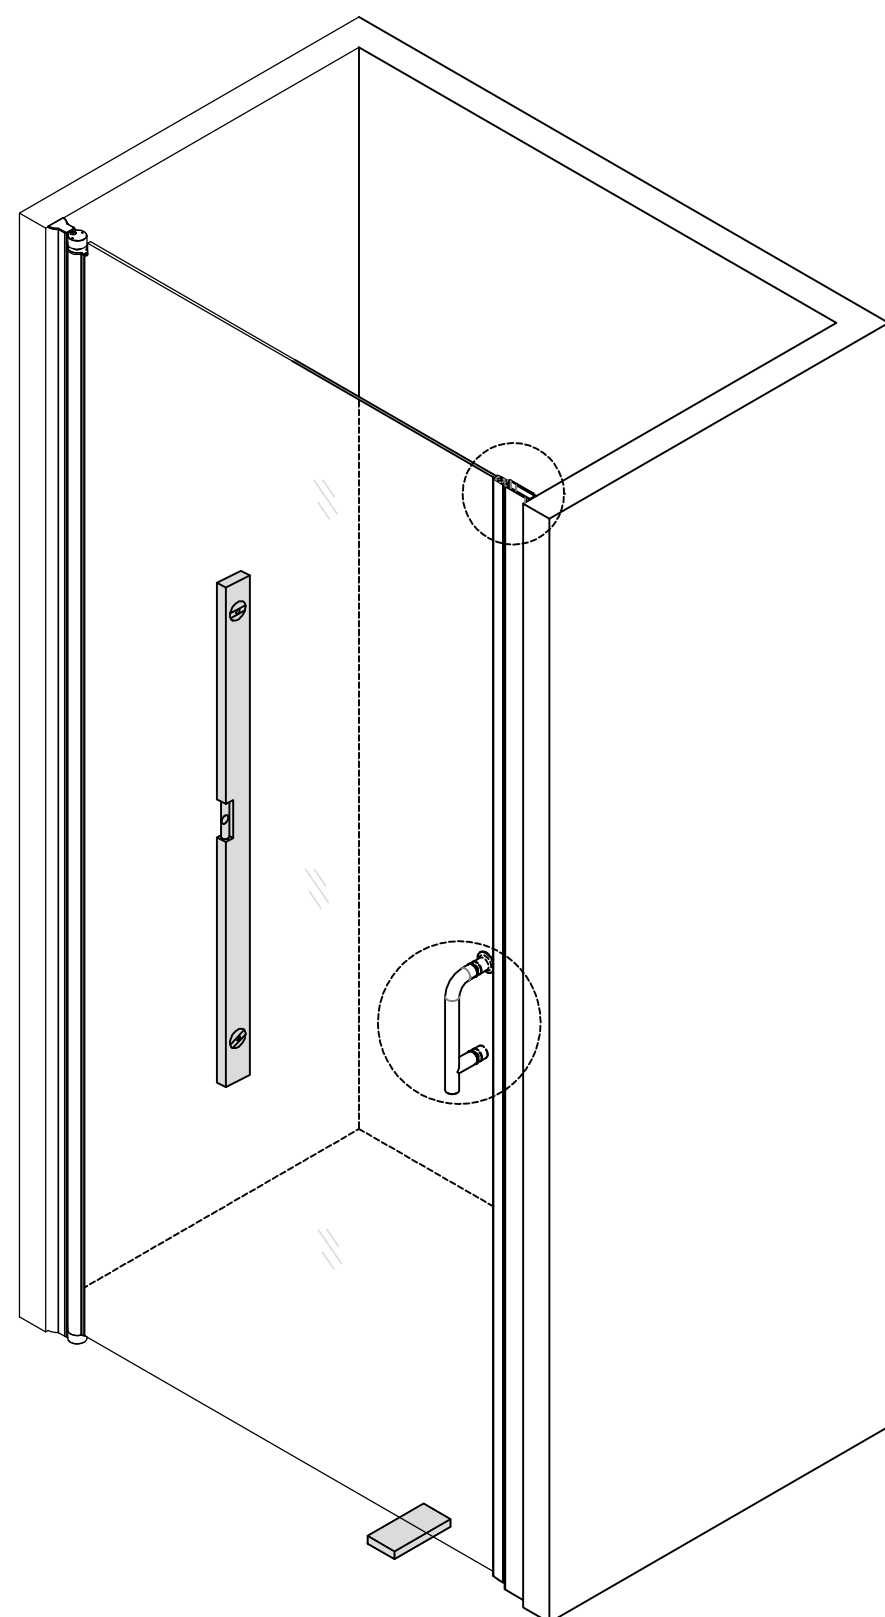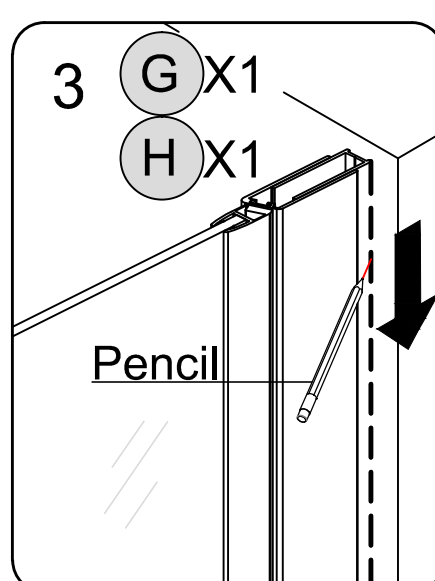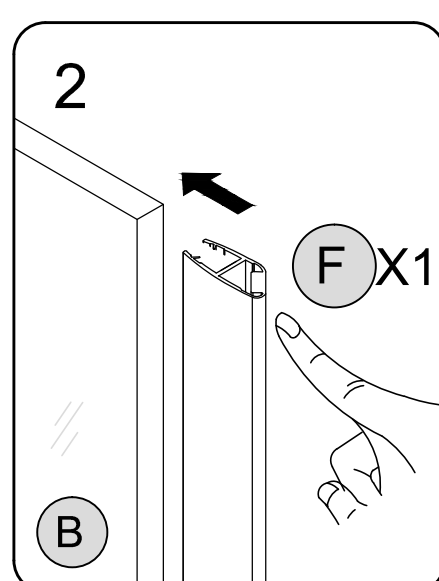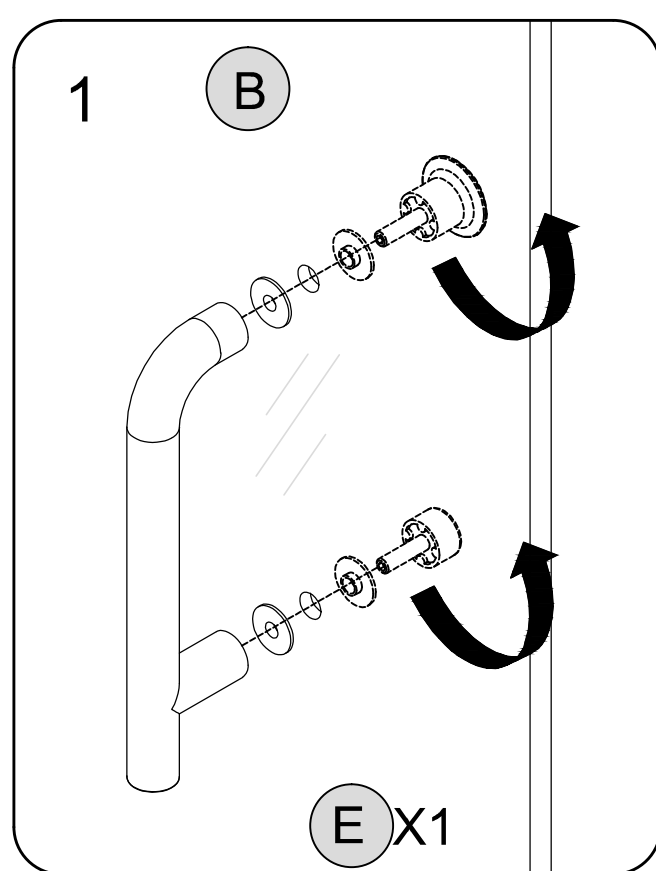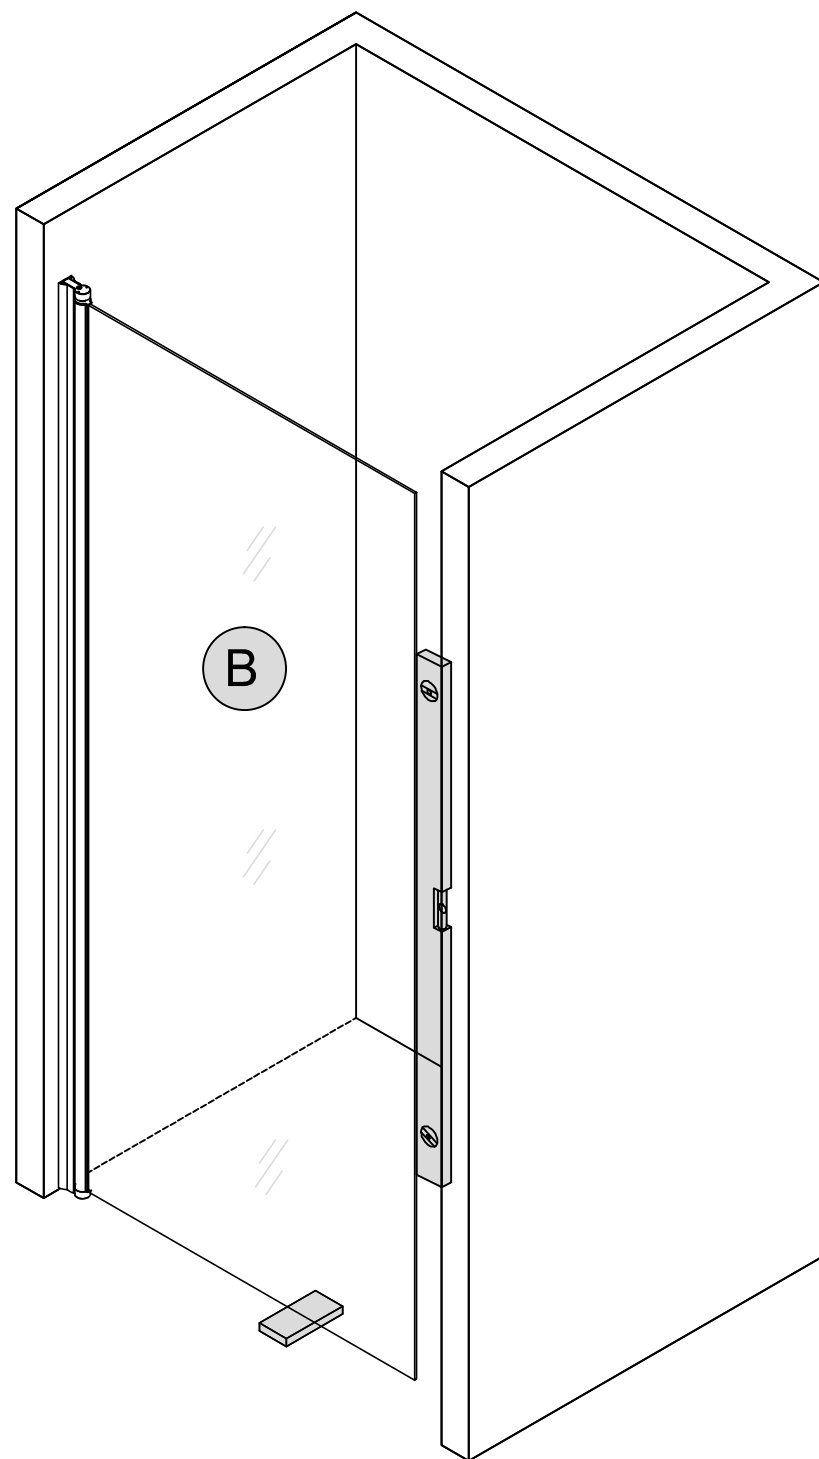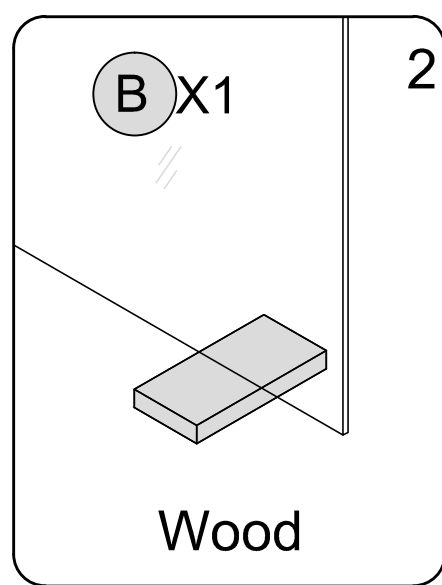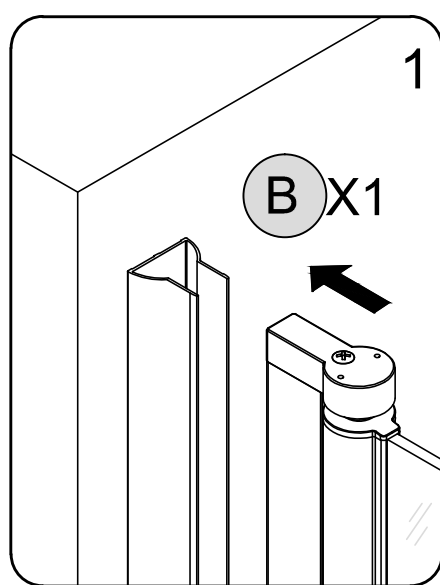






MAGNETIC STRIP INSTALLATION

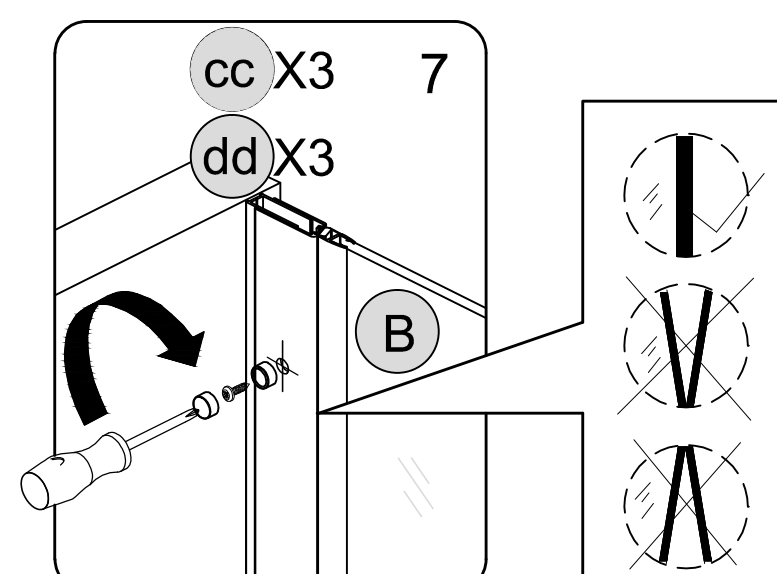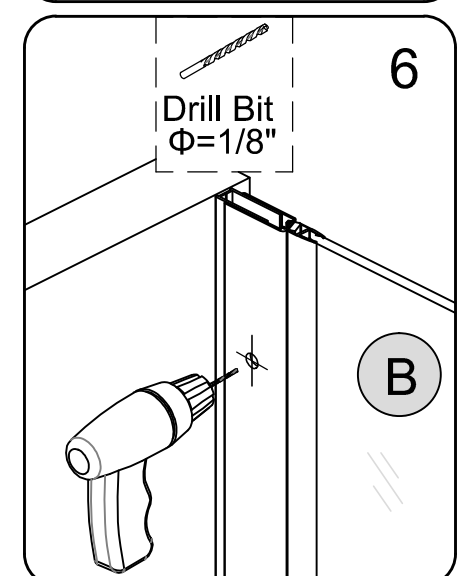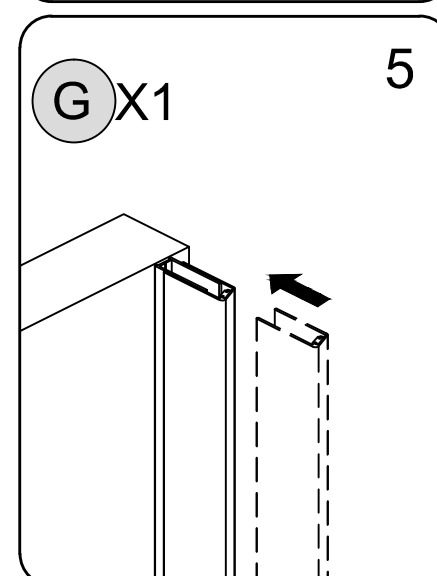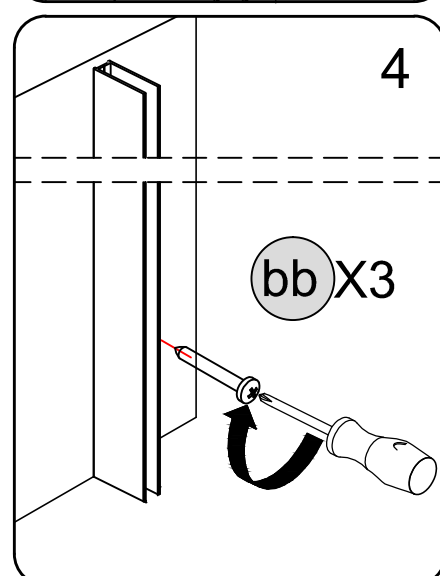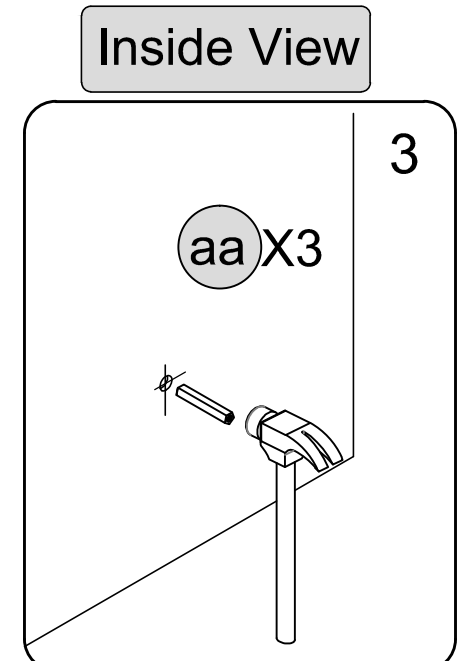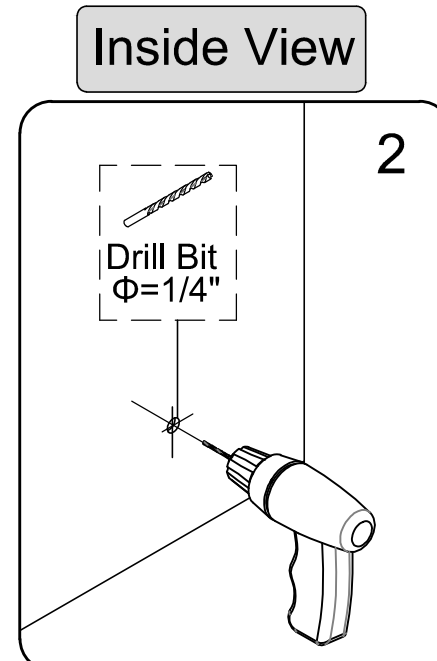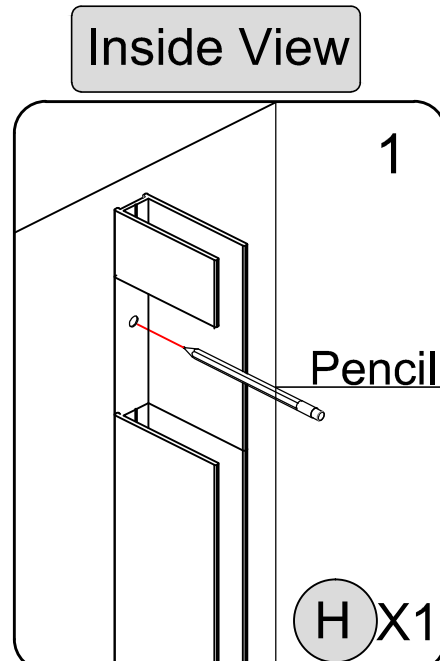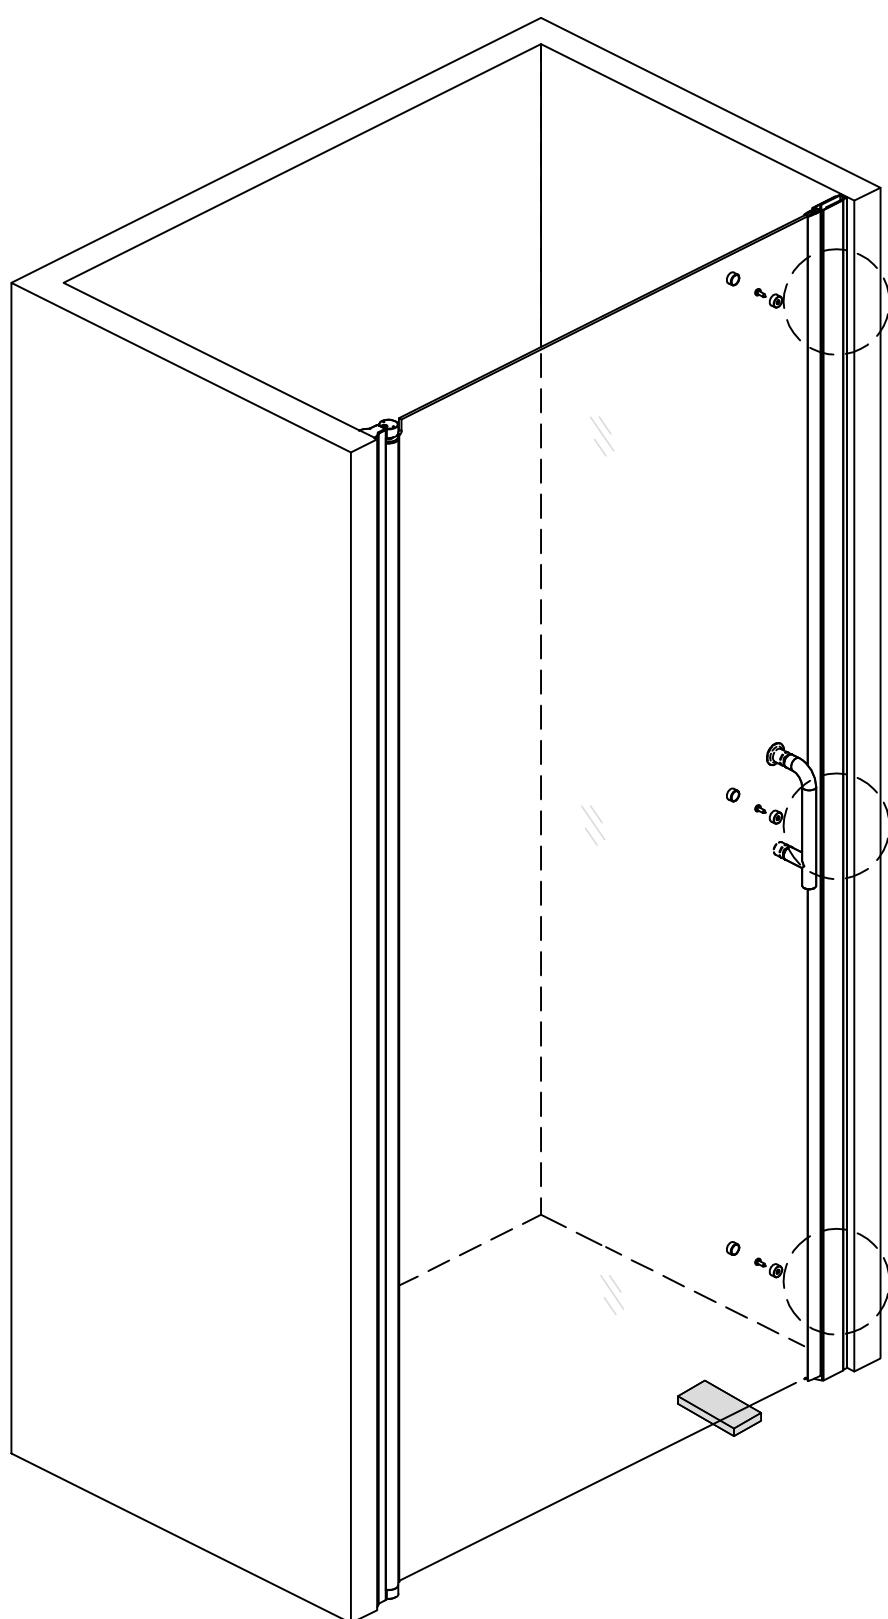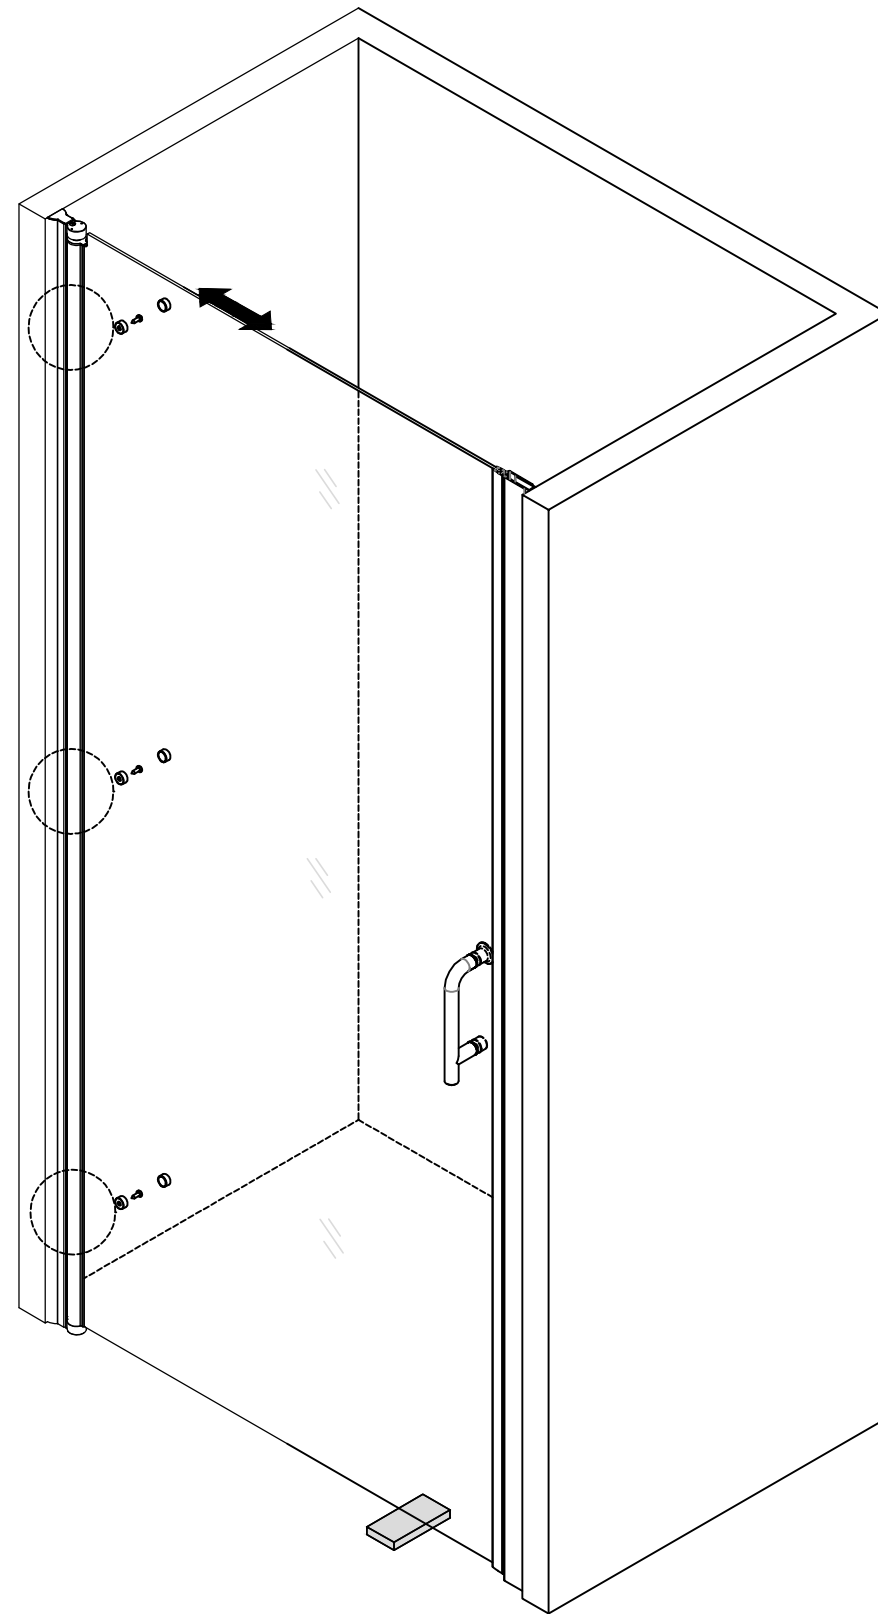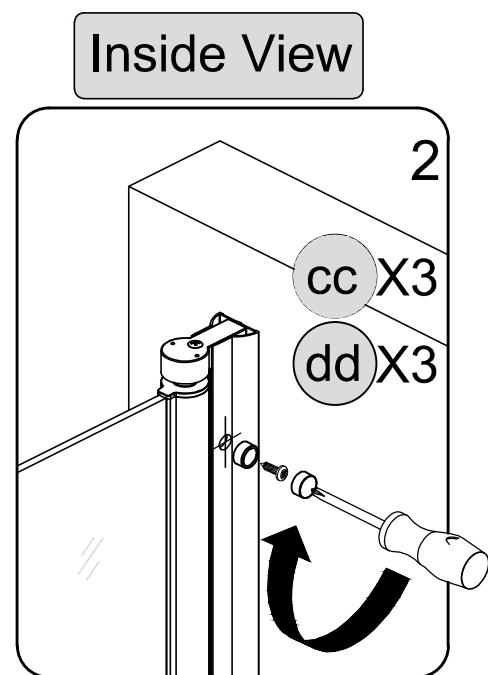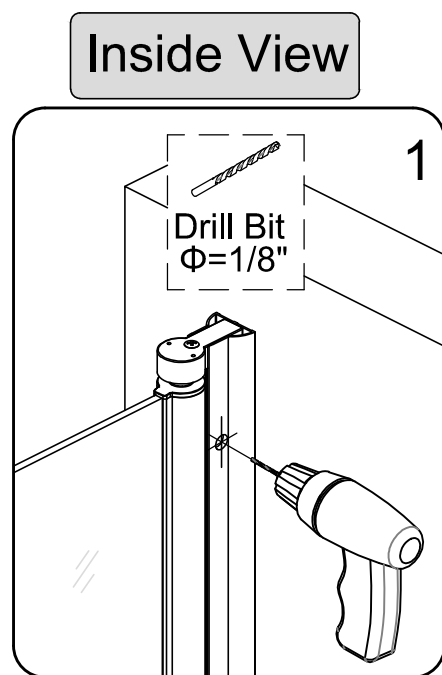




TOP COVER CAP & GASKET INSTALLATION

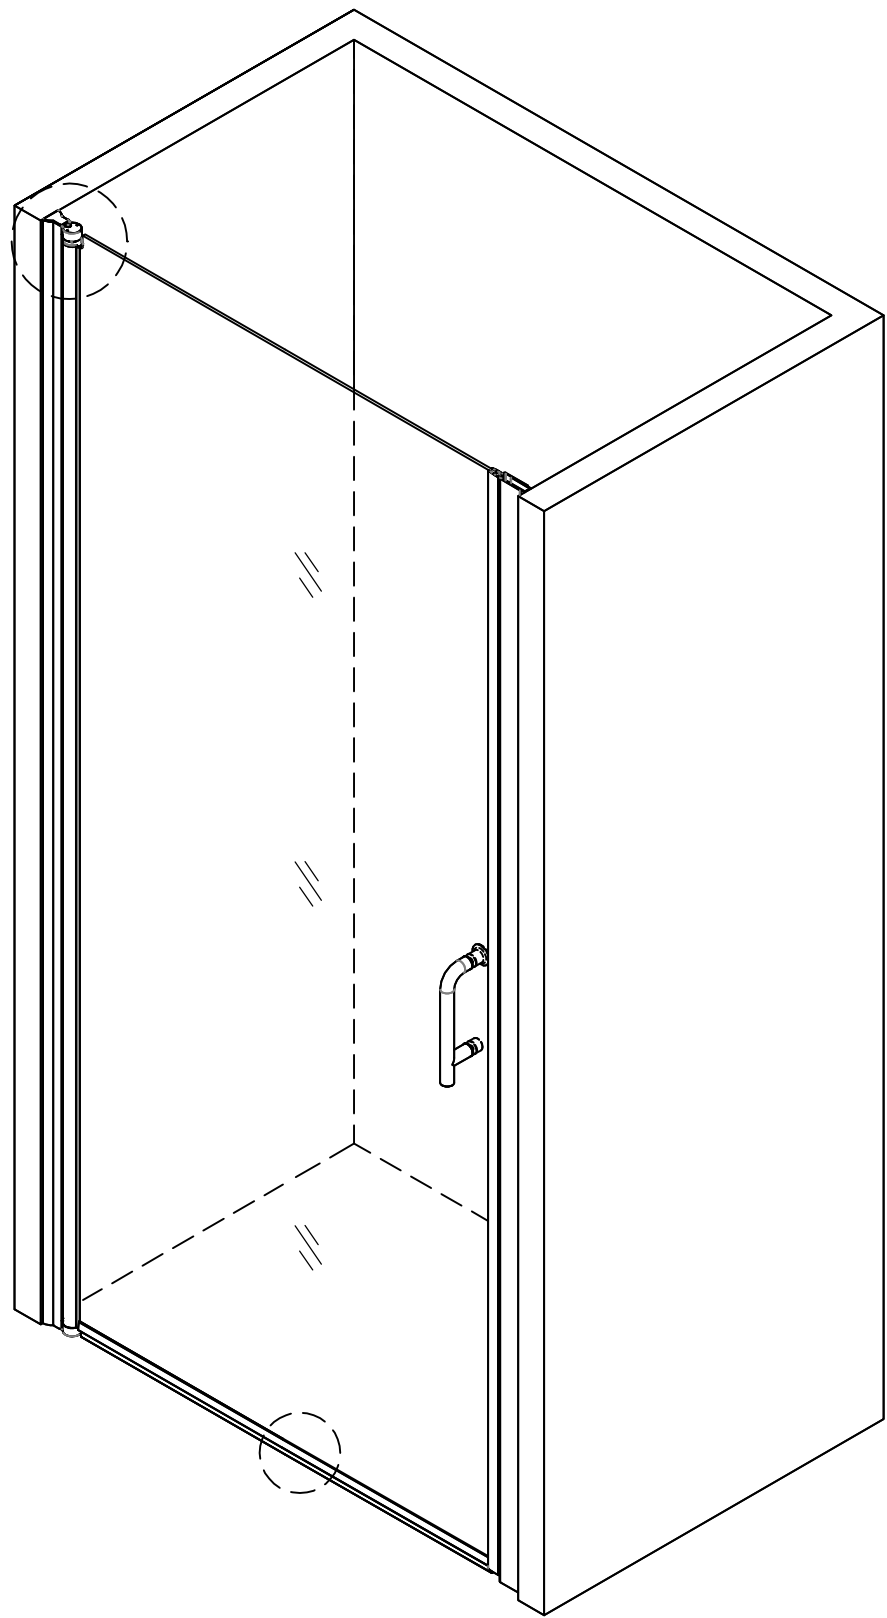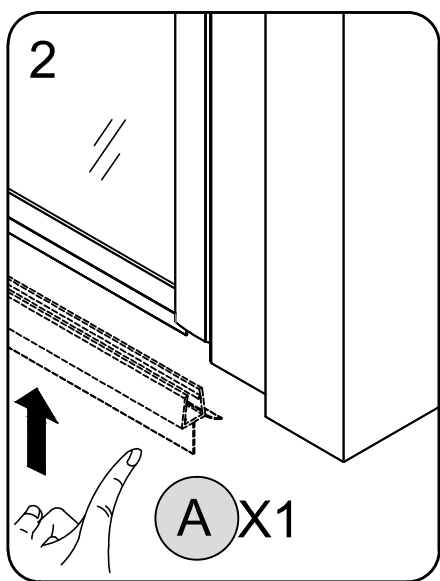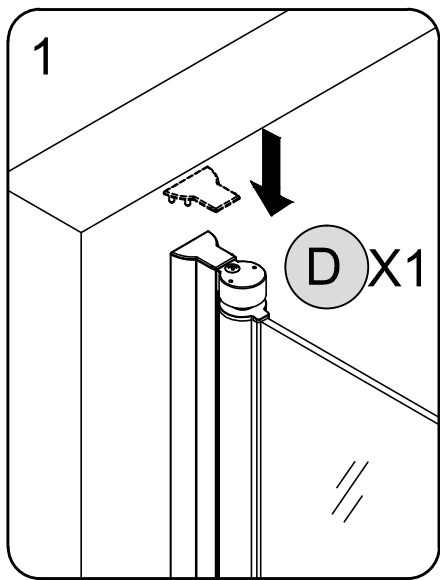

SEALING

Ensure that the Shower door closes tightly and opens smoothly.
Apply a good quality silicone sealant along the wall Jamb(C)&(H) .
Allow 24 hours for silicone to dry before use.

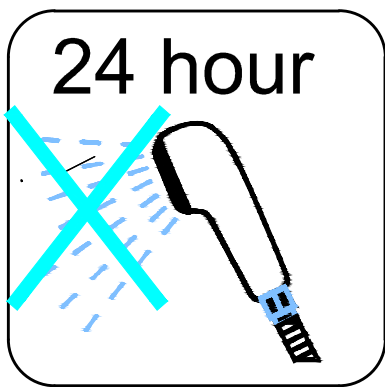

! Apply Silicone Sealant,(not supplied).

