



2

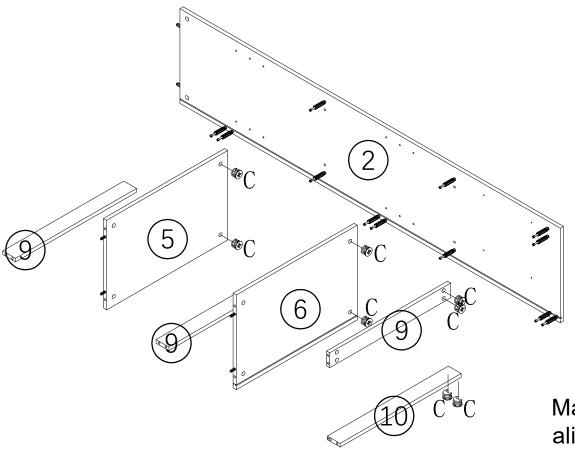

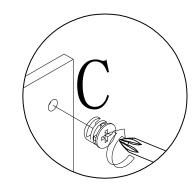

Make sure the arrow on the screw align to the hole on the side.

(5) 6 Make sure the arrow on the screw align to the hole on the side. put C on board 56910 C*12

