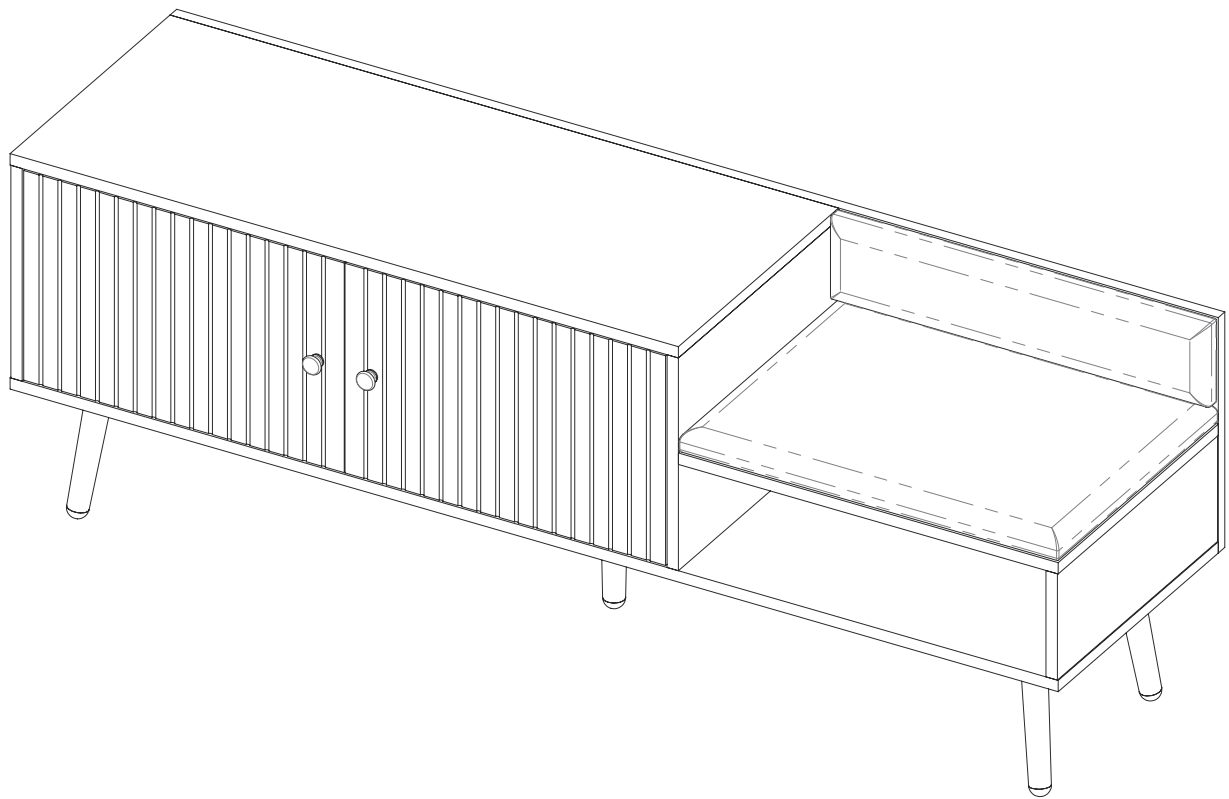


ASSEMBLY INSTRUCTION

ITEM:WF531237

STORAGE BENCH

If you have any questions, please feel free to contact us.
Email: lowes.team@qualfurn.net



ASSEMBLY INSTRUCTION

ITEM:WF531237

Please read these instructions fully before starting assembly:

1. Check you have all the components and tools listed on the following pages.
2. Remove all fittings from the plastic bags and separate them into their groups.
3. Keep children and animals away from the work area, small parts could choke if swallowed.
4. Make sure you have enough space to layout the parts before starting.
5. During assembly do not stand or put weight on the product, this could cause damage.
6. Assemble the item as close to its final position (in the same room) as possible.
7. Assemble on a soft level surface to avoid damaging the unit or your floor.
8. Parts of the assembly will be easier with 2 people.
9. To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.
10. Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
11. Regularly check and ensure That all bolts and fittings are tightened properly.
12. Please do not place items that exceed the load capacity.

Care and maintenance:

Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

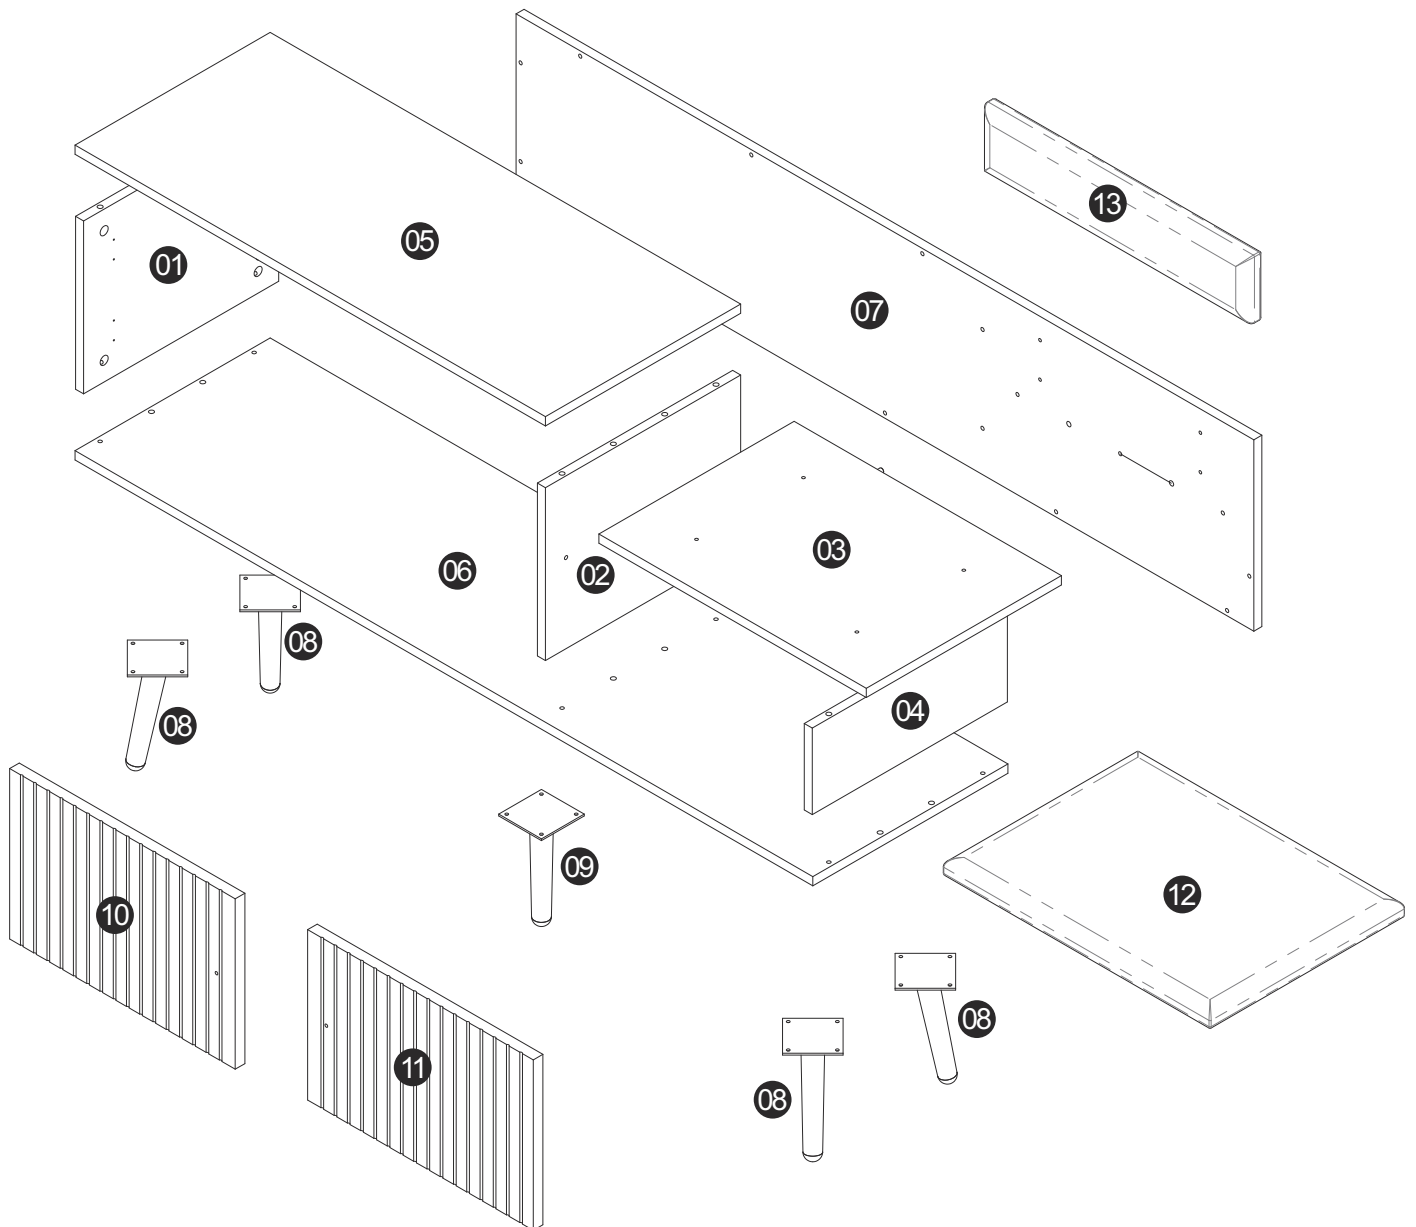
Tools required :



Phillips screwdriver
(medium & large)

ASSEMBLY INSTRUCTION













ITEM:WF531237



ASSEMBLY INSTRUCTION

ITEM:WF531237

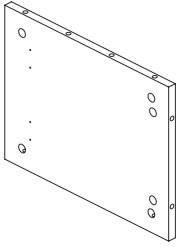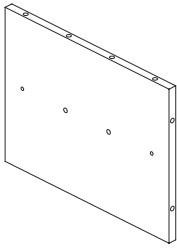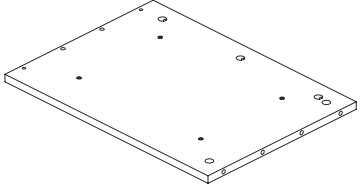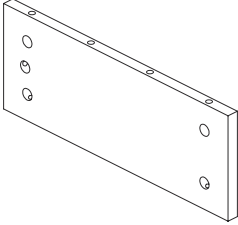
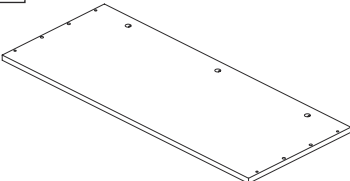
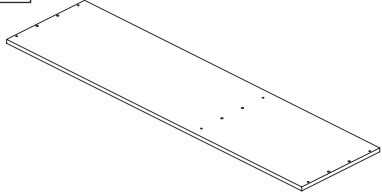
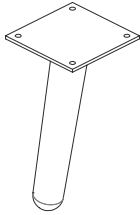
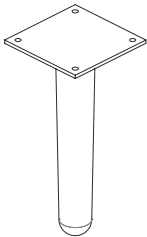
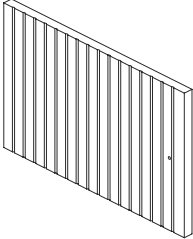
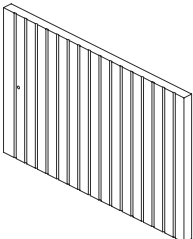
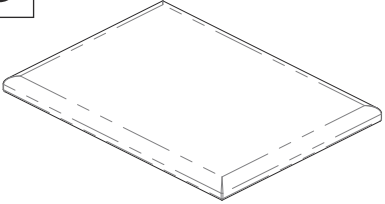
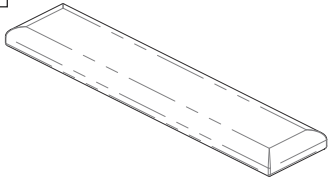
Part List

01  Left Side Panel -1pc	02  Middle Panel-1pc	03  Top Frame-1pc
04  Right Side Panel -1pc	05  Top Panel-1pc	06  Bottom Panel-1pc
07  Back Panel-1pc	08  Support Leg-4pcs	09  Support Leg-1pc
10  Door left -1pc	11  Door right -1pc	12  Cushion-1pc
13  Backrest-1pc		



ASSEMBLY INSTRUCTION

ITEM:WF531237

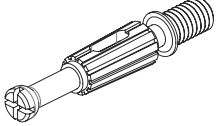

Hardware List

A  Male Camlock-30pcs	B  Female Camlock-30pcs	C  $\Phi 8 \times 30 \text{mm}$ Wood dowel-16pcs	D  $\Phi 3.5 \times 14 \text{mm}$ Screws-52pcs
E  Hinge-4pcs	F  Handle-2pcs	G  M4x30mm Screws-2pcs	H  $\Phi 4 \text{mm}$ Washer-2pcs
J  Door stopper1-2pcs	K  Door stopper2-2pcs	L  $\Phi 3.5 \times 20 \text{mm}$ Screws-8pcs	M  Stickers-20pcs

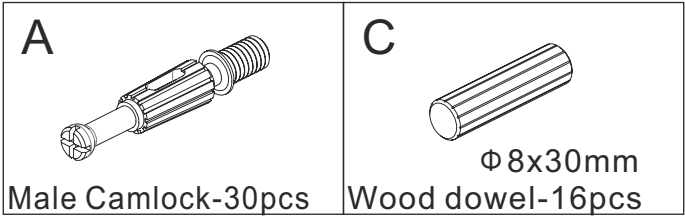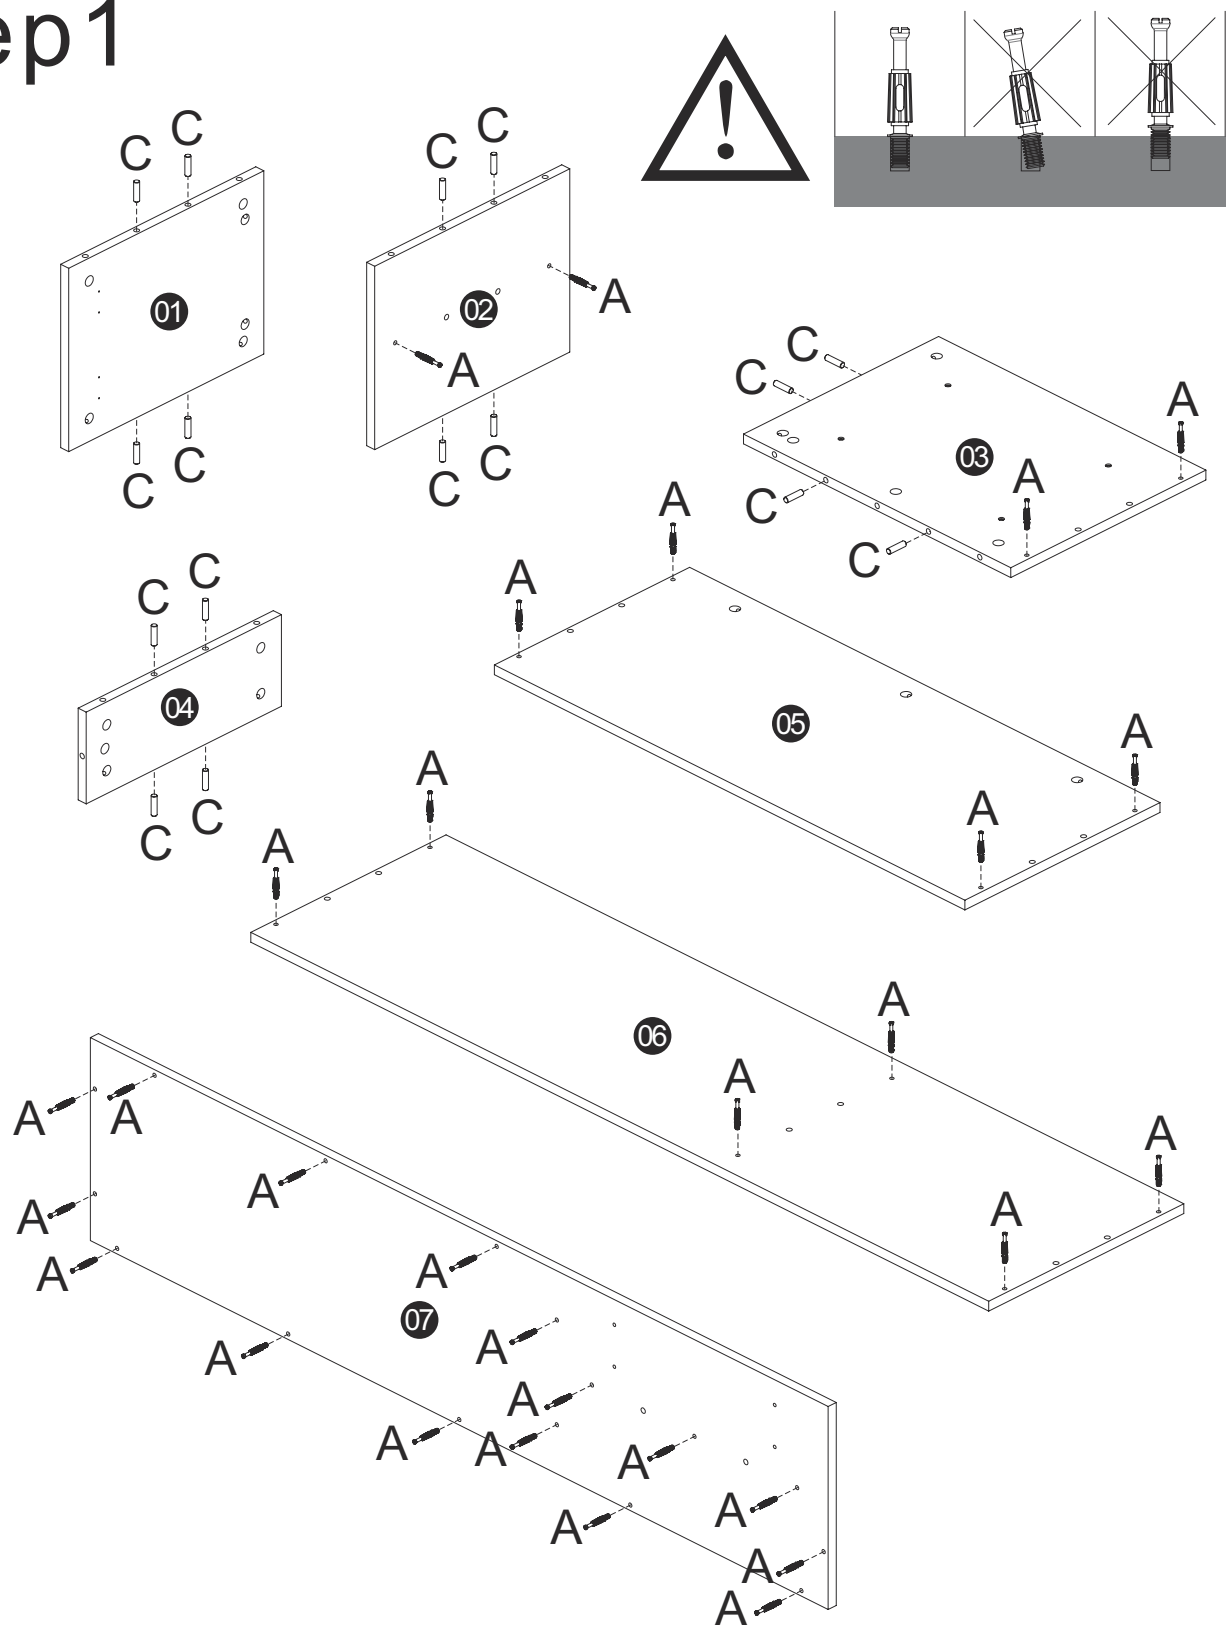Step1





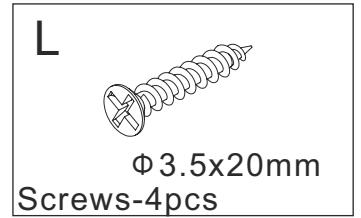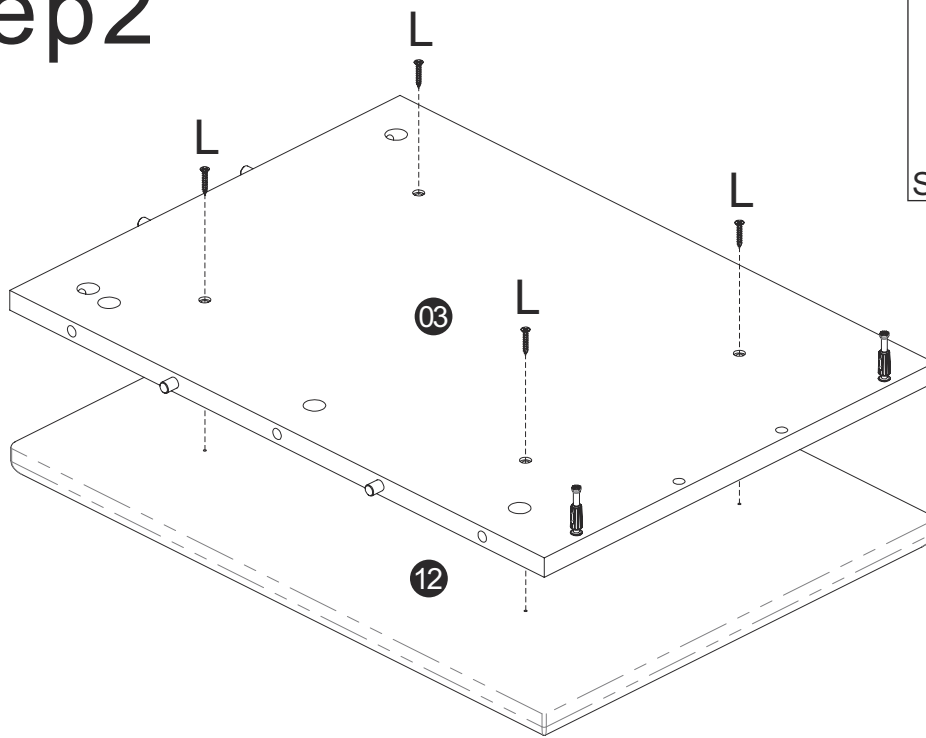Step2




NO.12 seat cushion need firstly assembled on NO.3 board ,
then start to other assembled

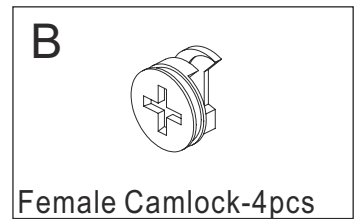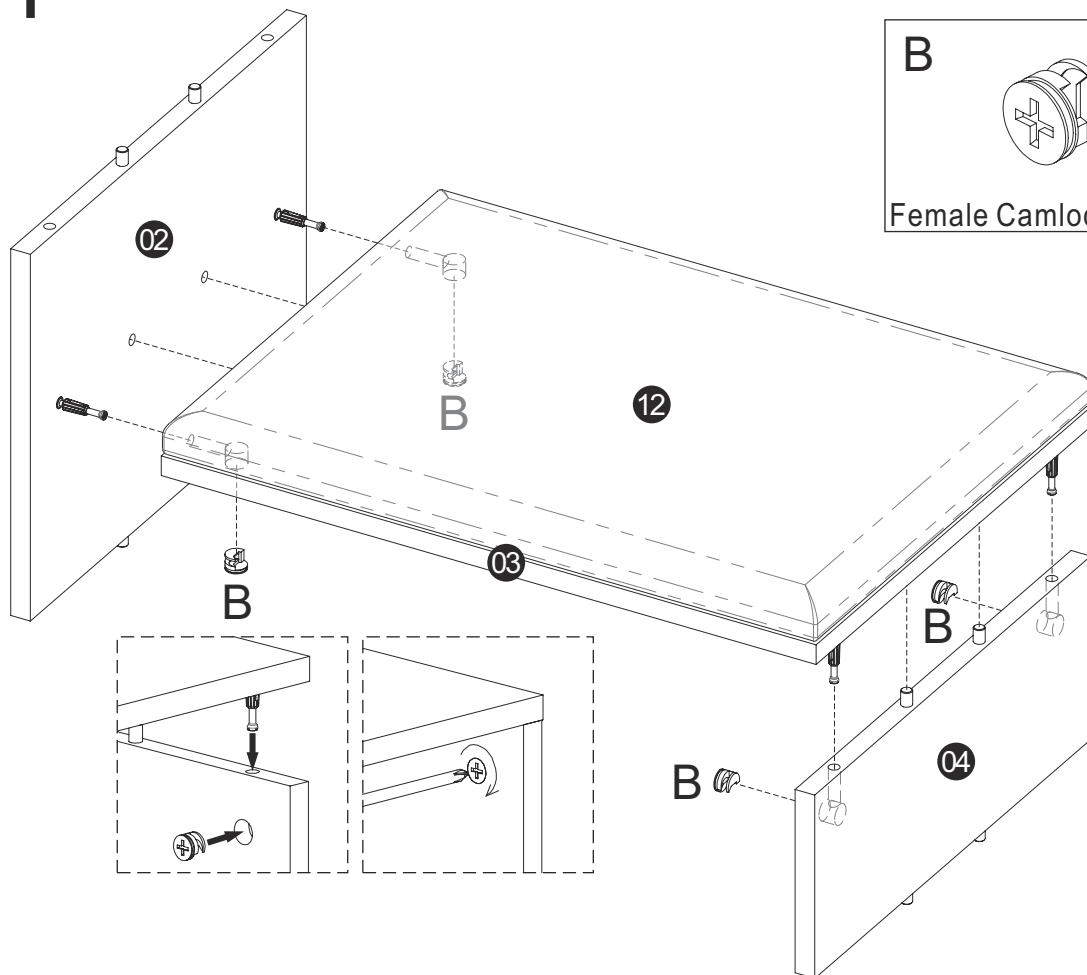
Step3




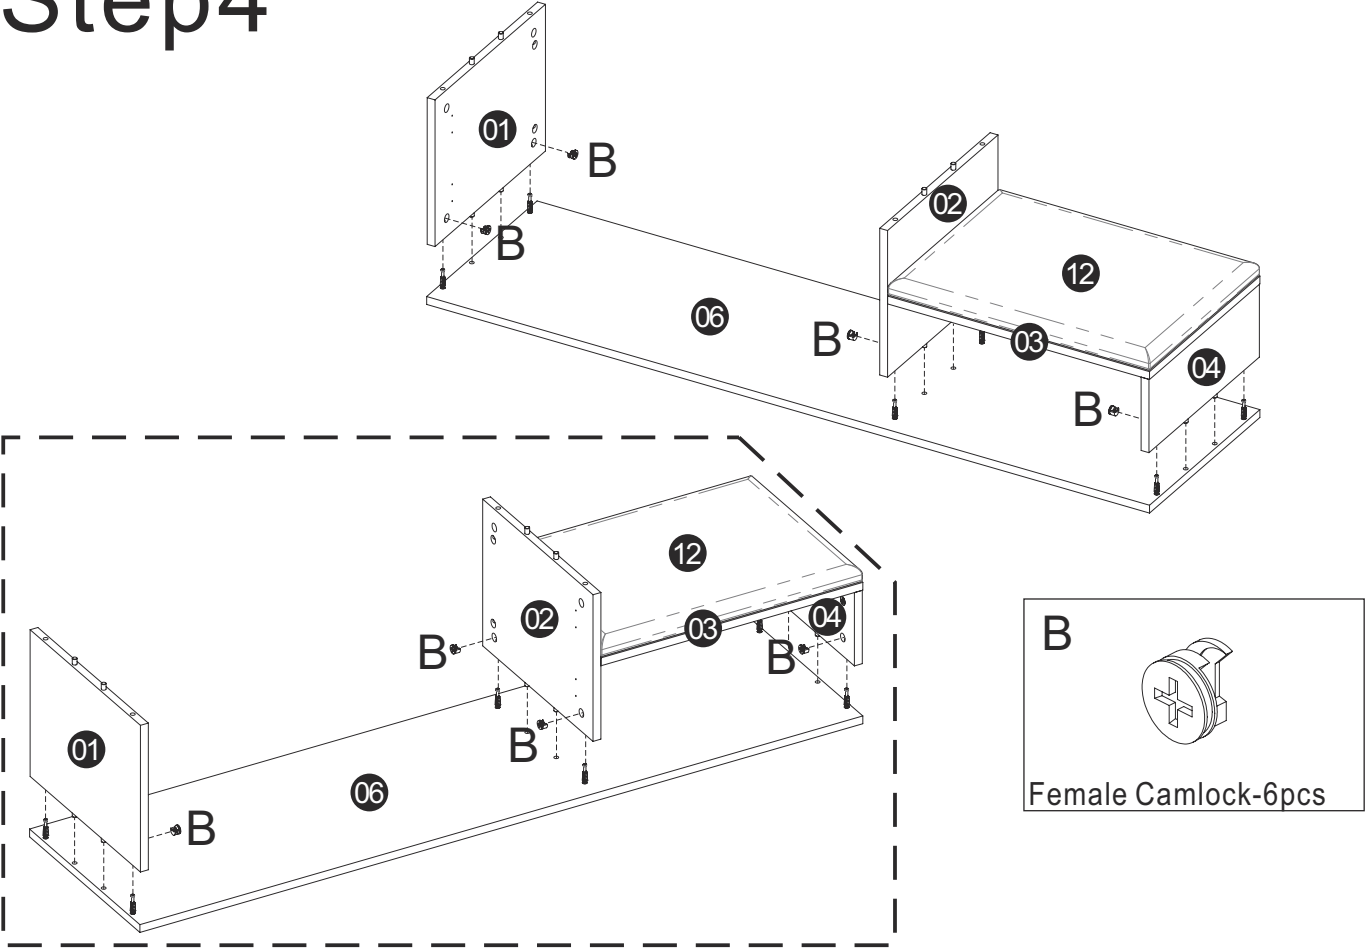
Step4




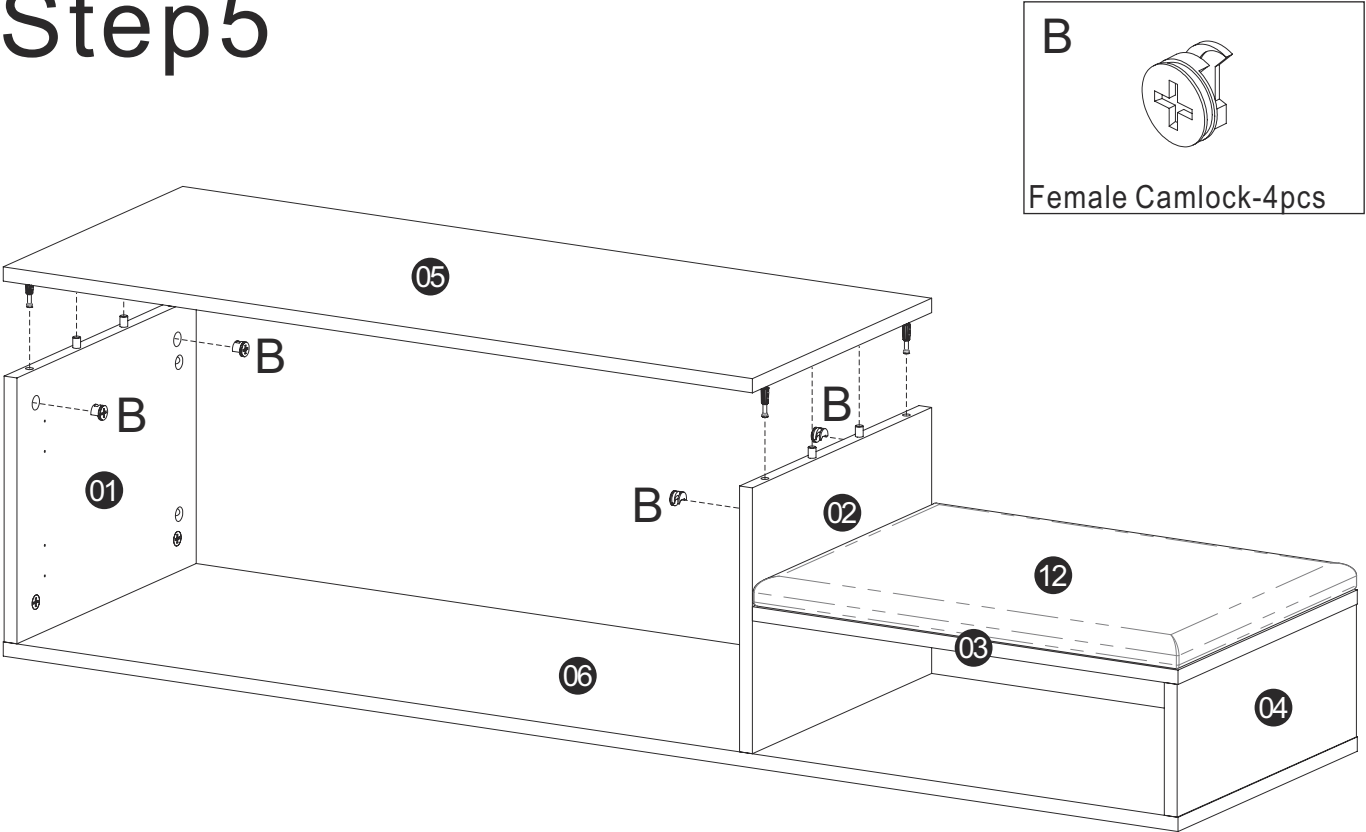
Step5



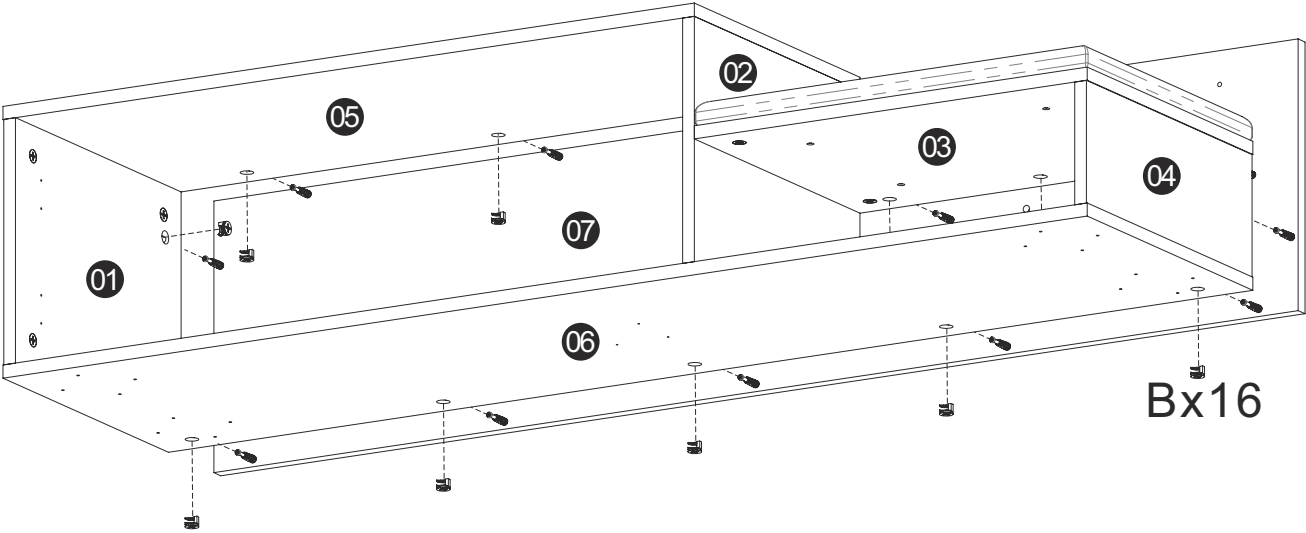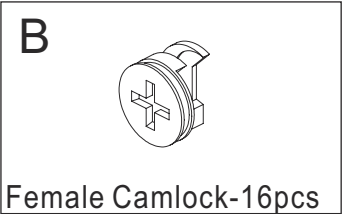
Step6








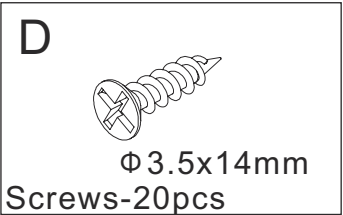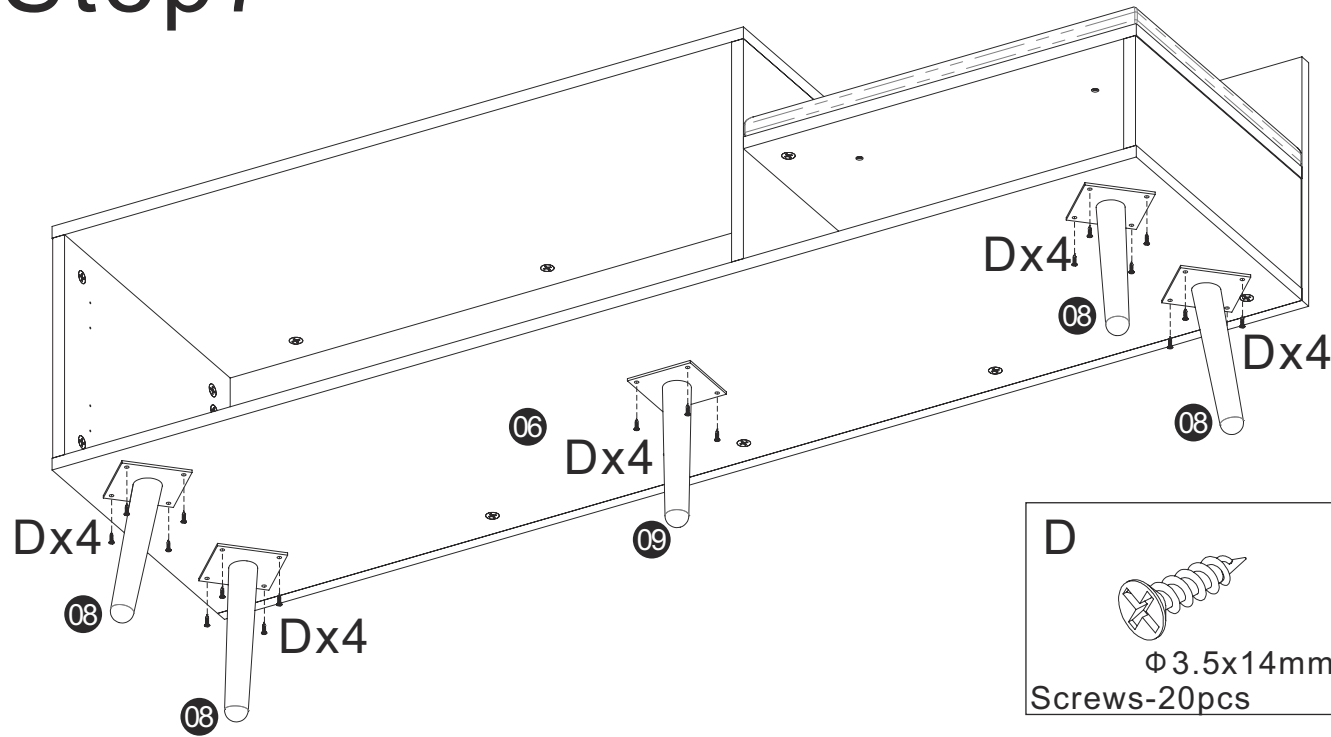Step7





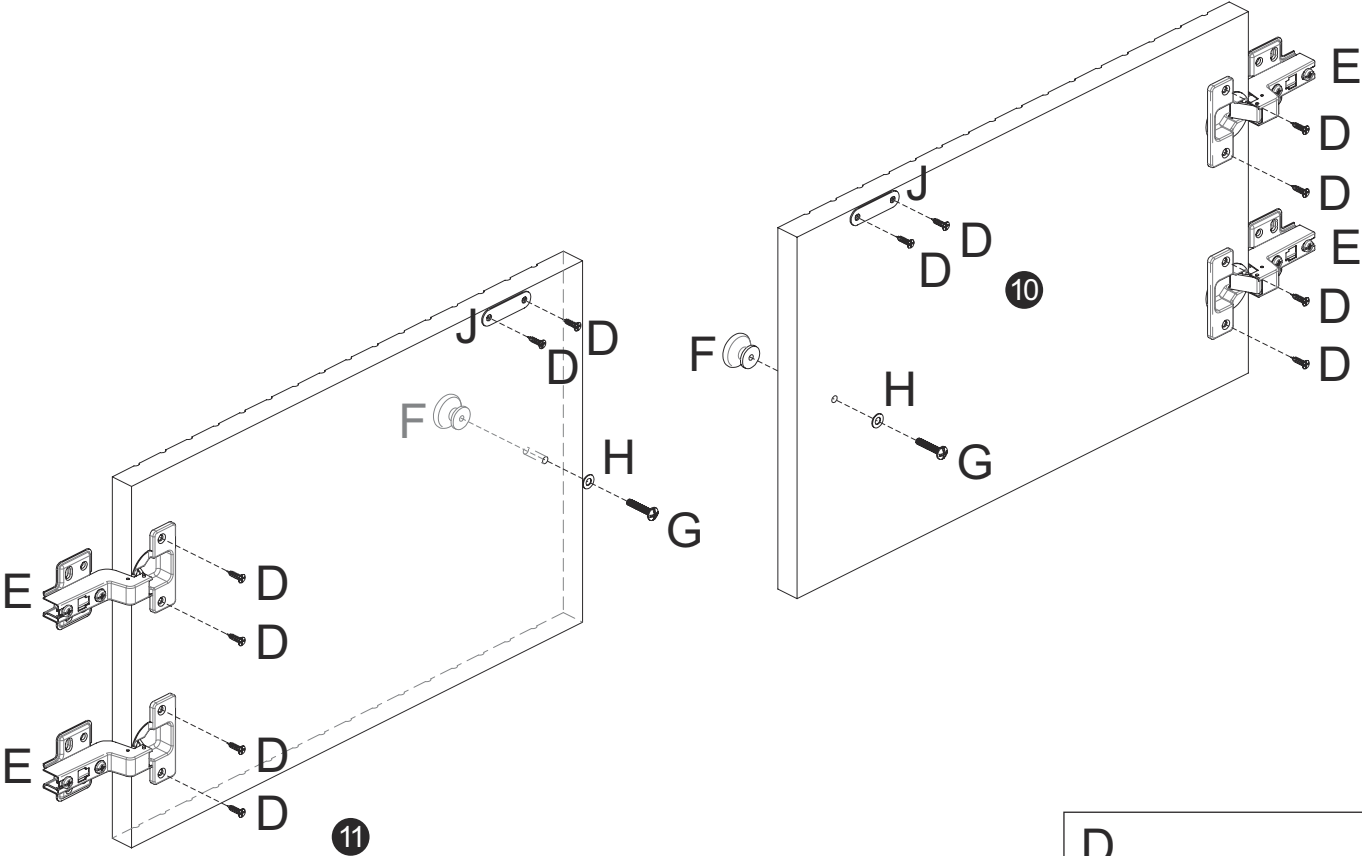

Step8





 Hinge-4pcs	 Handle-2pcs	 $\Phi 3.5 \times 14 \text{mm}$ Screws-12pcs
 $\Phi 4 \text{mm}$ Washer-2pcs	 Door stopper1-2pcs	 M4x30mm Screws-2pcs

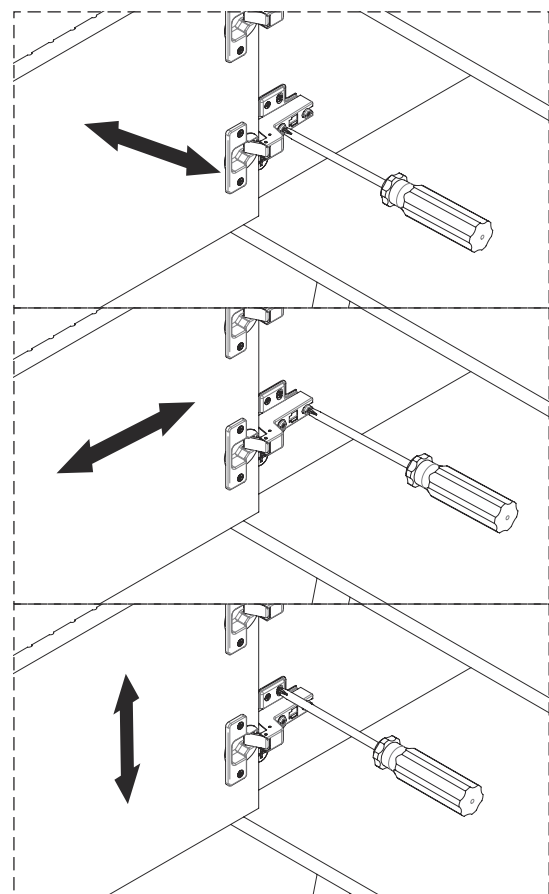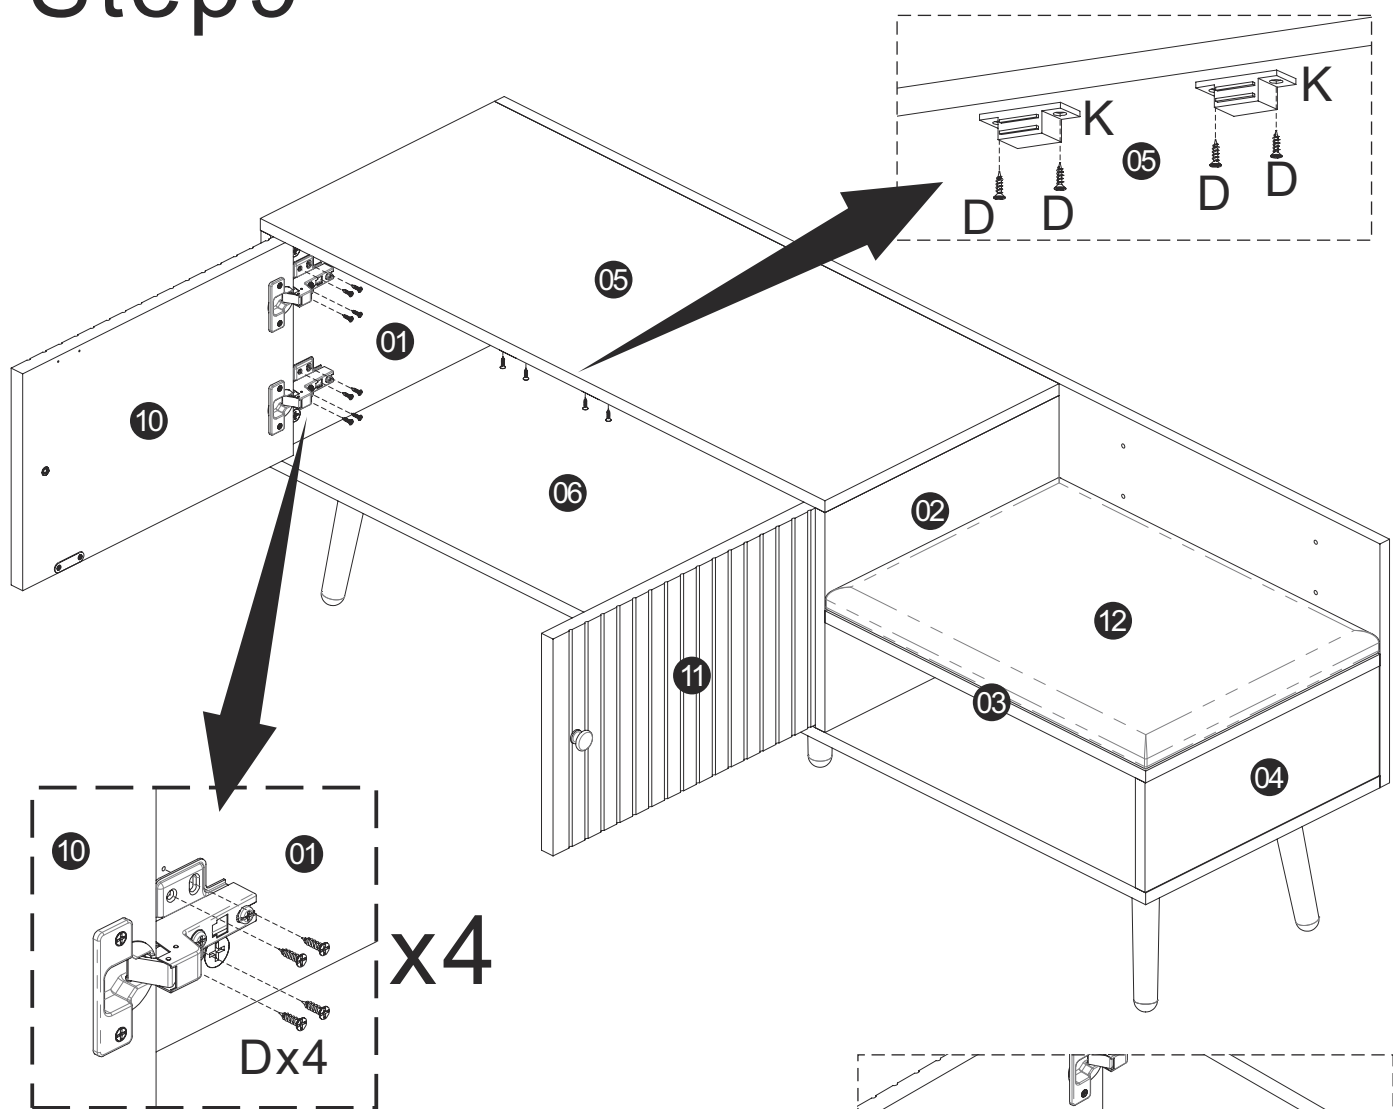Step9







D  Φ 3.5x14mm Screws-20pcs	K  Door stopper2-2pcs
---	---

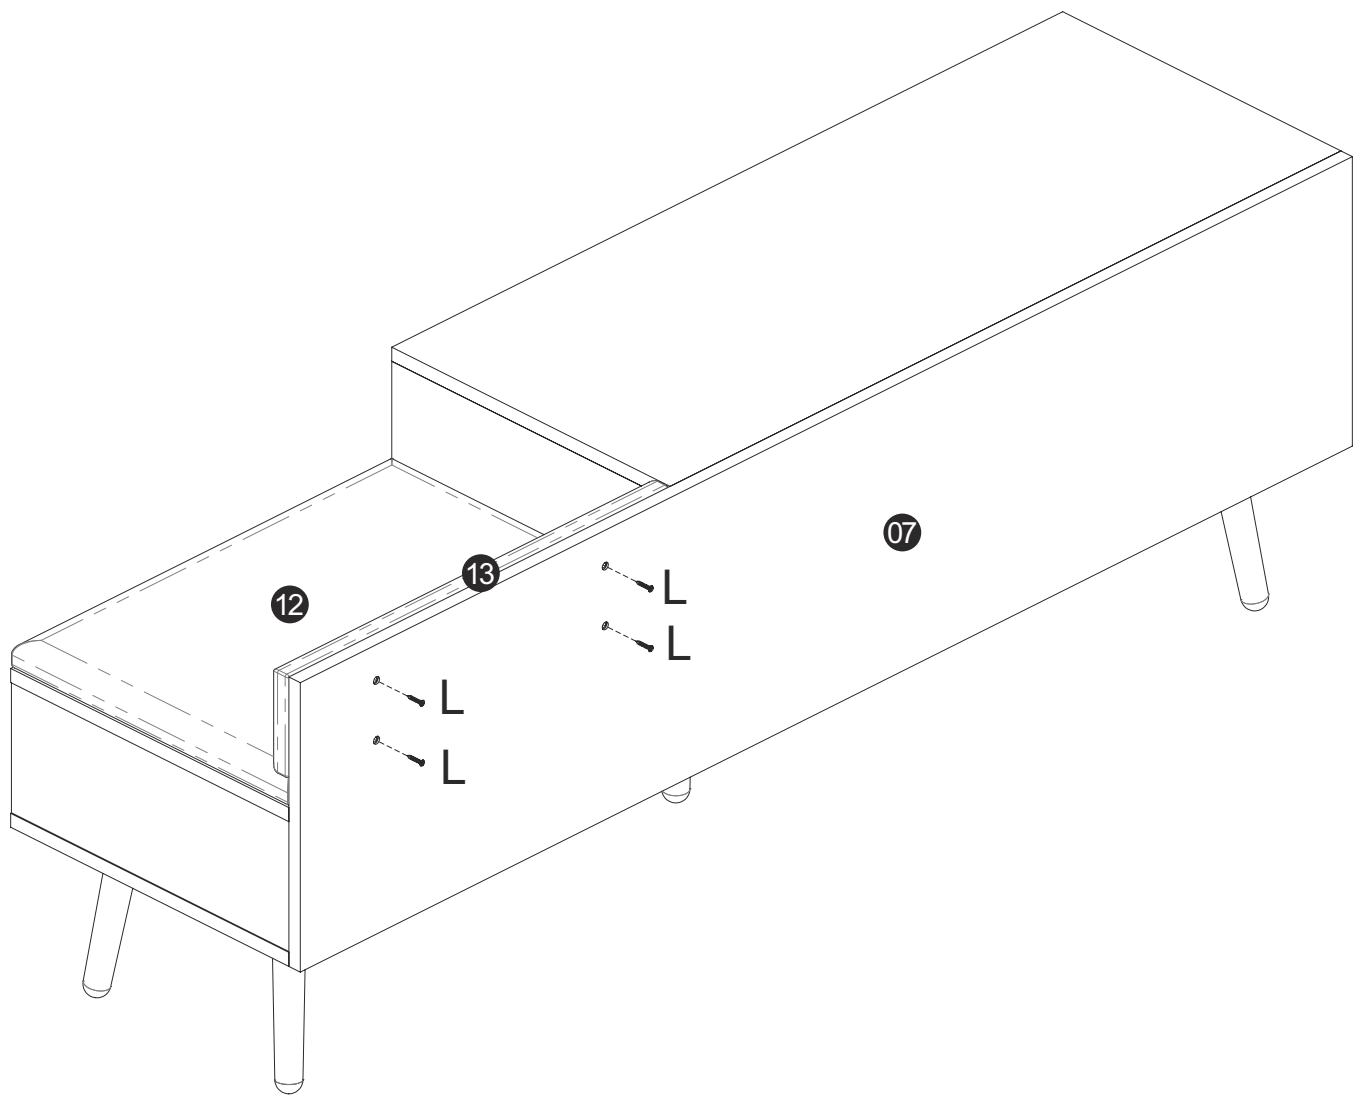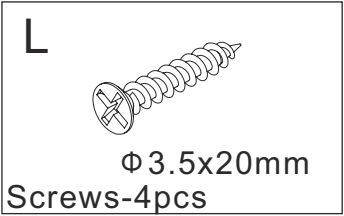Step 10



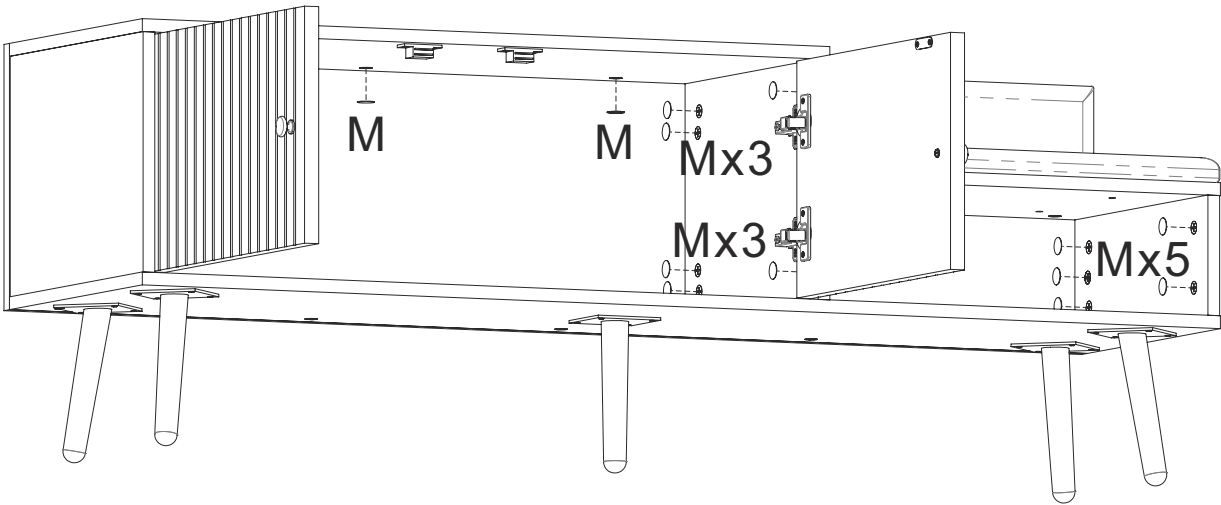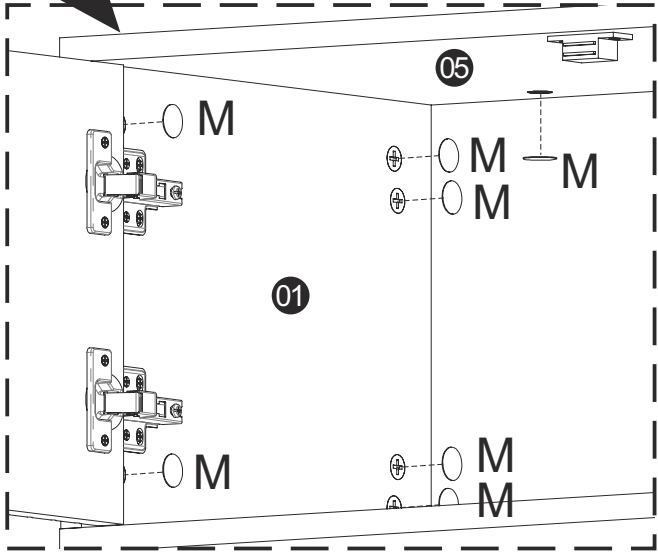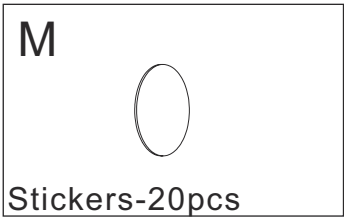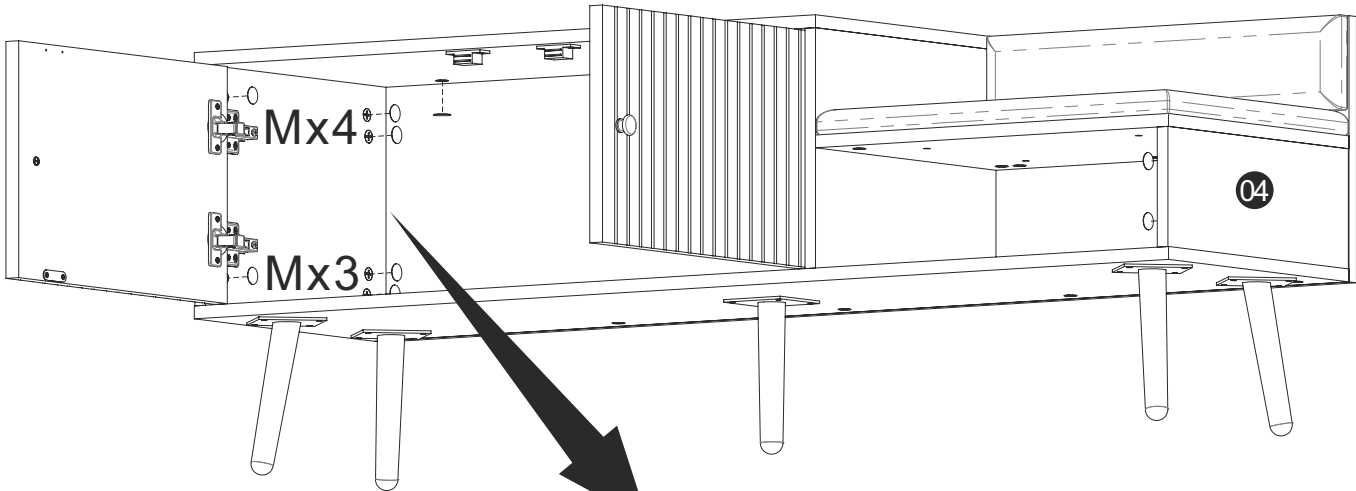Step 11



Step 12

