


Peel & Stick PVC Tile Installation Guide



Clean The Wall

Clean the wall with water and a powerful grease-remover such as TSP. Allow enough time for the surface to dry completely.

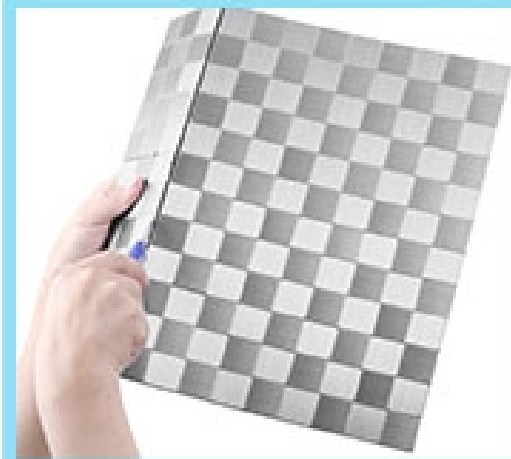

Cut The Tile I

Use a utility knife to cut along the seam line between each piece.



Cut The Tile II

Use a utility knife make a pass with force and snap off follow the cutting line.



Cut The Tile III

Use Dremel/chop saw/band saw if need to cut through tiles.



Measure The Area

Layout the entire project on a flat surface before installing the tiles to be sure you have enough tiles and your design is correct. Using a chalk line or level, create at least one vertical and one horizontal reference lines to guide tile placement.



Peel and Stick

Remove the film backing from both sides of the tile. Lightly place the tile onto the wall using your reference lines. Do not apply pressure to the tile until you are sure of your placement.



Reinforce

Use a laminate roller to make the tiles stick firmly to the wall.

1	3
2	4 5

1. Clean the wall
2. Measure the area
3. Cut the tile
4. Peel and stick
5. Reinforce

Tips:

- ① The cutting area should be smaller than the coverage area of the outlet so that the gap will not be exposed after installation.
- ② You can use peel and stick trim to decorate the edges of the tiles.
- ③ The tiles should be installed at least 16 inches from the stove.
- ④ Please feel free to contact our customer service for any questions, we are stand behind our products.