



Assembly Instructions

Item# 117-1X

Free Standing Coat and Shoe Rack

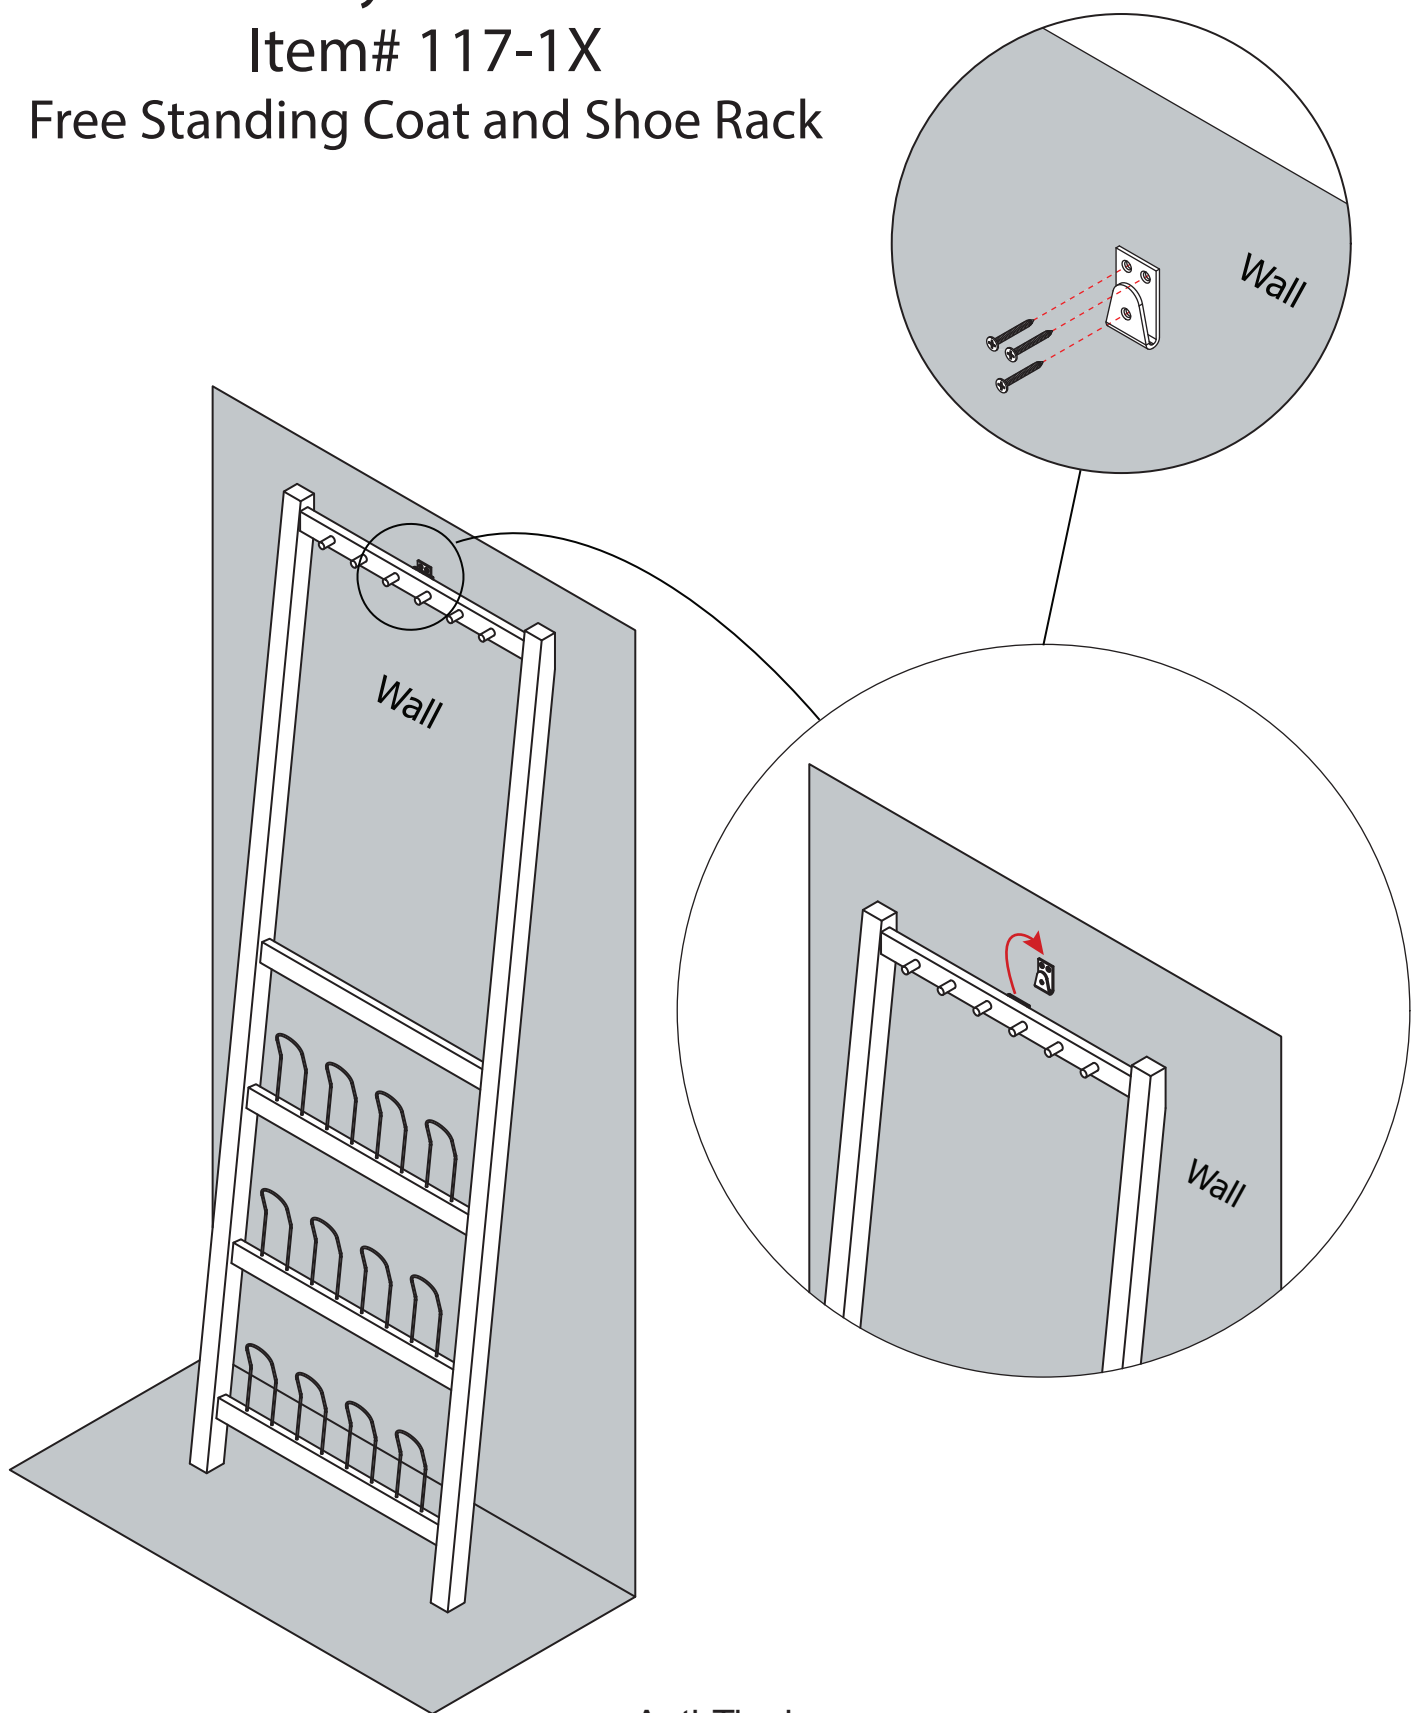

Anti-tipping

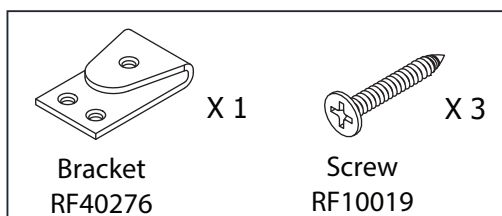

Anti-Tipping

- Find the place to install the item.
- Mark the position to attach the Bracket (RF40276) to the wall by using screws (RF10019).