




Right Bench

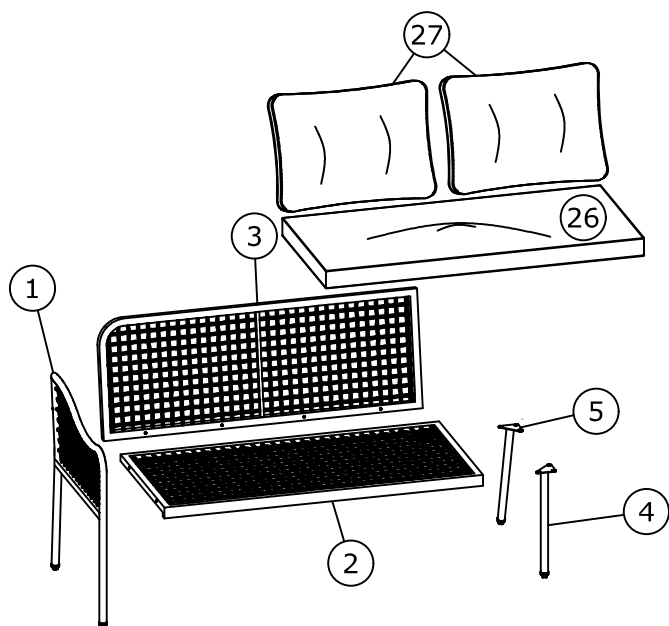

Left Bench

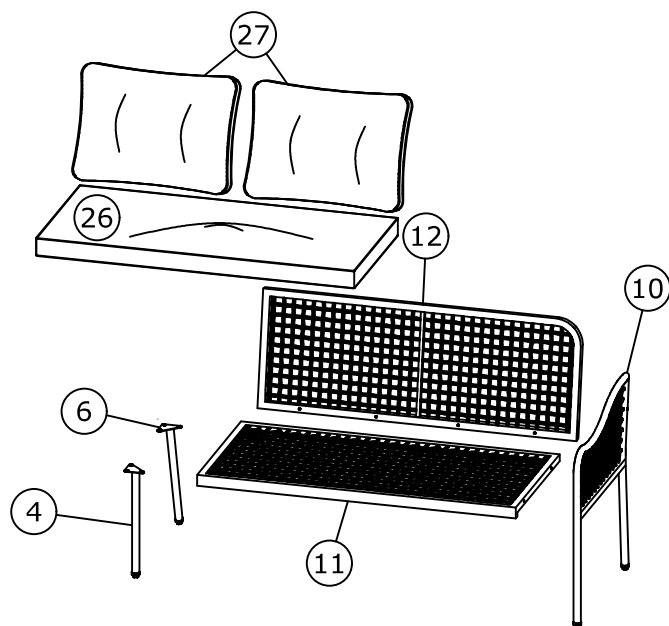


Corner Bench

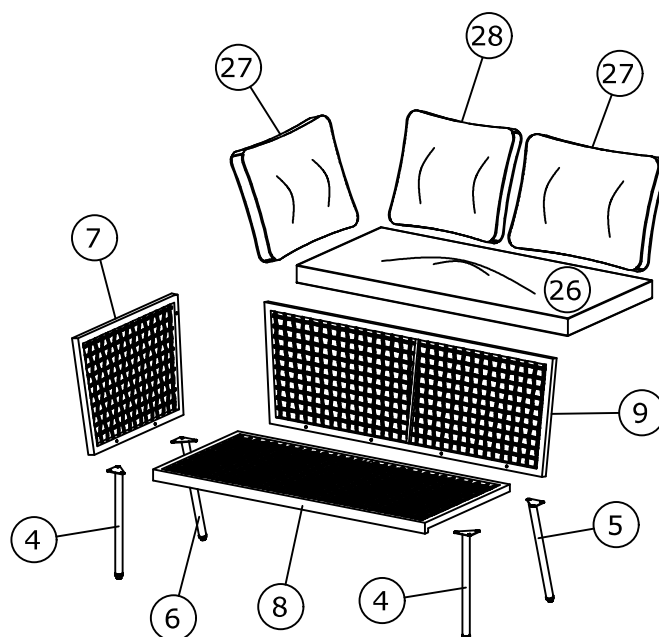


Note:

1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
2. Place the item on a flat ground to adjust and make sure it remains stable.
3. Tighten up all screws with tools gradually.
4. If screw are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
6. Note: If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.


Ottoman

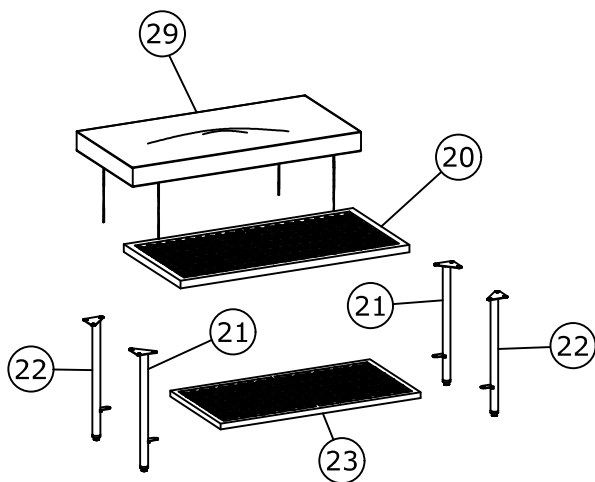

Stool

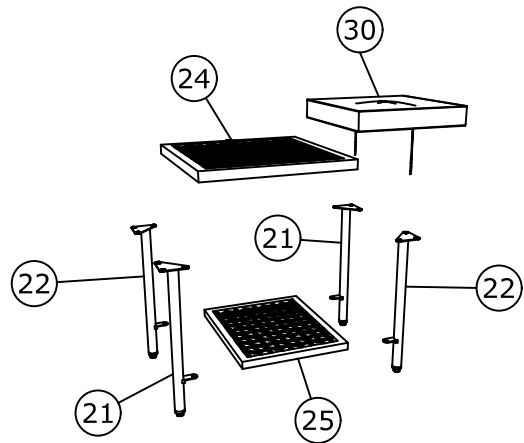

Table

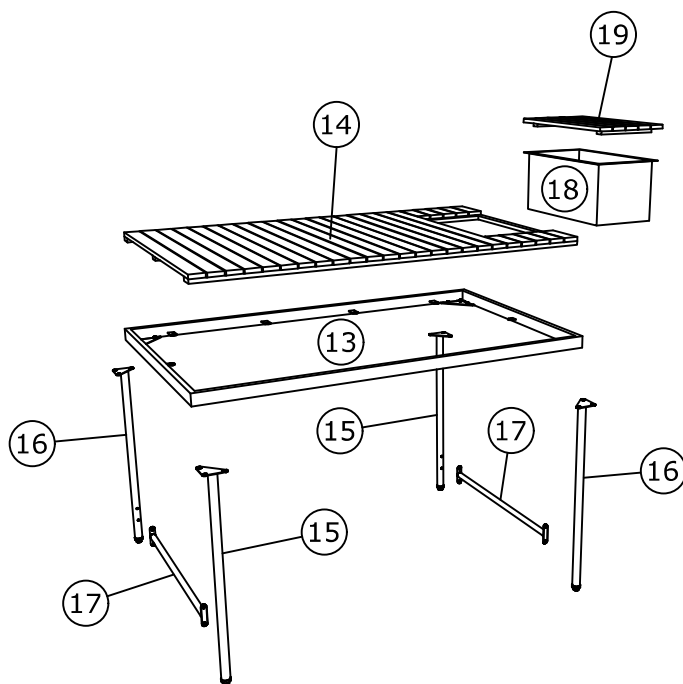


Note:


1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
2. Place the item on a flat ground to adjust and make sure it remains stable.
3. Tighten up all screws with tools gradually.
4. If screw are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
6. Note: If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

CARTON CONTENT:


Box 1/3: N707P233735

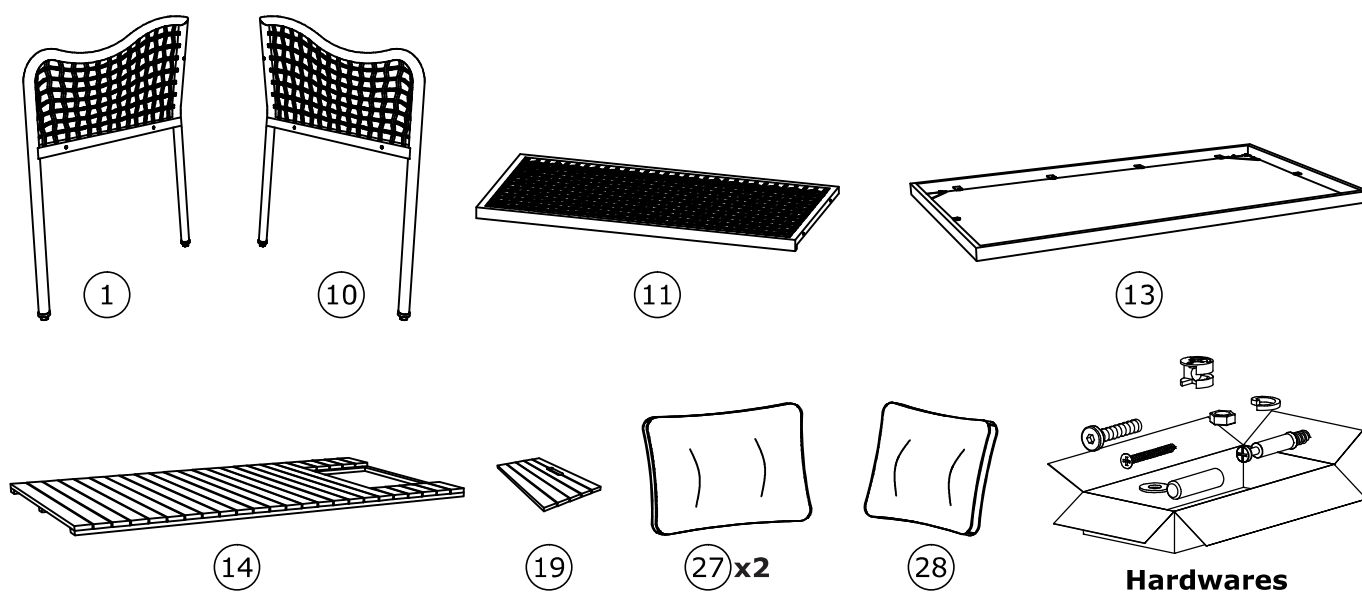


Box 2/3: N707P233736




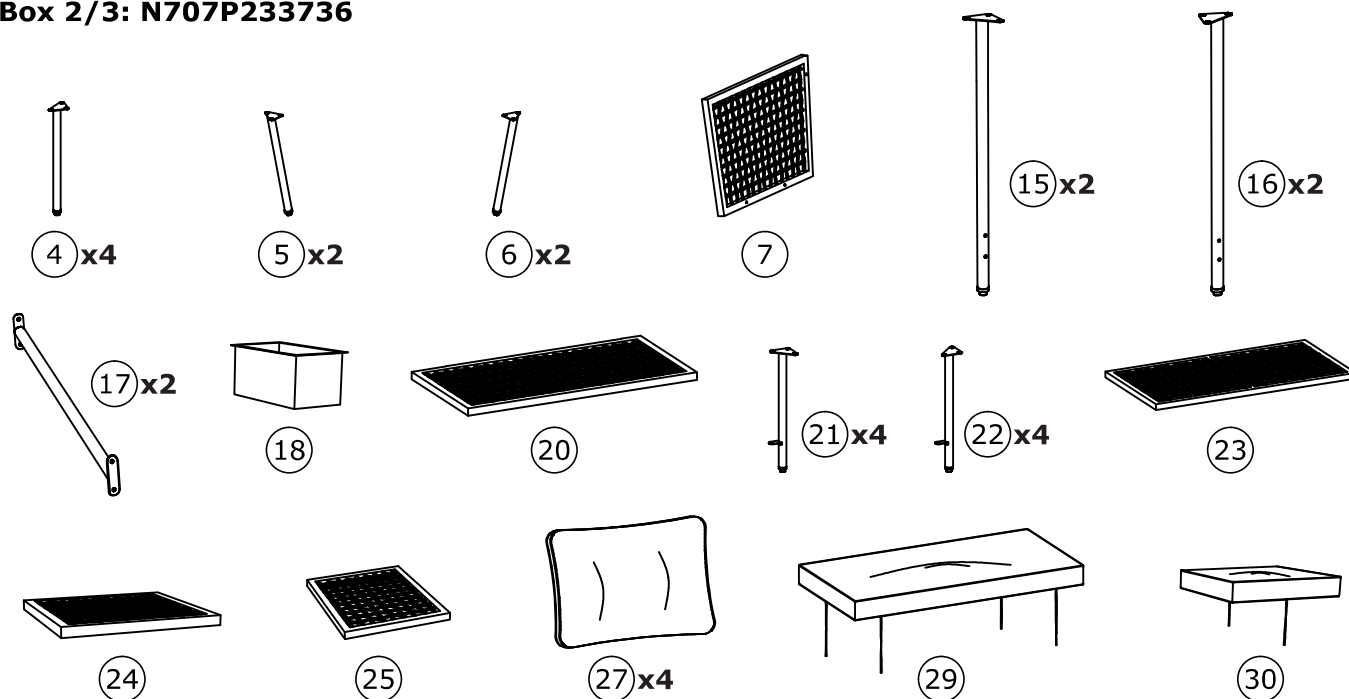


Box 3/3: N707P233737

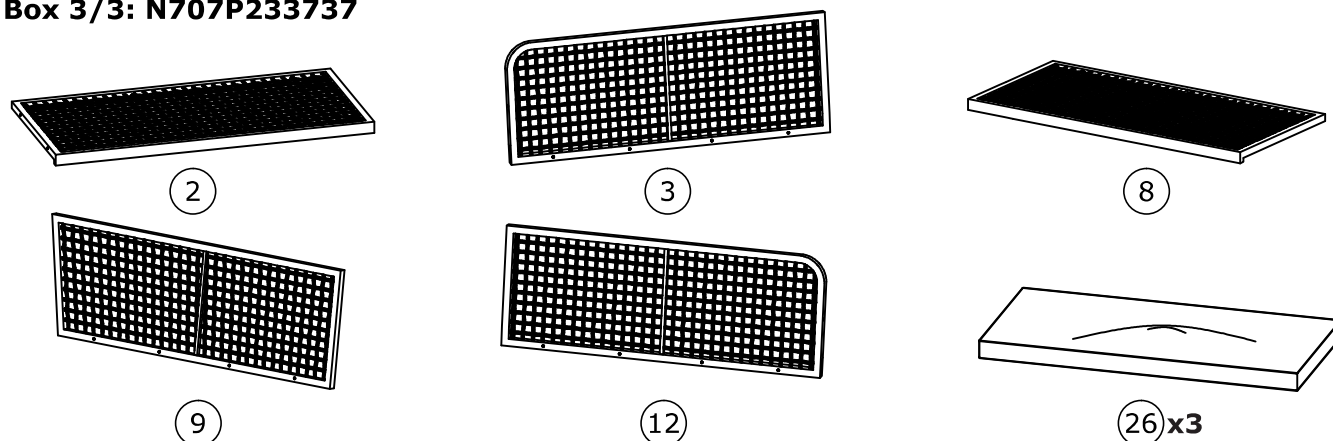

HARDWARES:

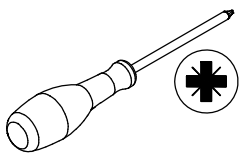


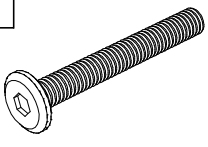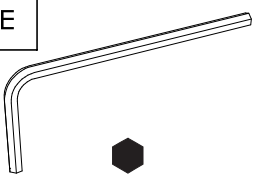A  M6x20 mm (76pcs + extra 3pcs)	B  M6x45 mm (21pcs + extra 3pcs)	C  Flat Washers Ø6x14x1 mm (97pcs + extra 3pcs)	D  Screw Ø4x15 mm (10pcs + extra 2pcs)
E  Allenkey 4x98 mm (3 pcs)			

STEP 1

(B) x2

(C) x2

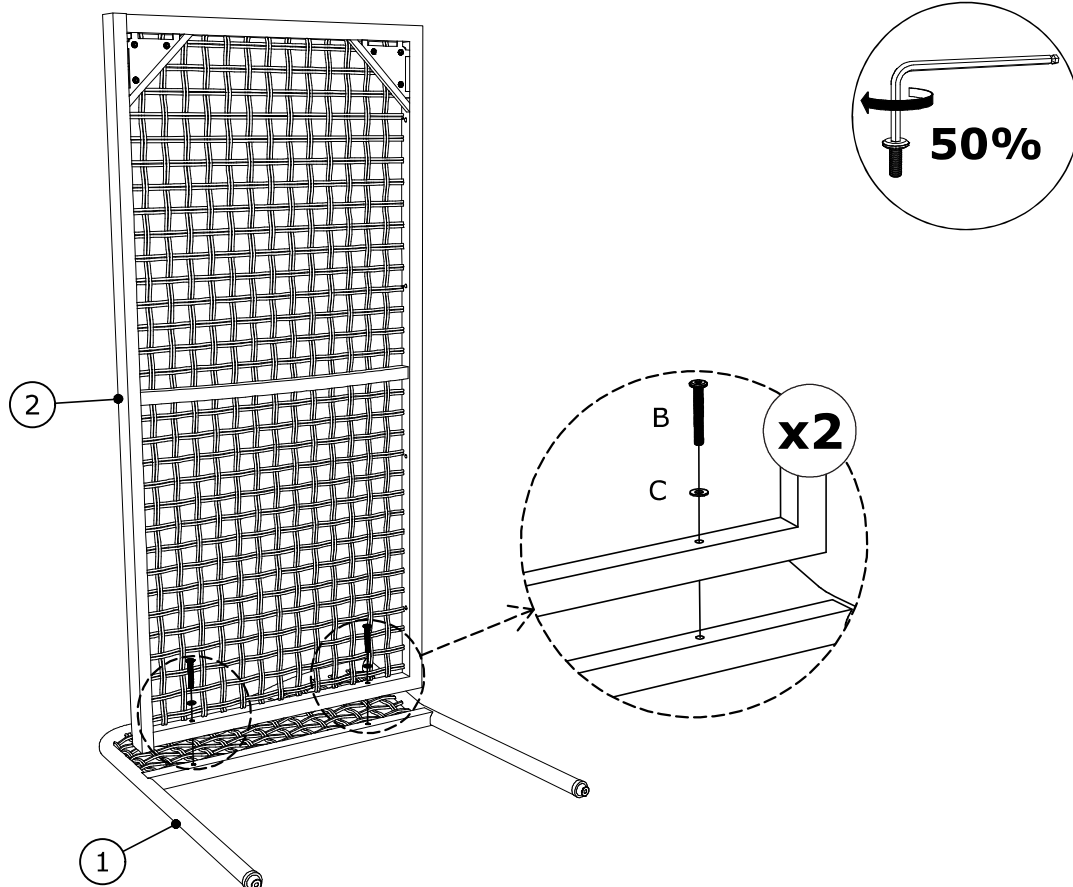


Right bench: Connect the right seat (2) & right arm (1) with Allenkey (E).

STEP 2

(B) x4

(C) x4

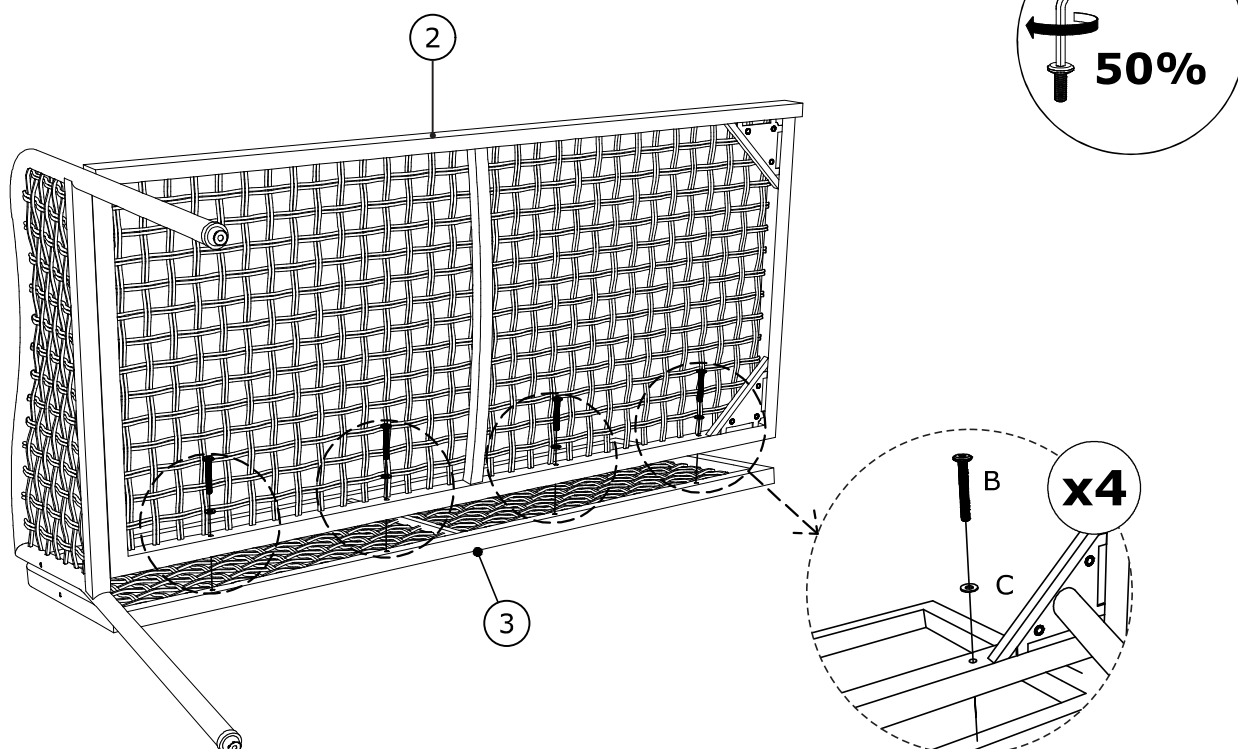


Connect the right seat (2) & right backrest (3) with Allenkey (E).

STEP 3

(B) x1

(C) x1

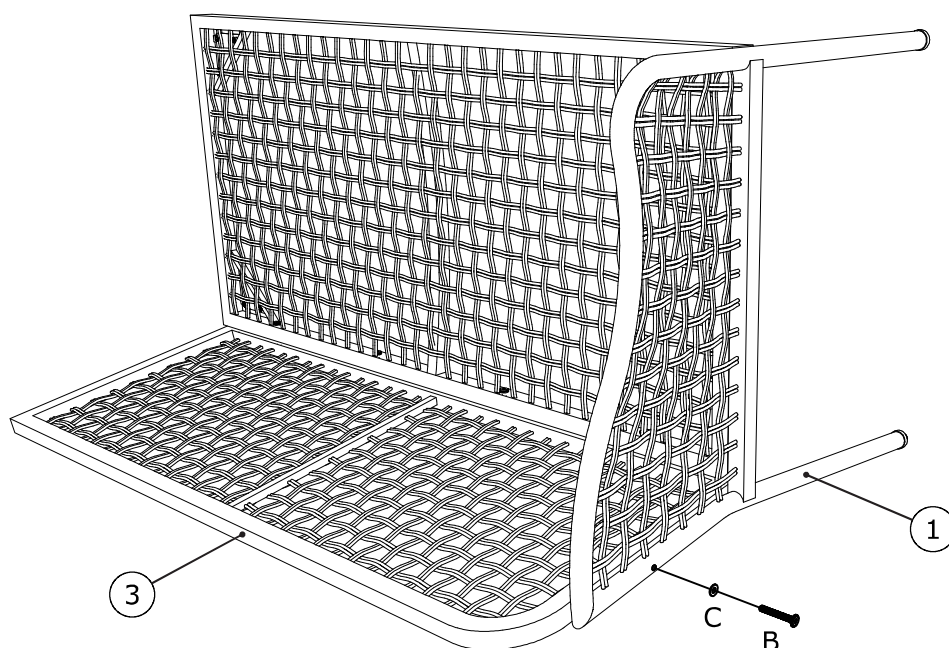


Connect the right arm (1) & right backrest (3) with Allenkey (E).

STEP 4



(A) x6

(C) x6

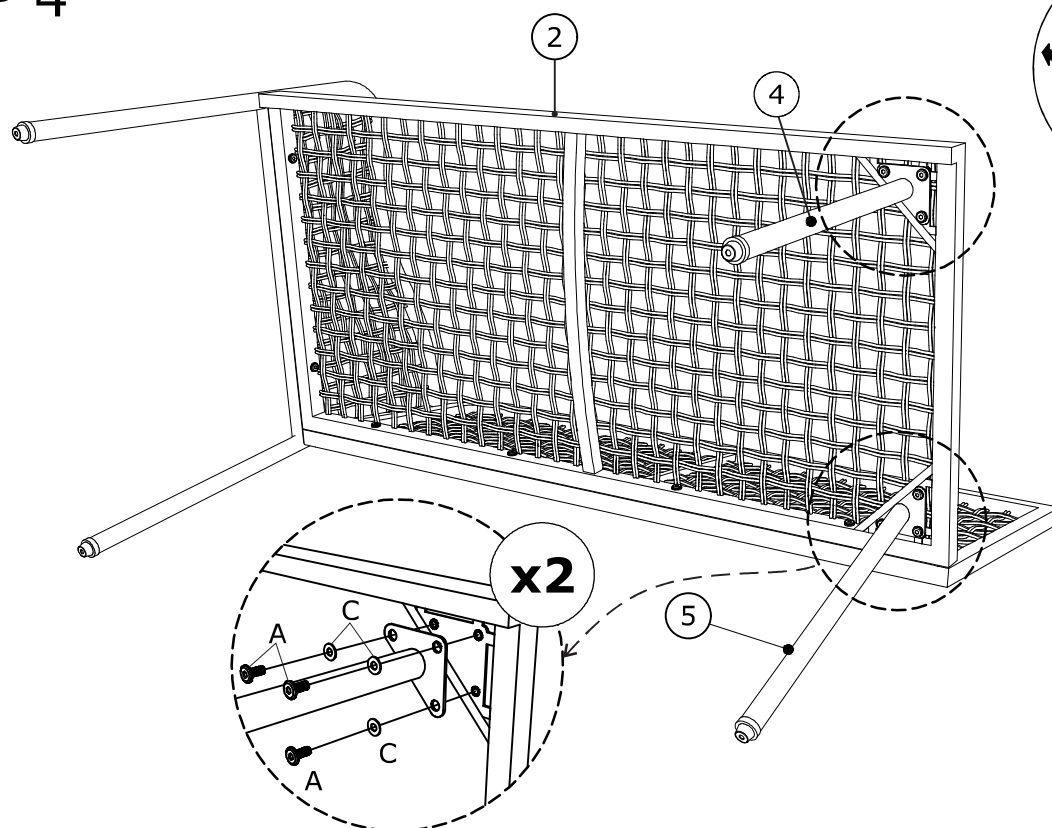

Connect the bench legs (4) & (5) & right seat (2) with Allenkey (E).

STEP 5

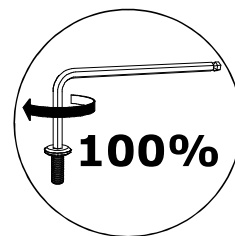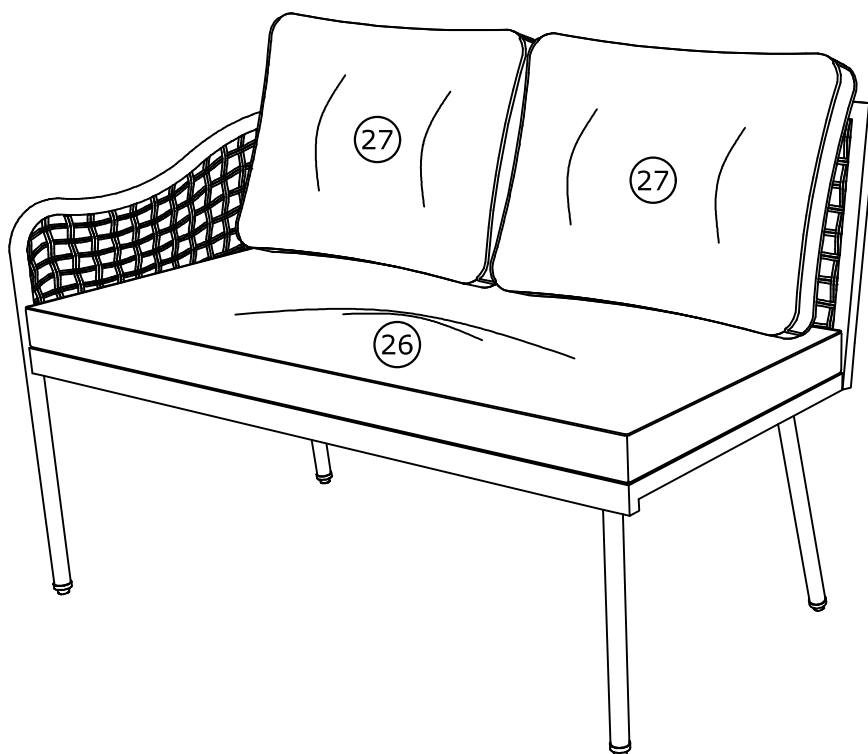


Done

Tighten all bolts 100% with Allenkey (E) then put the seat cushion (26) and 2 big pillow (27) onto the right bench.

STEP 6

(B) x2

(C) x2



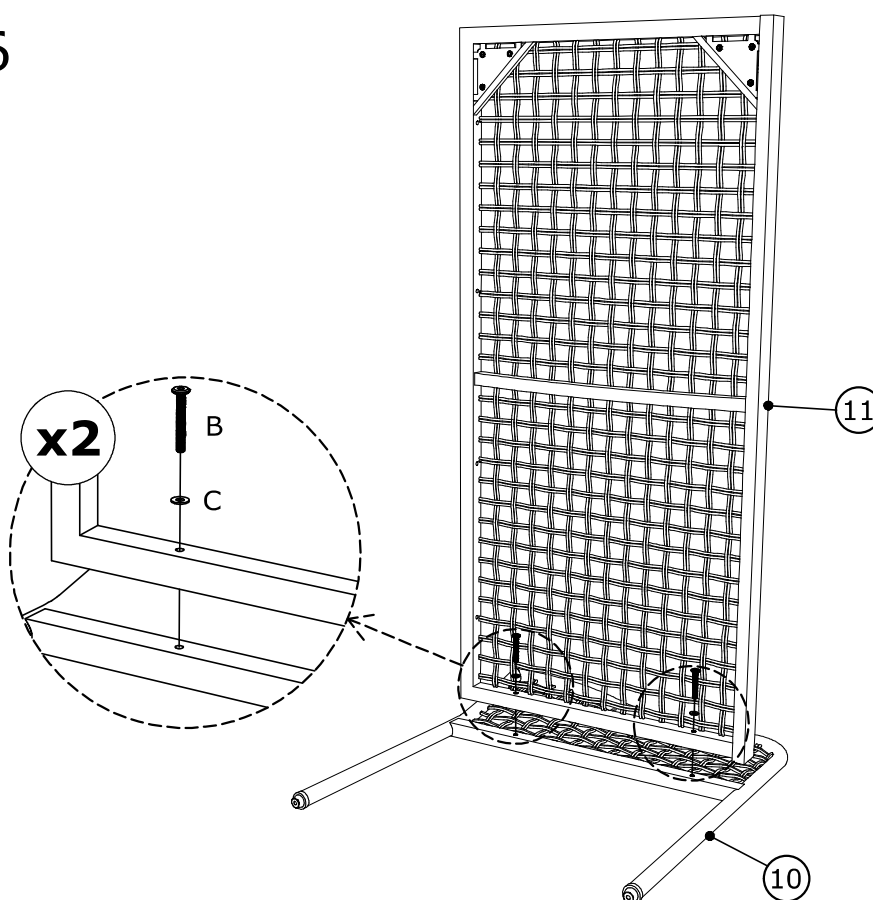


Left bench: Connect the left seat (11) & left arm (10) with Allenkey (E).

STEP 7

(B) x4

(C) x4

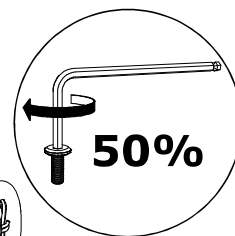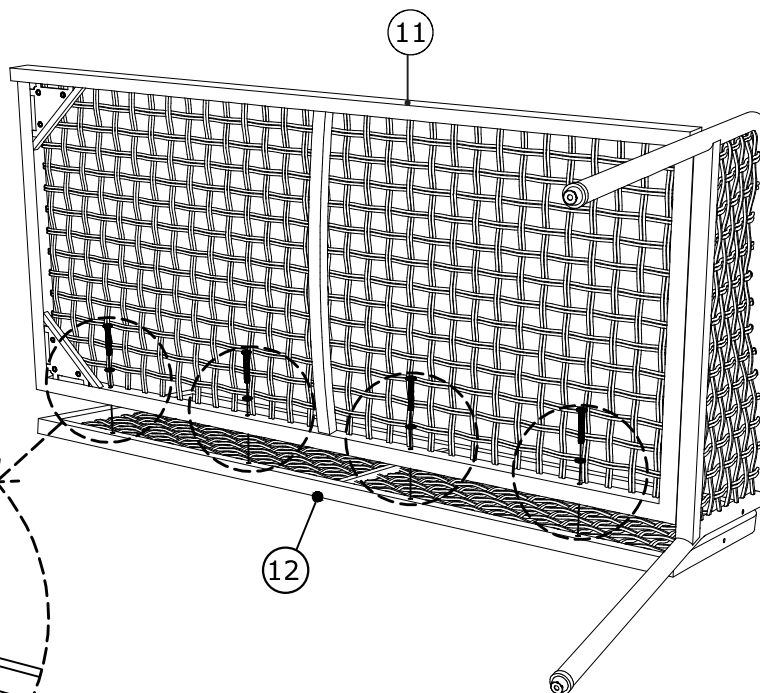
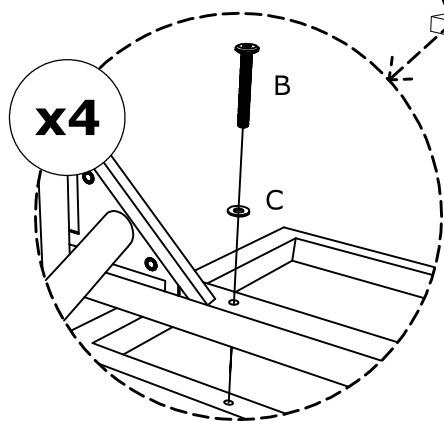


Connect the left seat (11) & left backrest (12) with Allenkey (E).

STEP 8

(B) x1

(C) x1

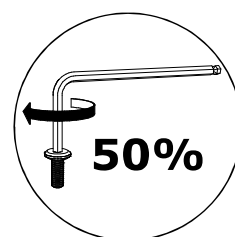
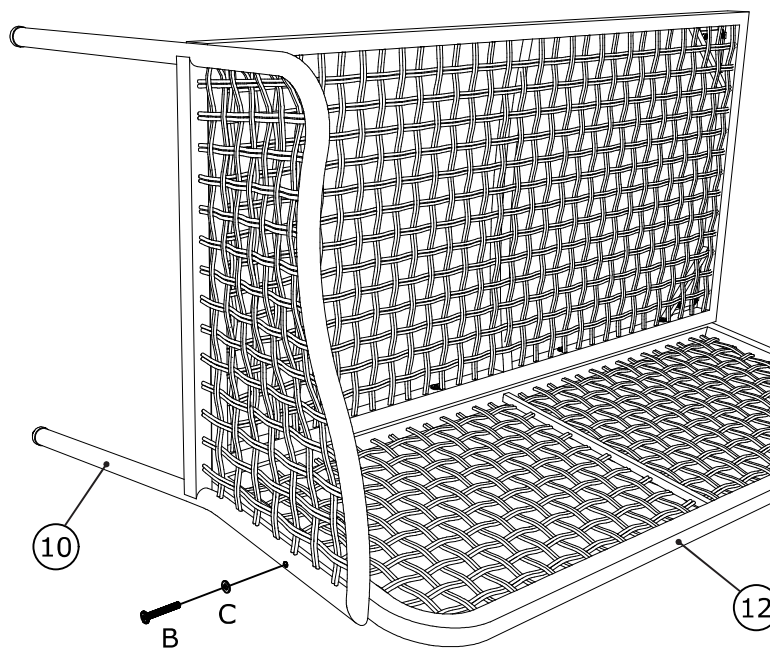


Connect the left arm (10) & left backrest (12) with Allenkey (E).

STEP 9



(A) x6

(C) x6

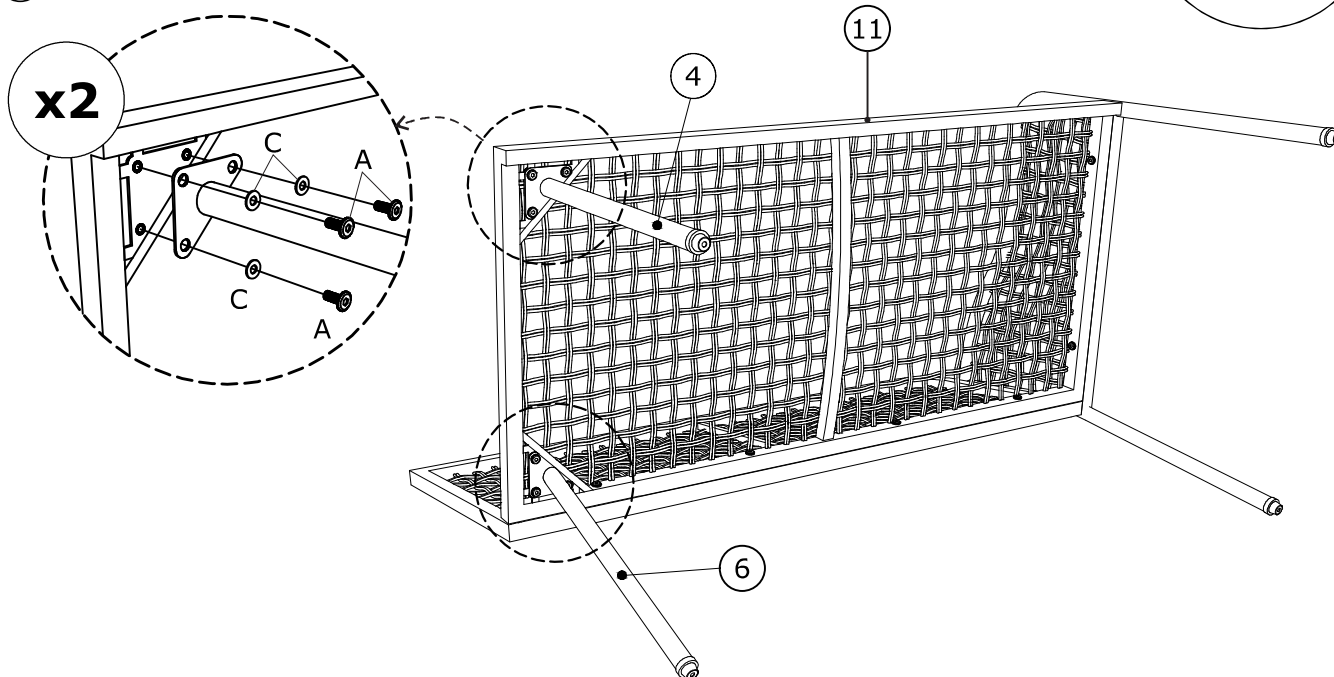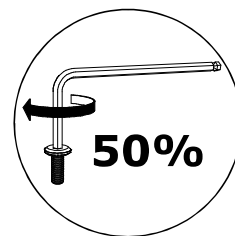

Connect the bench legs (4) & (6) & left seat (11) with Allenkey (E).

STEP 10

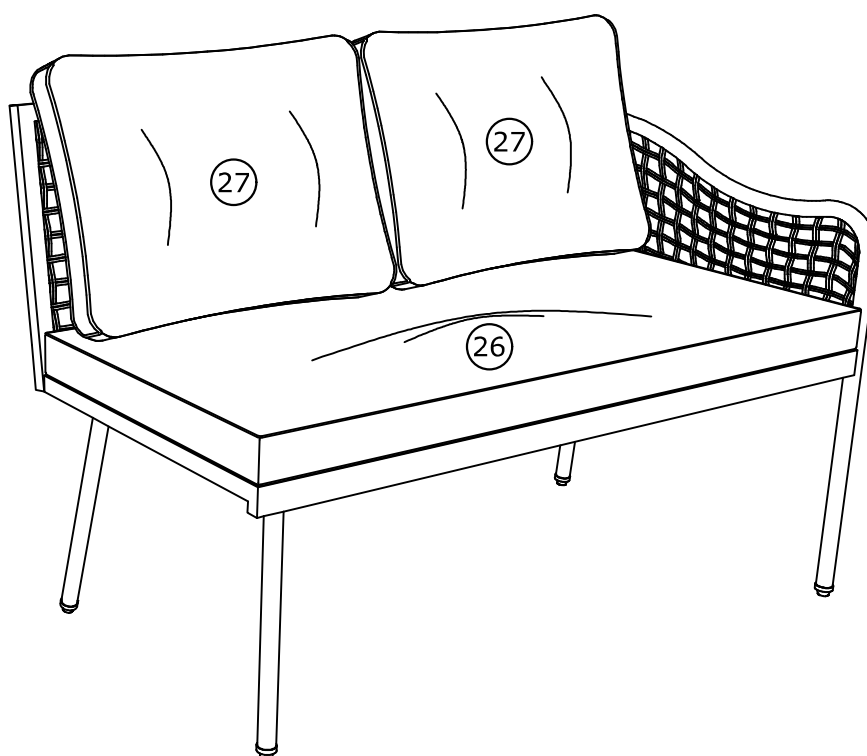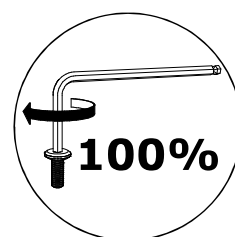


Done

Tighten all bolts 100% with Allenkey (E) then put the seat cushion (26) and 2 big pillow (27) onto the right bench

STEP 11

(B) x4

(C) x4

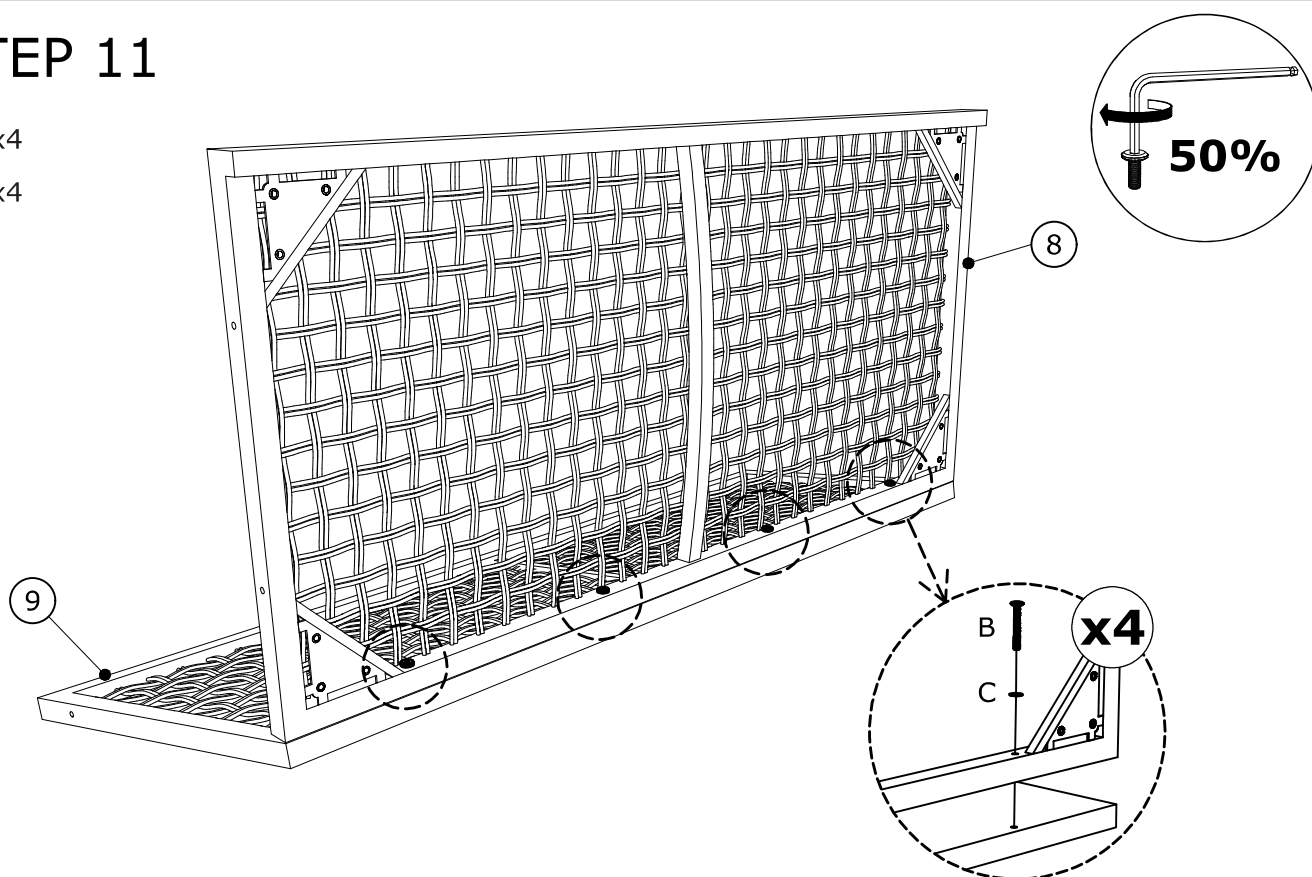


Corner bench: Connect the corner seat (8) & corner backrest (9) with Allenkey (E).

STEP 12

(B) x2


(C) x2

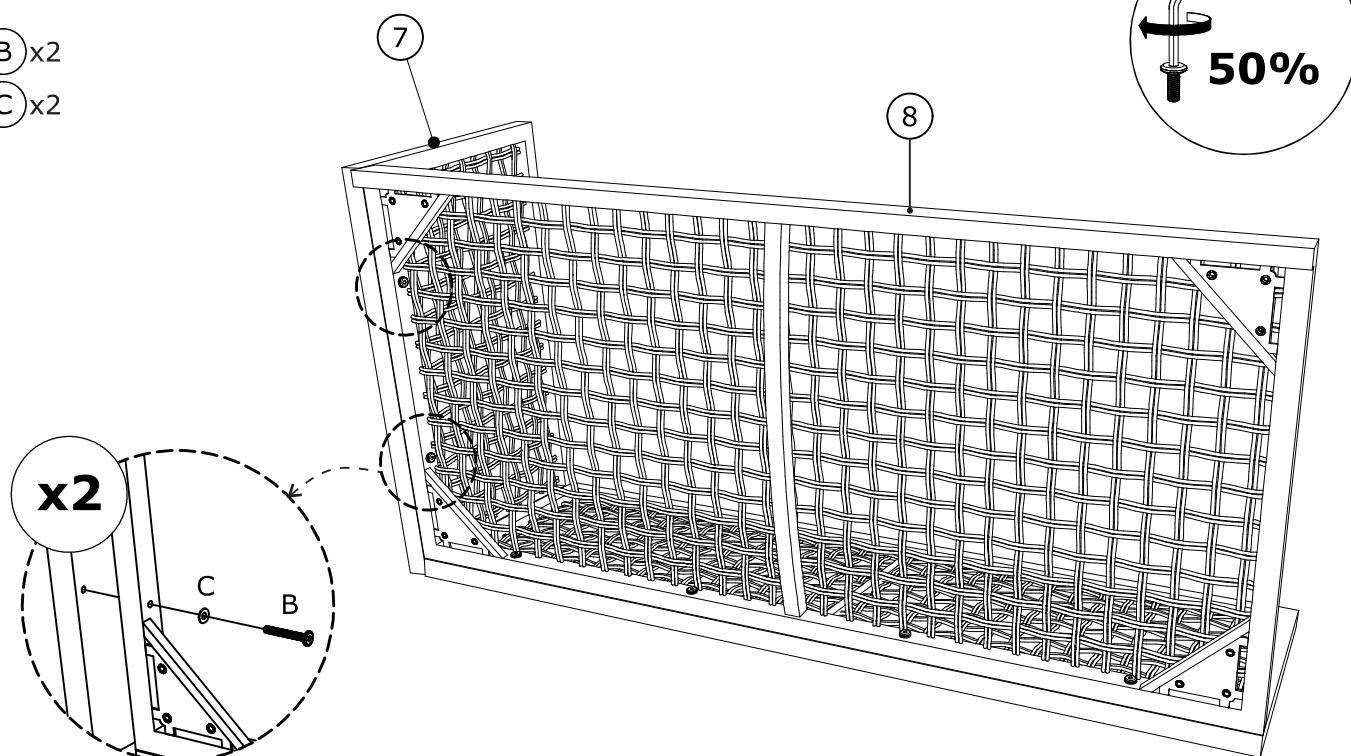

Connect the corner seat (8) & small backrest (7) with Allenkey (E).

STEP 13


(B) x1
(C) x1

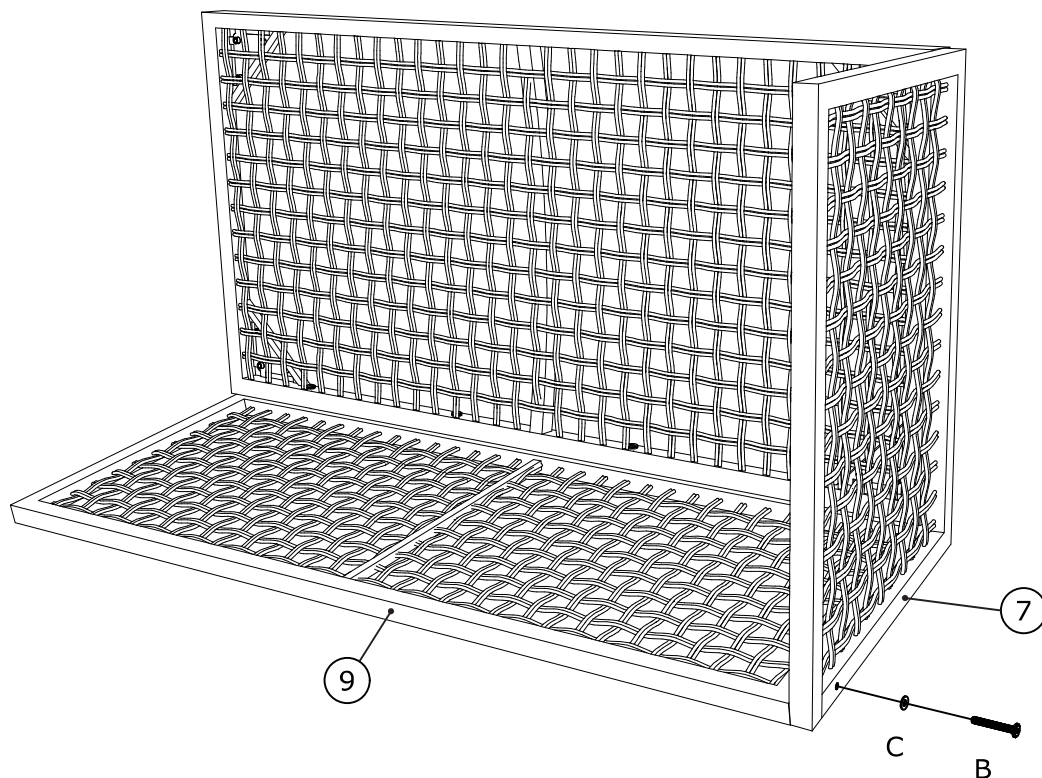

Connect the small backrest (7) & corner backrest (9) with Allenkey (E).



STEP 14

(A) x12
(C) x12

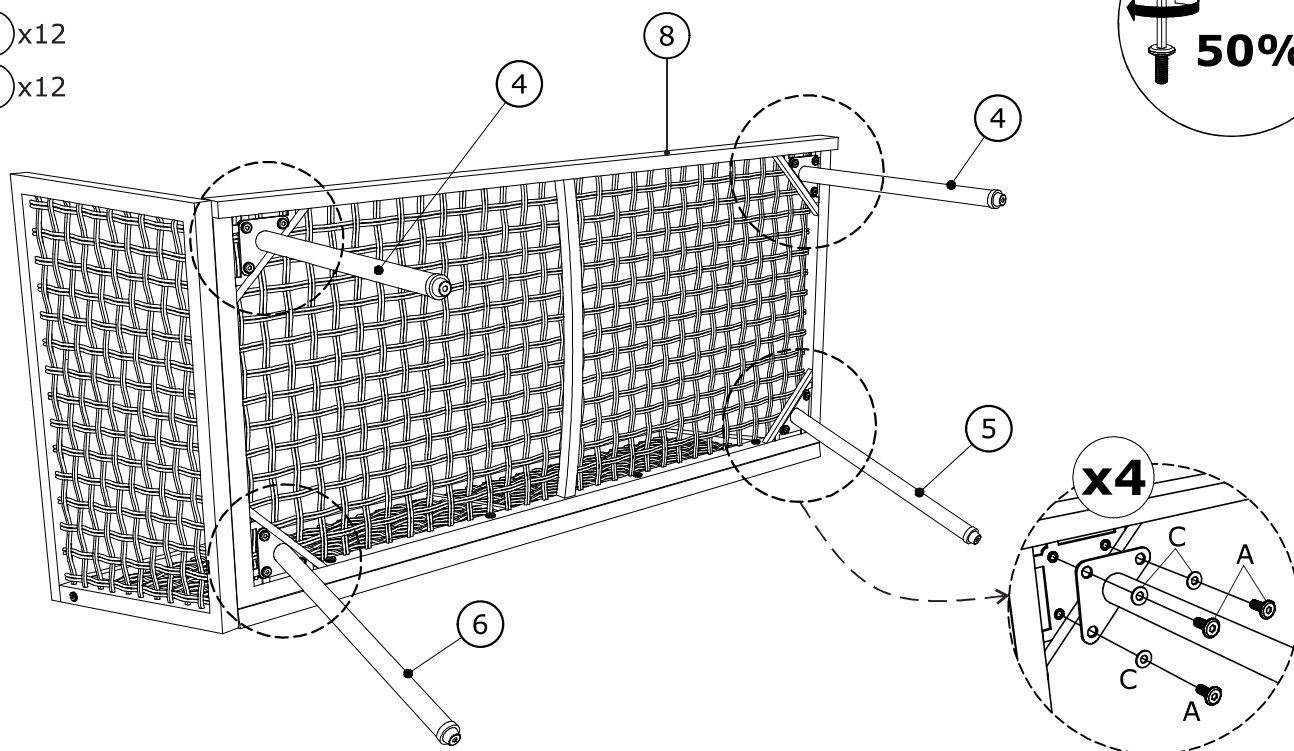

Connect the bench legs (4) & (5) & (6) & corner seat (8) with Allenkey (E).

STEP 15

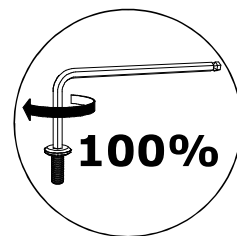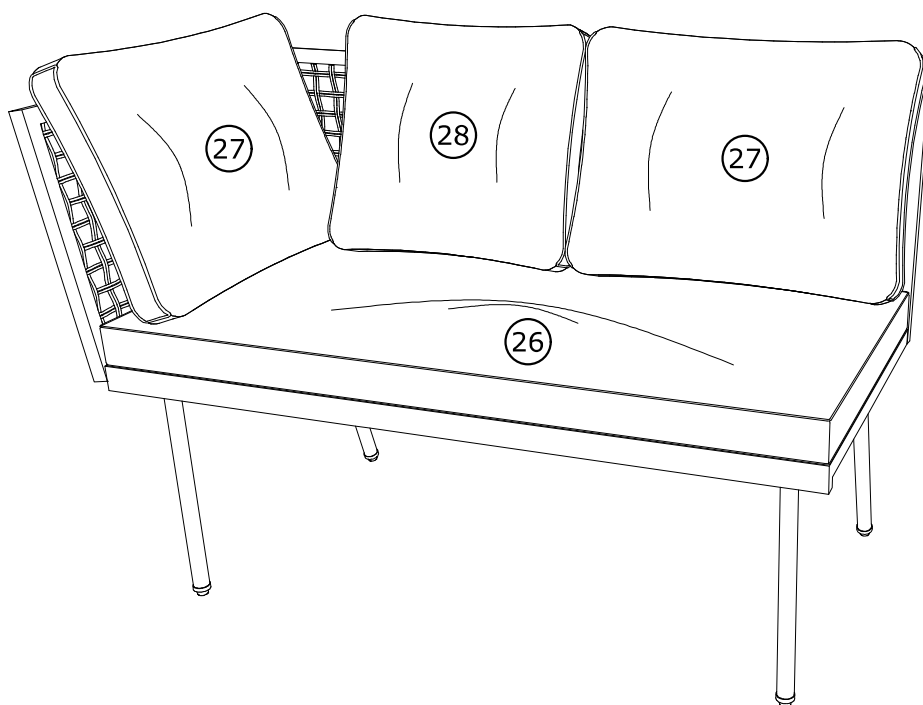

Done

Tighten all bolts 100% with Allenkey (E) then put the seat cushion (26) and 2 big pillow (27) and 1 small pillow (28) onto the corner bench.

STEP 16

(D) x10




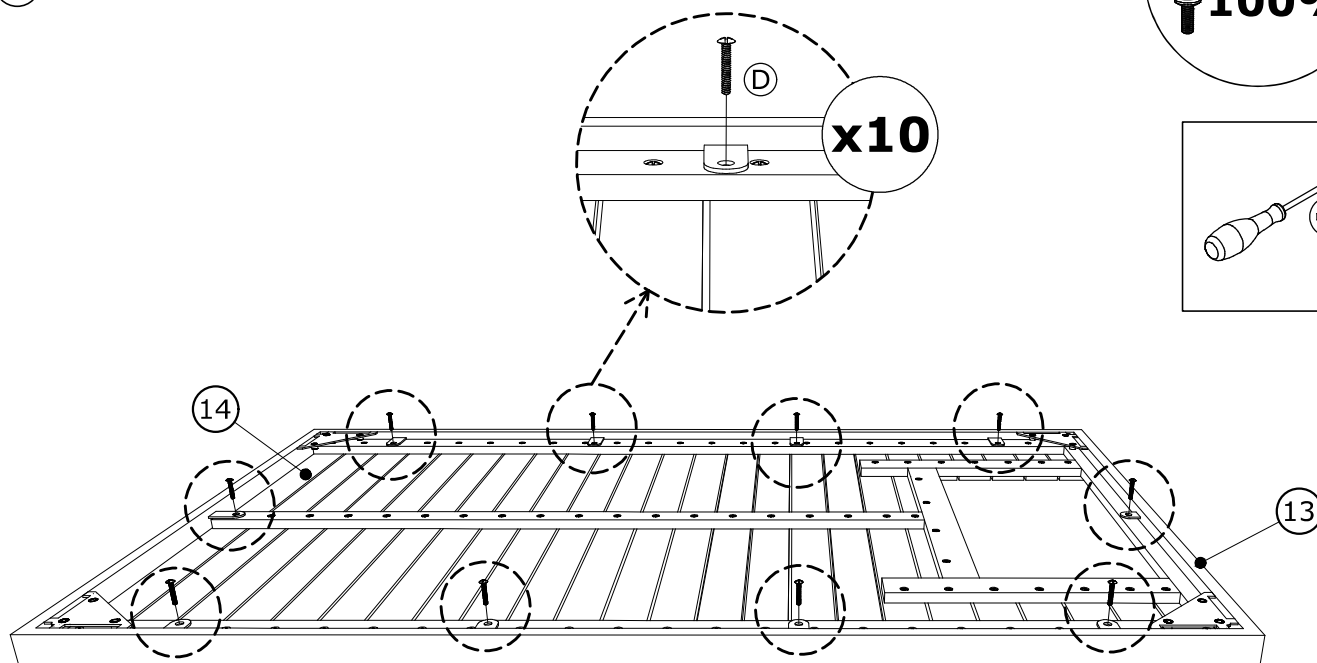


Table: Connect the table frame (13) & wood table top (14) with Screwdriver.

STEP 17

(A) x12

(C) x12

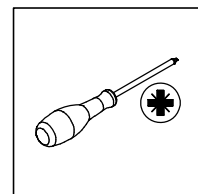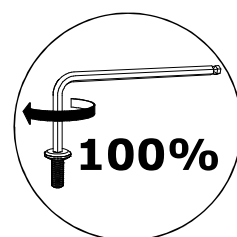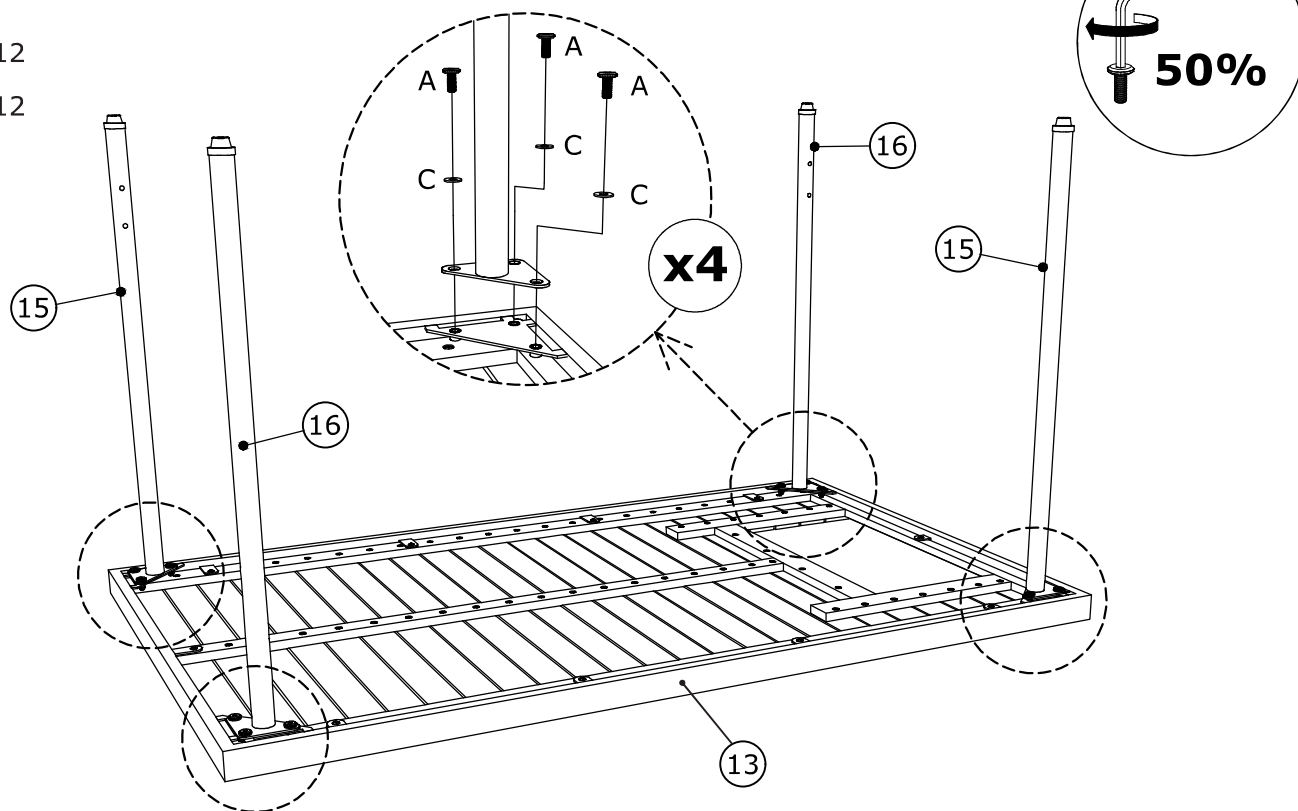


Connect the right table legs (15) & left table legs (16) & table frame (13) with Allenkey (E).

STEP 18


(A) x8

(C) x8

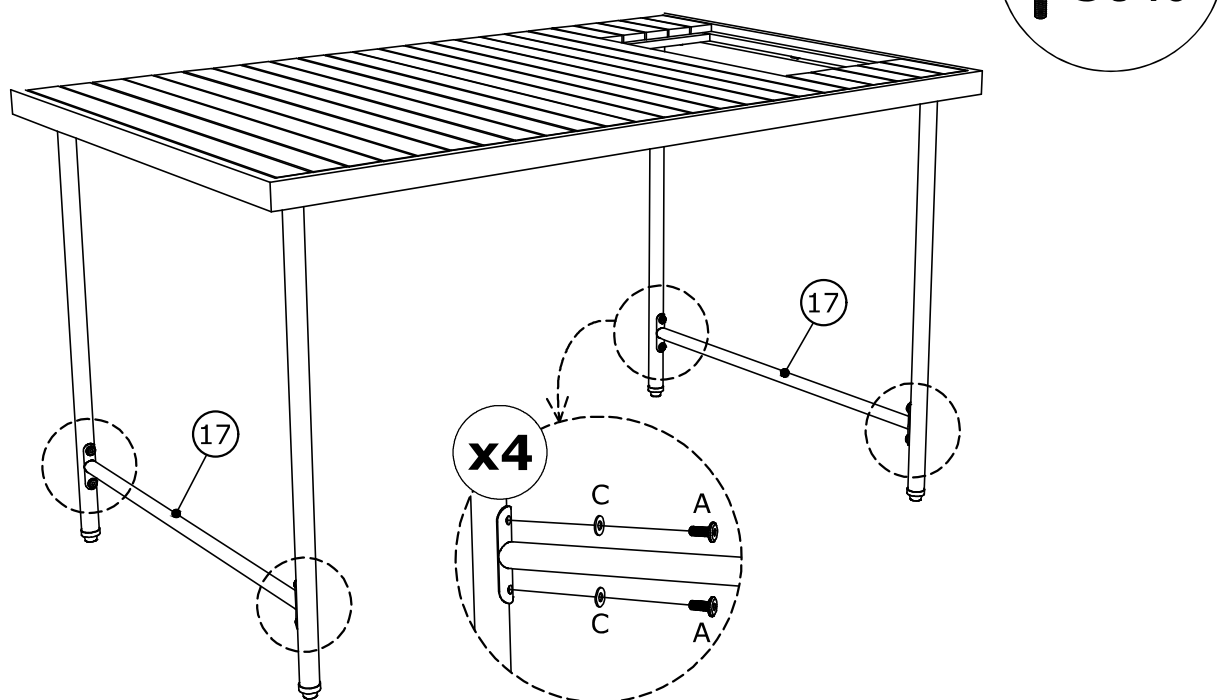

Connect the table stretcher (17) & right table leg (15), left table leg (16) with Allenkey (E).

STEP 19

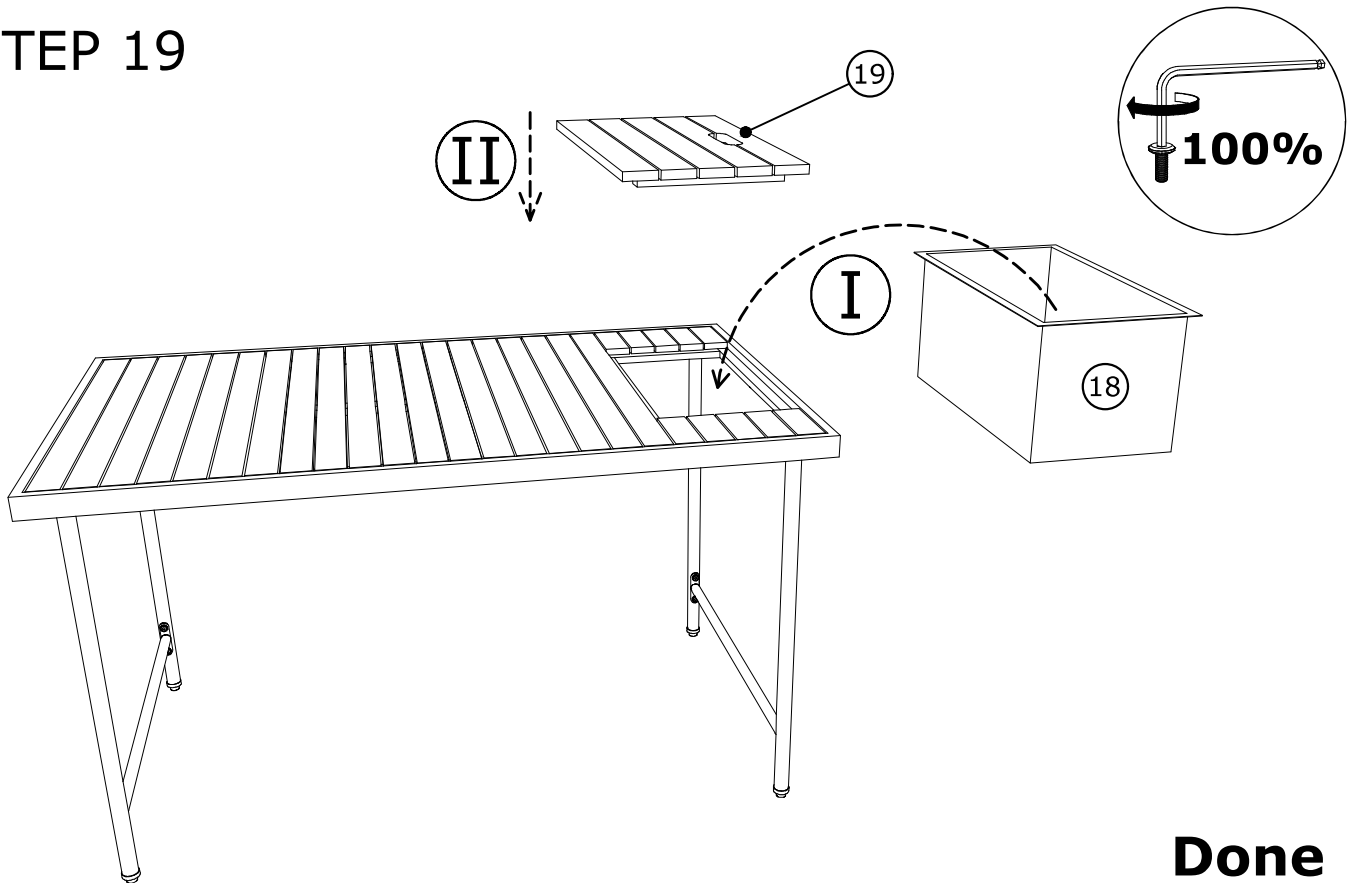


Done

Tighten all bolts 100% with Allenkey (E) then put the built-in ice bucket (18) and lid ice bucket (19) into the wood table top in order (I) and (II) as shown in the picture.

STEP 20

(A) x12

(C) x12

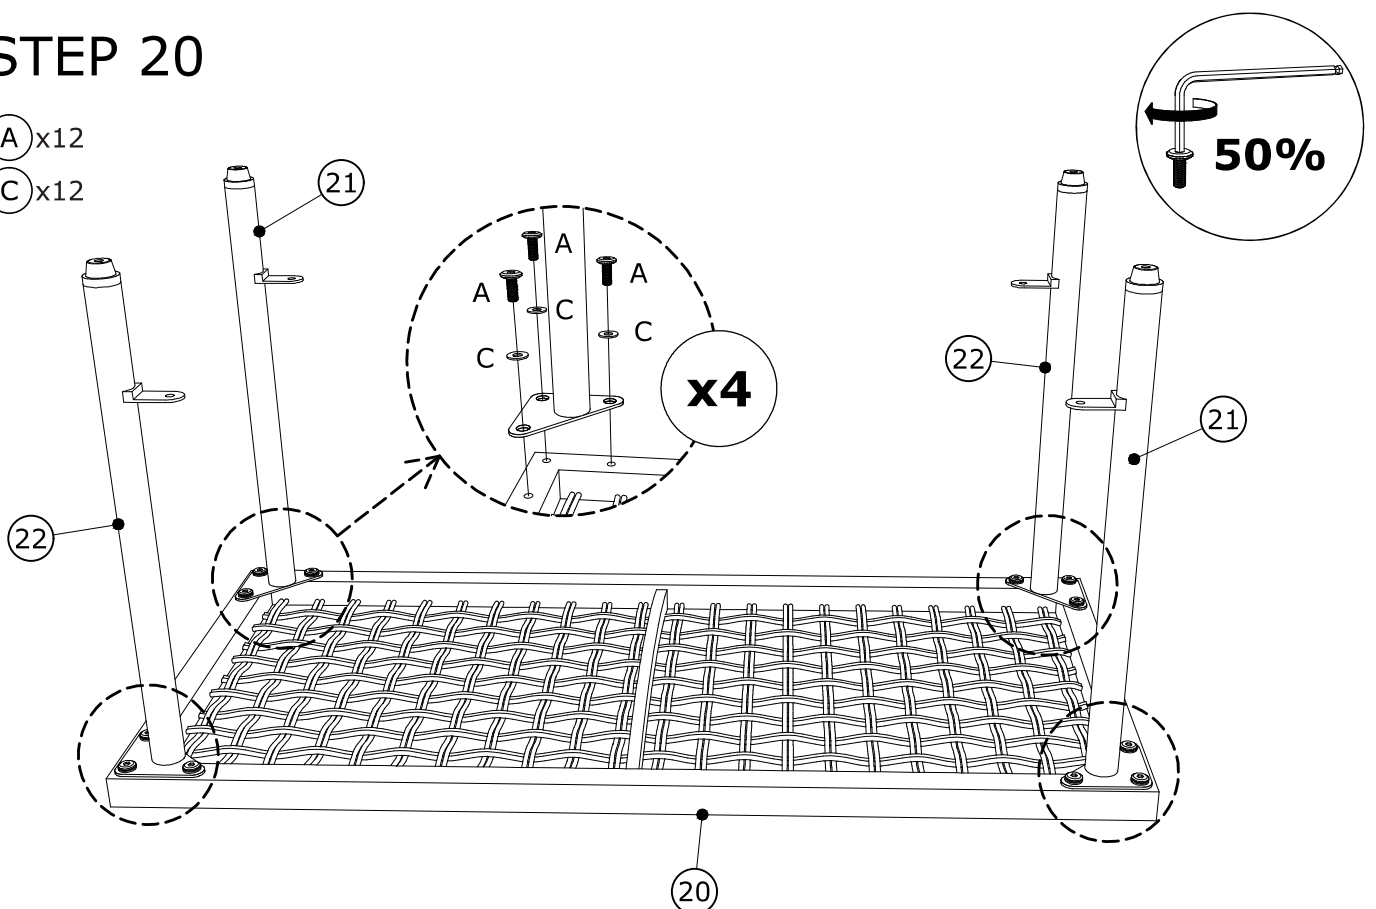


Ottoman: Connect the right legs (21) & left legs (22) & ottoman seat (20) with Allenkey (E).

STEP 21


(A) x4

(C) x4

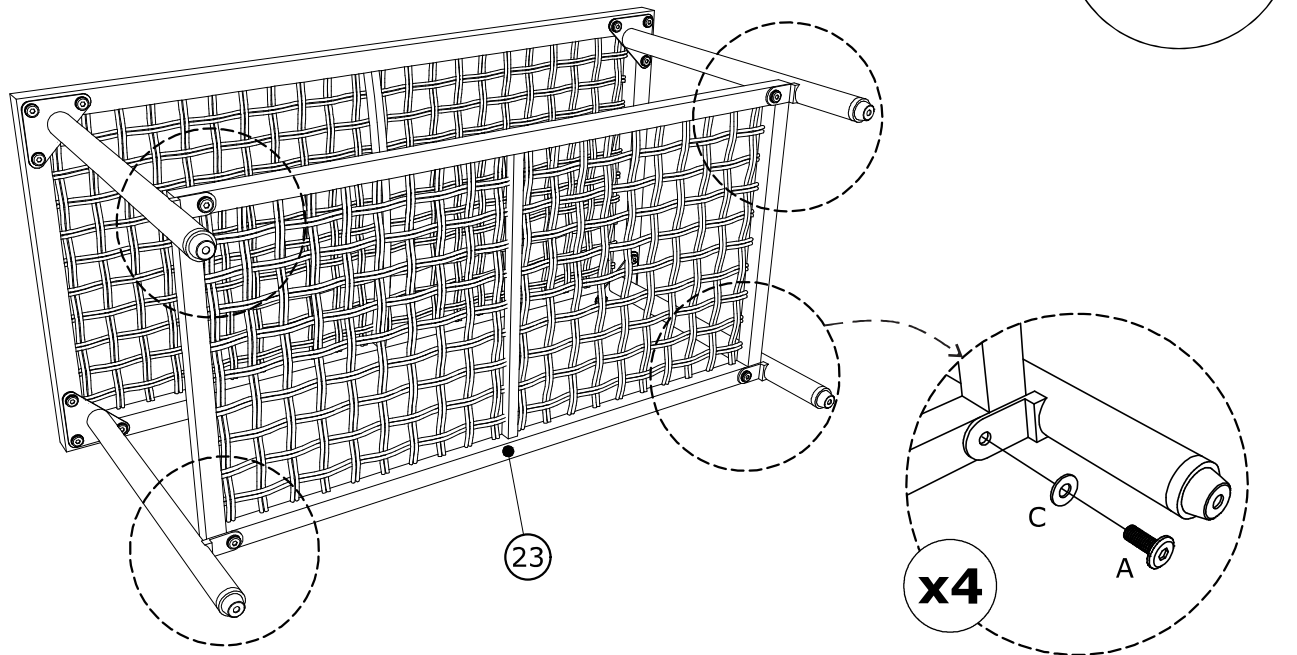

Connect the ottoman shelf (23) & right legs (21) & left legs (22) with Allenkey (E).

STEP 22

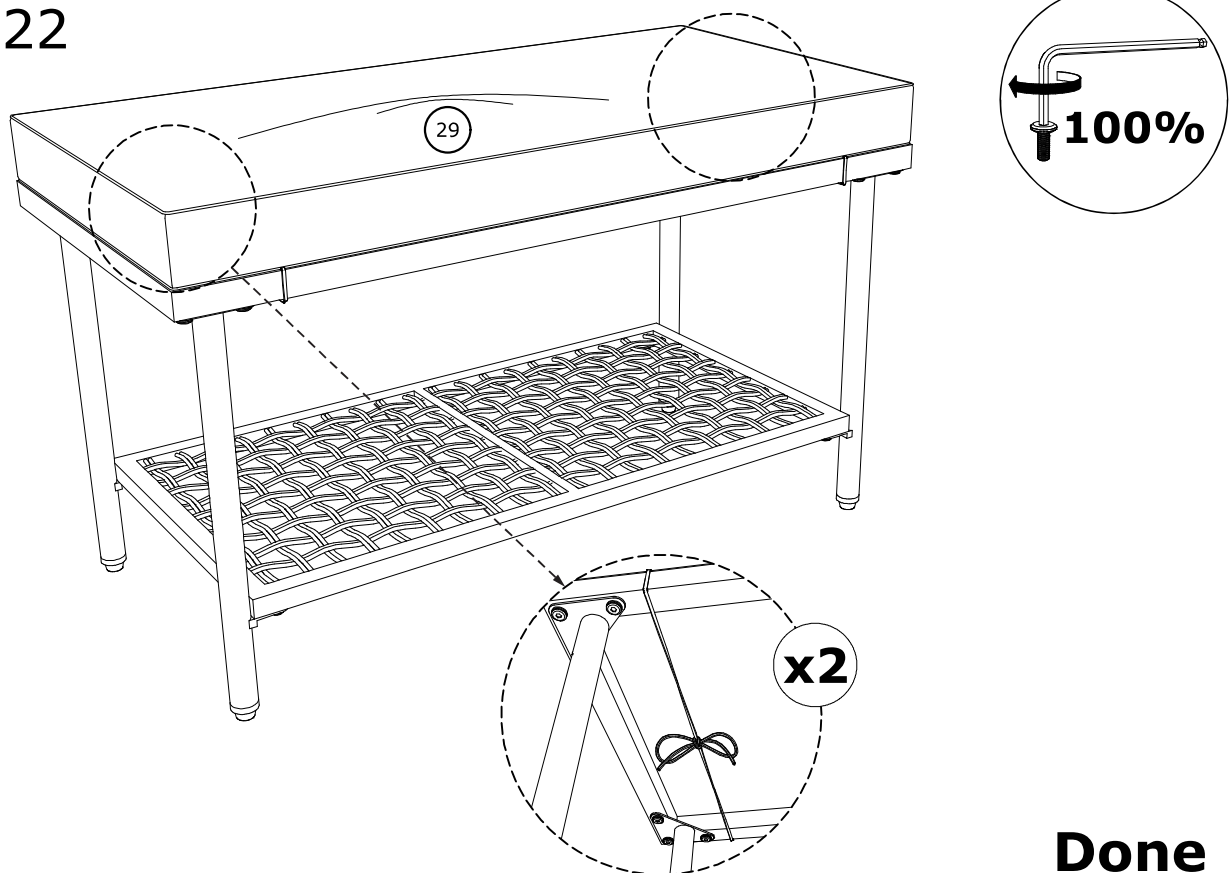


Tighten all bolts 100% with allenkey (E) then put the ottoman cushion (29) onto the ottoman seat and tie the string to secure it as shown in the picture.

STEP 23

(A) x12

(C) x12

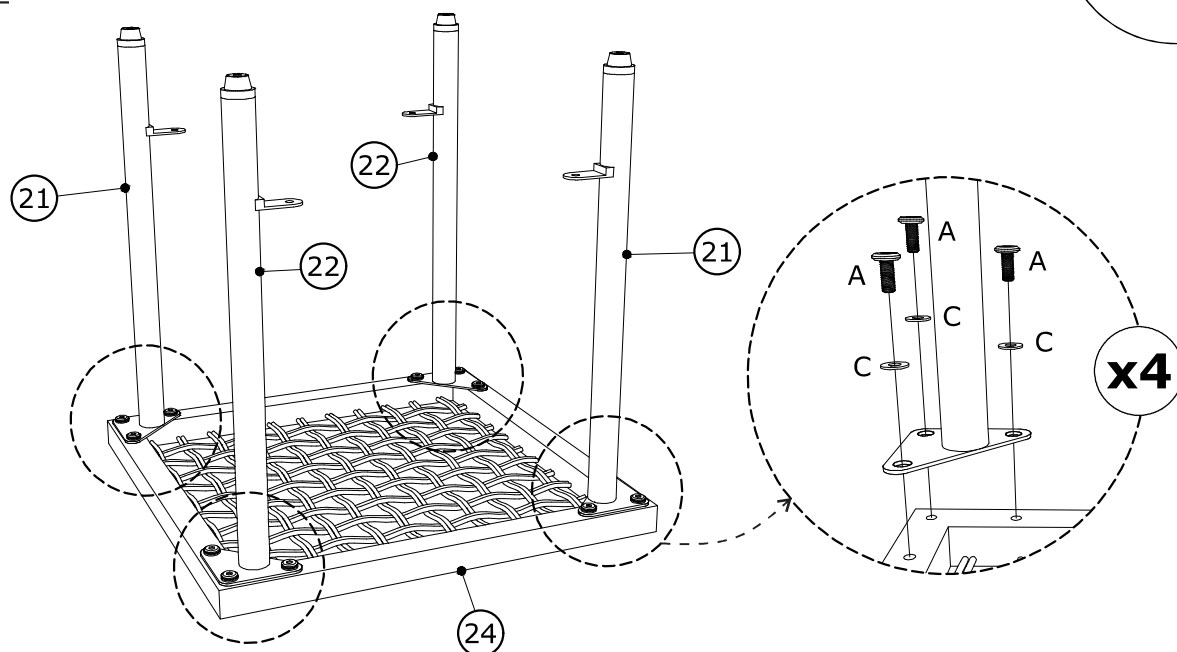


Stool: Connect the right legs (21) & left legs (22) & stool seat (24) with Allenkey (E).

STEP 24




(A) x4

(C) x4

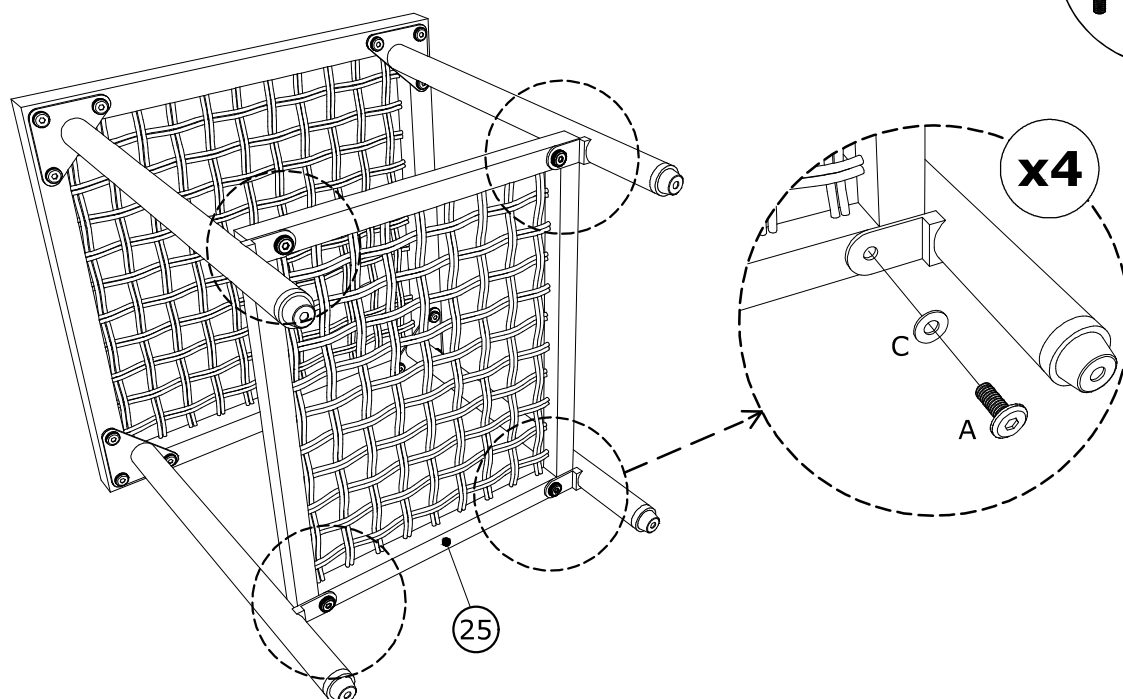

Connect the stool shelf (25) & right legs (21) & left legs (22) with Allenkey (E).


STEP 25

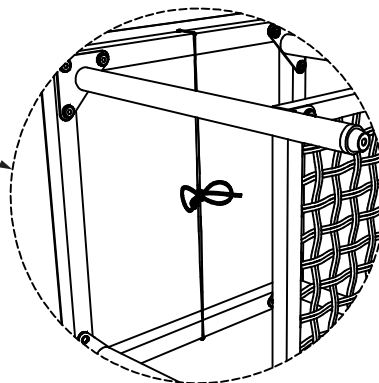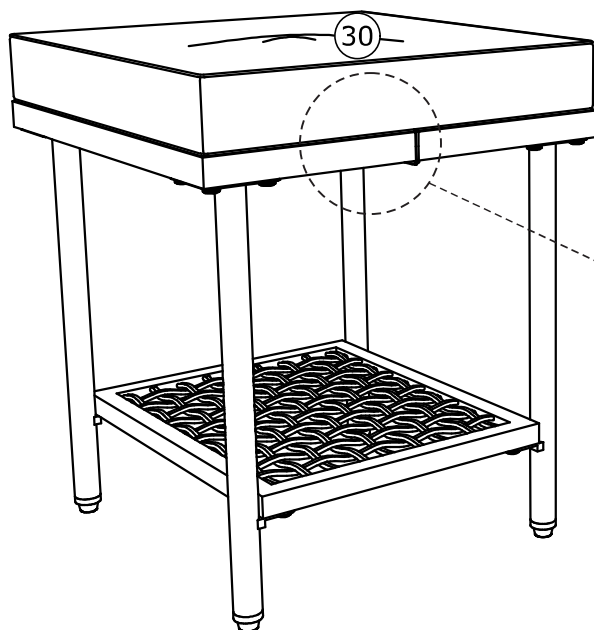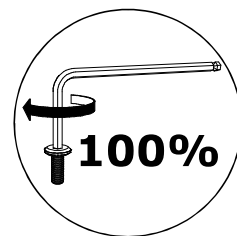

Done

Tighten all bolts 100% with Allenkey (E) then put the stool cushion (30) onto the stool seat (24) and tie the string to secure it as shown in the picture.

STEP 26

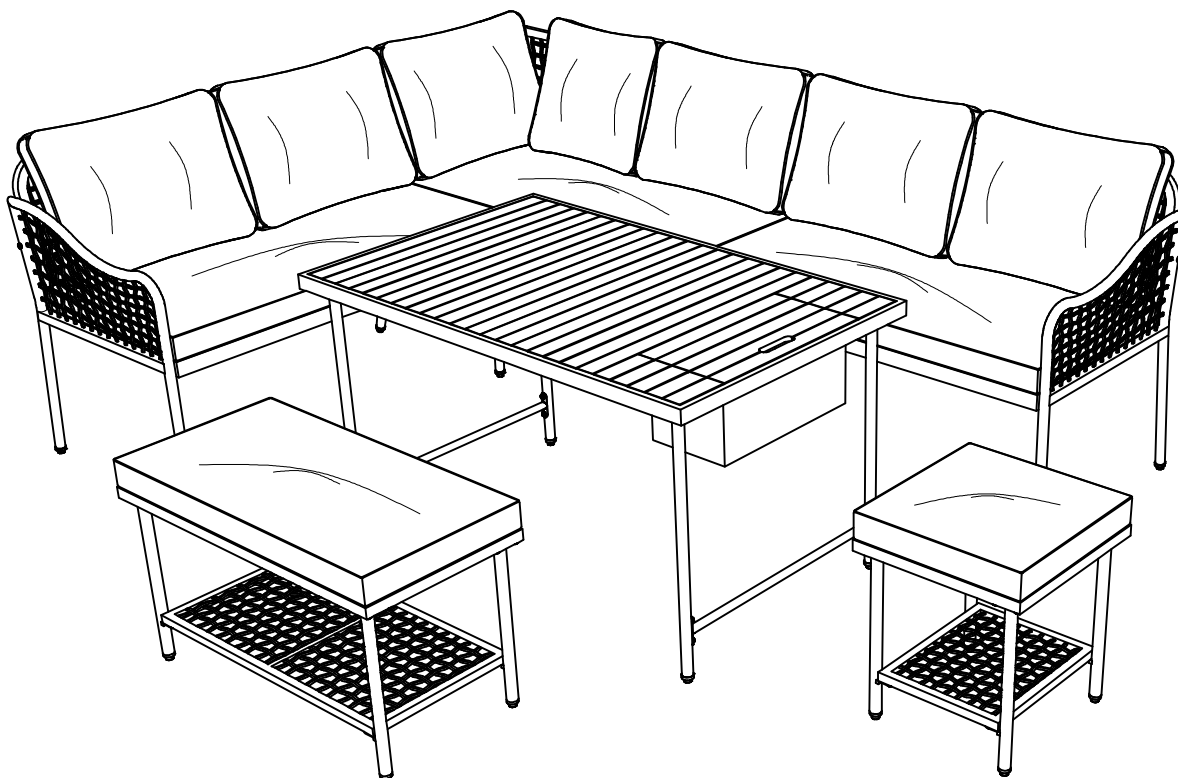

Finished