


Tribesigns
LITTLE TREE
Assembly Instructions

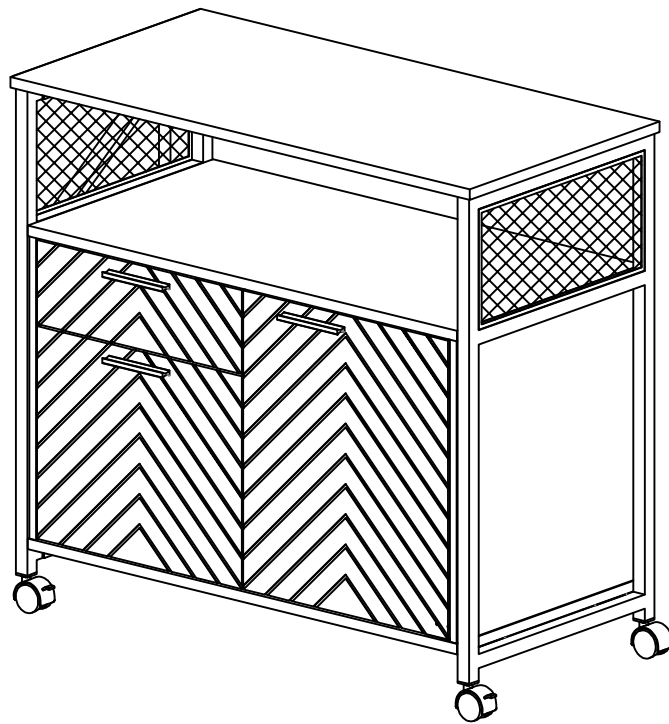

Model No. HOGA-F1859-B

File Cabinet

Call us!

We're here to help!

If you have any issues with this product, please contact our customer service team **before returning** it.



We want you to be completely satisfied with your purchase! If anything is missing, damaged, incorrect, or not what you expected, don't worry. Please keep the outer packaging and take photos of both the packaging and products, and then reach out to us at **support@tribesigns.com** or call us at **1-424-220-6888**. We'll take care of everything and send you a free replacement, so you can enjoy your purchase as soon as possible without any hassle.

Assembly Instructions:

1. Carefully read these instructions and keep them for future reference.
2. Refer to the parts list for guidance and ensure that you have all the pieces before starting the assembly process, if anything is missing, damaged, incorrect, contact us **FIRSTLY BEFORE** assembling.
3. When assembling, place all parts on a soft, clean, and flat surface, such as a carpet, to prevent any scratches.
4. To avoid misalignment of the holes, Please don't full tighten the screws until you ensure all parts in place.

Follow Tribesign:



Facebook



Twitter




Pinterest





YouTube










Instagram

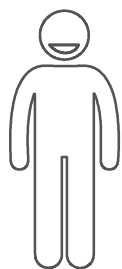


X2

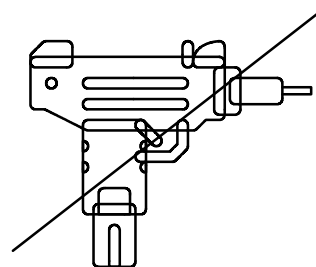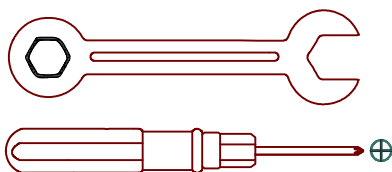

When using the electric screwdriver ,
Reduce the power and torque to avoid damaging the furniture

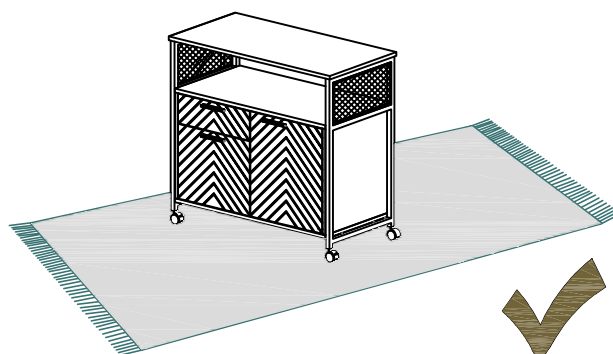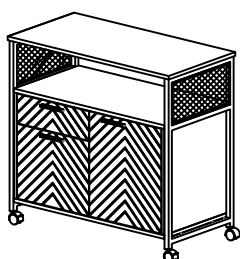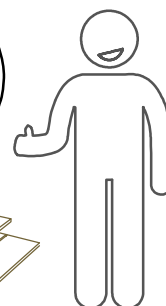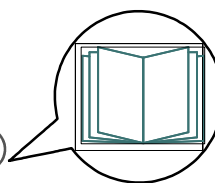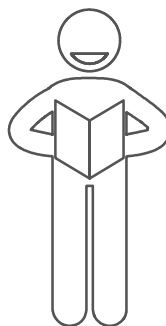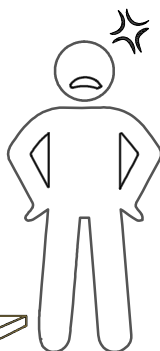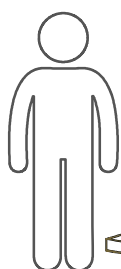

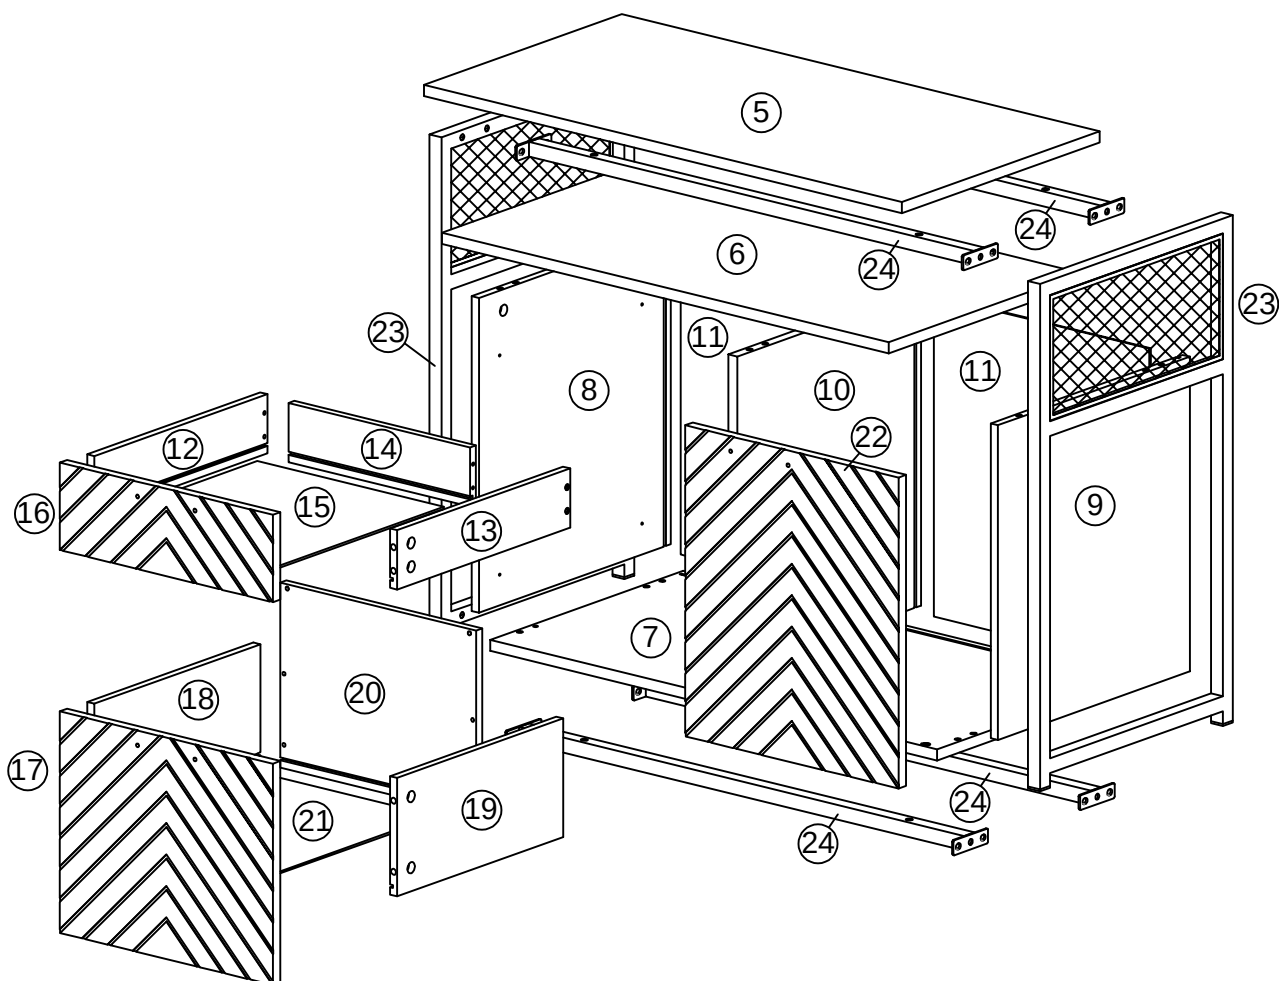

⚠ Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. contact us for free replacement if having damaged or missing parts.

Parts & Hardware List




5 1pc



6 1pc



7 1pc



8 1pc



9 1pc




10 1pc



11 2pcs




12 1pc




13 1pc




14 1pc




15 1pc




16 1pc




17 1pc

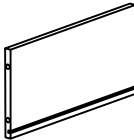


18 1pc

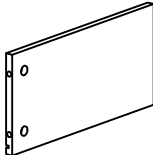

19 1pc

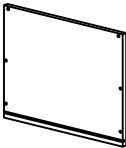

20 1pc



21 1pc



22 1pc



23 2pcs



24 4pcs

Hardware List



A

14pcs+1pc




B

2pcs+1pc



C

12pcs+1pc



D

12pcs+1pc



E

8pcs+1pc



F

16pcs+1pc



G

1pc




H

8pcs+1pc



I

22pcs+1pc




J

3pcs



K

6pcs+1pc




L

1pc




M

6pcs+1pc



N

1pc

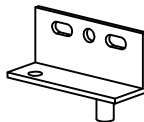


O

1pc



P

2pcs




Q

1pc




R

1pc

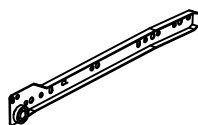


S

2pcs

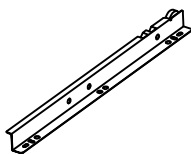


T

2pcs

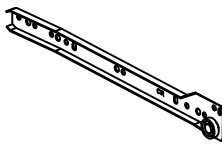


U

2pcs

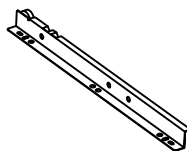

V

2pcs




W

2pcs




X

2pcs+1pc

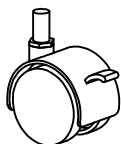

Y

2pcs

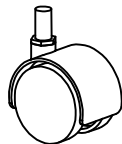

Z

2pcs




AA


1pc

Installation of Cams and Pins


Screw the pin into the hole. To set the cams correctly, ensure that the arrow on the cam is opening to the hole of the pin it is locking. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.


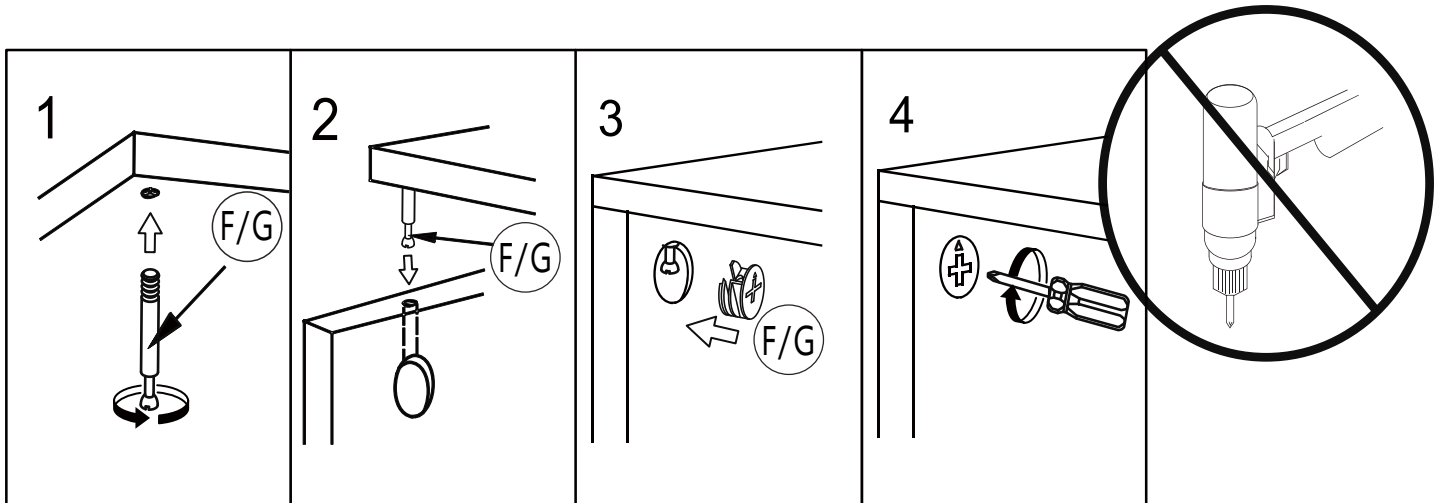


Read each step carefully before starting. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.

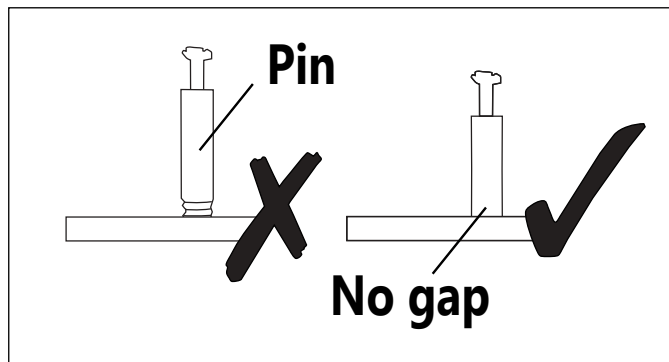


1

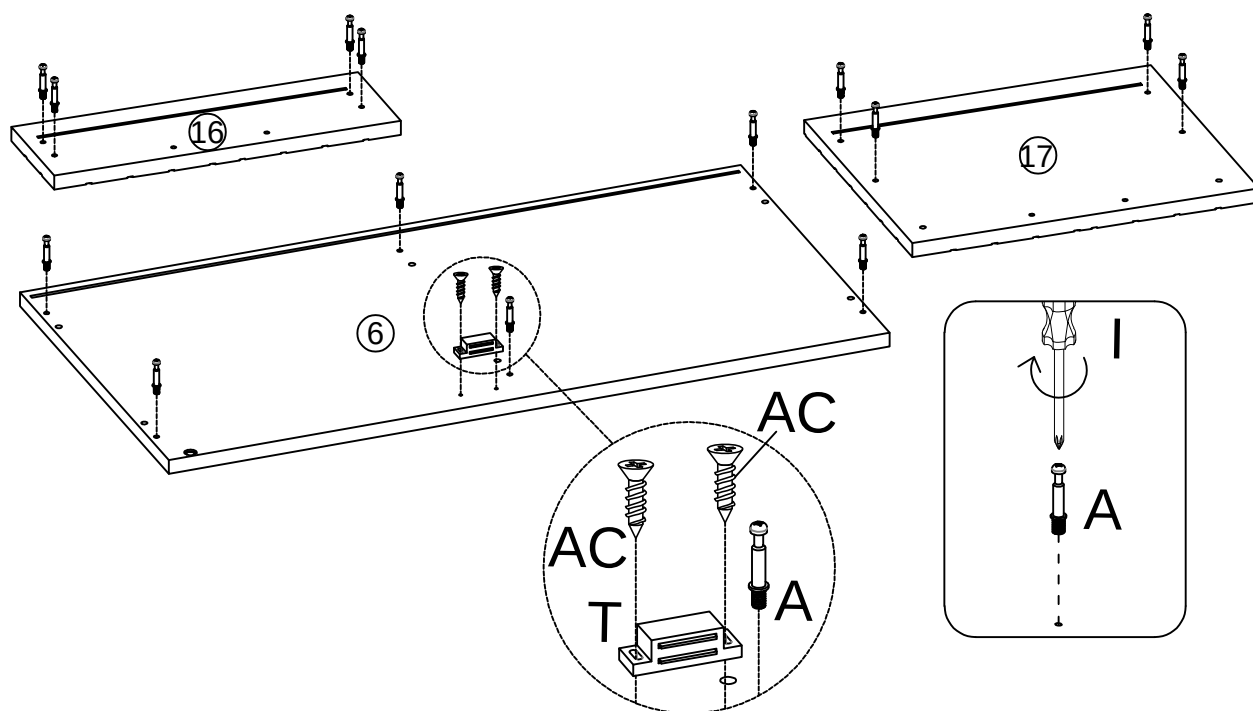


		
3.5x14mm		φ6x35mm
(AC) × 2pcs	(T) × 1pc	(A) × 14pcs

2

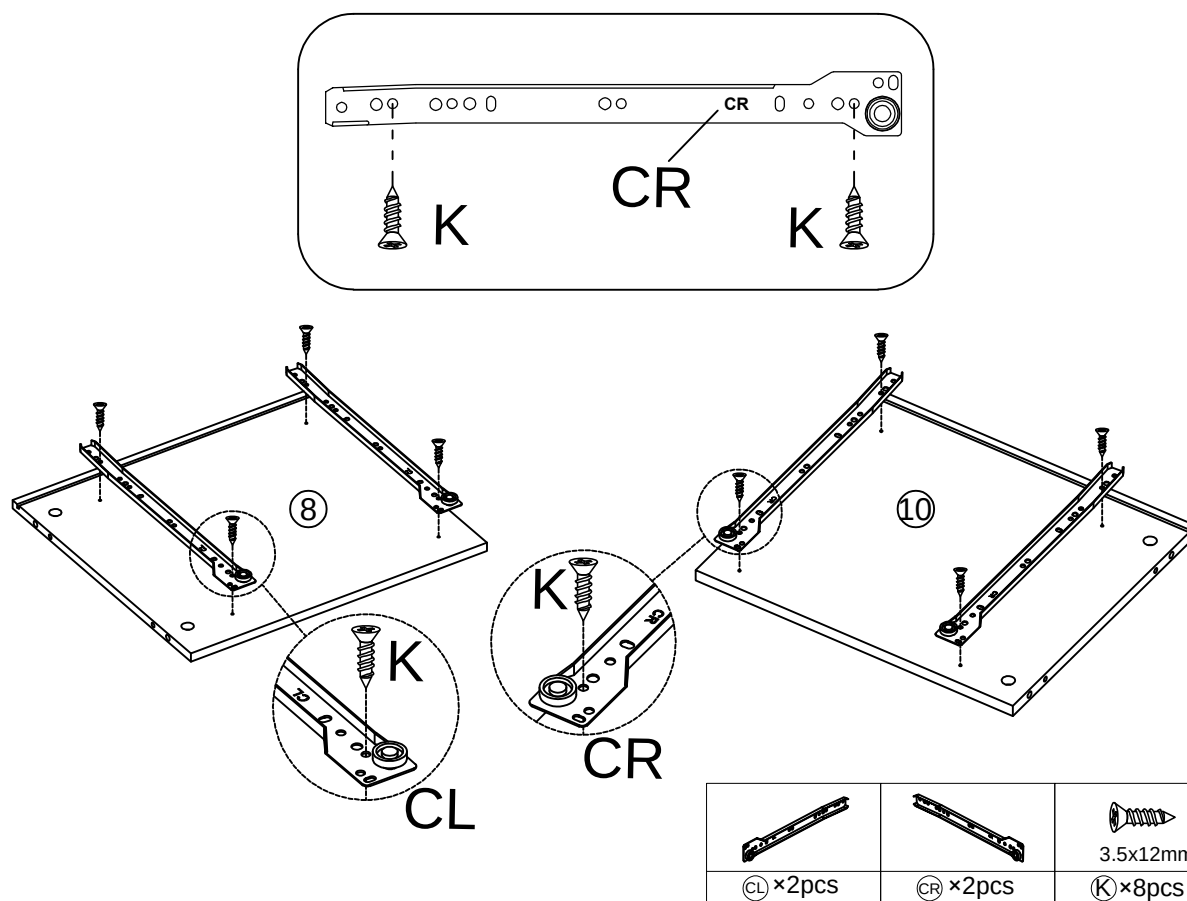


		
		3.5x12mm
(CL) × 2pcs	(CR) × 2pcs	(K) × 8pcs


3

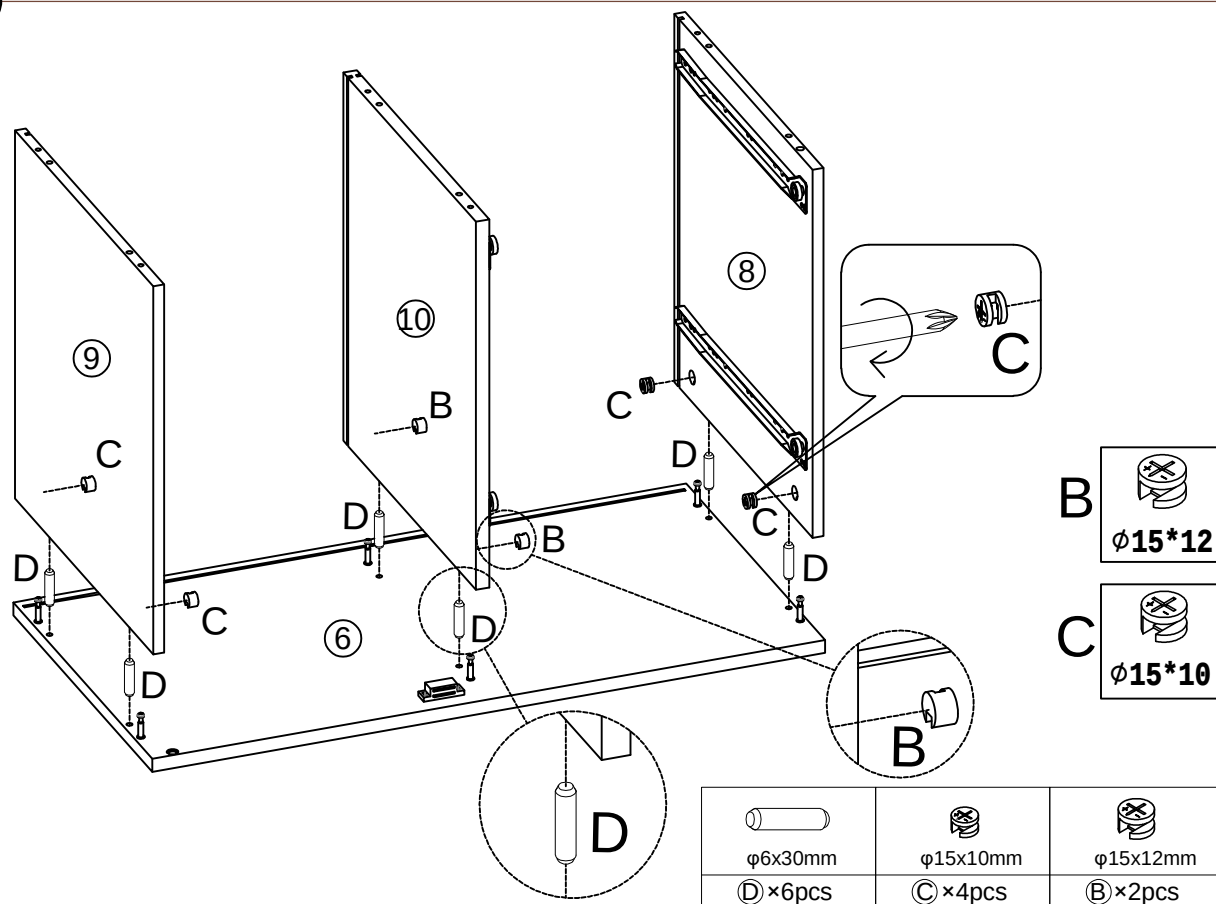

4


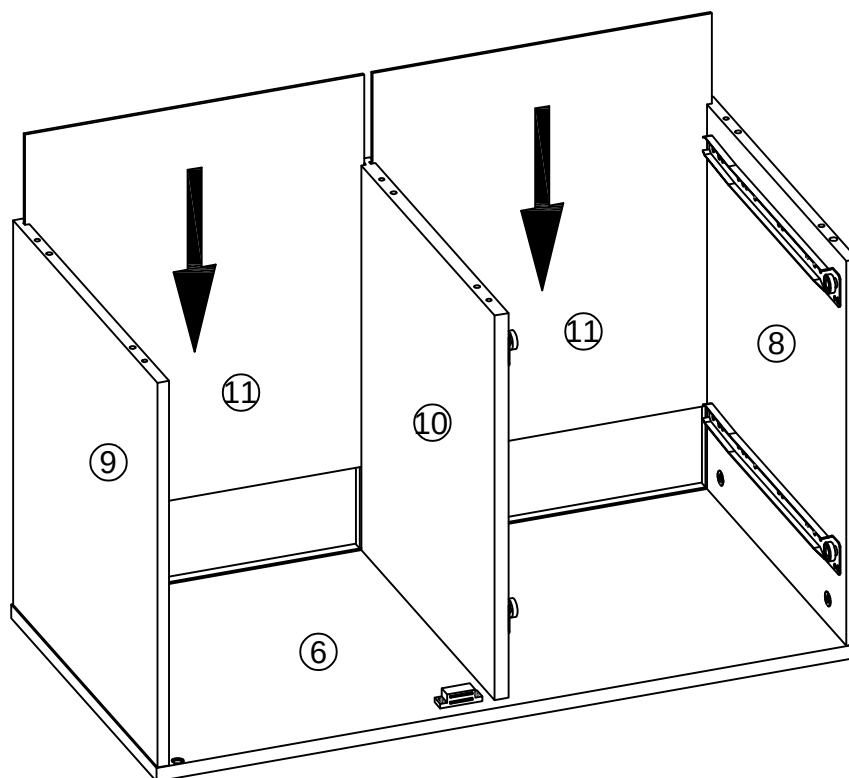


5

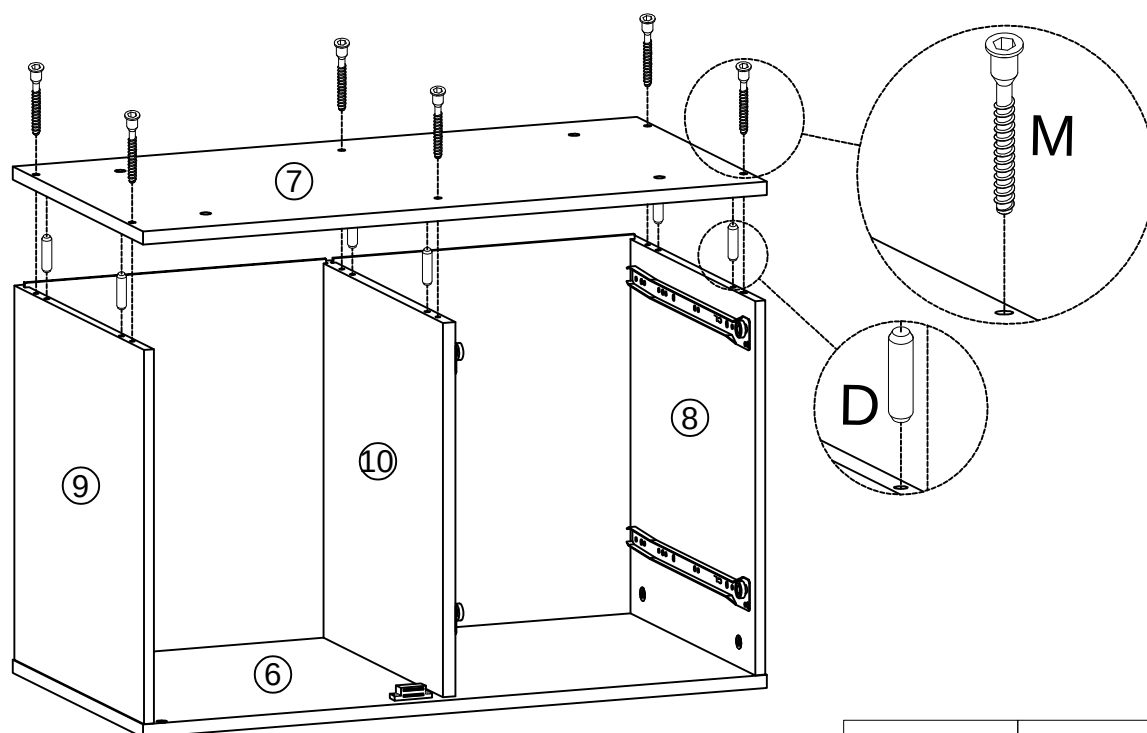


	
φ6x30mm	φ7x47mm
D ×6pcs	M ×6pcs

6

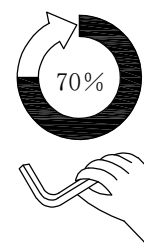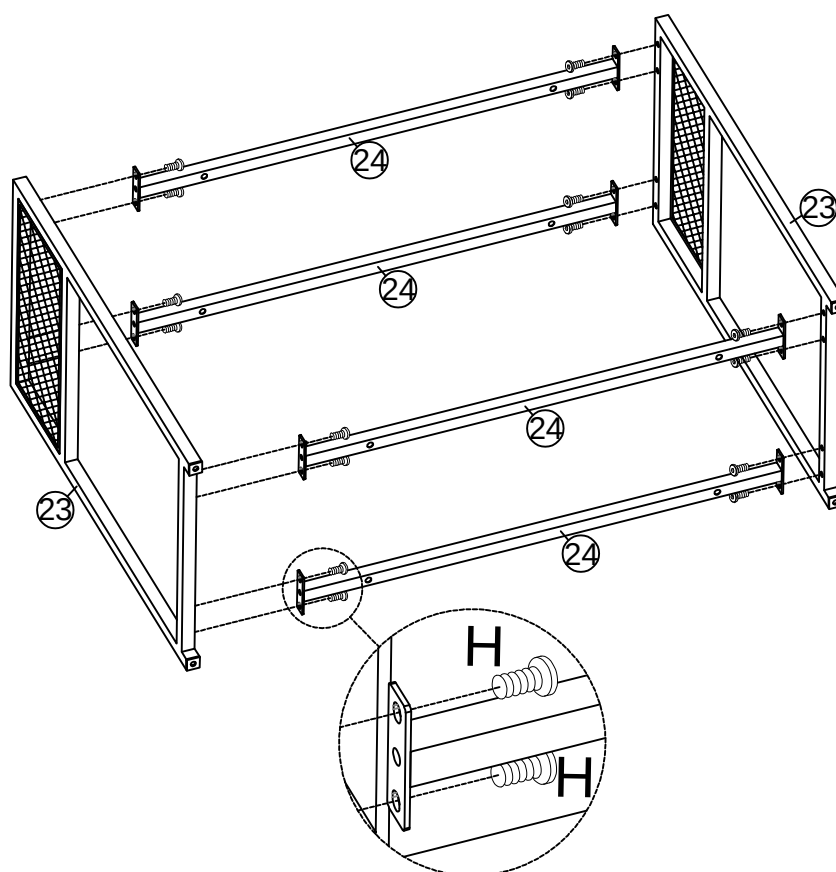



M6x12mm
H ×16pcs

7

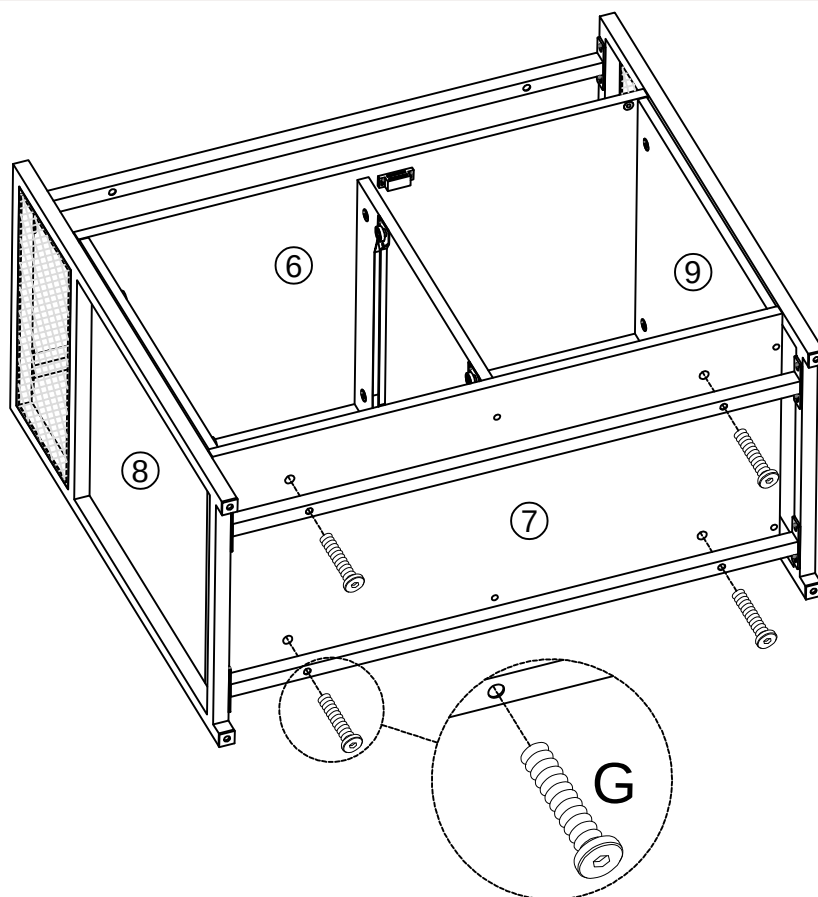



M6x28mm
G ×4pcs

8

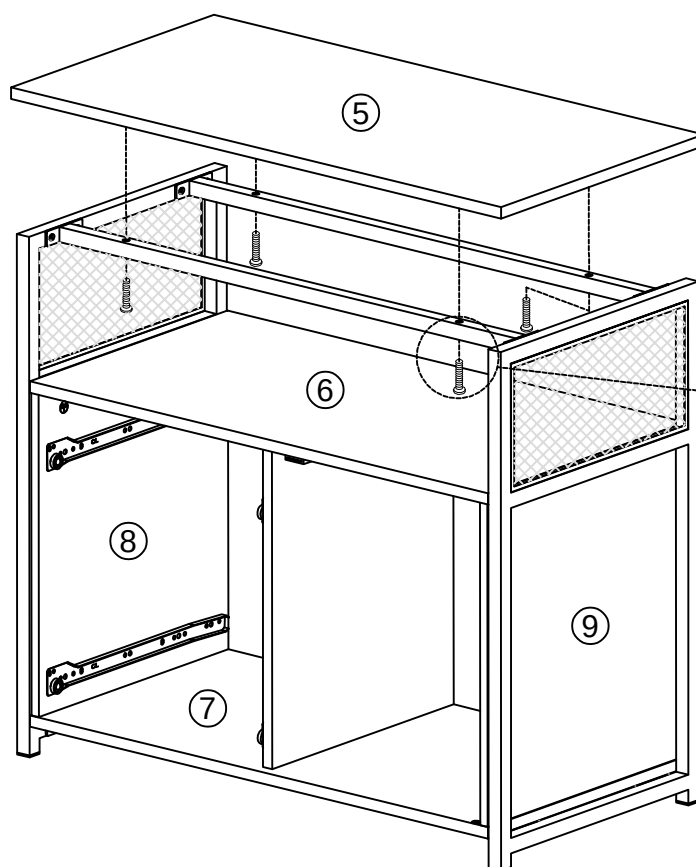



M6x28mm
G ×4pcs


9

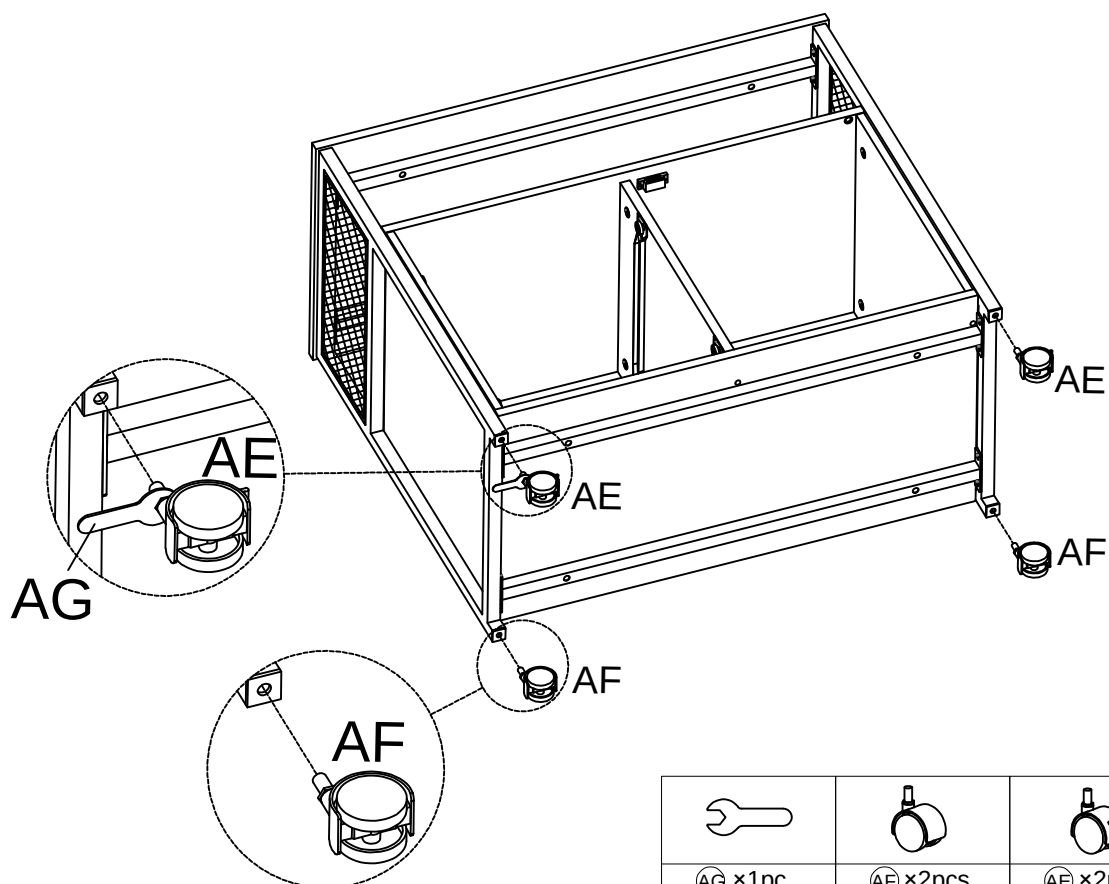

10

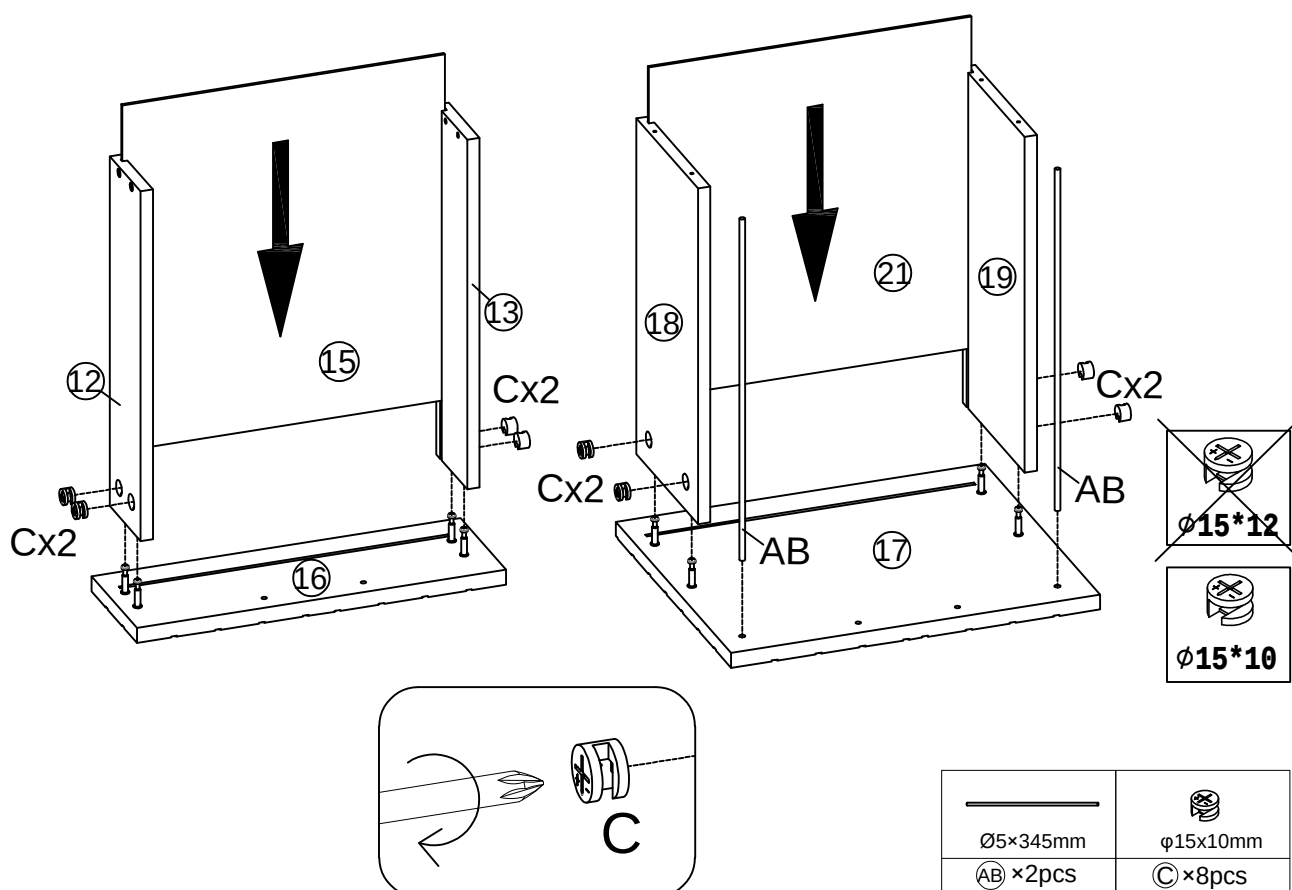


11

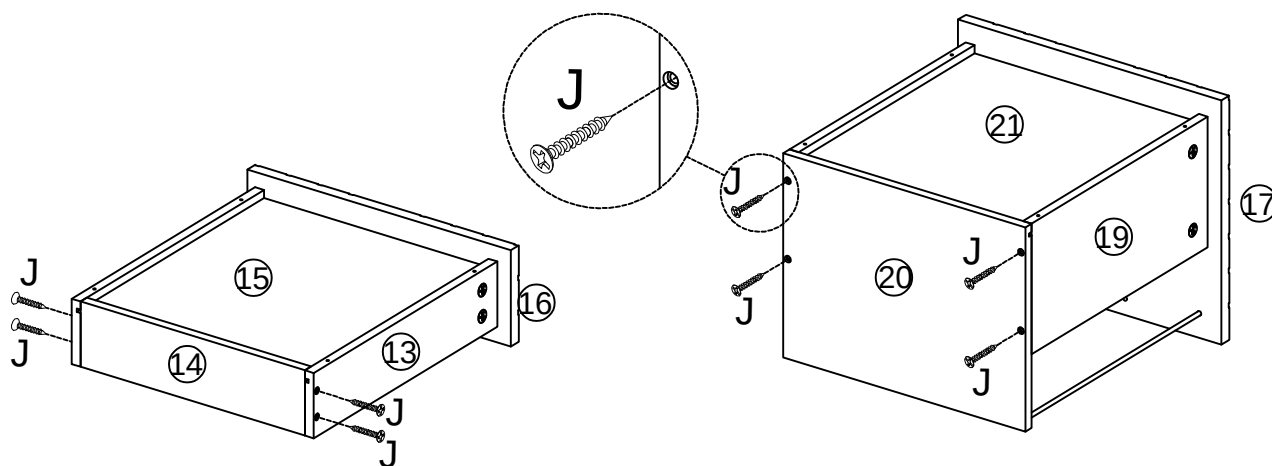

4x35mm

J × 8pcs

12

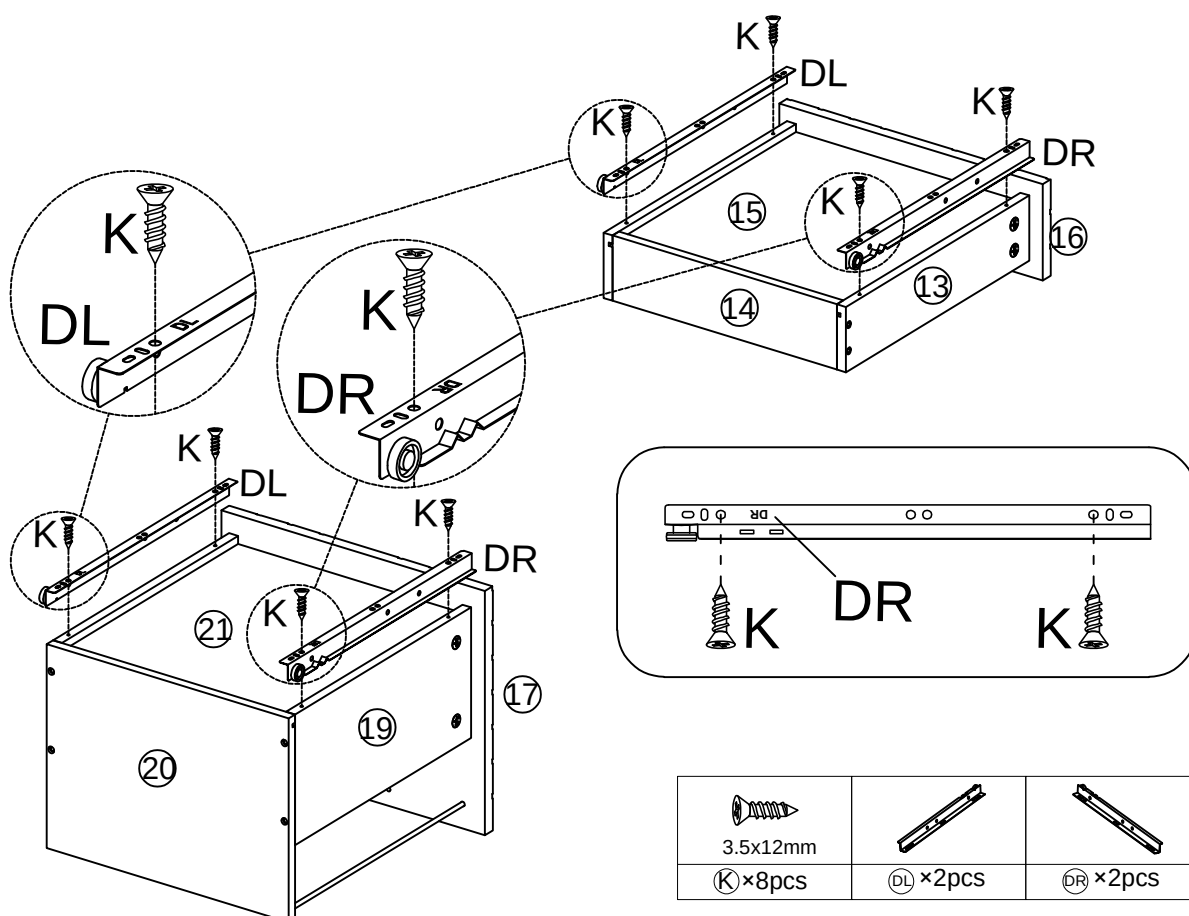


3.5x12mm

K × 8pcs


DL × 2pcs

DR × 2pcs


13

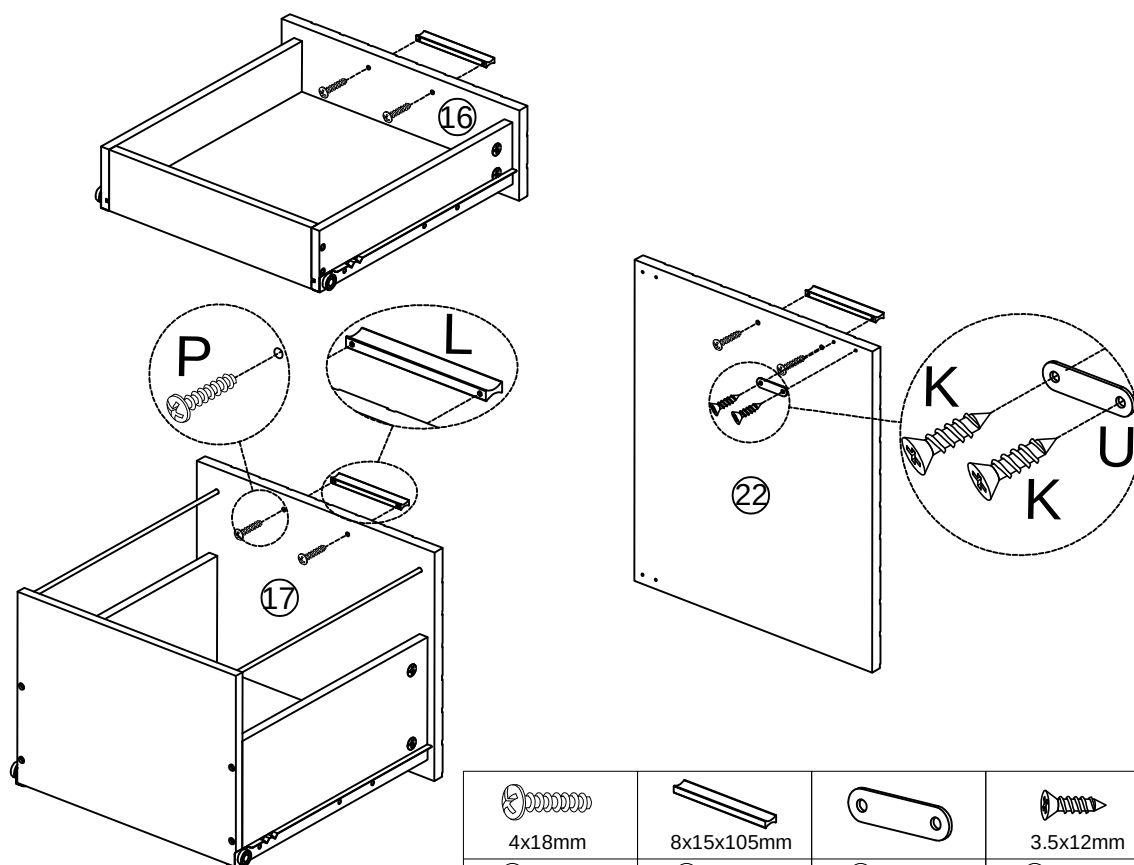


14

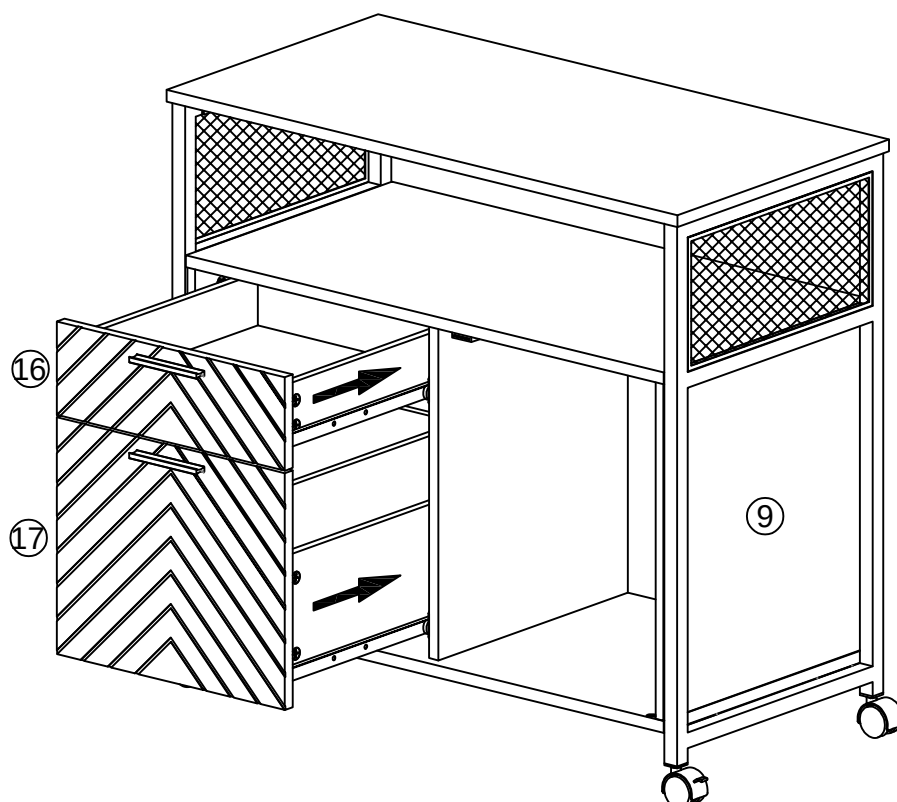


15

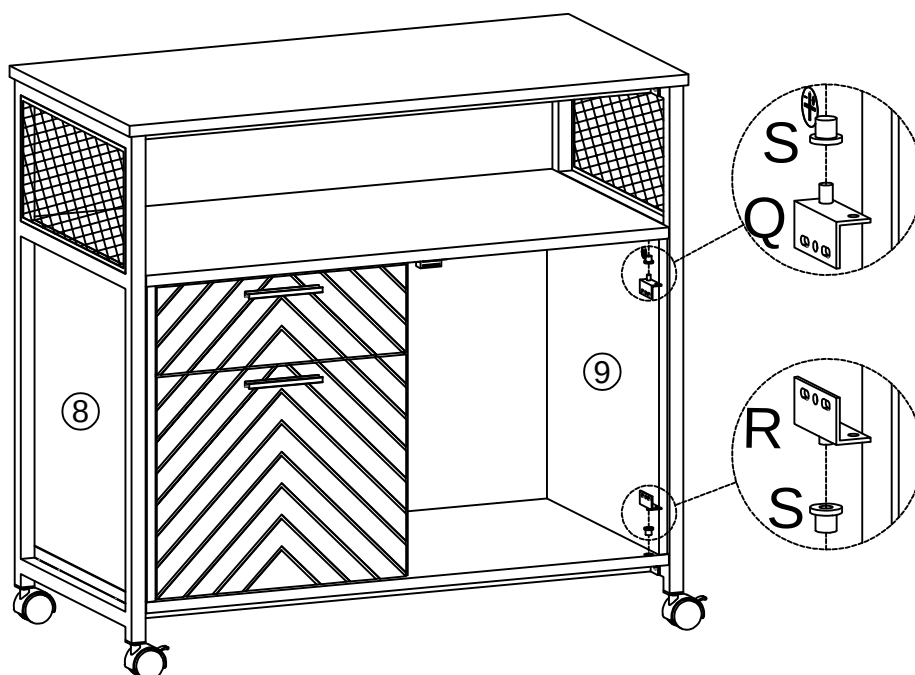

		
Q × 1pc	R × 1pc	S × 2pcs

16

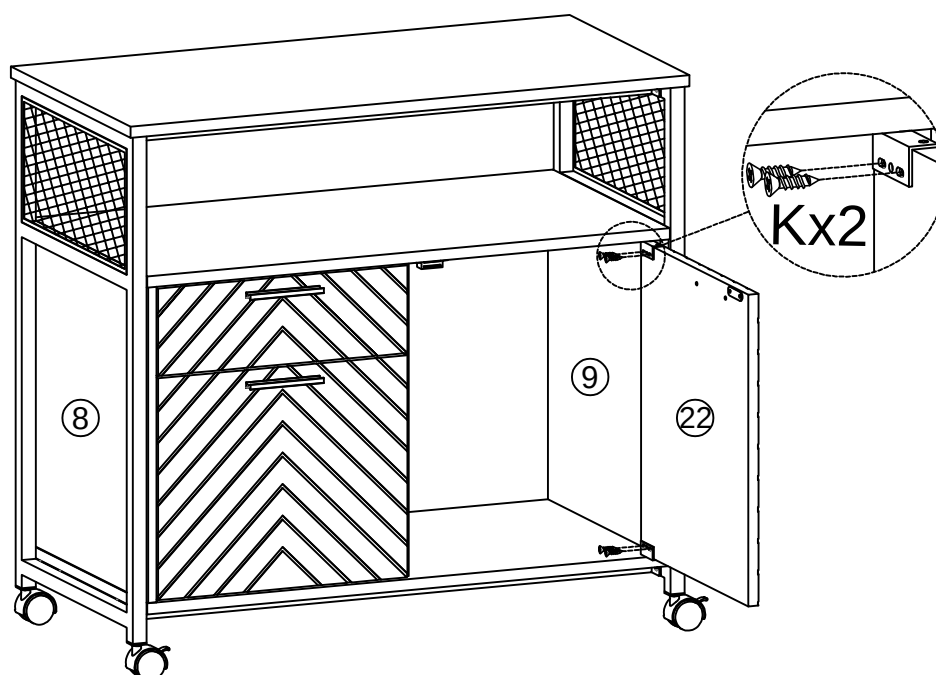


3.5x12mm
K × 4pcs

17

