

INSTALLATION AND MAINTENANCE contact us. Email: lowesteam@aminalife.com


If you have any questions, please feel free to

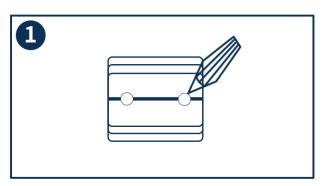


1.FIRST MARK THE POSITION OF THE HOLE IN THE WALL

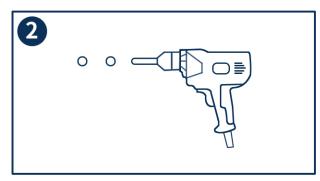


2.USE THE M6 BIT TO PUNCH HOLES IN THE **MARKED POSTION**

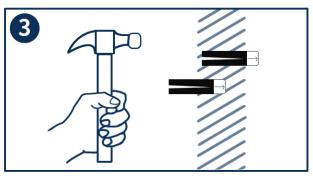


3.USE THE HAMMER TO PUSH THE PLASTC **EXPANSION PIPE INTO THE HOLE**

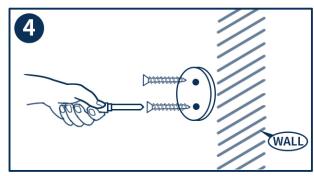

4.TIGHTEN THE STAINLESS STEEL SCREWS WITH A SCREWDRIVER AND FIX THE GASKET

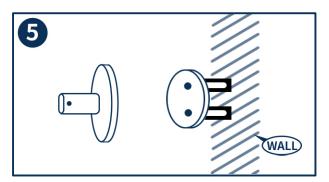

5.PLACE THE PRODUCT BASE IN THE **GASKET POSITION**

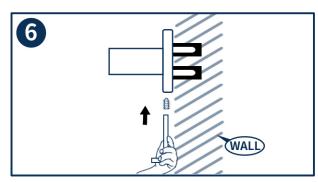

6.SCREW THE BASE POSITION WITH WRENCH OF THE DISTRIBUTION