



INSTALLATION INSTRUCTIONS

NO.1021

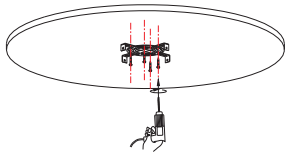


7. Secure the mounting bracket onto the ceiling with provided screws.

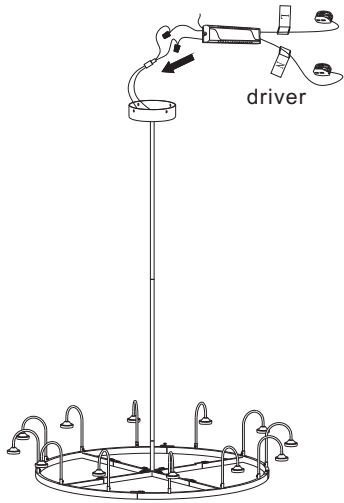


driver

8. Connect the plugs of the lamp power line with the plugs of the drivers.

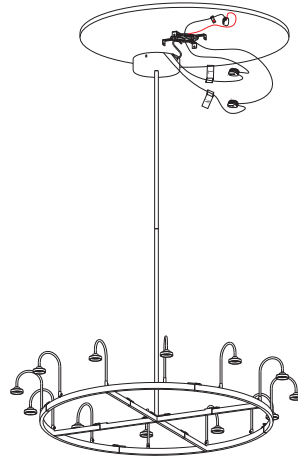


9. Use the hook to hang the lamp body. Turned off the power, connect the live and neutral wires from the power supply to the corresponding live and neutral wires of the lamp

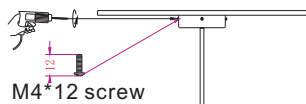


M4*12 screw

10. Align the side holes on the canopy with the holes on the mounting bracket, push it even with the ceiling and secure them with the M4*12 screws.

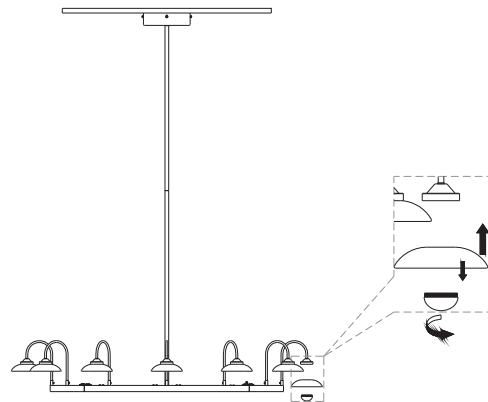

11. Turn off the power, then place the lamp shades onto the acrylic pieces. Align the external threads of the acrylic covers with the internal threads of the aluminum lamp holders and tighten them.

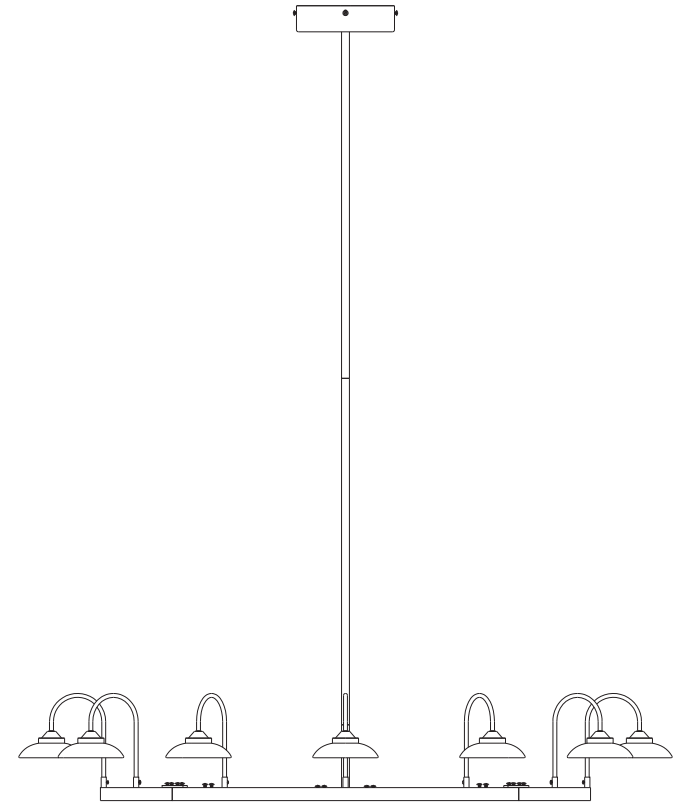

Please Scan the QR code to watch the installation video. If you have any questions, please feel free to contact us through the order page.




Please Scan the QR code to watch the installation video. If you have any questions, please feel free to contact us through the order page.




Warning!

1. Installation should be performed by a professional.
2. To prevent electric shock, please turn off the power before installing, repairing, or cleaning the light fixture.
3. This light fixture operates within a 110V to 265V range only.
4. Do not install the light fixture in damp conditions.
5. Keep the light fixture away from acidic and corrosive materials.


Package Includes

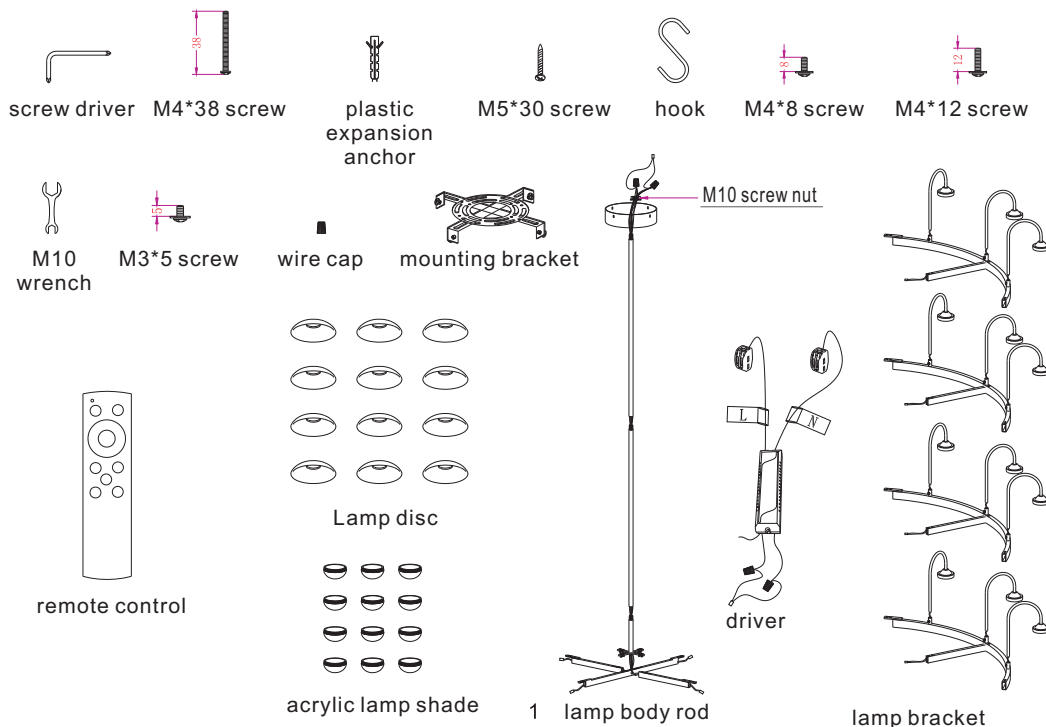


Installation Steps

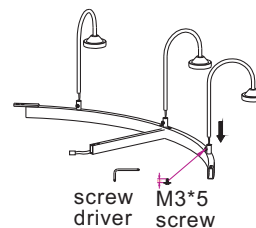


1. Insert the lamp arms into the connecting pipes as shown in the diagram, adjust the angle, and tighten with M3*5 screws.

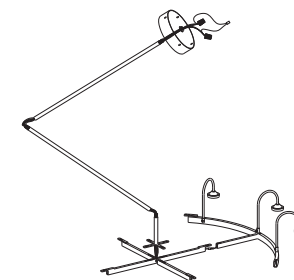


2. Connect the wiring terminals of the four lamp holder brackets to the lamp body bracket.

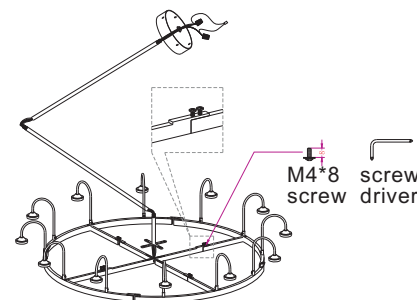


3. Secure the four lamp holder brackets to the lamp body bracket using M4*8 screws and a screwdriver.

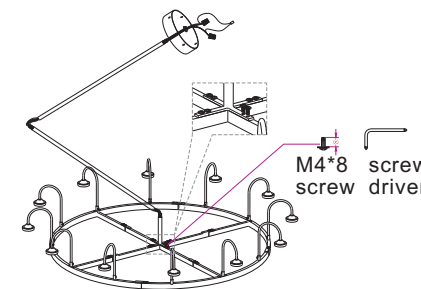

4. Attach the cross bracket of the lamp rod to the lamp body cross bracket using M4*8 screws.

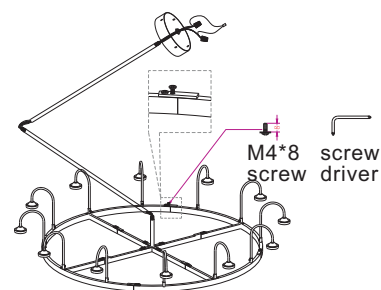

5. Adjust the outer lamp holder brackets and tighten with M4*8 screws and a screwdriver.

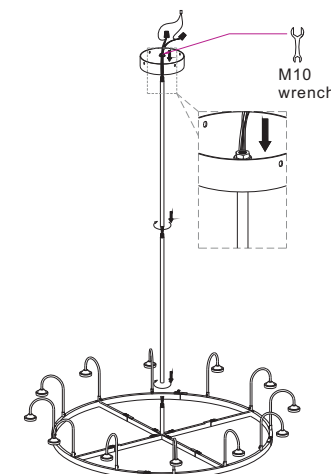

6. Twist the lamp rod counterclockwise and tighten the canopy with M10 nuts.