


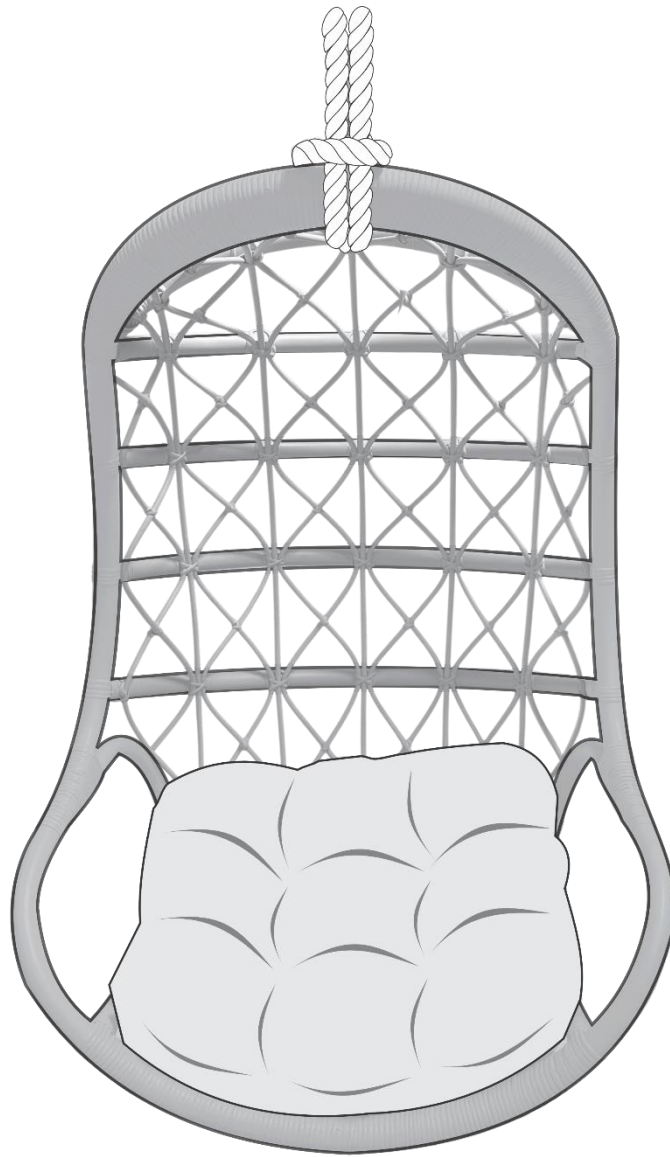

ASSEMBLY INSTRUCTIONS

Hanging Chair

EEI-7902 , 7903 / V0.07.13.26

modway



Questions? Contact us!

609.256.9000

cs@modway.com

Welcome.

Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 30 minutes**. Consider having a friend help you!

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.



Care instructions are listed in the last step of this manual.

WAIT!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!



FURNITURE COMPONENTS:

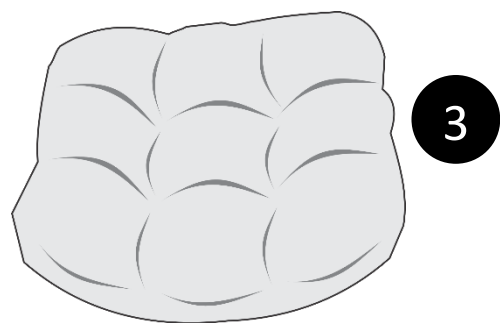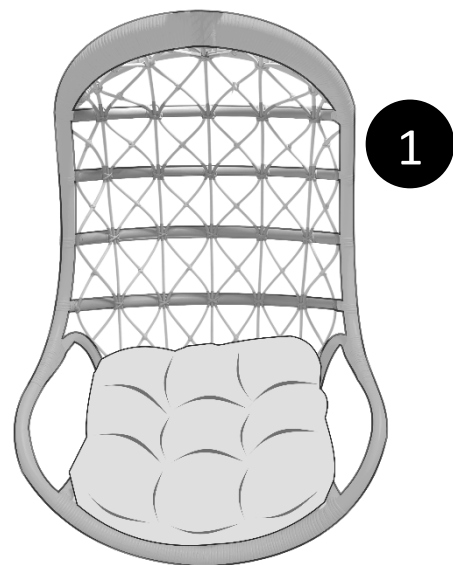

1	Hanging Chair	x1
2	Rope 4 meters	x1
3	Cushion	x1

1.1 Ceiling Mount (Professional Installation Required)

Before assembling your chair, have a load-bearing ceiling hook or mounting loop professionally installed into a structural ceiling joist or beam. **This step must be carried out by a qualified tradesperson or structural engineer.** The fitting must be rated to support a minimum of 150kg (330lbs). Do not fix into plasterboard, drywall, or any non-structural surface.

1.2 Attach the Rope to the Chair Frame

1. Lay (2) out flat and fold it in half to find the **midpoint**.
2. Hold the midpoint of (2) and bring it to the **top horizontal bar** of the chair frame (1), the main structural bar at the top of the backrest.
3. Pass the midpoint loop **over and behind** the bar so it sits underneath it.
4. Take both loose ends of the rope and feed them **down through the loop** from front to back, then pull both ends firmly upward. This creates a **lark's head (girth hitch) knot** that cinches securely around the bar.
5. Pull both ends firmly to tighten the knot flush against the bar. The rope should grip the bar with no slipping when tested with a strong downward tug.

1.3 Prepare the Suspension Line


1. With both rope ends now pointing upward, hold them together and **twist them around each other** to form a single combined rope line. This prevents the chair from spinning excessively and distributes load evenly.
2. Check that the two strands are of equal length above the knot. If one side is longer, re-seat the lark's head knot to re-centre it on the bar.

1.4 Attach to the Ceiling Mount



1. Feed both rope ends up through your professionally installed ceiling mounting loop.
2. Adjust the height so the seat sits from the floor to your preferred seating height.
3. Once at the correct height, secure the rope to the ceiling loop by tying a tight **Overhand Loop knot** with both strands together. Pull firmly to lock.
4. For additional security, tie a second **Double Half-Hitch** below the first knot as a backup.
5. Trim any excess rope if desired, leaving at least 15cm (6 inches) of tail beyond the final knot.

1.5 Safety Check Before Use

- Tug downward firmly on the rope at both the chair bar and the ceiling mount to test all knots.
- Sit into the chair gradually, applying body weight incrementally before relaxing fully.

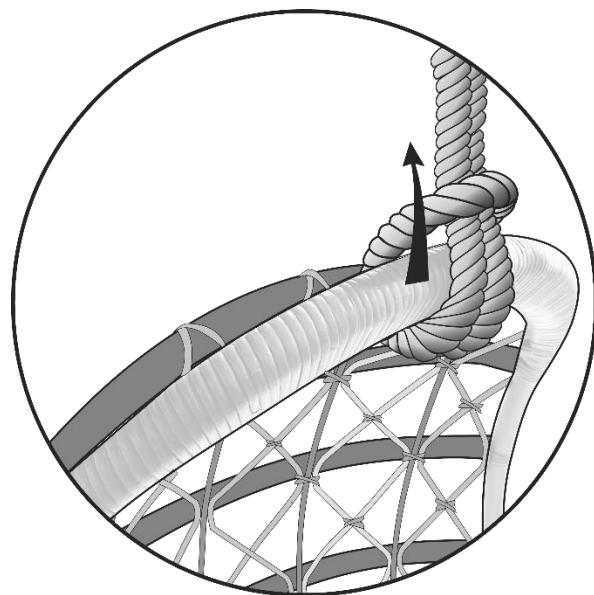

2.1 Place the cushion on the chair, then take the Velcro from the underside of the chair and attach each end to the fabric pieces with Velcro. Ensure the Velcro is firmly secured so the cushion does not shift.

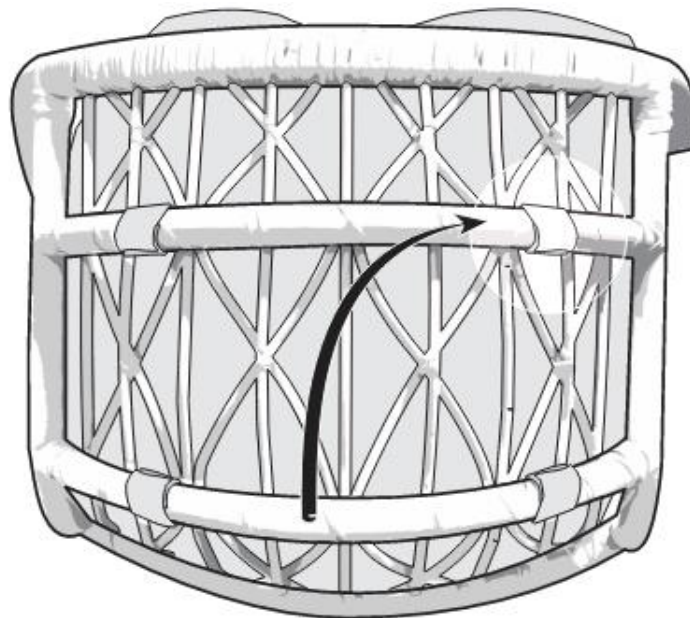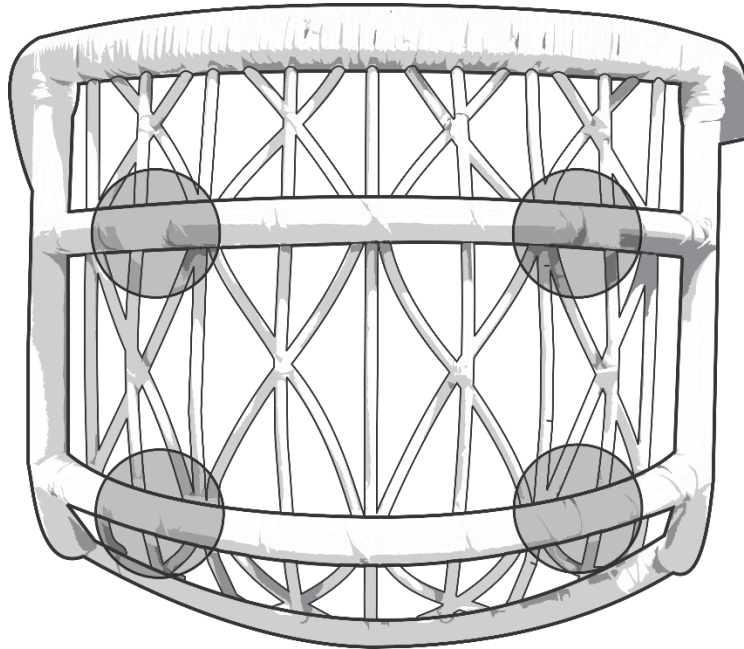


Great job!

Your new hanging chair is complete.

CARING FOR YOUR ITEM

- Outdoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.

Max 130kg

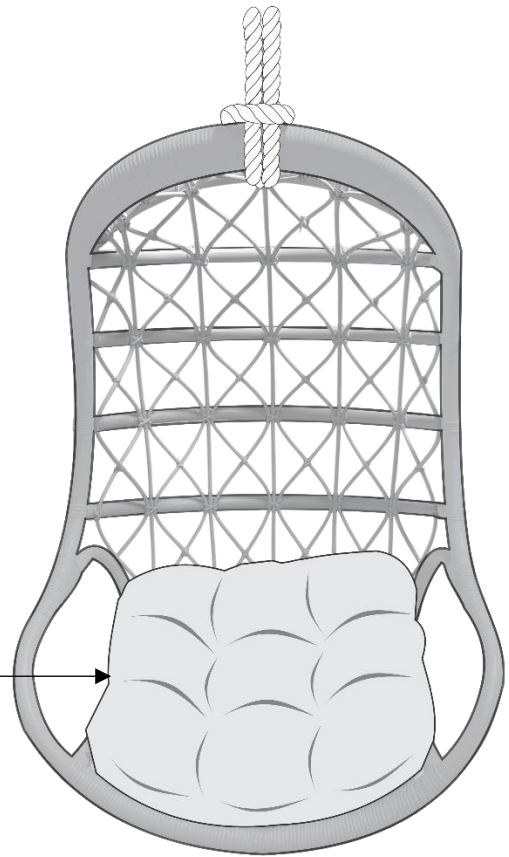

CONNECT WITH US!

Tag us **@modway.furniture** and **#MyModwayHome** for a chance to be featured.

modway



Questions? Contact us!

609.256.9000

cs@modway.com