



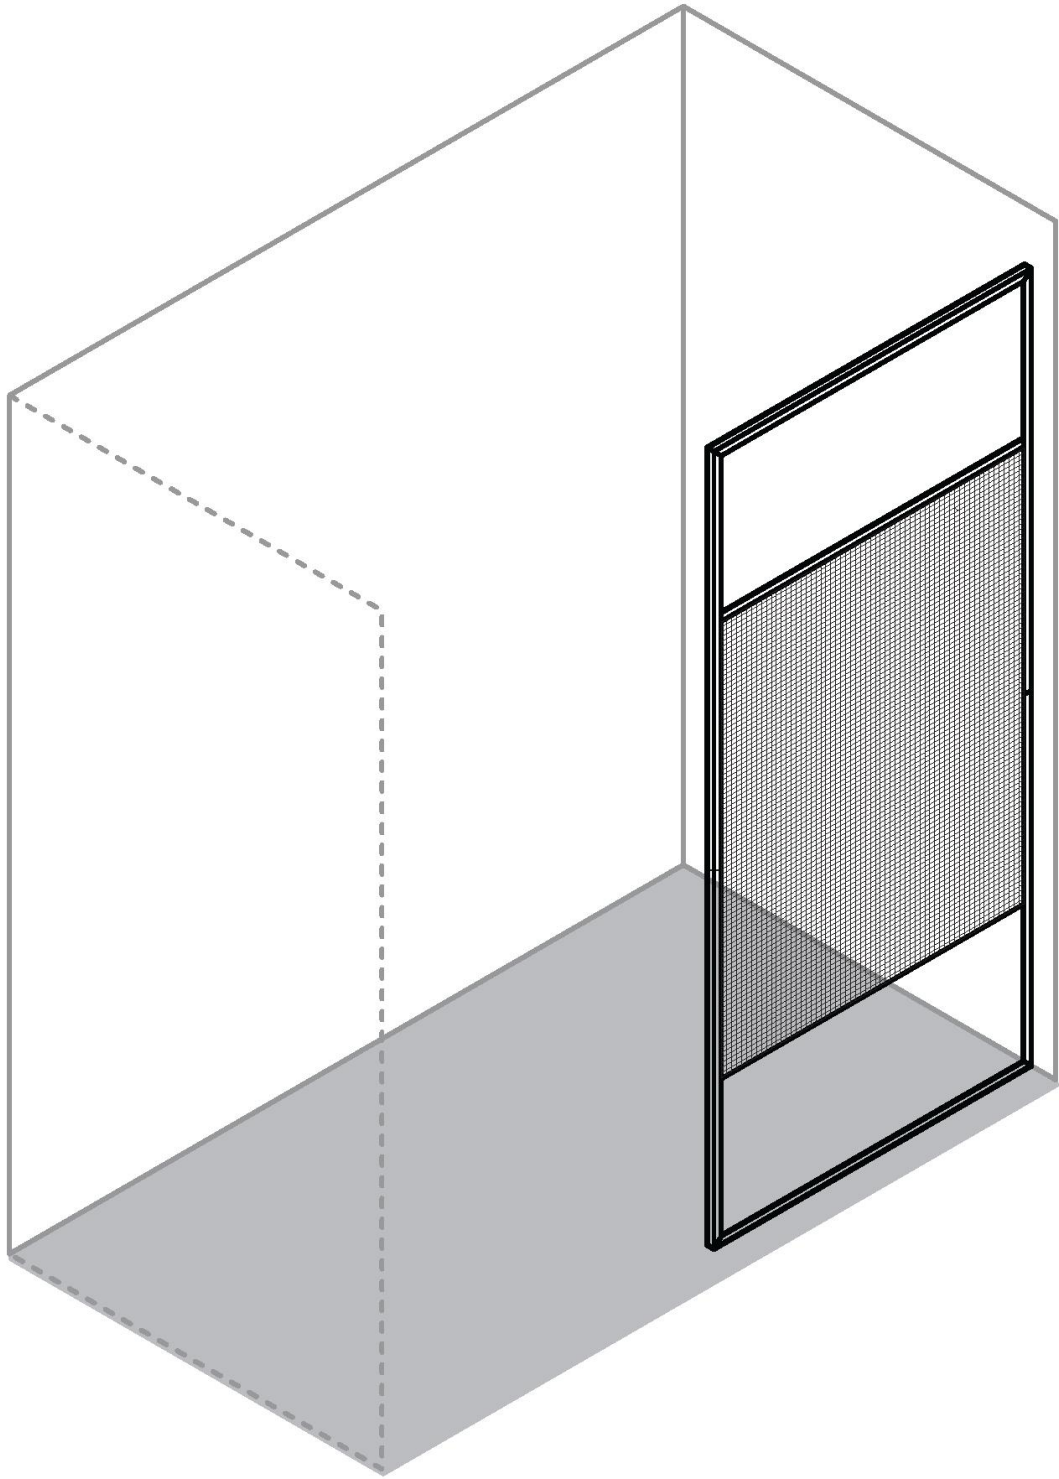

SKU: BR13SN013474MB




BR13SN013474BG

Parts List

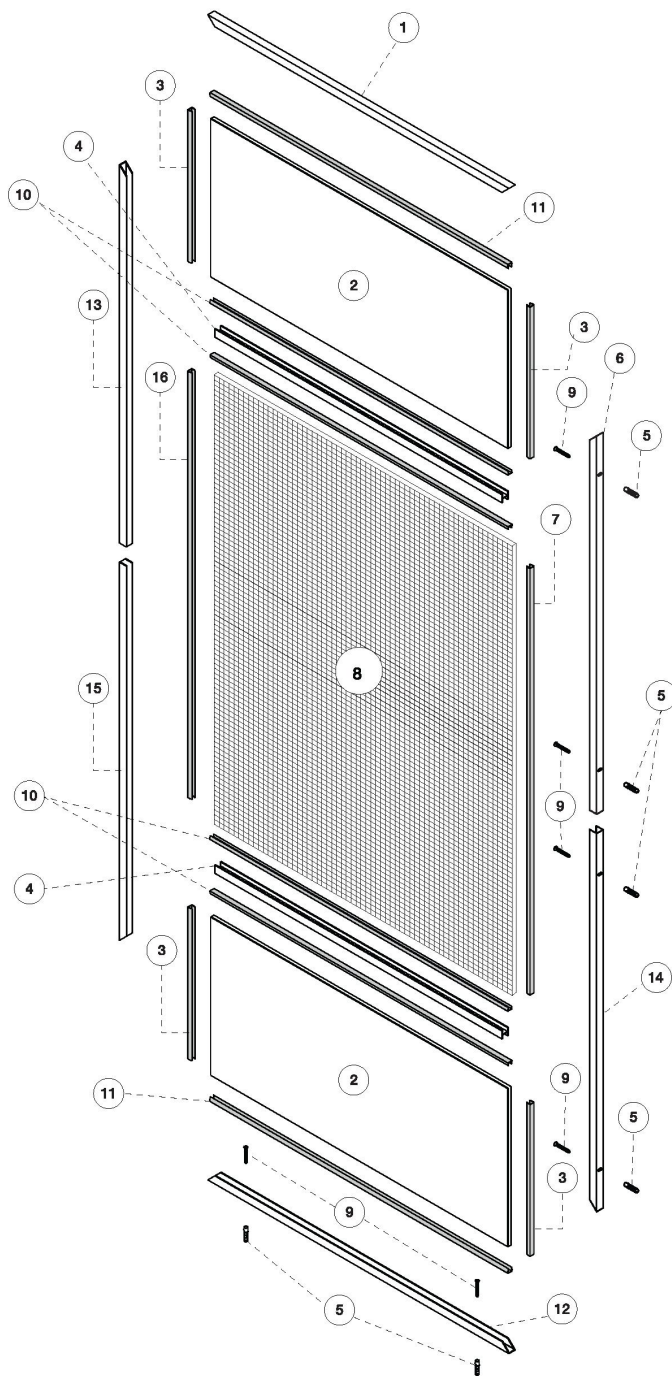


- 1 Top Rail (x1)
- 2 Clear Glass Section (x2)
- 3 14.375" Vertical Rail Seal Strip (x4)
- 4 Horizontal Rail (x2)
- 5 Plastic Anchor (x6)
- 6 Upper Vertical Wall Rail (x1)
- 7 41.25" Vertical Rail Seal Strip (x1)
- 8 Wired glass (x1)
- 9 Hex Screw 1 5/8" (x6)
- 10 Middle Rail Seal Strip (x4)
- 11 Bottom & Top Rail Seal Strip (x2)
- 12 Bottom Rail (x1)
- 13 Upper Outer Vertical Rail (x1)
- 14 Lower Vertical Wall Rail (x1)
- 15 Lower Outer Vertical Rail (x1)
- 16 41.25" Flanged Vertical Rail Seal Strip (x1)

Parts List

1 Top Rail  1pc	2 Clear Glass Section  2pc	3 14.375" Vertical Rail Seal Strip  4pc
4 Horizontal Rail  2pc	5 Plastic Anchor  6pc	6 Upper Vertical Wall Rail  1pc
7 41.25" Vertical Rail Seal Strip  1pc	8 Wired glass  1pc	9 Hex Screw 1 3/8"  6pc
10 8mm Middle Rail Seal Strip  4pc	11 Bottom & Top Rail Seal Strip  2pc	12 Bottom Rail  1pc
13 Upper Outer Vertical Rail  1pc	14 Lower Vertical Wall Rail  1pc	15 Lower Outer Vertical Rail  1pc
16 41.25" Flanged Vertical Rail Seal Strip  1pc		

Prior to Installation

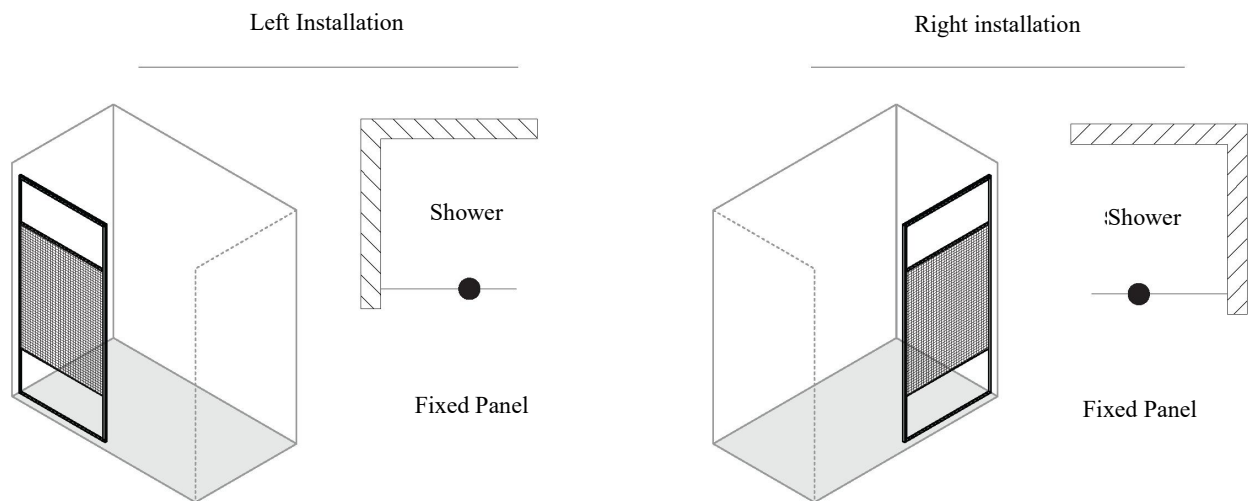


- Remove the plastic layer from the installation position of base (if needed),do not remove all the plastic layer off plastic platform of the base.
- To prevent damage to shower base, shield the shower base bottom with a cardboard protector before installing shower screen.
- Ensure that there is sufficient structural support behind the shower wall to hold the weight of the fixed panel installation.
- Fiberglass, acrylic or sheetrock construction may not be strong enough to support the fixed panel. Use the wood framing from behind the face edge of the stall to provide a secure mounting to the door.
- Apply a bead of silicone between the walls and base of the stall. For optimum performance, install the fixed panel on a level surface.
- Use heavy duty gloves during installation.
- The design of this unit has open space in the back of the shower, leaving the potential for water leakage.
- This clear glass model is reversible and can be installed to the right or left side. (See configuration diagram below)

Installation Steps

*NOTE: Prior to any installation, mark lines on the floor and wall for proper dry fit. Proper planning is imperative for proper installation.


STEP 1

First, assemble the Upper Vertical Wall Rail ⑥ and Lower Vertical Wall Rail ⑭ as shown in the diagram. Use a level to ensure the Vertical Wall Rail is vertically flush against the wall.

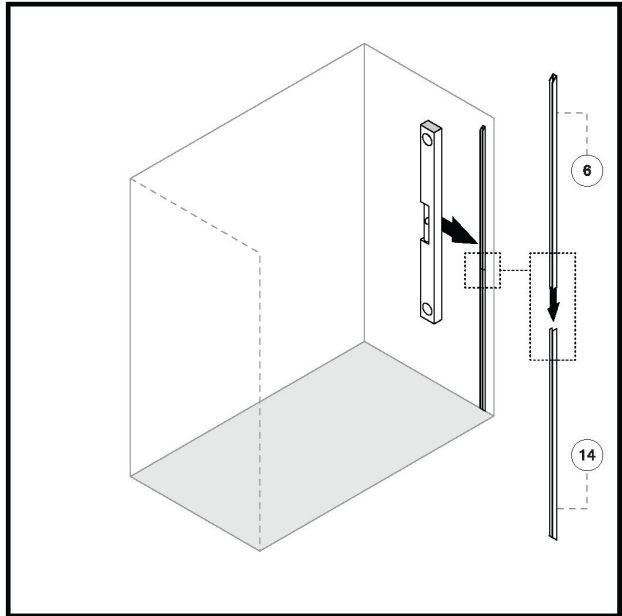

STEP 2


Mark with a pen, and drill holes.

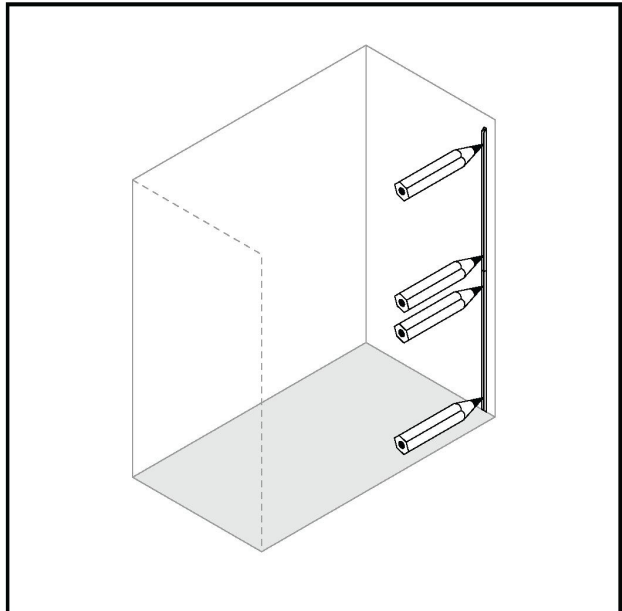

Installation Steps


STEP 3

Place the plastic anchor ⑤ into the drilled hole.

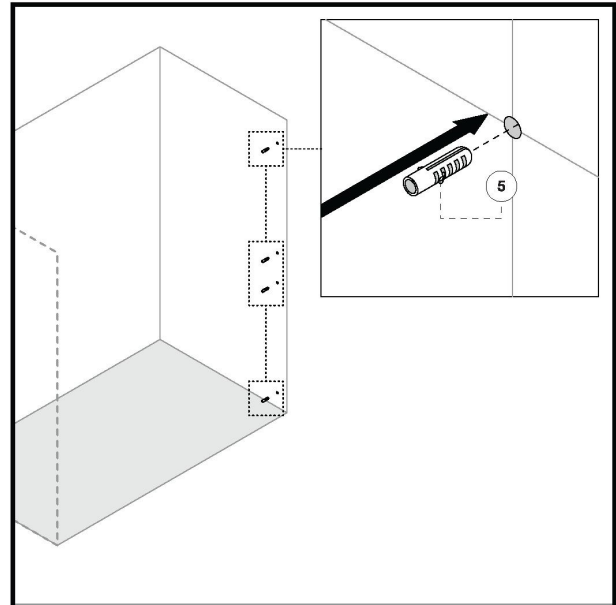

STEP 4


Place the Lower Vertical Wall Rail ⑭ in the position with the plastic anchor installed, align it with the holes, and tighten it with a Hex Screw 1 5/8" ⑨. Then, insert the end with the joint of the Upper Vertical Wall Rail ⑥ into the Lower Vertical Wall Rail ⑭, and finally, tighten the Upper Vertical Wall Rail ⑥ with a screw.

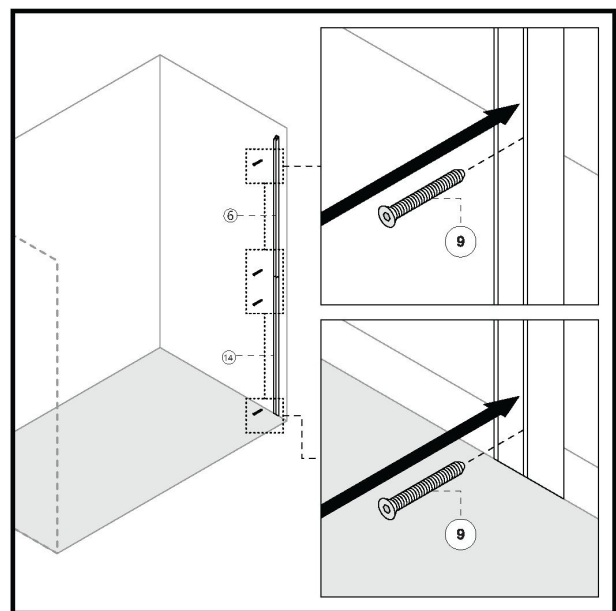

Installation Steps



STEP 5

Align the Bottom Rail (12) with the Lower Vertical Wall Rail (14) as shown in the diagram, ensuring that the distance of A is equal, make marks with a pen, and drill holes.

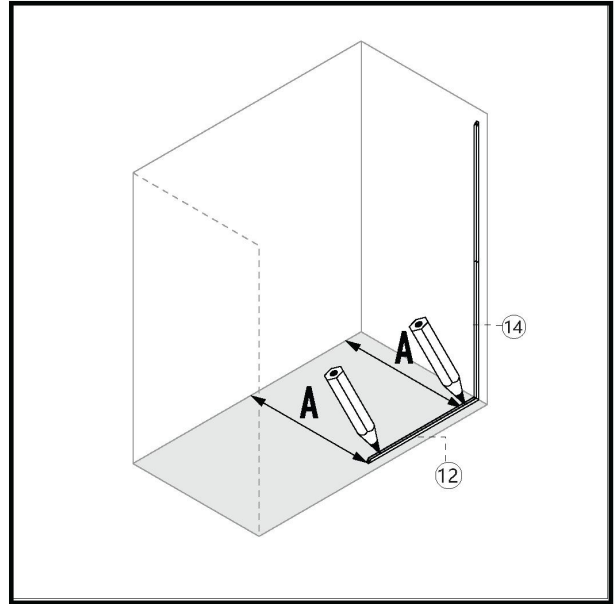

STEP 6


Place the plastic anchor (5) into the pre-drilled hole; and tighten the bottom rail with a hex screw 1 5/8" (9).

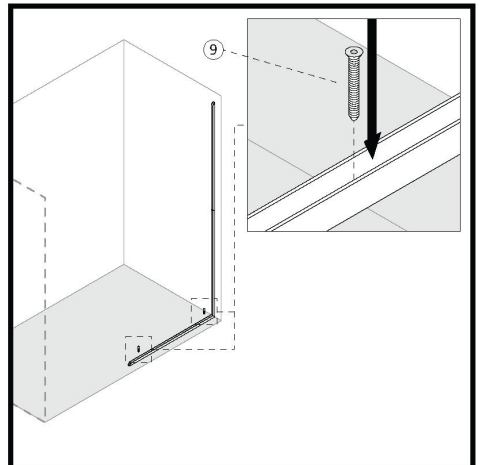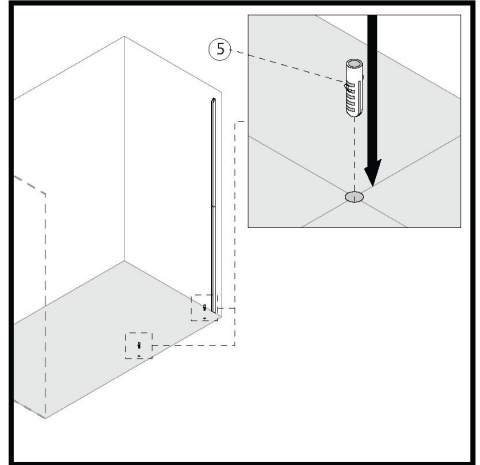

Installation Steps


STEP 7

Install the Clear Glass Section ② as shown in the diagram using the Middle Rail Seal Strip ⑩ and Bottom & Top Rail Seal Strip ⑪ and 14.375" Vertical Rail Seal Strip ③

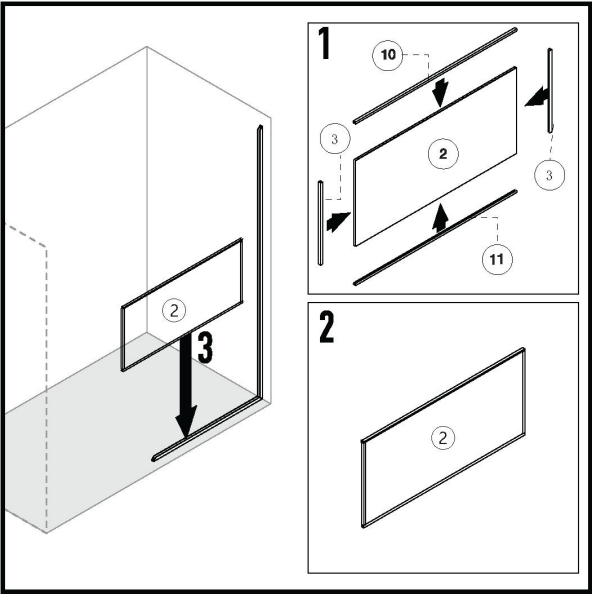

STEP 8


the Horizontal Rail ④ install it above the Clear Glass Section ②.

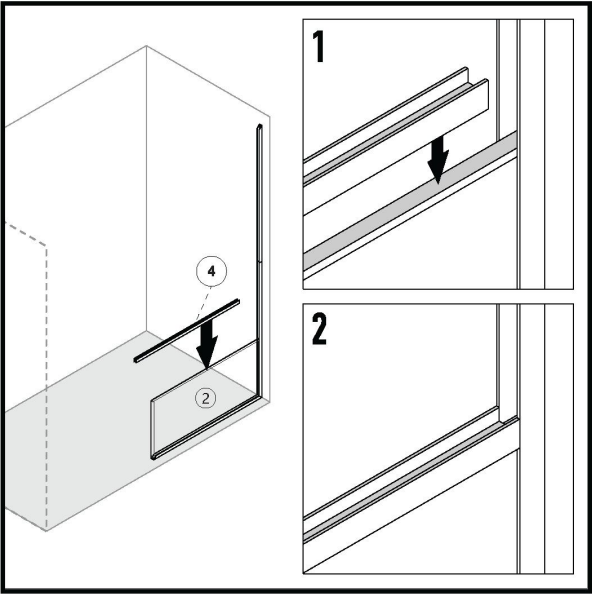

Installation Steps


STEP 9

Use Middle Rail Seal Strip (10) and 41.25"Vertical Rail Seal Strip (7), and 41.25"Flanged Vertical Rail Seal Strip (16) to assemble the Wired glass (8) as shown in the diagram.

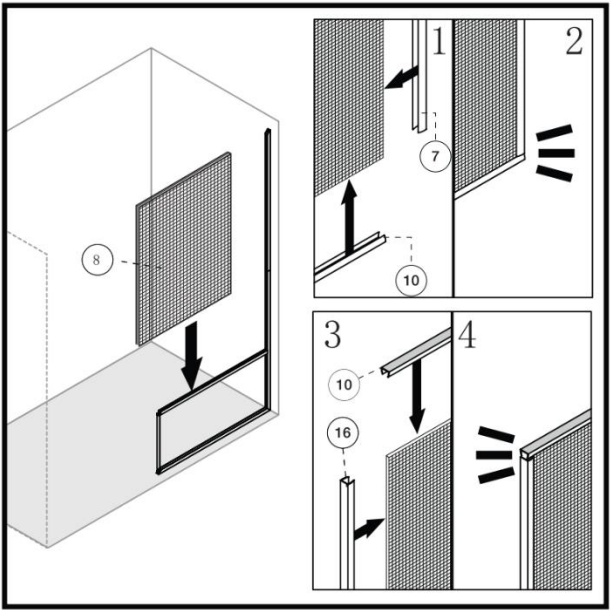

STEP 10


Take 1 piece of Horizontal Rail (4) and install it above the Wired glass (8)

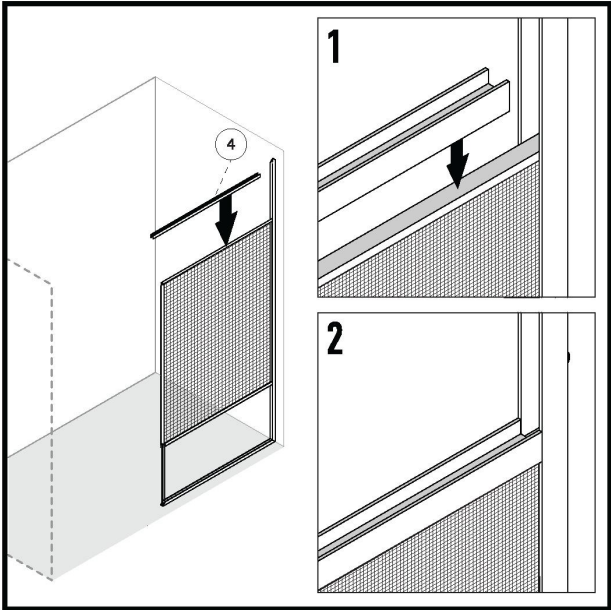

Installation Steps


STEP 11

Install the Clear Glass Section ② as shown in the diagram using the Middle Rail Seal Strip ⑩ and Bottom & Top Rail Seal Strip ⑪ and 14.375" Vertical Rail Seal Strip ③ to assemble the Clear Glass Section ② as shown in the diagram.

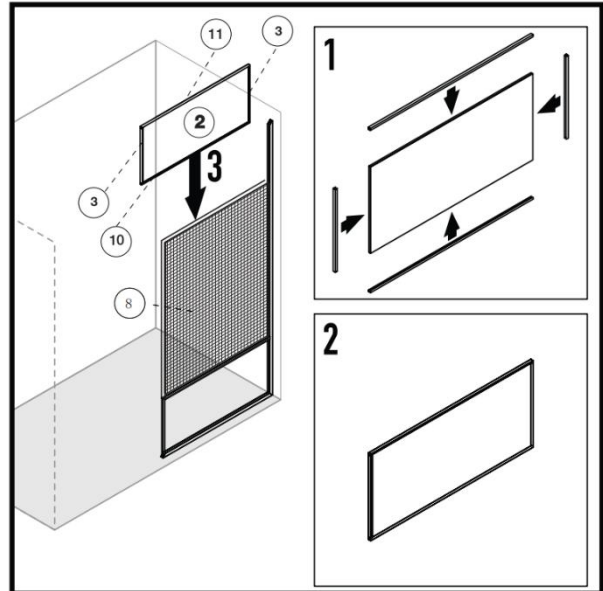

STEP 12


First, install the Lower Outer Vertical Rail ⑮; then insert one end of the Upper Outer Vertical Rail ⑬ with a joint into the Lower Outer Vertical Rail ⑮, and finally, align the Top Rail ① with the Vertical Rails on both sides as shown in the diagram.

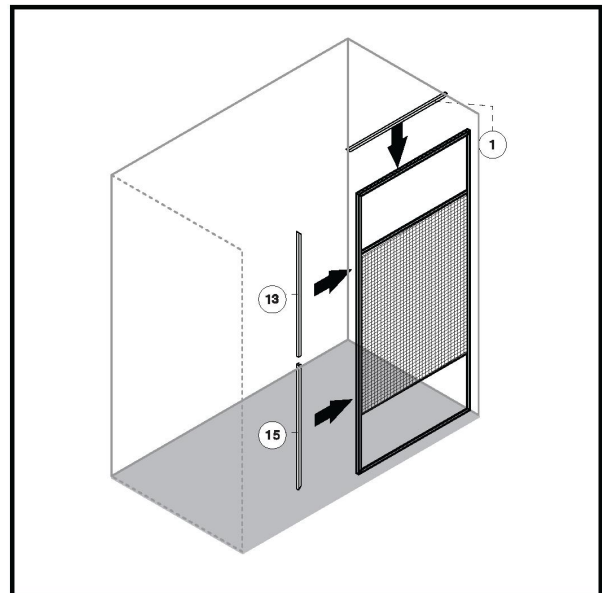

Installation Steps




STEP 13


Apply bead of silicone along the wall and floor sides of the shower screen.

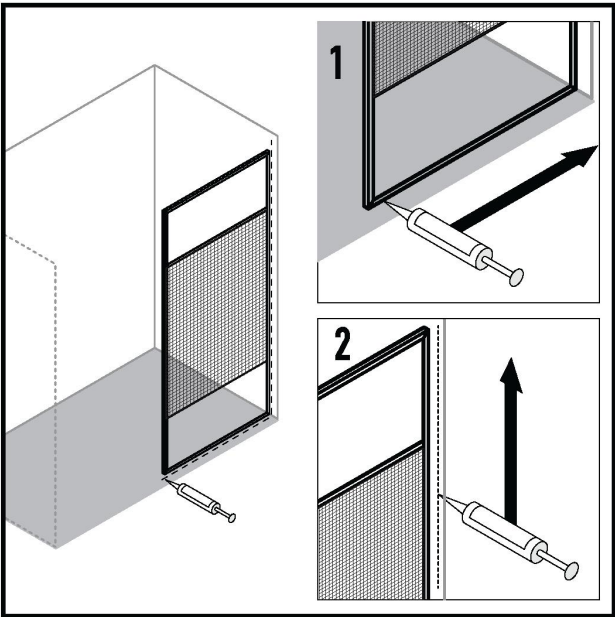

STEP 14

Let it sit for at least 24 hours before using the shower area. Installation complete.

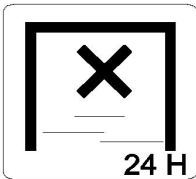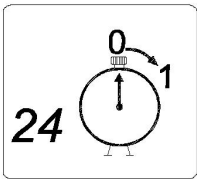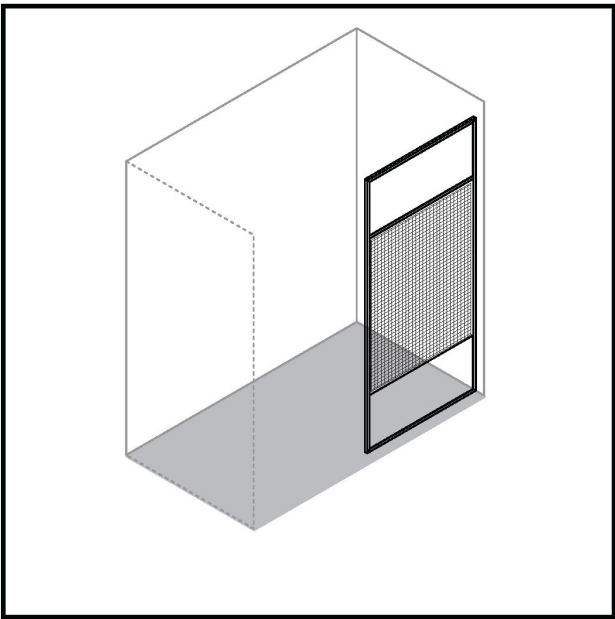


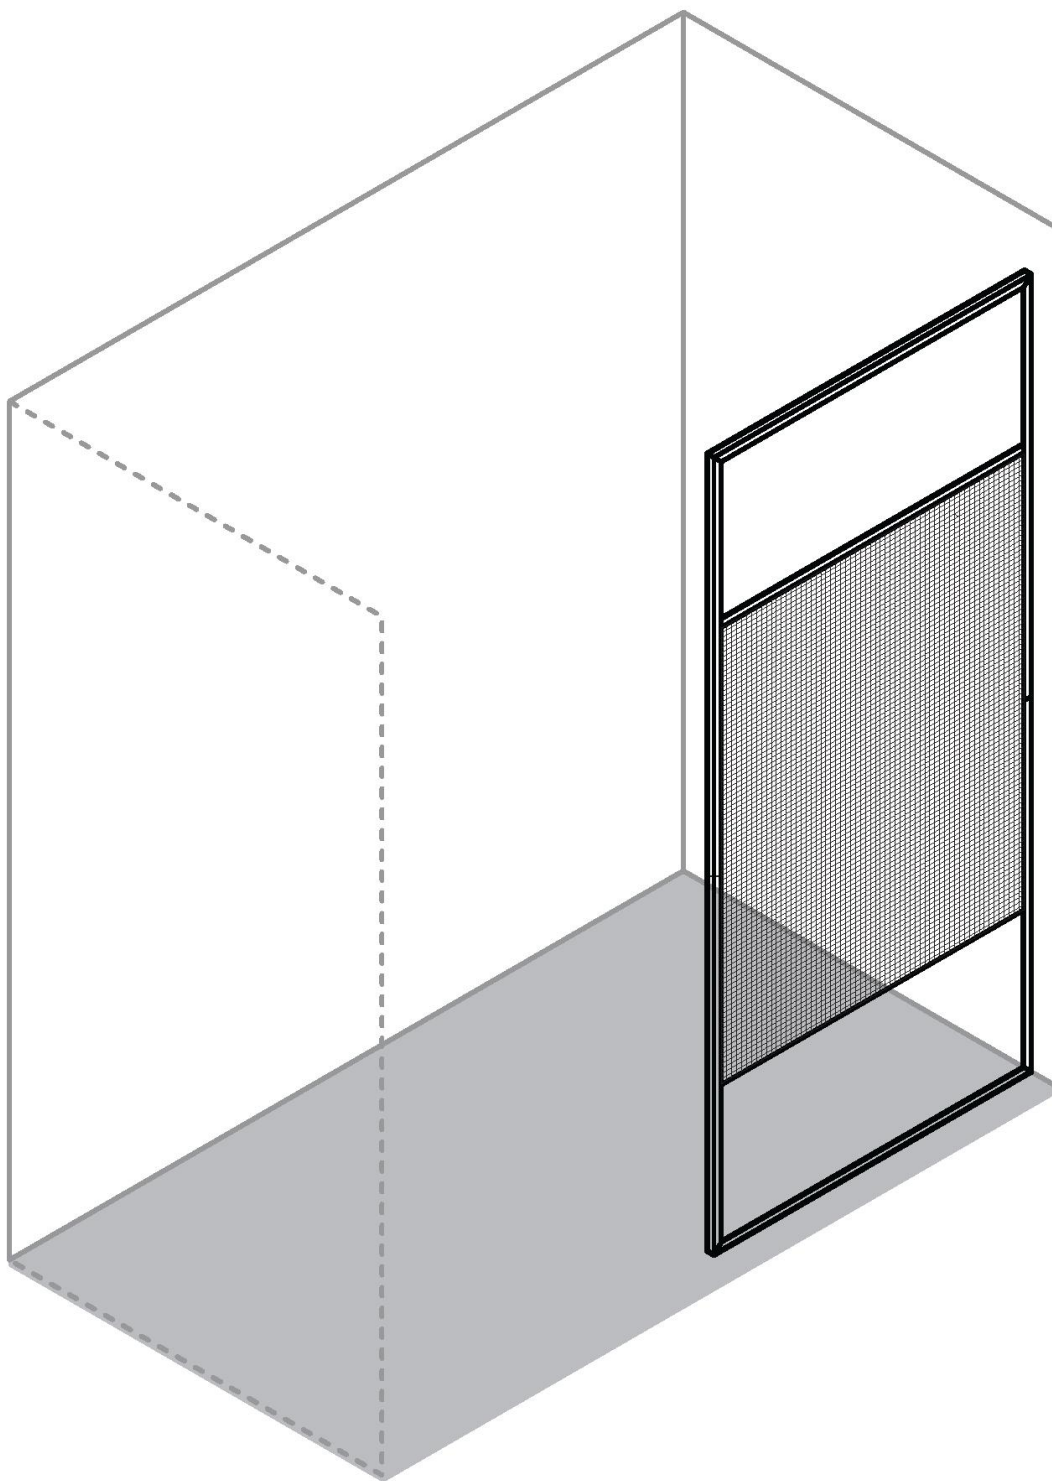

SKU: BR13SN013474MB




BR13SN013474BG

Lista de piezas

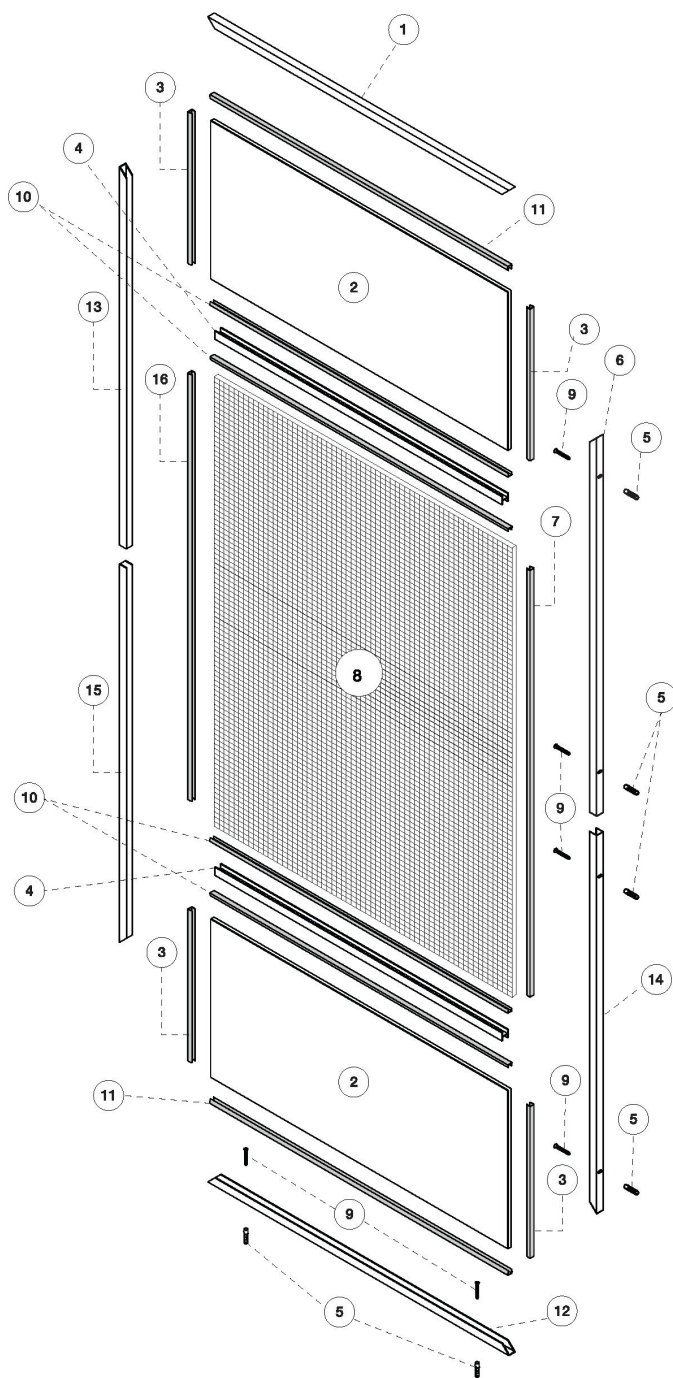


- 1 Raíl superior (x1)
- 2 Sección de cristal transparente (x2)
- 3 Tira de sellado de raíl vertical de 14.375" (x4)
- 4 Riel horizontal (x2)
- 5 Anclaje de plástico (x6)
- 6 Raíl de pared vertical superior (x1)
- 7 Tira de sellado de raíl vertical de 41.25" (x1)
- 8 Cristal con cable (x1)
- 9 Tornillo hexagonal 1 3/8" (x6)
- 10 Tira de sellado del carril central (x4)
- 11 Tira de sellado de raíl inferior y superior (x2)
- 12 Raíl inferior (x1)
- 13 Carril vertical exterior superior (x1)
- 14 Raíl de pared vertical inferior (x1)
- 15 Raíl vertical exterior inferior (x1)
- 16 41.25" Tira de sellado de raíl vertical con brida (x1)

Lista de piezas

1 Carril superior  1 ud.	2 Sección de cristal transparente  2 ud.	3 Tira de sellado de rail vertical de 14.375"  4 ud.
4 Carril horizontal  2 ud.	5 Ancla de plástico  6 ud.	6 Rail de pared vertical superior  1 ud.
7 Tira de sellado de rail vertical de 41.25"  1 ud.	8 Cristal con cable  1 ud.	9 Tornillo hexagonal 1 ½"  6 ud.
10 Tira de sellado de carril central de 8 mm  4 ud.	11 Tira de sellado para rail inferior y superior  2 ud.	12 Rail inferior  1 ud.
13 Carril vertical exterior superior  1 ud.	14 Rail de pared vertical inferior  1 ud.	15 Rail vertical exterior inferior  1 ud.
16 41. 25" Tira de sellado para rail vertical con brida  1 ud.		

Antes de la instalación

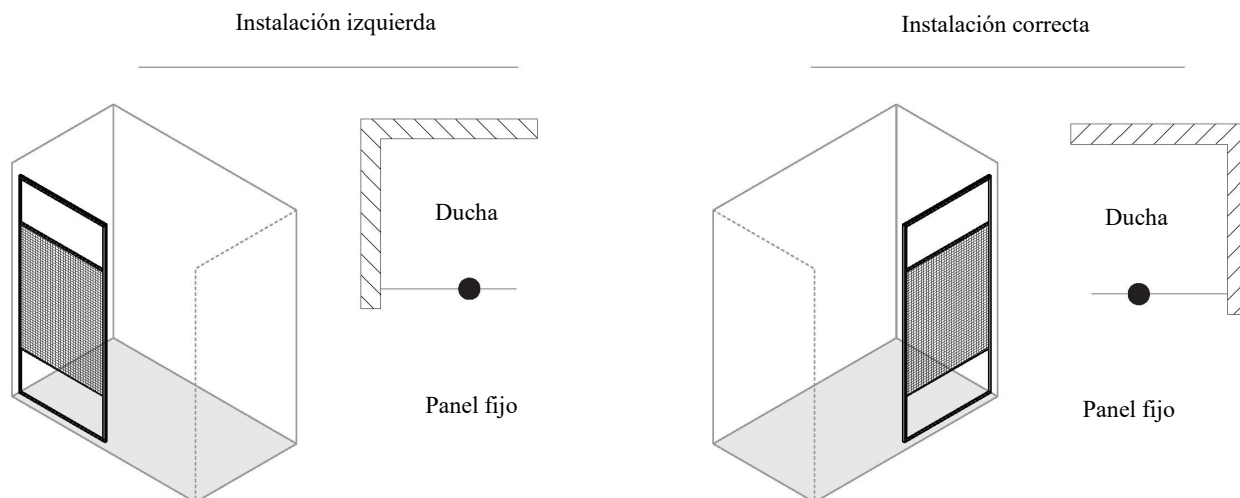


- Retire la capa de plástico de la posición de instalación de la base (si es necesario), no retire toda la capa de plástico de la plataforma de plástico de la base.
- Para evitar daños en la base de la ducha, proteja la parte inferior de la misma con un protector de cartón antes de instalar la mampara.
- Asegúrese de que hay suficiente soporte estructural detrás de la pared de la ducha para soportar el peso de la instalación del panel fijo.
- Las construcciones de fibra de vidrio, acrílico o yeso pueden no ser lo suficientemente fuertes para soportar el panel fijo. Utilice el marco de madera de detrás del borde frontal de la caseta para proporcionar un montaje seguro a la puerta.
- Aplique un cordón de silicona entre las paredes y la base de la caseta. Para un rendimiento óptimo, instale el panel fijo sobre una superficie nivelada.
- Utilice guantes resistentes durante la instalación.
- El diseño de esta unidad tiene un espacio abierto en la parte trasera de la ducha, lo que deja la posibilidad de que se produzcan fugas de agua.
- Este modelo de cristal transparente es reversible y puede instalarse a la derecha o a la izquierda. (Véase el diagrama de configuración más abajo)

Pasos de la instalación

*NOTA: Antes de cualquier instalación, marque líneas en el suelo y la pared para un ajuste en seco adecuado. Una planificación adecuada es imprescindible para una correcta instalación.


PASO 1

Primero, ensamble el riel vertical superior ⑥ y el riel vertical inferior ⑭ como se muestra en el diagrama. Utilice un nivel para asegurarse de que el Rail Vertical de Pared está verticalmente alineado con la pared.

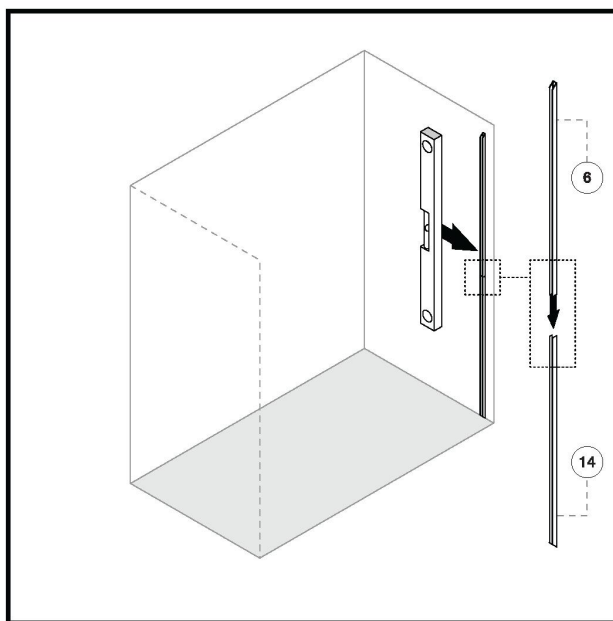


PASO 2

Marque con un bolígrafo y perfore los agujeros.

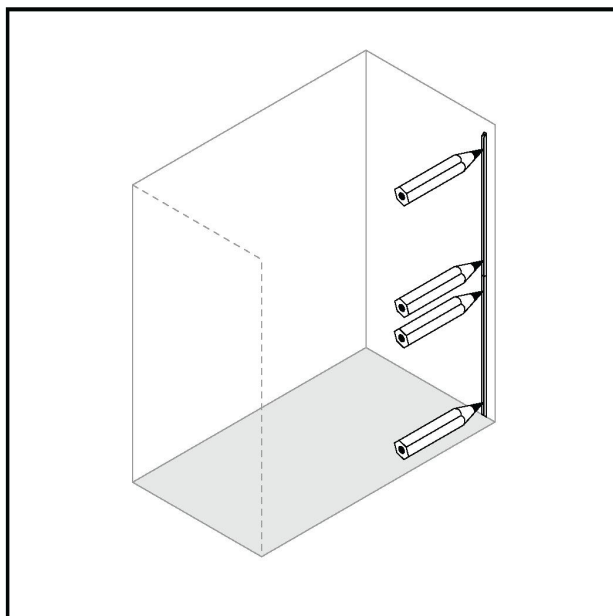


PASO 3

Coloque el anclaje de plástico ⑤ en el orificio taladrado.

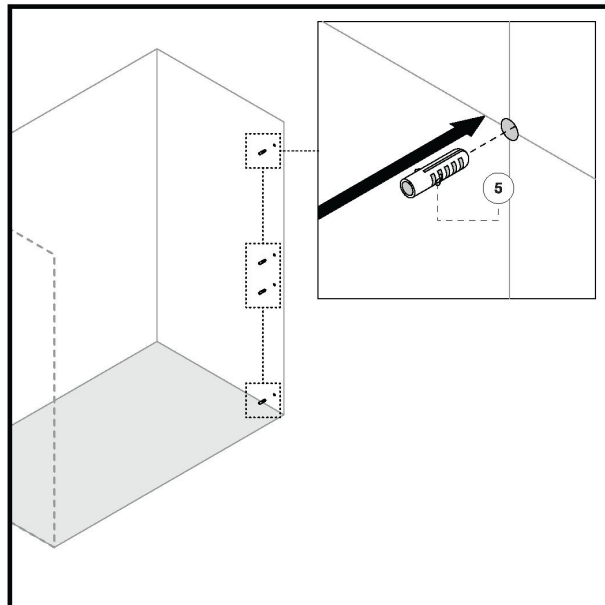

PASO 4


Coloque el Rail de Pared Vertical Inferior ⑭ en la posición con el anclaje de plástico instalado, alinéelo con los agujeros y apriételo con un Tornillo Hexagonal 1 5/8" ⑨. A continuación, inserte el extremo con la junta del Rail de Pared Vertical Superior ⑥ en el Rail de Pared Vertical Inferior ⑭, y finalmente, apriete el Rail de Pared Vertical Superior ⑥ con un tornillo.

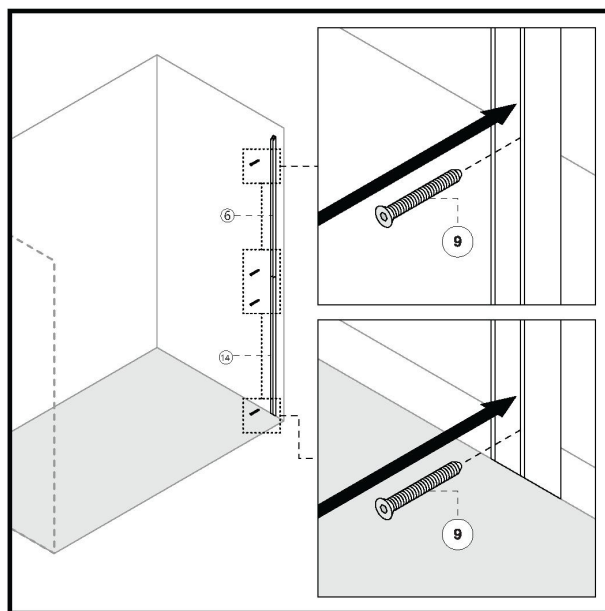

Pasos de la instalación



PASO 5

Alinee el riel inferior (12) con el riel vertical inferior (14) como se muestra en el diagrama, asegurándose de que la distancia de A sea igual, haga marcas con un bolígrafo y taladre agujeros.

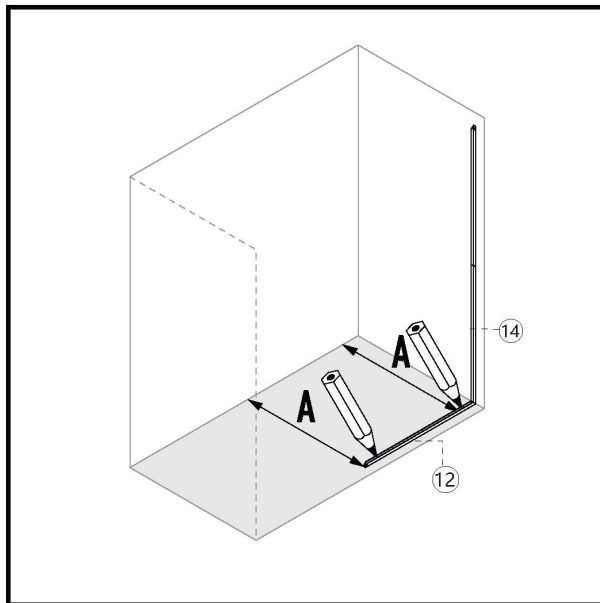


PASO 6

Coloque el anclaje de plástico (5) en el orificio pretaladrado; y apriete el riel inferior con un tornillo hexagonal de 1 5/8" (9).

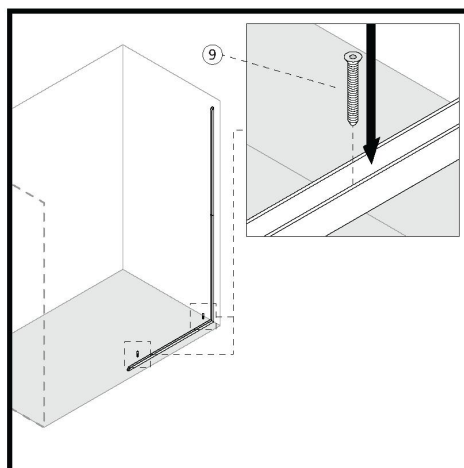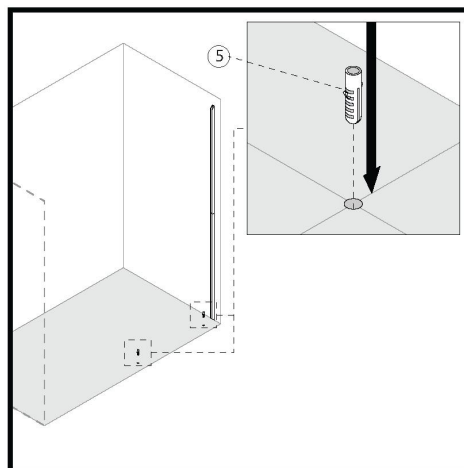


PASO 7

Instale la Sección de Vidrio Transparente (2) como se muestra en el diagrama utilizando la Tira de Sellado del Riel Medio (10) y la Tira de Sellado del Riel Inferior y Superior (11) y la Tira de Sellado del Riel Vertical de 14.375" (3).

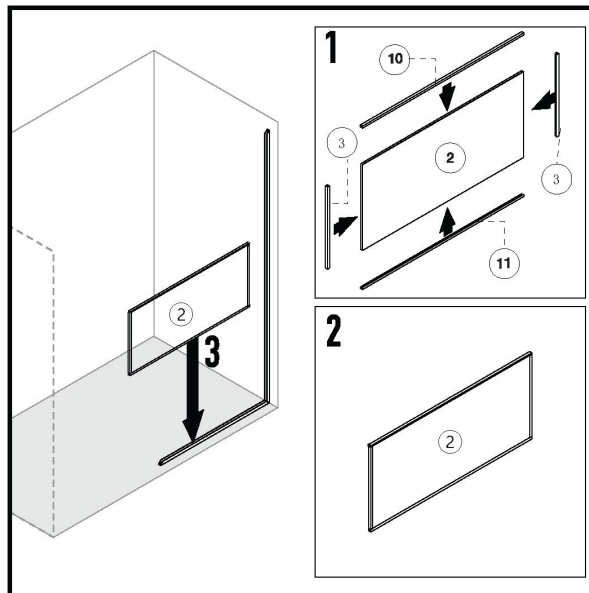

PASO 8


el riel horizontal (4) instálolo encima de la sección de cristal transparente (2).

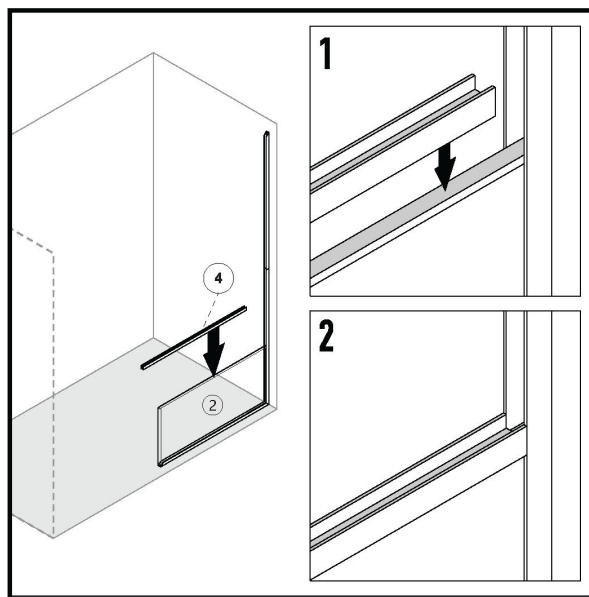

Pasos de la instalación


PASO 9

Utilice la tira de sellado de carril central ⑩ y la tira de sellado de carril vertical ⑦ de 41.25", y la tira de sellado de carril vertical con brida ⑯ de 41.25" para montar el cristal cableado ⑧ como se muestra en el diagrama.

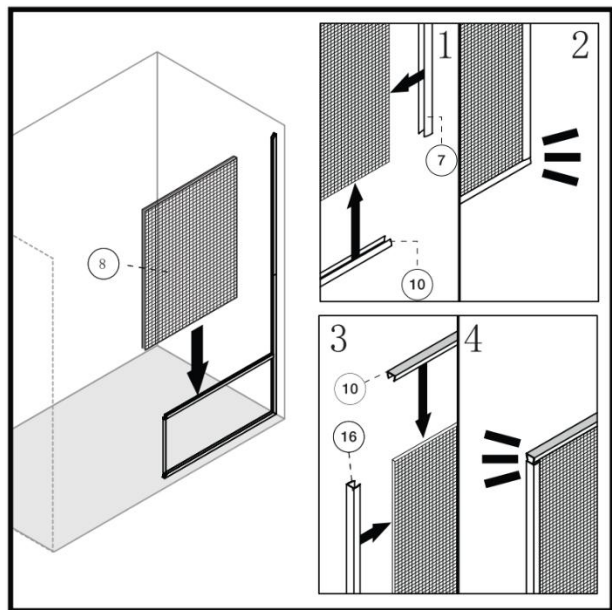

PASO 10


Coja 1 trozo de Rail Horizontal ④ e instálelo encima del Cristal Cableado ⑧.

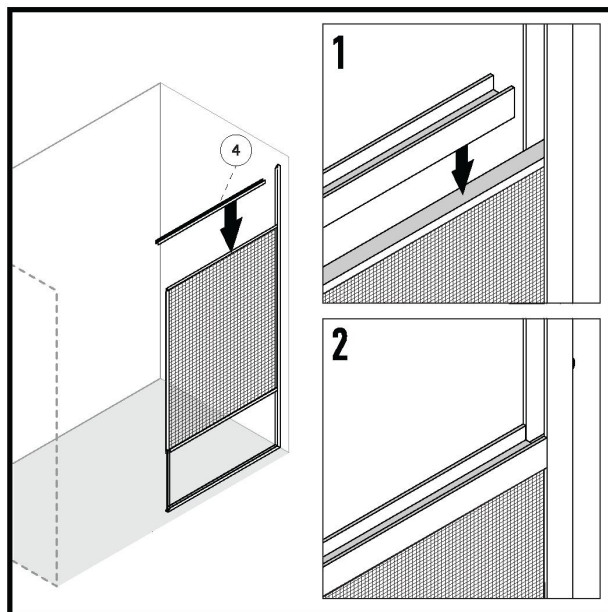

Pasos de la instalación


PASO 11

Instale la Sección de Vidrio Transparente (2) como se muestra en el diagrama usando la Tira de Sellado del Riel Medio (10) y la Tira de Sellado del Riel Inferior y Superior (11) y la Tira de Sellado del Riel Vertical de 14.375" (3) para ensamblar la Sección de Vidrio Transparente (2) como se muestra en el diagrama.

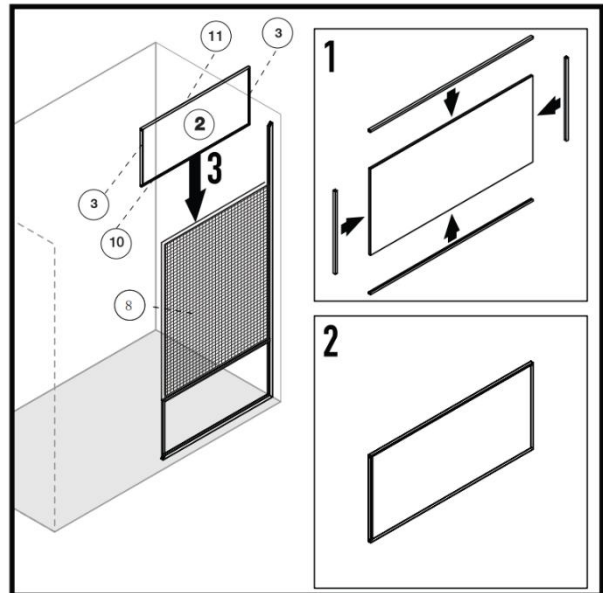

PASO 12


Primero, instale el Riel Vertical Exterior Inferior (15); luego inserte un extremo del Riel Vertical Exterior Superior (13) con una junta en el Riel Vertical Exterior Inferior (15), y finalmente, alinee el Riel Superior (1) con los Rieles Verticales de ambos lados como se muestra en el diagrama.

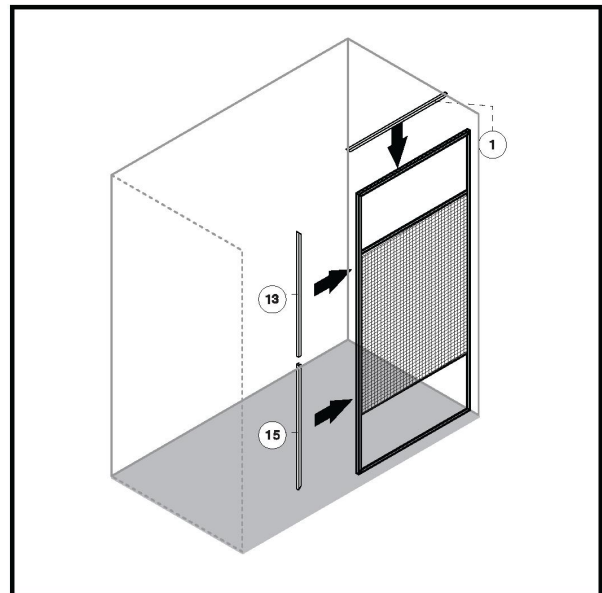

Pasos de la instalación

PASO 13

Aplice un cordón de silicona a lo largo de los lados de la pared y del suelo de la mampara de ducha.

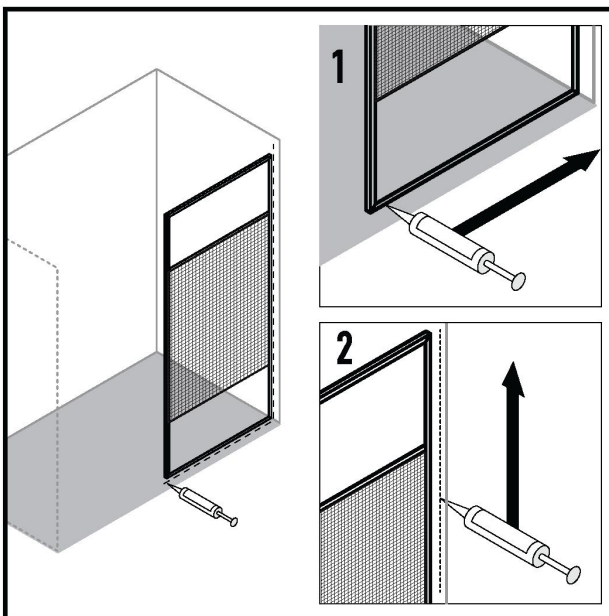

PASO 14

Déjelo reposar al menos 24 horas antes de utilizar la zona de ducha. Instalación completada.

