


ASSEMBLY INSTRUCTIONS

Item No : WF318109

Description : SIDEBOARD

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

If you have any questions, please feel free to contact us.
Email: lowes.team@qualfurn.net

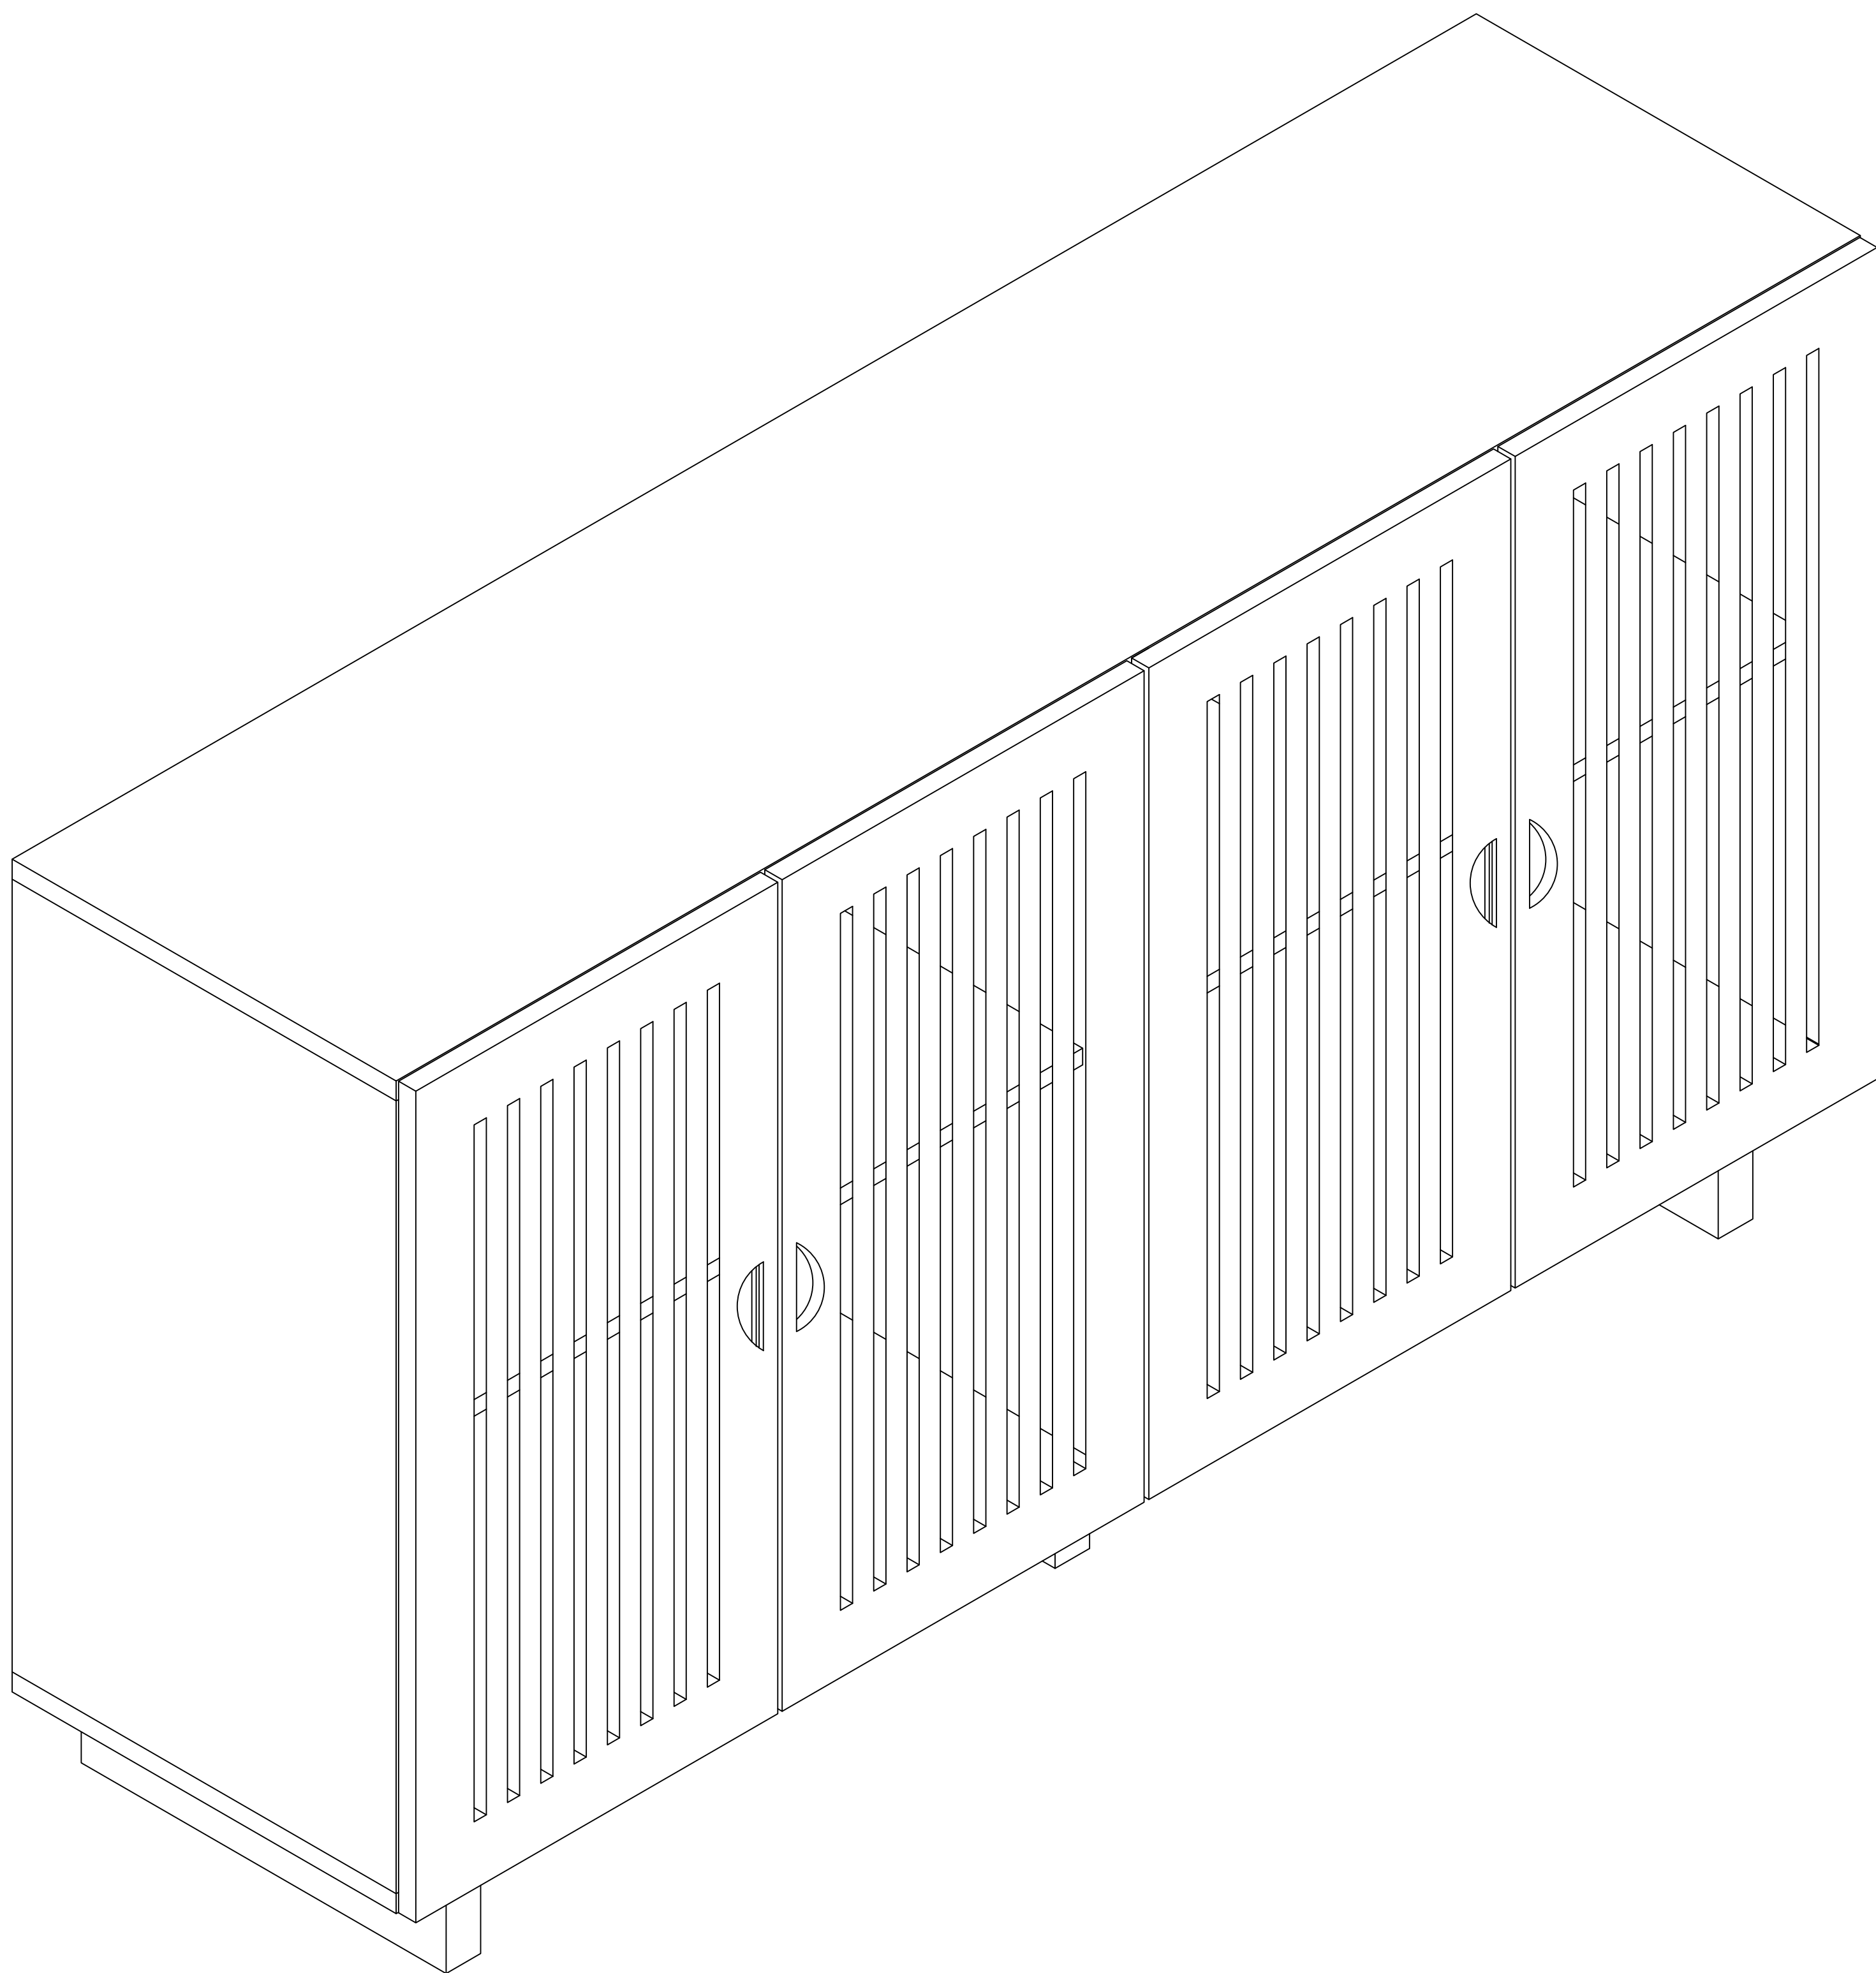


WF318109

ASSEMBLY INSTRUCTIONS


Item No : WF318109

Description : SIDEBOARD

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

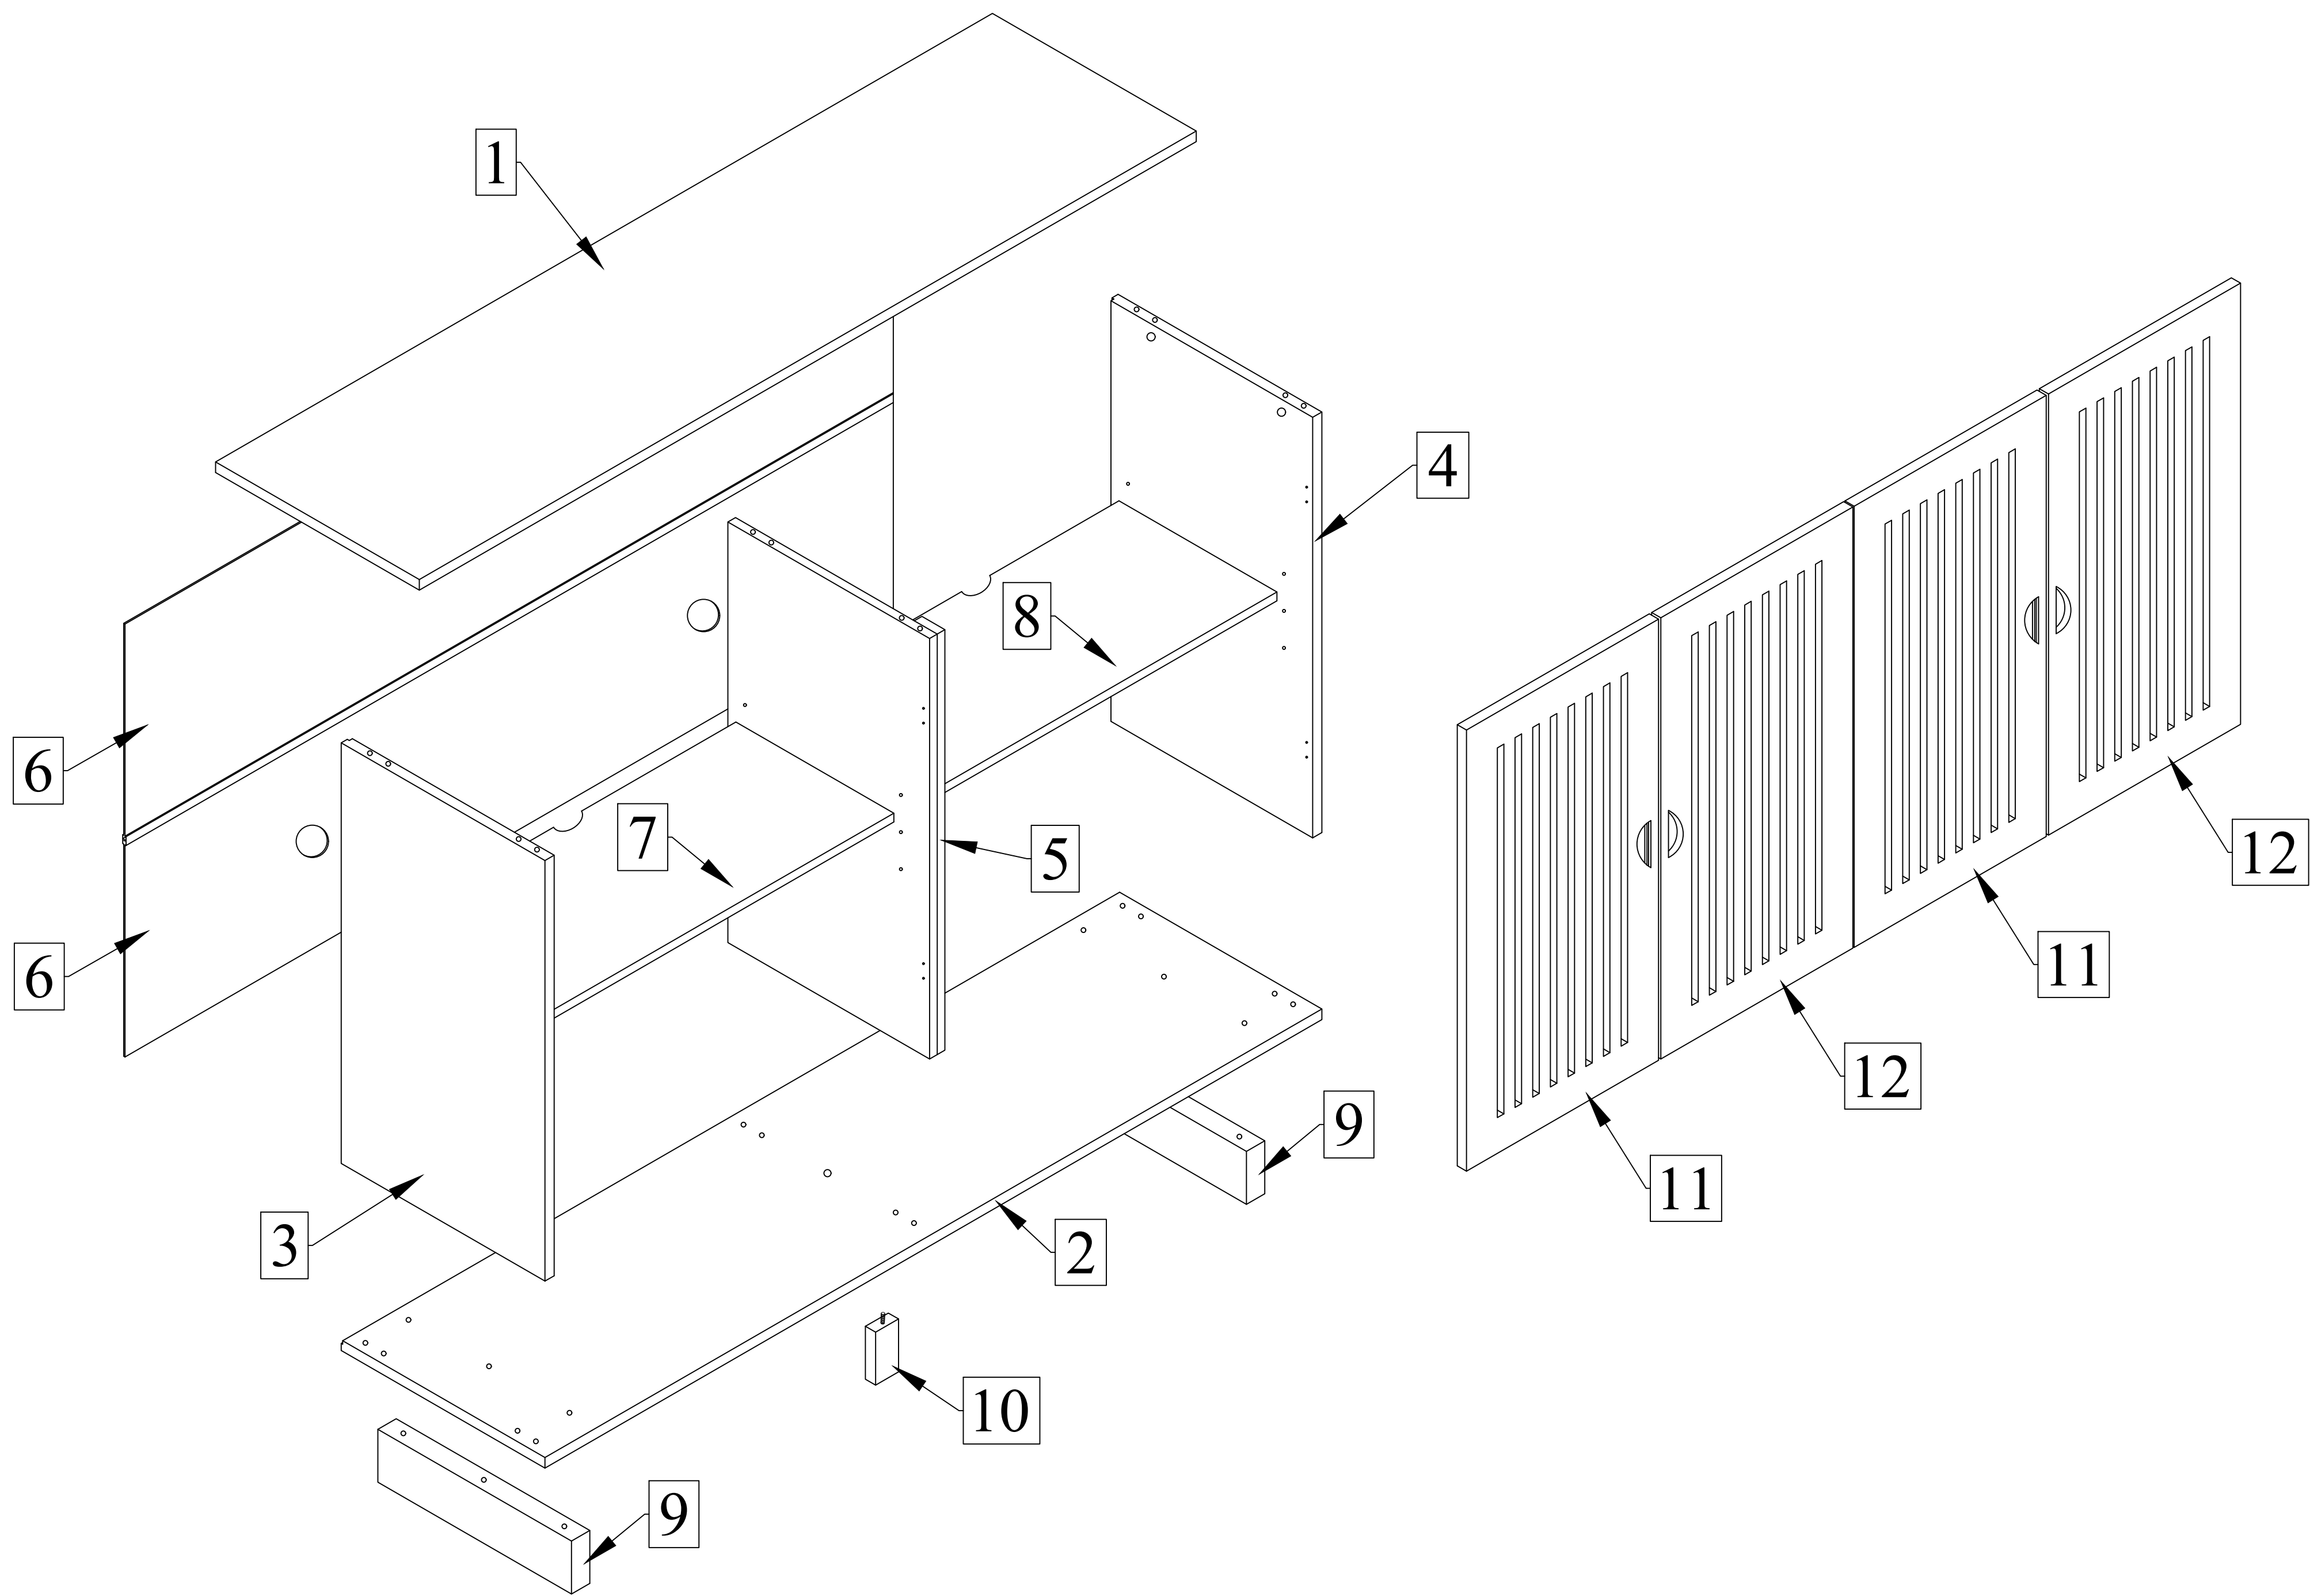

TOOLS REQUIRED (Not provided)



Screwdriver [Apply a battery screw machine for better assembly experience.]

Hardware List			
No.	Description	Sketch	Quantity
A	Wood Dowel M8x30MM		12PCS
B	Minifix + Cap	B1 B2	12SETS
C	Metal Shelf Support		8PCS
D	Magnet		4PCS
E	Iron Plate		4PCS
F	Soft Close Hinges 5/8		8PCS
G	Screw M3.5 x 16MM		48PCS
H	Screw M3 x 12MM		56PCS
I	Screw M3 x 16MM		8PCS
J	JCBC M6 x 45MM		6PCS
K	Allen Key M4		1PC
L	H Connector		1PC

Part List			
No.	Description	Sketch	Quantity
1	Top Panel		1PC
2	Bottom Panel		1PC
3	Side Panel - L		1PC
4	Side Panel - R		1PC
5	Center Panel		1PC
6	Back Panel		2PCS
7	Shelf A (725mm)		1PC
8	Shelf B (740mm)		1PC
9	Solid Leg		2PCS
10	Center Leg		1PC
11	Door Panel L		2PCS
12	Door Panel R		2PCS


ASSEMBLY INSTRUCTIONS

Item No : WF318109

Description : SIDEBOARD

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

Step 1 : Attach Wood Dowel (A) and Minifix (B1) to parts (1,2,3,4,5) accordingly. Attach Metal Shelf Support (C) to Center & Side Panels (3,4,5). Attach Magnet (D) to Top Panel (1) with Screw (I). Attach Iron Plate (E) and Hinges (F) to Doors (11,12) with Screw (G,H).

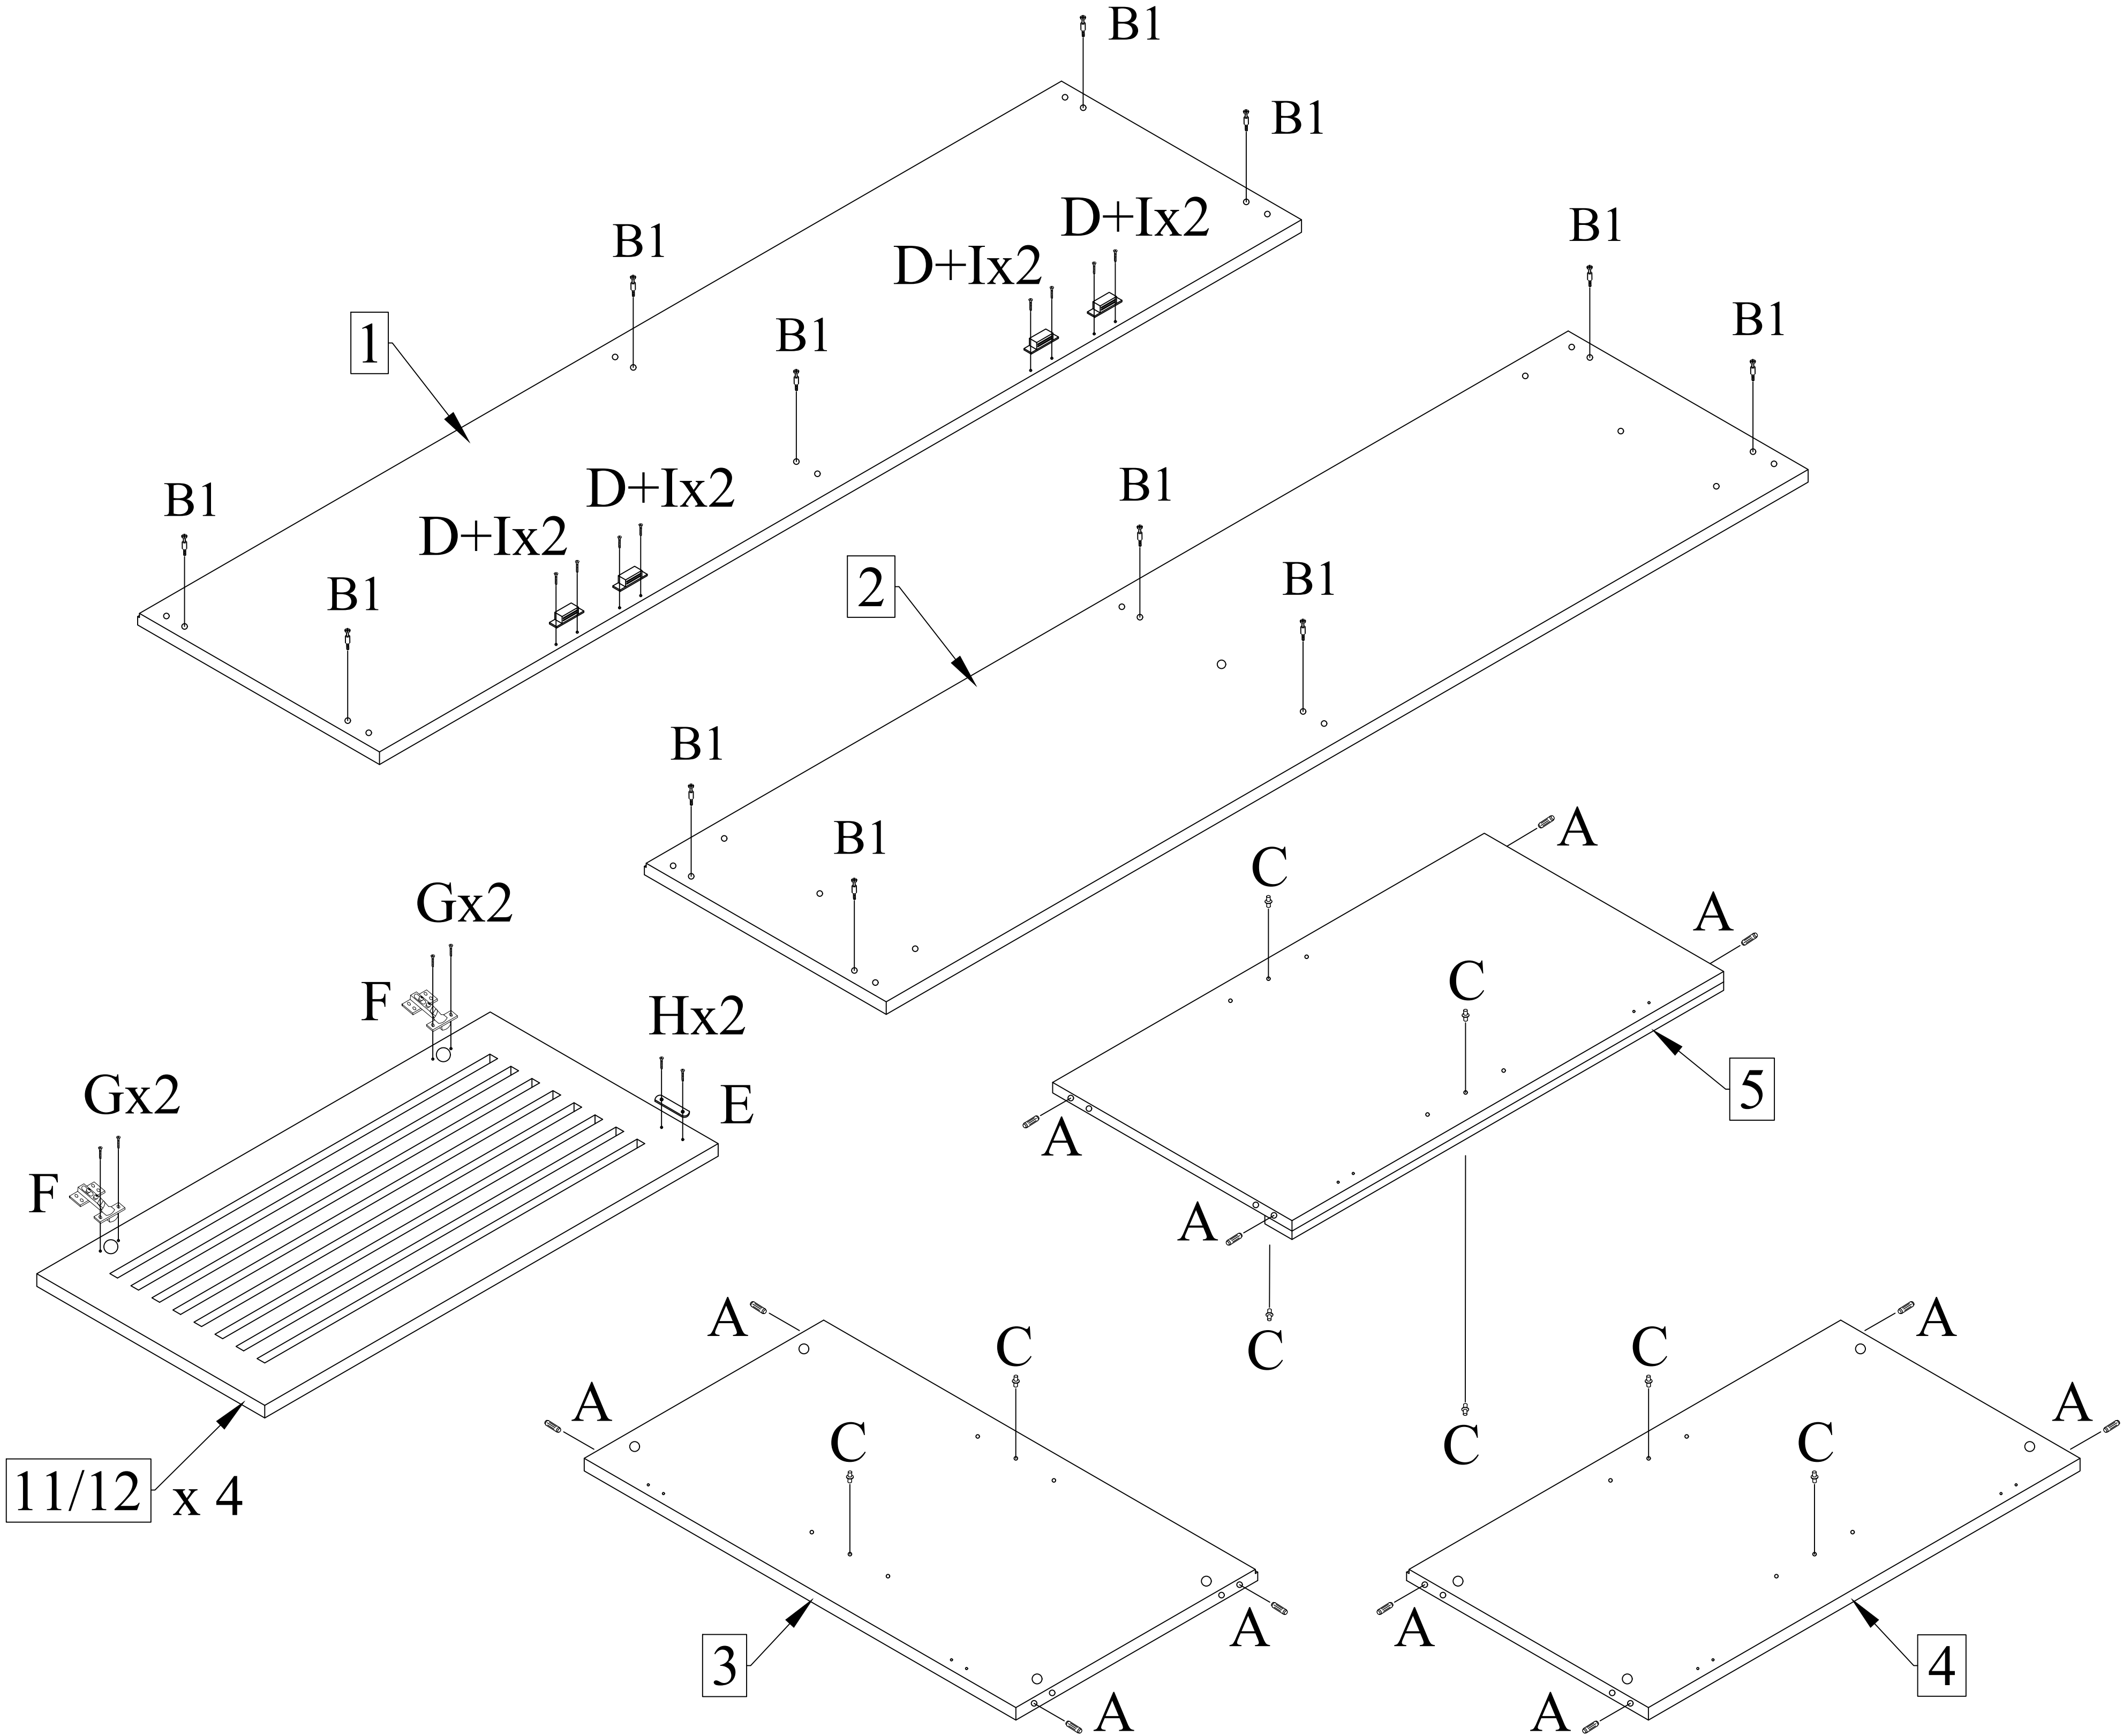

			A	Wood Dowel M8x30MM		12PCS
			B	Minifix + Cap	B1	12SETS
			C	Metal Shelf Support		8PCS
			D	Magnet		4PCS
			E	Iron Plate		4PCS
			F	Soft Close Hinges 5/8		8PCS
			G	Screw M3.5 x 16MM		16PCS
			H	Screw M3 x 12MM		8PCS
			I	Screw M3 x 16MM		8PCS


ASSEMBLY INSTRUCTIONS



Item No : WF318109

Description : SIDEBOARD


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

Step 2 : Attach Leg (9) onto Bottom Panel (2) with JCBC (J) using Allen Key (K). Twist Center Leg (10) in.

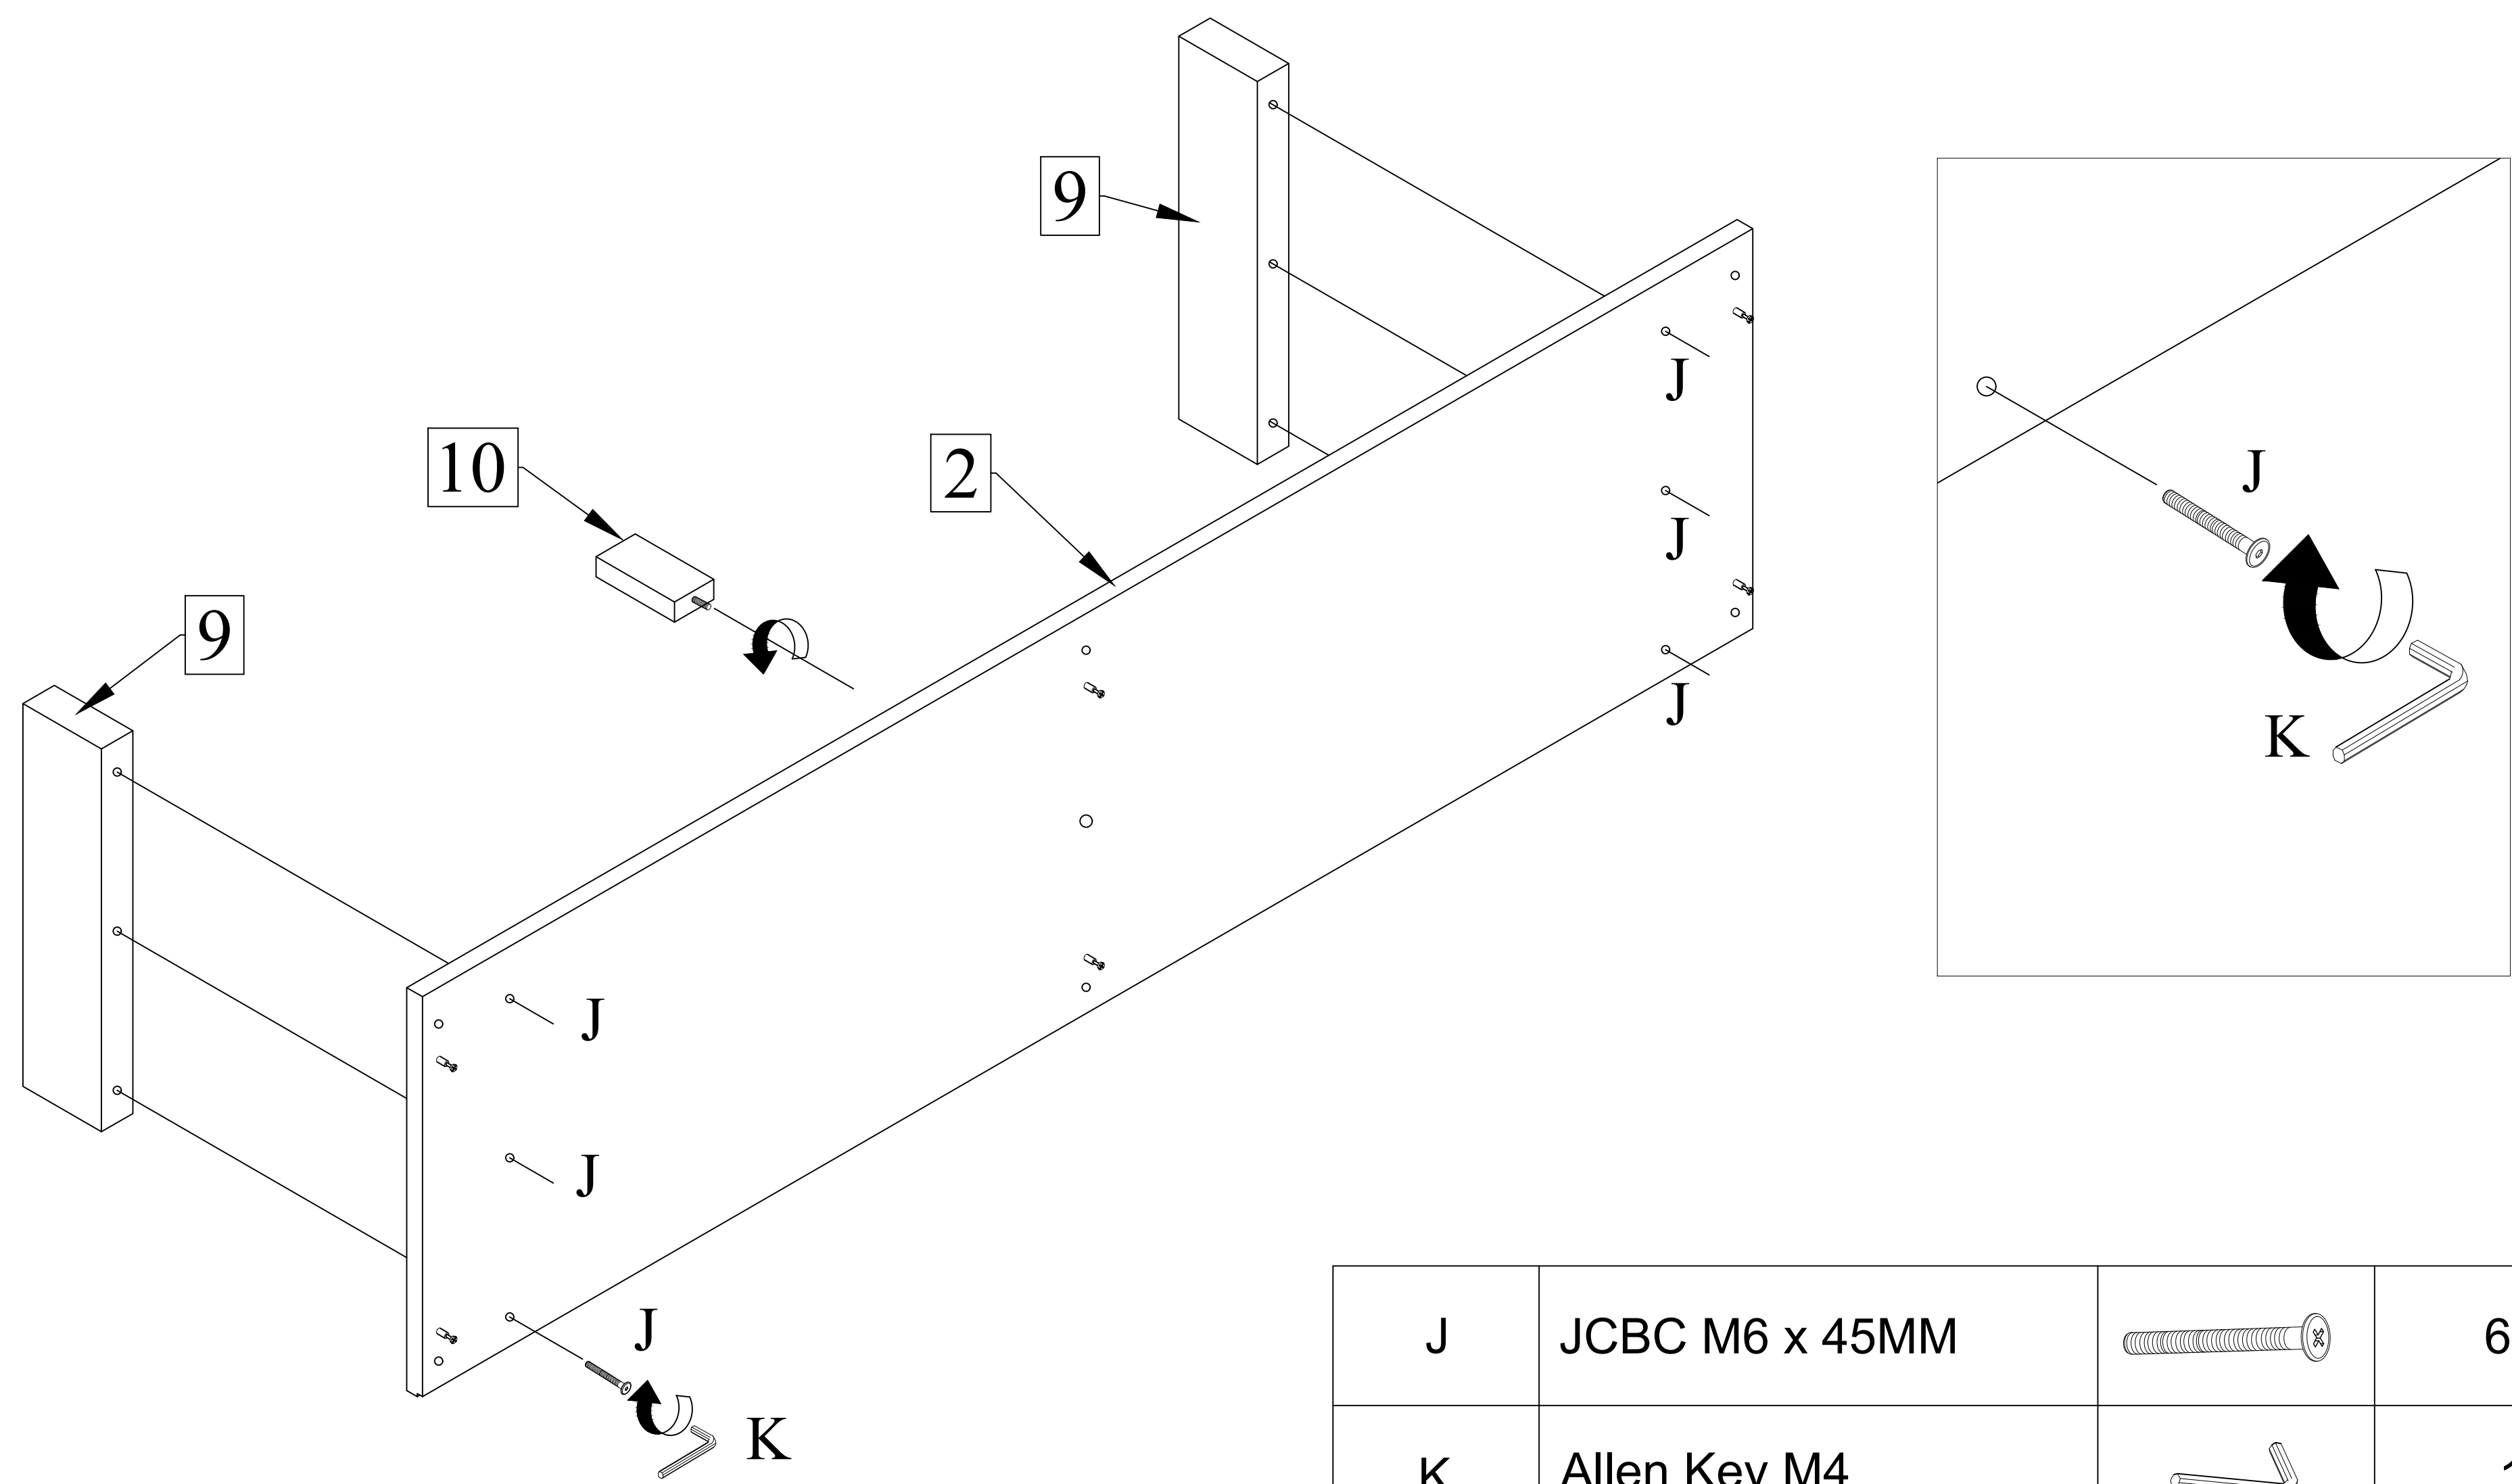

J	JCBC M6 x 45MM		6PCS
K	Allen Key M4		1PC

Step 3 : Connect Side & Center Panel (3,4,5) to Bottom Panel (2,9,10) and lock Minifix Cap (B2).

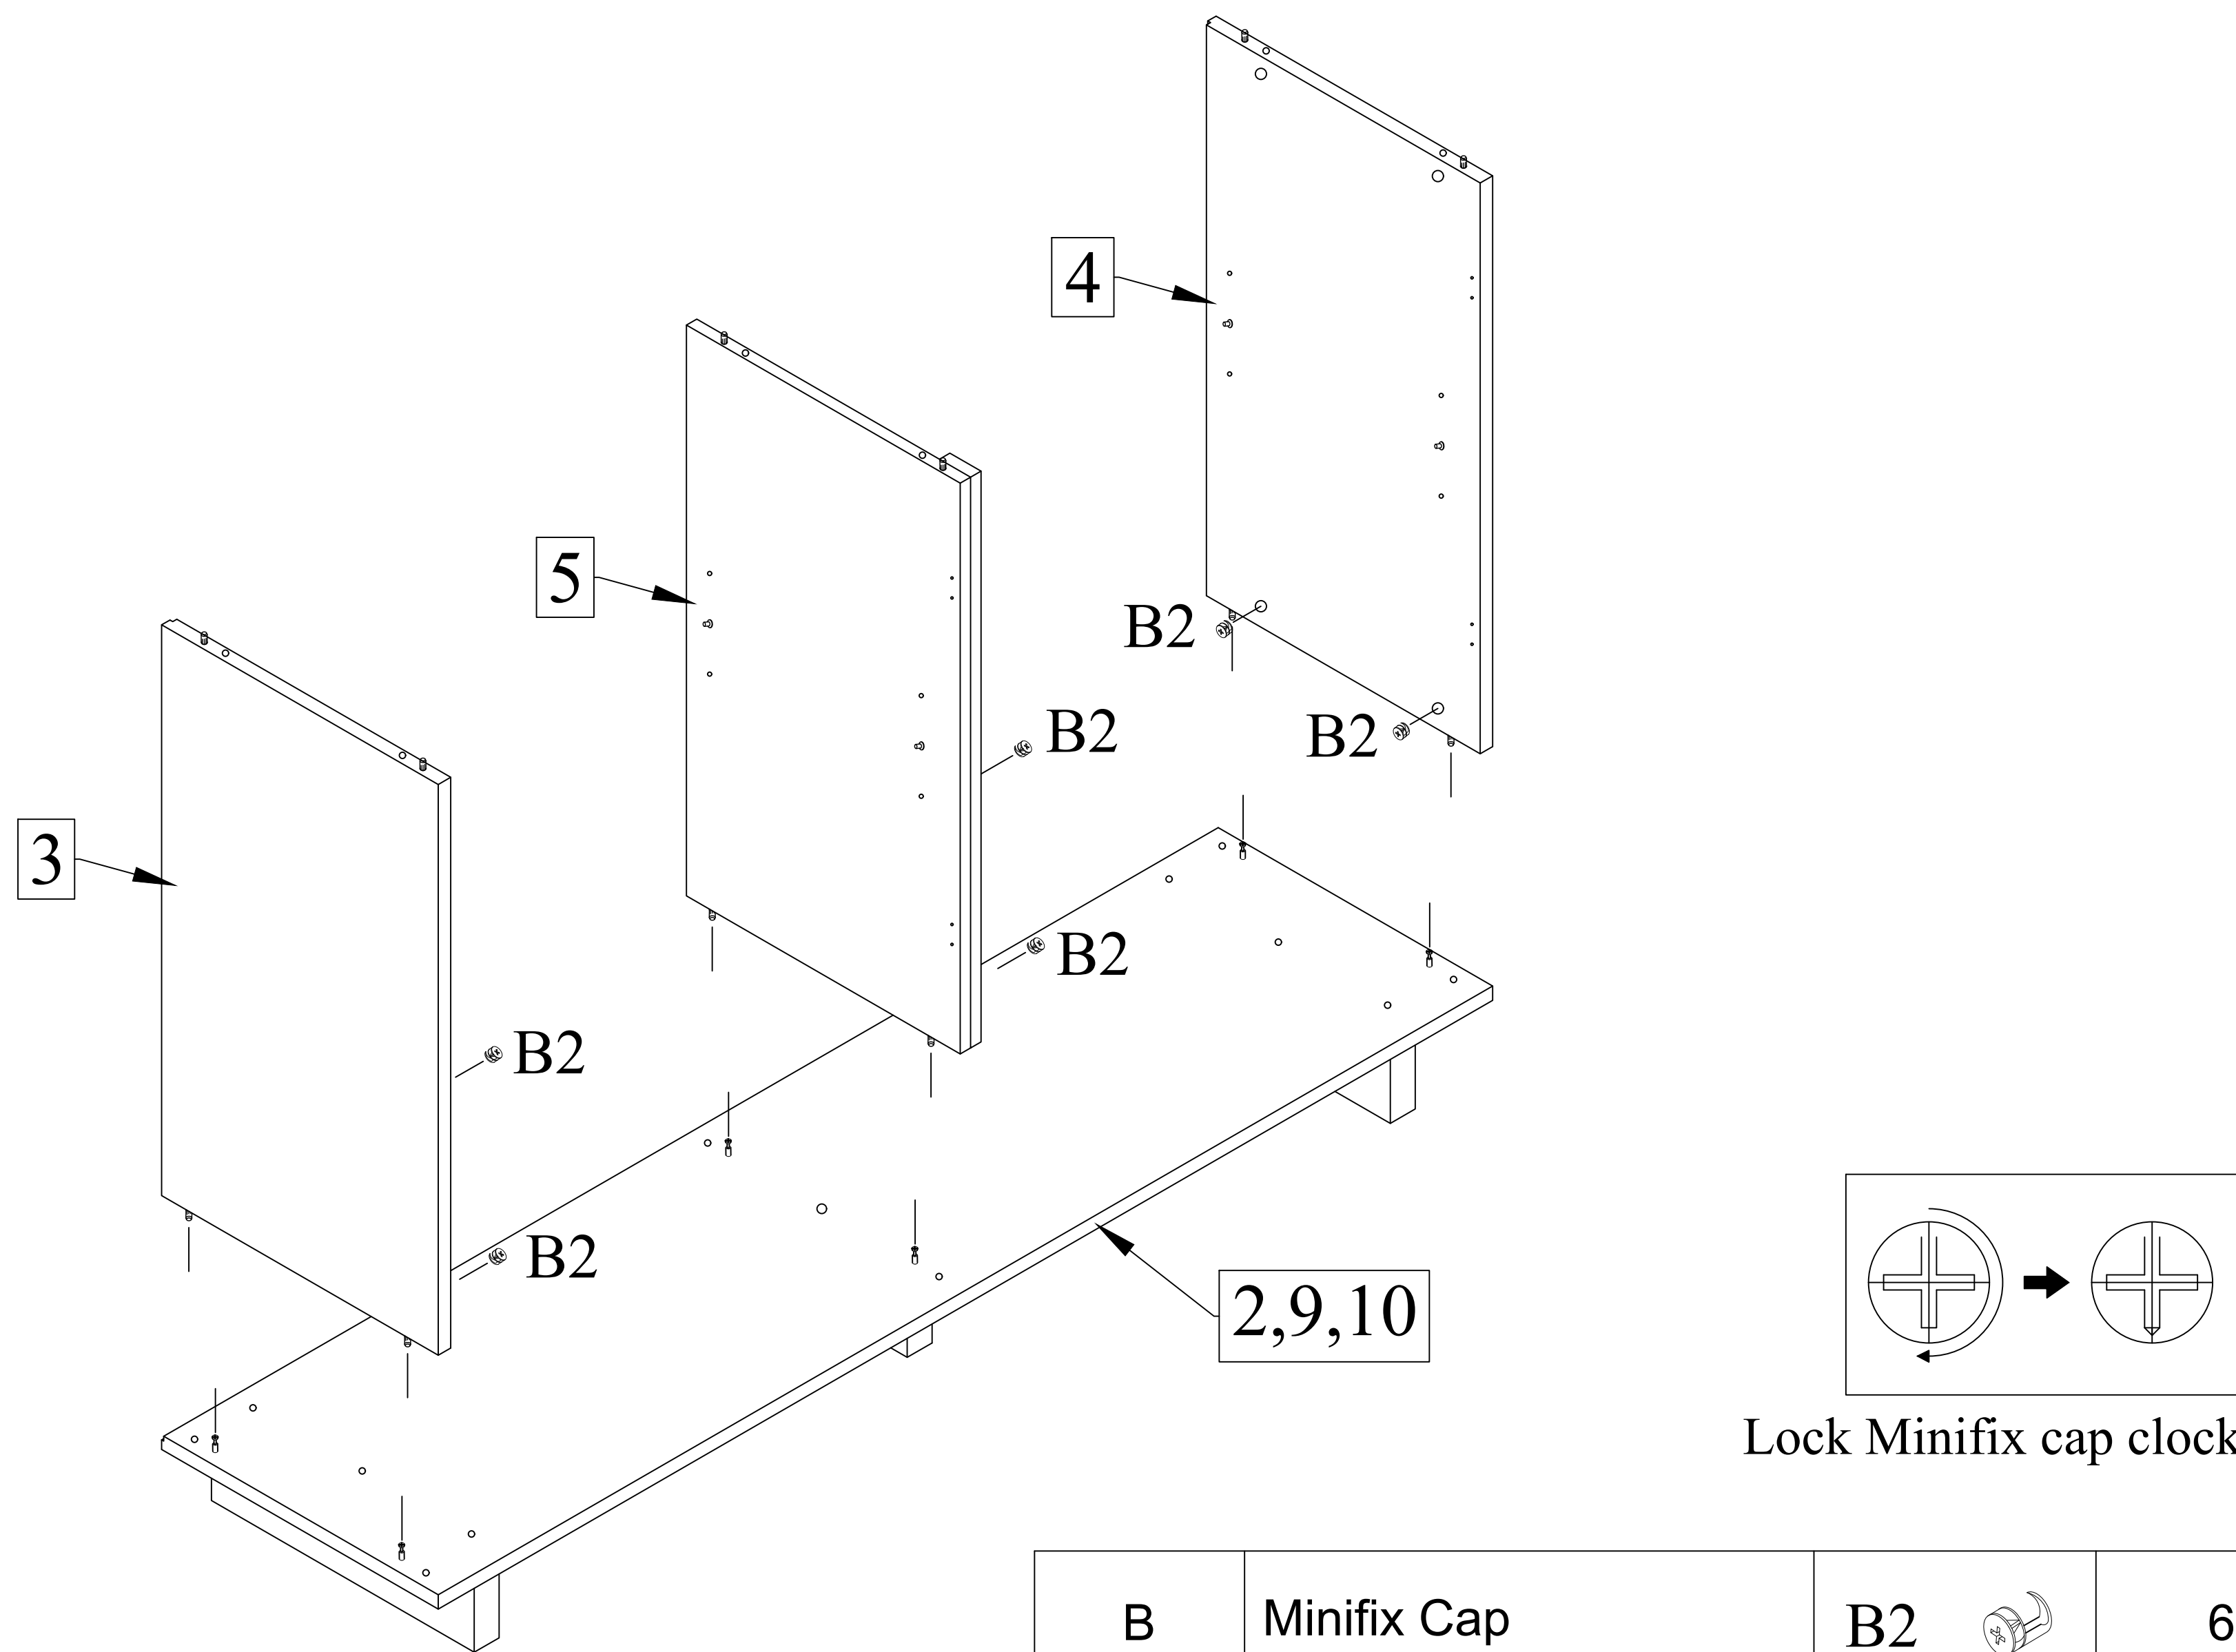

B	Minifix Cap	B2 	6PCS
---	-------------	--	------



ASSEMBLY INSTRUCTIONS

Item No : WF318109

Description : SIDEBOARD

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.



Step 4 : Attach Top Panel (1) to the assembled parts and lock Minifix Cap (B2)

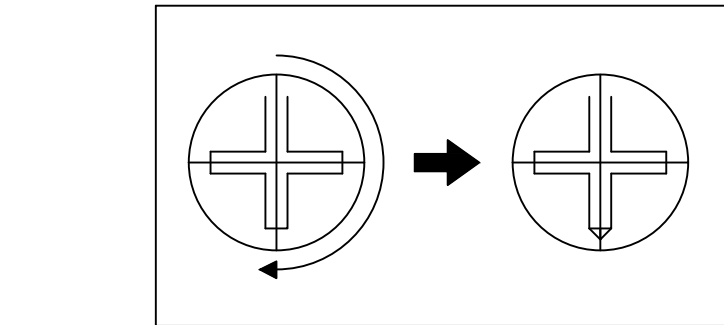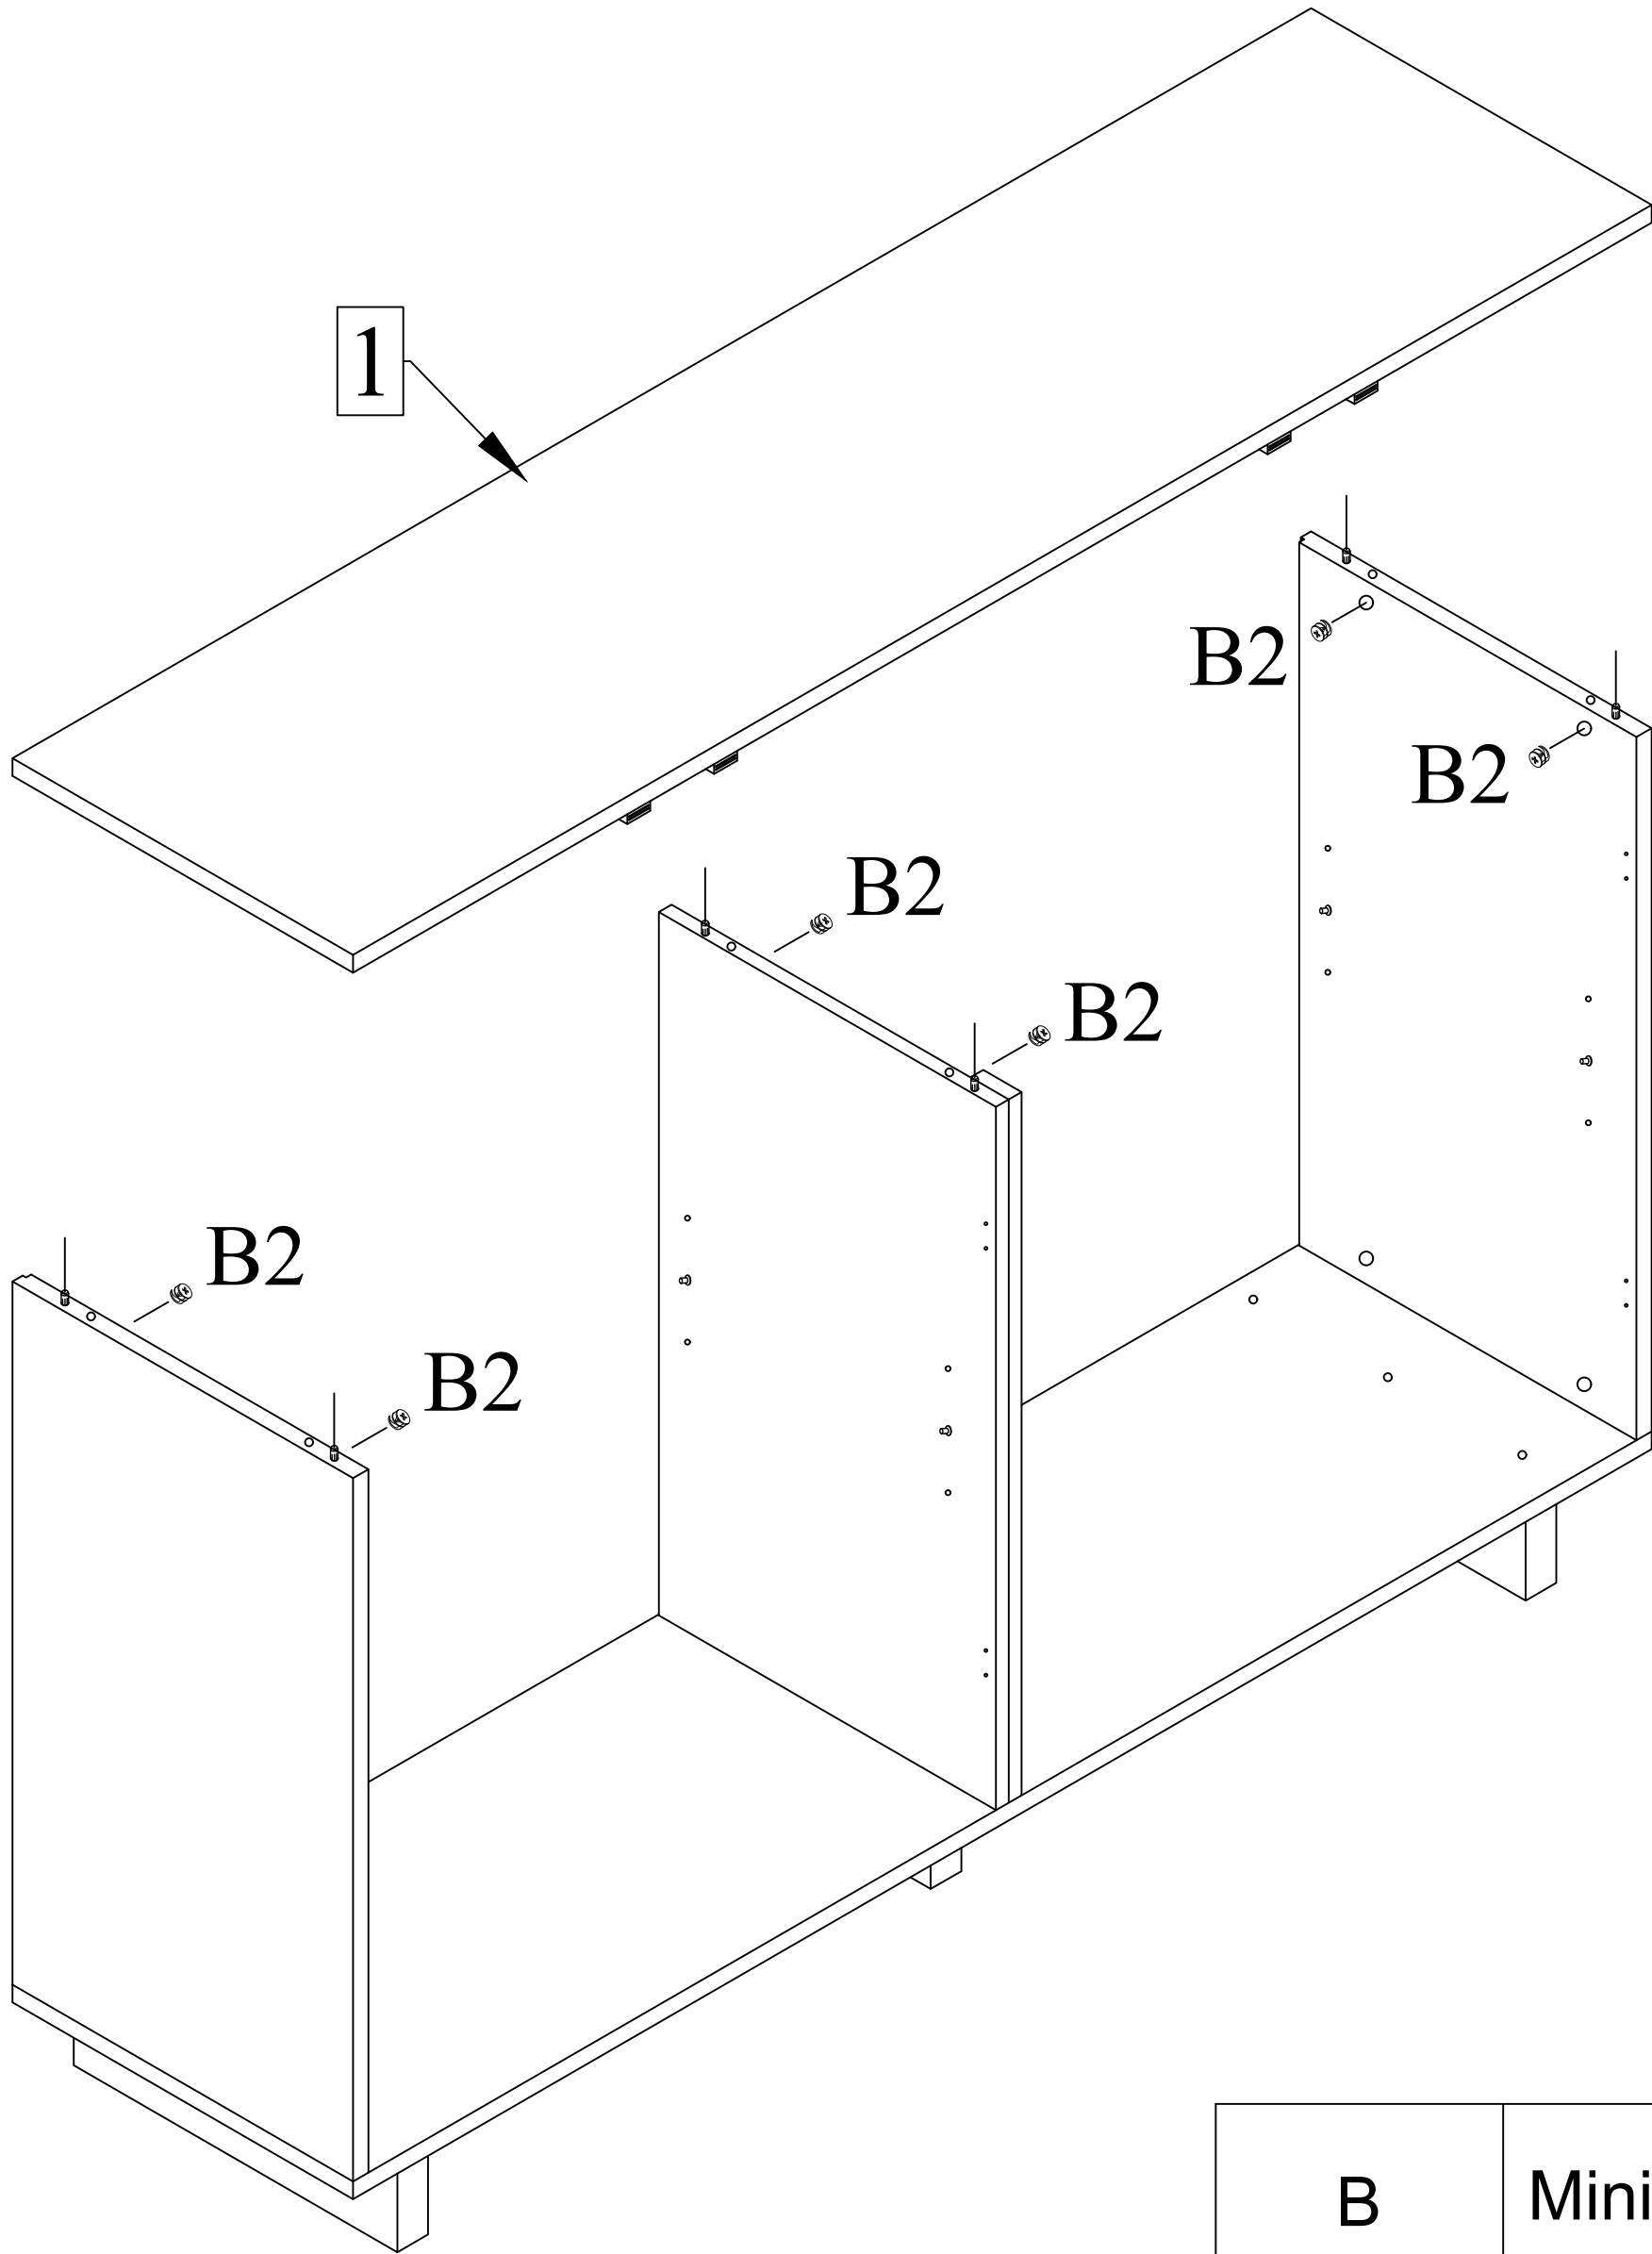



Lock Minifix cap clockwise

B	Minifix Cap	B2 	6PCS
---	-------------	--	------

Step 5 : Slot Back Panel (6) into H Connector (L) and attach it from behind using Screw (H).

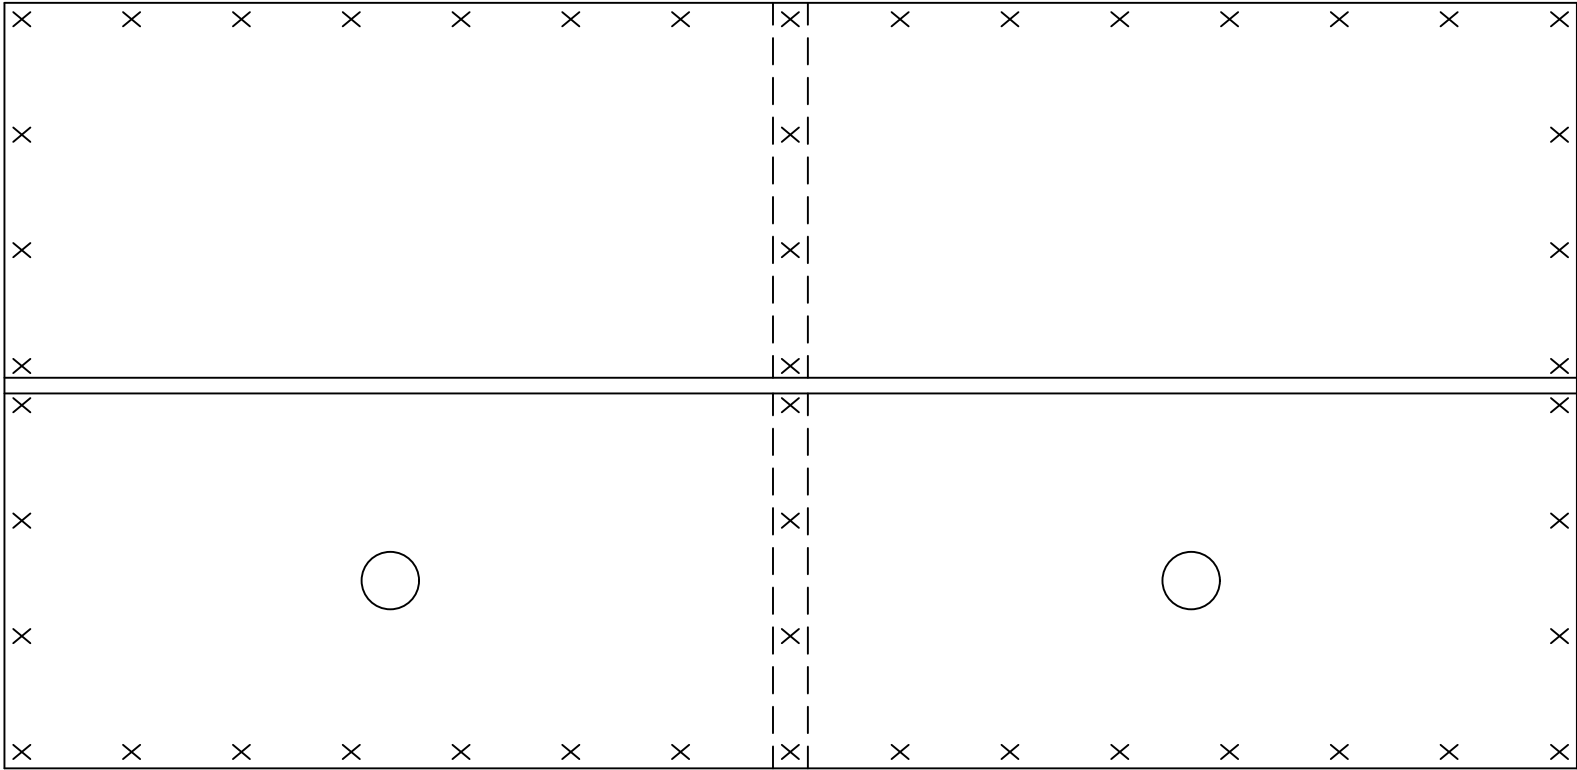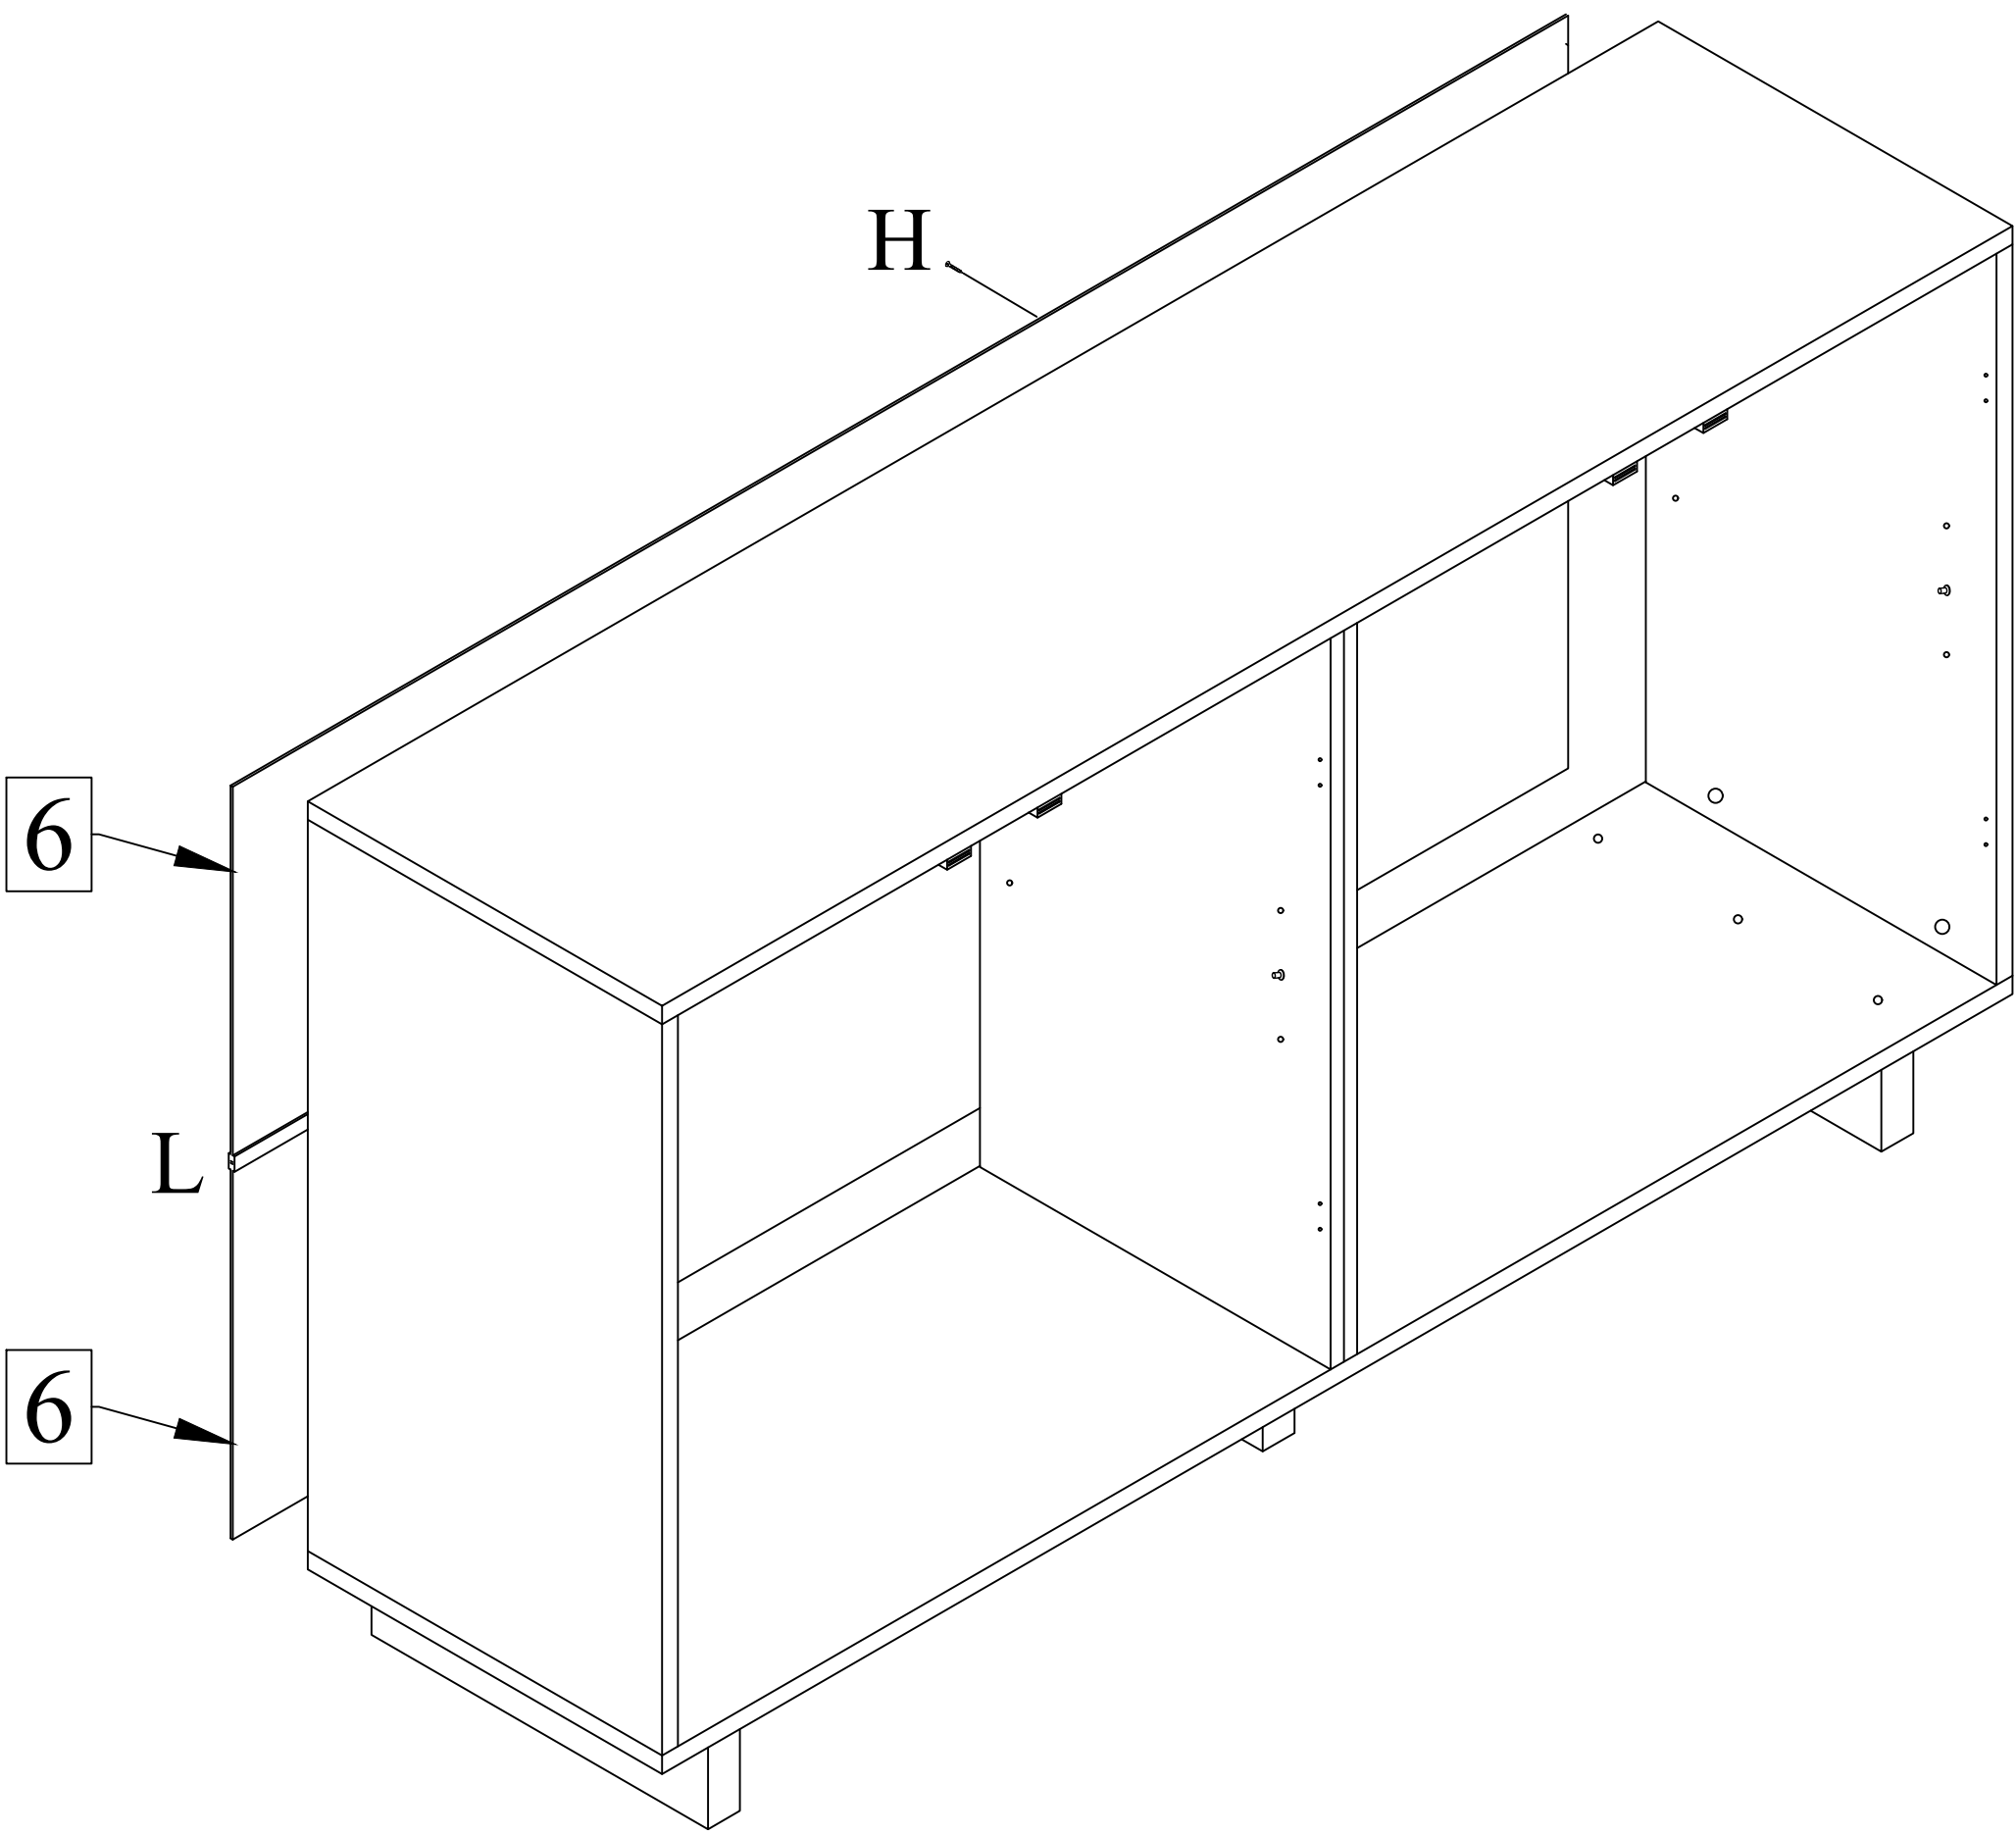

Guidance of screw array

H	Screw M3 x 12MM		48PCS
L	H Connector		1PC


ASSEMBLY INSTRUCTIONS

Item No : WF318109




Description : SIDEBOARD

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.




Step 6 : Insert Shelves (7,8). Please note the length of the shelves, bigger shelf (8) should be on right side from front view.

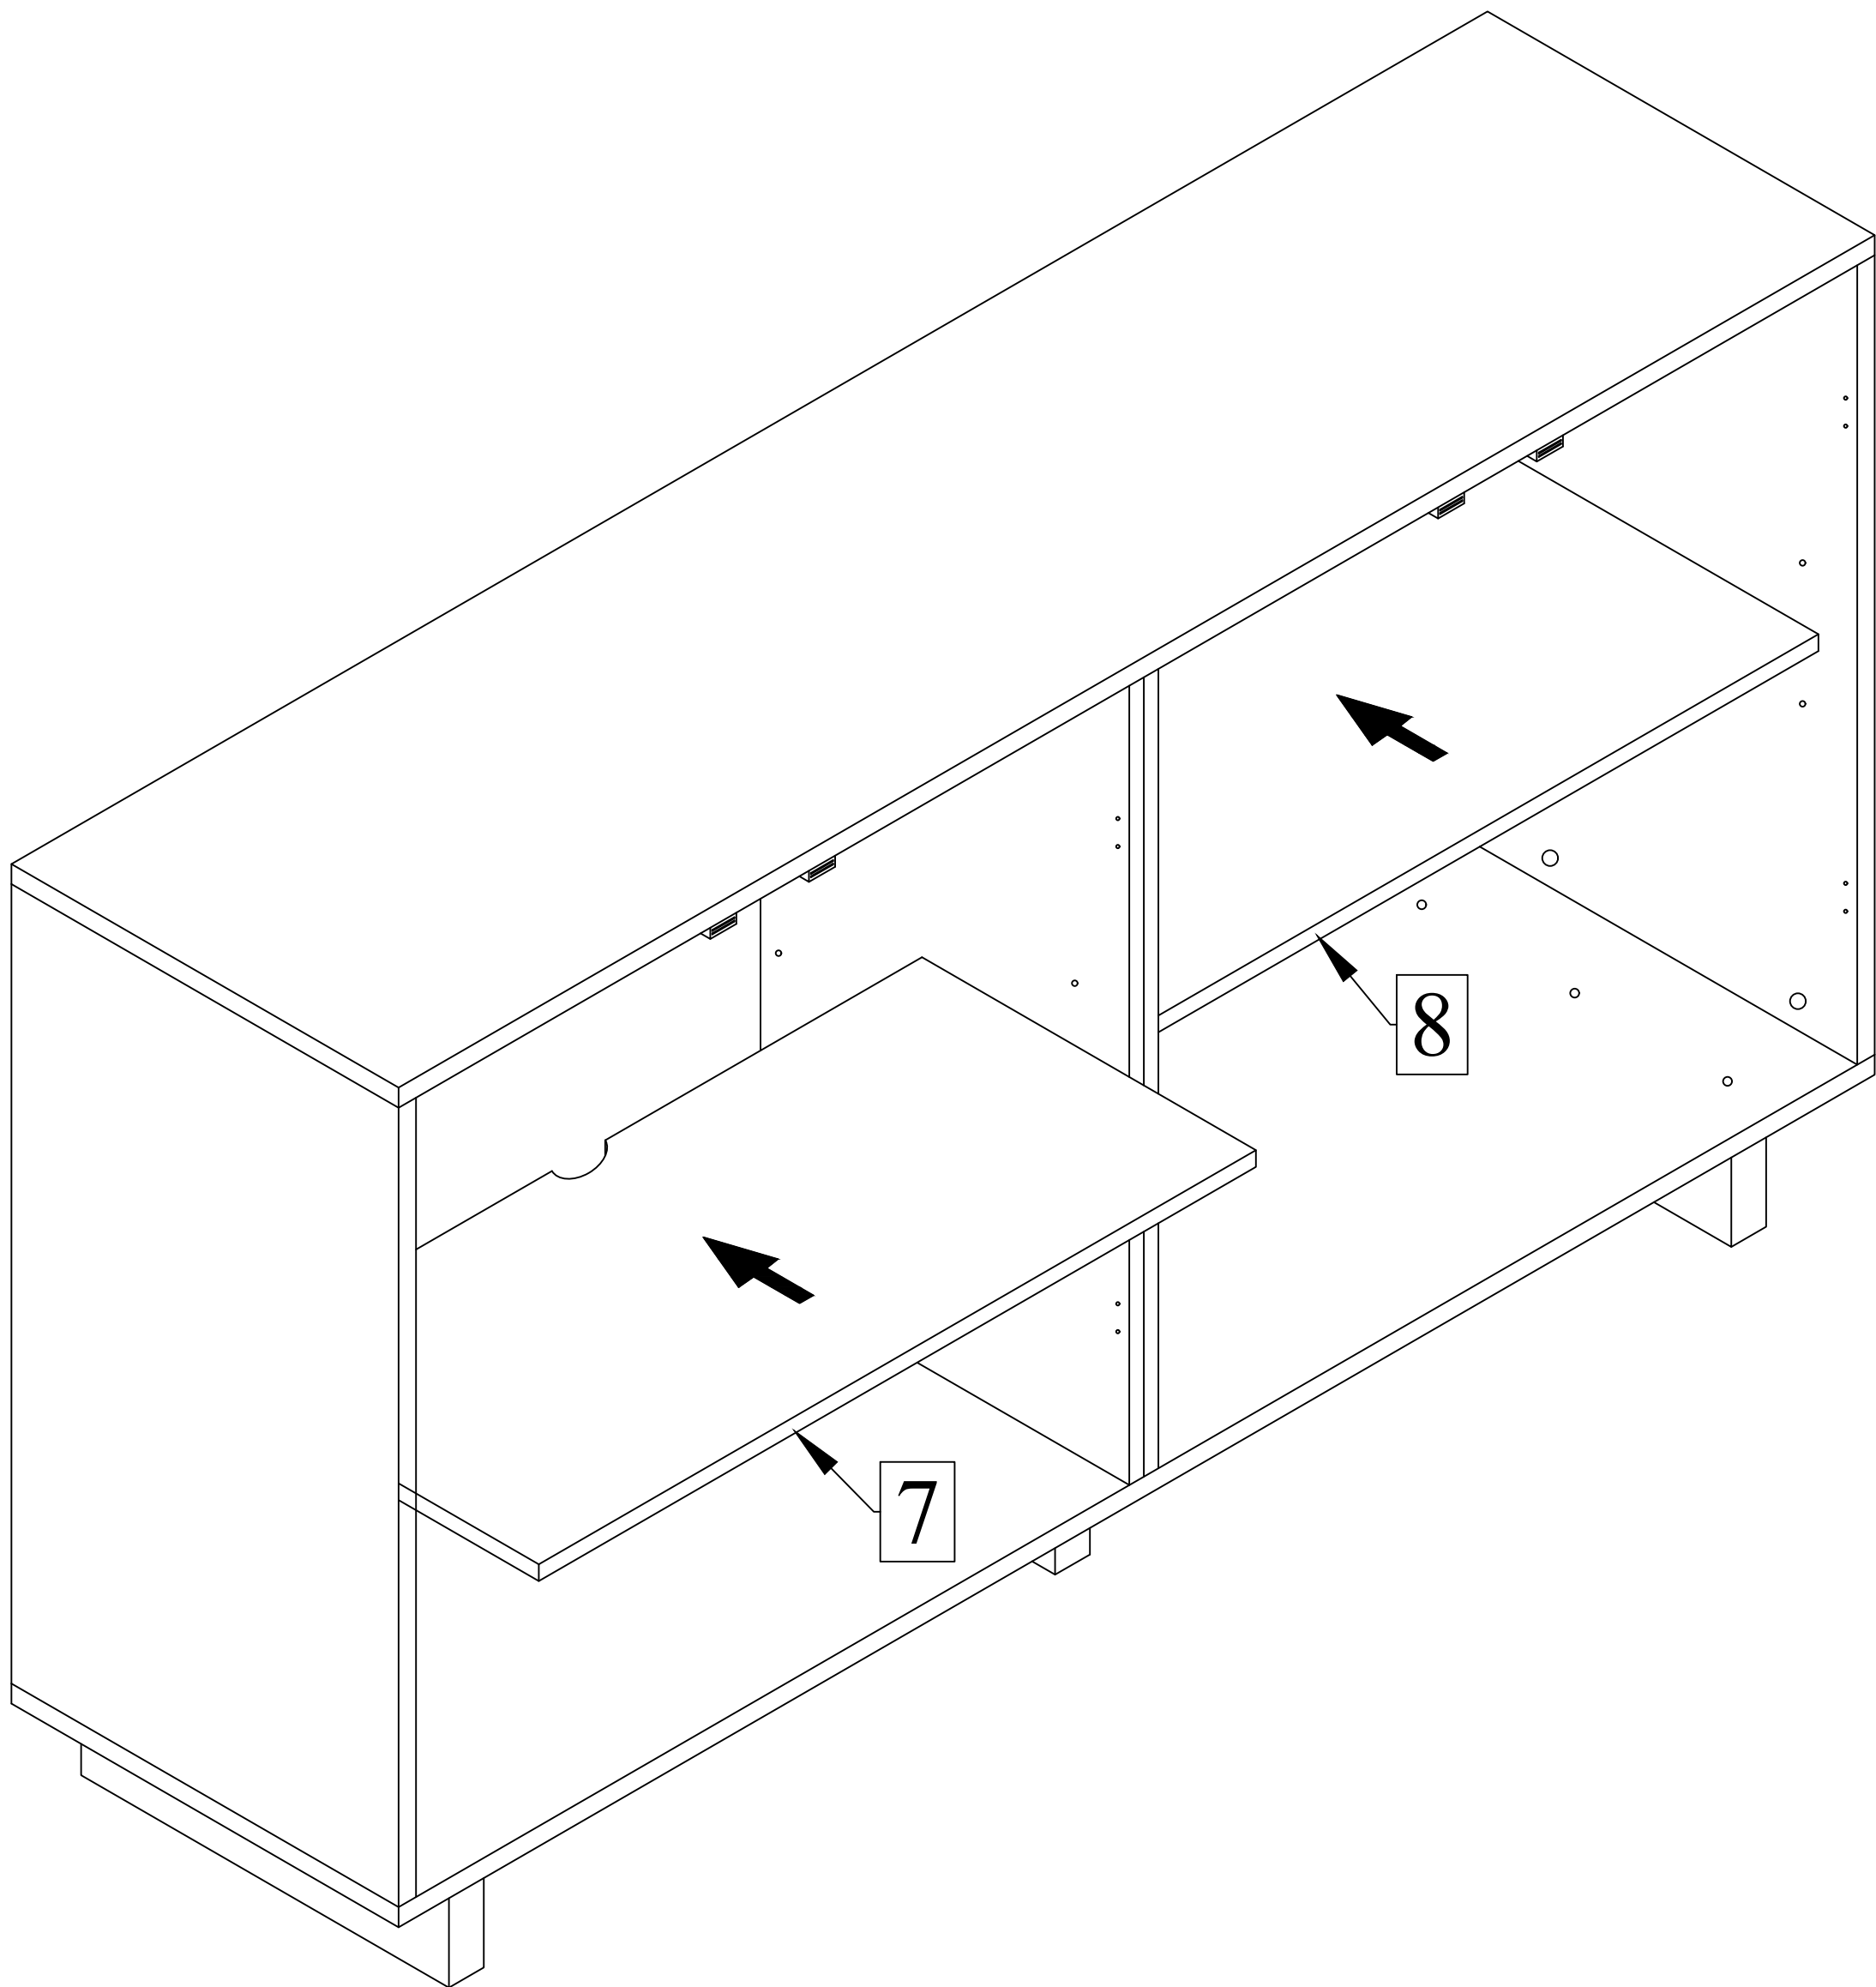

Step 7 : Attach Doors (11,12) using Screw (G). Completed Assembly.

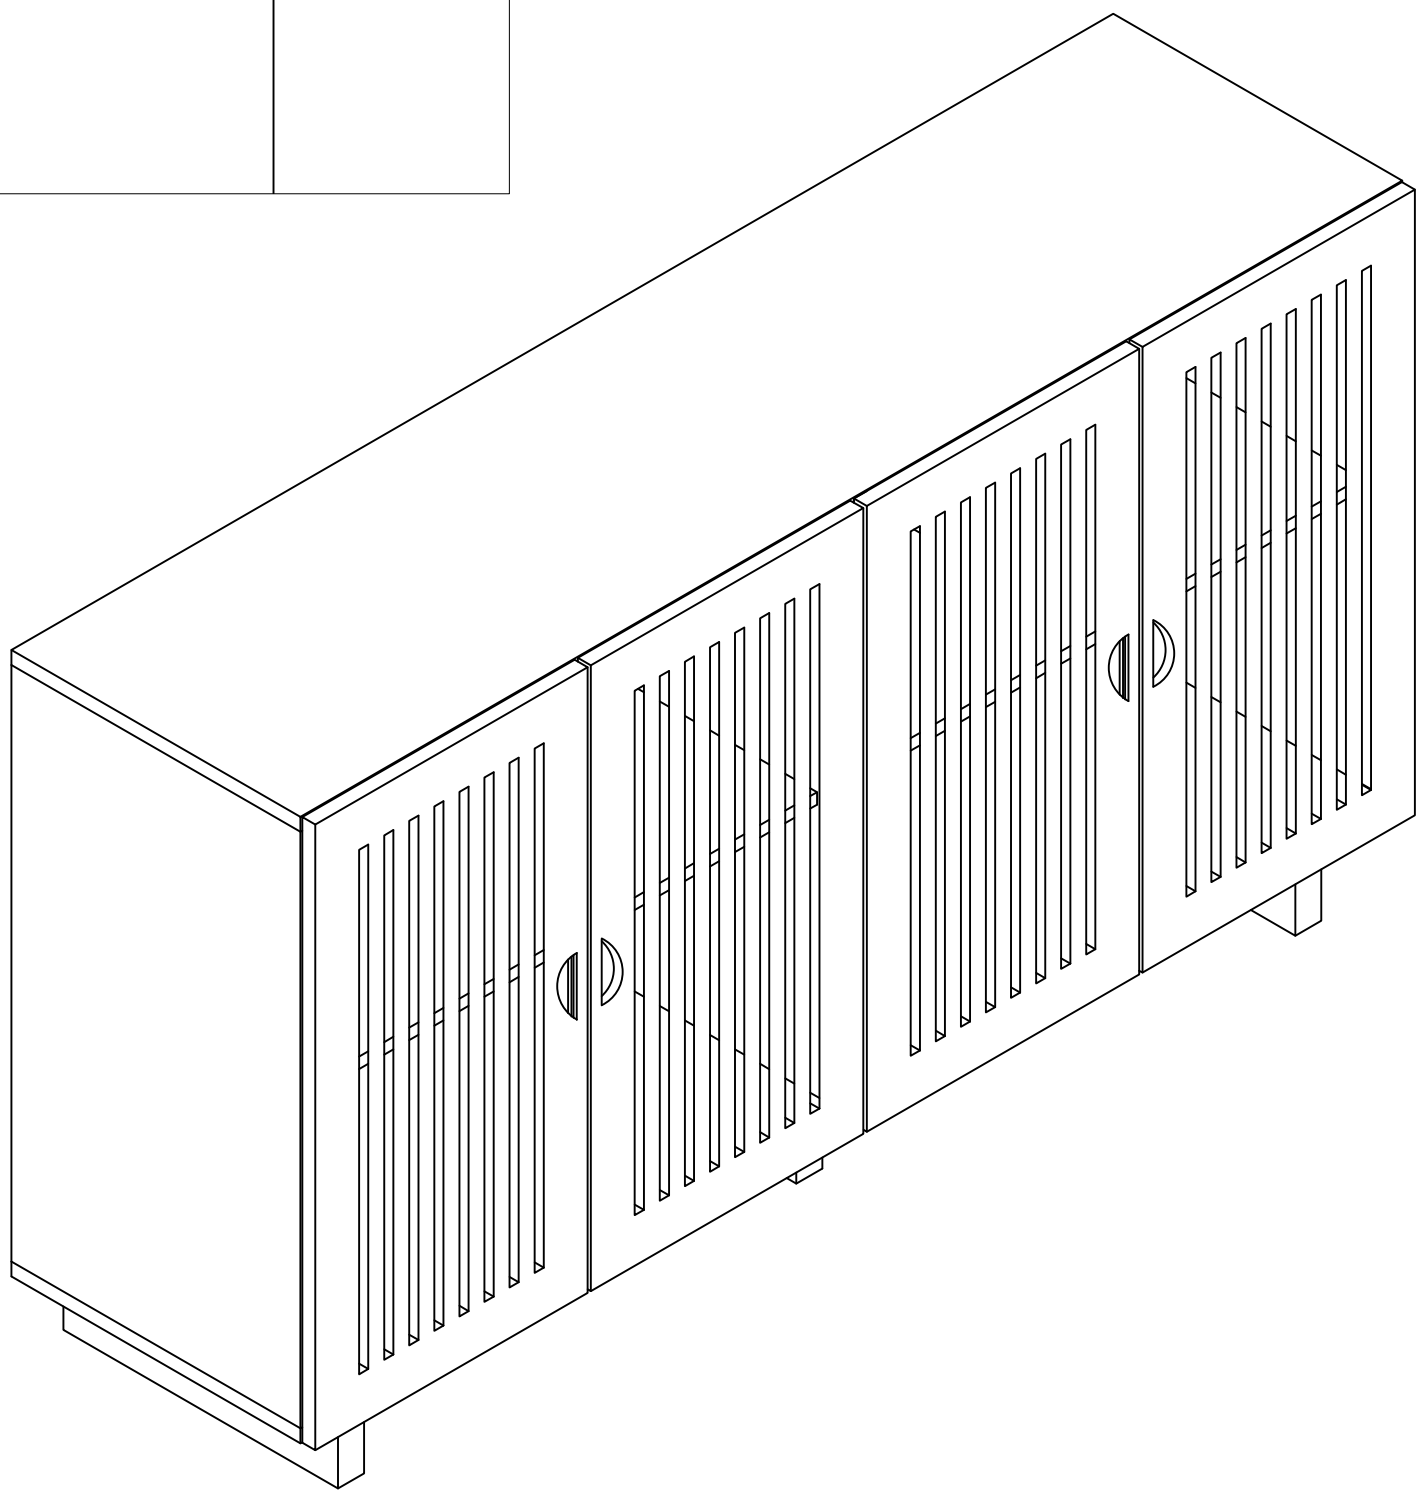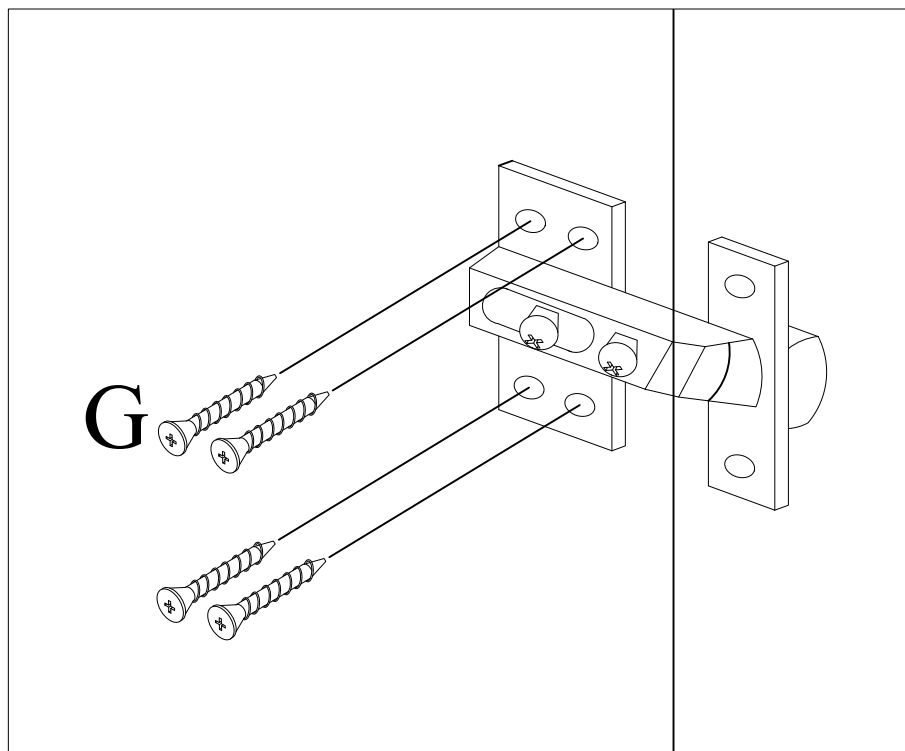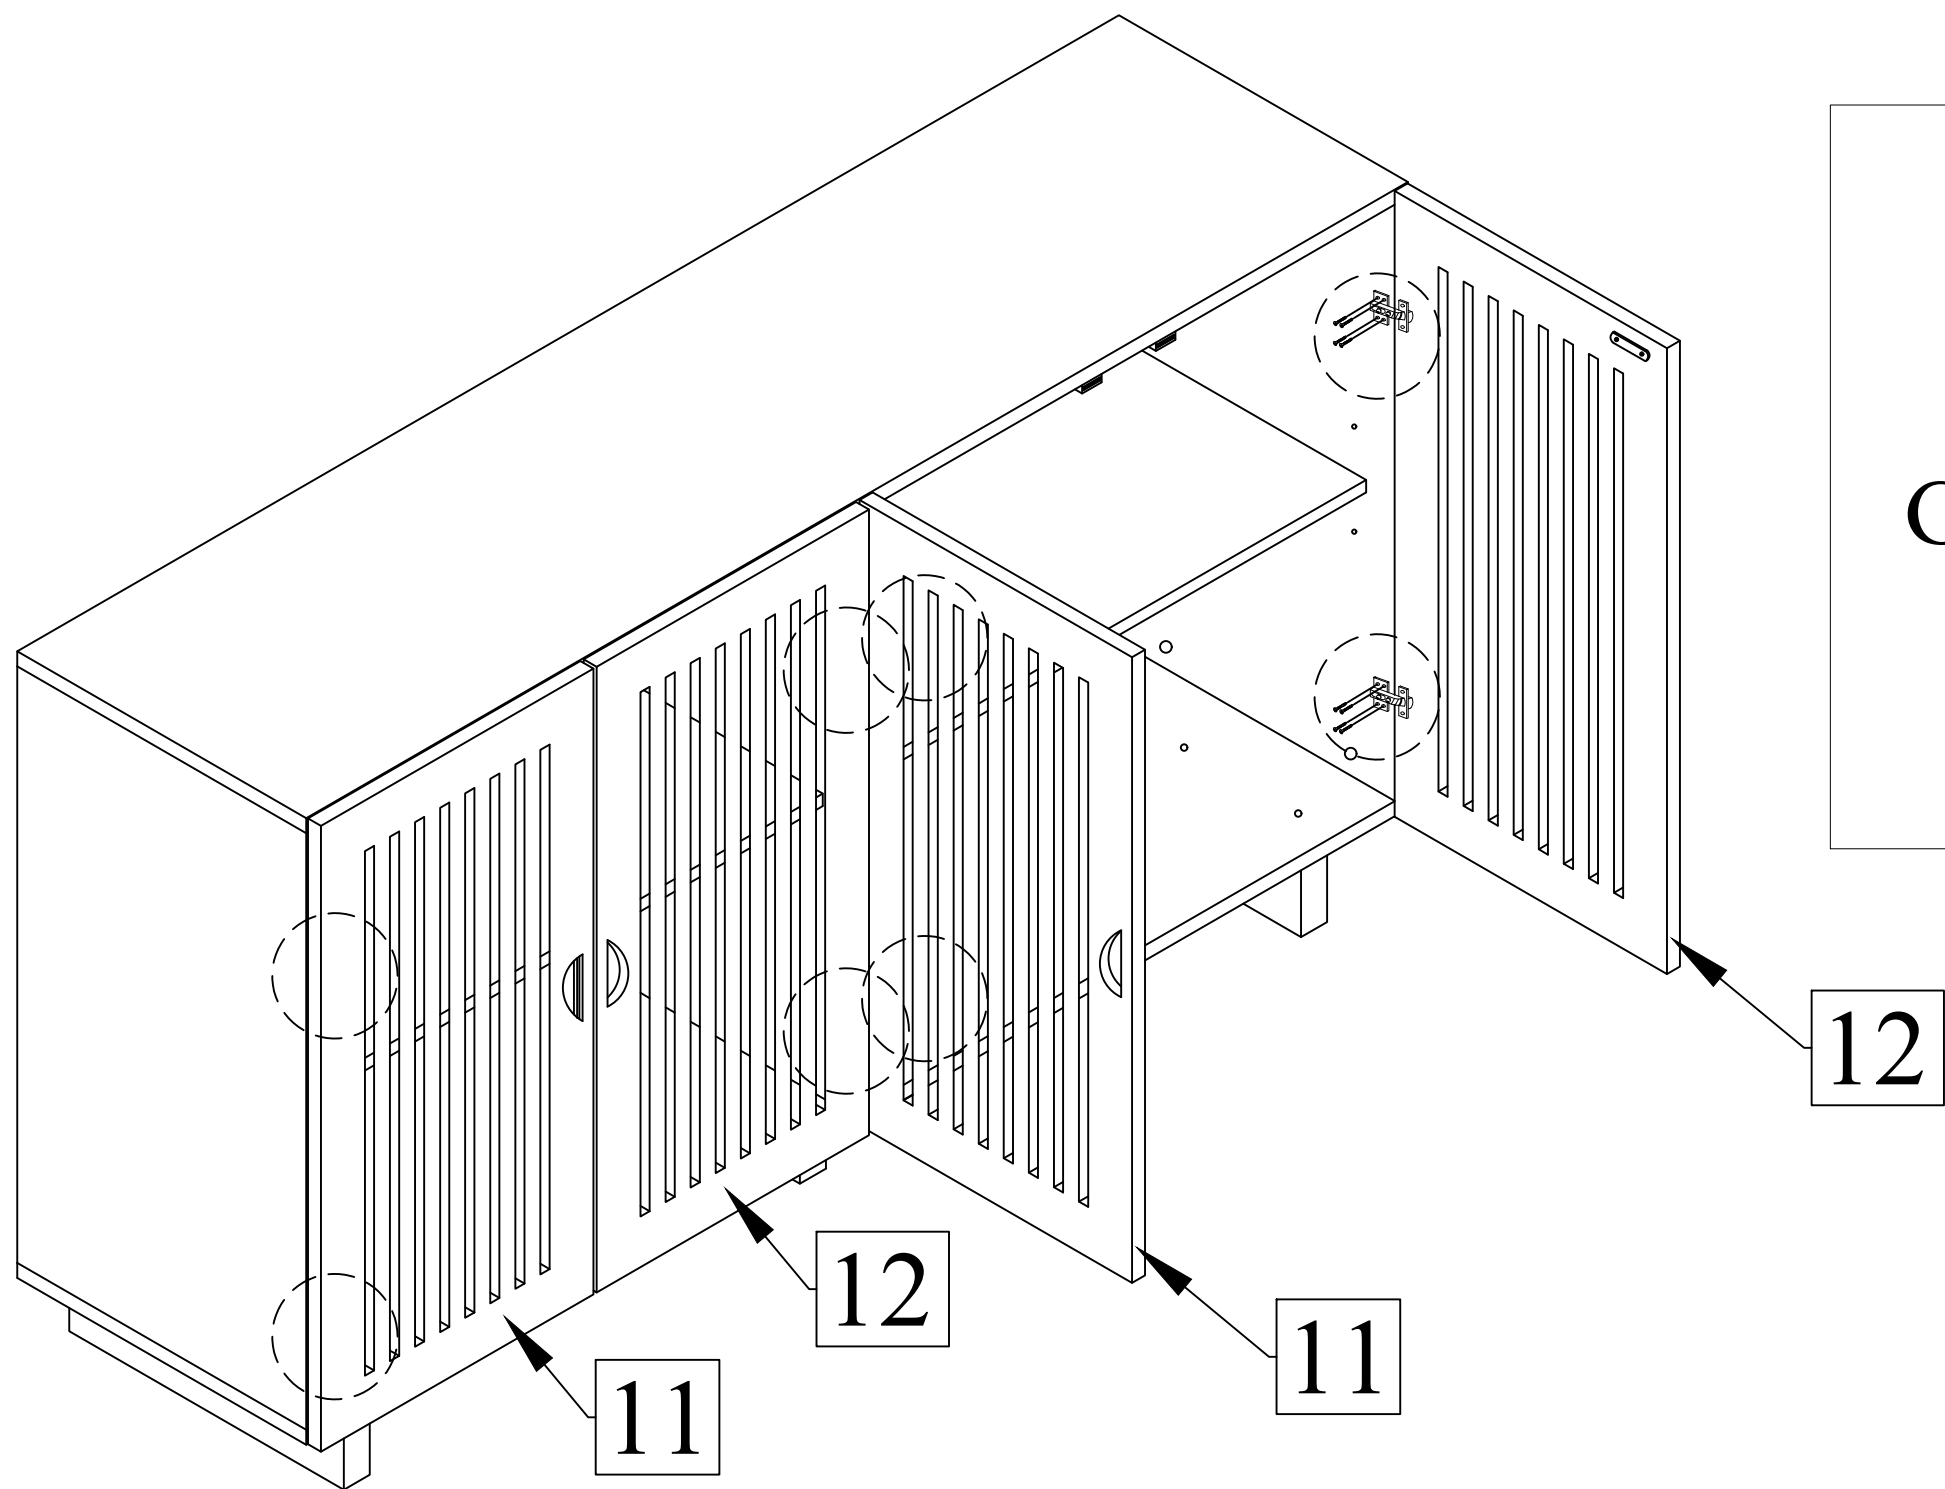


Door Adjustment

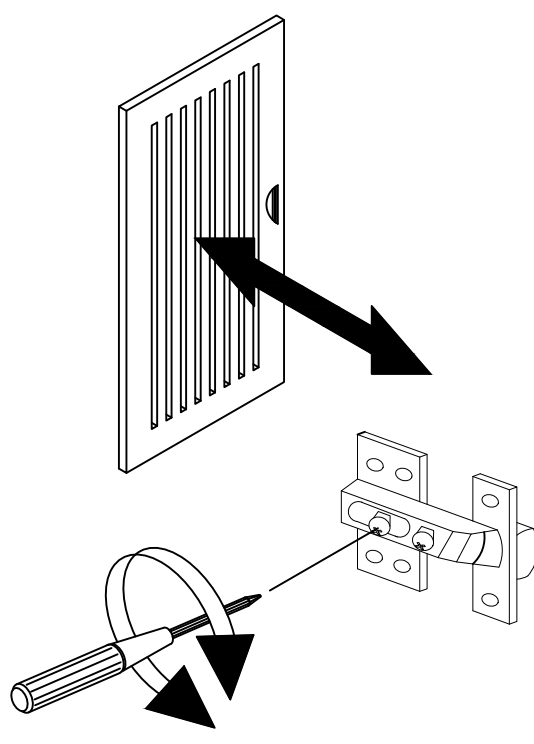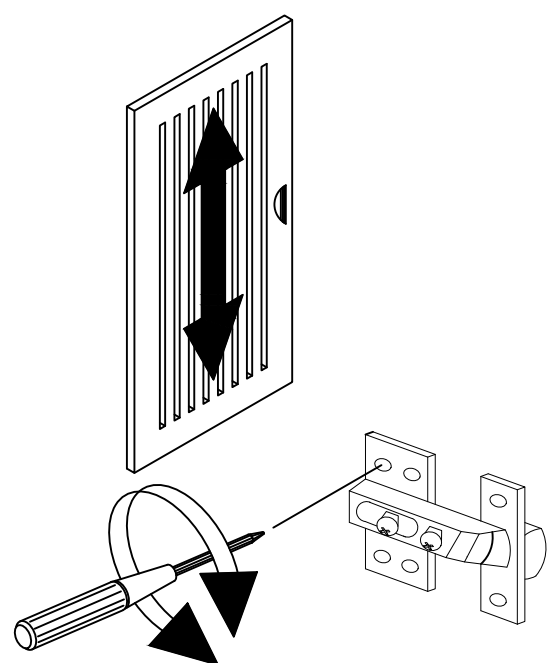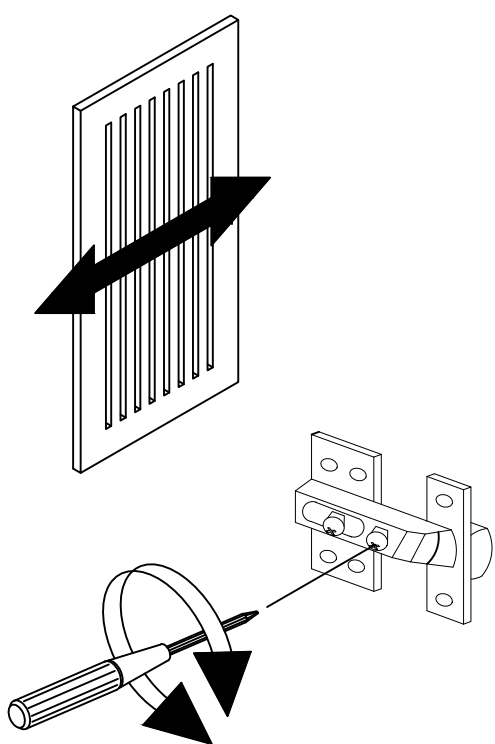

G

Screw M3.5 x 16MM



32PCS