




AKS AURA

Offers More, Ask Less

INSTRUCTIONS

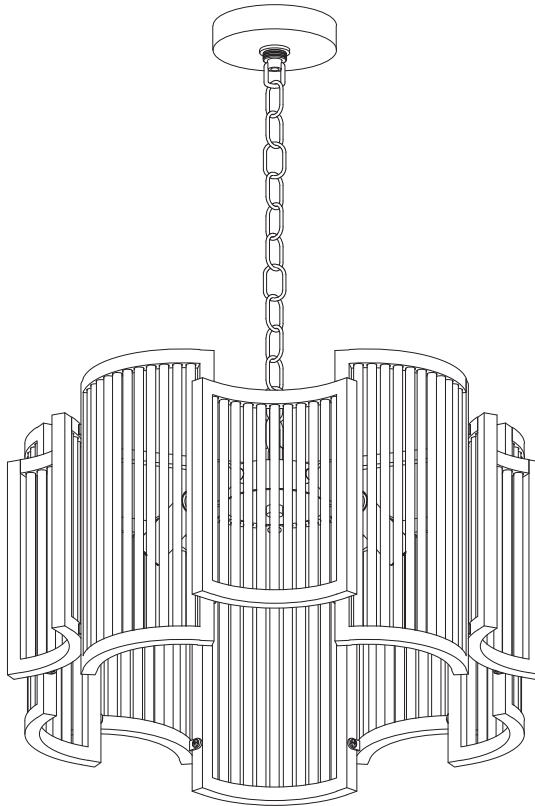

MADE IN CHINA

Oaks Aura <https://www.OaksAura.com>

**PLEASE READ INSTRUCTIONS IN THEIR ENTIRETY
PRIOR TO ASSEMBLY AND INSTALLATION.**

SAFETY PRECAUTIONS:


- a. Please carefully examine the cord, lamp holder, switch, and all other parts for damages. If any damage or defect is found, please return this fixture.
- b. This fixture use E12 Medium Bulbs Max. 40W. To avoid the risk of fire, do not use bulbs that exceed the 40W limit. We suggest using LED Bulbs for lower energy consumption and longer life span.
- c. Installing this fixture requires connecting electric wires, these connections must be in accordance with local and National Electrical Code(NEC) standards, we suggest hiring a licensed electrician to do this.
- d. Recommended for indoor use only, please keep this fixture away from water or moisture.
- e. Wipe clean using a soft, dry cloth or static duster. Always avoid the use of harsh chemicals and abrasives to clean fixture as they may damage the finish.

**ASSEMBLY & INSTALLATION GUIDE
ITEMS YOU NEED**

- a. Ladder
- b. Screwdriver
- c. Wire cutter/stripper
- d. Insulation tape
- e. 5 x E12 Bulbs (<40W)

GETTING STARTED


- 1. Carefully unpack all accessories and parts.
- 2. Place all components on a clean, flat and soft surface to prevent parts from getting scratched.
- 3. Shut off your main electrical supply at the fuse box or circuit breaker. Just turning off the light switch is not sufficient to prevent electrical shock!

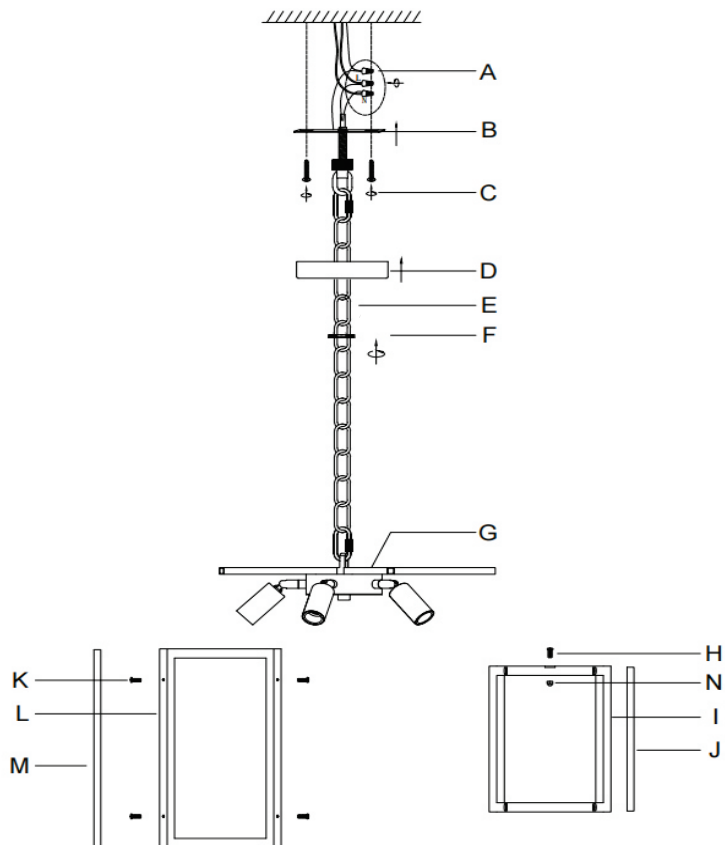

A. Plastic Wire Connector x3
 B. Mounting Bracket x1
 C. Bracket Screws x2
 D. Ceiling Canopy x1
 E. Chain x1
 F. Circle Ring x1
 G. Lamp Frame x1

H.K. Screws x5
 I.L. Iron Frame x5
 J. Crystal Stick A x55
 M. Crystal Stick B x55
 N. Nut


1

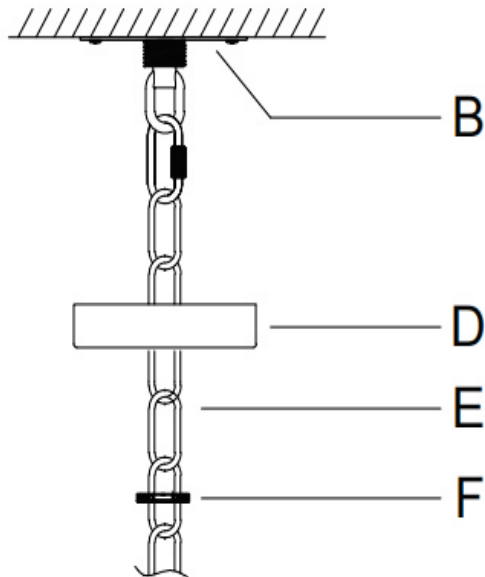

Step 1.

- 1.Remove the Mounting Bracket(B)from Ceiling Canopy(D)by loosening Circle Ring(F).
- 2.Secure the Mounting Bracket(B) to the Ceiling Junction Box with Screws(C).


2

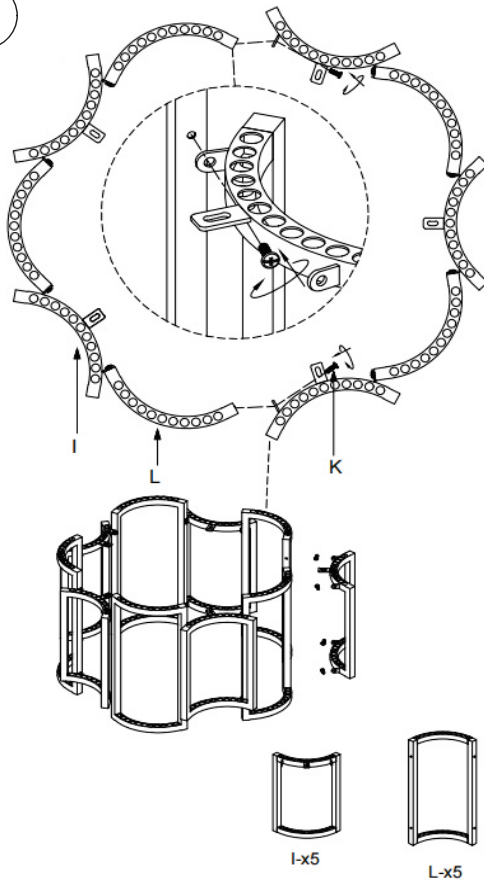

Step 2.

Pass the screws(K) through the holes in the iron frame (I) and fix them on the iron frame(L). Connect them together in turn according to the directions shown in the figure. Pay attention to the upward facing of the holes in the iron frame(I)(L) when installing.



3

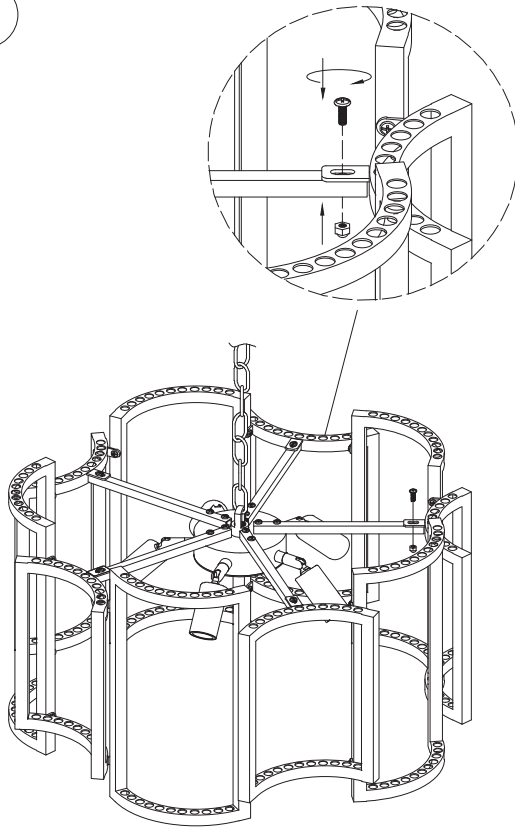

Step 3.

Fix the Lamp Frame(G) on the Iron Frame(I)
with Screws(H) and Nuts(N).

4

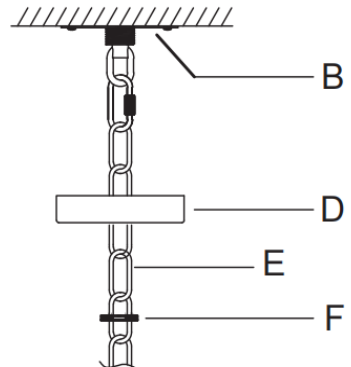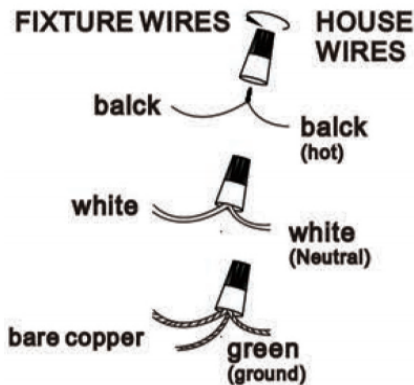


Step 4.

1. Connect black fixture wire to black supply wire to white supply wire using wire caps(provided). Wrap connection with electrical tape.
2. Connect ground wire from canopy with ground wire from Junction box using a wire cap. Wrap with electrical tape for a more secure connection. If house does not have ground wire, attach grounding wire to green grounding screw marked GND.
3. Tuck all wires carefully into the J-Box.
4. Poaltion Canopy(D) over Mounting Bracket(C) and tighten with Circle Ring(F) (reversal step 1).

WARNING:

Never connect grounding wire to black or white power supply wires. It is imperative that the outlet box in your home be properly grounded.

5

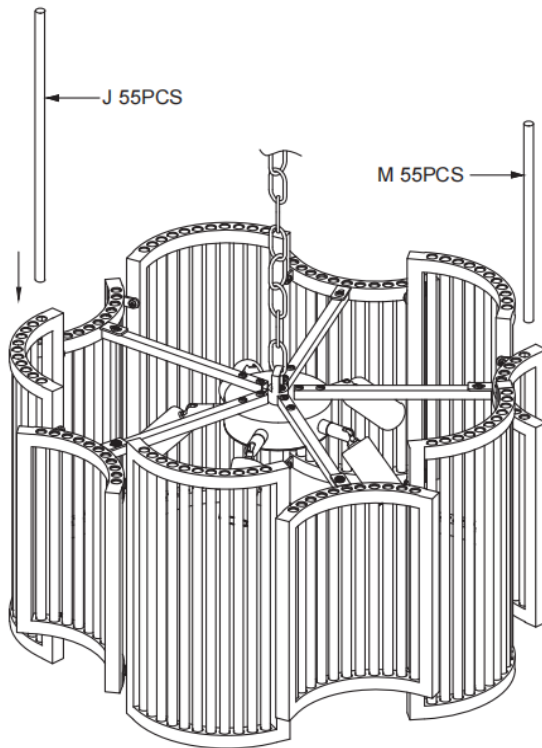

Step 5.
Install the Crystal Stick(J)(M) in the Iron Frame(I)(L).