


ASSEMBLY INSTRUCTIONS

ITEM NO.WF288301



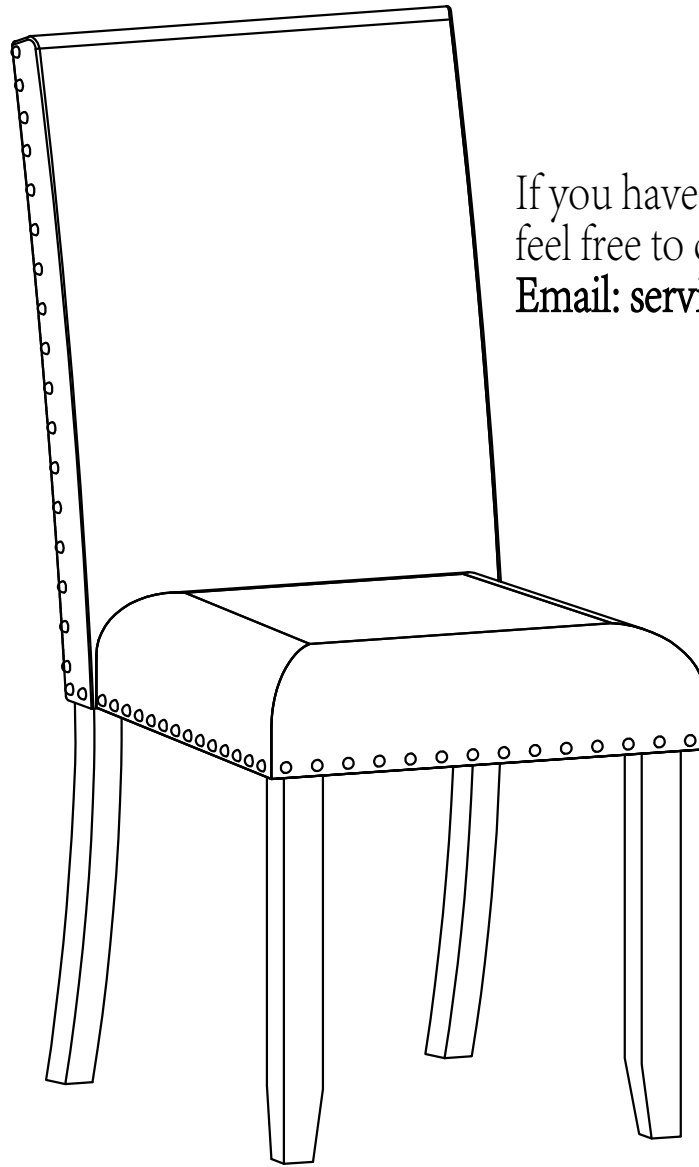


If you have any questions, please
feel free to contact us.

Email: service@qualfurn.net









IMPORTANT NOTE :

- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN,KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE CHAIR IS FULLY SET-UP.

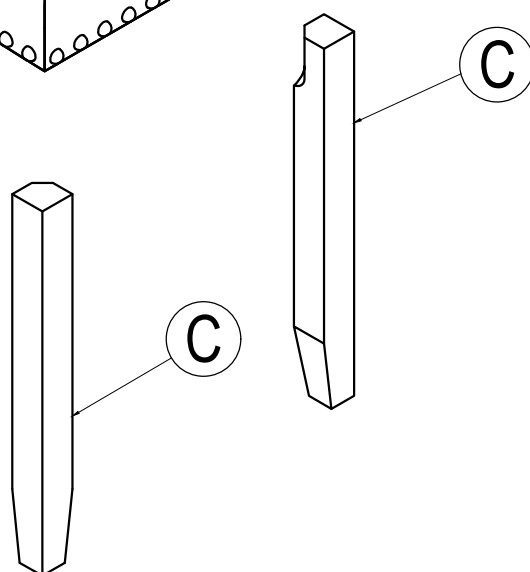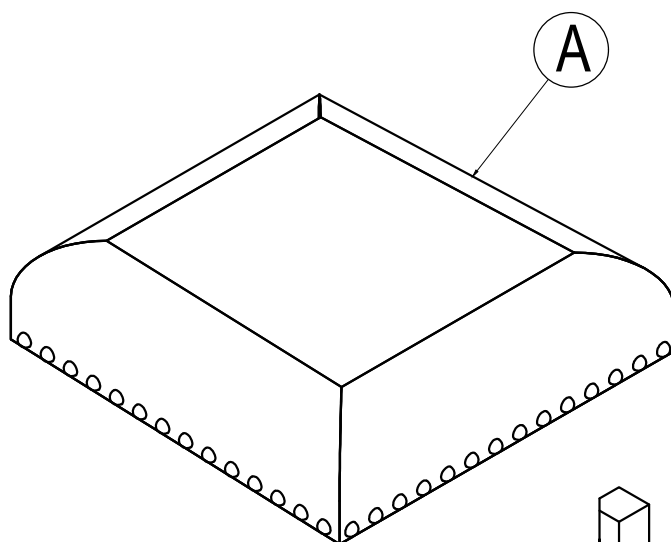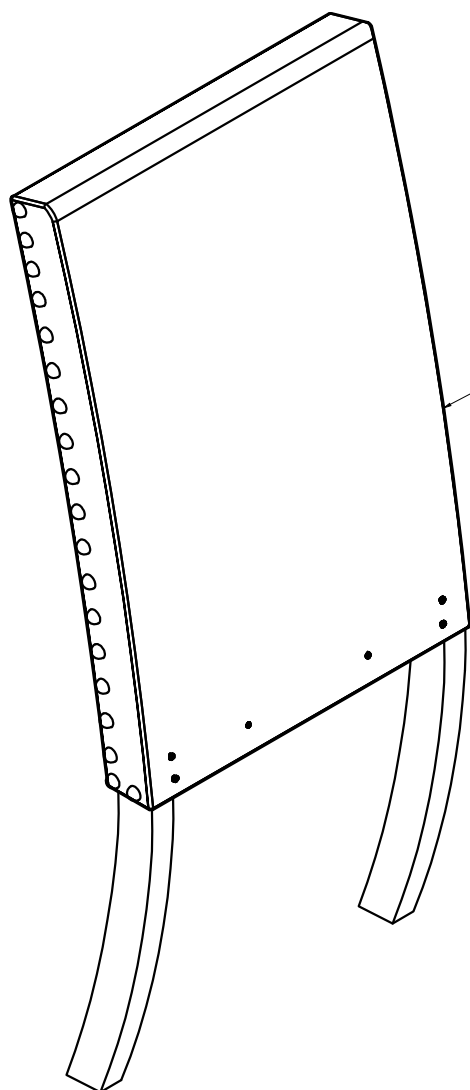


Part List

Hardware List
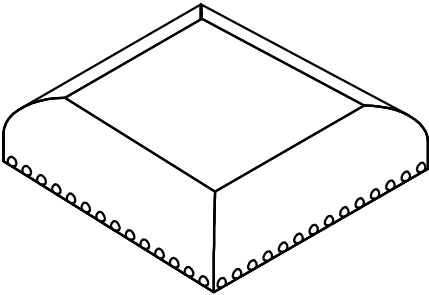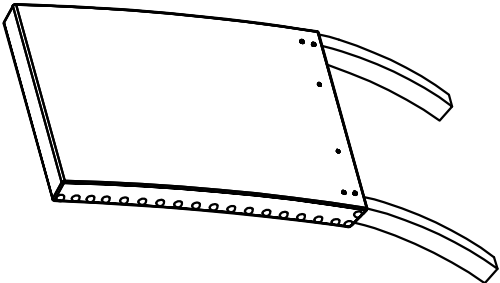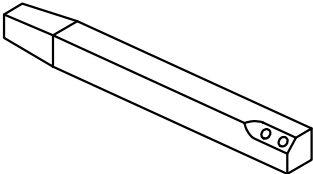
<p>Ⓐ</p> 	<p>①</p>  <p>Ø 1/4" x 45mm</p>
<p>SEAT CHAIR (4pcs)</p>	<p>BOLT (24pcs)</p>
<p>Ⓑ</p> 	<p>②</p>  <p>Ø 1/4" x 75mm</p>
<p>BACK CHAIR (4pcs)</p>	<p>BOLT (16pcs)</p>
<p>Ⓒ</p> 	<p>③</p>  <p>Ø5/16" x 13mm</p>
<p>LEG FRONT (8pcs)</p>	<p>FLAT WASHER (40pcs)</p>
	<p>④</p>  <p>Ø5/16" x 19mm</p>
	<p>LOCK WASHER (40pcs)</p>
	<p>⑤</p>  <p>4mm</p>
	<p>ALLEN KEY (1pc)</p>

STEP 1

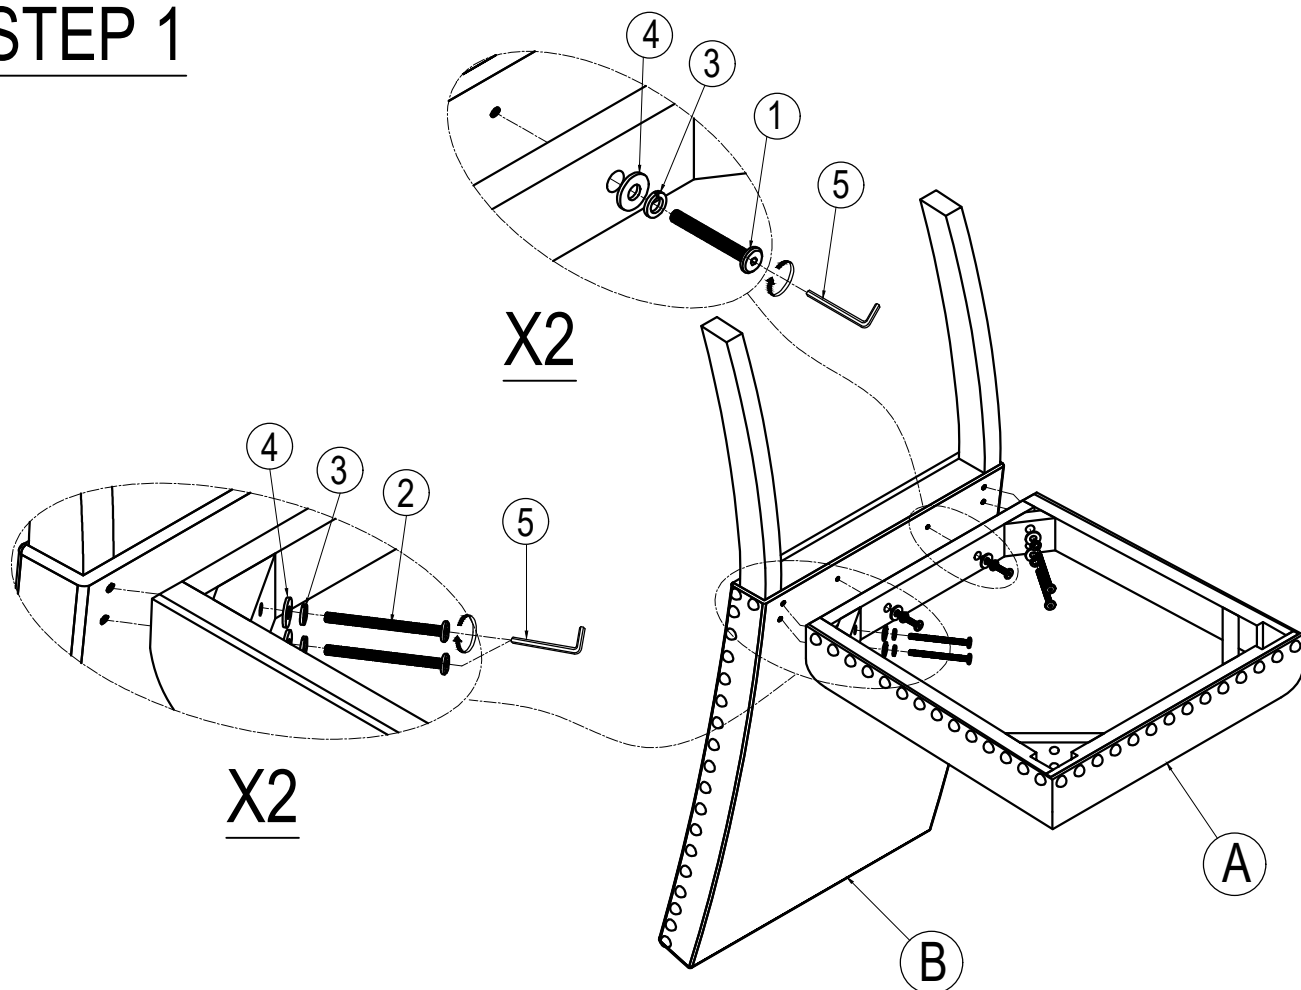

STEP 2

