

Installation Guide

DETERMINE ORIENTATION

If installing horizontally, swivel Hanger A one-quarter turn to align it with Hanger B. (Figure A)

APPLY RUBBER BUMPERS

Adhere bumpers near the bottom corners of the back of the mirror.

MEASURE THE HANGERS

Measure the distance between the centers of the D-ring hangers.

MARK WALL LOCATION

Using a level and the previous measurement, mark the locations of the mounting hardware on the wall. (Figure B)

INSTALL HARDWARE

For drywall and concrete walls, use a 1/4-inch drill bit to drill pilot holes. Insert each anchor into the holes until flush with the wall surface. For solid wood walls, drill pilot holes using a 1/8-inch drill bit (anchors are not necessary). Install a screw into each anchor until the head of the screw is approximately 1/4-inch off the wall.

HANG MIRROR

Attach the D-ring hangers to the wall-mounted hardware. (Figure C)

Figure A

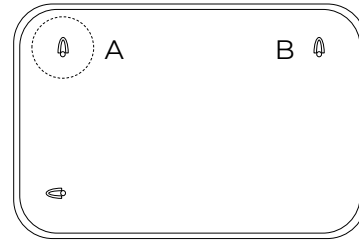


Figure B


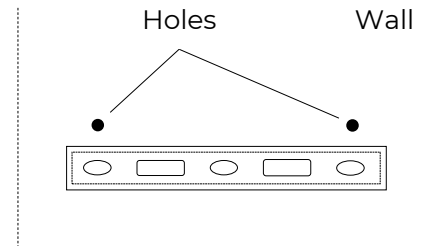


Figure C

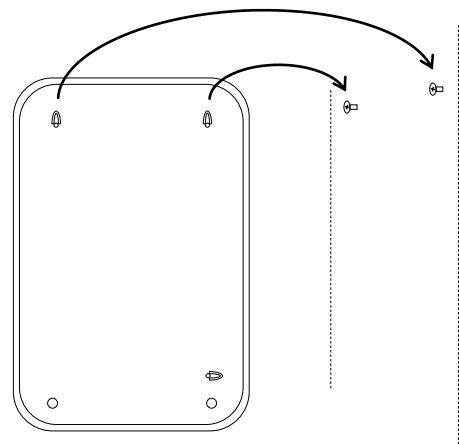

better bevel