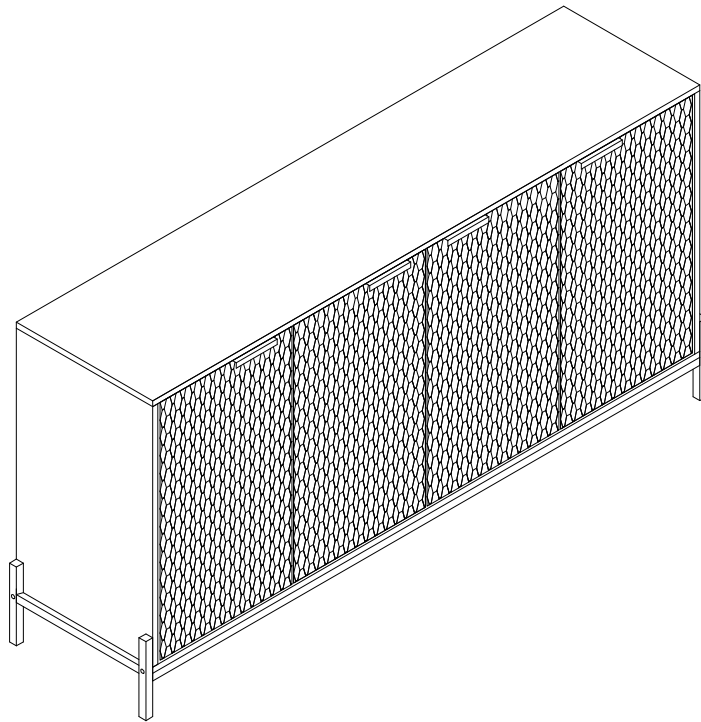


ASSEMBLY INSTRUCTION

1. Before installation, please read the Assembly Instruction carefully.
2. Please check whether the Parts and Hardware are consistent with the list.
3. It is normal for the sealed environment to smell, not a product quality



Web: <https://clihome.net/>

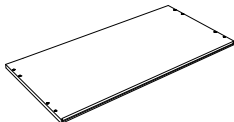






Service Contact : service@clihome.net

Phone Number :






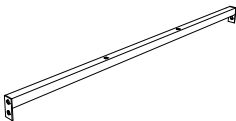
(951) 213-4743/303-747-4421

ASSEMBLY INSTRUCTION

Part List:











ITEM	DESCRIPTION	PART	QTY
1	Top panel		1
2	Bottom panel		1
3	Left side panel		1
4	Left Dividers		1
5	Right Dividers		1
6	Right side panel		1
7	Back panel		1

Part List:










ITEM	DESCRIPTION	PART	QTY
8	Left door		2
9	Right door		2
10	Side Shelf		2
11	Shelf		1
12	Frame		2
13	Bar		2

ASSEMBLY INSTRUCTION

hardware list:

ITEM	DESCRIPTION	PART	QTY
A	Camlock bolt		8
B	Camlock		8
C	Wooden dowel	 M8*30mm	16
D	Flat head screw	 M4*12mm	48
E	Back screw	 M2.5*12mm	34
F	Flat head screw	 M4*40mm	8
G	Bolt	 M6*30mm	8
H	Bolt	 M6*12mm	12
I	Shelf support		12
Q	Door fitting		4

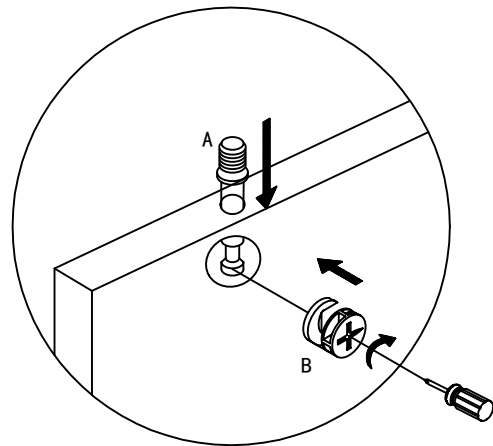
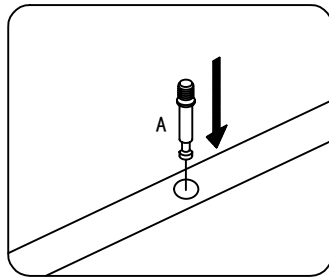
hardware list:

ITEM	DESCRIPTION	PART	QTY
J	Door fitting		4
K	Allen wrench		1
M	Handle		4
N	Flat head screw	 M3*12mm	8
U	Safety wall strap		1
Z	Flat head screw	 M4*35mm	1
X	Plastic anchor		1
P	Washer		1
L	Adjustable foot		2

ASSEMBLY INSTRUCTION

- * Required screwdriver & mallet, not included.
- * Before discarding packing materials, please check to make sure that all parts and hardware is present.
- * Two people needed for assembly.
- * Please follow the instructions closely; do not over tighten screws or bolts unless instructed.
- * After a few days from initial assembly, the product may have acclimated to the new environment. Please retighten the hardware.

Guideline For Assembling of Cam Lock(A & B)









Screw camlock bolt (A) to wood part.

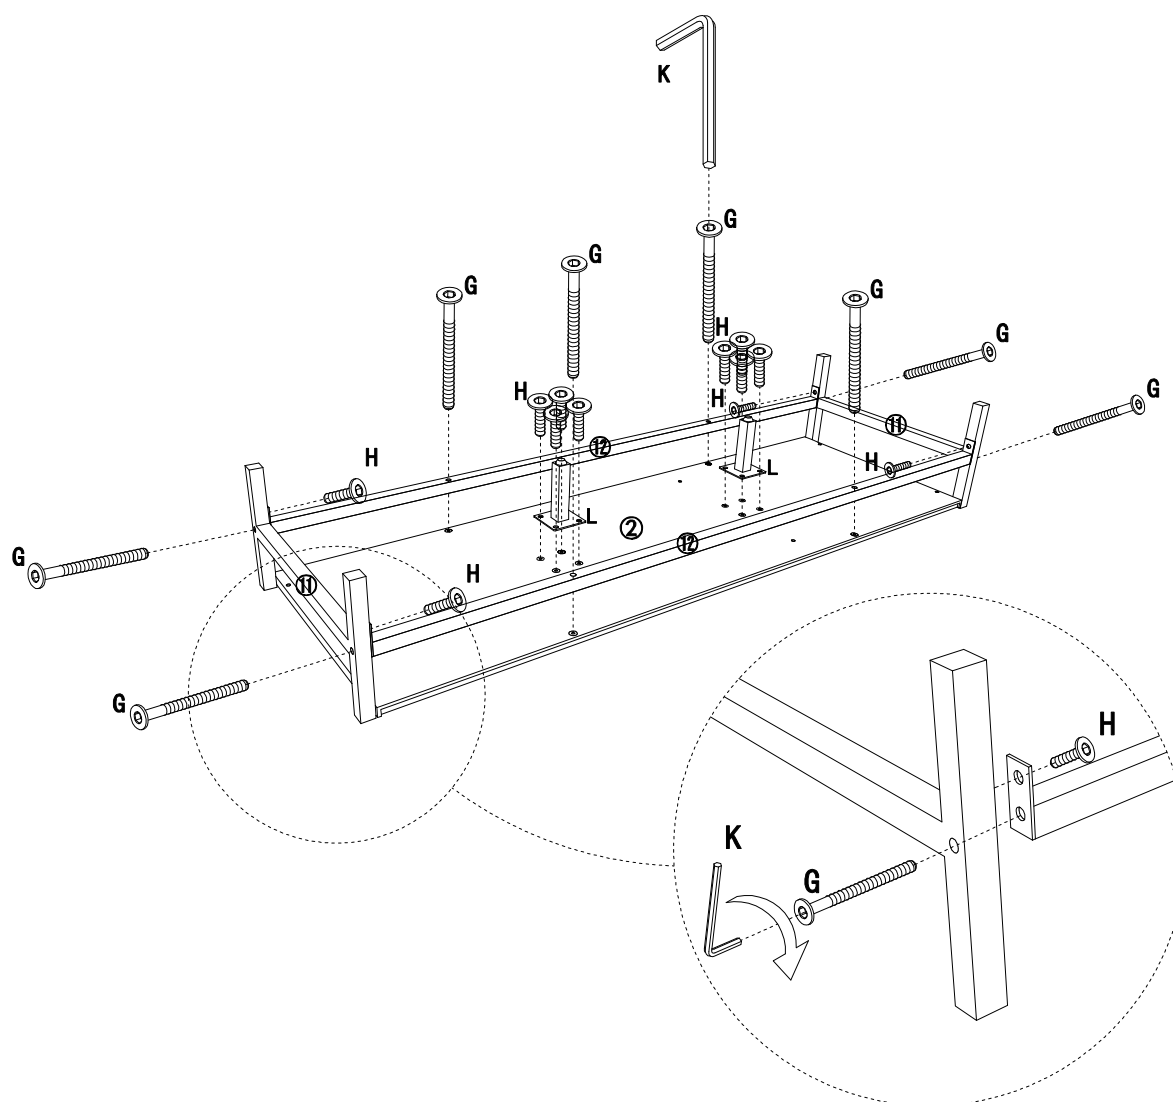
Do not assemble camlock (B) unless instructed.

To assemble camlock (B), ensure long side of the + is facing the bolt (A) before inserting into hole.

ASSEMBLY INSTRUCTION





STEP 1

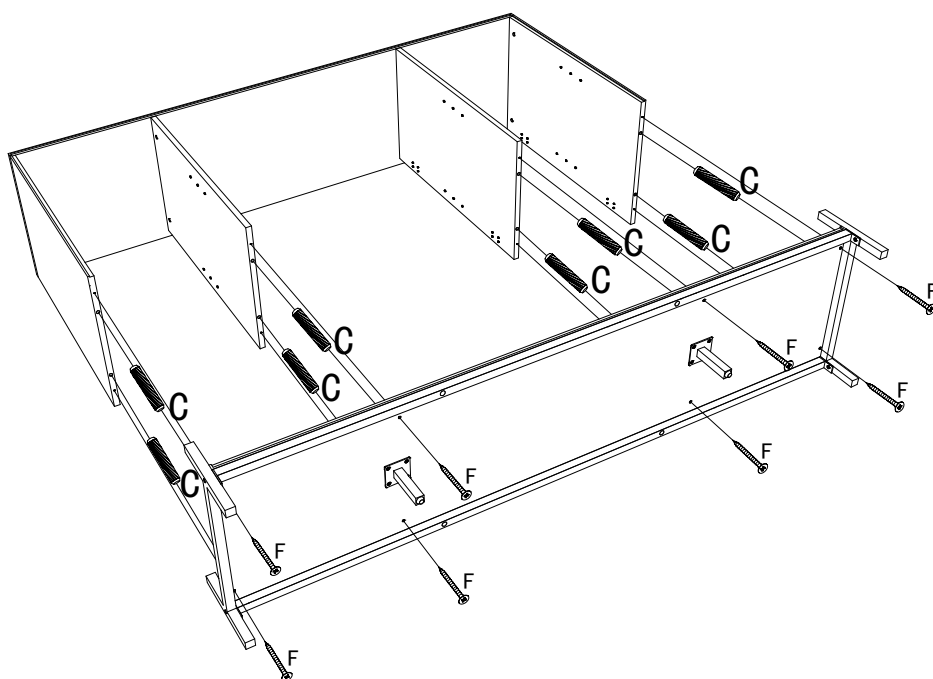
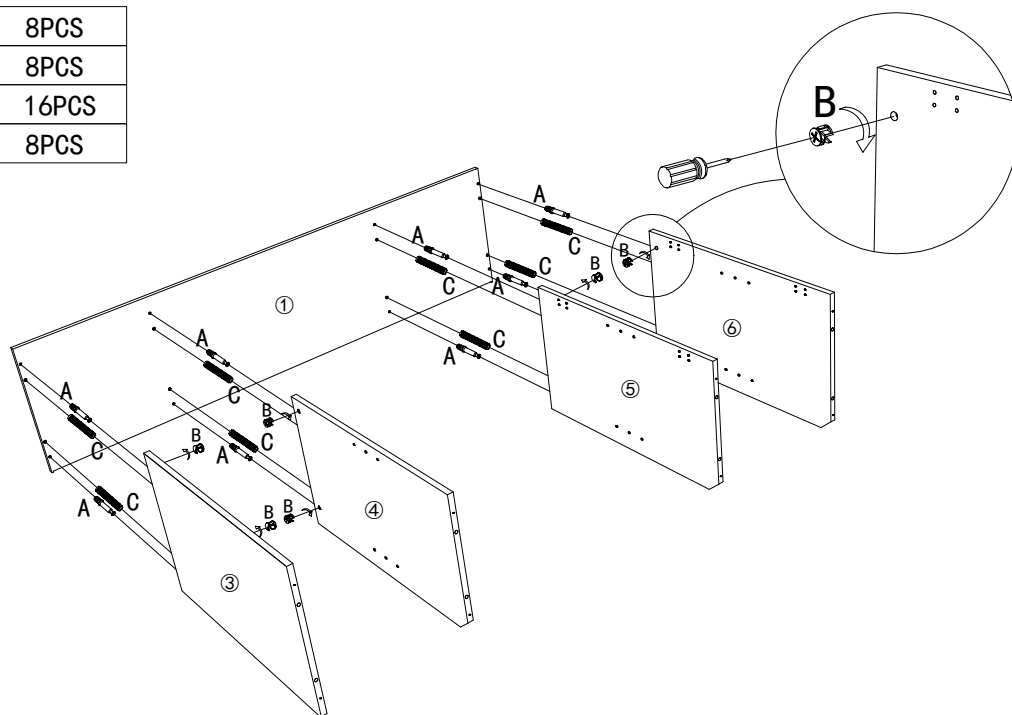
A:		6PCS
C:		6PCS
G:		8PCS
H:		12PCS
K:		1PC
L:		2PC



ASSEMBLY INSTRUCTION



STEP 2

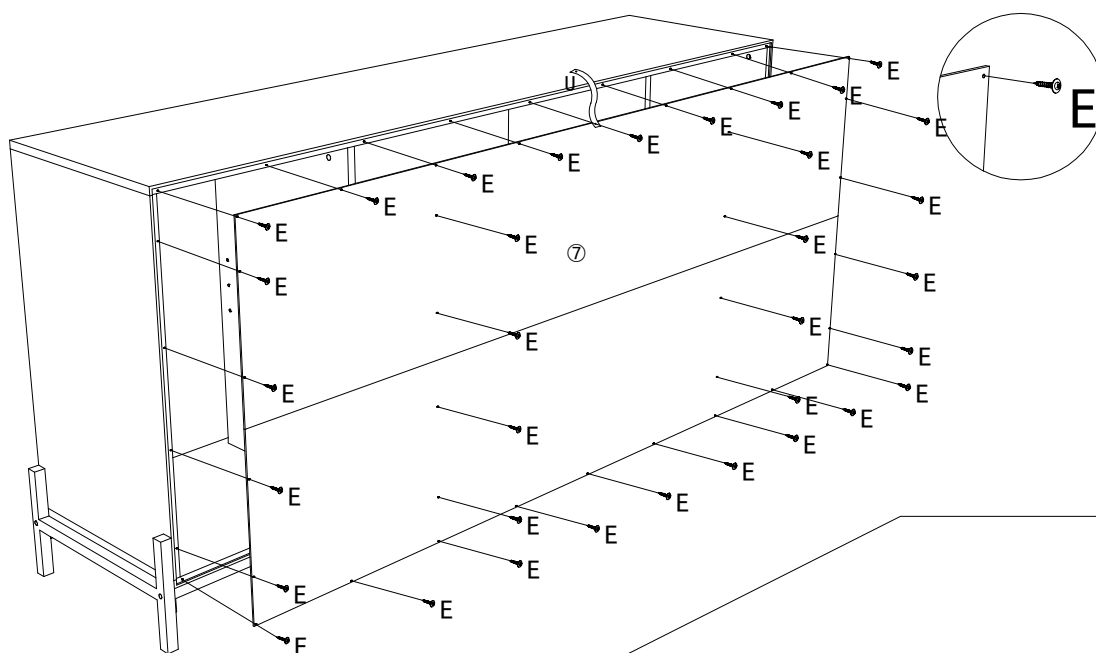
A:		8PCS
B:		8PCS
C:		16PCS
F:		8PCS








ASSEMBLY INSTRUCTION

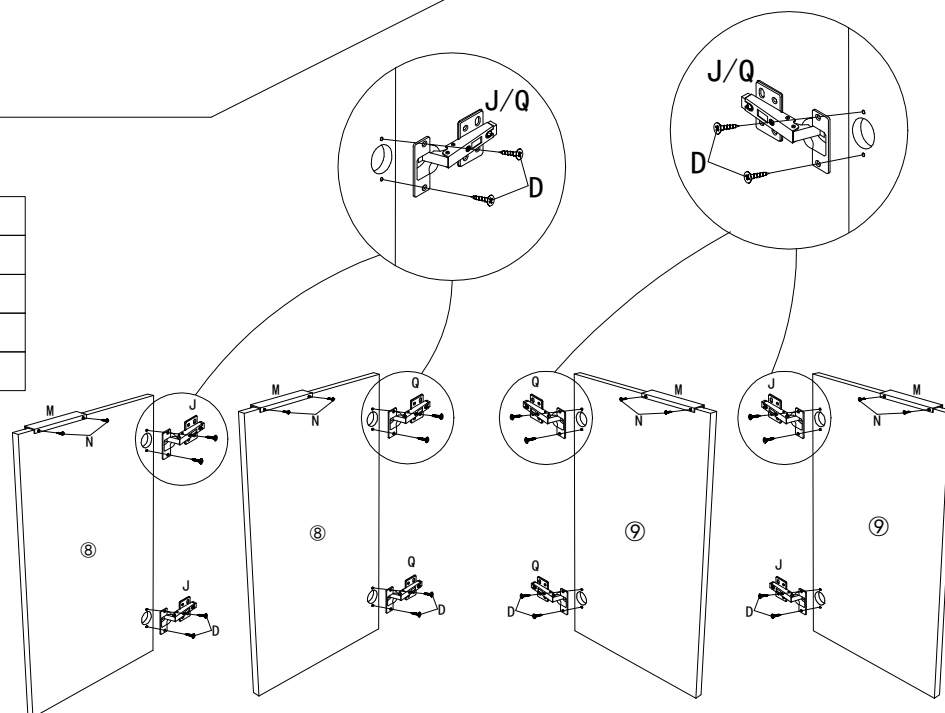
STEP 3

E:		34PCS
U:		1PCS



STEP 4

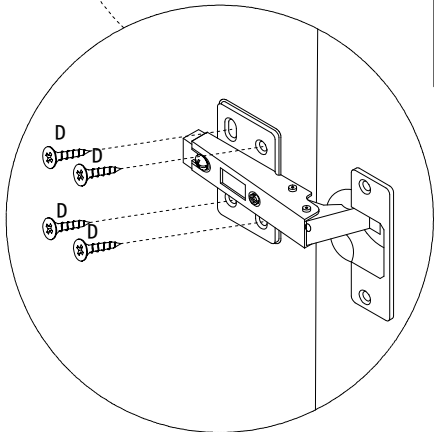
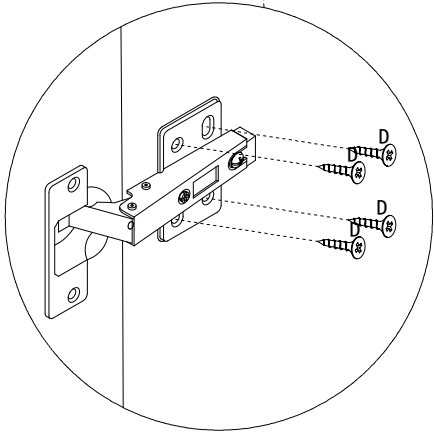
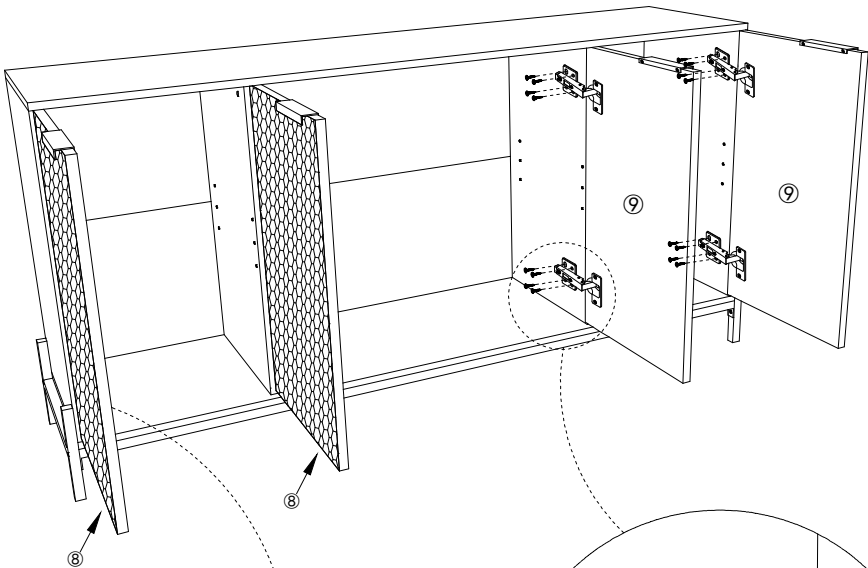
D:		16PCS
J:		4PCS
Q:		4PCS
N:		8PCS
M:		4PCS



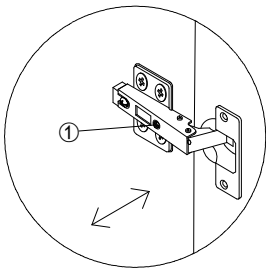
ASSEMBLY INSTRUCTION

STEP 5

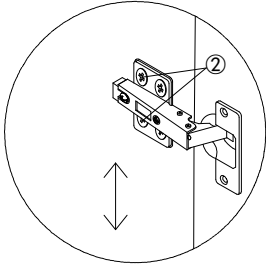
D:  32PCS



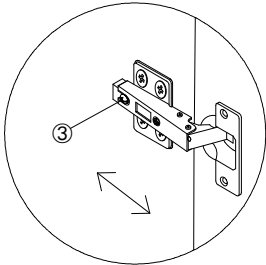
DOOR FITTING



To adjust in width



To adjust in height

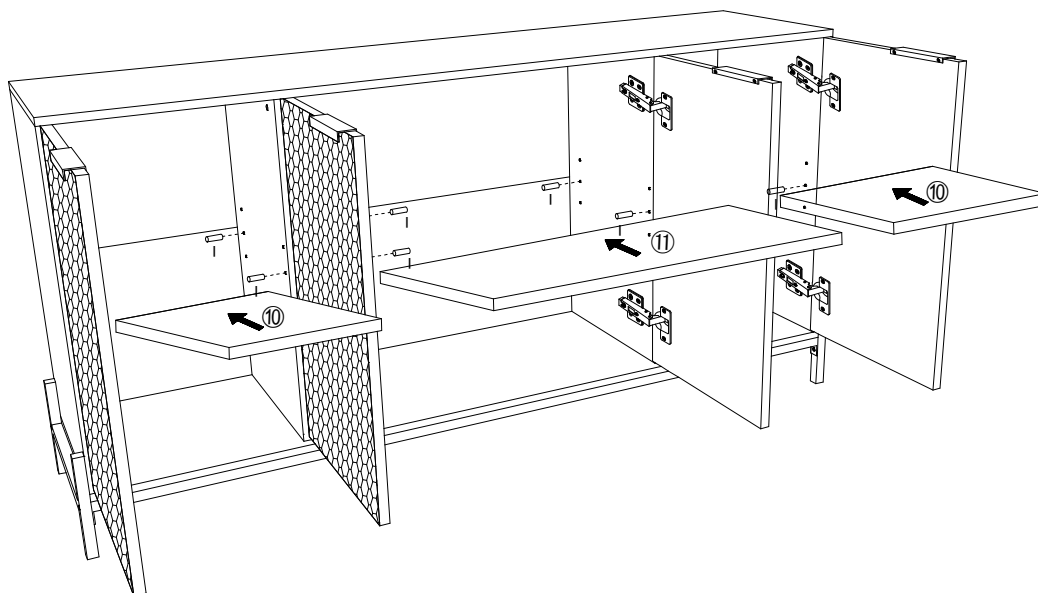
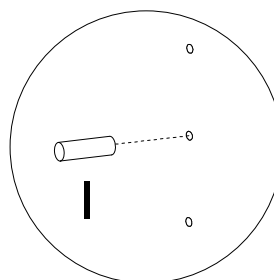


To adjust in depth

ASSEMBLY INSTRUCTION




STEP 6

I:  12PCS



ASSEMBLY INSTRUCTION

STEP 7

Z:		1PCS
X:		1PCS
P:		1PCS

