




DESIGNED FOR LIFE

# Assembly Instructions

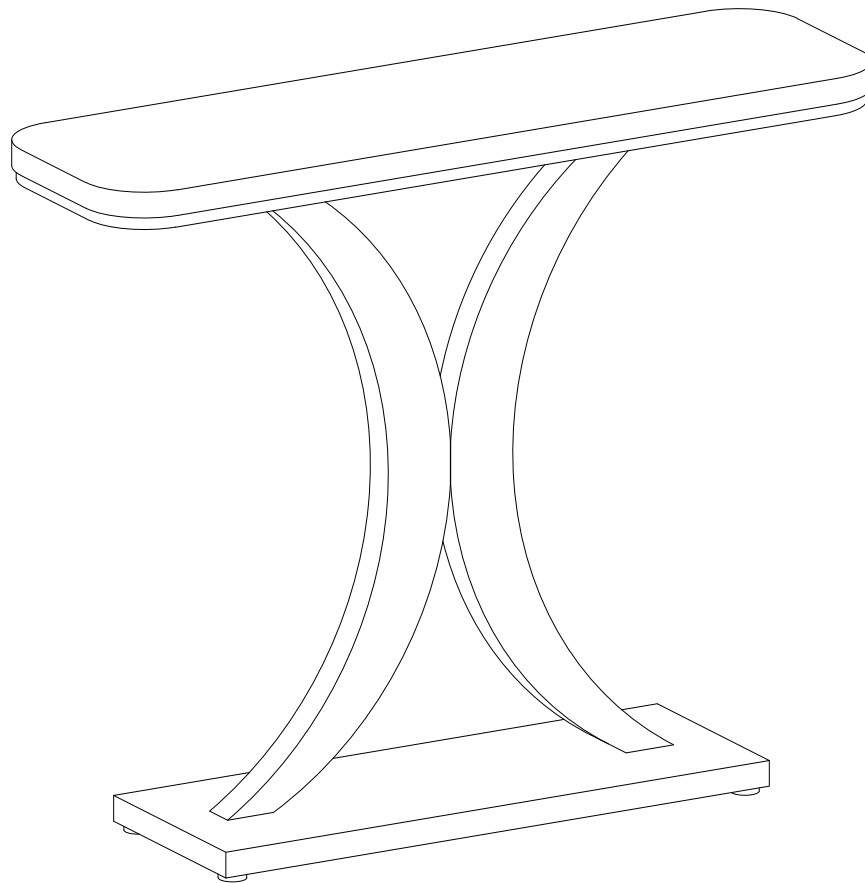

Console Table

Model No.  
HOGA-C0690X/HOGA-C0814  
HOGA-HL048/HOGA-HL079



LITTLE TREE  
Little Tree by Tribesigns

[www.tribesigns.com](http://www.tribesigns.com)

# Contact Us

## We're here to help you.



Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


## Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

## How to Get the Assembly Video

**Step 1**


Scan the QR code.




Installation Video

**Step2**

Search with the Model No.  
(on the bottom left corner of the title page)

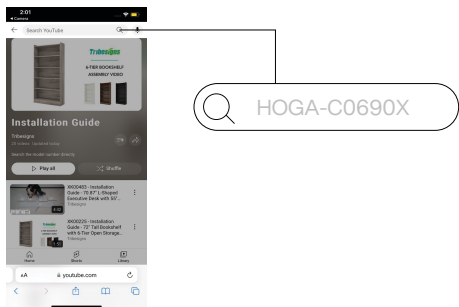


Note: If you can't find the assembly video, please contact us.

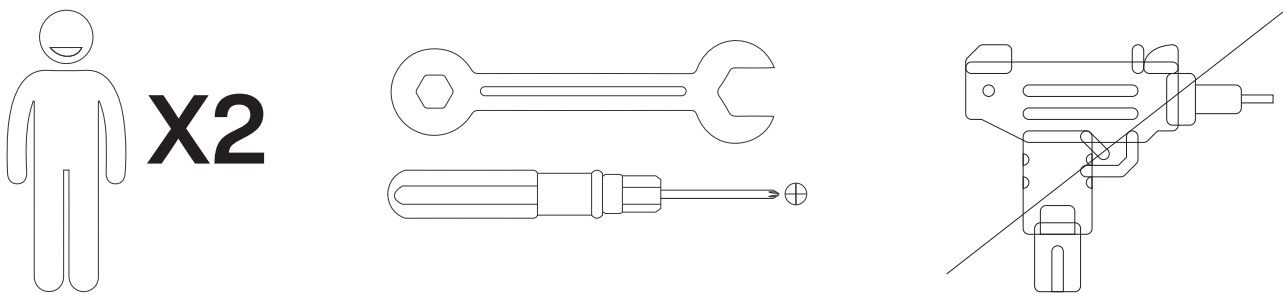


We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

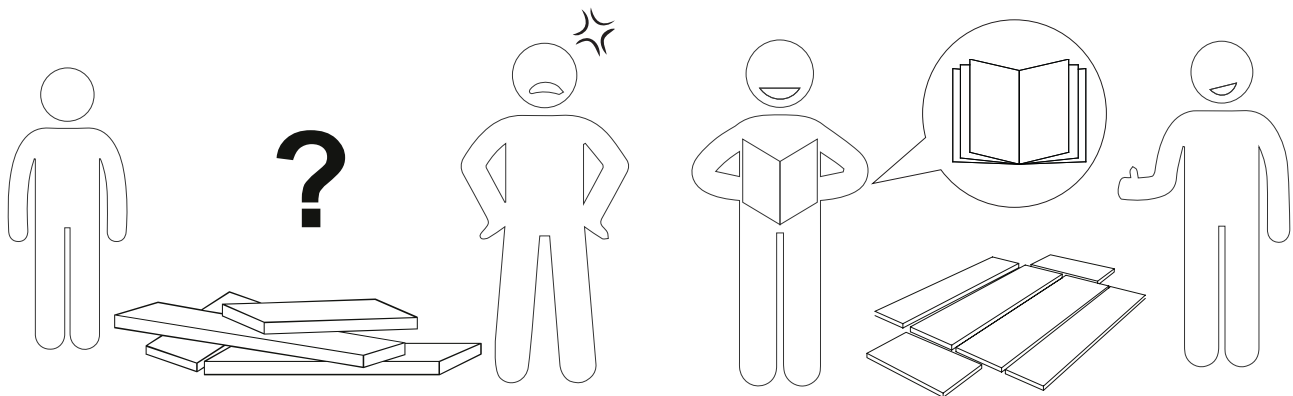

## Install the Anti-Tip Straps

Using the anti-tip straps can reduce the risk of tipping over, but can not eliminate it.

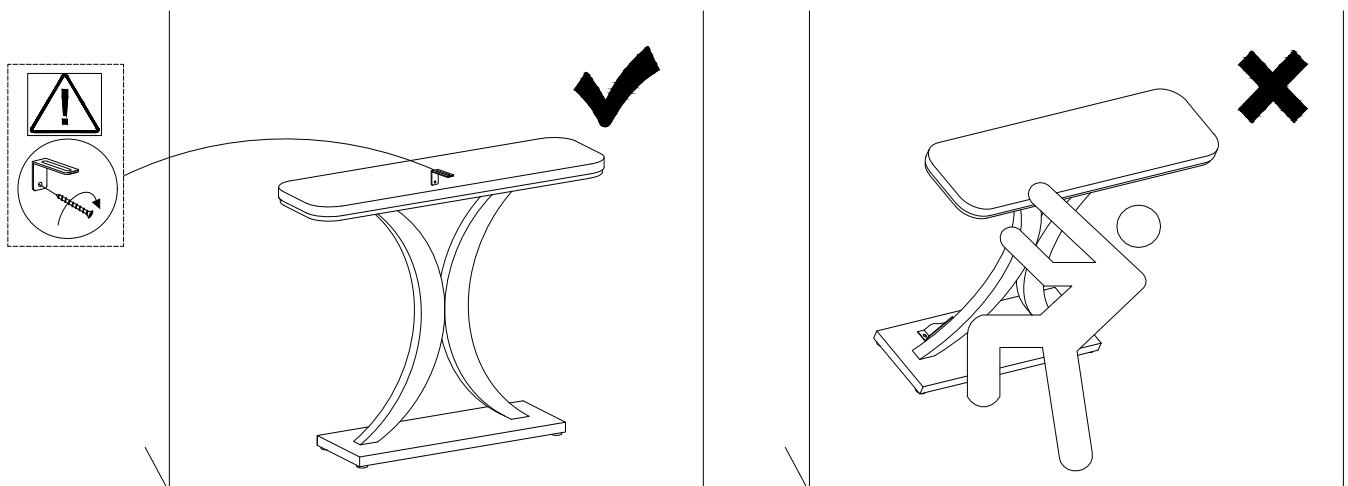

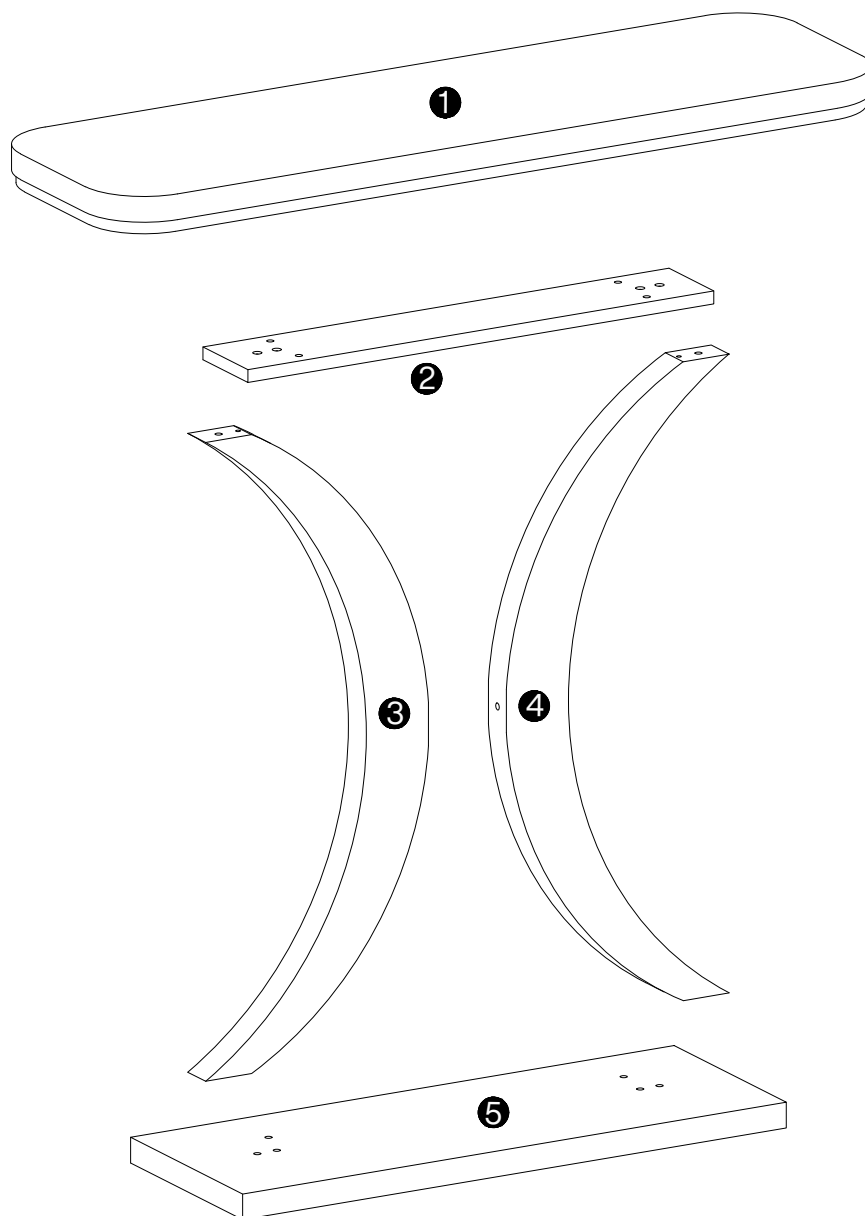


**⚠ Caution**


Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.



## Parts List

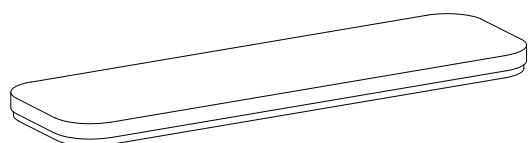


① 1pc




② 1pc



③ 1pc



④ 1pc

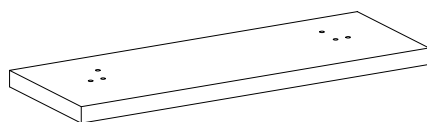

⑤ 1pc


## Hardware List


A	X1+1	B	X6+1	C	X2+1	D	X6+1	E	X1+1
Ø8X30 mm		M6X12 mm		M6X22 mm		M6X25 mm		M6X28 mm	

F	X1+1	G	X4+1	H	X1	I	X1	J	X4
M6X28 mm		Ø7X40 mm		M4		60X35X20 mm		M6X32 mm	


K	X1	L	X1	M	X1
Ø8X40 mm		110X42X26 mm		110X42X26 mm	




1

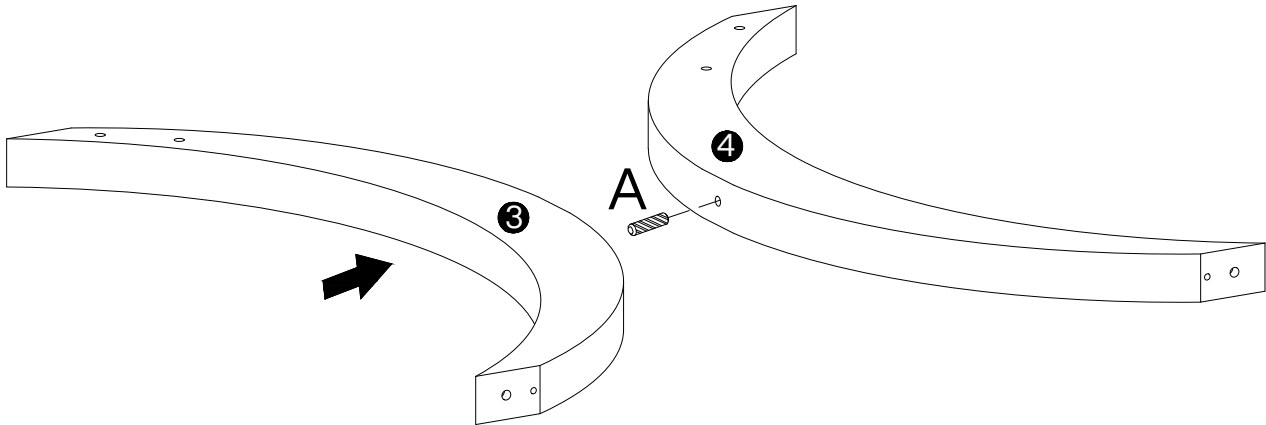


A	X1
	
Ø8X30 mm	


2

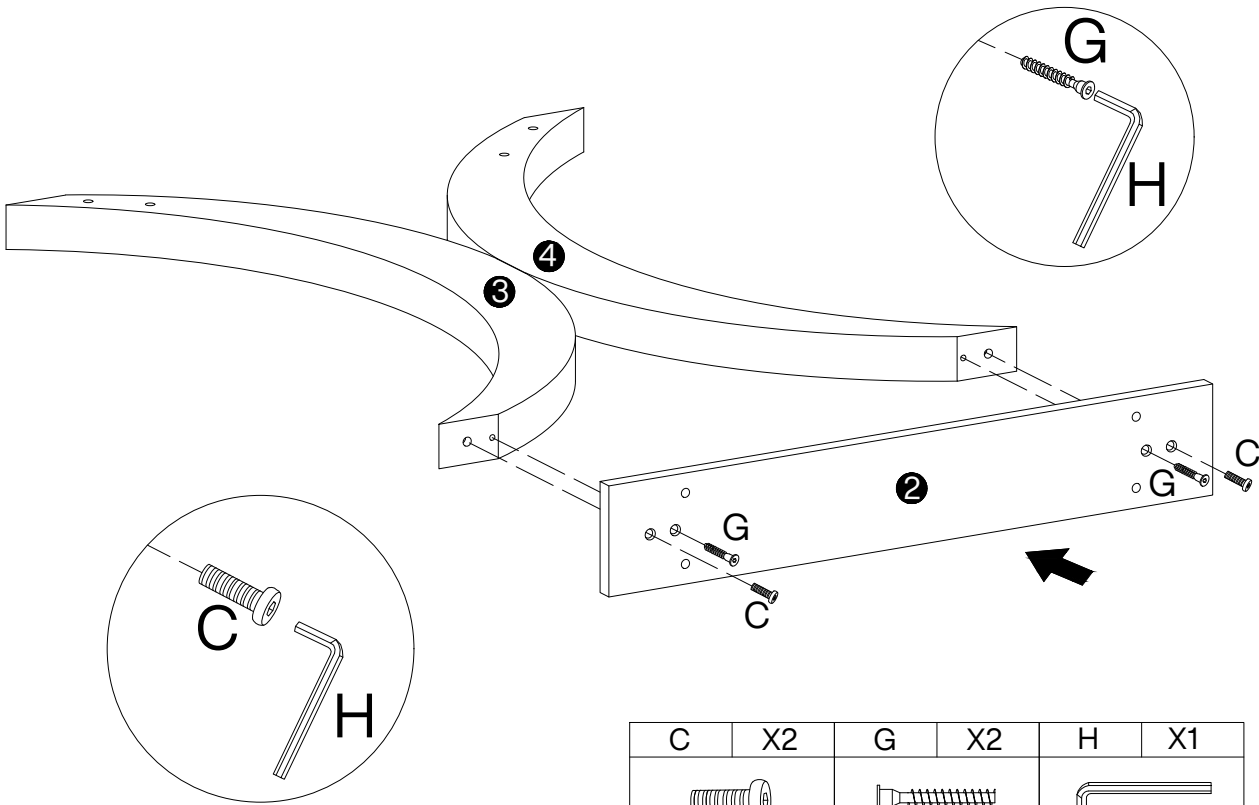


C	X2	G	X2	H	X1
					
M6X22 mm		Ø7X40 mm		M4	



3

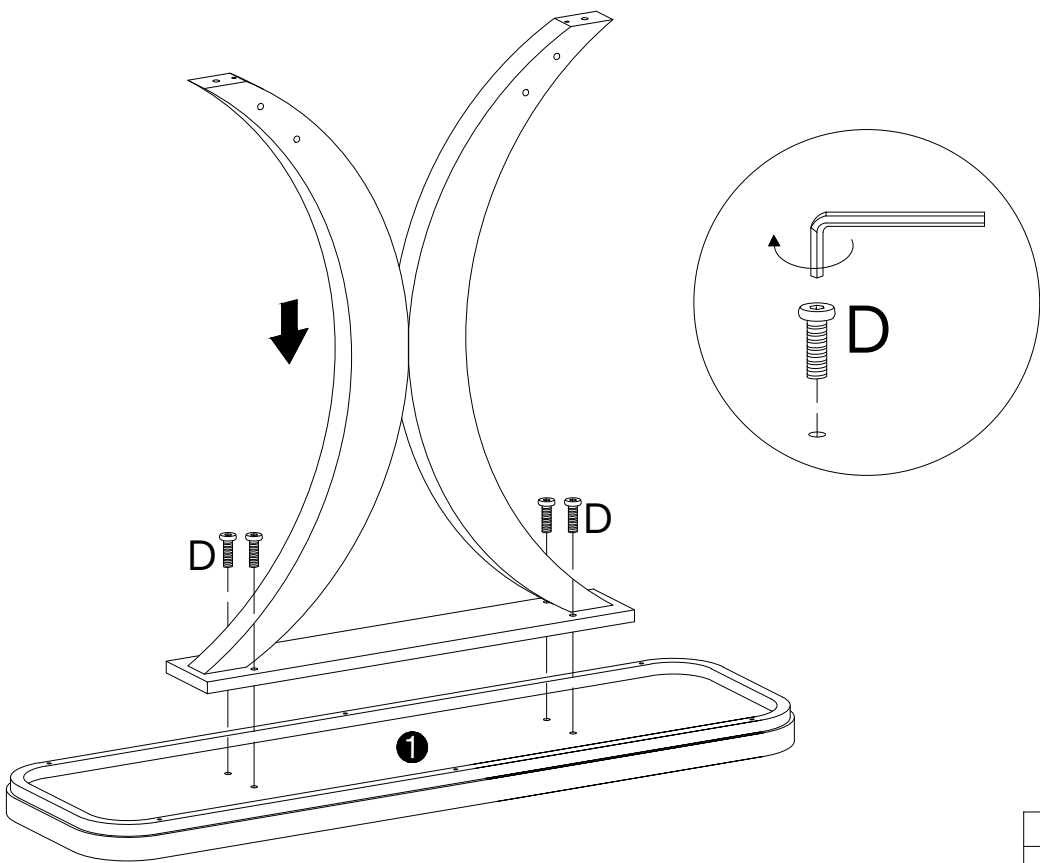


D	X4
	
M6X25 mm	


4

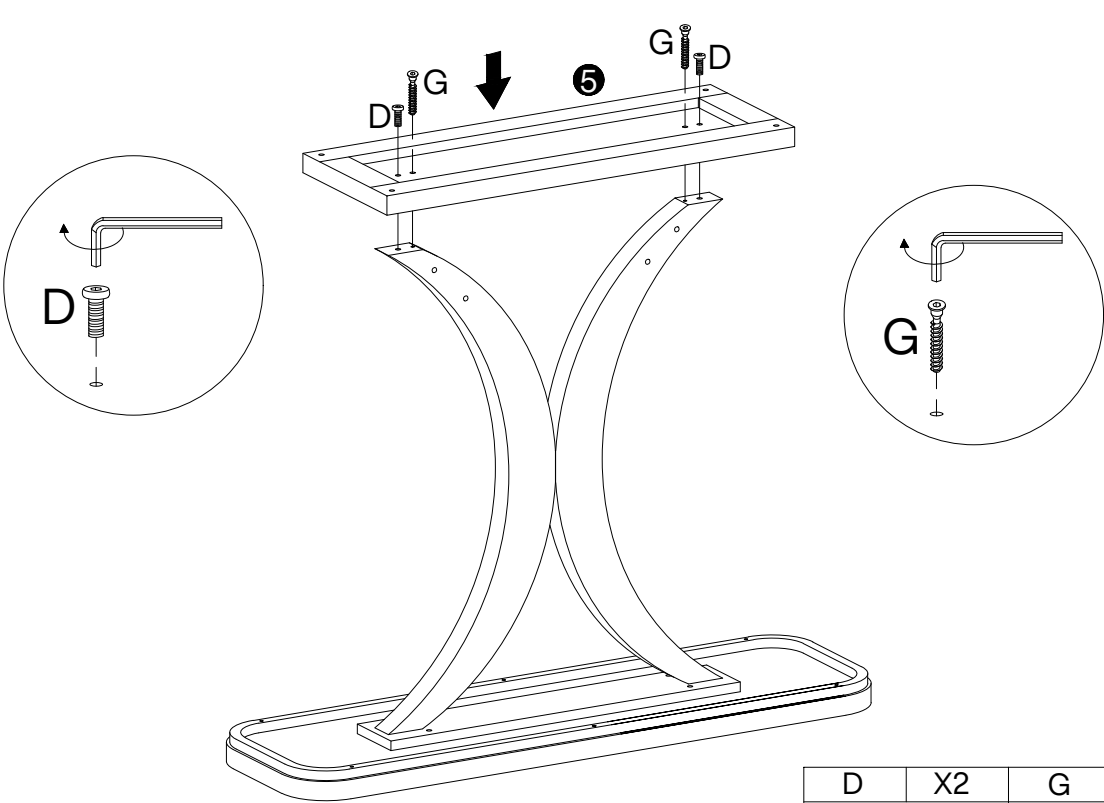


D	X2	G	X2
			
M6X25 mm		Ø7X40 mm	

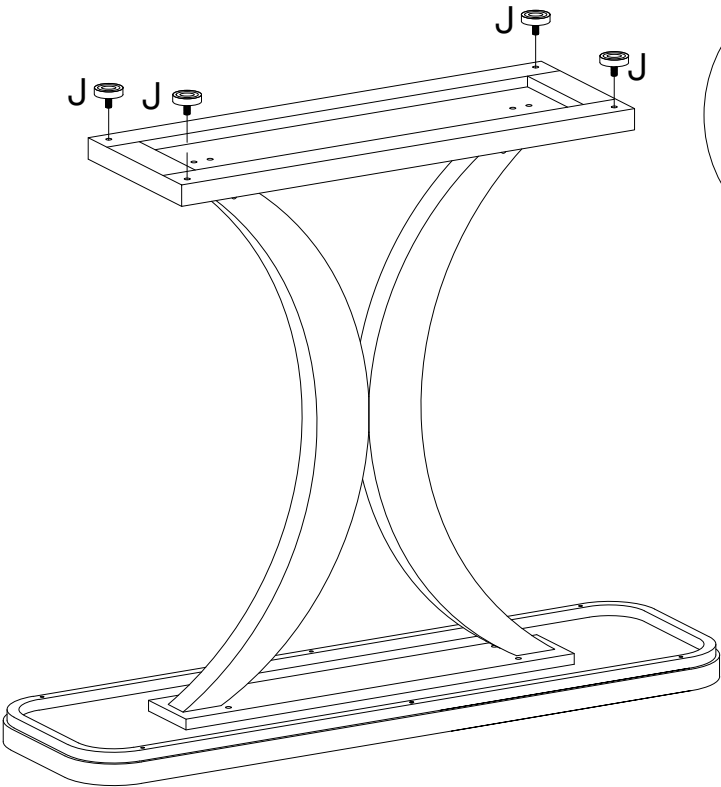


5




J	X4
	
M6X32 mm	

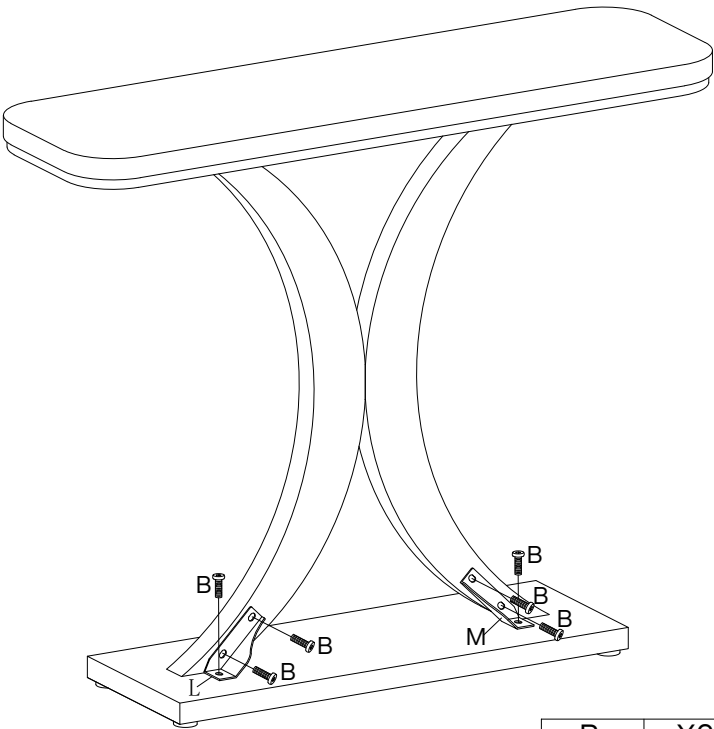6



B	X6	L	X1	M	X1
					
M6X12 mm		110X42X26 mm		110X42X26 mm	

7

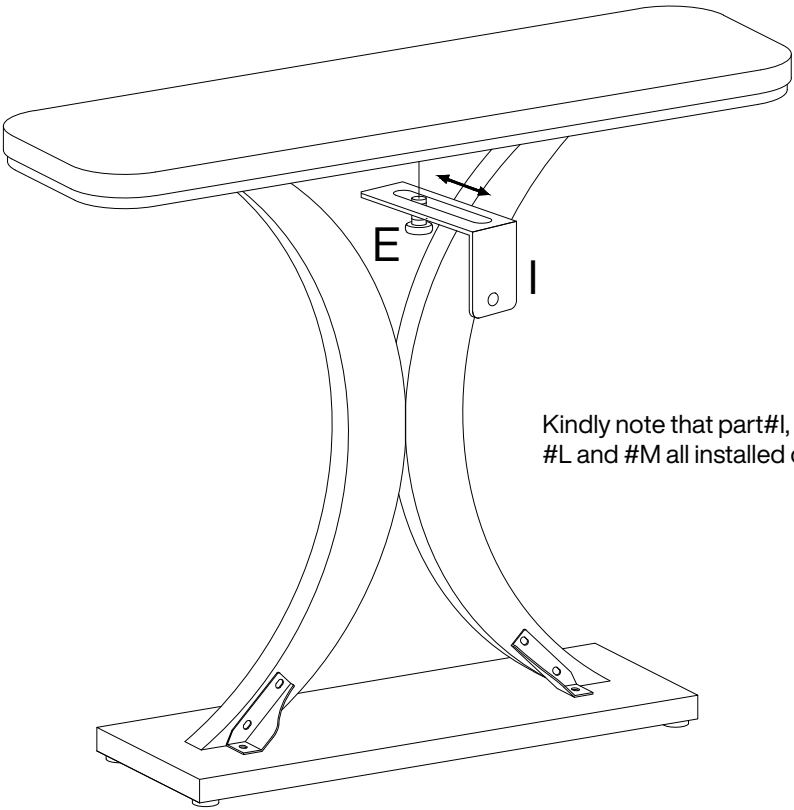


pre-drill 70%

70%

Kindly note that part #I,  
#L and #M all installed on the back side

E	X1	I	X1
M6X28 mm		60X35X20 mm	

8

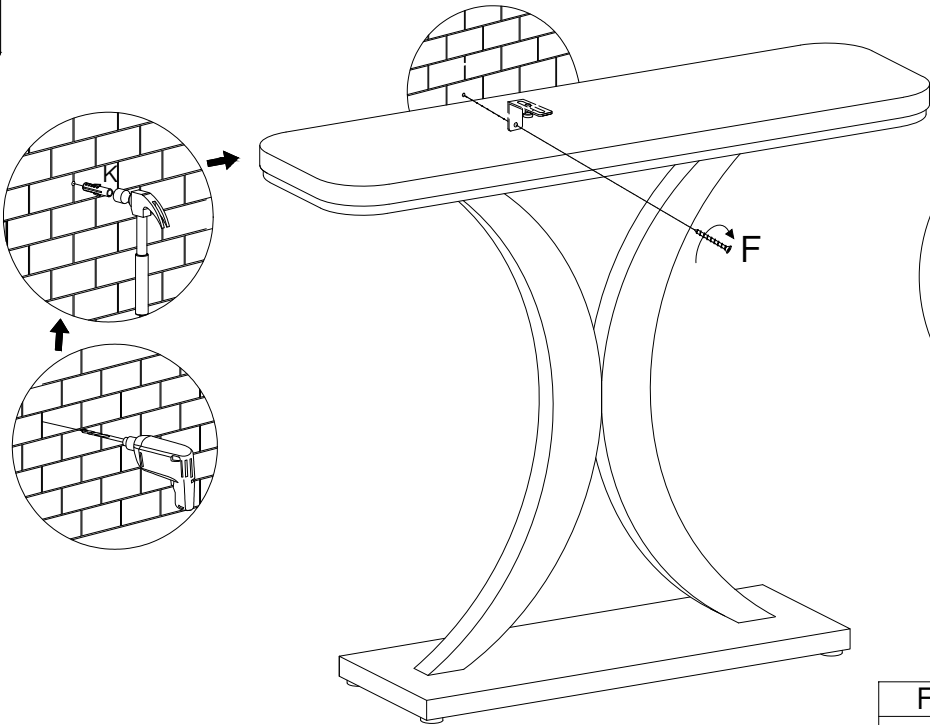

screw down


100%

F	X1	K	X1
M6X28 mm		Ø8X40 mm	



DESIGNED FOR LIFE

**Thank you for your support!**

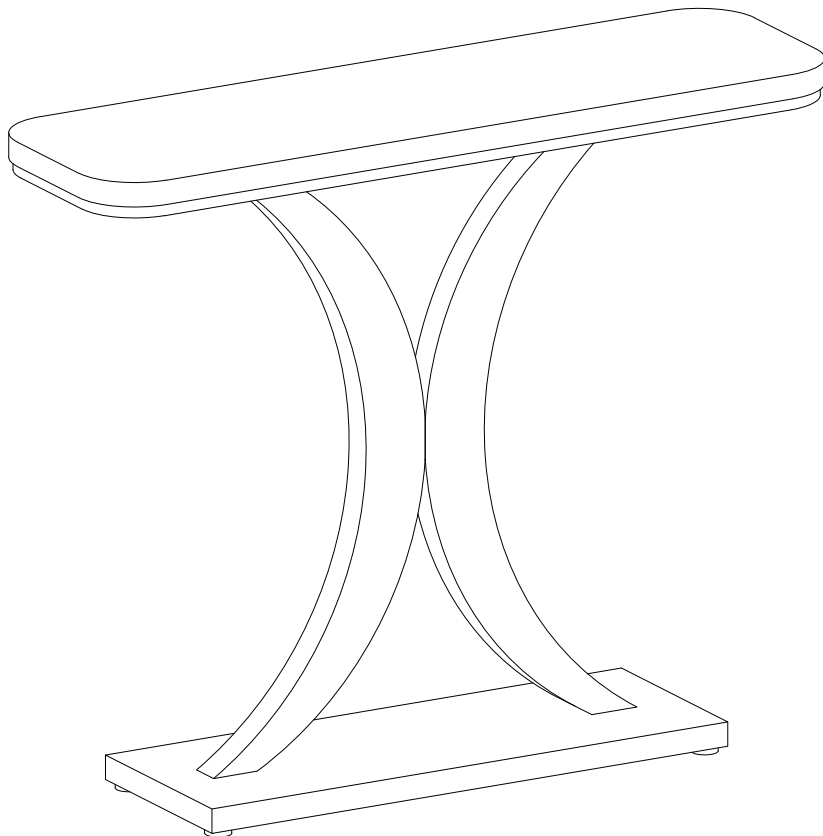

### Contact our customer service team



support@tribesigns.com  
www.tribesigns.com



**1-424-220-6888**

Contact us anytime except  
12:00 AM to 8:00 AM EST.

### Follow Tribesigns



Facebook



Instagram




Pinterest



Twitter



YouTube

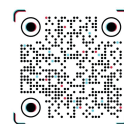

TikTok



WhatsApp