


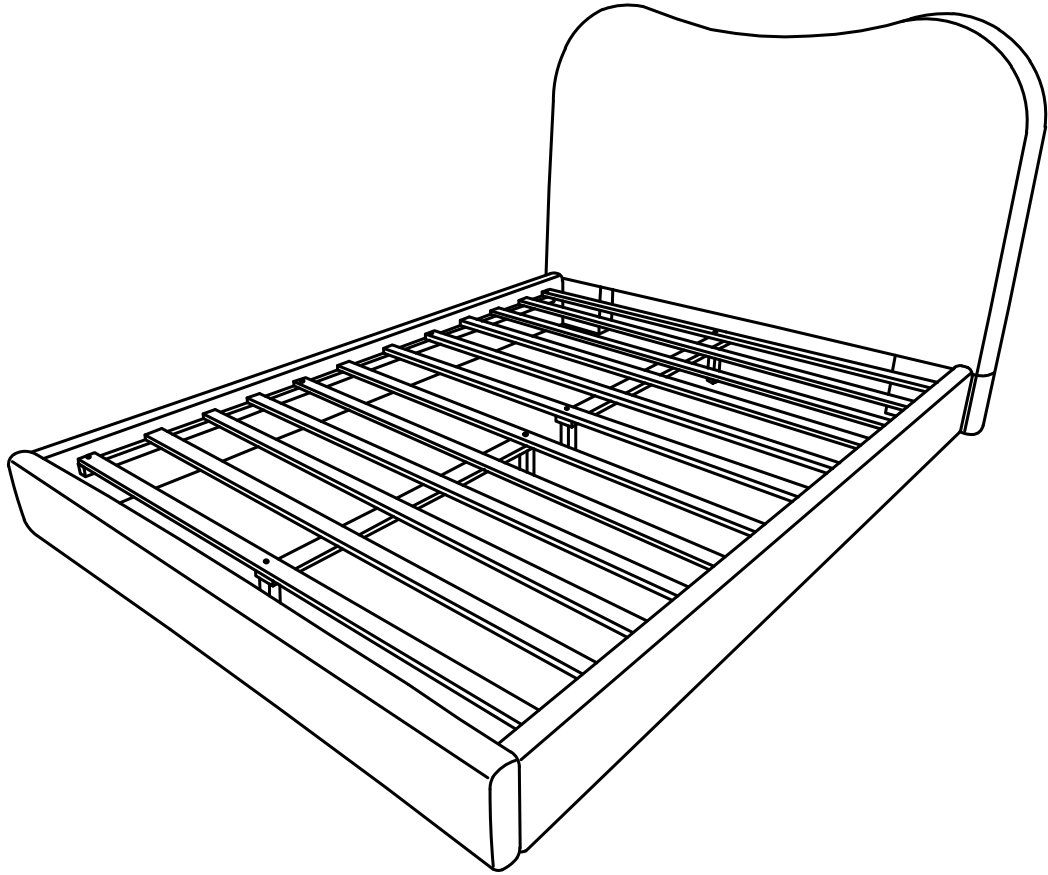

ASSEMBLY INSTRUCTIONS

Bed

MOD-7233 / V0.07.14.25

modway



Questions? Contact us!

609.256.9000

cs@modway.com

Welcome.

Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 30 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Care instructions are listed in the last step of this manual.

WAIT!

Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!



HARDWARE INCLUDED IN THE BOX:

A		Allen Key M4	x1
B		Allen Key M5	x1
C		JCBC M6 x 50mm	x4
D		CBS Screw M4 x 32mm	x16
E		JCBB M8 x 16mm	x8
F		JCBB M8 x 40mm	x12
G		Spring Washer	x12
H		Flat Washer	x12


WHAT YOU NEED:



Phillips Head Screwdriver

FURNITURE COMPONENTS INCLUDED IN THE BOX:

All parts are numbered with a sticker according to this list.

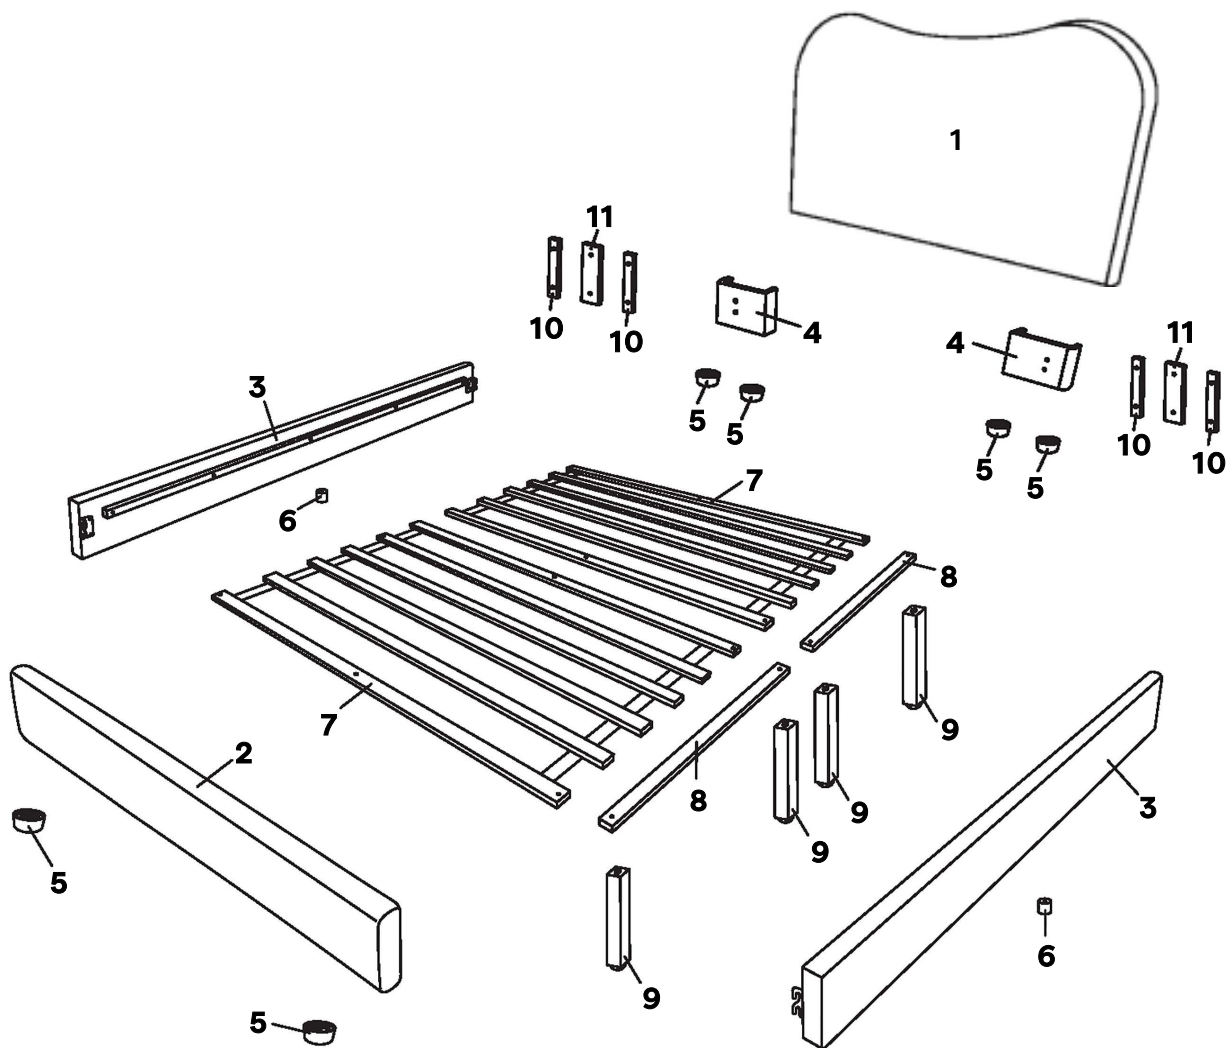

COMPONENTS CARTON PLACEMENT

Carton 1 of 2			Carton 2 of 2					
Label	Description	Qty	Label	Description	Qty	Label	Description	Qty
1	Headboard	x1	2	Footboard	x1	7	Slats(6pcs)	x2
			3	Side Rail	x2	8	Slat Support	x2
			4	Headboard Box	x2	9	Support Leg	x4
			5	Leg	x6	10	Back Support Rail L/R	x4
			6	Side Rail Leg	x2	11	Back Support Rail Center	x2
Hardware Pack								x1


STEP 01

COMPONENTS

- 4** Headboard Box x2
- 5** Leg x4

HARDWARE

- D** CBS Screw M4 x 32mm x4

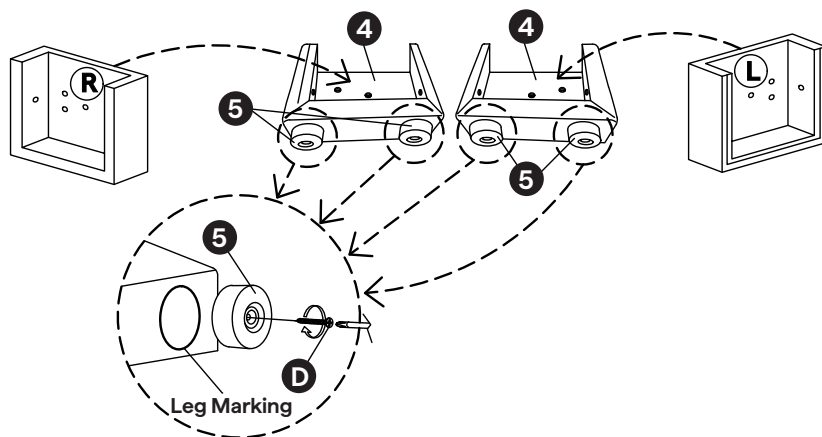


STEP 02

COMPONENTS

- 2** Footboard x1
- 5** Leg x2

HARDWARE

- D** CBS Screw M4 x 32mm x2

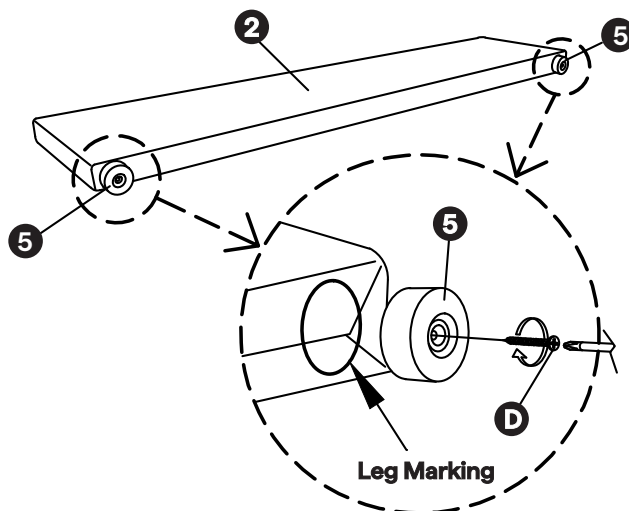


STEP 03

COMPONENTS

- 3** Side Rail x2
- 6** Side Rail Leg x2

HARDWARE

- D** CBS Screw M4 x 32mm x2

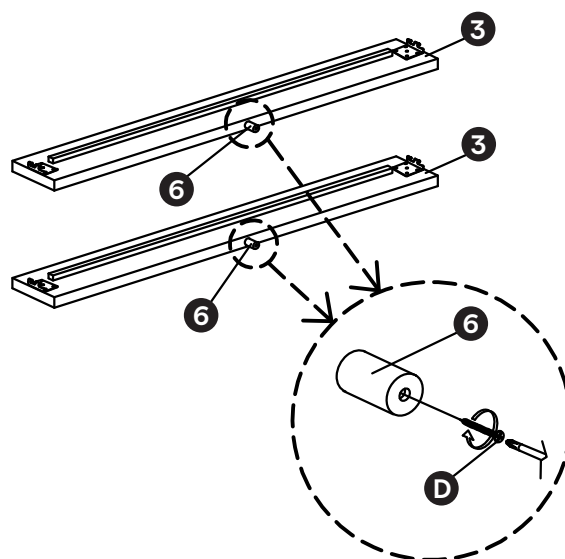

STEP 04

COMPONENTS


- 1** Headboard x1
- 4** Headboard Box x2
- 10** Back Support Rail L/R x4
- 11** Back Support Rail Center x2

HARDWARE

- F** JCBB M8 x 40mm x12
- G** Spring Washer x12
- H** Flat Washer x12

TOOLS

- B** Allen Key M5 x1

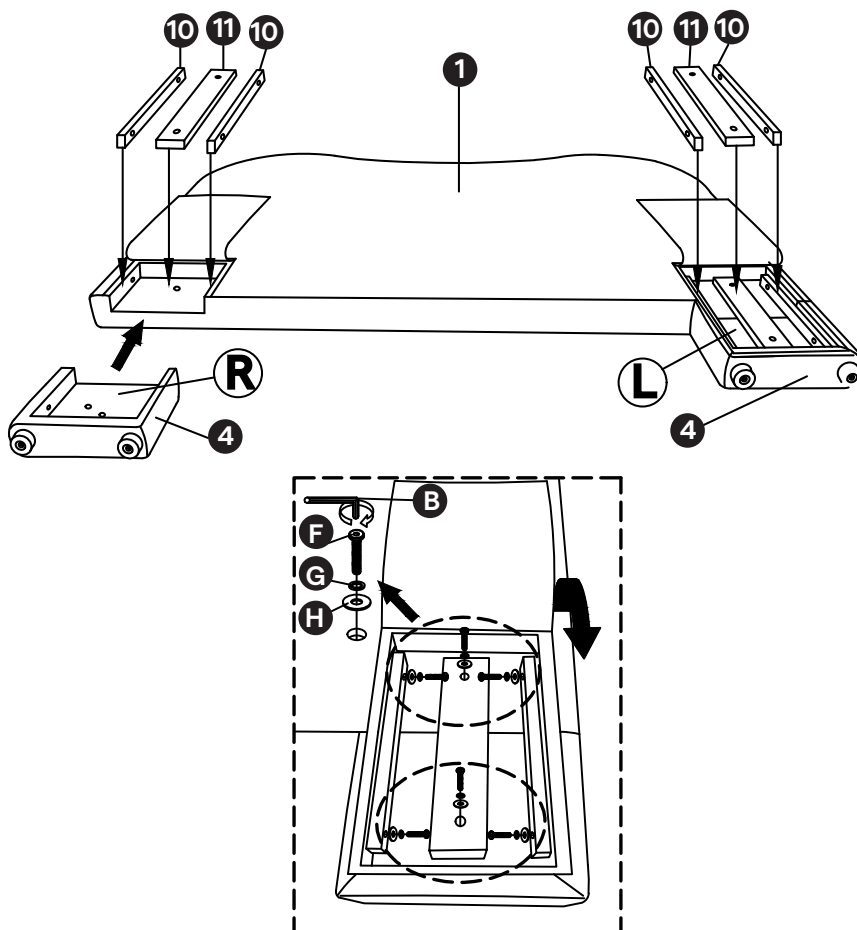

STEP 05

COMPONENTS


- 7** Slats(6pcs) x2
- 8** Slat Support x2
- 9** Support Leg x4

HARDWARE

- C** JCBC M6 x 50mm x4

TOOLS

- A** Allen Key M4 x1

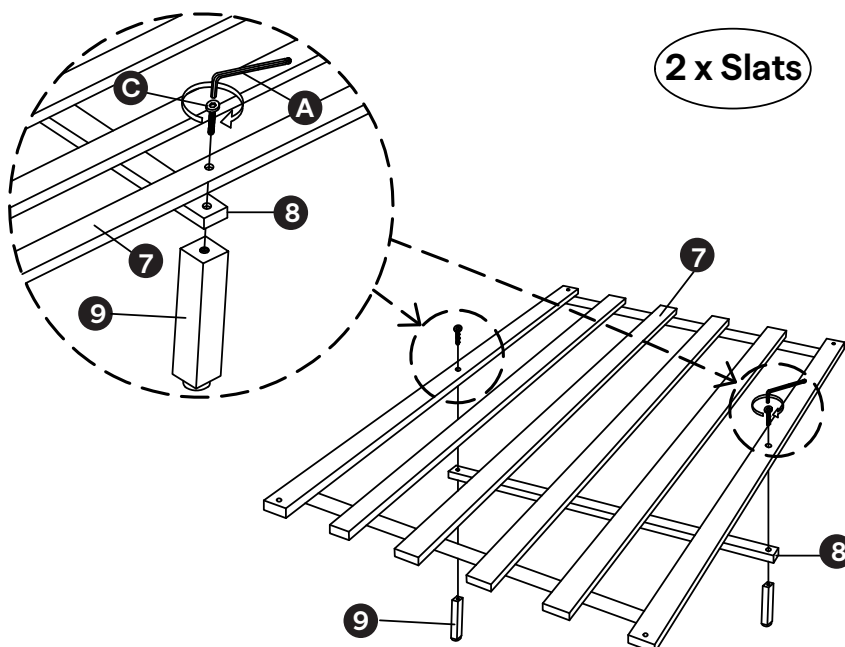

STEP 06

COMPONENTS


- 1** Headboard x1
- 2** Footboard x1
- 3** Side Rail x2

HARDWARE

- E** JCBB M8 x 16mm x8

TOOLS

- B** Allen Key M5 x1

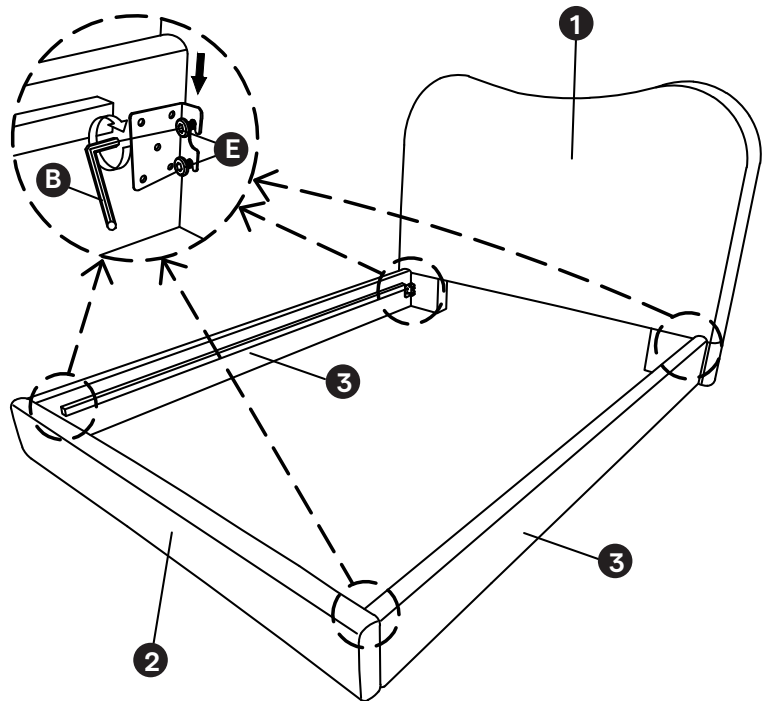


STEP 07

COMPONENT

- 7** Slats(6pcs) x2

HARDWARE

- D** CBS Screw M4 x 32mm x8

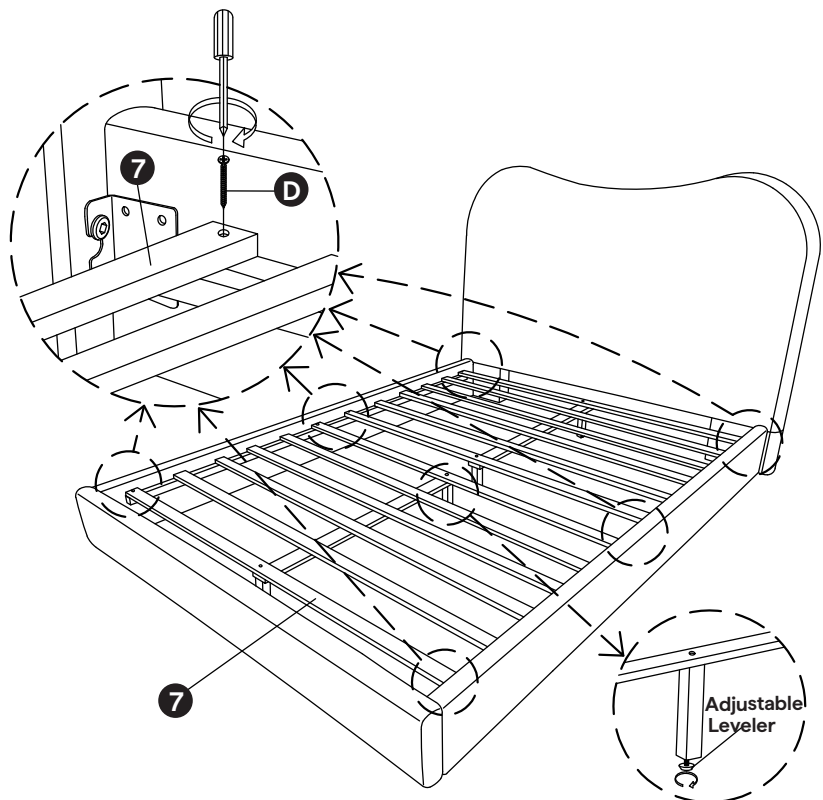


Great job!

Your new Bed is complete.

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.

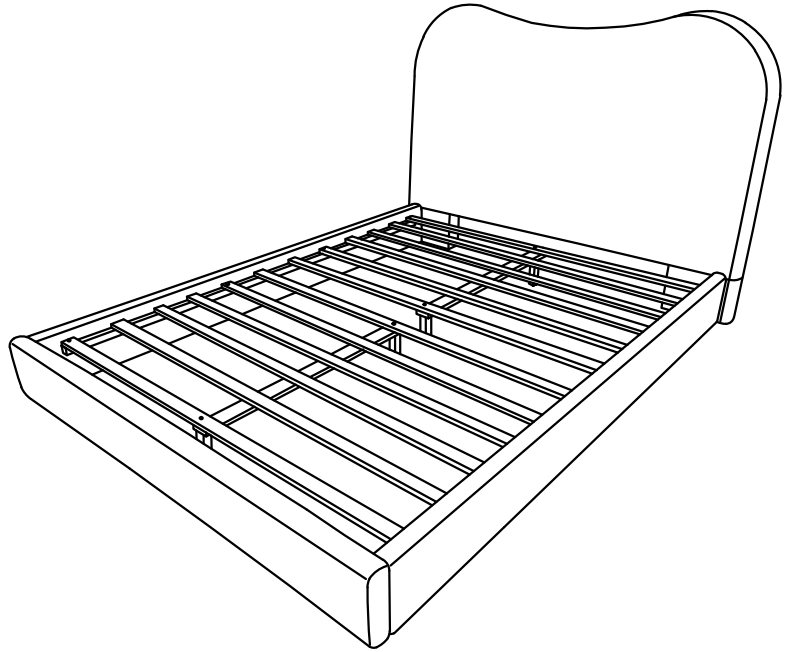

CONNECT WITH US!

Tag us **@modway_furniture** and **#modway** for a chance to be featured.

modway



Questions? Contact us!
609.256.9000
cs@modway.com