



Shower Stall Kit

INSTALLATION INSTRUCTIONS



Read all instructions prior to installing product.

Refer to manufacturers safety instructions when operating any tools.

To register your product, please visit:

freedomproduct.com

⚠ WARNING:

- Improper installation of this product can result in personal injury. Always wear safety goggles when cutting, drilling and assembling the product.
- Incorrect installation may cause harm to the product or individual.

NOTICE:

- DO NOT attempt to assemble the kit if parts are missing or damaged.
- DO NOT return the product to the store. For assistance or replacement parts call: 1-800-336-2383.

BEFORE YOU BEGIN:

Check your local zoning laws.



- Local zoning laws and Home Owners Associations may regulate the location, style and height of your product or even require a permit signoff beforehand.
- Check local codes for frost line depth and regulations.
- You must have the utility companies clearly mark your property for electrical, gas or water lines to avoid puncturing any unseen underground utilities.

TOOLS/MATERIALS NEEDED:

Circular Saw / Hand Saw / Chop Saw
Post Hole Digger / Auger
Line Level
Post Level
Tape Measure
Ratchet Set
Drill Gun #2, #3, Phillips
Driver Bit Extender (Recommended)
Hammer
Safety Glasses
Black Sharpie or Carpenter's Pencil
Rags and Spray Cleaner
4x4x96" Lumber
Pre-Mixed Concrete
Glue / Post Top Clips
(8) Galvanized Screws


Component list:

Item #	Description	Qty.
1	4"x4" Pyramid Post Top	4
2	4"x4"x96" Vinyl Post White	4
3	1.75"x5.47"x42.125" Privacy Panel Rail	4
4	1.02"x1.379"x46.5" U-Channel	2
5	0.875"x6"x50" - 0.35W Tongue & Groove Board	14
6	0.875"x1.5"x48" Curtain Rod	2
7	1.75"x5.5" Bracket Kit	4
8	0.875"x1.5" End Cap	4
9	1.5" Pan Head Screw	32
10	Screw Head Cap	40
11	1" Pan Head Screw	8

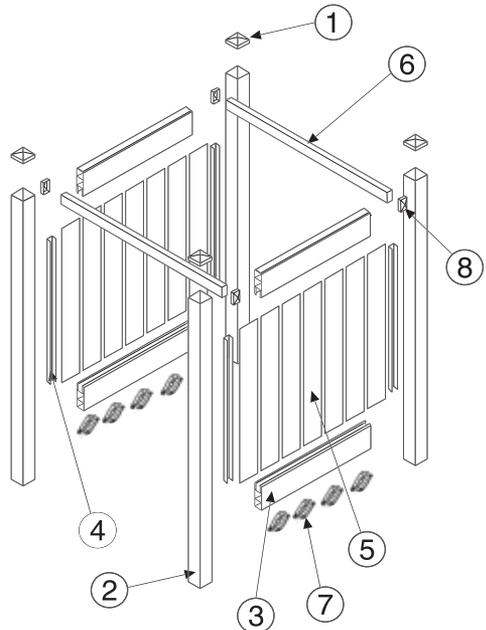
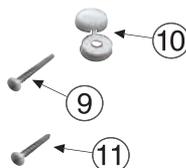


1**Measure and Mark Post Layout**

Measure, mark and "square" posts according to dimensions. Use "Corner to Corner Diagonal" dimension as a reference to ensure that posts are squared (Fig. 1).

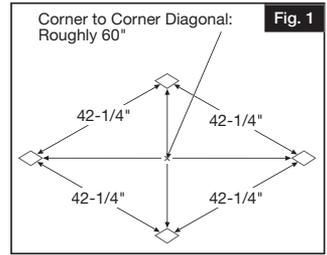**2****Post Installation**

- Dig a 3 foot deep by 10 inch diameter hole for each post footing (Fig. 2). Use a post hole digger or an auger.
- Slide 4x4 vinyl posts over 4x4x96" lumber so that 2 feet of lumber is extended below vinyl posts. Secure lumber to posts with galvanized screws (not included) below finish grade (Fig. 3).
- Insert posts and double-check measurements. Pour pre-mixed concrete into holes and use a post level to make plumb

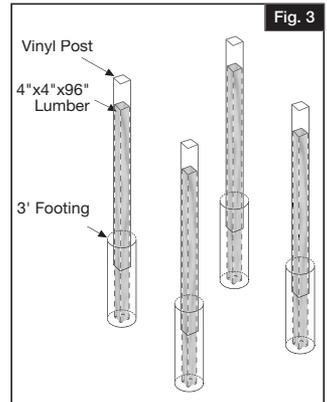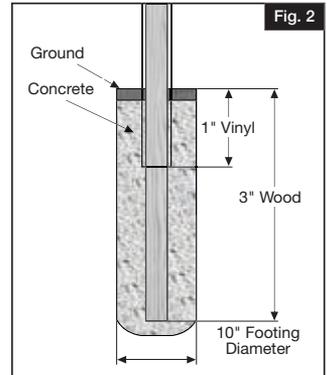

Wall Panel Installation

Bottom Rail




- Slide brackets onto bottom rail and lift into place between posts (Fig. 4).
- Offset bottom brackets 10" above finish grade and center bottom rail on posts (Fig. 4).
- Mount brackets to posts using included 4 screws per bracket. Insert white screw head caps to hide screws.

Vertical Tongue and Groove Boards

- Insert vertical tongue and groove boards into bottom rail from left to right.
- Place U-Channel vertically on edge of tongue and groove board #1 and #7 (Fig. 5).

Top Rail

- Slide brackets onto top rail and place on top of vertical tongue and groove boards (Fig. 6).
- Mount brackets to posts using included (4) 1.5" screws per bracket. Insert white screw head caps to hide screws (Fig. 6).

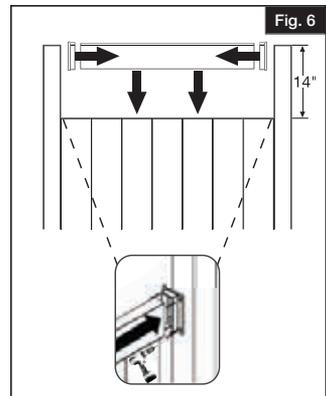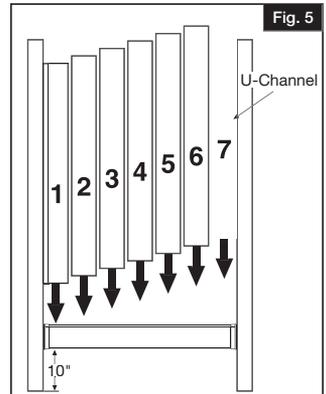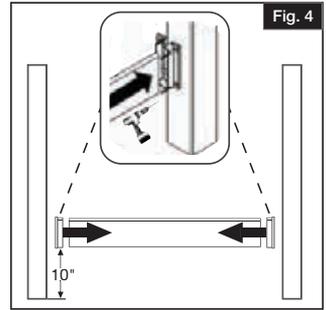

4


Curtain Rod Installation

- a. Attach end caps to ends of curtain rods. Use glue to create a stronger bond.
- b. Place curtain rods on interior side of posts (Fig. 7). Mount curtain rods to posts using included (2) 1" pan head screws per rod. Insert white caps to hide screws.

5

Post Tops Installation

- Place post tops on top of posts. Use glue or post top clips to create a stronger bond (Fig. 7).

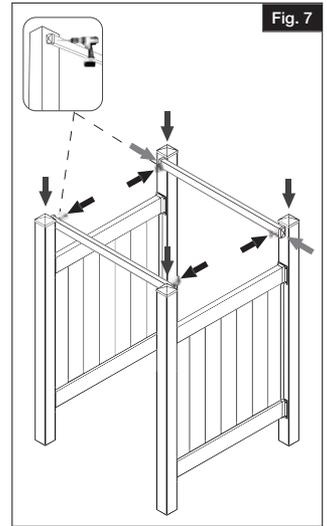

BARRETTE OUTDOOR LIVING

7830 FREEWAY CIRCLE
MIDDLEBURG HEIGHTS, OHIO 44130

TEL: (888) 418-4400
WWW.FREEDOMPRODUCT.COM

