



Installation Guide

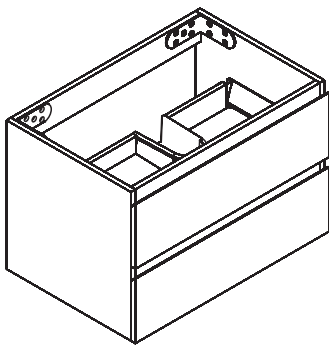


MOB

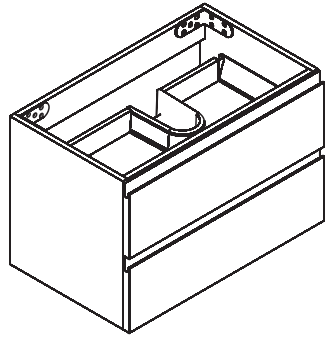


MOF


1

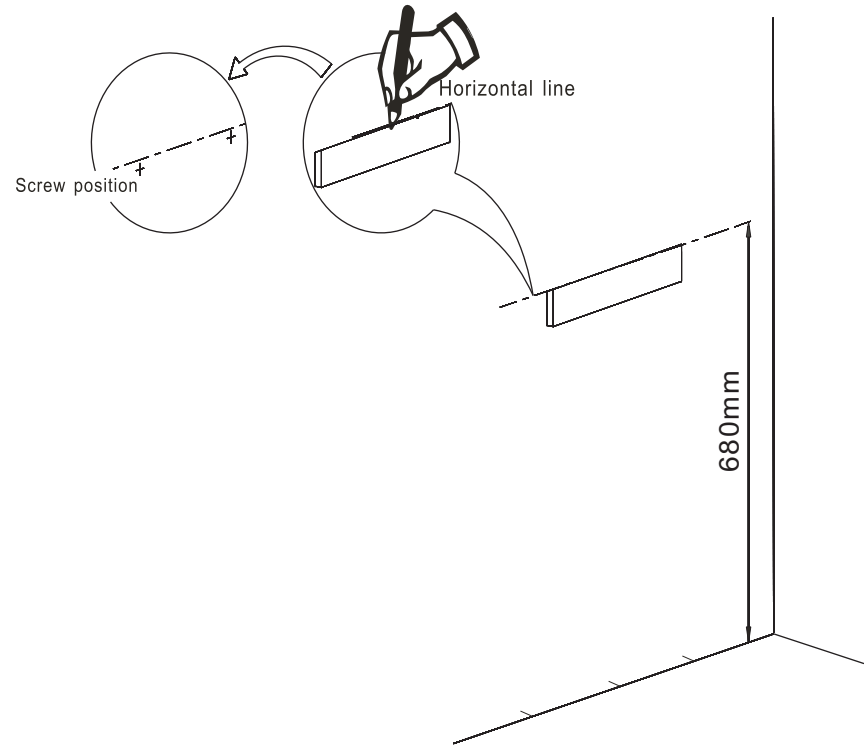


4

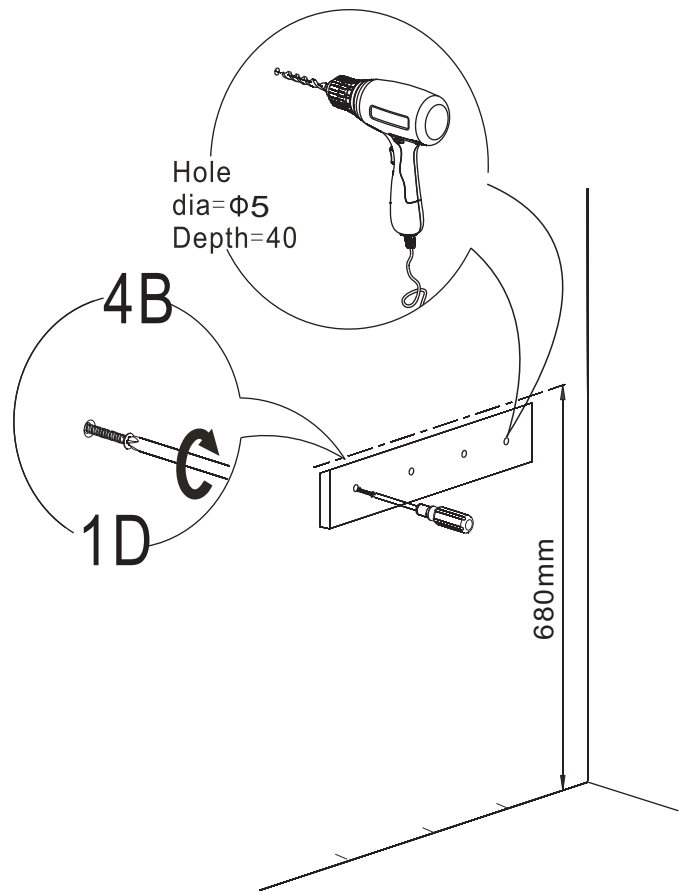


STORAGE

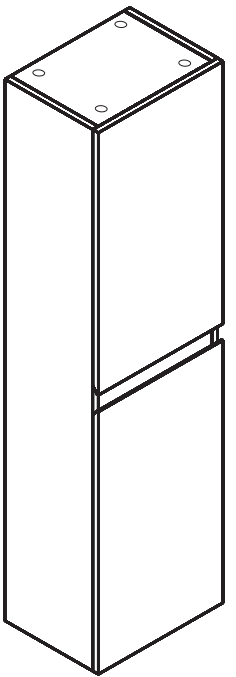


MOB

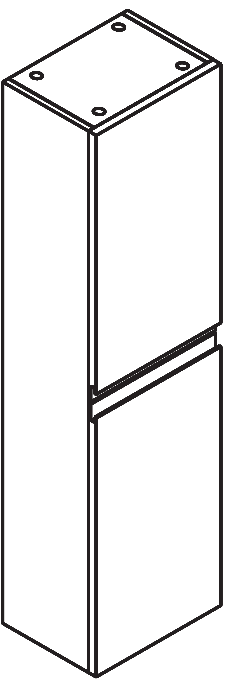


MOF

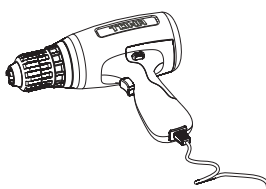

Electric drill



Drill bit (Φ8/Φ5)



Tape measure (3m~5m)



Silicone




Pencil




Screwdriver

Tools required for installation


2

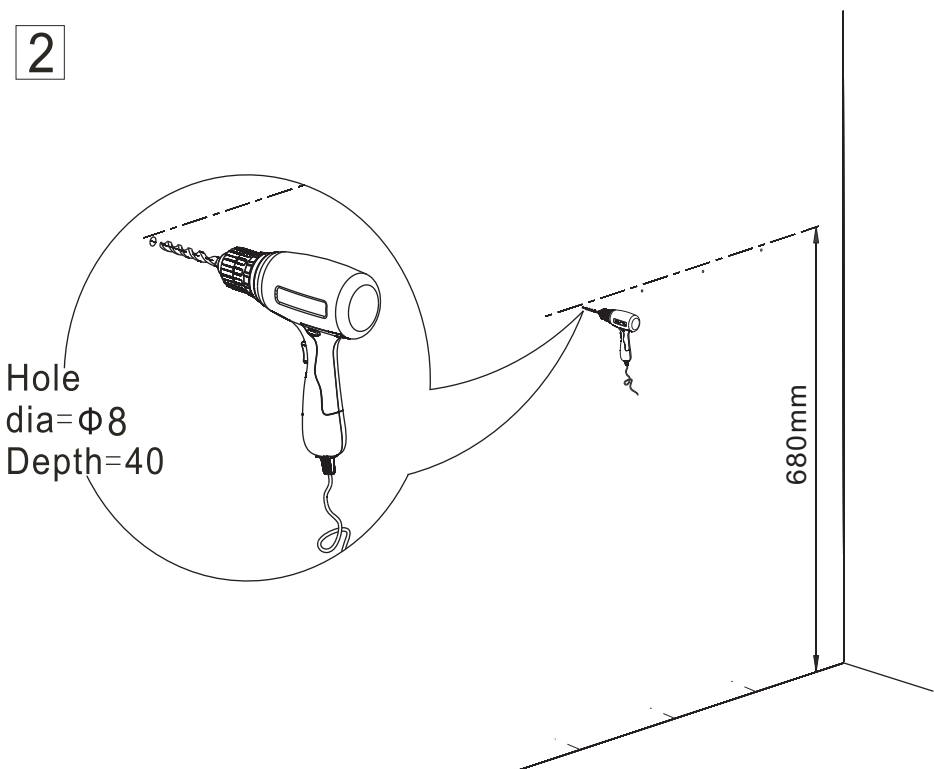


5

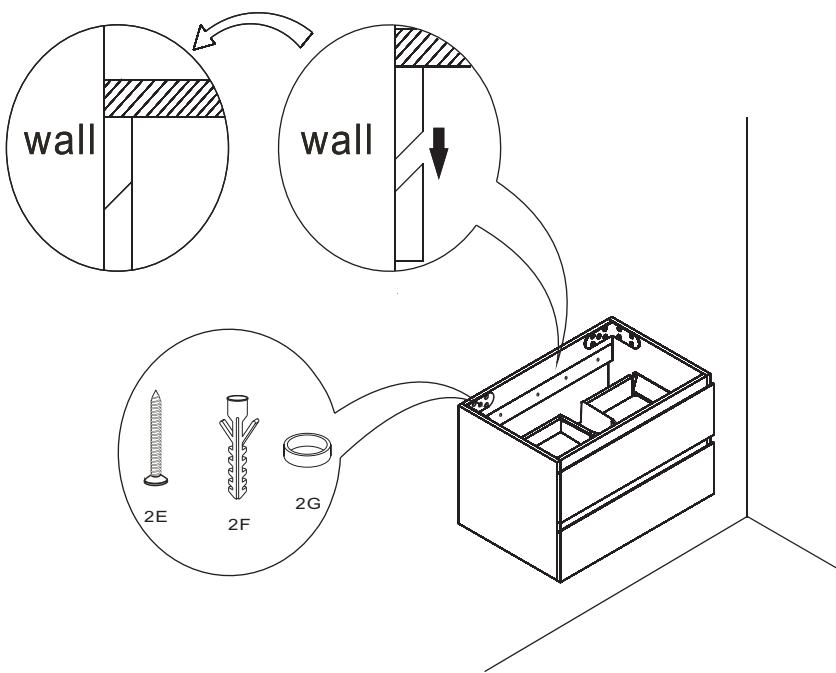


1

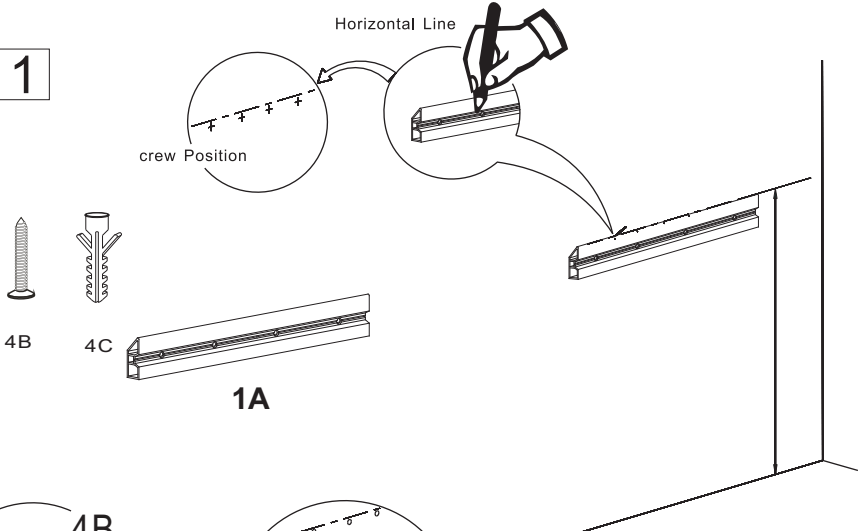


2

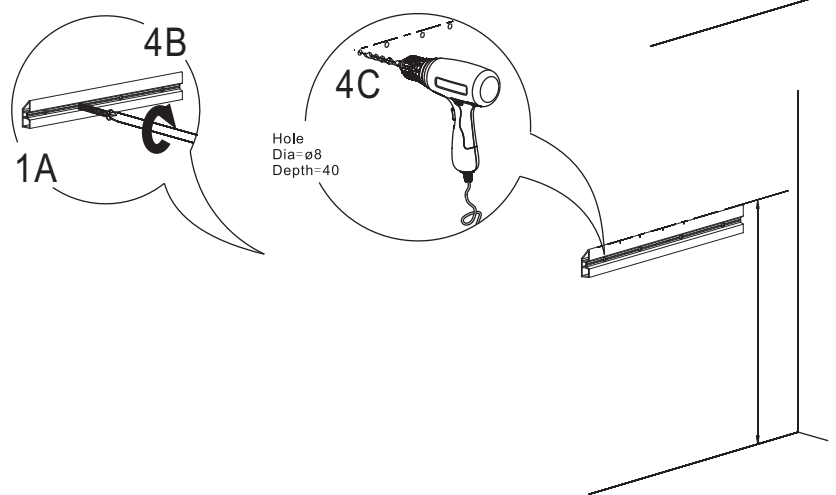


CABINET




4B




2E



4C



2F

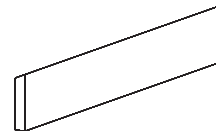


1D




2G


3

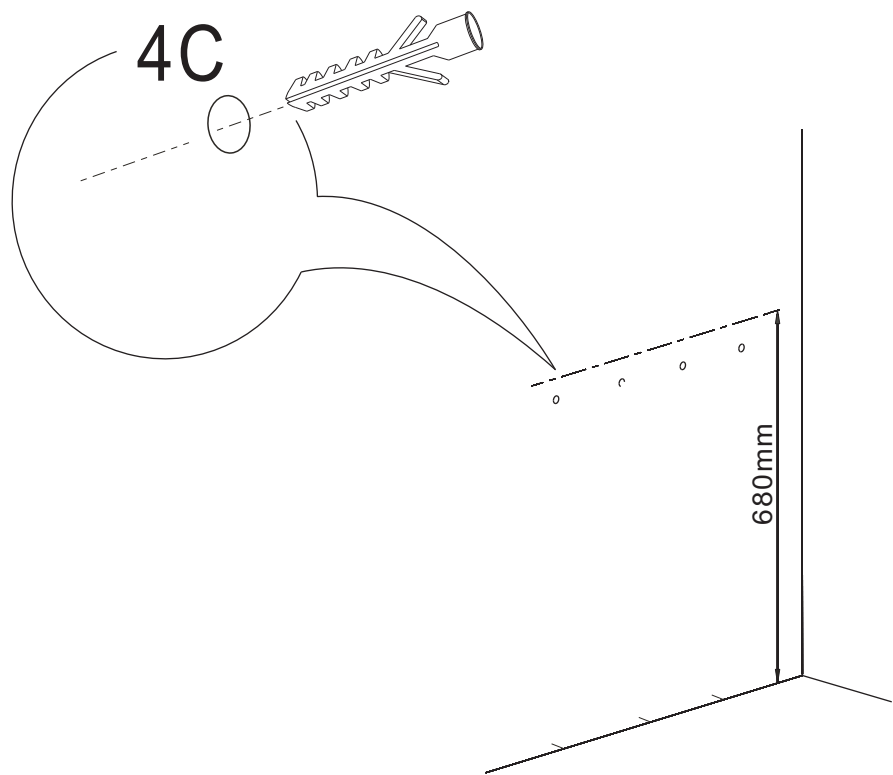

6

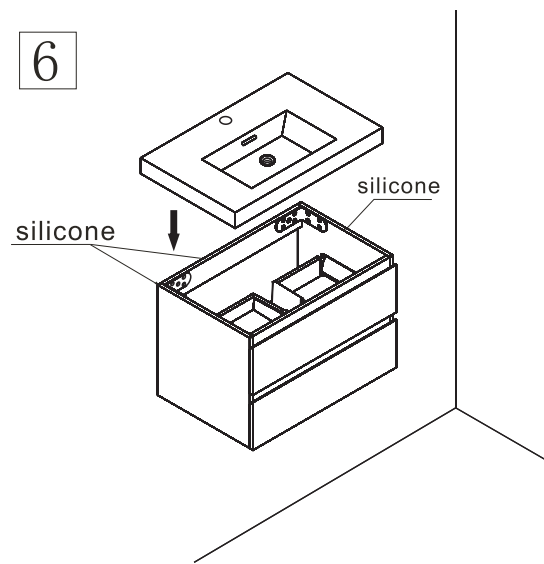

7

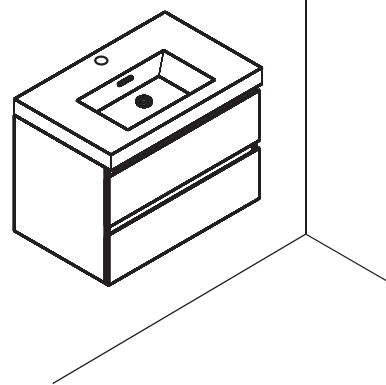

3

