

TOOLS/MATERIALS NEEDED:

Adhesive
Utility knife

Recommended Adhesives:

- DAP - Rapid Fuse All-purpose Adhesive
- Gorilla Glue - Super Glue Impact Tough
- Loctite - Super glue Professional



Decking End Cap Installation:

1. Brush of debris from end of the deck board to ensure a clean fit.
2. Dry fit the end cap to make sure it will fit and trim tabs on back if required.

NOTE:

When applying to starter board, cut and remove the appropriate tab on the back of the end cap with a razor or utility knife.

3. Apply a liberal amount of recommended glue to the end of the board. Follow clean-up instructions per the adhesive manufacturer's instructions for any excess glue.
4. Position the end cap so that the word "UP" and the arrows are oriented upward and the end tabs line up with the grooves in the board. Apply adhesive per manufacturer's instructions to ensure that a good bond is formed between the deck board and the end cap.

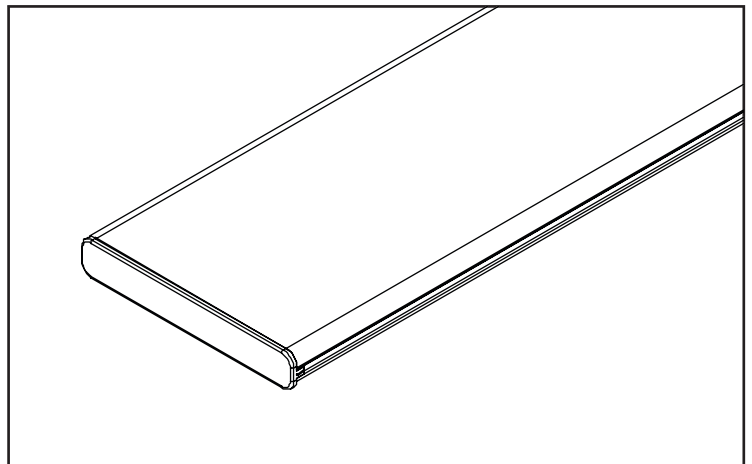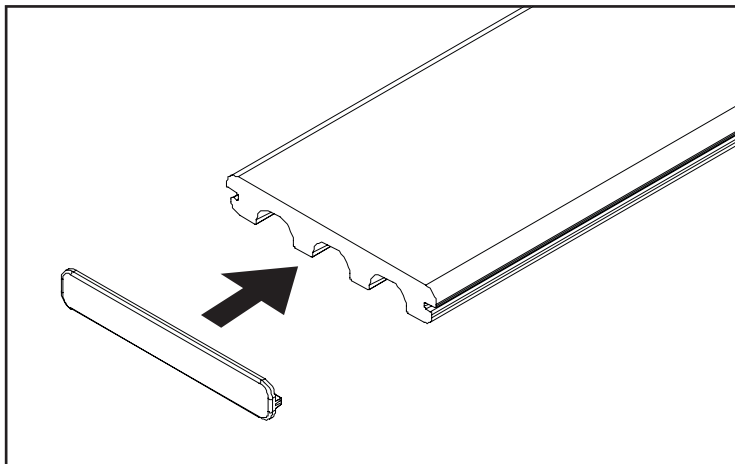

To register your product, please visit: FreedomProduct.com

To obtain and review a copy of the warranty please go to: Freedomproduct.com/warranty. You can also contact 1.888.418.4400 or write to Freedom Outdoor Living, 7830 Freeway Circle, Middleburg Heights, Ohio 44130 to obtain a copy of the warranty.

BARRETTE OUTDOOR LIVING
7830 FREEWAY CIRCLE • MIDDLEBURG HEIGHTS, OHIO 44130
TEL: (800) 336-2383 • WWW.FREEDOMPRODUCT.COM