

Safety Information



CAUTION: Before installing brackets, always check there are no hidden wires or pipes.





WARNING: Product failure due to using incorrect fittings is responsibility of the installer.

Pre-Installation

NOTICE: The finials shown are for illustration purposes only. It may not represent the style of finial purchased. For larger width windows, two people may be required for easier installation.

PACKAGE CONTENTS

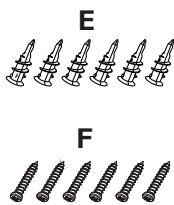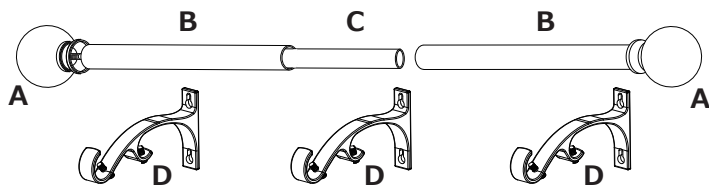


Part	Description	Quantity	Part	Description	Quantity
A	Finials	2	D	Brackets	3
B	Outer rods (larger diameter)	2	E	Screw-in anchors	6
C	Inner rod (smaller diameter)	1	F	Screws	6

CARE AND CLEANING

To remove dust, use a vacuum cleaner with a brush attachment end and gently rub using a water-dampened cloth with a mild detergent only.

TOOLS REQUIRED

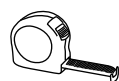

Tape Measure



Pencil



Drill and Bit Set



Philips-head screwdriver




Level

INSTALLATION



1 Before bracket installation

Place brackets (D) against wall at desired locations and mark screw holes. Use tape measure and level to ensure marked screw holes are aligned.

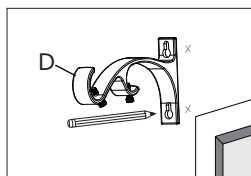



2A Mounting to drywall or paneling

Pre-drill two pilot holes per bracket using 1/4 in. bit. Drill horizontally without forcing drill or enlarging the hole. Screw anchors (E) into pilot holes. To install brackets (D), fasten the screws (F) into the anchors (E).

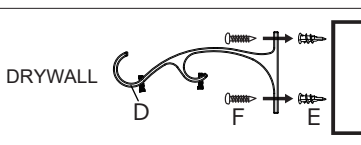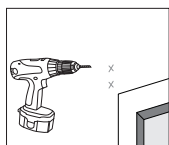



2B Mounting directly to wood or studs

Pre-drill two pilot holes per bracket using 3/32 in. bit. Drill horizontally without forcing drill or enlarging hole. To install brackets (D), fasten screws (F) into pilot holes.

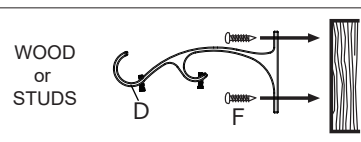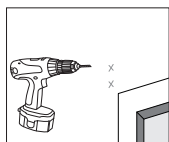




3A Total desired rod length < 97 in.

For desired total rod length less than 97 in. only a 2-PIECE telescopic rod (B & C) is needed; the extra outer rod (B) provided can be discarded. Unfasten finial (A) out of inner rod (C), feed drapery panels onto telescopic rod (B & C), and fasten finial (A) back into inner rod (C).

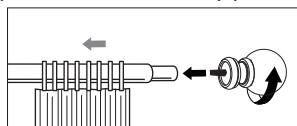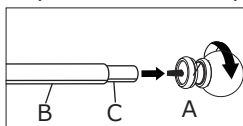

3B Total desired rod length ≥ 97 in.

For desired total rod length more than 97 in. the extra outer rod (B) provided is required. Unfasten finial (A) out of inner rod (C). Remove disposable caps from extra outer rod (B) and fasten finial (A) on its end. Feed one sheer drapery panel onto 2-piece telescopic rod (B & C) and a second sheer drapery panel onto extra outer rod (B). Insert inner rod (C) into extra outer rod (B) to form a 3-piece telescopic rod (B & C) that can extend up to 144 in.

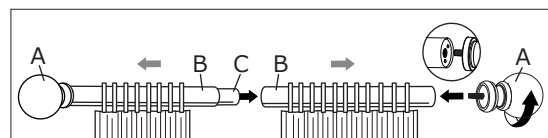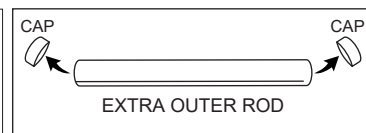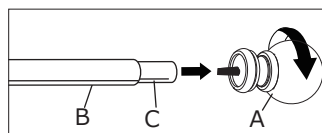

4 Final adjustment

Extend telescopic rod (B & C) to desired width and place it into inner cavities of brackets (D), leaving space in between drapery panels for center bracket. Secure telescopic rod (B & C) by tightening the screws in the brackets (D). This prevents the telescopic rod (B & C) from moving. To hang second set of drapes, repeat steps 3 to 4 with an additional rod (not included) and place it into outer cavities of brackets (D).

