


# ASSEMBLY INSTRUCTION


## 3-SEATER SWING






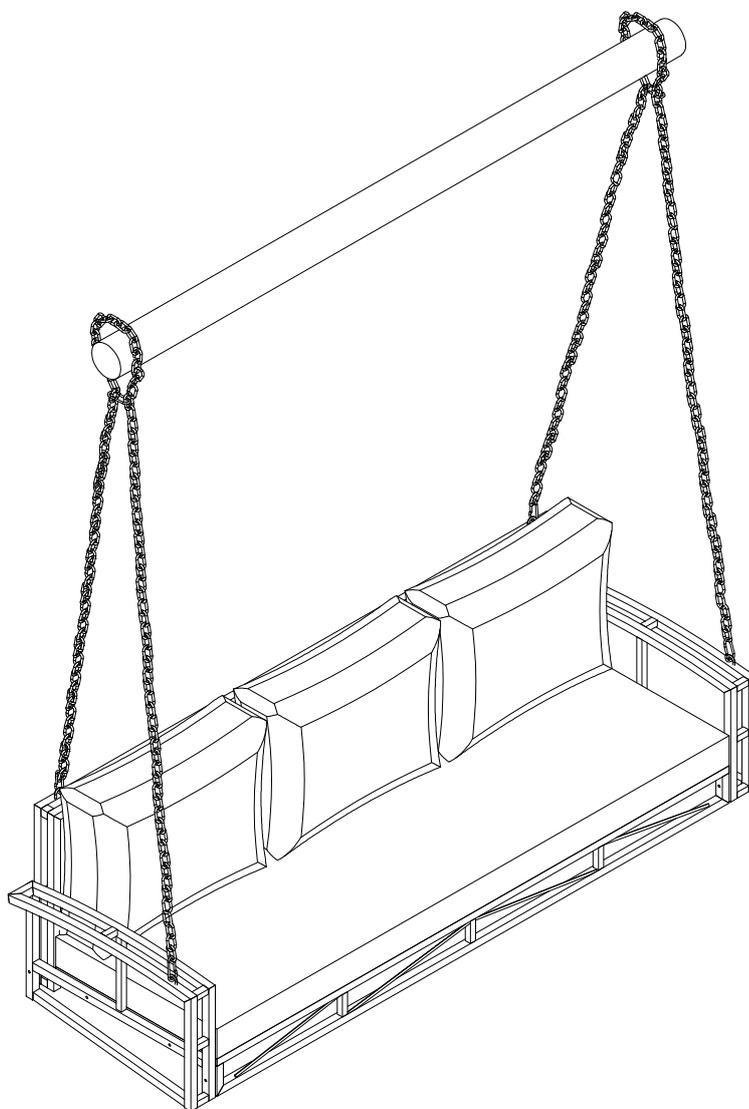






**N704P250643E;N704P250643D**

**Notice:**

1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
2. Place the item on a flat ground to adjust and make sure it remains stable.
3. Tighten up all screws with tools gradually.
4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
6. Note : If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

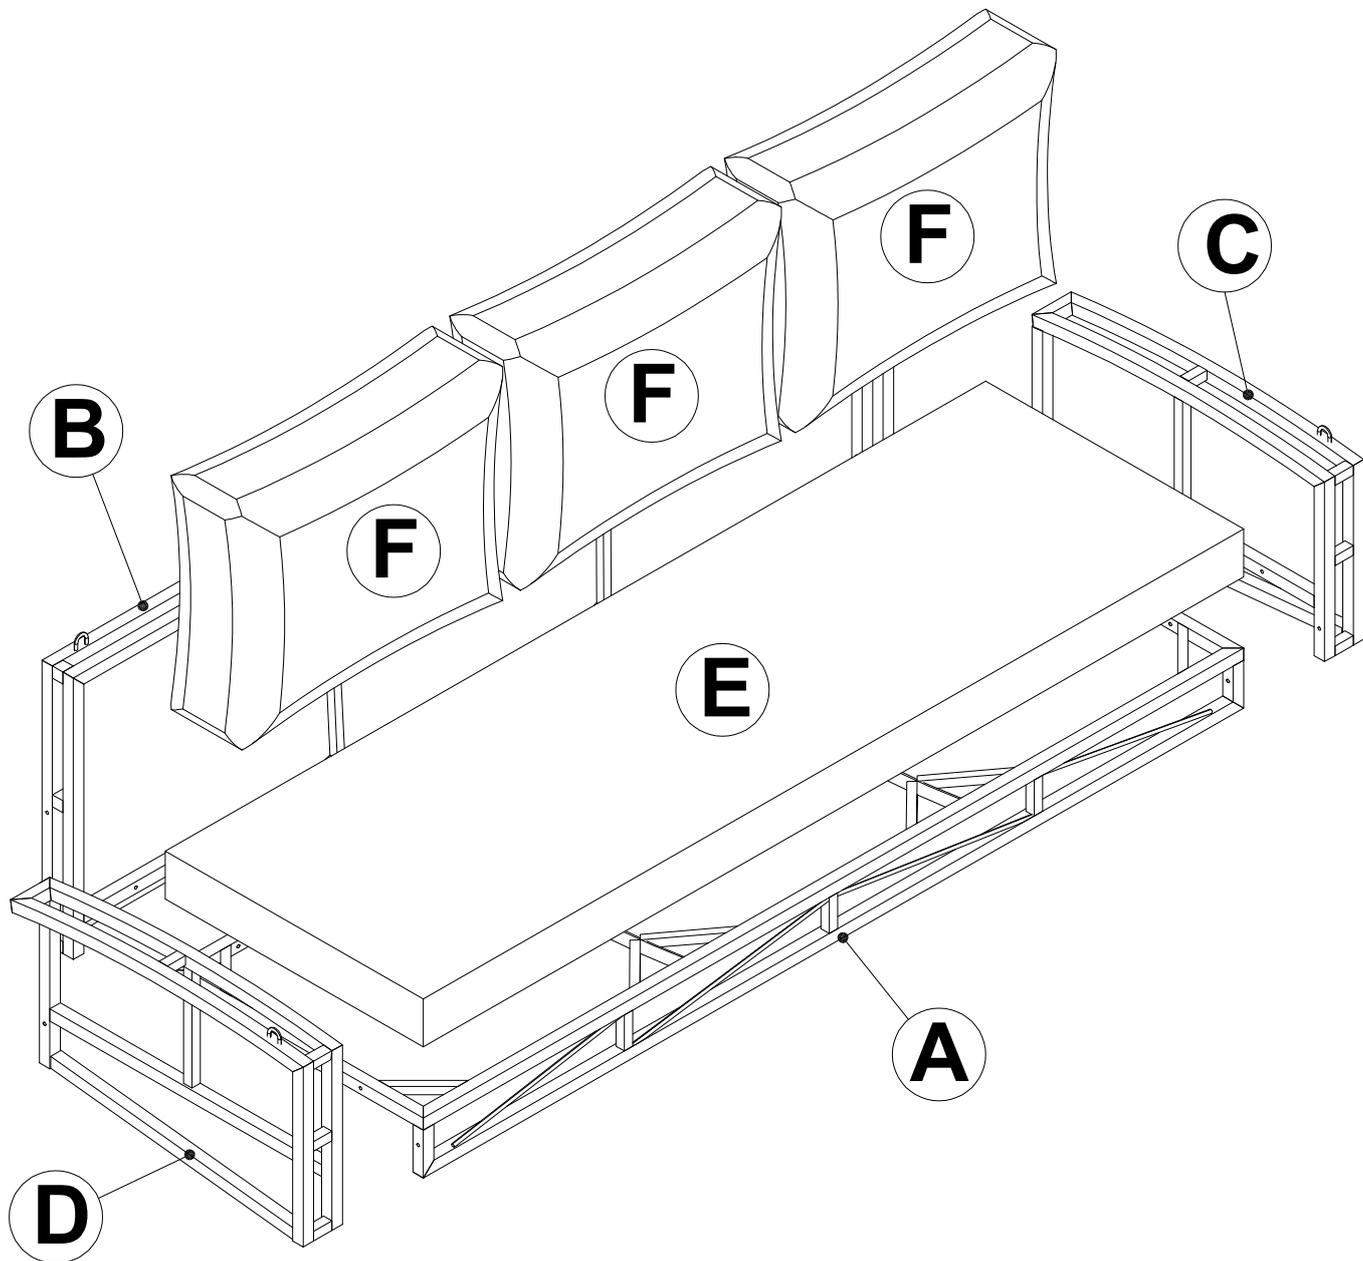

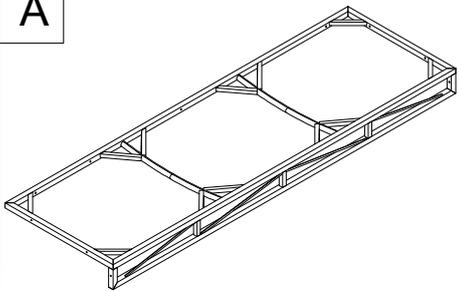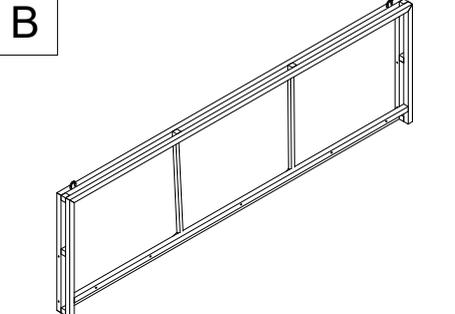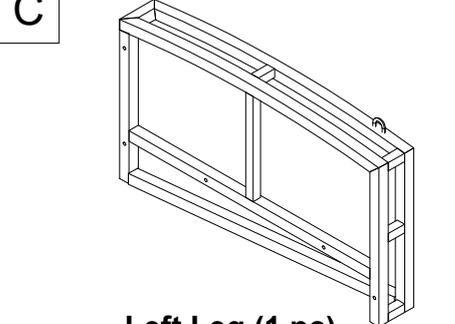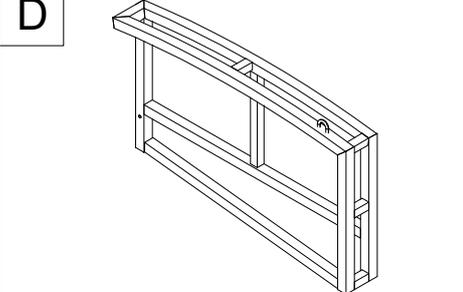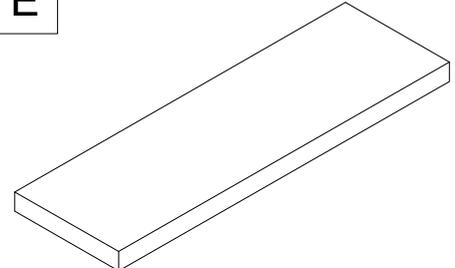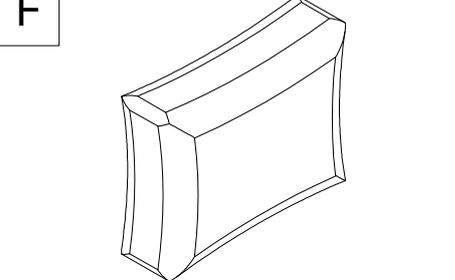
<p><b>A</b></p>  <p><b>Seat Chair Frame (1 pc)</b></p>	<p><b>B</b></p>  <p><b>Back Chair Frame (1 pc)</b></p>	<p><b>C</b></p>  <p><b>Left Leg (1 pc)</b></p>
<p><b>D</b></p>  <p><b>Right Leg (1 pc)</b></p>	<p><b>E</b></p>  <p><b>Seat Cushion (1 pc)</b></p>	<p><b>F</b></p>  <p><b>Back Cushion (3 pcs)</b></p>
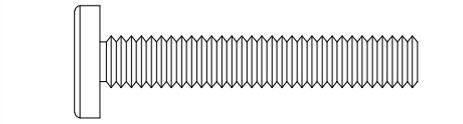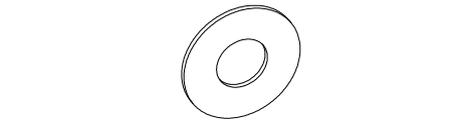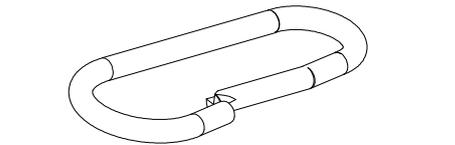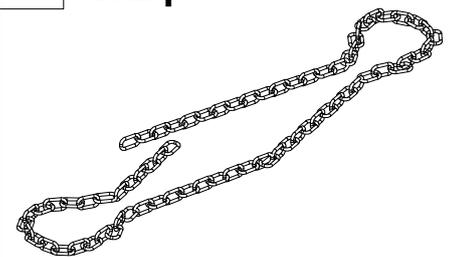
<p><b>1</b> x 15 pcs</p>  <p><b>Extra 2 pcs BOLT M6 x 40MM</b></p>	<p><b>2</b> x 15 pcs</p>  <p><b>Extra 2 pcs Flat Washer M6</b></p>	<p><b>3</b> x 6 pcs</p>  <p><b>Snap Hook</b></p>
<p><b>4</b> x 2 pcs</p>  <p><b>CHAIN M5</b></p>	<p><b>5</b> x 2 pcs</p>  <p><b>ALLEN WRENCH</b></p>	

### STEP 1



- A** x1
- B** x1
- 1** x5
- 2** x5

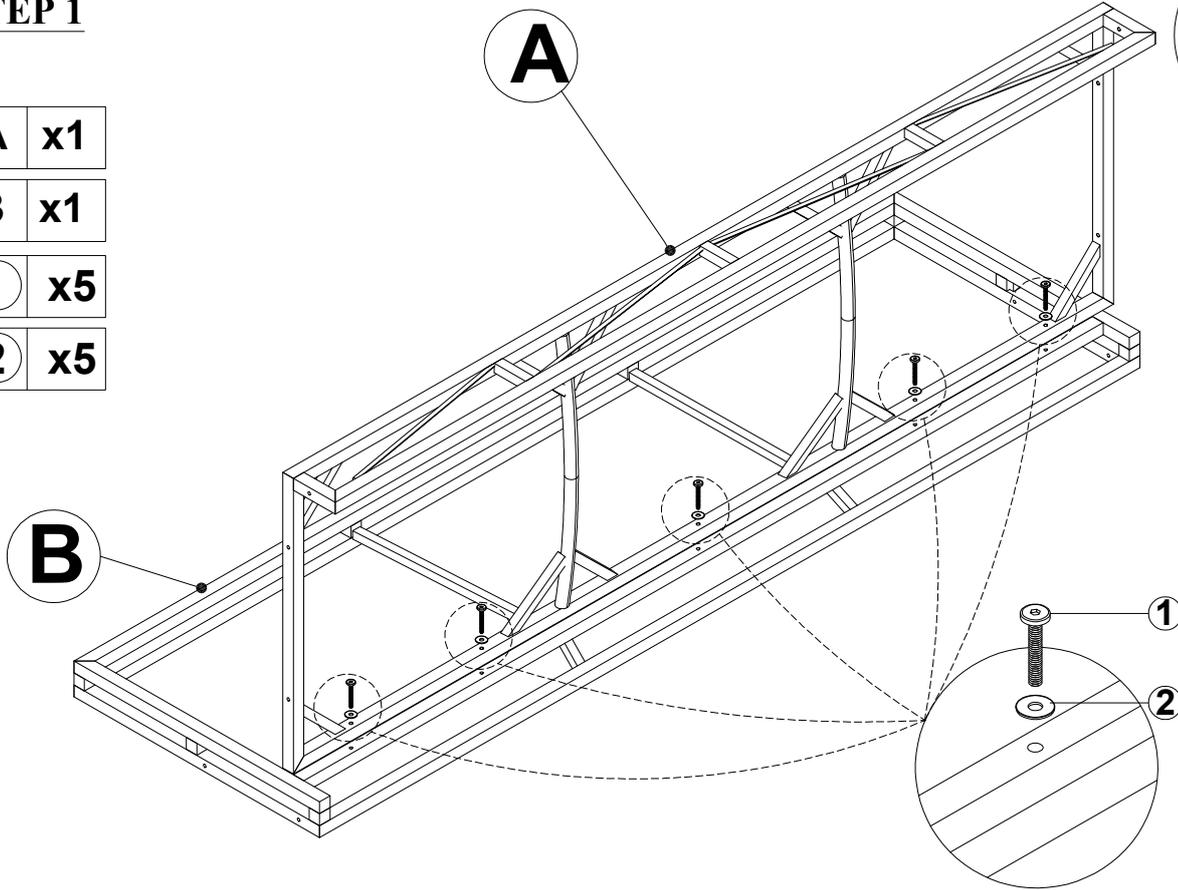

Connect Seat Chair (A) & Back Chair (B), Tighten Bolt (1) & Flat Washer (2) with Allen Wrench (5).

### STEP 2

- C** x1
- D** x1
- 1** x6
- 2** x6

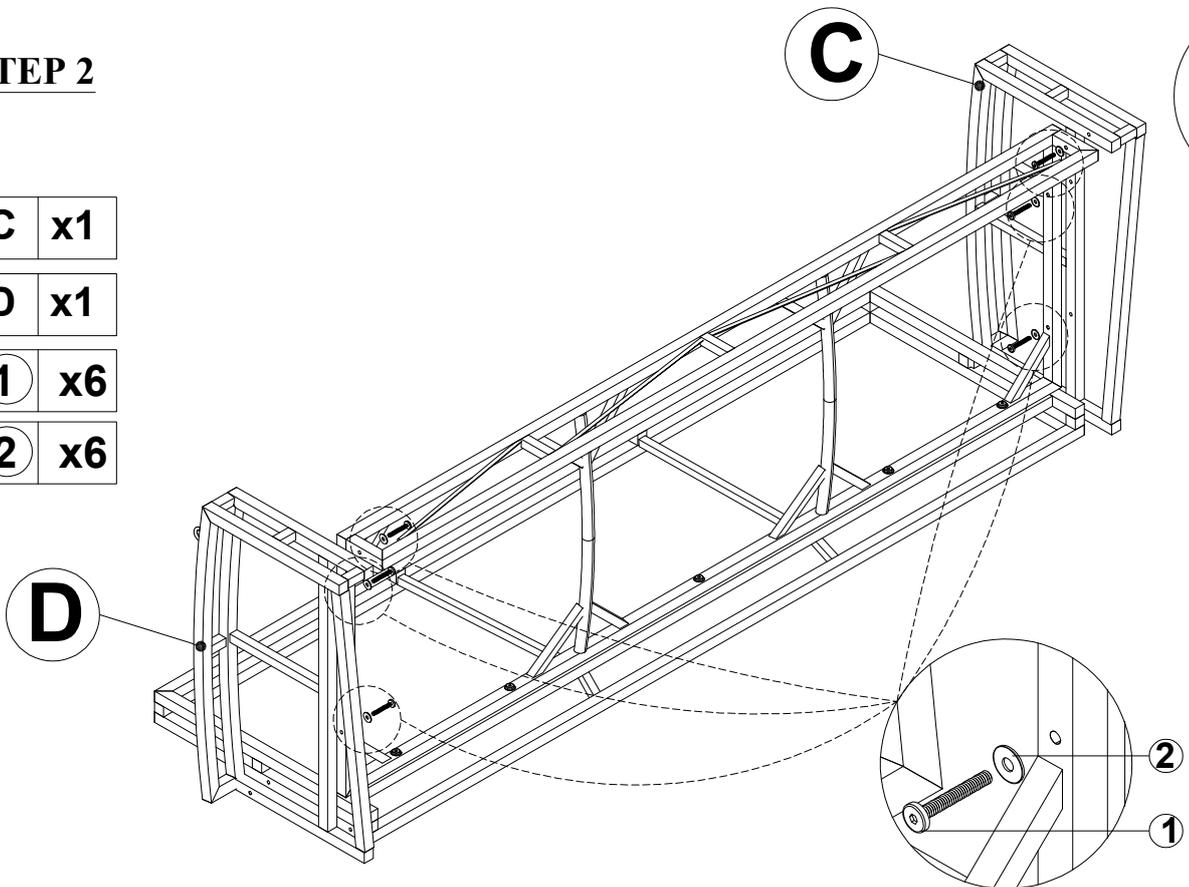
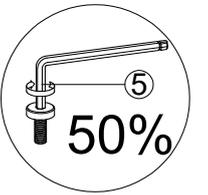


Connect the part from step 1 & Right Leg (D), Left Leg (C), Tighten Bolt (1) & Flat Washer (2) with Allen Wrench (5).

### STEP 3

1 x2

2 x2


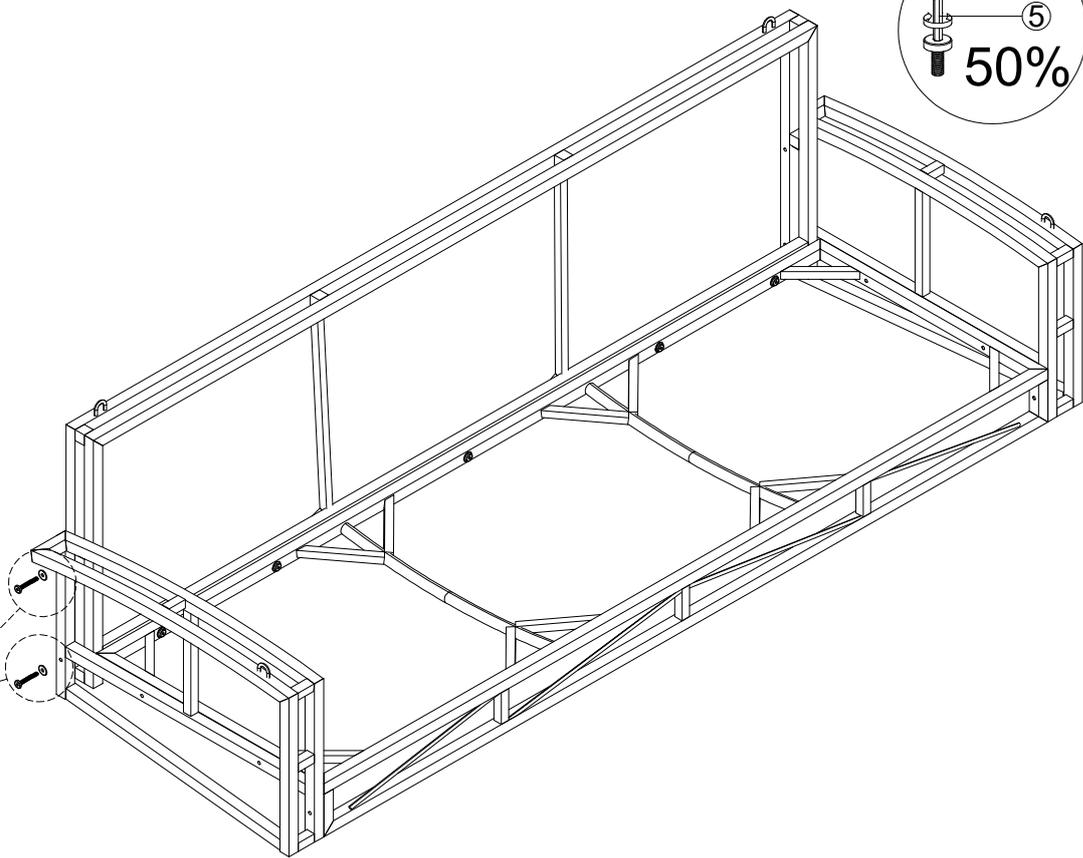
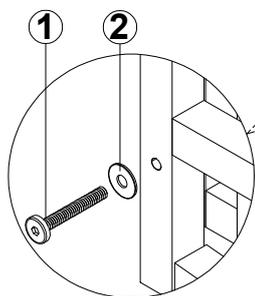


Connect the part from step 2 & Tighten Bolt (1) & Flat Washer (2) with Allen Wrench (5).

### STEP 4

1 x2


2 x2

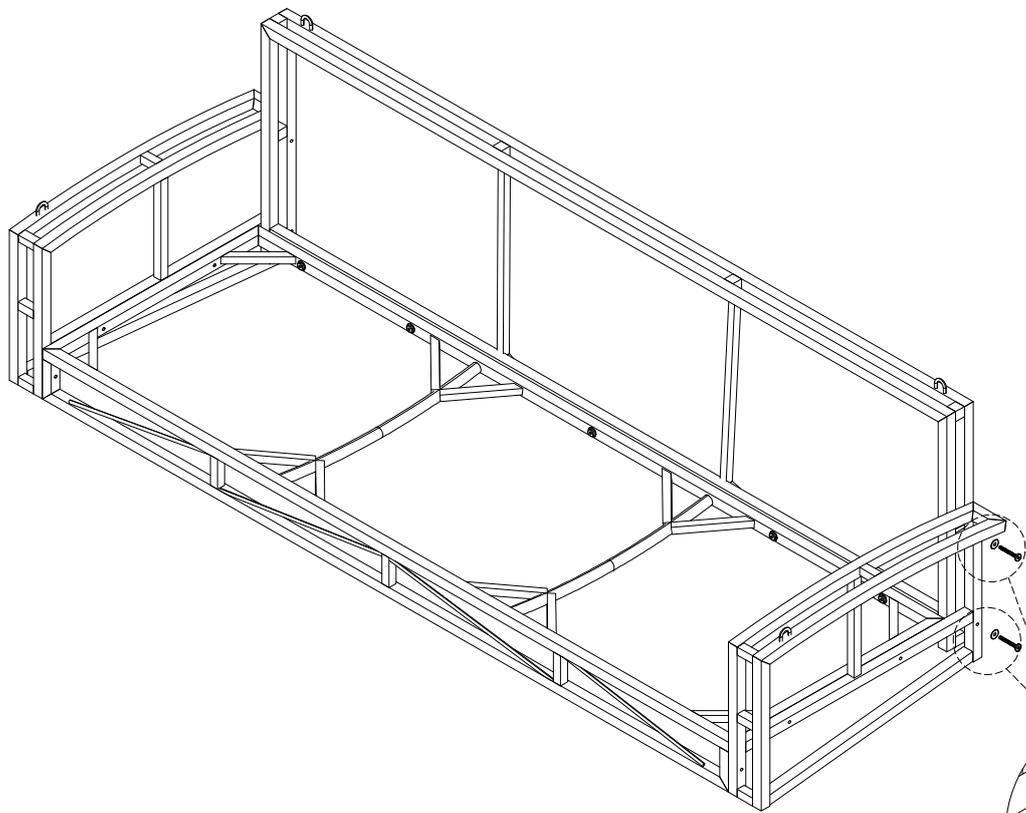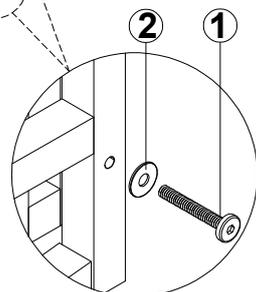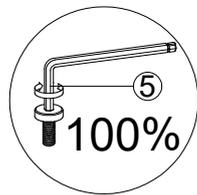

Connect the part from step 3 & Tighten Bolt (1) & Flat Washer (2) with Allen Wrench (5).

## STEP 5


3	x4
4	x2

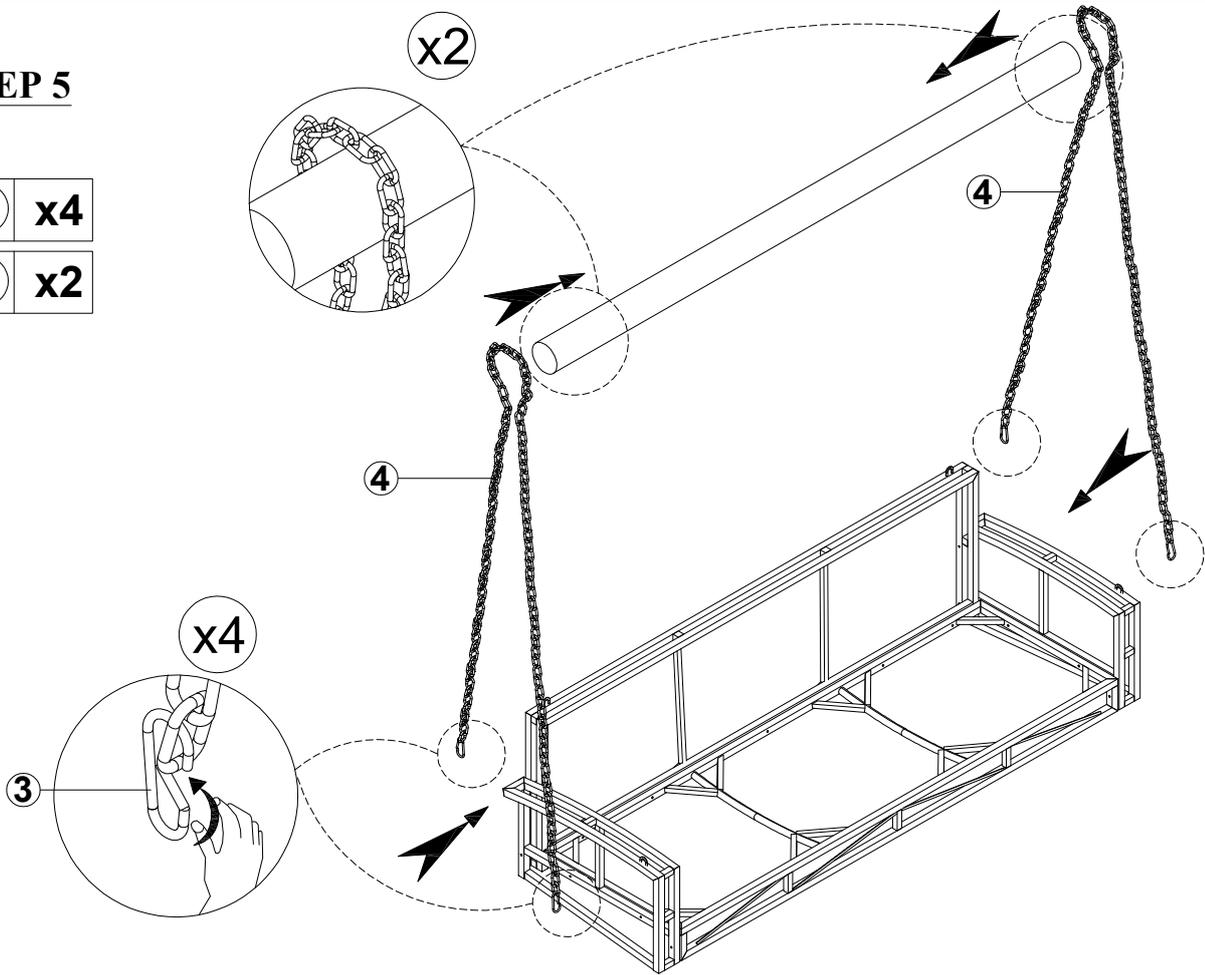

Connect the part from step 4 & Snap Hook (3) & Chain M5 (4).


## STEP 6

3	x2
---	----

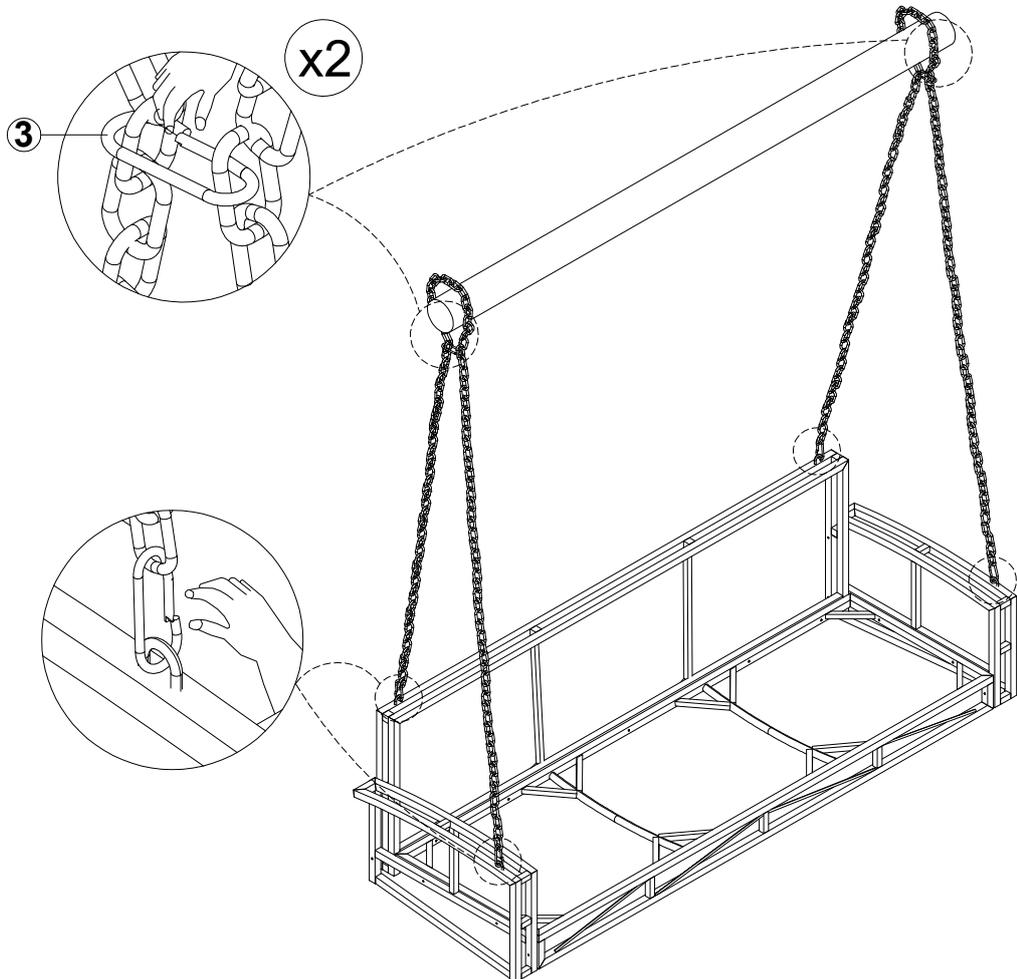


Connect the part from step 5 & Snap Hook (3).

## **STEP 7**

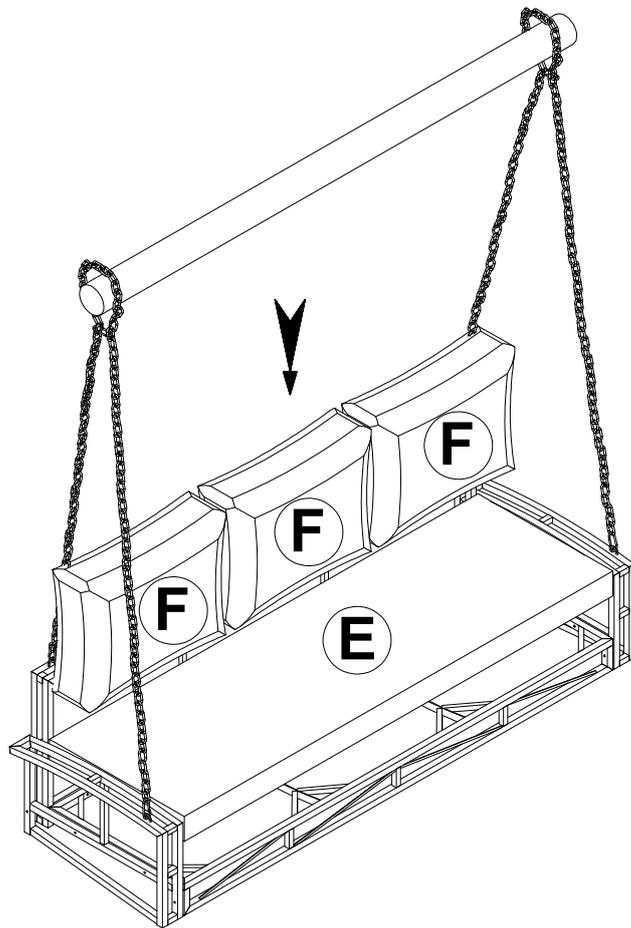

Open all the bags, adjust the cushions & Set up the seat Cushions (E) + Back Cushion (F).

## **STEP 8**

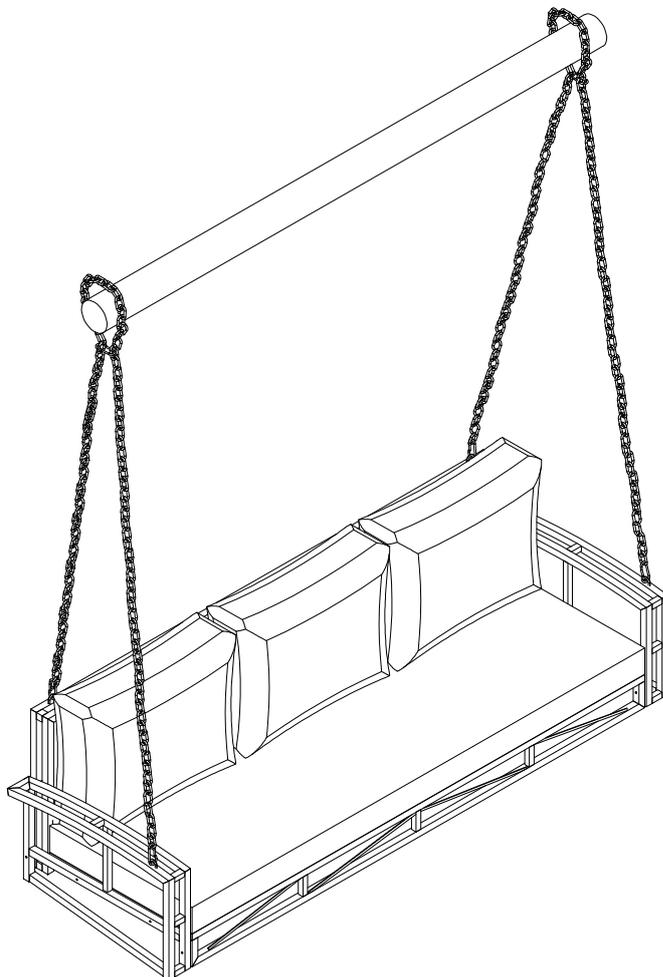

Finish Swing.

07-07